

10 x 10 INSTANT CANOPY

Item No. WMT-1010A
Model No. 30183

Before you begin

Read all instructions thoroughly before beginning set up.

- Select a level site clear of rocks, branches, and other hard or sharp objects, to set up your shelter.

⚠ WARNING: Keep clear of overhead power lines.

- Do not set up your shelter under trees because of potential lightning strikes or falling tree limbs in inclement weather.
 - Secure with all stakes and guylines provided to prevent property damage or personal injury.
 - Two people can easily setup this shelter in minutes.
- Scan the QR code to view our "Sets up in Minutes" video.



Setup Instructions:


1

Extend Shelter Frame

CAUTION: Avoid pinch points when opening or closing the shelter frame.

- Expand and spread out SHELTER FRAME. (Fig. 1)



NOTE: Only extend SHELTER FRAME half way for easier placement of the CANOPY.

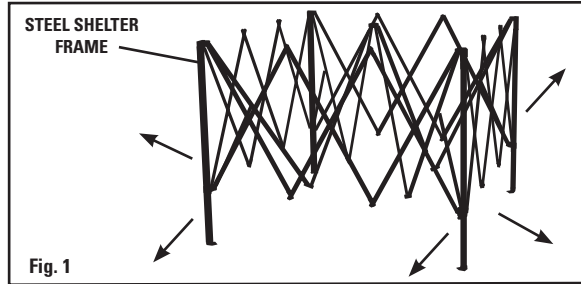

2

Attach Canopy



- Unfold CANOPY then drape over STEEL SHELTER FRAME. (Fig. 2)
- Locate HOOK & LOOP FASTENER on underside of the CORNER POCKET of the CANOPY. (Fig. 2)
- Attach HOOK & LOOP FASTENER to material located at the top of the STEEL SHELTER LEG. (Fig. 3)
- Repeat for remaining 3 CORNER CANOPY POCKETS. (Fig. 2 & 3)

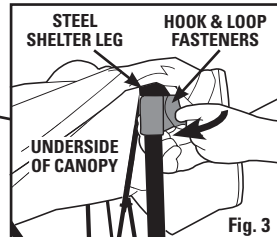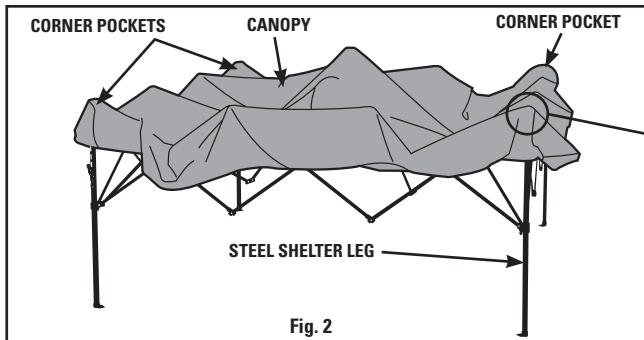

3

Raising Roof Support Brackets

- Grasp the LEG POLE and push up on the ROOF SUPPORT BRACKET until the ORANGE BUTTON "clicks" into locked position. (Fig. 4)
- Repeat for remaining 3 ROOF SUPPORT BRACKETS to fully raise the ROOF PEAK. (Fig. 5)

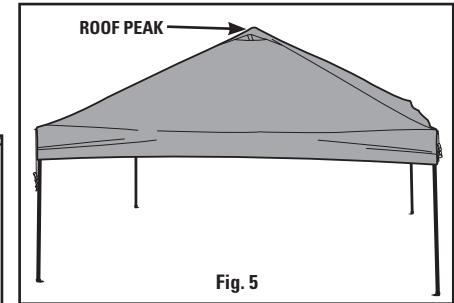
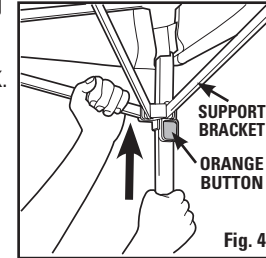


4

Telescoping Steel Frame Legs

- Grasp and extend TELESCOPING LEG POLE until the silver LOCKING BUTTON "clicks" into locked position. (Fig. 6 & 7)
- Repeat for remaining 3 LEG POLES.


NOTE: When telescoping the legs, the silver locking pin will lock in the lowest setting first. Push in the pin and extend the leg further to desired shelter height. (Fig. 8)

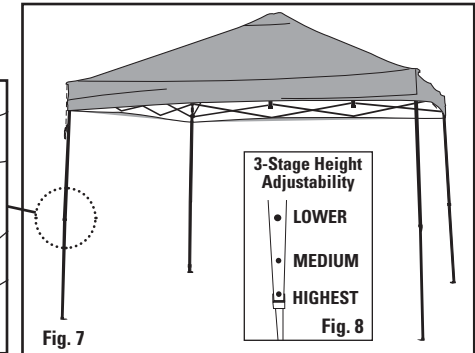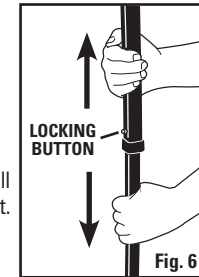

5

Secure Canopy to Frame

- Locate HOOK & LOOP FASTENERS along the seam of the underside of the CANOPY; then wrap around METAL BRACE to secure. (Fig. 9)
- Repeat for remaining 3 sides of the shelter CANOPY.
- Position the gazebo shelter in its final position before securing with stakes and guylines.

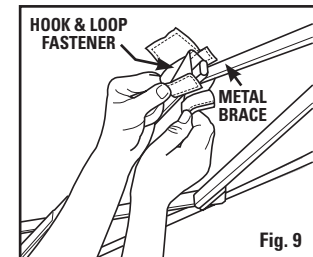

(See other side for proper Staking & Take Down Instructions)

To Secure Shelter:

Stake Shelter

- Locate FOOT at the bottom of each SHELTER LEG POLE location (4 total).
- Slide STAKE through HOLE at each location; then gently extend out before securing. (Fig. 10)


NOTE: Shelter should be taut when staked properly.

Secure Guylines

- Locate GUYLINES attached to the shelter and unroll.
- Slide STAKE through loop at each location, extend out and drive in to secure. (Fig. 11)

NOTE: Four corner GUYLINES should extend out at a 45° angle from shelter.

- Tighten GUYLINES as needed by adjusting the SLIDER up the cord.

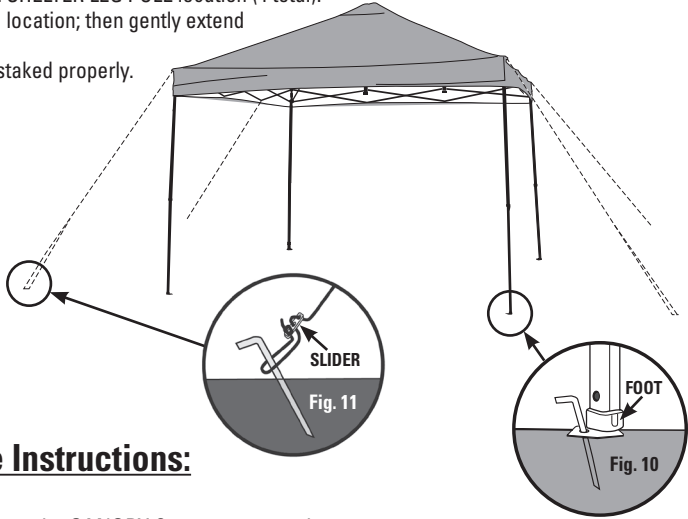



Take Down & Storage Instructions:

To Take Down Shelter

NOTE: For long-term storage: Remove the CANOPY & store separately.

For short-term storage (1-2 weeks): It is acceptable to leave the CANOPY attached to STEEL SHELTER FRAME. Follow the previous steps and illustrations on the front side of this tag in the reverse order:

- Remember to push the silver LOCKING BUTTON and telescope the 4 on the LEG POLES. (Fig. 12)
- Remember to push the 4 ORANGE BUTTONS to release the ROOF SUPPORT BRACKET. (Fig. 13)
- Fold CANOPY and put back into the bag.
- Fold up STEEL SHELTER FRAME and place into bag.

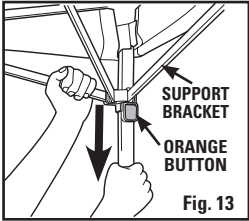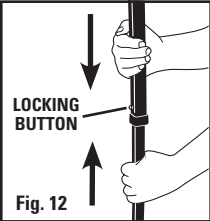

Storing the Shelter

- Remove guylines and stakes and place in their storage bag.
- All stakes must be placed in their own storage bag before placing in tent carrying case to prevent damage to the shelter fabric.
- Store in a clean, dry area.

IMPORTANT FACTS:

- Never store shelter, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes inside your shelter. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE SHELTER TO REMOVE STAKE.
- Do not leave your shelter set-up for weeks at a time. Be aware that exposure to ultraviolet rays from the sun can seriously damage material and/or cause it to become discolored.

WARNING: Keep all flame and heat sources away from this shelter fabric.

This shelter meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SHELTER FABRIC

This shelter is made of flame-resistant fabric which meets CPAI-84 specifications. **IT IS NOT FIRE-PROOF.** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the product fabric may render the flame-resistant properties ineffective.

DO NOT use fuel burning devices inside or near tent materials.

DO NOT permit children to light matches, operate burning appliances, or handle any flame sources in or near the shelter.

- Do not smoke, use matches, candles or open flames of any kind in or near the shelter.
- Do not refuel lanterns, stoves or heaters inside shelter.
- Do not cook inside shelter.
- Do not store flammable liquids inside shelter.



IMPORTANT:

THE ORIGINAL FIRE RETARDANT AND WATER REPELLENT PROTECTIVE COATINGS MAY BE COMPROMISED IF SPRAYS OR OTHER CHEMICAL TREATMENTS ARE USED ON THE TENT. FABRIC HAS BEEN FACTORY-TREATED. IT IS HIGHLY WATER-REPELLANT; HOWEVER, IT IS NOT WATERPROOF. ALL TENTS CAN EXPERIENCE SEAM LEAKAGE DURING WET WEATHER. IF YOU WANT ADDITIONAL MOISTURE PROTECTION, TRY A SEAM SEALING COMPOUND ONLY; STRICTLY FOLLOW THE MANUFACTURER'S DIRECTIONS. IT IS RECOMMENDED THAT YOU SEAL THE TENT DURING THE INITIAL SETUP AS WELL AS PRIOR TO EACH CAMPING SEASON. SEAM SEALER COMPOUNDS CAN BE PURCHASED AT YOUR LOCAL CAMPING PRODUCTS OUTLET. FOR MISSING PARTS CALL 1-888-774-5840. **PLEASE DO NOT RETURN THIS PRODUCT TO THE RETAIL STORE.**

REPAIR PARTS LIST

Part Number	Description
90086	Joint Endcap
90088	Small metal scissor joint
90089	Apex Support Pole (22")
90090	Scissor Pole (40")
90091	Upper Roof Pole (43")
90093	Roof Pole Center Joint
90100	Lower roof pole (44")
90291	Canopy
90292	Orange Button
90293	Gazebo Leg

6 Month Limited Warranty

Campvalley (Xiamen) Co., Ltd. warrants for a period of six months from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, Campvalley may provide replacement parts to original purchaser. Original receipt or proof of purchase as well as proof of defect is required. Campvalley will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser six months from the date of purchase and is not transferable. This Warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.

This Warranty Does Not Cover This

This 6 Month Limited Warranty does NOT cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather remove all valuables and persons and seek appropriate shelter. **Under no circumstances will Campvalley (Xiamen) Co., Ltd be liable or responsible for any incidental or consequential damages.**

This product is designed and intended for Recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 6 Month Limited Warranty.

All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

To Obtain Warranty Service

Call Toll Free 1-888-774-5840 for warranty service, repair parts, or product questions. Mon-Fri, 8:00 a.m. – 5:00 p.m. Central Time.

NOTICE: DO NOT RETURN PRODUCT TO RETAIL STORE.

Campvalley (Xiamen) Co., Ltd.
No.18th, West Road 3, Jinyuan, Jimei District, Xiamen, Fujian 361022 (China)

Made in China • Printed in China