

# **NT-series Support Tool**

## **OPERATION MANUAL**

**OMRON**





# **NT-series Support Tool Operation Manual**

*Produced July 1995*



# Safety Precautions:

Read these safety precautions carefully and make sure you understand them before using the programmable terminal so that you can use it safely and correctly.

## Safety Conventions and Their Meanings

This operation manual uses the following conventions and symbols to indicate cautions and warnings in order to ensure safe use of the PT. The cautions and warnings shown here contain important information related to safety. The instructions in these cautions and warnings must be observed. The conventions used and their meanings are presented below.

**WARNING** Indicates unsafe practices which, if not avoided, could result in death or serious injury.

## Example Symbols



The triangle indicates a hazard (caution or warning).  
Details are provided by the contents of the triangle and the accompanying text.  
The symbol to the left indicates a general hazard.

WARNING

Do not use input functions such as PT touch switches for applications where danger to human life or serious damage is possible, or for emergency switch applications.



# OMRON Product References

All OMRON products are capitalized in this manual. The word “Unit” is also capitalized when it refers to an OMRON product, regardless of whether or not it appears in the proper name of the product.

The abbreviation “Ch,” which appears in some displays and on some OMRON products, often means “word” and is abbreviated “Wd” in documentation in this sense.

The abbreviation “PC” means Programmable Controller and is not used as an abbreviation for anything else.

## [Numeral settings]

Each support tool screen displays options for functions to be set. The example to the left shows such an option, “Numeral setting”.

## <Example screens>

This support tool (NT-ZA3PC-V2/ZA3DV-V2) can be used to create screen data for the following models:

NT20M   NT20S   NT2000M   NT600M   NT600S   NT30   NT30C  
NT612G   NT610C   NT620S   NT620C

The screens used for the purposes of explanation in this manual are mainly those of the NT610C. Note that, depending on the model used, the contents of the screen displays may differ somewhat from those shown in this manual.

# Visual Aids

The following headings appear in the left column of the manual to help you locate different types of information.

- Note

Indicates information of particular interest for efficient and convenient operation of the product.
- 1, 2, 3...

1. Indicates lists of one sort or another, such as procedures, checklists, etc.

## E OMRON, 1995

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

# TABLE OF CONTENTS

## SECTION 1

### Setting Up the Support Tool ..... 1

|       |                                    |   |
|-------|------------------------------------|---|
| 1-1   | Preparing Equipment .....          | 2 |
| 1-1-1 | Equipment to be Prepared .....     | 2 |
| 1-1-2 | Before Starting Preparations ..... | 3 |
| 1-2   | IBM PC/AT Preparations .....       | 4 |
| 1-2-1 | Installation Method .....          | 4 |

## SECTION 2

### Basic Operations of the Support Tool ..... 7

|       |                                                |    |
|-------|------------------------------------------------|----|
| 2-1   | Starting Up and Exiting the Support Tool ..... | 8  |
| 2-1-1 | Start-Up Procedure .....                       | 8  |
| 2-1-2 | Exit Procedure .....                           | 9  |
| 2-2   | Basic Operating Procedures .....               | 10 |
| 2-2-1 | Cursors .....                                  | 10 |
| 2-2-2 | Selecting Options .....                        | 11 |
| 2-2-3 | Using the Function Keys .....                  | 11 |
| 2-2-4 | Using the Mouse .....                          | 12 |
| 2-2-5 | Using Help Messages .....                      | 15 |
| 2-2-6 | Selecting Numbers and Codes .....              | 16 |

## SECTION 3

### Support Tool Operations ..... 19

|       |                                             |    |
|-------|---------------------------------------------|----|
| 3-1   | Using the Support Tool .....                | 20 |
| 3-2   | Main Menu .....                             | 21 |
| 3-3   | "Tool Settings" Screen .....                | 22 |
| 3-4   | "File List" Screen .....                    | 26 |
| 3-5   | "Scr list" Screen .....                     | 31 |
| 3-5-1 | Functions of the "Scr list" Screen .....    | 31 |
| 3-5-2 | Setting Direct Connection Information ..... | 42 |

## SECTION 4

### Creating Screen Data ..... 49

|       |                                                                    |    |
|-------|--------------------------------------------------------------------|----|
| 4-1   | Initial Editing Screen and Basic Operations .....                  | 51 |
| 4-1-1 | Displaying the "Edit" Screen .....                                 | 51 |
| 4-1-2 | Basic Operations on the "Edit" Screen .....                        | 54 |
| 4-1-3 | Environmental Settings (Tool Settings for the "Edit" Screen) ..... | 59 |
| 4-2   | Common Setting Operations .....                                    | 61 |
| 4-2-1 | Setting Character/Character-String Displays .....                  | 61 |
| 4-2-2 | Setting Numeral Displays .....                                     | 63 |
| 4-2-3 | Specifying the Display Color (NT30C, NT610C Only) .....            | 66 |
| 4-2-4 | Setting Numeral Memory Tables .....                                | 68 |
| 4-2-5 | Setting Character-String Memory Tables .....                       | 70 |
| 4-2-6 | Bit Memory Table Setting .....                                     | 72 |
| 4-2-7 | Setting Words and Bits .....                                       | 75 |
| 4-2-8 | Copying to the Next Input Field (Increment Copy) .....             | 77 |

|        |                                                                                                                |     |
|--------|----------------------------------------------------------------------------------------------------------------|-----|
| 4-2-9  | Searching Within a Memory Table .....                                                                          | 78  |
| 4-2-10 | Batch Changing Bits and Words .....                                                                            | 79  |
| 4-3    | Creating Fixed Displays .....                                                                                  | 80  |
| 4-3-1  | Inputting Characters .....                                                                                     | 80  |
| 4-3-2  | Inputting Marks .....                                                                                          | 82  |
| 4-3-3  | Creating Polylines .....                                                                                       | 84  |
| 4-3-4  | Creating Squares .....                                                                                         | 86  |
| 4-3-5  | Creating Polygons .....                                                                                        | 88  |
| 4-3-6  | Creating Circles/Arcs .....                                                                                    | 90  |
| 4-3-7  | Creating Fans .....                                                                                            | 92  |
| 4-3-8  | Tiling .....                                                                                                   | 93  |
| 4-4    | Setting Numeral Displays .....                                                                                 | 96  |
| 4-4-1  | Setting Numeral Displays .....                                                                                 | 96  |
| 4-4-2  | Modifying Numeral Displays .....                                                                               | 97  |
| 4-5    | Setting Character-String Displays .....                                                                        | 98  |
| 4-5-1  | Setting Character-String Displays .....                                                                        | 98  |
| 4-5-2  | Modifying Character-String Displays .....                                                                      | 99  |
| 4-6    | Setting Lamps .....                                                                                            | 100 |
| 4-6-1  | Setting Lamps .....                                                                                            | 100 |
| 4-6-2  | Modifying Lamps .....                                                                                          | 104 |
| 4-7    | Setting Touch Switches .....                                                                                   | 105 |
| 4-7-1  | Setting Touch Switches .....                                                                                   | 106 |
| 4-7-2  | Modifying Touch Switches .....                                                                                 | 115 |
| 4-8    | Creating Graphs .....                                                                                          | 117 |
| 4-8-1  | Setting Graphs .....                                                                                           | 118 |
| 4-8-2  | Modifying Graphs .....                                                                                         | 126 |
| 4-9    | Creating Input Settings .....                                                                                  | 128 |
| 4-9-1  | Creating Numeral Setting Input Fields .....                                                                    | 131 |
| 4-9-2  | Creating Character-String Setting Input Fields<br>(NT30, NT30C, NT610G, NT610C with Ver.3 or Later Only) ..... | 134 |
| 4-9-3  | Setting Window Displays<br>(NT30, NT30C, NT610G, NT610C with Ver.3 or Later Only) .....                        | 135 |
| 4-9-4  | Creating Numeric Keys .....                                                                                    | 136 |
| 4-9-5  | Modifying Numeral/Character-String Setting Input Fields .....                                                  | 137 |
| 4-9-6  | Changing Orders .....                                                                                          | 139 |
| 4-10   | Extended I/O Settings .....                                                                                    | 140 |
| 4-11   | Inputting Image and Library Data .....                                                                         | 141 |
| 4-12   | Editing Memory Tables .....                                                                                    | 143 |
| 4-13   | Creating Alarm Lists/Histories .....                                                                           | 144 |
| 4-13-1 | Setting Alarm Lists/Histories .....                                                                            | 145 |
| 4-13-2 | Modifying Alarm Lists/Histories .....                                                                          | 147 |
| 4-14   | Standalone Settings .....                                                                                      | 149 |
| 4-15   | Editing Screen Data .....                                                                                      | 150 |

## SECTION 5

### **Creating Marks, Images, and Library Data ..... 159**

|       |                               |     |
|-------|-------------------------------|-----|
| 5-1   | Marks .....                   | 160 |
| 5-1-1 | Mark Creation Procedure ..... | 160 |
| 5-1-2 | Mark Creation Screen .....    | 160 |
| 5-1-3 | Mark Creation Functions ..... | 161 |

|                                 |                                                                    |            |
|---------------------------------|--------------------------------------------------------------------|------------|
| 5-2                             | Images .....                                                       | 164        |
| 5-2-1                           | Procedure for Image Creation .....                                 | 165        |
| 5-2-2                           | Image Editing Operations .....                                     | 166        |
| 5-3                             | Library Data .....                                                 | 171        |
| 5-3-1                           | Procedure for Library Data Creation .....                          | 171        |
| 5-3-2                           | Library Editing Operations .....                                   | 172        |
| <b>SECTION 6</b>                |                                                                    |            |
| <b>Printing Data .....</b>      |                                                                    | <b>175</b> |
| 6-1-1                           | Things that can be Done Using the Data Printing Function .....     | 176        |
| 6-1-2                           | Printing from the “File Selection” Screen .....                    | 178        |
| 6-1-3                           | Printing from the “Screen Selection” Screen .....                  | 180        |
| <b>SECTION 7</b>                |                                                                    |            |
| <b>Data Communication .....</b> |                                                                    | <b>183</b> |
| 7-1                             | Preparation and Procedure for Data Communication with the PT ..... | 184        |
| 7-2                             | Transmitting Data .....                                            | 188        |
| 7-3                             | Receiving Data .....                                               | 190        |
| 7-3-1                           | Data Reception .....                                               | 190        |
| 7-3-2                           | Reception of Display History Records .....                         | 192        |
| <b>APPENDICES .....</b>         |                                                                    | <b>193</b> |
| A.                              | Connecting Cable Specifications .....                              | 193        |
|                                 | Tool Interface Connector Specifications .....                      | 193        |
|                                 | Assembly of Connecting Cables .....                                | 193        |
| B.                              | Error Messages .....                                               | 195        |
| C.                              | Special Characters .....                                           | 197        |

## ***About this Manual:***

This manual describes the basic functions and operation procedures of the NT-series Support Tool and includes the sections described below.

Please read this manual carefully and be sure you understand the information provided before attempting to install and operate the NT-series Support Tool.

**WARNING** Failure to read and understand the information provided in this manual may result in personal injury or death, damage to the product, or product failure. Please read each section in its entirety and be sure you understand the information provided in the section and related sections before attempting any of the procedures or operations given.

### **SECTION 1**    Setting Up the Support Tool

This section describes how to install the support tool at a personal computer.

### **SECTION 2**    Basic Operations of the Support Tool

This section describes the basic operations that apply to the support tool as a whole, such as those for start-up, exit, and settings.

### **SECTION 3**    Support Tool Operations

This section describes how to use the basic screens of the support tool, setting options, and the functions of the function keys.

### **SECTION 4**    Creating Screen Data

This section describes how to create the screen data to be displayed by the programmable terminal (PT).

### **SECTION 5**    Creating a Marks, Images, and Library Data

This section describes how to create special characters and symbols (marks), image data, and library data.

### **SECTION 6**    Printing Data

This section describes how to print various types of support tool data, such as screen data and the conditions of use of memory tables.

### **SECTION 7**    Data Communication

This section describes how to transfer screen data created using the support tool to the PT, and how to receive data from the PT.

### **Appendix**    This section describes the specifications of the connecting cables, error messages, etc.

# ***Organization of the Manual, and How to Use It:***

The related manuals are listed below.

\* The final digit of the manual number is the revision code.

## **[For operating the support tool]**

S NT-series Support Tool Operation Manual (V028-E1-1)

..... This manual

The support tool displays details of operations and procedures on the screen in the form of “help messages”. Normally, operations can be performed by following these messages.

However, if you become unsure how to proceed during the course of an operation, or want to check the capabilities of the support tool, refer to this manual.

This manual only describes the operations pertinent to the support tool itself. It does not give detailed explanations of the meanings or effects of the items to be set. For this information, refer to the manuals below.

## **[For information on PT functions, operations, and restrictions]**

S NT20M/NT2000M Programmable Terminal Operation Manual (V001-E1-2)

S NT20S Programmable Terminal Operation Manual (V020-E1-2)

S NT600M Programmable Terminal Operation Manual (V002-E1-2)

S NT600S Programmable Terminal Operation Manual (V022-E1-1)

S NT30/NT30C Programmable Terminal Operation Manual (V034-E1-1)

S NT612G Programmable Terminal Operation Manual (V024-E1-1)

S NT610C Programmable Terminal Operation Manual (V025-E1-1)

S NT620S/NT620C Programmable Terminal Operation Manual (V033-E1-1)

These manuals contain full descriptions of PT functions, operations, and restrictions. They are organized in a manner that allows screen data to be created by following the User's Manual for the PT.

## **[For communication between the PT and host]**

S NT-series Direct Connection Operation Manual (V026-E1-1)

The functions that can be executed and the methods for these functions differ widely according to the host interface unit. The user's manuals for the host interface units have been compiled with the PT, the PC, and the communication format taken into consideration.

Anyone familiar with the functions of the PT can create screen data by referring to the manual for the host interface unit alone.

## **[For information on the functions and operations of the PC]**

S User's manual for each PC

When you need information about the operations, functions, etc., of the PC, refer to the operation manual for the PC, advanced function unit, or communication unit being used.

## Usable Hardware Combinations

The combinations of hardware that can be used, and the settings to be made with the support tool, are shown in the table below. Within each box of the table, the upper entry indicates the model of the interface unit (latter part of the model designation only) and the lower entry in parentheses indicates the model of the system ROM (latter part of the model designation only).

This table shows the basic combinations. Depending on the PT display method and system configuration, they may not be usable.

| PT Model          | Communication Method | Support Tool "Direct Access" Setting |                                 |                                 |
|-------------------|----------------------|--------------------------------------|---------------------------------|---------------------------------|
|                   |                      | None                                 | Ver.4                           | Ver.5                           |
| NT20S             | Host                 | –                                    | ST121 (-V1) (*1)                | ST121 (-V1) (*2)                |
|                   | NT                   | –                                    | ST121 (-V1) (*1)                | ST121 (-V1) (*2)                |
|                   | RS                   | ST128 (*2)                           | –                               | –                               |
|                   | C200H                | –                                    | ST121 (-V1) (*1)                | ST121 (-V1) (*2)                |
| NT20M/<br>NT2000M | Host                 | LK201<br>(SMR01-E)                   | LK201<br>(SMR31-E)              | –                               |
|                   | RS                   | LK201/LK202<br>(SMR01-E)             | –                               | –                               |
|                   | C200H                | LB121<br>(SMR02-E)                   | LB122<br>(SMR32-E)              | –                               |
|                   | SYSBUS               | RT121<br>(SMR01-E)                   | –                               | –                               |
| NT600S            | Host                 | –                                    | ST121 (-V1)/ST211 (-V1)<br>(*2) | ST121 (-V1)/ST211 (-V1)<br>(*2) |
|                   | NT                   | –                                    | ST121 (-V1)/ST211 (-V1)<br>(*2) | ST121 (-V1)/ST211 (-V1)<br>(*2) |
|                   | RS                   | ST121/ST211 (*2)                     | –                               | –                               |
|                   | C200H                | –                                    | LB122                           | LB122                           |
| NT600M            | Host                 | LK201 (*3)<br>(SMR01-EV1)            | LK201<br>(SMR31)                | –                               |
|                   | RS                   | LK201/LK202<br>(SMR01-EV1)           | –                               | –                               |
|                   | C200H                | LB121<br>(SMR02-EV1)                 | LB122<br>(SMR32)                | –                               |
|                   | SYSBUS               | RT121<br>(SMR01-EV1)                 | –                               | –                               |

| PT Model          | Communication Method | Support Tool "Direct Access" Setting |             |       |
|-------------------|----------------------|--------------------------------------|-------------|-------|
|                   |                      | Ver.3                                | Ver.4       | Ver.5 |
| NT30/<br>NT30C    | Host (*2)            | –                                    | ST131/ST141 | –     |
|                   | NT (*2)              | –                                    | ST131/ST141 | –     |
| NT612G            | Host (*4)            | LK210/LK202<br>(SMR31-V21)           | –           | –     |
|                   | NT (*4)              | LK201<br>(SMR34-V21)                 | –           | –     |
|                   | RS                   | –                                    | –           | –     |
|                   | C200H                | LB122<br>(SMR32-V21)                 | –           | –     |
|                   | BUS/2                | –                                    | –           | –     |
| NT610C            | Host (*4)            | LK210/LK202<br>(SMR31-V21)           | –           | –     |
|                   | NT (*4)              | LK201<br>(SMR34-V21)                 | –           | –     |
|                   | RS                   | –                                    | –           | –     |
|                   | C200H                | LB122<br>(SMR32-V21)                 | –           | –     |
|                   | BUS/2                | –                                    | –           | –     |
| NT620S/<br>NT620C | Host (*5)            | –                                    | ST211/ST141 | –     |
|                   | NT (*5)              | –                                    | ST211/ST141 | –     |

(\*1) Since the host interface unit/system ROM are incorporated, the PT model is indicated. Set "NT20M" as the NT Model with the support tool.

(\*2) Since the host interface unit/system ROM are incorporated, the PT model is indicated.

(\*3) There is also a system ROM for use with the process control function (SMR05).

(\*4) When the host link or NT link method of the direct connection function is used, the DAC function (process control function) can be loaded from the support tool.

(\*5) Since the host interface unit and system ROM are incorporated, the PT model is indicated. When using an NT620S, set "NT610G (NT612G)" as the NT Model with the support tool, and when using an NT620C, set "NT610C". The DAC function (process control function) can be loaded from the support tool.

Communication methods are indicated in the table above using the following abbreviations:

Host: Host link    NT: NT link    RS: RS-232C/422

C200H: C200H    SYSBUS: SYSBUS

# PT Model and Tool Settings

## “PT Type” and “Direct Access”

The following combinations of “PT Type” and “Direct Access” settings can be made in the Tool Settings.

| PT Type       |       | 20S | 20M | 600S | 600M | 30 | 30C | 612G | 610C | 620S | 620C |
|---------------|-------|-----|-----|------|------|----|-----|------|------|------|------|
| Direct Access | None  | f   | f   | f    | f    | ×  | ×   | ×    | ×    | ×    | ×    |
|               | Ver.3 | ×   | ×   | ×    | ×    | ×  | ×   | f    | f    | ×    | ×    |
|               | Ver.4 | ×   | f   | f    | f    | f  | f   | ×    | ×    | f    | f    |
|               | Ver.5 | f   | ×   | f    | ×    | ×  | ×   | ×    | ×    | ×    | ×    |

## Specifiable Tool Settings

The Tool Settings items that can be set in combination with each “PT Type” and “Direct Access” setting are indicated in the table below.

| PT Type            |        | 20S  |       |       | 20M  |       | 600S |       |       | 600M |       |
|--------------------|--------|------|-------|-------|------|-------|------|-------|-------|------|-------|
| Direct Access      |        | None | Ver.4 | Ver.5 | None | Ver.4 | None | Ver.4 | Ver.5 | None | Ver.4 |
| Memory Size        | 32KB   | ×    | ×     | ×     | f    | f     | ×    | ×     | ×     | f    | f     |
|                    | 64KB   | f    | f     | ×     | f    | f     | ×    | ×     | ×     | f    | f     |
|                    | 96KB   | ×    | ×     | f     | f    | f     | ×    | ×     | ×     | f    | f     |
|                    | 128KB  | ×    | ×     | ×     | f    | f     | f    | f     | f     | f    | f     |
|                    | 256KB  | ×    | ×     | ×     | ×    | ×     | ×    | ×     | ×     | f    | f     |
|                    | 512KB  | ×    | ×     | ×     | ×    | ×     | ×    | ×     | ×     | ×    | ×     |
|                    | 1024KB | ×    | ×     | ×     | ×    | ×     | ×    | ×     | ×     | ×    | ×     |
| Printer            |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |
| Sheet Feeder       |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |
| Mouse Use          |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |
| Communication Mode |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |
| Communication Port |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |
| Work Directory     |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |
| Data Directory     |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |
| Time [F3]          |        | ×    | ×     | ×     | ×    | ×     | ×    | ×     | ×     | ×    | ×     |
| Edit [F4]          |        | f    | f     | f     | f    | f     | f    | f     | f     | f    | f     |

| PT Type            |        | 30    | 30C   | 612G  | 620S  | 610C  | 620C  |
|--------------------|--------|-------|-------|-------|-------|-------|-------|
| Direct Access      |        | Ver.4 | Ver.4 | Ver.3 | Ver.4 | Ver.3 | Ver.4 |
| Memory Size        | 32KB   | ×     | ×     | ×     | ×     | ×     | ×     |
|                    | 64KB   | ×     | ×     | ×     | ×     | ×     | ×     |
|                    | 96KB   | ×     | ×     | ×     | ×     | ×     | ×     |
|                    | 128KB  | ×     | ×     | ×     | ×     | ×     | ×     |
|                    | 256KB  | ×     | ×     | ×     | ×     | ×     | ×     |
|                    | 512KB  | f     | f     | ×     | f     | ×     | ×     |
|                    | 1024KB | ×     | ×     | f     | ×     | f     | f     |
| Printer            |        | f     | f     | f     | f     | f     | f     |
| Sheet Feeder       |        | f     | f     | f     | f     | f     | f     |
| Mouse Use          |        | f     | f     | f     | f     | f     | f     |
| Communication Mode |        | f     | f     | f     | f     | f     | f     |
| Communication Port |        | f     | f     | f     | f     | f     | f     |
| Work Directory     |        | f     | f     | f     | f     | f     | f     |
| Data Directory     |        | f     | f     | f     | f     | f     | f     |
| Time [F3]          |        | f     | f     | f     | f     | f     | f     |
| Edit [F4]          |        | f     | f     | f     | f     | f     | f     |

# Functions of the Support Tool:

## Things that can be done using the support tool

The support tool has the following functions.

**Creation of screen data ..... SECTION 4 Creating Screen Data**

Creates screen data to be displayed by an NT610C/NT612G.

Besides creating characters and graphics, lamps, touch switches, etc., as screen data, it is also possible to allocate words for individual elements by using the direct connection function.

**Management of screen data ..... SECTION 3 Support Tool Operations**

Operations relating to screen data, such as the setting of screen attributes, and copying and deletion in screen units, are possible.

**File management ..... SECTION 3 Support Tool Operations**

Screen data can be managed in file units.

**Data communication with the PT ..... SECTION 7 Data Communication**

The PT can be connected to the support tool for communication of screen data files and other types of data.

**Printing data ..... SECTION 6 Printing Data**

Screen data, memory table data, etc., can be printed out at a printer.

**Environmental settings ..... SECTION 3 Support Tool Operations**

The parameters of the working environment, such as the PT model and data memory capacity, can be set.

**Creating files from screens ..... SECTION 3 Support Tool Operations**


Screen data can be saved in Microsoft Windows (TM) files (BMP format)

**Reading files created with other available drawing software .... SECTION 5 Creating Marks, Images, and Library Data**

Reading BMP files

Image files (BMP format) created using packages such as Microsoft Windows (TM) Paintbrush can be read as data.

# Menu Tree

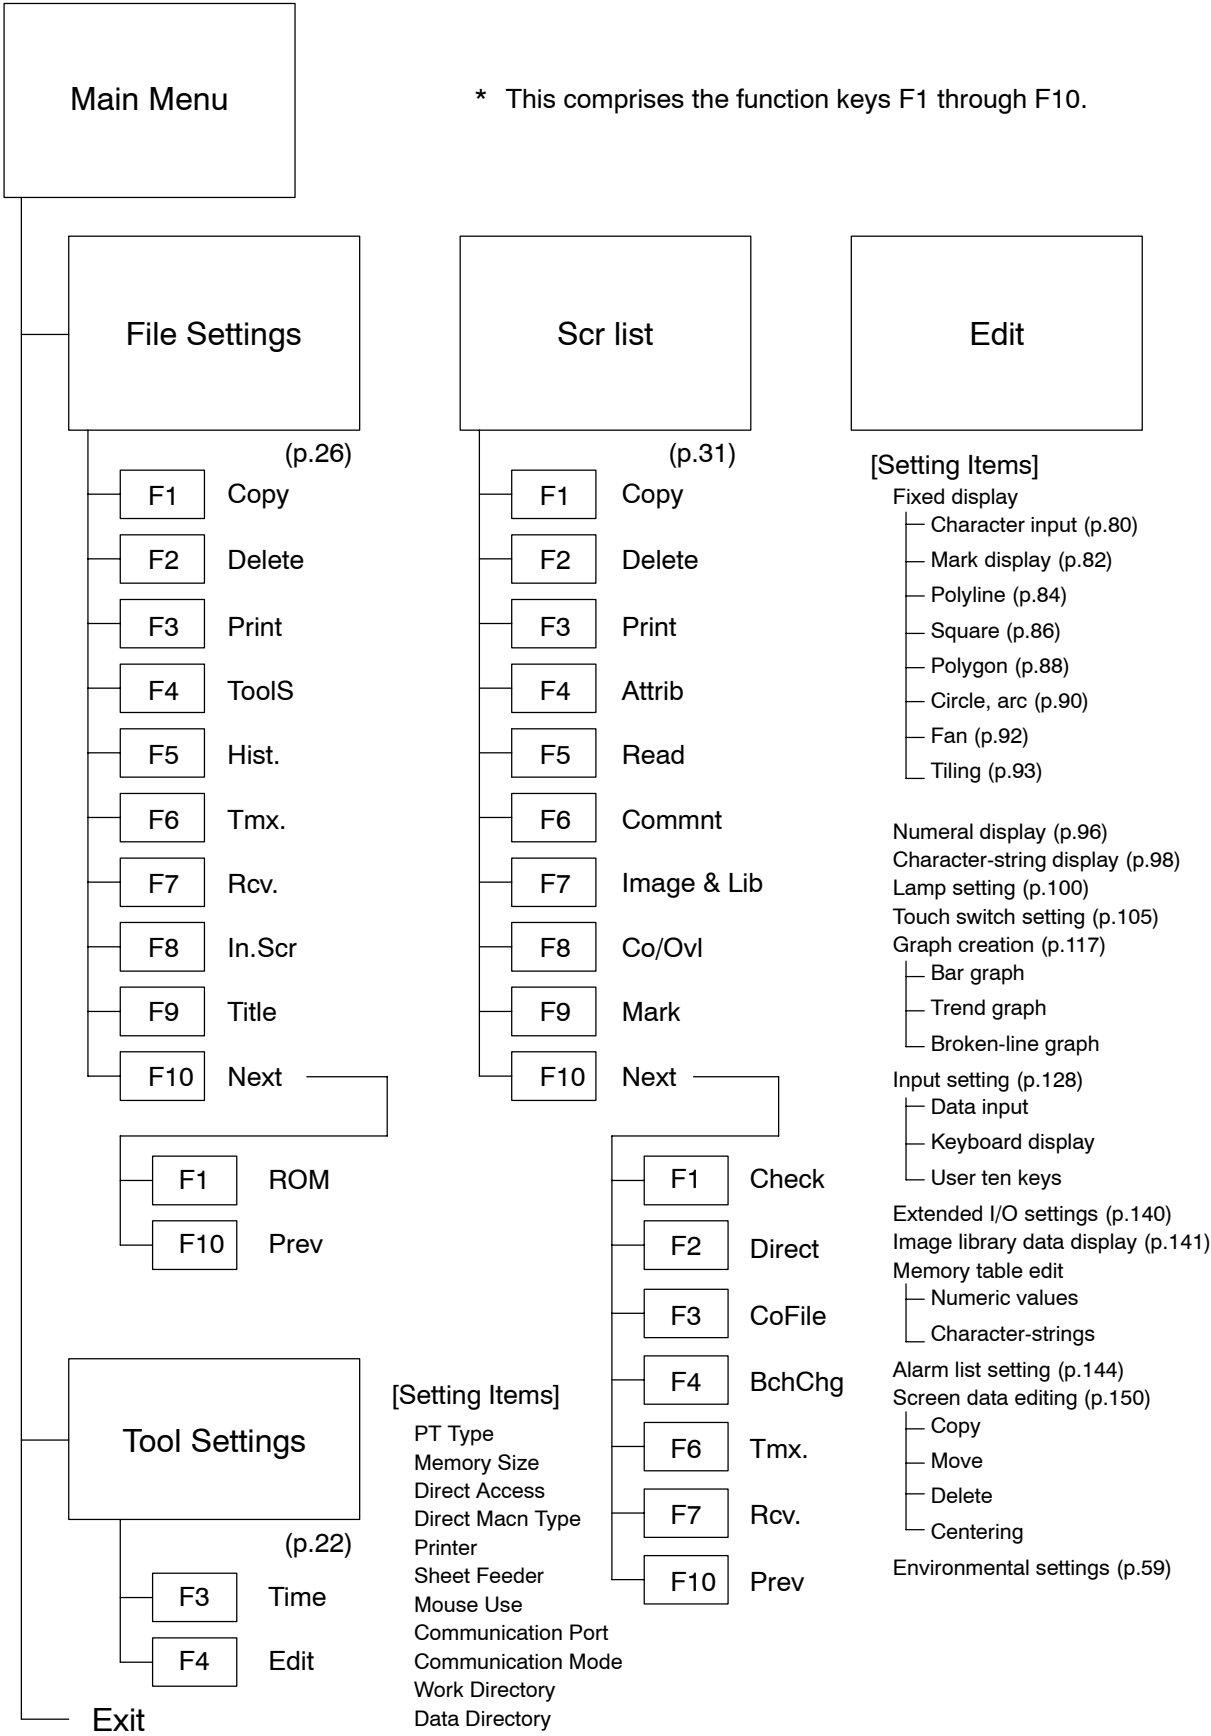



---

# SECTION 1

## Setting Up the Support Tool

When using the support tool for the first time, the support tool system has to be installed in the personal computer you are using.

This section describes the environment in which the support tool can be used and the method for installing it in a personal computer.

|       |                                        |   |
|-------|----------------------------------------|---|
| 1-1   | Preparing Equipment . . . . .          | 2 |
| 1-1-1 | Equipment to be Prepared . . . . .     | 2 |
| 1-1-2 | Before Starting Preparations . . . . . | 3 |
| 1-2   | IBM PC/AT Preparations . . . . .       | 4 |
| 1-2-1 | Installation Method . . . . .          | 4 |

## **1-1 Preparing Equipment**

The following equipment and materials must be prepared in order to use the support tool.

### **1-1-1 Equipment to be Prepared**

#### **Software**

S NT Series Support Tool (Type NT-ZA3AT-EV2)

This software comes in the form of a 3.5 inch floppy disk.

S DOS

IBM DOS, Ver.5.02 or later version is required.

#### **Hardware**

S IBM PC/AT Personal computer

At least 640 Kbytes of main memory is required.

Use an IBM personal computer or 100% compatible.

S At least one floppy disk drive (2HD format type)

There must be one 3.5 inch drive.

S Display

VGA compatible display

When creating screen data for an NT30C/NT610C/NT620C, a color display is required.

S Mouse

Serial mouse or bus mouse

A Microsoft mouse driver is required.

#### **[Common Items]**

S Printer

EPSON ESC/P printer (24 pin) or HP LASER Jet.

S Hard disk drive

A hard disk is essential. The available area required for the support tool files and data area is 2 Mbytes.

§ Using the EMS (expansion memory)

The EMS must be loaded to the support tool before using it.

DEVICE=EMM386.SYS /F=C000

### Equipment Relating to Transfer of Screen Data

§ RS-232C connecting cable

For the cable specifications, see Section 7 Data Communication, and the Appendix.

### Recommended environment

For convenience, you are recommended to use the NT series support tool in the following environment.

Support tool installation site : Hard disk

Work directory (tool settings) : RAM disk

Data directory (tool settings) : Hard disk


For details on "tool settings", see 3-3 "Tool Settings" Screen (p.22).

**Note** Back up the data stored in the hard disk in a floppy disk.

## 1-1-2 Before Starting Preparations

Be sure to make a back-up disk for the support tool system disk and keep the original somewhere safe.

When making the back-up, ensure that the original disk is write-protected, as shown below:

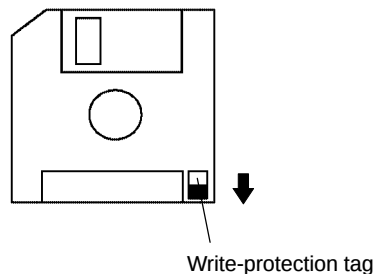

## 1-2 IBM PC/AT Preparations

To enable the support tool to be run on your IBM PC/AT, install the system in its hard disk by using the support tool installation program.

### 1-2-1 Installation Method

Explained here is the method for installing the system in a hard disk that already has a history of use.

Check that the following conditions are satisfied.

\$ IBM DOS (Version 5.02 or later) is installed.

\$ [FORMAT.EXE] and [DISKCOPY.EXE] are loaded.

If these files are loaded in a subdirectory, set an environment variable PATH.

For the purposes of this explanation, the drive configuration is assumed to be as follows:

Drive A: 3.5 inch floppy disk

Drive B: 3.5 inch floppy disk

Drive C: Hard disk

If the drives of the system you are using differ from those in this example, rename the drive names in the example to achieve correspondence with your system (remember that there must be at least one 3.5 inch floppy disk drive).

- Procedure**
1. Start up the personal computer that has DOS installed in its hard disk.
  2. Prepare a new floppy disk and use it to create a back up disk for the support tool system disk in the following way.

Set the new disk in the B drive.

Enter "FORMAT B:  ". The new disk will be formatted.

On completion of formatting, set the support tool system disk in the A drive.

Enter "DISKCOPY A: B:  ". The back up disk will be created.

" If the disks in drive A and drive B are of different types, use the command "DISKCOPY A: A:  " and create the back up disk in the same drive.

Now take the original disk out of the A drive and store it, and transfer the back up disk to the A drive.

3. Use the command "A:  " to set the current drive to "A".
4. Enter "INSTALL C: \NT  ".

The underlined part (\NT) is the directory in the hard disk to which the support tool is copied; if it does not exist already it is created automatically. It is possible to specify another directory name.

**WARNING**

If a directory that already exists is specified, the support tool system will be copied to that directory with no request for confirmation. Make sure that no necessary files will be overwritten.



5. When the message indicating completion is displayed, the installation work is finished.

**D Notes on Installation**

S A hard disk with an available capacity of at least 2 Mbytes is required in order to install the NT series support tool. If a work directory for the support tool is to be created on the hard disk, an additional capacity of up to 2 Mbytes will also be required.

S Start installation after securing sufficient available capacity.

**D Available Capacity Required to Run the NT Series Support Tool**

S At least 445 Kbytes (455000 bytes) of available main memory capacity is required to run the NT series support software (NT.EXE).

**D Checking Available Main Memory Capacity**

S Check the available main memory capacity either by using CHKDSK.EXE or MEM.EXE, which are included in the DOS package.

S Input "CHKDSK.EXE" or "MEM.EXE" at the command line to display the memory capacity and other data. If the "usable memory" or "maximum executable program size" is 445 Kbytes (455000 bytes) or greater, NT.EXE can be used.



---

## SECTION 2

# Basic Operations of the Support Tool

This section explains the basic operations that apply to the support tool as a whole, such as those for starting up and exiting the support tool, and operations using the keyboard and mouse.

When using the support tool, “help messages” which explain the operating procedures are displayed on the screen. After becoming familiar with the basic operations by reading this section, you will therefore be able to use the support tool by following the help messages.

|       |                                                |    |
|-------|------------------------------------------------|----|
| 2-1   | Starting Up and Exiting the Support Tool ..... | 8  |
| 2-1-1 | Start-Up Procedure .....                       | 8  |
| 2-1-2 | Exit Procedure .....                           | 9  |
| 2-2   | Basic Operating Procedures .....               | 10 |
| 2-2-1 | Cursors .....                                  | 10 |
| 2-2-2 | Selecting Options .....                        | 11 |
| 2-2-3 | Using the Function Keys .....                  | 11 |
| 2-2-4 | Using the Mouse .....                          | 12 |
| 2-2-5 | Using Help Messages .....                      | 15 |
| 2-2-6 | Selecting Numbers and Codes .....              | 16 |

## 2-1 Starting Up and Exiting the Support Tool

This section describes the procedure for starting up the support tool once it has been installed in a personal computer.

### 2-1-1 Start-Up Procedure

The method for start-up differs a little according to the hard disk drive and directory in which the support tool is installed.

**Procedure** 1. Switch on the power supply to the personal computer to start up DOS.

Check that the current drive is the drive for the hard disk in which the support tool is installed.

If it is not, enter "C: ☐ " to change the current drive. For the underlined part (C:), specify the drive name of the drive in which the support tool is installed.


2. Use the command "CD NT ☐ " to change the current directory to the directory that contains the support tool. For the underlined part (NT), specify the name of the directory into which the support tool was copied.

3. Input "NT ☐ ".

The support tool will start up.

S "Main Menu" screen of the support tool

When the support tool starts up the "Main Menu" screen shown below will be displayed.

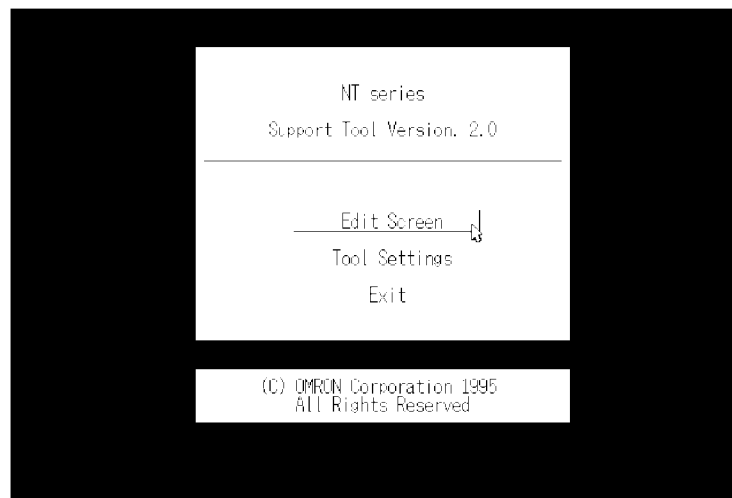

**Reference:** When the support tool is started up for the first time, the "Tool Settings" screen is displayed first. See 3-3 "Tool Settings" Screen (p.22).

## **2-1-2 Exit Procedure**

When the “Main Menu” screen is displayed, move the cursor to “Exit” using the [ ] [ ] keys and press enter key (  ).

The support tool will be exited and the DOS prompt will be displayed.

After the prompt has appeared, switch the power off.

## 2-2 Basic Operating Procedures

The support tool is a software package that allows the creation of screen data for a PT, and communication with a PT, using simple operations. The user can perform these operations simply by following the help displays that appear on the screen.

Support tool operations can be performed either by using the keyboard or by using a mouse.

This section explains basic operations such as the selection of menu options and operation of the mouse.

### 2-2-1 Cursors

The following types of cursor are displayed on the screen in different circumstances.

S Bar cursor (  ), box cursor (  ), check box (  )

Used to select options, file names, etc.

This cursor is moved by using the [ ] [ ] [ ] [ ] keys or the mouse.

S Mouse cursor (  )

This cursor follows the motion of the mouse. When performing operations using the mouse, locate this cursor on the required item and click the left mouse button.

S Cup cursor (  )

This cursor is displayed while the support tool is carrying out processing. When the processing is finished it changes into the mouse cursor.

S Enquiry cursor (  )

This cursor is displayed while the support tool is waiting for the input of a reply, such as YES/NO. When this cursor is displayed, press the  key (for YES) or the [Esc] key (for NO).

When using the mouse, press either the left button (for YES) or the right button (for NO). It is also possible to click on icons with the pointed part of the enquiry cursor (at its top left corner) (p.12).


S Key input prompt cursor (  )

This cursor is displayed when input is required. When it is displayed, carry out input from the keyboard or by using the mouse.

## 2-2-2 Selecting Options

When performing operations using the support tool it will be necessary to select menu options, choices, file names, etc.


Such selections are made by locating the bar cursor on the item to be selected by using the arrow keys ([ ] [ ] [ ] keys) and pressing the  key.

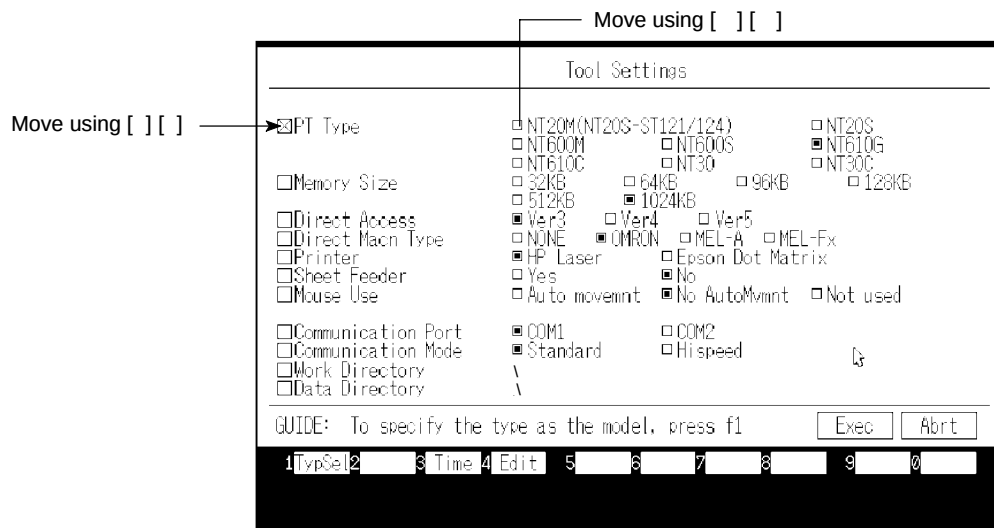

Items which cannot be selected are displayed in red.

## 2-2-3 Using the Function Keys

The currently available functions and currently selectable options are displayed at the bottom of the screen. The items displayed correspond to the function keys on the keyboard. To execute one of the displayed options, press the function key on the keyboard that corresponds to it.

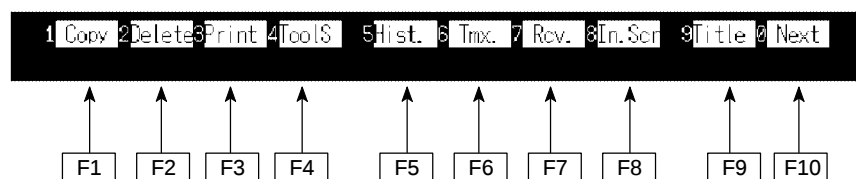

## 2-2-4 Using the Mouse

It is possible to perform all the support tool operations by using a mouse.

The left button of the mouse has the same function as the  key on the keyboard and right button the same function as the [Esc] button.

Selection or specification of items using the mouse is achieved by clicking one of its buttons. "Clicking" means pressing the button and releasing it immediately. Clicking with the left mouse button is sometimes called "left clicking" and clicking with the right mouse button is sometimes called "right clicking".

### S "Mouse Use" specification

Whether the mouse is used or not is specified with the "Mouse Use" option of the "Tool Settings" menu (see p.22). If "No" is specified, the mouse cursor ceases to be displayed (however, even if "No" is specified, the mouse cursor will be displayed and will be able to be used when editing image data).

### S Selection

Select items by moving the cursor to them and clicking on them.


For example, to select a file, locate the mouse cursor at the intended file name and click the left mouse button. When the bar cursor has moved, click on the file name again with the left button. This will select the file.

Clicking on an input field has the same effect as pressing the  key.

### S Icon operations


The key marks displayed in the help message area and elsewhere are icons that can be actuated with the mouse. Clicking on an icon with the left mouse button will execute the function represented by that icon.

For example, clicking on the [SPACE] mark displayed on the screen with the left mouse button will have the same effect as pressing the  key.

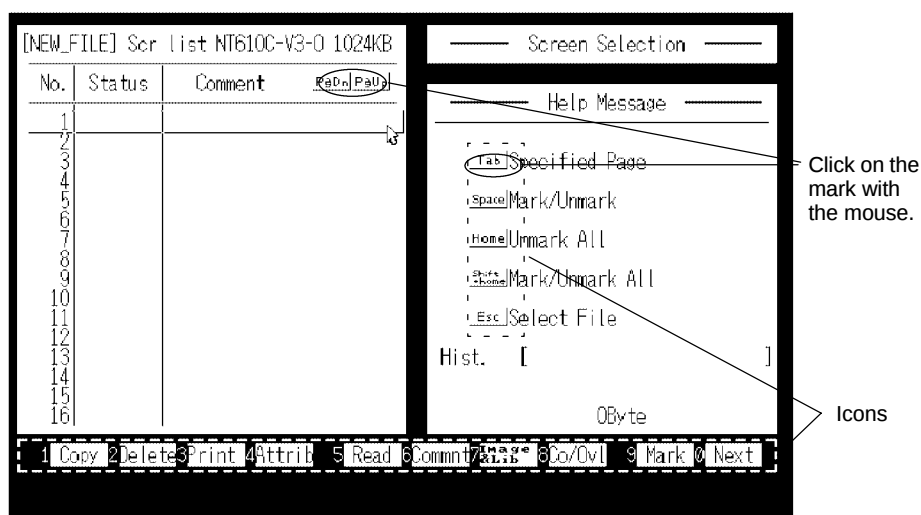

S Operations on the editing screen

When specifying coordinate positions etc. on the editing screen, the cross-hair cursor (intersecting vertical and horizontal lines) is displayed. The cross-hair cursor follows the motion of the mouse. To fix a position, click the left mouse button.

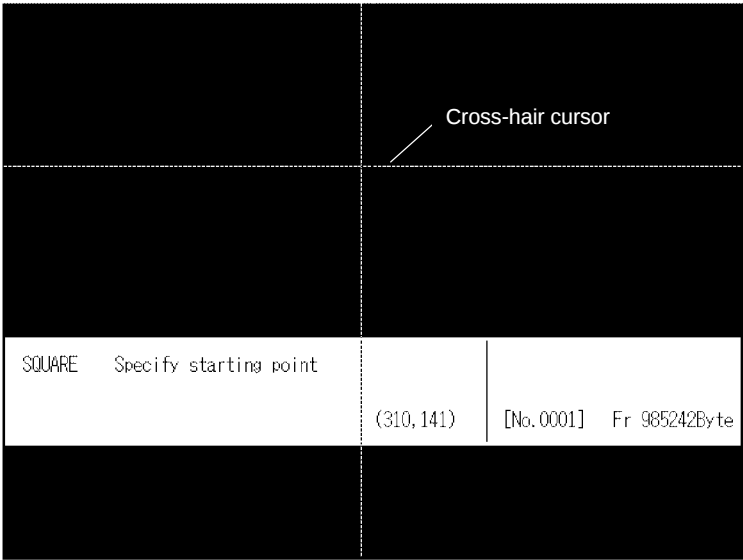

When the cross-hair cursor touches the menu box, the menu box is automatically cleared from the screen and coordinates are displayed at the top right of the screen. When the operation with the cross-hair cursor is completed, the menu box is redisplayed.

Whether or not a menu box is displayed when the cross-hair cursor is displayed is specified in the “environmental settings” (tool settings for the “Edit” screen).

S Double click

To specify the end points for continuous lines and polygons, double-click the mouse. “Double-clicking” means pressing the left mouse button twice in rapid succession.

S Moving the bar cursor

When screens or display elements are displayed in a list, the bar cursor can be moved by clicking at entries above or below the current cursor position.

| No. | Initial Data |
|-----|--------------|
| 000 | 0            |
| 001 | 0            |
| 002 | 0            |
| 003 | 0            |
| 004 | 0            |
| 005 | 0            |
| 006 | 0            |
| 007 | 0            |
| 008 | 0            |
| 009 | 0            |
| 010 | 0            |
| 011 | 0            |
| 012 | 0            |
| 013 | 0            |
| 014 | 0            |
| 015 | 0            |

Clicking here causes the bar cursor to move upward.

Bar cursor

Clicking here causes the bar cursor to move downward.

2-2-5 Using Help Messages


The support tool is provided with “help messages” for each screen: they display the key operations that can currently be used, or prompt parameter input or selections.

The key displays in the help message area also function as icons that can be actuated using the mouse.

Operate the support tool by following the help messages. There are two types of help message, distinguished on the basis of the screen and function, as indicated below.

S Help messages that display the operating procedure

Usually, as shown in the screen below, the operation keys that can be used with the current screen, and their details, are displayed in the help message area.

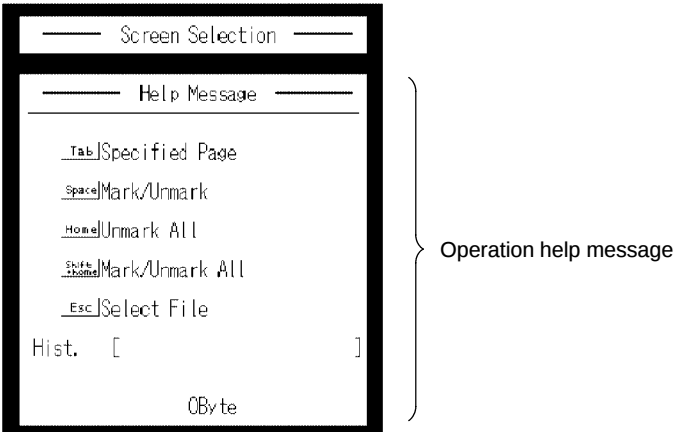

The  key, cursor keys, [Page Down], [Page Up], etc., can be used even if they are not displayed.

S Help messages for parameter input

In cases such as when a function has been selected with a function key, settings and parameters can be specified in the help message area.



## 2-2-6 Selecting Numbers and Codes

The support tool allows simple selection of the following numbers and codes.

- S Screen numbers
- S Numeral table numbers
- S Character-string memory table numbers
- S Bit memory table numbers
- S Image codes
- S Library codes
- S Extended I/O input terminal numbers (\*)
- S Extended I/O output terminal numbers (\*)

(\*) Only number specification using the [Tab] key can be used for these.

When a screen that displays a list of numbers or codes is displayed, the key operations indicated below can be used:

[Shift] + [ ] key : Moves the bar cursor from the position where it is currently located to the previous number or code for which there is data.

[Shift] + [ ] key : Moves the bar cursor from the position where it is currently located to the next number or code for which there is data.


### Example:

Assume that the bar cursor is on screen number 6 and there is data only for screen numbers 2, 4, and 10:

[Shift] + [ ] key : The bar cursor moves to screen number 4.

[Shift] + [ ] key : The bar cursor moves to screen number 10.

If now, while the bar cursor is at screen number 10, [Shift] + [ ] is pressed again, the bar cursor will move full cycle to screen number 2.

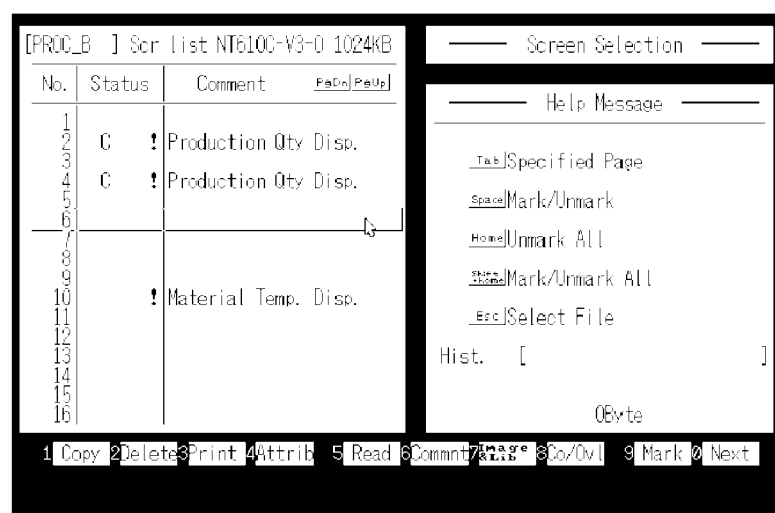

[Tab] key : The number/code input field is displayed. When a number of code is input and the  key pressed, the bar cursor moves to the specified number or code.

**Example: Screen number input field**

Screen No. [  ]



---

## SECTION 3

### Support Tool Operations

The support tool has the following 5 screens: the “Main Menu” screen, the “Tool Settings” screen, the “File Selection” screen, the “Screen Selection” screen, and the “Edit” screen. This section describes the four screens other than the “Edit” screen.


|       |                                             |    |
|-------|---------------------------------------------|----|
| 3-1   | Using the Support Tool .....                | 20 |
| 3-2   | Main Menu .....                             | 21 |
| 3-3   | “Tool Settings” Screen .....                | 22 |
| 3-4   | “File List” Screen .....                    | 26 |
| 3-5   | “Scr list” Screen .....                     | 31 |
| 3-5-1 | Functions of the “Scr list” Screen .....    | 31 |
| 3-5-2 | Setting Direct Connection Information ..... | 42 |

## 3-1 Using the Support Tool

The support tool is a software package for creating screen data and transferring it to a PT.

The support tool has five basic screens and on these five screens it is possible to create data, and to select various functions and execute them.


The relationships between the screens are shown below.

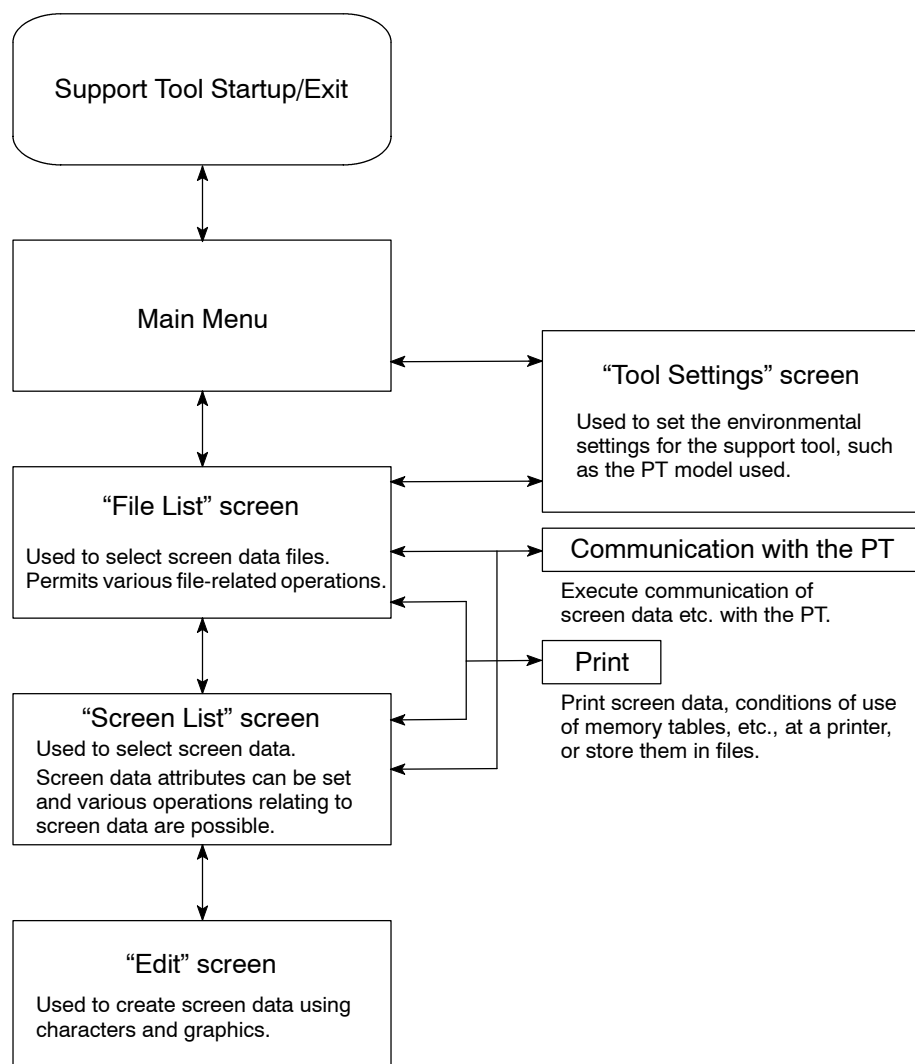

**Reference:** When the support tool is started up for the first time, the "Tool Settings" screen is displayed first.

## 3-2 Main Menu

When the support tool is started up, the “Main Menu” screen is displayed first.

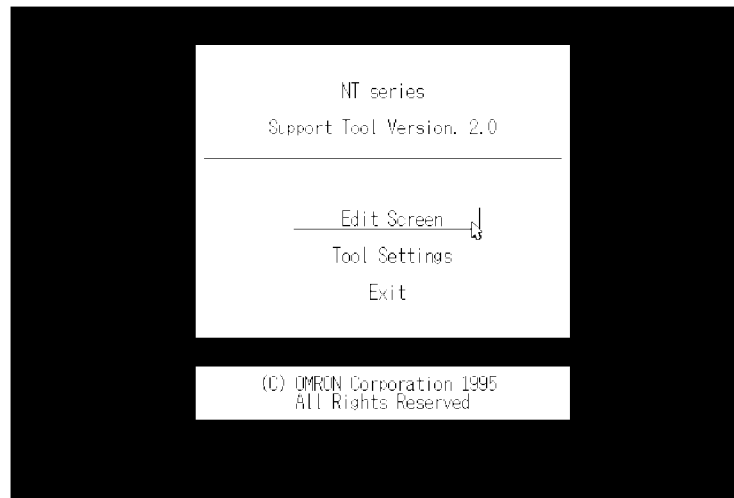

The items in the main menu have the following functions.

- S Edit Screen: Select this item to create or edit screen data. The “File Selection” screen will be displayed and operations relating to screen data and files will be possible.
- S Tool Settings: Used to set the environmental conditions for using the support tool, such as the model of the PT used in conjunction with the support tool, the image data memory capacity, and the model of printer used. Provided there are no changes, these settings only have to be set once.
- S Exit : Used to exit the support tool. To exit, select this item, wait for the DOS prompt to be displayed and then switch the power off.

### 3-3 “Tool Settings” Screen

This screen is used to set the environmental settings required to use the support tool, such as the PT model, capacity of the screen data memory board, and the directory in which data is saved.

When using the support tool for the first time, this screen is displayed first. Be sure to set the tool settings in accordance with the model you are using. After this first setting, it will not be necessary to set the tool settings again unless there is some change.

#### Settings

When “Tool Settings” is selected from the main menu, the “Tool Settings” screen is displayed. For details on the permissible combinations of settings, see “PT Model and Tool Settings” (p.xiv) at the beginning of this section.

<“Tool Settings” screen>

S PT Type: Specify the model of PT being used.

**Note** The specified PT Type setting is different from the actual PT model in the following cases:

|                              |          |
|------------------------------|----------|
| NT20S-ST121 (without [-V1]): | [NT20M]  |
| NT612G:                      | [NT610G] |
| NT620S:                      | [NT610G] |
| NT620C:                      | [NT610C] |

S Memory Size: Specify the capacity of the screen data memory board installed in the PT.

S Direct Access: Specify the direct connection version. If not using the direct connection function, set “Ver.4” for the NT20S, NT20M, NT600S, and NT600M. “NONE” cannot be set for NT612G/610C or NT620C/S.

S Direct Macn Type: Set “NONE” if direct connection is not used. Set “OMRON” if direct connection is used.

|                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S Printer:            | Specify the type of the printer used to print screen data, etc., here.                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| S Sheet Feeder:       | Specify whether or not the printer is fitted with a sheet feeder here.                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| S Mouse Use:          | <p>Specify whether or not a mouse is used with the support tool, and, if a mouse is used, the operation when the mouse is used.</p> <p>If “Auto movement” is selected, the mouse cursor moves automatically when a window or other screen display for making setting is displayed, speeding up input and specification operations. If “No AutoMvmnt” is selected, the mouse cursor does not move automatically. However, the mouse cursor is displayed, and can be used, during image data editing, even if “Not used” is set.</p> |
| S Communication Port: | Specify the port on the computer to be used to communicate with the PT. If possible, do not specify the same port as the one used for the mouse.                                                                                                                                                                                                                                                                                                                                                                                   |
| S Communication Mode: | <p>Set the communication speed for communication of data with the PT.</p> <p>Set “Stndrd” if the conditions for communication are unfavorable due to interference, etc.</p>                                                                                                                                                                                                                                                                                                                                                        |
| S Work Directory:     | The support tool temporarily creates work files for data creation and communication, etc. This setting specifies the directory in which work files can be created.                                                                                                                                                                                                                                                                                                                                                                 |
| S Data Directory:     | Specify the directory in which created screen data files are saved here.                                                                                                                                                                                                                                                                                                                                                                                                                                                           |


**Reference:** S The NT series support tool is compatible with all OMRON PT models, all versions of the direct connection function (Ver.3, Ver.4, Ver.5), and the communication methods other than direct connection. The support tool displays and selectable functions differ according to the settings made for “PT Type”, “Direct Access”, and “Direct Macn Type”.

S For details on the direct connection function, refer to the user’s manual for the relevant host interface unit.

S The specified “PT Type”, “Memory Size”, “Direct Access”, and “Direct Macn Type”, are displayed on each screen as shown below.

### Example

File Selection screen when “612G”, “512B”, and “Ver.3”, respectively, have been set for these items.

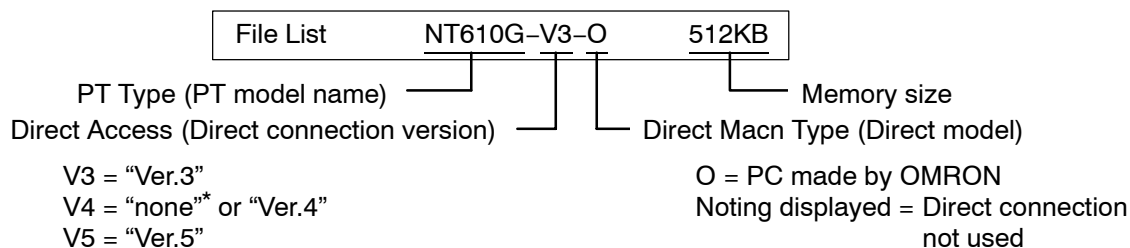

\*: For “20M”, “20S”, “600M”, “600S”

### Functions of the function keys

[TypSel] [F1] . . . Direct connection setting for PT model

Used to set the “Direct Access” based on the model of PT or system ROM. Since the settings for “PT Type”, “Memory Size”, “Direct Access” and “Direct Macn Type” differ according to the PT and the system ROM used, selection based on the model makes it possible to set all the settings for “PT Type”, “Memory Size”, “Direct Access” and “Direct Macn Type” at the same time.

- (1) Press the [F1] (TypSel) key. The window shown below will be displayed. The communication methods that can be used are also displayed for your reference.

| PT/ROM Type      | DirMacnTyp | Ver  | Remark                    | FaOn/FaUp |
|------------------|------------|------|---------------------------|-----------|
| [NT612G/NT620S]  |            |      |                           |           |
| NT610G-SMR3W-EV2 | OMRON      | Ver3 | HOST_LINK C20CHLI/F BUS/2 |           |
| NT620S-ST1211    | OMRON      | Ver4 | HOST_LINK NT_LINK         |           |
| [NT610C/NT620C]  |            |      |                           |           |
| NT610C-SMR3W-EV2 | OMRON      | Ver3 | HOST_LINK C20CHLI/F BUS/2 |           |
| NT620C-ST141     | OMRON      | Ver4 | HOST_LINK NT_LINK         |           |

When the window is displayed by pressing [F1] (TypSel), the bar cursor is located at the PT model which was set for “PT Type”.

- (2) Select the model of PT/system ROM being used.
- (3) Press the  key. The “Tool Settings” screen will be redisplayed with the “PT Type”, “Memory Size”, “Direct Access” and “Direct Macn Type” settings that can be used with the selection made in step (2) set.

|        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Time] | <p>[F3] . . . PT time setting</p> <p>Used to make the time setting for the PT. The time function can be used with the NT30, NT30C, NT612G, NT610C, NT620S, NT620C.</p> <p>(1) Connect the PT and the support tool (see Section 7 Data Communication).</p> <p>(2) Press the [F3] (Time) key.</p> <p>(3) To change the current time, enter the time on the screen.</p> <p>(4) Set the PT to the "Transmit Mode".</p> <p>(5) Press the  key: the time data will be sent and set in the PT.</p> <p>" It is also possible to receive the time set in the PT and set it. Press the [F1] (receive) key with the time setting screen displayed.</p> |
| [Edit] | <p>[F4] . . . Tool settings for the "Edit" screen (environmental settings)</p> <p>Used to set the "Edit" screen settings, such as grid display and "snap ON" setting. These settings can also be made by selecting SET ENV on the initial editing screen. For the details of these settings see "Environmental Settings" (p.59).</p> <p><b>Quitting tool setting</b></p> <p>S Press  key twice: the support tool will be set in accordance with the details displayed on the screen and the display will return to the main menu.</p> <p>S Press the [Esc] key to return to the main menu without making any settings.</p>                  |

## 3-4 "File List" Screen

When the "Edit Screen" option is selected from the main menu, the "File List" screen is displayed.


In support tool terminology, an assemblage of screen data is called a "file".

Actually, each "file" comprises four or five files with different extension names (the number of files per "file" depends on the "tool settings").

### Settings

On the "File List" screen, besides creating and selecting files, it is also possible to perform functions such as data communication with the PT.

<"File List" screen>

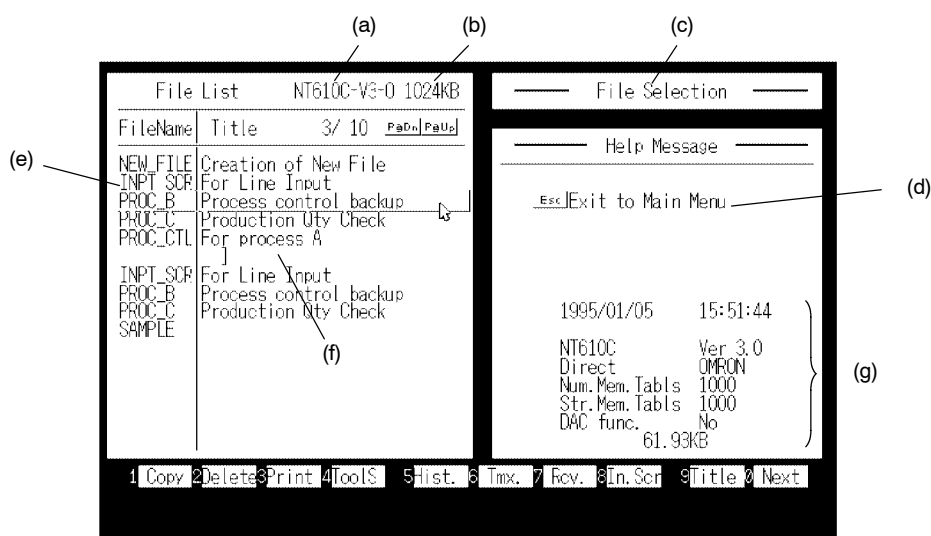

- (a) PT model name: This is the PT model and direct connection version number set in the "Tool Settings". The final 0 indicates direct connection. Even if direct connection is not used, the version is displayed as "V4" when using an NT20M, NT20S, NT600M, or NT600S.
- (b) PT memory size
- (c) Name of task currently being executed
- (d) Help message area: Displays a guide to operation and allows parameter input.
- (e) File name: The file names are indicated in this column. If the bar cursor is located on a file name and the key pressed, the "Screen Selection" screen will be displayed. To create a new file, select "NEW\_FILE".
- (f) Title: This is a comment that indicates the contents of a file. It is input when the file is saved.

- (g) File information: The NT model, direct connection version, direct connection indication, and file size for the file at which the bar cursor is located are displayed here. Even if direct connection is not used, the version is displayed as "V4" when using an NT20M, NT20S, NT600M, or NT600S.

The support tool allows the creation of up to 200 "files" (the number may be smaller than this due to restrictions on the number of files per DOS directory). If the required file is not displayed on the screen, screens earlier and later in the sequence can be displayed by using the [Page Down] and [Page Up] keys, or icons.

Depending on the direct connection version of the model used, it may or may not be possible to use certain files.

Files that cannot be used are displayed in red.

To use more than 200 files, create another directory. The data directory can be changed by using the "Tool Settings" option.

All the files in the specified data directory are displayed.

The files that correspond to the "PT Type" and "Direct Access" set in the "Tool Settings" are first in the order of display. The other files are displayed in the following order: 20M, 20S, 600M, 600S, 612G, 610C, 30, 30C; files corresponding to the same model are displayed in order of direct connection version.

It is possible to read files set using other models but you are advised to check the details of the file information displayed when the file is specified before reading it. It is also possible to read files created using previous support tool versions.

### **Returning to the main menu**

To return to the main menu, press the [Esc] key.

### **Functions of the Function Keys**

- |          |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Copy]   | <p>[F1] . . . Copy file</p> <p>Used to copy the contents of a file to another file (copying in support tool "file" units).</p> <ol style="list-style-type: none"> <li>(1) Press the [F1] (copy) key.</li> <li>(2) Select the file to be copied.</li> <li>(3) Input the file name and title of the copy destination and press the  key.</li> </ol> <p>" If [F1] (drive) is now selected, the file can be copied to the directory of another drive.</p> |
| [Delete] | <p>[F2] . . . Delete file</p> <p>Used to delete unnecessary files (deletion in support tool "file" units).</p> <ol style="list-style-type: none"> <li>(1) Locate the bar cursor at the file to be deleted and press the [F2] key.</li> <li>(2) Check the file name and then press the  key: the file will be deleted.</li> </ol>                                                                                                                       |

|          |                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Print]  | <p>[F3] . . . Print data</p> <p>Used to print out files, information relating to screen data, character-strings, the conditions of use of numeral tables, etc.</p> <p>See Section 6 "Printing Data".</p>                                                                                                                                                                                                |
| [Tools]  | <p>[F4]] . . . Tool settings</p> <p>Displays the "Tool Settings" screen.</p> <p>Used to change the support tool environment during file operations.</p> <p>For details of the setting operation, see 3-3 "Tool Settings" Screen (p.22).</p>                                                                                                                                                             |
| [Hist.]  | <p>[F5] . . . Receive display history registration data</p> <p>Used to read display history registration data registered in the PT and save it in a file.</p> <p>This file is a text style of DOS format file and is therefore different style from the files in which screen data is saved.</p> <p>See Section 7 "Data Communication".</p>                                                             |
| [Tmx.]   | <p>[F6] . . . Send data to the PT</p> <p>Establishes a connection with the PT, sends created data to it in file units and writes it to the image data memory. The types of data that can be sent are screen data, character-string memory table and numeral table data, system memory data, mark data, image data, library data, and direct information.</p> <p>See Section 7 "Data Communication".</p> |
| [Rcv.]   | <p>[F7] . . . Receive data from the PT</p> <p>Used to receive data registered in the PT in file units. The types of data that can be received are screen data, character-string memory table and numeral table data, system memory data, mark data, image data, library data, and direct information.</p> <p>See Section 7 "Data Communication".</p>                                                    |
| [In.Scr] | <p>[F8] . . . Set system memory</p> <p>Used to set the screen number and PT statuses at startup that are displayed when the PT is started up.</p>                                                                                                                                                                                                                                                       |

The following items can be set:

|                                          |                                                                                                                                                                                                                                                                                                                                              |                                                    |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------|
| Initial screen                           | Number of the screen data displayed when the PT is started up.<br>(Invalid when direct connection is used)                                                                                                                                                                                                                                   | Supported by all NT models                         |
| Key input buzzer                         | ON/OFF status of key input sound.                                                                                                                                                                                                                                                                                                            | Supported by NT30, NT30C, NT612G, and NT610C only. |
| Buzzer                                   | Buzzer sound ON/OFF or ON only when an error occurs.                                                                                                                                                                                                                                                                                         |                                                    |
| Resume function                          | ON/OFF status of the “resume” function.                                                                                                                                                                                                                                                                                                      |                                                    |
| Alarm output                             | ON/OFF status of alarm output.                                                                                                                                                                                                                                                                                                               |                                                    |
| Backlight OFF (prevention of afterimage) | This is an afterimage prevention function which automatically switches off the backlight (or makes the display blank). The available settings are to switch the backlight off after a time lapse of 10 minutes/1 hour, or “off”. With an LED screen, this function switches the backlight OFF. With an EL screen, it makes the screen blank. |                                                    |
| Printer:                                 | Type of printer connected to the PT: EPSON Esc/P printer (24 pin) or HP LASER Jet.                                                                                                                                                                                                                                                           |                                                    |
| Print way                                | Printing method used when printing a screen displayed on the PT: color or grayscale (only valid when using NT30C and NT610C).                                                                                                                                                                                                                |                                                    |
| Numerical tables                         | The number of numeral tables: 512 or 1000 (if reduced to 512, the memory capacity available for screen data is increased by 4880 bytes).                                                                                                                                                                                                     |                                                    |
| String tables                            | The number of character-string memory tables: 256 or 1000 (if reduced to 256, the memory capacity available for screen data is increased by 29760 bytes).                                                                                                                                                                                    |                                                    |
| Alarm fast I/O                           | Processing method when the maximum number of alarm instances (256) is exceeded when using the alarm history.<br><br>“Yes” Old records are deleted as new ones are registered.<br><br>“No” The registration of new history records is prevented.                                                                                              |                                                    |

On completion of setting, press the  key.

- [Title] [F9] Change file title
- Used to change the titles of files for which titles have been set.
- (1) Locate the bar cursor at the file whose title is to be changed and press the [F9] (Title) key.
  - (2) Enter the new title and press the  key.

- [Next] [F10] .. Display next function keys
- Pressing this key changes the function key display to the next set of function keys.



The functions of these function keys are explained below.

- [ROM] [F1] ... Data communication with P-ROM writer
- Used to communicate with a P-ROM writer in order to create or modify EP-ROMs for image memory boards.

- [Prev] [F10] .. Display previous function keys
- Pressing this key changes the key display to the previous set of function keys.

## 3-5 “Scr list” Screen

The “Scr list” screen is displayed when a file to be edited is selected from the “Select File” screen, or when NEW\_FILE is selected.


### 3-5-1 Functions of the “Scr list” Screen

#### Settings

Besides specifying the screen number for which screen data is to be created, various other operations and settings relating to screen data are possible on this screen, for example the setting of attributes for screen data and reading of data from other files in screen units.

Select the required screen and press the  key to enable editing of the screen.

<“Scr list” Screen>

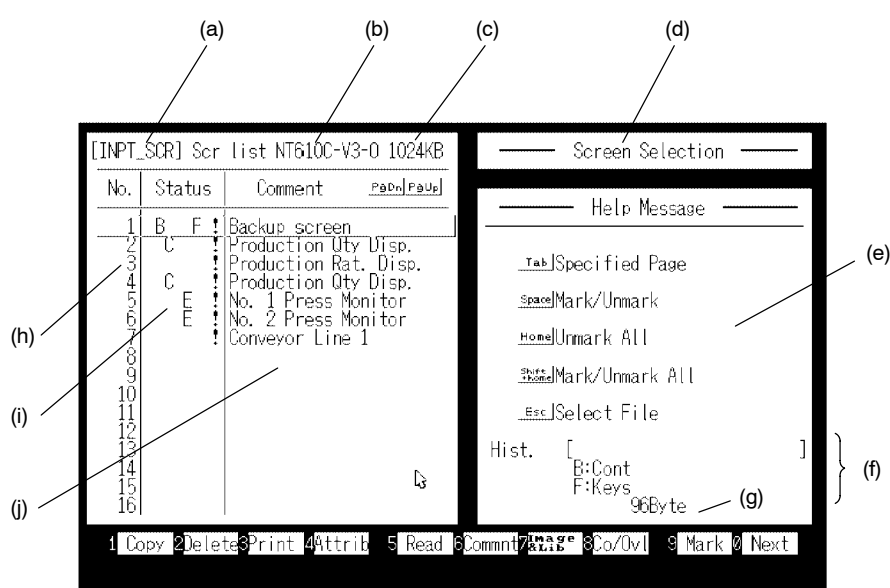

(a) Selected file name

(b) PT model name:

The PT model name and direct connection version for the file is displayed here. Even when direct connection is not used, the version is displayed as “V4” when using an NT20M, NT20S, NT600M, or NT600S. Data for direct connection has an “O” appended as the final character.

(c) PT memory size

(d) Name of task currently being executed

(e) Help message area:

Displays a guide to operation and allows parameter input.

(f) Screen status details:

Detailed information on screen data is displayed here.

(g) Screen data size

(h) Screen number:

The support tool manages screen data under screen numbers. Screen data can be created under the screen numbers shown in the table below.

| NT Model Setting    | Usable Screens |
|---------------------|----------------|
| 20S                 | 1 to 500       |
| 20M                 | 1 to 250       |
| 600S, 600M          | 1 to 1000      |
| 30, 30C, 612G, 610C | 1 to 2000      |

The previous and next pages can be displayed by using the [Page Up] and [Page Down] keys.

The bar cursor can be moved to the previous and next screen number for which there is data by using [Shift] + [ ] and [Shift] + [ ].

The "No." column is displayed by pressing [Tab] key.

(i) Screen status, attribute:

In the "Status" column, the presence/absence of screen data and the set attribute are displayed in symbolic form.

More detailed information relating to these indications is displayed in the "Screen Status" area at the bottom right of the screen.

| Symbol  | "Screen Status" Information | Meaning                                                                                                                                                                |
|---------|-----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (Blank) | (No data)                   | No data has been created for this number.                                                                                                                              |
| !       | (Data exists)               | There is data for this number.                                                                                                                                         |
| A       | A: Cont                     | Parent screen of continuous screens                                                                                                                                    |
| A       | A: Ovlp                     | Parent screen of overlapping screens                                                                                                                                   |
| B       | B: Cont                     | Buzzer attribute (continuous tone)                                                                                                                                     |
| B       | B: Long                     | Buzzer attribute (intermittent long tones)                                                                                                                             |
| B       | B: Shrt                     | Buzzer attribute (intermittent short tones)                                                                                                                            |
| C       | C: Hist                     | Display history attribute                                                                                                                                              |
| D       | D: Touch                    | Bit input (touch switch)                                                                                                                                               |
| D       | D: Fn key                   | Bit input (function key)                                                                                                                                               |
| E       | E: Alrm                     | Alarm attribute                                                                                                                                                        |
| F       | F: Keys                     | "Keypad" ten keys are set by the user.                                                                                                                                 |
| G       | G: Ext                      | NT20M, NT30 : Red backlight or flashing backlight<br>NT20S : Flashing backlight<br>NT30C : Background color or flashing backlight<br>NT610C, NT620C : Background color |

- (j) Comment: This is a comment assigned to the screen data. It is set when the screen data is saved.  
It can be changed using the [F6] (Commnt) key.

<Screen numbers and their applicability>

When the NT Model setting is “30”, “30C”, “610G (612G)”, or “610C”, some screens are earmarked for special applications, as shown below. When the NT Model setting is not one of these, only “0” (clear screen display) is valid and all other screens are user screens.

| Screen No.   | Application                                                                      | User Editing | Remarks                                                                                                                                                     |
|--------------|----------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0            | Screen display OFF                                                               | ×            | Specified in order to switch the screen display off.                                                                                                        |
| 1 to 1899    | User screens                                                                     | f            | Can be used without restriction                                                                                                                             |
| 1900 to 1979 | Window (keyboard) screen                                                         | f            | Can be used as a window (keyboard) screen called to overlay another screen.<br>Can also be used as a normal screen.                                         |
| 1980 to 1996 | Reserve screens for expansion functions                                          | f            | If data is registered for these screens, treating them as normal screens, the registered data takes priority.                                               |
| 1997<br>1998 | Display history screens<br>1997: Order or occurrence<br>1998: Order of frequency | △            | Only when using Ver.3 or a later version of the direct connection function (necessary to create scroll keys).                                               |
| 1999         | “Connecting Host” screen                                                         | f            | If no data is registered, the “Connecting Host” screen set by the system is displayed.                                                                      |
| 2000         | “Host Error” screen                                                              | f            | If no data is registered, the “Host Error” screen set by the system is displayed.<br>(Used as a user screen in the case of the NT30, NT30C, NT620S, NT620C) |

f : Possible    △ : Only the area outside the display history display area can be edited.    × : Not possible

<Using the marking function>

When, for example, deleting screen data, a number of screens can be handled together by using the marking function. All marked (\*) screen data is taken as the object of the executed operation, regardless of the location of the bar cursor. In a copy operation, the screen data at the location of the bar cursor is copied to all screen numbers marked by (\*). This is useful when creating very similar screens.

[Space] key:            Marks the selected screen data. If the data is already marked, the mark is deleted.

[Home] key:            Deletes all marks.

[Shift] + [Home]:      Deletes the marks of all marked screen data and marks all unmarked screen data.

To perform an operation all screens except a specified screen (or screens), use the following procedure:

Example: Deleting all screen numbers except screens 1 to 3.

1. Clear all marks by pressing the [Home] key.
2. Mark screens 1 through 3 by pressing the [Space] key.
3. Press [Shift] + [Home].

All screen numbers except 1 through 3 will be marked.

4. Delete the screen data by pressing [F2] (Delete).

<Saving and quitting screen data files>

Pressing the [Esc] key while the "Screen Selection" screen is displayed quits screen creation. There are two types of quitting: quitting after saving the file, and quitting without saving the file.

 key: Press after inputting the file name and comment to save the file and return to the "File Selection" screen.

[Space] key: Used to return to the "File Selection" screen without saving the file.

[Esc] key: Used to abort quitting and continue screen selection.

### Functions of the Function Keys

|          |                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Copy]   | <p>[F1] . . . Copy screen data</p> <p>Used to copy screen data to another screen number.</p> <p>(1) Locate the bar cursor at the screen data to be copied, and press the [F1] (Copy) key.</p> <p>(2) Input the copy destination screen number and comment and press the  key.</p> <p>" It is also possible to batch copy all marked screen numbers.</p> |
| [Delete] | <p>[F2] . . . Delete screen data</p> <p>Used to delete unnecessary screen data.</p> <p>(1) Locate the bar cursor at the screen data to be deleted and press the [F2] (Delete) key.</p> <p>(2) Press the  key.</p> <p>" It is also possible to batch copy all marked screen numbers.</p>                                                                   |
| [Print]  | <p>[F3] . . . Print data</p> <p>Used to print out screen images and the numbers of lamps and touch switches at a printer.</p> <p>See Section 6 "Printing Data".</p>                                                                                                                                                                                                                                                                          |

[Attrib] [F4] . . . Set attribute

Used to set screen attributes. Setting is accomplished by making selections in the Help Message area. The following attributes can be set.

| Attribute  | Possible Settings                                                                                | “NT Model” Setting |     |      |      |     |     |      |      | Remarks                                                    |
|------------|--------------------------------------------------------------------------------------------------|--------------------|-----|------|------|-----|-----|------|------|------------------------------------------------------------|
|            |                                                                                                  | 20S                | 20M | 600S | 600M | 30  | 30C | 610G | 610C |                                                            |
| Buzzer     | None, Cont (continuous sound), Long (long intermittent sounds), Shrt (short intermittent sounds) |                    |     |      |      | f   | f   | f    | f    | : Continuous sound, Intermittent sounds                    |
| History    | No, Yes                                                                                          | f                  | f   | f    | f    | f   | f   | f    | f    |                                                            |
| Bit In     | Off, Touch SW (touch switch), Extd I/O                                                           | /×                 | f/× | /×   | f/×  | -/× | -/× | f/×  | f/×  | Direct connection used/not used<br>: F keys cannot be set. |
| Alarm      | No, Yes                                                                                          | ×                  | f   | ×    | f    | ×   | ×   |      |      | : Cannot be used with NT620S/ NT620C                       |
| Keypad     | System, User                                                                                     | f                  | f   | f    | f    | f   | f   | f    | f    |                                                            |
| Back light | Lit, Flash                                                                                       | f                  | f   | ×    | ×    | f   | f   | –    | –    |                                                            |
| Bklt Col   | White, Red                                                                                       | ×                  | f   | ×    | ×    | f   | ×   | –    | –    |                                                            |
| Back Col   | Screen background colors                                                                         | –                  | –   | –    | –    | ×   | f   | ×    | f    |                                                            |

f : Possible      : Partly possible (some restrictions apply).    × : Not possible,    –: No display

For details on each attribute, refer to the Operation Manual for the PT.



## WARNING

The attributes of the parent screen are used in the case of continuous screens and overlapping screens. Screen attributes set for child screens are invalid.



Batch setting of attributes for all marked screen numbers is possible.

[Read] [F5] . . . Read screen data

Used to read screen data and memory table data from other files.


However, the data of files displayed in red cannot be read as it is: data conversion is necessary (see Section 8).

(1) Press the [F5] (Read) key.

(2) Select the file whose data is to be read and press the  key.

" Pressing the [F1] (Drive) key allows the specification of a file in another drive directory. Only files for which the “Direct Access” setting is the same can be specified.

- (3) The procedure after this point differs according to the type of data: see the scheme below. Specify the data to be read, the reading source and reading destination by following the directions on the screen in order to read the data.

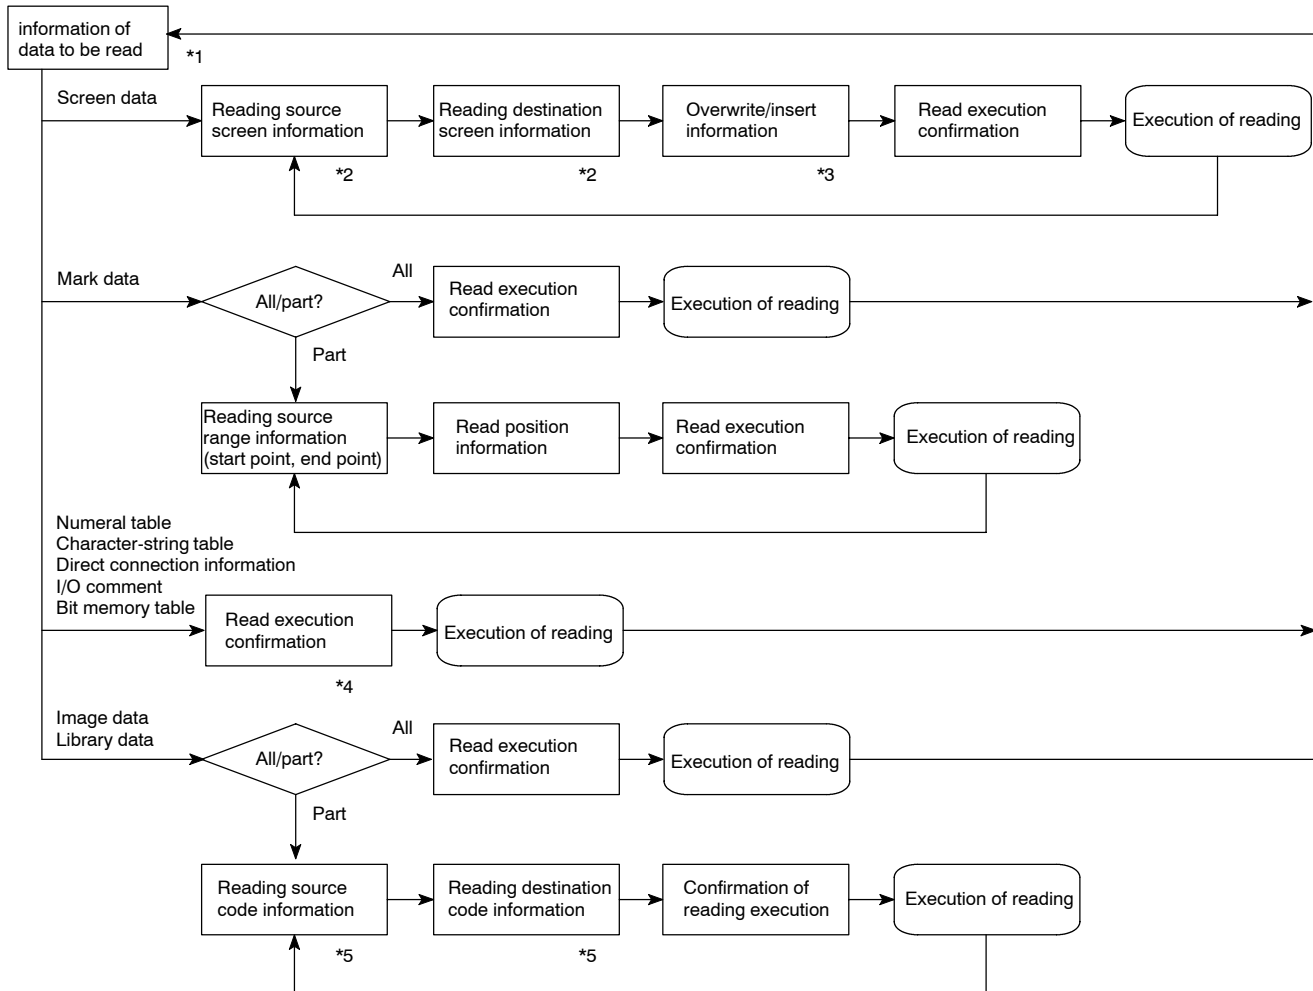

- (\*1) The following restrictions apply to the data that can be read.

Image data: "30", "30C", "610G", and "610C" only.

Library data: "30", "30C", "610G", and "610C", Ver.3 or later only.

Direct connection information:

When direct connection used only.

I/O comment:

When direct connection used only

Bit memory table:

"30", "30C", "610G", and "610C", Ver.3 or later only.

- (\*2) When the [Tab] key is pressed and a screen number input, the bar cursor shifts to the specified screen.

- (\*3) Overwrite: If data already exists at the destination it is overwritten (the original data is cleared).

Insert: If data already exists at the destination the data is read into the file without clearing the original data.

- (\*4) When direct connection is used and reading of a numeral memory table, character-string memory table, or bit memory table is specified, confirmation of whether or not the direct connection information is read is displayed.
- (\*5) S Image data is selected from codes FE20 through FEFF.  
 S Library data is selected from FA20 through FAFF, FB20 through FBFF, FC20 through FCFF, FD20 through FDFF.  
 S Use [Shift] + [ ] or [Shift] + [ ] to move the bar cursor to the previous or next code for which there is data.  
 S The bar cursor can be moved to a specified code by pressing the [Tab] key and inputting the code.

It is possible to continue reading more data from the same file.

To quit data reading, press the [Esc] key; the display will return to the "Screen Selection" screen.

[Commnt] [F6] . . . Change comment

Used to change the comments assigned to screen data.

- (1) Locate the bar cursor at the screen number whose comment is to be changed and press the [F6] (Commnt) key.
- (2) Input the new comment and press the  key.

It is possible to change the comments for a number of screen numbers in a batch by marking the screen numbers. However, this only applies to screen numbers for which data already exists.

[Image & Lib] [F7] . . . Edit Image/library data

Used to create and modify image library items.

Editing of images and library data is only possible with the NT30, NT30C, NT612G, and NT610C.

See Section 5 "Creating a Mark Image Library".

[Co/Ovl] [F8] . . . Continuous screen & overlapping screen setting

 
Used to specify continuous screens and overlapping screens.

- (1) Locate the bar cursor at a screen number for which there is no data and press the [F8] (Co/Ovl) key.  
 " If a number for which there is data is specified, a message asking whether or not the data is to be cleared is displayed.
- (2) Select either "Cont Scr" or "Ovlp Scr" and press the  key.  
 The set screen will become the parent screen.
- (3) Set the child screens by following the help messages.  
 " Up to 8 child screens can be set in the case of both continuous screens and overlapping screens.  
 " Only one numeral setting screen can be set as a child screen.

- [Mark] [F9] ... Mark creation  
Used to create and modify marks.  
See Section 5 "Creating a Mark, Images, and Library Data".
- [Next] [F10] ... Display next function keys  
Pressing this key changes the function key display to the next set of function keys.  
Direct connection not used



Ver.1 to Ver.4 used



For an explanation of the function of each function key, see the following.

- [Check] [F1] ... Check on continuous screens/overlapping screens  
Used to check if there is any abnormality in the relationship between the parent and child screens of continuous screens and overlapping screens.
- (1) Select the file to be selected on the "File List" screen.
  - (2) Press the [F10] (Next page) key and then press the [F1] (Check) key.
  - (3) Set whether or not the results are to be output at a printer and execute the check.

The results of the check are displayed in the following form.

| No. | Error | Details |
|-----|-------|---------|
|     |       |         |

No. : The parent screen number is displayed here.

Error : If an error is found, its details are displayed.

| Error Type | Cause                                                                                                                     |                                                                                                                                                                                                                 |
|------------|---------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Prnt       | A screen set as child screen has been specified as the parent screen for another continuous screen or overlapping screen. |                                                                                                                                                                                                                 |
| Keys       | Overlapping screen                                                                                                        | There are two or more child screens for which a numeral setting has been made (when carrying out system setting).                                                                                               |
|            | Continuous screen                                                                                                         | There is a child screen for which a numeral setting has been made.                                                                                                                                              |
| Num        | Overlapping screen                                                                                                        | In direct connection, the total of the numbers the following functions exceeds the maximum number that can be set.<br>Number of functions settable:<br>Numeral displays + graphs + numeral settings = Max. 1024 |
| Attr       | Overlapping screen                                                                                                        | The "keypad attribute" is different for the parent screen and child screens.                                                                                                                                    |

Details: The numbers of the child screens that make up the overlapping screen or continuous screen are displayed.

If there is an error, the relevant screen number is underlined.

If screen numbers in the range 1900 to 1979 are specified as parent screens, "No." will be displayed in red. These screens cannot be used as window screens.

|            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |            |             |            |             |       |             |            |             |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|-------------|------------|-------------|-------|-------------|------------|-------------|
| [Table]    | <p>[F2] . . . Edit table (when not using direct connection)</p> <p>Used to write data to, and change the data in, character-string memory tables and numeral memory tables.</p> <p>(1) Press the [F2] (Table) key.</p> <p>(2) Select the character-string memory table or numeral memory table and press the  key.</p> <p>(3) Edit the contents of the memory table.</p> <p>S Move the bar cursor with the arrow keys, make the selection by pressing the  key, and change the data.</p> <p>S Previous and next screens can be displayed by using the [Page Up] and [Page Down] keys.</p> <p>S The bar cursor can be moved to a specified number by pressing the [Tab] key and inputting the number.</p> <p>S Pressing the [F1] (Ref) key will display a list of the screens that refer to the memory table with the specified number. When editing a character-string memory table, marks can be input using [F3] (Mark) and images using [F4] (Image).</p> <p>(4) To quit editing, press the [Esc] key.</p> |            |             |            |             |       |             |            |             |
| [Direct]   | <p>[F2] . . . Set direct connection information (when using direct connection)</p> <p>Data area allocations for direct connection can be made using batch settings.</p> <p>See "Setting Direct Connection Information" (p.42).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |            |             |            |             |       |             |            |             |
| [CoFile]   | <p>[F3] . . . Creating files from screens</p> <p>Screen data can be saved in Microsoft Windows (TM) files (BMP format)</p> <p>Files are created under the following file names in the data directory.</p> <table data-bbox="539 1541 975 1720"> <tr> <td>20S, 600S:</td><td>NTSVVVV.BMP</td></tr> <tr> <td>20M, 600M:</td><td>NTMVVVV.BMP</td></tr> <tr> <td>612G:</td><td>NTGVVVV.BMP</td></tr> <tr> <td>30C, 610C:</td><td>NTCVVVV.BMP</td></tr> </table> <p>VVVV indicates the screen number.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | 20S, 600S: | NTSVVVV.BMP | 20M, 600M: | NTMVVVV.BMP | 612G: | NTGVVVV.BMP | 30C, 610C: | NTCVVVV.BMP |
| 20S, 600S: | NTSVVVV.BMP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |            |             |            |             |       |             |            |             |
| 20M, 600M: | NTMVVVV.BMP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |            |             |            |             |       |             |            |             |
| 612G:      | NTGVVVV.BMP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |            |             |            |             |       |             |            |             |
| 30C, 610C: | NTCVVVV.BMP                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |            |             |            |             |       |             |            |             |
| [BchChg]   | <p>[F4] . . . Batch change of screen data bits and words</p> <p>Used to change bits and words allocated to lamps and touch switches in the screen data in a batch by specifying a range.</p> <p>See "Batch Changing Bits and Words" (p.79).</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |            |             |            |             |       |             |            |             |

|        |                                                                                                                                                                                                                                                                                                                                                                            |
|--------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Tmx.] | <p>[F6] . . . Send data to the PT in screen units</p> <p>After connecting the support tool to the PT, used to send screen data, character-string and numeral memory tables to the PT in screen units and write them to the screen data memory.</p> <p>See Section 7 "Data Communication".</p> <p>This function cannot be used with the NT30, NT30C, NT612G, or NT610C.</p> |
| [Rcv.] | <p>[F7] . . . Receive data from the PT in screen units</p> <p>Used to receive screen data and character-string/numeral memory table data registered in the PT.</p> <p>See Section 7 "Data Communication".</p> <p>This function cannot be used with the NT30, NT30C, NT612G, or NT610C.</p>                                                                                 |
| [Prev] | <p>[F10] . . Display previous function keys</p> <p>Pressing this key changes the key display to the original set of function keys.</p>                                                                                                                                                                                                                                     |

## 3-5-2 Setting Direct Connection Information

The "Direct Spec. Setting" menu option on the "Screen List" screen allows batch setting of the following functions:

- S PT status control area allocation
- S PT status notify area allocation
- S Numeral table allocation and initial value setting
- S Character-string table allocation and initial value setting
- S Extended I/O unit input terminal allocation and function setting
- S Extended I/O unit output terminal allocation
- S Setting of the functions, display, and allocations of bit memory tables



### WARNING

"Bit memory table" can only be selected when the NT Model setting is NT30, NT30C, NT612G, or NT610C, and the direct connection version used is Ver.3 or later.



**Note** Be sure to allocate the data area referenced in the PC to the PT status control area and PT status notify area. Allocate these two areas so that they do not overlap.

- Procedure**
1. Press the [F10] (Next) key on the "Screen List" screen.
  2. Press the [F2] (Direct) key.
  3. Locate the bar cursor at the function to be set and press the  key.  
The function setting window will be displayed: carry out allocations to the data area in the PC and function setting in this window. For details of the settings, refer to the descriptions of the individual functions.
  4. On completion of setting, press the [Esc] key.

# PT Status Control Area, PT Status Notify Area

Allocate data areas at the PC for the PT status control area, which controls the PT from the PC, and the PT status notify area, which notifies the PC of information from the PT.

| Direct Spec. Setting                |                     |                 |
|-------------------------------------|---------------------|-----------------|
| <input checked="" type="checkbox"/> | PT Control Area     | [ ■ ] { }       |
| <input type="checkbox"/>            | PT Notify Area      | [ - - - - ] { } |
| <input type="checkbox"/>            | Numeral Mem. Table  |                 |
| <input type="checkbox"/>            | String Mem. Table   |                 |
| <input type="checkbox"/>            | Extd I/O Input Set  |                 |
| <input type="checkbox"/>            | Extd I/O Output Set |                 |
| <input type="checkbox"/>            | Bit Memory Tbl Set  |                 |
| <u>F 1</u> Ref Inot                 |                     |                 |

For details of the settings, see "Setting Words and Bits" (p.75).



## WARNING

It is not possible to set timers (TIM) or counters (CNT).



## Numeral Memory Table Settings, Character-String Memory Table Settings

Set the initial values and word allocations for numeral tables and character-string memory tables.

<Numeral table setting>

| No. | Initial Data | In | #  | Word | PaDn    | PaUp |
|-----|--------------|----|----|------|---------|------|
| 000 |              | 0  | No | 0    | [-----] | (    |
| 001 |              | 0  | No | 0    | [-----] | )    |
| 002 |              | 0  | No | 0    | [-----] | {    |
| 003 |              | 0  | No | 0    | [-----] | }    |
| 004 |              | 0  | No | 0    | [-----] | [    |
| 005 |              | 0  | No | 0    | [-----] | ]    |
| 006 |              | 0  | No | 0    | [-----] | ^    |
| 007 |              | 0  | No | 0    | [-----] | ~    |
| 008 |              | 0  | No | 0    | [-----] | ~    |
| 009 |              | 0  | No | 0    | [-----] | ~    |
| 010 |              | 0  | No | 0    | [-----] | ~    |
| 011 |              | 0  | No | 0    | [-----] | ~    |
| 012 |              | 0  | No | 0    | [-----] | ~    |
| 013 |              | 0  | No | 0    | [-----] | ~    |
| 014 |              | 0  | No | 0    | [-----] | ~    |
| 015 |              | 0  | No | 0    | [-----] | ~    |

NUM TABLE Select a numeral table  
 F.1 Ref F.2 iCopy F.3 iCopySet F.4 BtchChng  
 F.5 Srch Tab Set No. Space Init Home Del

<Character-string memory table setting>

| No. | Initial Data | In | # | Word    | PaDn | PaUp |
|-----|--------------|----|---|---------|------|------|
| 000 |              | No | 0 | [-----] | (    | )    |
| 001 |              | No | 0 | [-----] | {    | }    |
| 002 |              | No | 0 | [-----] | [    | ]    |
| 003 |              | No | 0 | [-----] | ^    | ~    |
| 004 |              | No | 0 | [-----] | ~    | ~    |
| 005 |              | No | 0 | [-----] | ~    | ~    |
| 006 |              | No | 0 | [-----] | ~    | ~    |
| 007 |              | No | 0 | [-----] | ~    | ~    |
| 008 |              | No | 0 | [-----] | ~    | ~    |
| 009 |              | No | 0 | [-----] | ~    | ~    |
| 010 |              | No | 0 | [-----] | ~    | ~    |
| 011 |              | No | 0 | [-----] | ~    | ~    |
| 012 |              | No | 0 | [-----] | ~    | ~    |
| 013 |              | No | 0 | [-----] | ~    | ~    |
| 014 |              | No | 0 | [-----] | ~    | ~    |
| 015 |              | No | 0 | [-----] | ~    | ~    |

STR TABLE Select a character string table  
 F.1 Ref F.2 iCopy F.3 iCopySet F.4 BtchChng  
 F.5 Srch Tab Set No. Space Init Home Del

For details of the settings, see "Setting Numeral Tables" (p.68), and "Setting Character-String Memory Tables" (p.70).

## Extended I/O Input Setting

Set the functions, and allocate the bits referenced at the PC, for extended I/O unit input terminals.

The following functions can be set for the input terminals of the extended I/O unit.

### S Screen switching

When the input terminal comes ON, the display changes to the set screen number. If the screen number is set as "0", the display will return to the previously displayed screen.

### S Notify bit

Notifies the status (ON/OFF) of the input terminal to the bit at the PC.

### S Numeric key

When the input terminal comes ON, it has the same effect as pressing the set control key.

### S Backlight OFF cancelling attribute

When the input terminal comes ON the backlight, which had been switched off by the "backlight OFF function" (afterimage prevention function) set by memory switch, comes back ON (in the case of the EL display type, the screen display is redisplayed).

The backlight OFF cancellation function is automatically featured in conjunction with the screen switch function and ten key function.

Extended I/O units cannot be used with Ver.1 direct connection.



## WARNING

Do not use the PT extended I/O input function for applications where there is any danger to human life or possibility of serious damage, or for an emergency stop switch function.



| No. | Cl | Function | No. | Cl | Function | PaOn | PaUp |
|-----|----|----------|-----|----|----------|------|------|
| 000 |    | -----    | 016 |    | -----    |      |      |
| 001 |    | -----    | 017 |    | -----    |      |      |
| 002 |    | -----    | 018 |    | -----    |      |      |
| 003 |    | -----    | 019 |    | -----    |      |      |
| 004 |    | -----    | 020 |    | -----    |      |      |
| 005 |    | -----    | 021 |    | -----    |      |      |
| 006 |    | -----    | 022 |    | -----    |      |      |
| 007 |    | -----    | 023 |    | -----    |      |      |
| 008 |    | -----    | 024 |    | -----    |      |      |
| 009 |    | -----    | 025 |    | -----    |      |      |
| 010 |    | -----    | 026 |    | -----    |      |      |
| 011 |    | -----    | 027 |    | -----    |      |      |
| 012 |    | -----    | 028 |    | -----    |      |      |
| 013 |    | -----    | 029 |    | -----    |      |      |
| 014 |    | -----    | 030 |    | -----    |      |      |
| 015 |    | -----    | 031 |    | -----    |      |      |

EXTD I/O IN SET Select extended I/O No.  
F1 Confirm Esc Quit Home Bklight Off Cncl  
Tab Set No. F1 Del F4 BtchChng ( P-1 )

- S NO.: Extended I/O unit input terminal number.
- S Cl: Presence/absence of the backlight OFF cancelling attribute.
- S Function: Function set for the input terminal. In the case of the input notification function, the bit number is displayed.
- In the area to the right of the Function column, screen numbers (screen switching), comments (input notification), and control keys (ten keys) are displayed.
- S Key operations
- ☐ key: Sets a screen switching function at the input terminal at which the bar cursor is located.
- [F1] (Del) key: Deletes the function set for the input terminal at which the bar cursor is located.
- [F4] (BtchChng) key: Used to change notify bit keys in a batch. See "Batch Changing Bits and Words" (p.79).
- [Home] (Bklight Off Cncl) key: Sets the backlight OFF cancelling attribute at the input terminal at which the bar cursor is located.
- [Tab] key: Used to move the bar cursor and display the terminal number input field.

## Extended I/O Output Setting

The output terminals of the Extended I/O unit are controlled in accordance with the status (ON/OFF) of PC bits (output control function). Set the bit numbers of the PC bits that will control the output terminals.

| No.                                                                                                                             | Cl | Function | No. | Cl | Function | PaDn PaUp |
|---------------------------------------------------------------------------------------------------------------------------------|----|----------|-----|----|----------|-----------|
| 000                                                                                                                             |    | -----    | 016 |    | -----    |           |
| 001                                                                                                                             |    | -----    | 017 |    | -----    |           |
| 002                                                                                                                             |    | -----    | 018 |    | -----    |           |
| 003                                                                                                                             |    | -----    | 019 |    | -----    |           |
| 004                                                                                                                             |    | -----    | 020 |    | -----    |           |
| 005                                                                                                                             |    | -----    | 021 |    | -----    |           |
| 006                                                                                                                             |    | -----    | 022 |    | -----    |           |
| 007                                                                                                                             |    | -----    | 023 |    | -----    |           |
| 008                                                                                                                             |    | -----    | 024 |    | -----    |           |
| 009                                                                                                                             |    | -----    | 025 |    | -----    |           |
| 010                                                                                                                             |    | -----    | 026 |    | -----    |           |
| 011                                                                                                                             |    | -----    | 027 |    | -----    |           |
| 012                                                                                                                             |    | -----    | 028 |    | -----    |           |
| 013                                                                                                                             |    | -----    | 029 |    | -----    |           |
| 014                                                                                                                             |    | -----    | 030 |    | -----    |           |
| 015                                                                                                                             |    | -----    | 031 |    | -----    |           |
| EXT D I/O IN SET Select extended I/O No.<br>F1 Confirm Esc Quit Home Bklight Off Cncl<br>Tab Set No. F1 Del F4 BtchChng ( P-1 ) |    |          |     |    |          |           |

- S NO.: Extended I/O unit output terminal number.
- S Cl : Bit number set for the output terminal.
- A comment is displayed in the column to the right of the function column.

### S Key operations

-  key: Sets an output control function for the output terminal at which the bar cursor is located.
- [F1] (Del) key: Deletes the output control function set for the output terminal at which the bar cursor is located.
- [F4] (BtchChng) key: Changes notify bit keys in a batch. See “Batch Changing Bits and Words” (p.79).
- [Tab] key: Used to move the bar cursor and display the terminal number input field.

### Bit Memory Table Setting

This setting sets bit memory table functions and bit memory table bit allocations.

Bit memory tables can only be used when the “NT Model” setting is NT30, NT30C, NT612G, or NT610C and direct connection Ver.3 or higher is used.

| No. | Hist | #  | Table | Dsp Cl | Image<br>Lib | SwScreen | Bit     | Patn | PaUp |
|-----|------|----|-------|--------|--------------|----------|---------|------|------|
| 000 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 001 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 002 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 003 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 004 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 005 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 006 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 007 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 008 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 009 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 010 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 011 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 012 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 013 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 014 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |
| 015 | No   | No | 000   | Whit   | 0000         | 0000     | [-----] | (    | )    |

|                      |                              |                      |                         |  |  |
|----------------------|------------------------------|----------------------|-------------------------|--|--|
| BIT TABLE            |                              |                      | Select bit memory table |  |  |
| <u>F 2</u>   iCopy   | <u>F 4</u>   BtchChng        | <u>F 5</u>   Srch    |                         |  |  |
| <u>Tab</u>   Set No. | <u>Space</u>   Hist/SWScreen | <u>Home</u>   Delete |                         |  |  |

For details on the actual settings, see 4-2-6 “Bit Memory Table Setting” (p.72).



---

## SECTION 4

### Creating Screen Data

Screen data has to be created for display by the PT. Screen data can be created by selecting the editing functions of the “Edit” screen.

This chapter explains the creation procedure, with emphasis on key operations. The mouse can be used to execute all operations except character and numeral input.

|        |                                                                    |     |
|--------|--------------------------------------------------------------------|-----|
| 4-1    | Initial Editing Screen and Basic Operations .....                  | 51  |
| 4-1-1  | Displaying the “Edit” Screen .....                                 | 51  |
| 4-1-2  | Basic Operations on the “Edit” Screen .....                        | 54  |
| 4-1-3  | Environmental Settings (Tool Settings for the “Edit” Screen) ..... | 59  |
| 4-2    | Common Setting Operations .....                                    | 61  |
| 4-2-1  | Setting Character/Character-String Displays .....                  | 61  |
| 4-2-2  | Setting Numeral Displays .....                                     | 63  |
| 4-2-3  | Specifying the Display Color (NT30C, NT610C Only) .....            | 66  |
| 4-2-4  | Setting Numeral Memory Tables .....                                | 68  |
| 4-2-5  | Setting Character-String Memory Tables .....                       | 70  |
| 4-2-6  | Bit Memory Table Setting .....                                     | 72  |
| 4-2-7  | Setting Words and Bits .....                                       | 75  |
| 4-2-8  | Copying to the Next Input Field (Increment Copy) .....             | 77  |
| 4-2-9  | Searching Within a Memory Table .....                              | 78  |
| 4-2-10 | Batch Changing Bits and Words .....                                | 79  |
| 4-3    | Creating Fixed Displays .....                                      | 80  |
| 4-3-1  | Inputting Characters .....                                         | 80  |
| 4-3-2  | Inputting Marks .....                                              | 82  |
| 4-3-3  | Creating Polylines .....                                           | 84  |
| 4-3-4  | Creating Squares .....                                             | 86  |
| 4-3-5  | Creating Polygons .....                                            | 88  |
| 4-3-6  | Creating Circles/Arcs .....                                        | 90  |
| 4-3-7  | Creating Fans .....                                                | 92  |
| 4-3-8  | Tiling .....                                                       | 93  |
| 4-4    | Setting Numeral Displays .....                                     | 96  |
| 4-4-1  | Setting Numeral Displays .....                                     | 96  |
| 4-4-2  | Modifying Numeral Displays .....                                   | 97  |
| 4-5    | Setting Character-String Displays .....                            | 98  |
| 4-5-1  | Setting Character-String Displays .....                            | 98  |
| 4-5-2  | Modifying Character-String Displays .....                          | 99  |
| 4-6    | Setting Lamps .....                                                | 100 |
| 4-6-1  | Setting Lamps .....                                                | 100 |
| 4-6-2  | Modifying Lamps .....                                              | 104 |
| 4-7    | Setting Touch Switches .....                                       | 105 |
| 4-7-1  | Setting Touch Switches .....                                       | 106 |
| 4-7-2  | Modifying Touch Switches .....                                     | 115 |
| 4-8    | Creating Graphs .....                                              | 117 |
| 4-8-1  | Setting Graphs .....                                               | 118 |
| 4-8-2  | Modifying Graphs .....                                             | 126 |

---

|        |                                                                                                                |     |
|--------|----------------------------------------------------------------------------------------------------------------|-----|
| 4-9    | Creating Input Settings .....                                                                                  | 128 |
| 4-9-1  | Creating Numeral Setting Input Fields .....                                                                    | 131 |
| 4-9-2  | Creating Character-String Setting Input Fields<br>(NT30, NT30C, NT612G, NT610C with Ver.3 or Later Only) ..... | 134 |
| 4-9-3  | Setting Window Displays<br>(NT30, NT30C, NT612G, NT610C with Ver.3 or Later Only) .....                        | 135 |
| 4-9-4  | Creating Numeric Keys .....                                                                                    | 136 |
| 4-9-5  | Modifying Numeral/Character-String Setting Input Fields .....                                                  | 137 |
| 4-9-6  | Changing Orders .....                                                                                          | 139 |
| 4-10   | Extended I/O Settings .....                                                                                    | 140 |
| 4-11   | Inputting Image and Library Data .....                                                                         | 141 |
| 4-12   | Editing Memory Tables .....                                                                                    | 143 |
| 4-13   | Creating Alarm Lists/Histories .....                                                                           | 144 |
| 4-13-1 | Setting Alarm Lists/Histories .....                                                                            | 145 |
| 4-13-2 | Modifying Alarm Lists/Histories .....                                                                          | 147 |
| 4-14   | Standalone Settings .....                                                                                      | 149 |
| 4-15   | Editing Screen Data .....                                                                                      | 150 |

# 4-1 Initial Editing Screen and Basic Operations


On the “Edit” screen, characters and graphics can be drawn, and elements such as lamps and touch switches can be created.

## 4-1-1 Displaying the “Edit” Screen

The “Edit” screen is displayed when a screen number is selected on the “Screen Selection” screen.

The initial editing screen displays the editing menu, from which the functions for creating screen data can be selected.

<Initial editing screen>

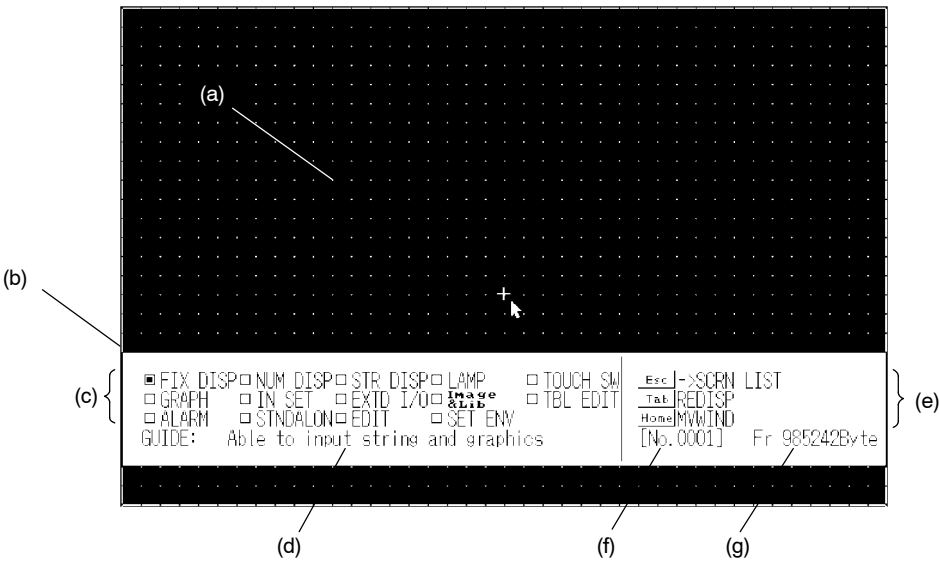

- (a) “Edit” screen:

This is a data creation screen with the same number of dots as the PT screen. A grid and screen range is displayed on it to make it easy to create data. It is possible to select whether or not to display the grid and screen range by changing a setting in the environmental settings (tool settings for the “Edit” screen).
- (b) Menu box:

The editing menu and help messages are displayed here.  
The display position of this box, and the setting to determine whether it is displayed or not, can be changed by pressing the [Home] key.
- (c) Editing menu:

The editing function to be executed is selected from this menu.
- (d) Help message display:

Displays an explanation of the function.
- (e) Key operation guide:

The keys and functions that can currently be used are displayed here. Functions can be executed either by pressing the relevant key or by clicking on the corresponding icon with the mouse.

- (f) Screen number: This is the screen number of the screen data currently being edited.
- (g) Free capacity: This is the free capacity for file storage.

Saving Screen Data and Quitting

Pressing the [Esc] key while the initial editing screen is displayed quits screen data creation. There are two types of quitting: quitting after saving the data and quitting without saving data.

- S  key: Saves the data and returns the display to the “Screen List” screen (the first time a screen is saved, a comment can be input).
- S [Space] key: Returns the display to the “Screen List” screen without saving data.
- S [Esc] key: Aborts quitting and allows editing to continue.

Comments can be changed by using the [F6] (Commnt) key on the “Scr list” screen.

Grid and Screen Range Display

In order to provide help with input and drawing, a grid is displayed on the “Edit” screen.

If the “snap ON” function is set, the cursor position is locked to the grid intersections.


Whether a grid is displayed or not, the grid type, and the “snap ON” function setting are specified in the SET ENV settings in the “Edit” screen editing menu (see p.59).

The intervals of the grid display can be set anywhere between 2 and 99 dots in both the X direction (horizontal direction) and the Y direction (vertical direction). (The grid display aligned with the touch switches differs according to the PT model).

When the grid is displayed, a solid-line frame that indicates the screen range, and a “+” mark that indicates the center of the screen are automatically displayed.

Coordinate Display

During drawing, the coordinates of the cursor position are displayed in the lower part of the menu box, as shown below.

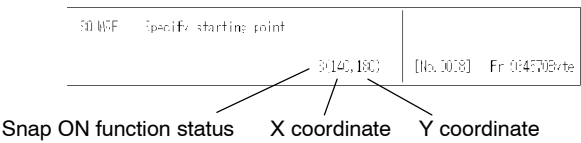

While the snap ON function is effective, the coordinate indication is preceded by an “S”, and the coordinate values become those of the closest grid coordinate point (see p.59).

When the menu box is not displayed, the coordinate value is displayed at the top right of the screen.

**Screen Data Display Sequence**

Elements are displayed in the following sequence on the PT screen.

**Note** Take the display sequence into consideration when creating screen data.

- (1) Image data<sup>\*1</sup>
- (2) Touch switches, alarm list, alarm history<sup>\*2</sup>
- (3) Lamps
- (4) Fixed data  
(Polygons squares circles/arcs fans continuous lines tiling  
characters/marks)<sup>\*1</sup>
- (5) Character-strings
- (6) Numeric values
- (7) Graphs
- (8) Numeric value and character-string setting input fields<sup>\*2</sup>

<sup>\*1</sup>: Image data, polygons, squares, fans, tiling, and marks can only be used with the NT30, NT30C, NT612G, and NT610C.

<sup>\*2</sup>: The alarm list/alarm history and character-string setting functions can only be used with an NT30, NT30C, NT612G, or NT610C with "Ver.3" set for "Direct Access".

## 4-1-2 Basic Operations on the “Edit” Screen

### Basic Operations

#### S Moving the cursor

There are various cursors, including a cross-hair cursor (intersecting vertical and horizontal lines) used for drawing graphics and a box used for specifying the position of character displays. These cursors can be moved either with the arrow keys ([↑] [↓] [←] [→]) or with the mouse. Pressing one of the arrow keys while holding down the [Shift] key gives larger motion increments (of 16 dots).

To fix a position, either press the  key or click the left mouse button.

#### S Character input

Insert/overwrite: The [Insert] key is used to select whether the insert or overwrite mode is effective for character input.

 : Insert mode     : Overwrite mode

#### Shifting the character cursor:

The character cursor can be moved to the left and right with the [←] and [→] keys. Pressing the [←] or [→] key while holding down the [Shift] key shifts the cursor to the head or end of a character-string.

Character deletion: An input character can be deleted by pressing the [Back Space] key or the [Delete] key.

All characters being input can be deleted by pressing the [CLR] key.

Mark input: Pressing the [F3] (Mark) key on the character input screen displays the mark list window. Select the mark to be input with the cursor and press the  key.

#### S Numeric value/character-string input

##### Numeric value/character-string clearance:

To clear an input numeric value or character-string during numeric value/character-string input, press the [Home] key.

#### S Re-input into fields that have inputs

The following operations are possible, depending on the key that is pressed first

When the [INS], [BS], [DEL], [←], or [→] key is pressed first, the operation corresponding to that key is performed while the existing data remains in the input field. This saves having to input data again when making modifications.

When a key other than one of the above is pressed first, the input field is cleared as the character corresponding to the pressed key is input. This makes it unnecessary to clear the existing data before inputting the new data.

## S Shortcut keys

It is possible to move characters, or delete them, by pressing specific character keys while holding down the [Ctrl] key.

| Shortcut key | Corresponding key                                                                     |
|--------------|---------------------------------------------------------------------------------------|
| [Ctrl]+[S]   | [ ] key                                                                               |
| [Ctrl]+[D]   | [ ] key                                                                               |
| [Ctrl]+[E]   | [ ] key                                                                               |
| [Ctrl]+[X]   | [ ] key                                                                               |
| [Ctrl]+[R]   | [Page Down] key                                                                       |
| [Ctrl]+[C]   | [Page Up] key                                                                         |
| [Ctrl]+[H]   | [Back space] key                                                                      |
| [Ctrl]+[G]   | [Delete] key                                                                          |
| [Ctrl]+[I]   | [Tab] key                                                                             |
| [Ctrl]+[M]   |  key |
| [Ctrl]+[ ]   | [Esc] key                                                                             |
| [Ctrl]+[K]   | Deletes everything right of the cursor                                                |
| [Ctrl]+[U]   | Deletes everything left of the cursor                                                 |

S Skipping parameter input ([Shift] +  key)


While the window for inputting and setting parameters is displayed, pressing the  key while holding down the [Shift] key will allow you to proceed to the next step while leaving the setting unchanged. This is convenient when registering a series of display elements with the same settings.

Operations Exclusive to NT610C

The screen size for the NT610C is 640 x 480 dots.

Shifting Display Fields

When the display elements are listed on the screen, the list can be shifted by pressing the [Home] key. The list can also be shifted by clicking the list name ("TOUCH SW" in the example below) with the mouse (the mouse cursor also moves).

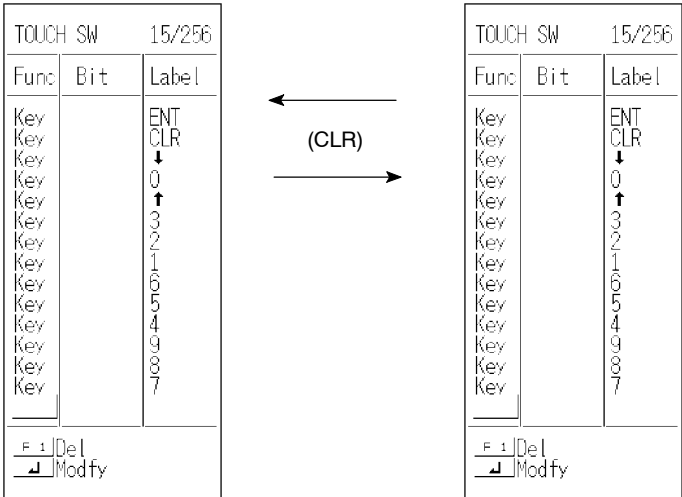

Redisplaying a Screen

If, elements overlap or the display is confused during drawing, the screen can be redisplayed by pressing the [Tab] key.

Operations Inside Windows


During operation, windows for parameter input and settings are sometimes displayed. Use the displayed keys, arrow keys and  key to perform operations inside these windows.

If using a mouse, click the relevant item.

The settings to be made are the basic settings, which relate mainly to the display contents, and the detailed settings, which relate to the display method. Other windows are displayed for some settings.

**Reference:** You can move to the next step without making a setting by pressing the  key while holding down the [Shift] key.

<Operation example: numeral display setting>

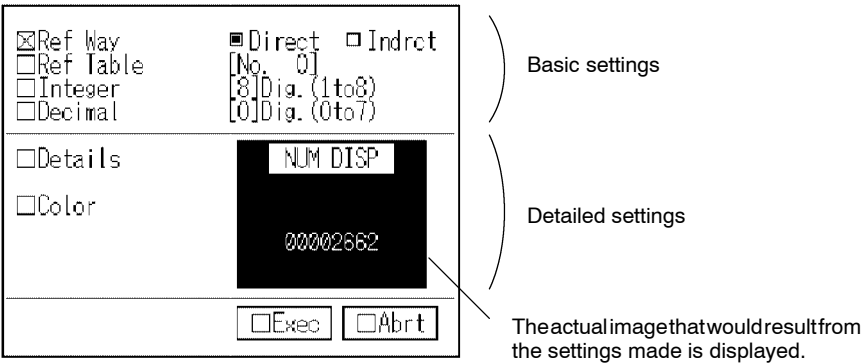


It may not be possible to reflect some settings in images displayed in the bottom right window frame.

Specifying Modifications with the Mouse (Direct Modification)

The modification window for a created display element can be displayed by locating the mouse cursor that element and clicking. This speeds up modification since it can be done without having to identify the display element.

Note that this operation cannot be used for image library items even if they are displayed on the screen.

The conventional method for specifying the objects of support tool modifications (selecting the type of display element from the menu and then specifying the display element) can also be used.

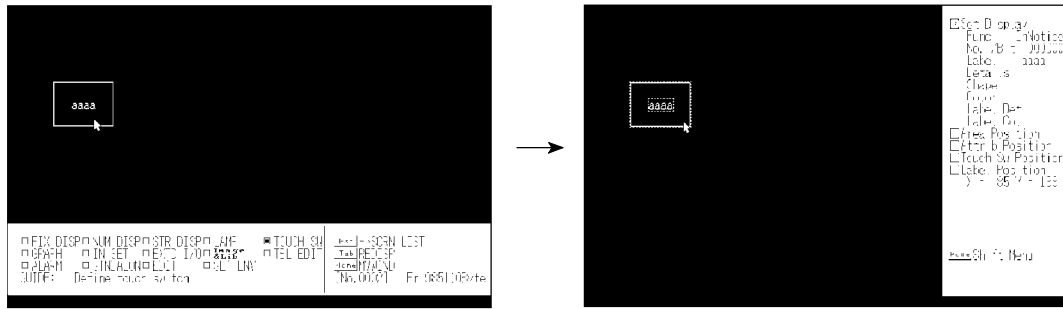

Click the touch switch on the initial editing screen.

The modification window for the specified touch switch is displayed.

### Color Specification when the NT Model Setting is “30” (NT30)

The NT30 has a monochrome display, but since it stores internal data in the same form as the NT30C, a color specification window may be displayed during operation. Since when “30” is set as the NT model, the PT can be used in the same way as other monochrome PTs provided the default color settings are used, do not change these default settings without good reason.

If you do change the settings by mistake and wish to return to the original settings, follow the procedure below.

S Character color and basic color for graphics, etc.

Character color, display color, basic color, boundary color, frame color, ON color, flashing color, color when positive, color when negative.



Specify the white at the right end.

S Background color, etc.

Background color, OFF color, frame + range, frame - range



If transparent color is not required, select the black at the left end.




If transparent color is required, select the transparent setting.

### 4-1-3 Environmental Settings (Tool Settings for the “Edit” Screen)

These are the “Edit” screen settings, such as those for grid display and the snap ON function.

The environmental settings can also be changed during screen editing.

Select “ENV SET” on the initial editing screen. The “Tool Settings (for edit screen)” screen will be displayed. To quit setting, press the  key.

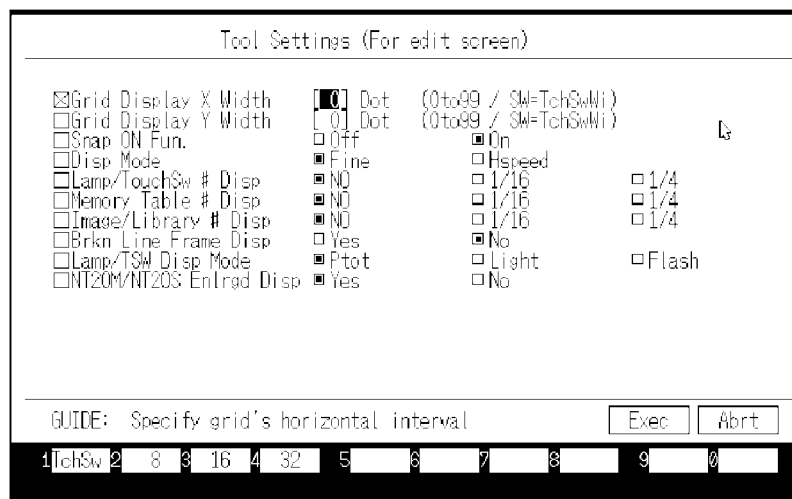

S Grid Display X Width

S Grid Display Y Width:

A grid is displayed on the screen. The intervals for this grid display are specified in the range of 2 to 99 dots in both the X direction (horizontal direction) and Y direction (vertical direction). If “0” or “1” is specified, the grid is not displayed.

Pressing [F1] (TchSw) specifies a grid corresponding to the smallest unit for touch switches (“SW” is displayed). Pressing [F2] (8), [F3] (16) and [F4] (32) specifies grids with 8-dot, 16-dot, and 32-dot intervals respectively.

When a grid is displayed, a solid-line frame that indicates the screen range, and a “+” mark that indicates the center of the screen are also displayed.

S Snap ON Fun.:

When this function is set, cursor motion is automatically locked to the grid intersections while a grid is displayed. Cancel this function if fine positioning is required. By pressing the [Space] key during graphics creation, it is possible to temporarily switch the snap ON function on or off (when the creation of one graphic has been completed, the original snap ON function status is restored).

S Disp Mode:

By not displaying images, library items and tiling, the redisplay of screens can be speeded up. When the “Hspeed” mode is set, image library items are indicated by a broken line frame, regardless of the setting for “Brkn Line Frame Disp” described below, and tiling is not displayed at all. The setting for this function has no effect on printouts of the PT screen or screen data.

**S Lamp/TouchSw # Disp:**

After having created lamps and touch switches, the lamp bit numbers that correspond to the lamps and touch switches can be displayed in the graphics. These numbers are not displayed on the PT screen. The setting for this function also determines whether or not lamp bit numbers are printed when screen data is printed out.

**S Memory Table # Disp.:**

It is possible to display the memory table number referenced when numeric values and characters are displayed. This number is not displayed on the PT screen. The setting for this function also determines whether or not memory table numbers are printed when screen data is printed out.

**S Image/Library # Disp:**

When images and library items are displayed, the code for the image or library item can be indicated. The code is not displayed on the PT screen; the setting for this function determines whether or not the code is printed when screen data is printed out.

**S Brkn Line Frame Disp:**

This setting makes it possible to display a broken line frame at the display locations for numeral/character-string tables, images, and library items. Set this function when you need to make a distinction with fixed-display characters, and when you want to check areas. Even if there are spaces in a character-string, the character-string display range is made clear with this function. This frame is not displayed on the PT screen.

**S Lamp/TSW Disp Mode:**

Specifies the way in which lamps and touch switches are displayed.

The appearance of the display during operation at the PT can be checked in advance using the support tool.

The setting for this function also determines the status of lamps and touch switches when screen data is printed out.

**S NT20M/NT20S Enlrgd Disp**

When the "NT Model" setting is NT20S or NT20M, editing can be performed with the "Edit" screen magnified by a factor of 2 in the vertical and horizontal directions. The setting for this function has no effect on printouts of the PT screen or screen data.

## 4-2 Common Setting Operations

Some setting operations are used frequently with all editing functions, such as numeral display setting and word setting. These are explained here by summarizing the representative setting operations.

Refer to this section if you are unsure how to perform a setting operation during screen creation.

### 4-2-1 Setting Character/Character-String Displays

<Character input>

<Character-string display>

#### S Ref Way

In the case of a character-string display, specify the method used to reference the memory table used for the display here. This item can only be specified when using direct connection.

##### (1) Direct

The character string in the specified character-string memory table is displayed.

##### (2) Indirect

The numeric value in the specified numeral table is taken as the number of a character-string memory table, and the character-string in that character-string memory table is displayed.

Indirect specification can be specified in the following cases. Do not specify it unless one of these conditions applies.

S When using a C200H interface unit

S When using an NT20S or NT600S with Ver.5 direct connection

S When using an NT30 or NT30C

Up to 50 indirect specifications can be made on one screen, including both numerical displays and character-string displays.

S Ref Table

In the case of a character-string display, specify the number of the memory table to be referenced here. In direct specification, specify the character-string memory table number, and in indirect specification, specify a memory table number.

Pressing the [F1] key enables selection from a memory table list.

S Length

In the case of character-string display, a display area equivalent to the specified number of characters is created. The character string is displayed displaced as far to the left as possible in the display area.

S Size

Specify whether the half-size font or normal font is to be used for one-byte characters here.


However, note that 64x cannot be specified with an NT20S or NT20M.

**Note** This font specification is not valid in the case of mark data and image data.



S Scale

Characters can be displayed at magnifications from 1x (Equ) to 64x.

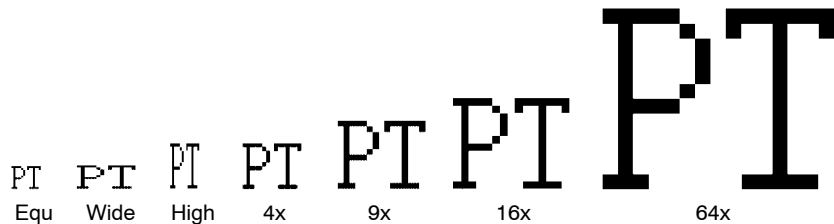


S Attribute

Characters can be displayed with any of the following attributes: “Norm” (normal), “Inv.” (inverted), “Flsh” (flashing), or “Spot”. For screen data of models other than the NT30C and NT610C, “Flsh” and “Spot” are displayed in yellow on the support tool screen.

S Smoothing

This function smooths out the jaggedness that appears in magnified characters. It can be specified for characters whose magnification is 4x or greater and marks whose size is 16 x 16 dots or greater.

 When using an NT20S, NT20M, NT600S, or NT600M without direct connection, only decimal display is possible and this setting is therefore ineffective.



## 4-2-2 Setting Numeral Displays

These settings set the display size and display status for numerals.

|                                               |                                            |                                          |
|-----------------------------------------------|--------------------------------------------|------------------------------------------|
| <input type="checkbox"/> Ref Way              | <input checked="" type="checkbox"/> Direct | <input type="checkbox"/> Indrct          |
| <input type="checkbox"/> Ref Table            | [No. 0]                                    |                                          |
| <input type="checkbox"/> Integer              | [8] Dig. (1 to 8)                          |                                          |
| <input type="checkbox"/> Decimal              | [0] Dig. (0 to 7)                          |                                          |
| <input checked="" type="checkbox"/> Details   |                                            |                                          |
| NUM DISP                                      |                                            |                                          |
| <input checked="" type="checkbox"/> Disp Type | <input checked="" type="checkbox"/> Dec    | <input type="checkbox"/> Hex             |
| <input type="checkbox"/> Zero Sup             | <input type="checkbox"/> Yes               | <input checked="" type="checkbox"/> No   |
| <input type="checkbox"/> Disp Sign            | <input type="checkbox"/> Yes               | <input checked="" type="checkbox"/> No   |
| <input type="checkbox"/> Size                 | <input type="checkbox"/> Half              | <input checked="" type="checkbox"/> Norm |
| <input type="checkbox"/> Scale                | <input checked="" type="checkbox"/> Equ    | <input type="checkbox"/> Wide            |
|                                               | <input type="checkbox"/> 4x                | <input type="checkbox"/> 9x              |
| <input type="checkbox"/> Attribute            | <input checked="" type="checkbox"/> Norm   | <input type="checkbox"/> Inv.            |
| <input type="checkbox"/> Smoothing            | <input type="checkbox"/> Yes               | <input checked="" type="checkbox"/> No   |
|                                               |                                            | <input type="checkbox"/> Wide            |
|                                               |                                            | <input type="checkbox"/> High            |
|                                               |                                            | <input type="checkbox"/> 16x             |
|                                               |                                            | <input type="checkbox"/> 64x             |
|                                               |                                            | <input type="checkbox"/> Flsh            |
|                                               |                                            | <input type="checkbox"/> Spot            |

### S Ref Way

Specify the method used to reference the memory table used for the display here. This item can only be specified when using direct connection.

#### (1) Direct

The numeric value in the specified character-string memory table is displayed.

#### (2) Indrct

The numeric value in the specified numeral table is taken as the number of a numeral table, and the numeric value in that numeral table is displayed.

Indirect specification can be specified in the following cases. Do not specify it unless one of these conditions applies.

S When using a C200H interface unit

S When using an NT20S or NT600S with Ver.5 direct connection

S When using an NT30 or NT30C

Up to 50 indirect specifications can be made on one screen, including both numerical displays and character-string displays.

## S Ref Table

Specify the number of the numeral table to be referenced here.

Pressing the [F1] key enables selection from a numeral table list.

S Integer: Specify the number of digits in the integral part of the numeric value here.

S Decimal: Specify the number of digits in the decimal fraction here.

S Disp Type: Specify whether the displayed numeric value will be decimal or hexadecimal format.

When using an NT20S, NT20M, NT600S, or NT600M and not using direct connection, only decimal values can be displayed and this setting is therefore ineffective.

S Zero Sup: When “No” is specified here, if the numeric value does not have the available number of digits, “0” will be displayed for the digits preceding the digits comprising the numeric value.

S Disp Sign: When “Yes” is specified here, a minus sign will be displayed for negative numeric values (when using direct connection, these are decimal format numbers with “F” at the head).

S Size: Three fonts are available for numeric value display: “Half”, “Norm” and “Wide”.

|           |        |      |
|-----------|--------|------|
| ø123      | 0123   | Ø123 |
| Half-size | Normal | Wide |

S Scale: Characters can be displayed at magnifications from 1x (Equ) to 64x.

However, note that 64x cannot be specified with an NT20S or NT20M.

S Attribute: Numeric values can be displayed with any of the following attributes: “Norm” (normal), “Inv.” (inverted), “Flsh” (flashing), or “Spot”. For screen data of models other than the NT30C and NT610C, “Flsh” and “Spot” are displayed in yellow on the support tool screen.

S Smoothing: This function smooths out the jagged appearance of magnified numerals. It can be specified for numerals whose scale is 4x or greater.

With the NT20S, NT20M, NT600S, and NT600M, smoothing is always performed on characters and marks with a magnification of 4 or greater and this setting is therefore not used.

**Reference:** The display of numeric values changes in the following way in accordance with the specifications made for “Integer”, “Decimal”, “Zero Sup”, and “Disp Sign”.

| Integer | Decimal | Zero Sup | Disp Sign | Contents of the numeral table | Screen display |
|---------|---------|----------|-----------|-------------------------------|----------------|
| 3       | 0       | No       | No        | 12                            | 012            |
| 3       | 0       | No       | No        | -12                           | 012            |
| 3       | 0       | Yes      | No        | 12                            | 12             |
| 3       | 0       | Yes      | No        | -12                           | 12             |
| 3       | 0       | Yes      | Yes       | 12                            | 12             |
| 3       | 0       | Yes      | Yes       | -12                           | -12            |
| 3       | 1       | No       | No        | 1                             | 000.1          |
| 3       | 1       | No       | No        | -12                           | 001.2          |
| 2       | 1       | No       | Yes       | 1                             | 00.1           |
| 2       | 1       | No       | Yes       | -12                           | -01.2          |
| 2       | 1       | Yes      | Yes       | 1                             | 0.1            |
| 2       | 1       | Yes      | Yes       | -12                           | -1.2           |

\* In the memory table, those characters suffixed by a “-” symbol are actually suffixed by an “F” in decimal notation when using direct connection (with the NT612G and NT610C, they are suffixed by an “F” even when direct connection is not used).

 
For example, “-12” is represented as “F0000012”.

4-2-3     Specifying the Display Color (NT30C, NT610C Only)

When using the NT30C or NT610C, both the color used to display characters and graphics and the color used for the background can be specified. Depending on the screen elements created, the following colors can be specified.


Characters/Numeric Values

- S Display color:                      Specifies the color of characters and numeric values.
- S Background color:                Specifies the color of the background to characters and numeric values. If  (transparent color) is specified, the background becomes transparent and elements underneath it can be seen through it.



Graphics


- S Basic color:                        In the case of graphics drawings this is the color of lines and in the case of tiled figures it is the color of the tiling.
- S Background color:                Specifies the color that will be the background after a graphic has been tiled (the color that can be seen in the gaps in a pattern). If transparent color is specified, the elements underneath can be seen through the background.
- S Boundary color:                   Specifies the color that indicates the boundaries of tiled areas.

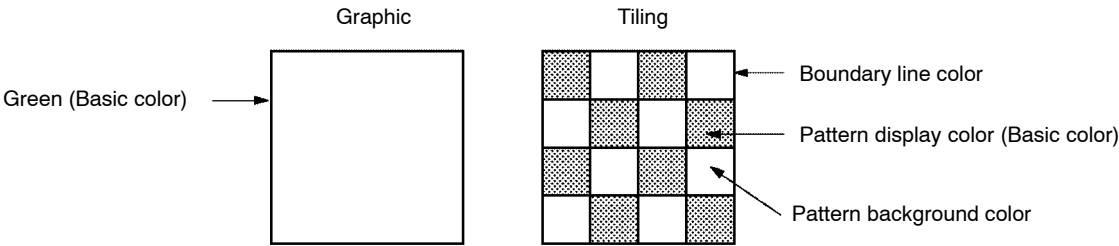

Lamps/Touch Switches

- S Frame color:                      This specifies the color of the frame if "Frame" is set for frame display.
- S Ptot color:                        This specifies the color of a lamp or touch switch when it is OFF. If transparent color is specified, the elements underneath can be seen through the OFF color.
- S Lit color:                          This specifies the color of a lamp or touch switch when it is ON.

S Flashing color: This specifies the color of a lamp or touch switch when it is flashing. During flashing, the OFF color and ON color are displayed alternately.

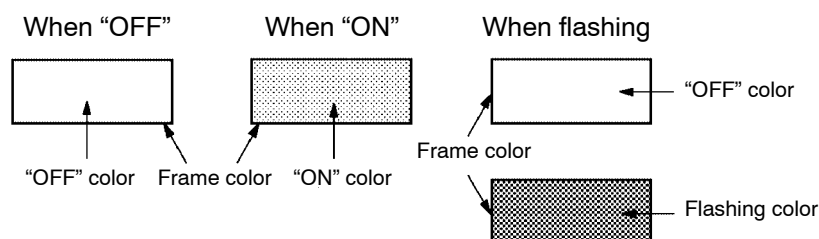


**Reference:** The appearance of lamps and touch switches during operation at the PT can be checked in advance on the support tool screen by using the “Lamp/TSW Disp Mode” option in the environmental settings (tool settings for the “Edit” screen).

### Graphs

S Frame color Specifies the color for the frame of a graph.

S Frame + range Specifies the color of the graph when the numeric value is positive.

S Frame – range Specifies the color of the graph when the numeric value is negative.

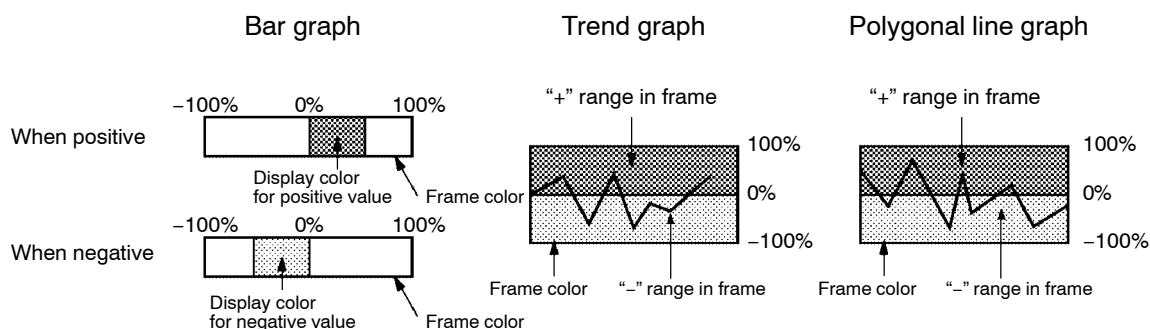

4-2-4     Setting Numeral Memory Tables

This section describes how to set the initial values, and data area referenced in the PC, for numeral memory tables.

The number of numeral memory tables is determined by the “PT Type” setting, as follows:

- NT20S, NT20M:            128 tables
- NT600S, NT600M:        256 tables
- NT30, NT30C, NT612G, NT610C:  
                                 1,000 tables (The number can be changed to 512 even when using direct connection, in accordance with the system memory).

**Reference:** When using an NT30, NT30C, NT612G, or NT610C, numeral memory table numbers 247 through 255 are used for the clock function and, therefore, setting operations cannot be set for them.

[When not using direct connection]

| No.                                 | Initial Data | In    | #    | Word      | PaOn PaUs |
|-------------------------------------|--------------|-------|------|-----------|-----------|
| 00C                                 | _____        | 0     |      | [-----] ( | )         |
| 001                                 |              | 0     |      | [-----] ( | )         |
| 002                                 |              | 0     |      | [-----] ( | )         |
| 003                                 |              | 0     |      | [-----] ( | )         |
| 004                                 |              | 0     |      | [-----] ( | )         |
| 005                                 |              | 0     |      | [-----] ( | )         |
| 006                                 |              | 0     |      | [-----] ( | )         |
| 007                                 |              | 0     |      | [-----] ( | )         |
| 008                                 |              | 0     |      | [-----] ( | )         |
| 009                                 |              | 0     |      | [-----] ( | )         |
| 01C                                 |              | 0     |      | [-----] ( | )         |
| 011                                 |              | 0     |      | [-----] ( | )         |
| 012                                 |              | 0     |      | [-----] ( | )         |
| 013                                 |              | 0     |      | [-----] ( | )         |
| 014                                 |              | 0     |      | [-----] ( | )         |
| 01E                                 |              | 0     |      | [-----] ( | )         |
| NUM TABLE    Select a numeral table |              |       |      |           |           |
| F 1                                 | Ref          | F 2 i | Copy | F 3 i     | CopySet   |
| F 4                                 | BtchChng     | F 5   | Srch | Tab       | Set No.   |
|                                     |              | Space | Init | Home      | Del       |

[When using direct connection]

| No.                                 | Initial Data | In    | #    | Word      | PaOn PaUs |
|-------------------------------------|--------------|-------|------|-----------|-----------|
| 000                                 | _____        | 0     | No   | [-----] ( | )         |
| 001                                 |              | 0     | No   | [-----] ( | )         |
| 002                                 |              | 0     | No   | [-----] ( | )         |
| 003                                 |              | 0     | No   | [-----] ( | )         |
| 004                                 |              | 0     | No   | [-----] ( | )         |
| 005                                 |              | 0     | No   | [-----] ( | )         |
| 006                                 |              | 0     | No   | [-----] ( | )         |
| 007                                 |              | 0     | No   | [-----] ( | )         |
| 008                                 |              | 0     | No   | [-----] ( | )         |
| 009                                 |              | 0     | No   | [-----] ( | )         |
| 010                                 |              | 0     | No   | [-----] ( | )         |
| 011                                 |              | 0     | No   | [-----] ( | )         |
| 012                                 |              | 0     | No   | [-----] ( | )         |
| 013                                 |              | 0     | No   | [-----] ( | )         |
| 014                                 |              | 0     | No   | [-----] ( | )         |
| 015                                 |              | 0     | No   | [-----] ( | )         |
| NUM TABLE    Select a numeral table |              |       |      |           |           |
| F 1                                 | Ref          | F 2 i | Copy | F 3 i     | CopySet   |
| F 4                                 | BtchChng     | F 5   | Srch | Tab       | Set No.   |
|                                     |              | Space | Init | Home      | Del       |

- S No.:                            Numeral table number
- S Init Val:                        Initial value

|         |                                                                                                                                                                                                                                                 |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S In:   | Execution/non-execution of numeral table initialization in accordance with initial values set using the support tool when the PT is started up.                                                                                                 |
| S #:    | Number of words used at the PC for reference by the numeral table.                                                                                                                                                                              |
| S Word: | First word (lower word) in the data area at the PC referenced by the numeral table.<br><br>The entry in the parentheses to the right is a comment input when word setting was performed. It gives information such as the contents of the word. |

When direct connection is not used, only "Init Val" can be set.

**Reference:** If the host interface unit's DIP switch is set for initialization of the data contents of the allocated words in the PC, the "Initial Value" setting will be invalidated.

<Setting method>

- Procedure**
1. Locate the bar cursor at the number of the numeral table to be set.
    - " [Shift] + [ ] or [Shift] + [ ] can be used to move the bar cursor to the previous or next numeral table for which the "Init Val" setting is not "0".
    - " Press the [Tab] key to display the memory table number input field.
    - " Press the [F1] (Ref) key to display the screen number that references a particular numeral table.
    - " Press [F5] (Srch) to search for initial values or allocated words. See "Searching within a Memory Table" (p.78).

**Reference:** S Data can be copied into the next numeral memory table by pressing [F2] (iCopy). Incrementing processing is performed in accordance with the setting made with [F3] (iCopySet). See "Copying to the Next Input Field (Increment Copy)" (p.77).

S Allocated bits of a numeral memory table can be changed in a batch with a designated range by pressing [F4] (Btch Chng). See "Batch Changing Bits and Words" (p.79).

2. Press the  key in the "Init Val" input field, input the initial value of the numeral memory table, then press the  key again.

Input numerical values can be deleted by pressing the [Home] key.

3. If using direct connection, to initialize the numeral memory table when it is started, move the bar cursor to the "In" input field and press the [SPACE] (Init) key.
4. If using direct connection, press the  key in the "#" input field, input the number of words (1 or 2), then press the  key again.
5. Carry out word setting.

For details of the setting procedure, see "Setting Words and Bits" (p.75).

4-2-5 Setting Character-String Memory Tables

This section describes how to set the initial values, and data area referenced in the PC, for character-string memory tables.

The number of character-string memory tables is determined by the “PT Type” setting, as follows:

- NT20S, NT20M: 32 tables
- NT600S, NT600M: 256 tables
- NT30, NT30C, NT612G, NT610C: 1,000 tables (The number can be changed to 256 even when using direct connection, in accordance with the system memory).

**Reference:** Only “Initial Data” can be set for character-string memory table numbers 256 through 999. It is not possible to reference PC data areas with these numbers.

[When not using direct connection]

| No.                                         | Initial Data | In # | Word    | PaEn PaUp |
|---------------------------------------------|--------------|------|---------|-----------|
| 000                                         |              |      | [-----] | (-----)   |
| 001                                         |              |      | [-----] | (-----)   |
| 002                                         |              |      | [-----] | (-----)   |
| 003                                         |              |      | [-----] | (-----)   |
| 004                                         |              |      | [-----] | (-----)   |
| 005                                         |              |      | [-----] | (-----)   |
| 006                                         |              |      | [-----] | (-----)   |
| 007                                         |              |      | [-----] | (-----)   |
| 008                                         |              |      | [-----] | (-----)   |
| 009                                         |              |      | [-----] | (-----)   |
| 010                                         |              |      | [-----] | (-----)   |
| 011                                         |              |      | [-----] | (-----)   |
| 012                                         |              |      | [-----] | (-----)   |
| 013                                         |              |      | [-----] | (-----)   |
| 014                                         |              |      | [-----] | (-----)   |
| 015                                         |              |      | [-----] | (-----)   |
| STR TABLE Select a character string table   |              |      |         |           |
| F.1 Ref F.2 iCopy F.3 iCopySet F.4 BtchChng |              |      |         |           |
| F.5 Srch Tab Set No. Space Init Home Del    |              |      |         |           |

[When using direct connection]

| No.                                         | Initial Data | In # | Word    | PaEn PaUp |
|---------------------------------------------|--------------|------|---------|-----------|
| 000                                         |              | No 0 | [-----] | (-----)   |
| 001                                         |              | No 0 | [-----] | (-----)   |
| 002                                         |              | No 0 | [-----] | (-----)   |
| 003                                         |              | No 0 | [-----] | (-----)   |
| 004                                         |              | No 0 | [-----] | (-----)   |
| 005                                         |              | No 0 | [-----] | (-----)   |
| 006                                         |              | No 0 | [-----] | (-----)   |
| 007                                         |              | No 0 | [-----] | (-----)   |
| 008                                         |              | No 0 | [-----] | (-----)   |
| 009                                         |              | No 0 | [-----] | (-----)   |
| 010                                         |              | No 0 | [-----] | (-----)   |
| 011                                         |              | No 0 | [-----] | (-----)   |
| 012                                         |              | No 0 | [-----] | (-----)   |
| 013                                         |              | No 0 | [-----] | (-----)   |
| 014                                         |              | No 0 | [-----] | (-----)   |
| 015                                         |              | No 0 | [-----] | (-----)   |
| STR TABLE Select a character string table   |              |      |         |           |
| F.1 Ref F.2 iCopy F.3 iCopySet F.4 BtchChng |              |      |         |           |
| F.5 Srch Tab Set No. Space Init Home Del    |              |      |         |           |

- S No.: Character-string memory table number
- S Initial Data: Initial value

|         |                                                                                                                                                                                                                                                                 |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S In:   | Execution/non-execution of character-string table initialization in accordance with initial values set using the support tool when the PT is started up.                                                                                                        |
| S #:    | Number of words used at the PC for reference by the character-string memory table.                                                                                                                                                                              |
| S Word: | First word (lower word) in the data area at the PC referenced by the character-string memory table.<br><br>The entry in the parentheses to the right is a comment input when word setting was performed. It gives information such as the contents of the word. |

**Reference:** If the host interface unit's DIP switch is set for initialization of the data contents of the allocated words in the PC, the "Initial Value" setting will be invalidated.

<Setting method>

- Procedure**
1. Locate the bar cursor at the number of the character-string memory table to be set.
    - " [Shift] + [ ] or [Shift] + [ ] can be used to move the bar cursor to the previous or next character-string memory table for which the "Initial Data" setting is not blank.
    - " Press the [Tab] key to display the memory table number input field.
    - " Press the [F1] (Ref) key to display the screen number that references the character-string memory table in question.
    - " Press [F5] (Srch) to search for initial values or allocated words. See "Searching within a Memory Table" (p.78).

**Reference:** S Data can be copied into the next character-string memory table by pressing [F2] (iCopy). Incrementing processing is performed in accordance with the setting made with [F3] (iCopySet). See "Copying to the Next Input Field (Increment Copy)" (p.77).

S Allocated bits of a character-string memory table can be changed in a batch with a designated range by pressing [F4] (Btch Chng). See "Batch Changing Bits and Words" (p.79).

2. Press the  key in the "Init Val" input field, input the initial value of the character-string memory table, then press the  key again.  
  
Input character-strings can be deleted by pressing the [Home] key.
3. If using direct connection, to initialize the character-string memory table when it is started, move the bar cursor to the "In" input field and press the [SPACE] (Init) key.
4. If using direct connection, press the  key in the "#" input field, input the number of words (1 to 20), then press the  key again.
5. If using direct connection, carry out word setting.  
  
For details of the setting procedure, see "Setting Words and Bits" (p.75).

## 4-2-6 Bit Memory Table Setting

This setting sets screen switching functions, which switch the screen when a PC bit comes ON, and the alarm list/history function, which is actuated in accordance with bit statuses (ON/OFF). The bit memory table allocations are also set in this setting.

Bit memory tables can only be used with Ver.3 and later versions of the NT30, NT30C, NT610G, NT612G, and NT610C.

**Reference:** The allocated bits for the screen switching functions and alarm history function in the bit memory tables are continually read by data communication while the PT is operating. If too many settings are made, PT processing may be delayed.

| No. | Hist | #  | Table | Dsp Cl | Image & Lib | SwScreen | Bit       | PatOn PatUp |
|-----|------|----|-------|--------|-------------|----------|-----------|-------------|
| 000 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 001 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 002 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 003 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 004 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 005 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 006 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 007 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 008 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 009 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 010 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 011 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 012 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 013 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 014 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |
| 015 | No   | No | 000   | Whit   | 0000        | 0000     | [-----] ( | )           |

|                      |                              |                         |  |
|----------------------|------------------------------|-------------------------|--|
| BIT TABLE            |                              | Select bit memory table |  |
| <u>F.2</u>   Copy    | <u>F.4</u>   BitChng         | <u>F.5</u>   Ssch       |  |
| <u>Tab</u>   Set No. | <u>Space</u>   Hist/SwScreen | <u>Home</u>   Delete    |  |

- S No.: Bit memory table number
- S Hist: Execution/non-execution of bit status check (reading) for alarm history
- S #: Presence/absence of screen switching function
- S Table: Character-string memory table displayed in the alarm list/history
- S Dsp Cl: Display color for the character-string memory table.  
For models other than the NT30C™ and NT610C™, this color is fixed as white.
- S Image & Lib: Image library code displayed in the alarm history
- S SwScreen: Displayed screen number if screen switching is executed
- S Bit: Bit allocated in the bit memory table. The parentheses to the right contain a comment indicating, for example, the function of the bit).

### S Setting procedure

The bit memory table has the following two functions:

### S Screen switching function

### S Alarm list/history function

For details on these functions, refer to the user's manual for the PT you are using.

<Setting screen switching functions>

**Procedure** 1. Locate the bar cursor at the “#” input field for the bit memory table with the required number and press the SPACE (Hist/SWScreen) key.

S To register changes in bit statuses in the alarm history, also press the SPACE key (Hist/SWScreen) in the “Hist” input field.

S [Shift] +  and [Shift] +  can be used to move the bar cursor to the previous and next positions in the bit memory table where there is a setting in the “Bit” column.

S Pressing the [Tab] key displays the memory table number input field.

S Pressing the [Home] (Delete) key clears the bit memory table setting at which the bar cursor is located (applies only if there is a setting in the “Bit” column).

S An allocated bit number search will be executed each time the [F5] (Srch) key is pressed. See “Searching Within a Memory Table” (p.78).

**Reference:** S Data can be copied into the next bit memory table by pressing [F2] (iCopy). See “Copying to the Next Input Field (Increment Copy)” (p.77).

S Allocated bits of a bit memory table can be changed in a batch with a designated range by pressing [F4] (Btch Chng). See “Batch Changing Bits and Words” (p.79).

2. Press the  key in the “SwScreen” input field, input the screen number of the screen whose display is to be switched, then press the  key again.

When the screen switching function is used, the “Table”, “Dsp Cl”, and “Image & Lib” settings are invalid.

3. Carry out bit setting.

For details of the setting procedure, see “Setting Words and Bits” (p.75).

<Setting the alarm list/history function>

- Procedure**
1. Locate the bar cursor at the number of the bit memory table to be set.
    - S To register changes in bit statuses in the alarm history, press the SPACE key (Hist/SWScreen) in the "Hist" input field.
    - S [Shift] +  and [Shift] +  can be used to move the bar cursor to the previous and next positions in the bit memory table where there is a setting in the "Bit" column.
    - S Pressing the [Tab] key displays the memory table number input field.
    - S Pressing the [Home] (Delete) key clears the bit memory table setting at which the bar cursor is located (applies only if there is a setting in the "Bit" column).
    - S An allocated bit number search will be executed each time the [F5] (Srch) key is pressed.. See "Searching Within a Memory Table" (p.78).
- Reference:**
- S Data can be copied into the next bit memory table by pressing [F2] (iCopy). See "Copying to the Next Input Field (Increment Copy)" (p.77).
  - S Allocated bits of a bit memory table can be changed in a batch with a designated range by pressing [F4] (Btch Chng). See "Batch Changing Bits and Words" (p.79).
2. Press the  key in the "SwScreen" input field, input the character-string memory table number, then press the  key again.
 

Pressing [F1] (Select) allows you to select the number from a displayed list.
  3. If using an NT610C, specify the display color.
 


For details of the setting procedure, see "Specifying the Display Color" (p.66).
  4. To display an image library entry, press the  key in the "Image & Lib" input field, input the relevant code, then press the  key again.
 

Pressing [F1] (Select) allows you to select the number from a displayed list.
  5. To switch the display, input the screen number and press the  key.
  6. Carry out bit setting.
 

For details of the setting procedure, see "Setting Words and Bits" (p.75).
- Reference:** The allocated bits for the screen switching functions and alarm history function in the bit memory tables are continually read by data communication while the PT is operating. If too many settings are made, PT processing may be delayed.

## 4-2-7 Setting Words and Bits

The words and bits referenced in the PC have to be set.

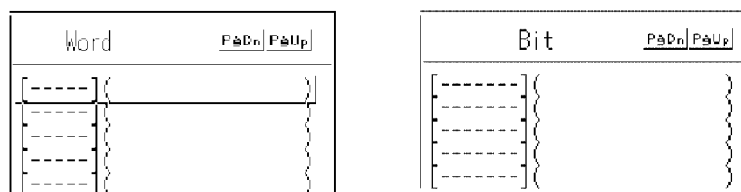

### S Word/Bit:

In the case of numeral tables and character-string memory tables, specify the lower word number of the referenced words. In the case of lamps, touch switches, and bit memory tables, set the bit number to be allocated.

The entries in the parentheses on the right hand side are comments. Comments can be input to provide information such as the purpose of use of the word or bit (to input a comment, press the [F1] (Ref Inpt) key).

When specifying a DM are for a bit, append the bit number (00 to 15) at the end of the DM number.

Timers (TIM) and counters (CNT) cannot be set in bits or the words of character-strings.

**Note** When using a SYSMAC BUS/2 interface unit, all the other bits in the same word as a bit used for touch switch input notification are turned OFF.

### Direct Input Method

To make entries in the allocated bit/word input field directly by key input, press the  key while the cursor is in the input field, input the bit or word number, then press the  key again. If the number is input correctly it is confirmed. For details on the input procedure, see "Character input" (p.54).

The following rules apply to bit and word input.

- S Even if lower case letters are input, the characters will be upper case.
- S If nothing is input, this will be interpreted as "no bit or word".
- S Symbols that indicate the type of bit or word, such as "AR", "LR", and "DM", are correctly identified even if only the first character is input. However, in the case of "CH" (I/O, internal relay area), correct identification is possible only when nothing is input at the head.
- S Blanks (space) are ignored.
- S The zeros that precede a bit or word number can be omitted.
- S If the bit or word number exceeds the upper limit, a warning "pip" will sound and the number will be changed to the maximum possible value.

Short cut keys can also be used (see p.55).

### Example

Specifying link relays (LR) for allocated bits:

| Input          | After Input |
|----------------|-------------|
| [            ] | [ ----- ]   |
| [L01]          | [L000001]   |
| [LR0212]       | [L000212]   |
| [12]           | [ 000012]   |
| [lr5601]       | [L005601]   |
| [ LR914]       | [L000914]   |
| [L999999]      | [L006300]   |



### Reference Input Procedure

If you are not sure of the types of bit and channel that can be specified, it is possible to display a list of the types that can be specified and select the type from among these. It is also possible to input a comment at this time.

<Setting method>

- Procedure** 1. Press the  key in the allocated bit/word input field, then press [F1] (Ref Inpt).

The window shown below will be displayed.

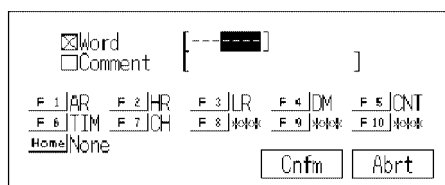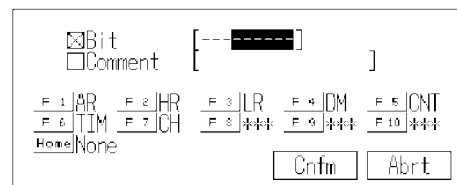2. Specify the type of bit or word by pressing the corresponding function key. If a type that cannot be input in the input field is selected, the selection is ignored.
3. Input the bit or word number with the numeral keys and press the  key. If the input number exceeds the upper limit, a warning “pip” will sound and the number will be changed to the maximum possible value.

If input is performed correctly, the cursor will shift to the comment input field.

4. If required, input a comment, then press the  key. If no comment is required, just press the  key.

The window closes, and the bit/word number and comment are displayed in the original input field.

### 4-2-8 Copying to the Next Input Field (Increment Copy)

When a memory table or screen data is displayed in list form, data can be copied to the next input field. It is also possible to perform addition processing (increment copy) at this time.

The data that can be copied is indicated below.

| Type                          | Details                              | Incrementing | Remarks                                                                                                                                                                      |
|-------------------------------|--------------------------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Numeral memory table          | Initial value                        | f            |                                                                                                                                                                              |
|                               | Word                                 | f            | "In" and "#" can be copied simultaneously.                                                                                                                                   |
| Character-string memory table | Initial value                        | ¢            |                                                                                                                                                                              |
|                               | Word                                 | f            | "In" and "#" can be copied simultaneously.                                                                                                                                   |
| Bit memory table              | All items                            | △            | If any of the items is selected for copying, all items will be copied.<br>The "Table", "Image & Lib", "SwScreen" and "Bit" items will all automatically be incremented by 1. |
| Numeral display               | Numeral memory table number          | △            | Executed only if the next input field already has an entry in it.<br>Automatically incremented by 1.                                                                         |
| Character-string display      | Character string memory table number | △            | Executed only if the next input field already has an entry in it.<br>Automatically incremented by 1.                                                                         |
| Lamp                          | Control bit number                   | △            | Executed only if the next input field already has an entry in it.<br>Automatically incremented by 1.                                                                         |
| Touch switch                  | Control bit number                   | △            | Executed only if the next input field already has an entry in it, and the touch switch is an input notification function touch switch.<br>Automatically incremented by 1.    |
| Bar graph                     | Numeral memory table number          | △            | Executed only if the next input field already has an entry in it.<br>Automatically incremented by 1.                                                                         |
| Numeral setting input field   | Numeral memory table number          | △            | Executed only if the next input field already has an entry in it.<br>Automatically incremented by 1.                                                                         |

O: Incrementing in accordance with the copy setting    △: No copy setting    ¢: No incrementing

<Operation>

- Procedure
1.

To make a copy setting, press [F3] (iCopySet), input the value to be added on copying, and the type of numerical value (decimal/hexadecimal), then press the  key.

☒Copy Increment

☐Input type

☒Dec

☐Hex

2.

Locate the bar cursor at the item to be copied and press [F2] (iCopy).
- The data will be copied to the next input field. Addition processing is carried out in accordance with the nature of the copied data and the copy setting.
- Repeated copy operations are possible by continuing to press the [F2] (iCopy) key.

4-2-9

Searching Within a Memory Table

This function is used to search for data in a numeral or character-string memory table.

The data that can be searched for are tabled below.

| Type                          | Details       |
|-------------------------------|---------------|
| Numeral memory table          | Initial value |
|                               | Word          |
| Character-string memory table | Initial value |
|                               | Word          |
| Bit memory table              | Bit           |

<Operation>

- Procedure
1.

Locate the bar cursor on the item to be searched for, press the [F5] (Srch) key, input the data to be searched for and the direction of the search, then press the  key.

☒Srch Num

☐Srch Dir

☐Up

☒Down

- The search will start. When the specified data is found, the bar cursor will be located at its position.
2.

To search for the next occurrence, press the  key. To quit the search, press the [Esc] key.

## 4-2-10 Batch Changing Bits and Words


The bits and words allocated to memory tables and screen data can be changed in batches with specified ranges.

The types of data for which batch change operations are applicable are indicated below.

| Type                          | Details | Remarks                                                                                                     |
|-------------------------------|---------|-------------------------------------------------------------------------------------------------------------|
| Numeral memory table          | Word    | Executed using the numeral memory table setting window                                                      |
| Character-string memory table | Word    | Executed using the character-string memory table setting window                                             |
| Bit memory table              | Bit     | Executed using the bit memory table setting window                                                          |
| Screen data                   | Bit     | Executed for each screen after displaying the next item with [F10] (Next) on the "Screen Selection" screen. |

### Example

Changing a DM area to link relays (LR)

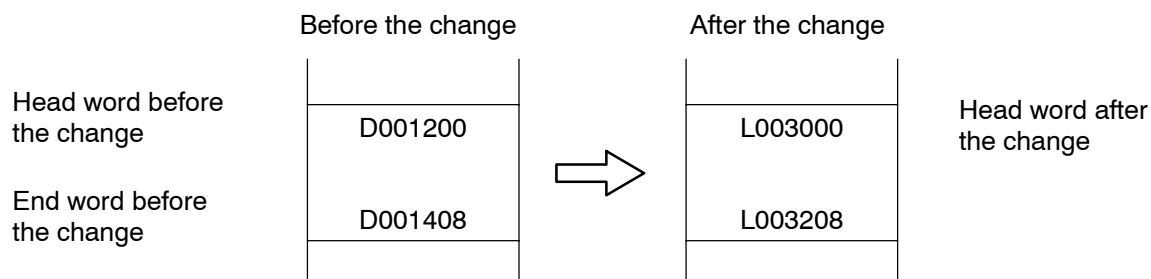

<Operation>

- Procedure**
1. Display the list of the data to be subjected to the batch change, press the [F4] (Btch Chng) key, input the head and end words before the change, head word after the change, and presence/absence of a comment change, then press the  key.
  - S A window indicating the types of bits and words that can be input can be displayed by pressing the [F1] (Ref Inpt) key.
  - S By marking screen data, bits and words in more than one screen can be changed together.

Btch Chng

☒ St Bfr Chng [ 0000 ]  
☐ Ed Bfr Chng [       ]  
☐ After Chng [       ]  
☐ Com Chng   ☐ Yes   ☒ No

Ref Inpt

## 4-3 Creating Fixed Displays

This section describes how to create fixed characters and graphics in screen data.

The following characters and graphics can be created.

Characters (fixed display), marks (display)


Continuous lines, squares, polygons, circles/arcs, fans, tilings

When using an NT20S, NT20M, NT600S, or NT600M, only characters (fixed display), continuous lines, and circles can be used (arcs cannot be used).

### 4-3-1 Inputting Characters

Characters to be displayed have to be input. For details on the display of character-strings and numeric values, setting the display color (NT30C or NT610C), setting numeral tables, and setting words and bits, see 4-2 "Common Setting Operations" (p.61).

- Procedure**
1. Select "FIX DISP" on the initial editing screen.  
The fixed display menu will be displayed.
  2. Select "STR IN".
  3. Input the characters to be displayed at the keyboard and press the  key.  
" Pressing the [F3] (Mark) key enables mark input.  
" With the NT30, NT30C, NT612G, and NT610C, pressing the [F4] (Image) key enables image input.
  4. Set the Details and press the  key.
  5. If using an NT30C or NT610C, set the character color and background color.
  6. Press the  key with the cursor on "Exec".
  7. A box indicating the size of the character data is displayed.  
Move this box to the required display position and press the  key. The characters will be displayed.

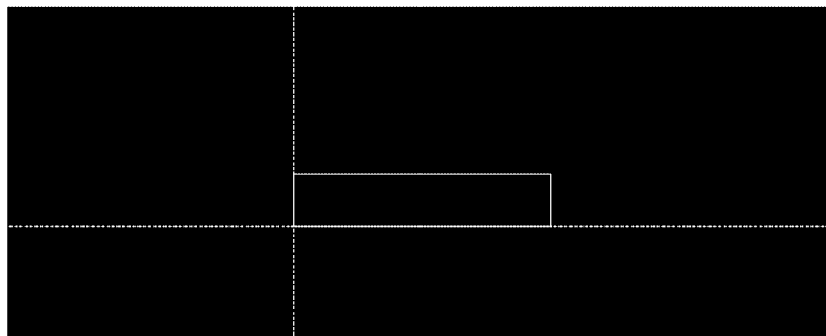

8. Press the [Esc] key to quit character input.

**Deleting Displayed Characters**


This is the procedure for deleting displayed characters. Deletion is executed in character-string units.

- Procedure**
1. Select "STR IN" from the fixed display menu.
  2. Press the [F1] (Delete) key.
  3. Locate the cross-hair cursor at a position inside the character-string to be deleted and press the  key. The selected character-string will be enclosed by a dotted line.
  4. Check the message, then press  to delete the character-string.

**Modifying Displayed Characters**

This is the procedure for modifying displayed characters, their character size, attributes, or position. Modification is executed in character-string units.

- Procedure**
1. Select "STR IN" from the fixed display menu.  
It is also possible to proceed straight to step 4. by left clicking on the character to be modified (see p.57).
  2. Press the [F2] (Modify) key.
  3. Locate the cross-hair cursor at a position inside the character-string to be modified and press the  key.
  4. Select the required item in the window and modify the character-string.

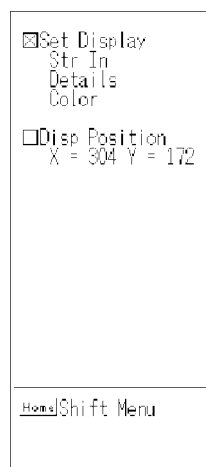

- |                     |                                                                                   |
|---------------------|-----------------------------------------------------------------------------------|
| S Modify String:    | Select to change characters.                                                      |
| S Set Display:      | Select to change the character font, scale, or display attribute.                 |
| S Color:            | Select to change the character color or background color. (NT30C and NT610C only) |
| S Display Position: | Select to move the character box in order to change the display position.         |
5. Press the [Esc] key to quit modification.

## 4-3-2 Inputting Marks

Created marks are input during screen editing. Marks can be handled in the same way as characters and magnification scales can be specified for them.

However, smoothing is only possible for 16 x 16 dot marks when using an NT30, NT30C, NT612G, or NT610C.

### Displaying Marks

Select the mark that you want to display from the mark selection screen.

Marks can be displayed in the following two ways.

(1) Specification during character input

Press the [F3] (Mark) key after inputting characters or a label to display the mark selection screen. Only 16 x 16 dot marks can be input.

(2) Specification using the fixed editing menu

Select "Mark" from the fixed display menu and specify the display position: the mark selection screen will be displayed.

This operation cannot be used with the NT20S, NT20M, NT600S, or NT600M.

Select the mark to be displayed from this screen, specify the Details and character color if using an NT30C or NT610C, then specify the display position.

32 x 32 and 64 x 64 dot marks can also be displayed at the same time.

The mark will be displayed in its actual form in the character input field. It will be displayed on the editing screen with its bottom left extremity take as the origin.

### Deleting Marks

Marks displayed on the screen can be deleted using the following method (marks located inside character-strings can be deleted using the "STR IN" function).

**Procedure** 1. Select "FIX DSP" from the initial editing menu.

The fixed display menu will be displayed.

2. Select "MARK".

3. Press the [F1] (Delete) key.

4. Locate the cursor at the mark to be deleted and press the  key.

5. Check the message and then press the  key.

**Modifying Marks**

Use the following procedure to modify marks displayed on the screen (marks located inside character-strings can be modified using the "STR IN" function).

**Procedure**

1. Select "FIX DSP" from the initial editing menu.

The fixed display menu will be displayed.

It is also possible to proceed straight to step 5. by left clicking on the mark to be modified (see p.57).

2. Select "MARK".
3. Press the [F2] (Modify) key.
4. Locate the cursor at the mark to be modified and press the  key.
5. Select the required item and execute the modification.

§ Modifying code: Select to modify a mark.

§ Set display: Select to change the character font, scale, or display attribute.

§ Color: Select to change the character color or background color. (NT30C and NT610C only)


§ Display position: Select to move the mark box in order to change the display position.

6. Press the [Esc] key to quit modification.

### 4-3-3 Creating Polylines

This is the procedure for drawing continuous lines (polygonal lines). It is possible to connect a maximum of 255 individual line segments.

- Procedure**
1. Select "FIX DSP" from the initial editing menu.  
The fixed display menu will be displayed.
  2. Select "POLYLINE" from the fixed display menu.
  3. Select the type of line.  
The selectable options are solid line, broken line, 1-dot chain and 2-dot chain.  
" It is not possible to use more than one line type in the same continuous line.
  4. If using an NT30C or NT610C, specify the line color.
  5. Press the  key with the cursor on "Exec"
  6. Draw the continuous line.
    - 1) Press the  key at the start point.
    - 2) Locate the cursor at an intermediate point and press the  key.  
Set as many intermediate points as required.
    - 3) At the end point, press the  key while holding down the [Shift] key (or double click if using the mouse).

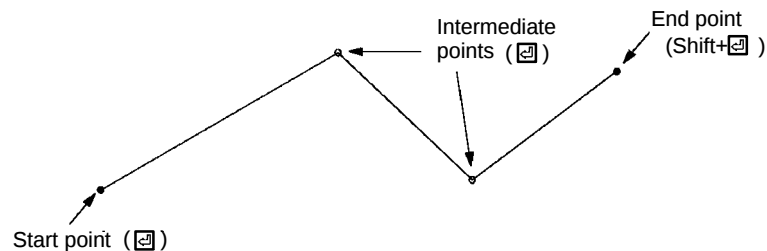

- " Pressing the [Esc] key before the end point has been set deletes the last drawn line segment.
- " Pressing the [Esc] key while holding down the [Shift] key aborts the drawing.
7. Press the [Esc] key to quit continuous line drawing.

#### Deleting Polylines

- Procedure**
1. Select "POLYLINE" from the fixed display menu and then press the [F1] (Delete) key.  
A j mark will be displayed at the start point of the continuous line.
  2. Locate the cursor at the j mark of the continuous line to be deleted and press the  key.
  3. Check the message and then press the  key; the continuous line will be deleted.  
To abort deletion, press the [Esc] key.

**Modifying Polylines**

- Procedure** 1. Select "POLYLINE" from the fixed display menu, then press the [F2] (Modify) key.

A j mark will be displayed at the start point of the continuous line.

It is also possible to proceed straight to step 3. by left clicking on the polyline to be modified (see p.57).

2. Locate the cursor at the j mark of the continuous line to be modified and press the  key.

3. Select the required item and execute the modification.

S Line Type: Select to change the line type.

S Color: If using an NT30C or NT610C, select to change the line color.

S Display position: The cursor moves to the end point of the continuous line. Change the shape using the same operations as used for drawing. Pressing the [Esc] key deletes the last straight line and allows the creation of a new straight line.

After changing the shape, press the  key while holding down the [Shift] key.


If using a mouse, double click.

4. Press the [Esc] key to quit modification.

### 4-3-4 Creating Squares

This is the procedure for drawing squares.

- Procedure**
1. Select "FIX DSP" from the initial editing menu.  
The fixed display menu will be displayed.
  2. Select "SQUARE" from the fixed display menu.
  3. Select the display attribute with "Detail".  
The selectable options are "normal", "inverted", "flashing" and "spot".
  4. If using an NT30C or NT610C, specify the line color.
  5. Press the  key with the cursor on "Exec"
  6. Draw the square.
    - 1) Press the  key at the start point.
    - 2) Locate the cursor at the end point (diagonally opposite point) and press the  key.

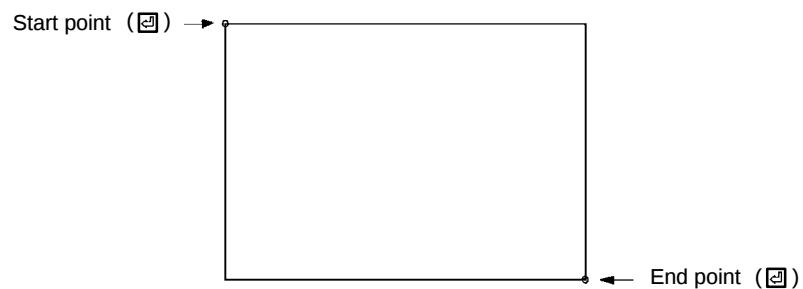

" Pressing the [Esc] key before the end point has been set aborts the drawing.

7. Press the [Esc] key to quit square drawing.

#### Deleting Squares

- Procedure**
1. Select "SQUARE" from the fixed display menu and then press the [F1] (Delete) key.  
A j mark will be displayed at the start point of the square.
  2. Locate the cursor at the j mark of the square to be deleted and press the  key.
  3. Check the message and then press the  key; the square will be deleted.  
To abort deletion, press the [Esc] key.

**Modifying Squares**


- Procedure**
1. Select "SQUARE" from the fixed display menu, then press the [F2] (Modify) key.  
A j mark will be displayed at the top left corner of the square.  
It is also possible to proceed straight to step 3. by left clicking on the square to be modified (see p.57).
  2. Locate the cursor at the j mark of the square to be modified and press the  key.
  3. Select the required item and execute the modification.  
S Attribute: Select to change the display attribute.  
S Color: If using an NT30C or NT610C, select to change the line color.  
S Display position: Select to move the bottom right point of the square.  
Pressing the [Esc] key makes it also possible to move the top left point of the square.  
Change the size and shape and then press the  key.
  4. Press the [Esc] key to quit modification.

### 4-3-5 Creating Polygons

This is the procedure for drawing polygons. It is possible to create polygons with up to 255 sides.

It cannot be used with the NT20S, NT20M, NT600S, or NT600M.

- Procedure**
1. Select "FIX DSP" from the initial editing menu.  
The fixed display menu will be displayed.
  2. Select "POLYGON" from the fixed display menu.
  3. Select the display attribute with "Detail".  
The selectable options are "normal", "inverted", "flashing" and "spot".
  4. If using an NT30C or NT610C, specify the line color.
  5. Press the  key with the cursor on "Exec"
  6. Draw the polygon.
    - 1) Press the  key at the start point.
    - 2) Locate the cursor at a the next vertex and press the  key.  
Set as many vertices as required.
    - 3) At the final vertex, press the  key while holding down the [Shift] key (or double click if using the mouse).  
The final vertex will be joined to the start point automatically.

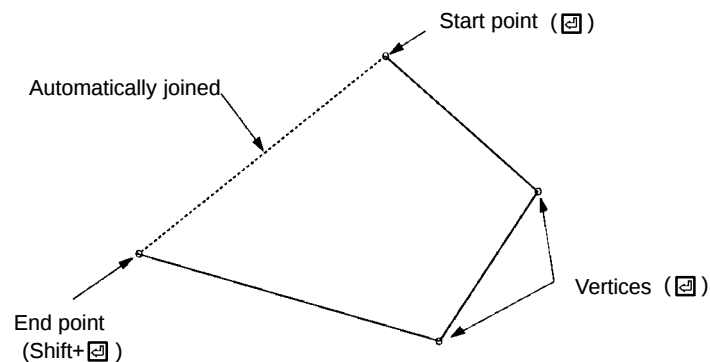

- " Pressing the [Esc] key before the end point has been set deletes the last drawn straight line.
  - " Pressing the [Esc] key while holding down the [Shift] key aborts the drawing.
7. Press the [Esc] key to quit polygon drawing.

**Deleting Polygons**

- Procedure**
1. Select "POLYGON" from the fixed display menu and then press the [F1] (Delete) key.  
A j mark will be displayed at the start point of the polygon.
  2. Locate the cursor at the j mark of the polygon to be deleted and press the  key.
  3. Check the message and then press the  key; the polygon will be deleted.  
To abort deletion, press the [Esc] key.

**Modifying Polygons**

- Procedure**
1. Select "POLYGON" from the fixed display menu, then press the [F2] (Modify) key.  
A j mark will be displayed at the start point of the polygon.  
It is also possible to proceed straight to step 3. by left clicking on the polygon to be modified (see p.57).
  2. Locate the cursor at the j mark of the polygon to be modified and press the  key.
  3. Select the required item and execute the modification.
    - S Attribute: Select to change the display attribute.
    - S Color: If using an NT30C or NT610C, select to change the line color.
    - S Display position:
      - The cursor moves to the end point of the polygon.
      - Change the shape using the same operations as used for drawing. Pressing the [Esc] key deletes the last vertex and allows the creation of a new vertex.
      - After changing the shape, press the  key while holding down the [Shift] key.
    - S Attribute position:
      - Select to change the starting point for tiling when the "Normal", "Flashing" or "Spot" attribute is set. Use this feature when graphics are overlapped, making tiling difficult.
  4. Press the [Esc] key to quit modification.

### 4-3-6 Creating Circles/Arcs

This is the procedure for drawing circles and arcs.

Arcs cannot be created when using an NT20S, NT20M, NT600S, or NT600M.

**Procedure** 1. Select "FIX DSP" from the initial editing menu.

The fixed display menu will be displayed.

2. Select "CIRC/ARC" from the fixed display menu.

3. Select the display attribute with "Detail"

The selectable options are "normal", "inverted", "flashing", and "spot".

The selected attribute will be valid only for circles.

When using an NT20S, NT20M, NT600S, or NT600M, the attribute is fixed as "normal".

4. If using an NT30C or NT610C, specify the line color.

5. Press the  key with the cursor on "Exec".

6. Draw the circular/arc.

1) Press the  key at the center of the circle or arc.


2) Move the cursor to set the size of the circle or arc and press the  key.

3) For a circle:

After setting the size, simply press the  key once more.

For an arc:

Locate the cursor at the end point of the arc. Specify the direction in which the arc is to be drawn with the [Insert] key, then press the  key.

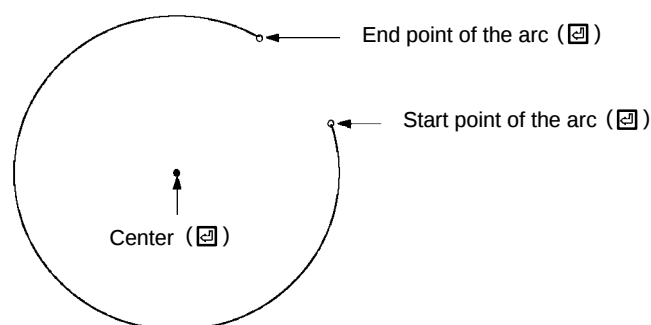

7. Press the [Esc] key to quit circle/arc drawing.

**Deleting Circles/Arcs**

- Procedure**
1. Select "CIRC/ARC" from the fixed display menu and then press the [F1] (Delete) key.  
A j mark will be displayed at the start point of the circle/arc.
  2. Locate the cursor at the j mark of the circle/arc to be deleted and press the  key.
  3. Check the message and then press the  key; the circle/arc will be deleted.  
To abort deletion, press the [Esc] key.

**Modifying Circles/Arcs**


- Procedure**
1. Select "CIRC/ARC" from the fixed display menu, then press the [F2] (Modify) key.  
A j mark will be displayed at the start point of the circle/arc.  
It is also possible to proceed straight to step 3. by left clicking on the circle or arc to be modified (see p.57).
  2. Locate the cursor at the j mark of the circle/arc to be modified and press the  key.
  3. Select the required item and execute the modification.
    - S Attribute: Select to change the display attribute. This selection is only valid if using an NT30, NT30C, NT612G, or NT610C.
    - S Color: If using an NT30C or NT610C, select to change the line color.
    - S Display position: Select to move the end point of an arc.  
Pressing the [Esc] key makes it possible to change the start point and center point also.  
After changing the shape, press the  key.
  4. Press the [Esc] key to quit modification.

### 4-3-7 Creating Fans

This is the procedure for drawing fans.

It cannot be used if using an NT20S, NT20M, NT600S, or NT600M.

- Procedure**
1. Select "FIX DSP" from the initial editing menu.  
The fixed display menu will be displayed.
  2. Select "FAN" from the fixed display menu.
  3. Select the display attribute with "Detail".  
The selectable options are "normal", "inverted", "flashing", and "spot".
  4. If using an NT30C or NT610C, specify the line color.
  5. Press the  key with the cursor on "Exec"
  6. Draw the fan.
    - 1) Press the  key at the center of the fan.
    - 2) Move the cursor to set the size and start point of the fan and press the  key.
    - 3) Locate the cursor at the end point of the fan.
    - 4) Specify the direct in which the fan is to be drawn by using the [Insert] key, then press the  key.

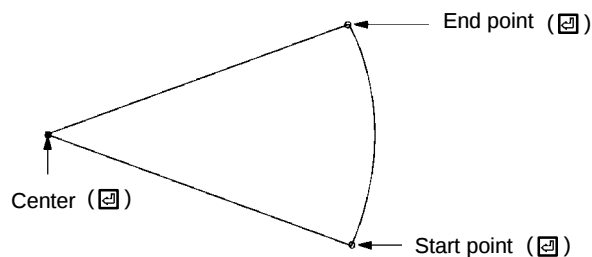

7. Press the [Esc] key to quit fan drawing.

#### Deleting Fans

- Procedure**
1. Select "FAN" from the fixed display menu and then press the [F1] (Delete) key.  
A j mark will be displayed at the start point of the fan.
  2. Locate the cursor at the j mark of the fan to be deleted and press the  key.
  3. Check the message and then press the  key; the fan will be deleted.  
To abort deletion, press the [Esc] key.

## Modifying Fans


- Procedure**
1. Select "FAN" from the fixed display menu, then press the [F2] (Modify) key.  
A j mark will be displayed at the center of the fan.  
" It is also possible to proceed straight to step 3. by left clicking on the fan to be modified (see p.57).
  2. Locate the cursor at the j mark of the fan to be modified and press the  key.
  3. Select the required item and execute the modification.  
S Attribute: Select to change the display attribute.  
S Color: If using an NT30C or NT610C, select to change the line color.  
S Display position: Select to move the end point of the fan.  
Pressing the [Esc] key makes it possible to change the start point and center point also.  
After changing the shape, press the  key.
  4. Press the [Esc] key to quit modification.

## 4-3-8 Tiling

This is the procedure for filling an area enclosed by lines, such as a square or circle, with a specified tiling pattern.

It cannot be used if using an NT20S, NT20M, NT600S, or NT600M.


- Procedure**
1. Select "FIX DSP" from the initial editing menu.  
The fixed display menu will be displayed.
  2. Select "TILING" from the fixed display menu.
  3. Select the tiling pattern with "Detail".

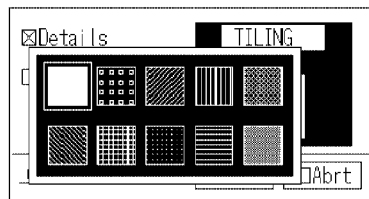

4. If using an NT30C or NT610C, specify the base color, background color, and boundary color.
5. Press the  key with the cursor on "Exec"
6. Locate the cursor inside the area to be tiled and press the  key.  
Any point inside an area that is enclosed by solid lines can be specified.  
If using an NT30C or NT610C, make the specification inside the boundary color area.
7. A message asking for confirmation that the area is to be tiled will be displayed.

Press the  key to tile the area.

Press the [Esc] key to abort tiling.

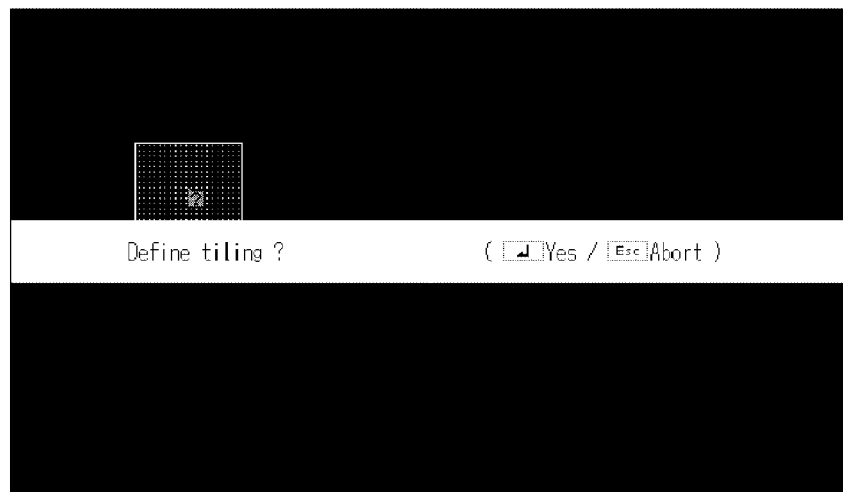


8. Press the [Esc] key to quit tiling.

Take the display sequence into consideration when creating screen data (see p.53).

The tiling patterns on the support tool screen may differ a little from the tiling patterns on the PT screen.

**Note** If an area which is not closed is specified, the entire screen may be tiled. In addition, when using an NT610C, if a graphic for which the boundary color is not closed is specified, the tiling may extend outside the specified area.

Example:

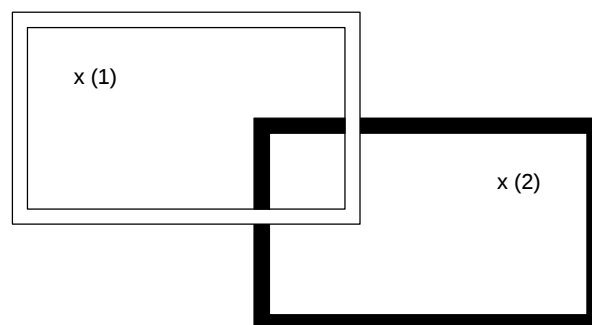

x : Point where tiling is specified  
 (1): Boundary color   
 (2): Boundary color 

When tiling is specified at point (1), only the area inside the frame will be tiled, but when it is specified at (2), the area outside the frame will also be tiled from the part where the frames overlap.

**Note** Do not specify tiling inside graphics assigned the “flashing” attribute.

**Deleting Tiling**

- Procedure**
1. Select "TILING" from the fixed display menu and then press the [F1] (Delete) key.  
A j mark will be displayed at the point at which the tiling was specified.
  2. Locate the cursor at the j mark of the tiling to be deleted and press the  key.
  3. Check the message and then press the  key; the tiling will be deleted.  
To abort deletion, press the [Esc] key.

**Modifying Tilings**

- Procedure**
1. Select "TILING" from the fixed display menu, then press the [F2] (Modify) key.  
A j mark will be displayed at the point where the tiling was specified.  
" It is also possible to proceed straight to step 3. by left clicking on the tiling to be modified (see p.57).
  2. Locate the cursor at the j mark of the tiling to be modified and press the  key.
  3. Select the required item and execute the modification.  
S Detail:                      Select to change the tiling pattern.  
S Color:                        If using an NT30C or NT610C, select to change the color.  
S Display position:        Select to change the tiling location.
  4. Press the [Esc] key to quit modification.

## 4-4 Setting Numeral Displays

This section describes how to display the contents of numeral tables on the screen.

A maximum of 50 numeral displays can be set for display on one screen.

### 4-4-1 Setting Numeral Displays


This is the procedure for setting numeral displays. For details on the display of character-strings and numeric values, setting display colors (NT30C and NT610C), setting numeral tables, and setting words and bits, see 4-2 "Common Setting Operations" (p.61).

- Procedure**
1. Select "NUM DISP" on the initial editing screen.
  2. Select the field in which the numeral display is to be registered in the window and press the  key.

" To delete an entry that has already been set, locate the cursor at that number and press the [F1] (Delete) key.

**Reference:** To "increment copy" an existing numeral display entry into the next input field (incrementing the numeral memory table number), press the [F2] (iCopy) key with the cursor located on that entry (see p.77).

3. Make the necessary settings.
4. Press the  key with the cursor on "Exec".
5. A box that indicates the size of the numeral display will be displayed.  
Move this box to the required display position and press the  key.

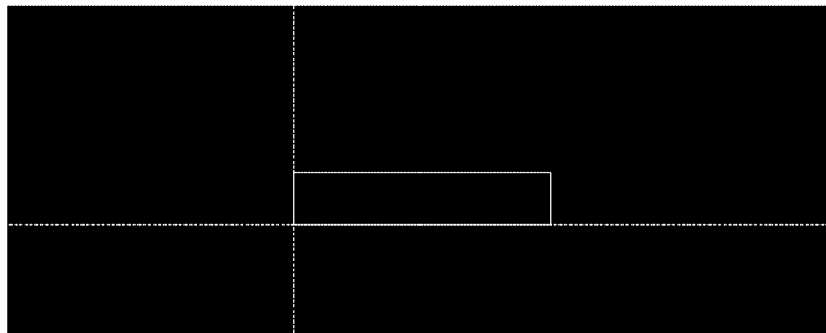

If required, more numeral displays can be set by repeating steps 2. through 5.


To quit numeral display, press the [Esc] key; the display will return to the menu.

**Reference:** If "Yes" is set for "Brkn Line Frame Disp" in the environmental settings (tool settings for the "Edit" screen), the display range for the numerals can be continually monitored on the screen.

## 4-4-2 Modifying Numeral Displays

The contents and position of numeral displays created on the screen can be modified.

- Procedure**
1. Select "NUM DISP" on the initial editing screen.
    - " It is also possible to proceed straight to step 3. by left clicking on the numeral display to be modified (see p.57).
  2. In the window, select the entry corresponding to the numeral display to be modified and press the  key.
    - " It is also possible to make the selection by locating the mouse cursor on the numeral display to be modified and clicking the left mouse button.
  3. Select the required item in the window and execute the modification.

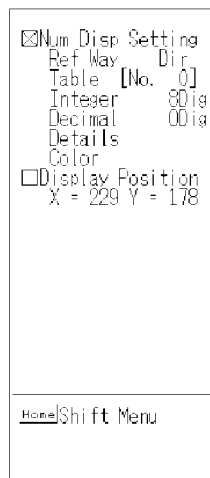

S Num Disp Setting: Select to change settings such as the referenced memory table, the scale, and the attribute.

S Display Position: Select to change the display position.

4. Press the [Esc] key to quit modification.

## 4-5 Setting Character-String Displays


This section describes how to display the contents of character-string memory tables on the screen.

The maximum number of character-string displays that can be set on one screen is 32 for the NT20S, 8 for the NT20M, and 50 for other models.

### 4-5-1 Setting Character-String Displays

This is the procedure for setting character-string displays. For details on the display of character-strings and numeric values, setting display colors (NT30C and NT610C), setting numeral tables, and setting words and bits, see 4-2 “Common Setting Operations” (p.61).

- Procedure**
1. Select “STR DISP” on the initial editing screen.
  2. Select the field in which the character-string is to be registered in the window and press the  key.
    - " To delete an existing character-string from the field in which it is registered, locate the cursor at that number and press the [F1] (Delete) key.
- Reference:** To “increment copy” an existing character-string numeral table entry into the next input field (incrementing the character-string memory table number), press the [F2] (iCopy) key with the cursor located on that entry (see p.77).
3. Make the necessary settings.
  4. Press the  key with the cursor on “Exec”.
  5. A box that indicates the size of the character-string display will be displayed. Move this box to the required display position and press the  key.

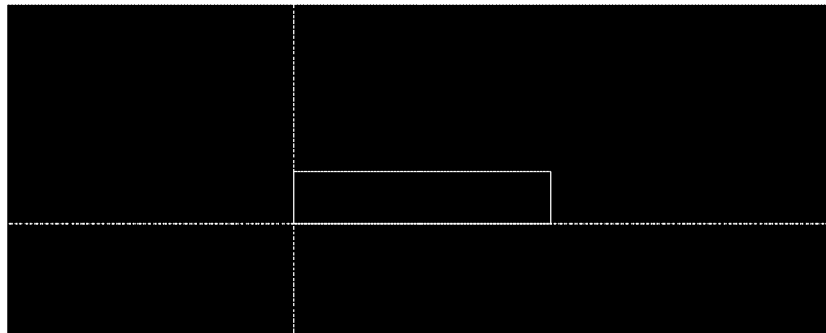

If required, more character-string displays can be set by repeating steps 2. through 5.


To quit character-string display, press the [Esc] key; the display will return to the menu.

**Reference:** If “Yes” is set for “Brkn Line Frame Disp” in the environmental settings (tool settings for the “Edit” screen), the display range for the character-string can be continually monitored on the screen.

## 4-5-2 Modifying Character-String Displays

The contents and position of character-string displays created on the screen can be modified.

- Procedure**
1. Select "STR DISP" on the initial editing screen.
    - " It is also possible to proceed straight to step 3. by left clicking on the character-string display to be modified (see p.57).
  2. In the window, select the entry corresponding to the character-string display to be modified and press the  key.
    - " The character-string display to be modified can also be selected by left-clicking it with the mouse.
  3. Select the required item in the window and execute the modification.

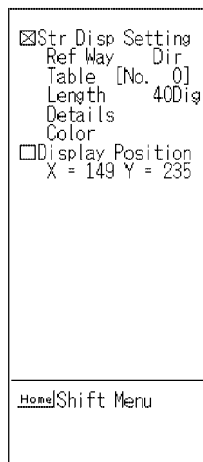

```

Str Disp Setting
Ref Way  Dir
Table [No. 0]
Length 400 Dig
Details
Color
Display Position
X = 149 Y = 235

Home Shift Menu
  
```

S Str Disp Setting: Select to change settings such as the referenced memory table, the scale, and the attribute.

S Display Position: Select to change the display position.

4. Press the [Esc] key to quit modification.

## 4-6 Setting Lamps

This section describes how to create lamp graphics whose display can be controlled from the PC.

The maximum number of lamps that can be set for display on one screen is 64 for the NT20S and NT20M, 128 for the NT600S and NT600M, and 256 for the NT30, NT30C, NT612G, and NT610C.

**Reference:** When lamps are displayed in the same location as numeral table data or character-string memory table data, depending on the timing for lamp lighting and memory table update timing, the lamp and numeral displays may overlap on the screen. Refer to the operation manual for the PT you are using.

### 4-6-1 Setting Lamps

This is the procedure for setting lamps. For details on the display of character-strings and numeric values, setting display colors (NT30C and NT610C), setting numeral tables, and setting words and bits, see 4-2 “Common Setting Operations” (p.61).

By using the “Lamp/TSW Disp Mode” in the environmental settings (tool settings for the “Edit” screen), it is possible to check how lamps appear on the PT during operation by viewing the support tool screen.

#### Setting Normal Lamps

This is the procedure for setting “Normal lamps”, which come on, go off, or flash, in accordance with the status of PC bits.

- Procedure**
1. Select “LAMP” on the initial editing screen.
  2. Select the field in which the lamp is to be registered in the window and press the  key.

S To delete an existing lamp from a field in which it is registered, locate the cursor at that number and press the [F1] (Delete) key.

**Reference:** To “increment copy” an existing lamp entry into the next input field (incrementing the bit number), press the [F2] (iCopy) key with the cursor located in the “Bit” column at that entry. Note that the next input field must also have an entry in it. (See p.77).

3. When using an NT30, NT30C, NT612G, or NT610C with Ver.3 or a later version of the direct connection function, select “Normal” as the lamp type and press the  key.

When using an NT20S, NT20M, NT600S, or NT600M without direct connection, the “Lamp Type Set” is not displayed.

## 4. Make the necessary settings.

S **LampNo. /Bit:** If direct connection is not used, set the lamp number here. If direct connection is used, set the bit (lamp bit) allocated at the PC.

S **Label:** Set the characters (Label) that will be displayed together with the lamp. If this setting is omitted, nothing will be displayed together with the lamp.

S Pressing the [F3] (Mark) key allows marks to be input.

S With the NT30, NT30C, NT612G, and NT610C, pressing [F4] (Image) allows images to be input.

S **Details**

S **Frame:** Specify whether or not a frame is to be displayed around the lamp graphic here.

S **Attribute:** Specify whether the lamp will come on continuously or flash when there is an instruction for it to light from the PC here.

S **Shape:** Specify the graphic used to create the lamp here.  
Four types of graphic can be used: square, circle, polygon, or fan.  
When using an NT20S, NT20M, NT600S, or NT600M, only squares and circles can be used.

S **Color:** Frame color, OFF color, ON color, and flashing color for the lamp (NT30C and NT610C only).

S **Label Det:** Display settings for the Label characters.  
Display attributes and smoothing cannot be specified with the NT20S, NT20M, NT600S, or NT600M. It is not possible to specify a scale of x64 when using an NT20S or NT20M.

S **Label Col:** Specifies the character color and background color of the Label (NT30C, NT610C only).

## 5. Press the key with the cursor on "Exec".


## 6. Create the lamp graphic.

For details on the creation method, see 4-3 "Creating Fixed Displays" (p.80).

7. A box indicating the size of the label will be displayed in the center of the lamp graphic.

Move this box to the required display position and press the  key.

If "No" is set for the "Label" setting in the "Lamp Setting" window, it will not be possible to make this setting.

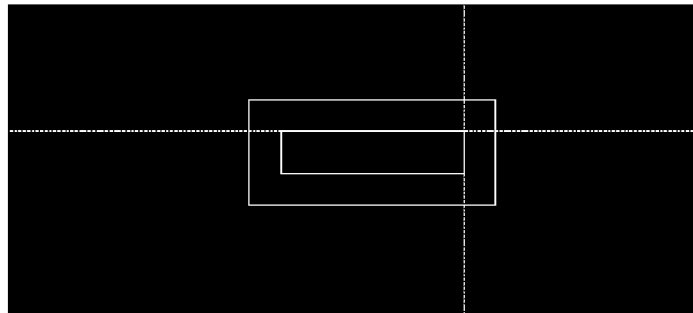

8. The specified label and lamp graphic will be displayed.
9. The screen on which registration fields for lamps can be selected will be displayed.

To create another lamp, select a field.

To quit lamp creation, press the [Esc] key.

#### Setting Image/Library Lamps (NT30, NT30C, NT612G, NT610C, with Ver.2 Direct Connection Only)

This is the procedure for setting image/library lamps, which display different image data or library data according to the status of a PC bit.

When using an NT20S, NT20M, NT600S, or NT600M, when using an NT612G or NT610C and not using direct connection, or when using Ver.1 direct connection, this setting is not possible.

- Procedure**
1. Select "LAMP" on the initial editing screen.
  2. Select the field for lamp registration in the window and press the  key.
    - " To delete an existing lamp from the field in which it is registered, locate the cursor at that field and press the [F1] (Delete) key.

**Reference:** To "increment copy" an existing entry into the next input field (incrementing the bit number), press the [F2] (iCopy) key with the cursor located in the "Bit" column at that entry (see p.77).

3. Select "Image & Lib" as the lamp type and press the  key.

## 4. Make the necessary settings.

S Lamp Bit: Set the allocated bit in the PC.

S Ptot Code: Set the code for the image data or library data that is displayed when the lamp is off (when the PC bit is OFF).

S Press the [F1] (Ref Inpt) key to enable selection of the code from a list display.

S If "0" is specified, nothing will be displayed when the lamp is off.

S Light Code: Set the code for the image data or library data that is displayed when the lamp is on (when the PC bit is ON).

S Press the [F1] (Ref Inpt) key to enable selection of the code from a list display.

S If "0" is specified, nothing will be displayed when the lamp is on.

5. Press the  key with the cursor on "Exec".

6. Specify the display position for the image data or library data that is displayed when the lamp is off, and press the  key.

" If "0" (no display) is set for the code, it is not possible to specify a display position.

7. Specify the display position for the image data or library data that is displayed when the lamp is on, and press the  key.

" If "0" (no display) is set for the code, it is not possible to specify a display position.

8. The screen on which registration fields for lamps can be selected will be displayed.

To create another lamp, select a field.

To quit lamp creation, press the [Esc] key.

4-6-2     Modifying Lamps

It is possible to modify the contents, shape, and position of created lamps.

- Procedure
1. Select “LAMP” on the initial editing screen.

" It is also possible to proceed straight to step 3. by left clicking on the lamp to be modified (see p.57).


2. Select the type of modification from the options in the window (“Lamp Type Set” column) and press the  key.

" It is also possible to select the lamp to be modified by left clicking on it (this applies to displayed lamps only: depending on the setting for “Lamp/Touch Sw Disp Mode” in the environmental settings, image/library lamps may not be visible).


" For “Bit” (lamp bit) and “Label”, direct modification is possible by locating the cursor where the modification is to be made and pressing the  key.

3. Select the type of modification from the options in the window and execute the modification.

For a “Normal lamp”

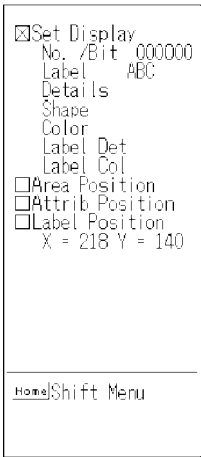

For an “Image & library lamp”

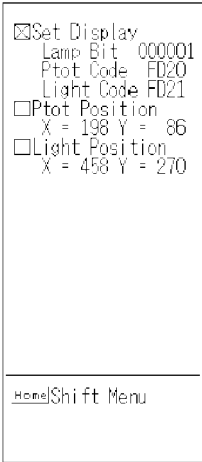

- |                    |                                                                                                                                                  |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| S Set Display:     | Select to modify the item specified in the window during setting.                                                                                |
| S Area Position:   | Select to modify the shape of the lamp graphic.                                                                                                  |
| S Attrb Posiiton:  | Select to change the starting position for tiling when the lamp is on or flashing. This item can only be used when a polygonal lamp is selected. |
| S Label Posiion:   | Select to modify the position at which the label is displayed.                                                                                   |
| S Ptot Position:   | Select to modify the position at which image/library data is displayed when the lamp is off.                                                     |
| S Light Positioin: | Select to modify the position at which image/library data is displayed when the lamp is on.                                                      |

4. Press the [Esc] key to quit modification.

## 4-7 Setting Touch Switches

This section describes how to create touch switch graphics that are displayed on the PT screen and can be used as input switches.

The sensitive area (area that senses being touched) of a touch switch is not set in accordance with the ordinary coordinates but with touch switch elements as the minimum units.

The number of touch switches that can be created for one screen and the size of touch switch elements is determined by the “PT Type” setting, as follows:

| NT Model            | Max. Number per Screen (when using/not using direct connection) | Size of Touch Switch Elements (vert. x hori.) |
|---------------------|-----------------------------------------------------------------|-----------------------------------------------|
| NT20S, NT20M        | 64/72                                                           | 21 x 21 dots                                  |
| NT600S, NT600M      | 128/128                                                         | 50 x 40 dots                                  |
| NT612G              | 256/256                                                         | 25 x 20 dots                                  |
| NT30, NT30C, NT610C | 256/256                                                         | 20 x 20 dots                                  |

A grid that matches the size of the touch switch elements can be set by pressing the [F1] (Tch Sw) key while the cursor is located on “Grid Display X Width” and “Grid Display Y Width” in the environmental settings.



### WARNING

Do not use the PT touch switch function for applications where there is any danger to human life or possibility of serious damage, or for an emergency stop switch function.



The same operations are used for both the NT610C and NT612G, with the exception of color specification.

## 4-7-1 Setting Touch Switches

This is the procedure for setting touch switches.

Touch switches can have the following functions, depending on the settings for “PT Type” and “Direct Access”:

| Function             |                | NT20S, NT20M, NT600S, NT600M |       |       | NT612G, NT610C | NT30/C, NT620S/C | Remarks                                                                                    |
|----------------------|----------------|------------------------------|-------|-------|----------------|------------------|--------------------------------------------------------------------------------------------|
|                      |                | None                         | Ver.4 | Ver.5 | Ver.3          | Ver.4            |                                                                                            |
| Input notification   |                | n                            | n     | n     | f              | f                | n: ON/OFF only                                                                             |
| Screen switching     |                | n1                           | n2    | n2    | f              | f                | n1: Standalone function<br>n2: No return key                                               |
| Input keys           | Character keys | x                            | x     | x     | f              | f                | –                                                                                          |
|                      | Window keys    | x                            | x     | x     | n              | f                | n: Can only be used during character-string setting                                        |
|                      | Control keys   | n1                           | n2    | n2    | f              | f                | n1: Input notification keys with specific numbers<br>n2: Numeric keys and system keys only |
| Copy setting         |                | x                            | x     | x     | f              | f                |                                                                                            |
| Cursor motion        |                | x                            | x     | x     | f              | f                | f: Window keys can also be set.                                                            |
| Print screen setting |                | x                            | x     | x     | f              | f                | Cannot be used with NT612G                                                                 |

S Input Notification: Notifying the PC that a touch switch has been pressed.

[NT20S, NT20M, NT600S, NT600M, direct connection not used]

☐ Function  
☐ Noti/Scrn No. [ ] ( )  
☒ No. /Lamp Bit [ 0 ] ( 0to255 )

[NT612G, NT610C, direct connection not used]

☒ Noti Bit [ ] ( )  
☐ Act Type ☒ Moment ☐ Altnat ☐ Set ☐ Rset  
 F1 Ref Inpt

[NT20S, NT20M, NT600S, NT600M, with Ver.4]

☒ Noti Bit [ ] ( )  
☐ Act Type ☐ Moment ☐ Altnat ☐ Set ☐ Rset  
 F1 Ref Inpt

[NT20S, NT600S, with Ver.5]

[NT30, NT30C, NT612G, NT610C, with Ver.3 or later]

SwScreen No. [ ]

|             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S Noti Bit: | Specify the PC bit that is notified that the touch switch has been pressed here (only when direct connection is used).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| S No.:      | Specify the number used to notify that a touch switch has been pressed, or to control the touch switch on/off (flashing) status (used only when direct connection is not used).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| S Lamp Bit: | Specify the bit in the PC that controls the on/off (flashing) status of the touch switch (used only when direct connection is used).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| S Comment:  | Input a memo here, for example one that indicates the purpose of use.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| S Act Type: | <p>Specify the effect of pressing the touch switch here.</p> <p>When using an NT20M or NT600M, or an NT20S or 600S with Ver.5 direct connection, or using an NT612G or NT610C and not using direct connection, or using Ver.1 direct connection, setting is not possible and the setting is fixed as "Moment".</p> <p>Moment: The PC bit comes ON when the touch switch is pressed and goes OFF when it is released.</p> <p>Altnat: Each time the touch switch is pressed the status of the PC bit (ON/OFF) is changed to the opposite status.</p> <p>Set: The PC bit is switched ON when the touch switch is pressed.</p> <p>Rset: The PC bit is switched OFF when the touch switch is pressed.</p> |

**Reference:** Specification of notify bits and input of I/O comments is possible by using either the input notification window or the touch switch setting screen.

S Screen Switching: Switching to a specified screen when the touch switch is pressed.

[NT20S, NT600S]

[NT20M, NT600M with Ver.4]

[NT30, NT30C, NT612G, NT610C,  
Ver.3 or later]

SwScreen No. [1]

Cnfr Abrt

SwScreen No. [0]

( 0 = Screen Pop )

Cnfr Abrt

If using an NT20M or NT600M and not using direct connection, set screen switching by using the “standalone” function (p.150).

SwScreen No.: Specify the screen number of the screen to be displayed here. When using an NT30, NT30C, NT612G, or NT610C with Ver.3 or a later version, if “0” is specified the display will return to the screen that was displayed before the current one.

**Reference:** Screen switching numbers can be specified using either the screen switching window or the touch switch setting screen.

S Character keys: Used as input keys when setting character-strings. A character-string that is the same as the label on the touch switch is input when the touch switch is pressed. These keys can only be used when using an NT30, NT30C, NT612G, or NT610C with Ver.3 or a later version of the direct connection function.

S Window keys:

When one of these touch switches is pressed, the specified window is opened or closed. These keys can only be used when using an NT30, NT30C, NT612G, or NT610C with Ver.3 or a later version of the direct connection function. (With Ver.3 they can only be used for character-string settings.)

[NT612G, NT610C with Ver.3]

[NT30, NT30C, NT612G, NT610C with Ver.4]

☒Keybd/Window Screen No. [1900]  
( 1900to1979 )

☐Type ☐Open ☐Close ☐Open/Close

[ Cnfm ] [ Abrt ]

☒Keybd/Window Screen No. 1900  
( 1900to1979 )

☐Type    ☒Open    ☐Close    ☐Open/Close

Cnfm    Abrt

Window Screen No.: Specify the screen number of the window to be called here.

Type: Specify the operation when the touch switch is pressed here. When using Ver.3, the setting is fixed as “open”.

|       |                                 |
|-------|---------------------------------|
| Open: | The specified window is opened. |
|-------|---------------------------------|

Close:                      The open window is closed.

**Open/Close:** Any open window is closed and the specified window is opened. If the specified window is already open, it is closed.

S Control keys:

Used as numeric keys and system keys in numeral setting.

[NT20S, NT20M, NT600S, NT600M, with Ver.4 or Ver.5]

[NT30, NT30C, NT612G, NT610C]

Ctrl Key Selct

|    |    |     |   |   |     |   |   |      |      |
|----|----|-----|---|---|-----|---|---|------|------|
| Q  | 1  | 2   | 3 | 4 | 5   | 6 | 7 | 8    | 9    |
| A  | B  | C   | D | E | F   | G | H | I    | HOME |
| ↑  | ↓  | ←   | → | ↵ | ⌂   | ↑ | ↓ | MENU |      |
| CA | BS | DEL | ◀ | ▶ | ENT | ▲ | ▼ | ▲    | ▼    |

Confm Abrt

When using an NT20S, NT20M, NT600S, or NT600M, the control keys are specified with touch switch numbers 231 to 255.

When using an NT20S, NT20M, NT600S, or NT600M with Ver.4 or Ver.5 of the direct connection function, or an NT30, NT30C, NT612G, or NT610C, select the numeric keys and system keys to be allocated to touch switches.

However, the last four items in the third row can only be selected when using an NT30, NT30C, NT612G, or NT610C, and the control keys in the bottom row can only be selected when using an NT30, NT30C, NT612G, or NT610C with Ver.3 or a later version of the direct connection function.

The touch switch control keys have the following functions:

| Key                                                                               | Number     | Function                                                                                                                                                        |
|-----------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0 to 9, A to F                                                                    | 231 to 246 | Used to input numerical values                                                                                                                                  |
| CLR                                                                               | 247        | Clears input numerical values and character-strings                                                                                                             |
| ±                                                                                 | 248        | Assigns the opposite sign to input numerical values                                                                                                             |
| .                                                                                 | 249        | Used to input a decimal point                                                                                                                                   |
| HOME                                                                              | 250        | Used to move to the input field at the top left of the screen                                                                                                   |
|                                                                                   | 251        | Used to move to the next input field up (Y direction)                                                                                                           |
|                                                                                   | 252        | Used to move to the next input field down (Y direction)                                                                                                         |
|                                                                                   | 253        | Used to move to the input field to the left (X direction)                                                                                                       |
|                                                                                   | 254        | Used to move to the input field to the right (X direction)                                                                                                      |
|  | 255        |  system key (confirms character input without shifting to another input field) |
|  | 256        |  system key (stops the buzzer)                                                 |
| ↑ , ↓                                                                             | 257, 258   | ↑ and ↓ system keys (screen switching of continuous screens, shifting to input fields in the order in which they were registered with the support tool)         |
| MENU                                                                              | 259        | System keys  + ↑ + ↓ (system menu display)                                     |
| CA                                                                                | –          | Used to cancel input (Cancel)                                                                                                                                   |
| BS                                                                                | –          | Deletes the numeral or character immediately preceding the input cursor                                                                                         |
| DEL                                                                               | –          | Deletes the numeral or character at the input cursor location                                                                                                   |
| A, "                                                                              | –          | Used to shift the input cursor                                                                                                                                  |
| ENT                                                                               | –          | Confirms input of a character (after confirmation, the cursor shifts to the next input field)                                                                   |
| ⬆ ⬇                                                                               | –          | Alarm list/history display page scrolling                                                                                                                       |
| Y, B                                                                              | –          | Alarm list/history line scrolling                                                                                                                               |

#### S Copy Setting:

When a touch switch is pressed, the contents of a memory table, or a code, are copied to the input field (cursor position) for a memory table or numeral/character-string setting. This function is only available when using an NT30, NT30C, NT612G, or NT610C with Ver.3 or a later version of the direct connection function.

☐ Copy From ☒ Num Tbl ☐ String Tbl ☐ Code  
☐ No./Fixed [No. 0]

☒ Copy To ☒ Num Tbl ☐ String Tbl ☐ Crs Posi  
☐ Crsr Posi [No. 0]

Copy From: Specify the type of copy source here.



**S Print Screen Setting:** When a touch switch is pressed, printing of the displayed screen is started or suspended. This function is only available when using an NT30, NT30C, NT612G, or NT610C with Ver.2 or a later version of the direct connection function.

☒ Start   ☐ Abort


**Reference:** The type of printer used (EPSON Esc/P printer (24 pin)) and the printing method when using an NT30C or NT610C (color, grayscale) are set using the memory switches on the PT body (see p.28).

The following eight types of display area can be specified for touch switches. However, note that the shapes that can be used depend on the settings made for “PT Type” and “Direct Access”, as shown below:

| Display Area | NT20S, NT20M,<br>NT600S,<br>NT600M | NT612G         | NT30, NT30C,<br>NT610C |
|--------------|------------------------------------|----------------|------------------------|
|              |                                    | Ver.3 or later | Ver.3 or later         |
| Normal       | f                                  | f              | f                      |
| Solid 1      | f                                  | f              | f                      |
| Solid 2      | x                                  | x              | f                      |
| None         | f                                  | f              | f                      |
| Square       | x                                  | f              | f                      |
| Circle       | x                                  | f              | f                      |
| Polygon      | x                                  | f              | f                      |
| Fan          | x                                  | f              | f                      |

f : Can be used   x : Cannot be used

In the case of squares, circles, polygons and fans, the sensitive area (the area that senses being touched) and display area (the area that lights, goes off, or flashes in accordance with the status of the PC bit) can be specified separately.

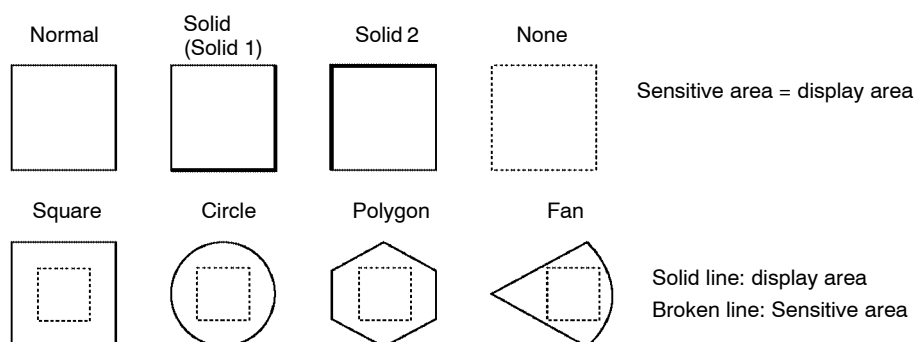

For details on the display of character-strings and numeric values, setting display colors (NT30C and NT610C), setting numeral tables, and setting words and bits, see 4-2 “Common Setting Operations” (p.61).

By using the “Lamp/TSW Disp Mode” function in the environmental settings (tool settings for the “Edit” screen), it is possible to check how touch switches appear on the PT during operation by viewing the support tool screen.


- Procedure**
1. Select “TOUCH SW” on the initial editing screen.
  2. Select the field in which the touch switch is to be registered in the window and press the  key.
- ” To delete an existing touch switch from the field in which it is registered, locate the cursor at that field and press the [F1] (Delete) key.

**Reference:** S To “increment copy” an existing touch switch into the next input field (incrementing the bit number), press the [F2] (iCopy) key with the cursor located in the “Bit” column at that entry. Note that the next input field must also have an entry in it. (See p.77).

S Pressing the [Space] (open) key with the cursor located on the field of a created window key will open the window that the key specifies. A window opened in this way can be closed by returning to the initial editing menu and pressing the [Tab] (redisplay) key.

S The notify bit display can be changed to a lamp bit display either by pressing the [Insert] key or by clicking on the word “Bit” with the mouse. While the lamp bit display is used, “Bit” is displayed.

3. Make the necessary settings.

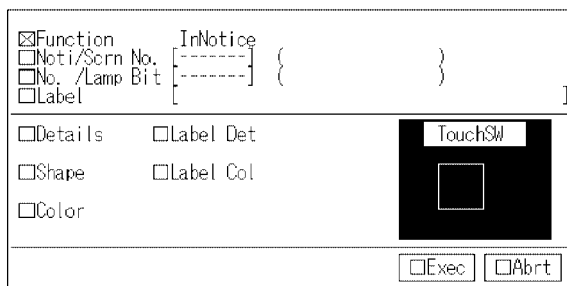

S **Function:** On selecting the touch switch function and pressing , the window for that touch switch function will be displayed, allowing the appropriate settings to be made. However, specific windows will not be displayed for the following:

S Input notification when not using direct connection

S Character keys (NT30, NT30C, NT612G, NT610C used with Ver.3 or later version only)

S Control keys when using an NT20S, NT20M, NT600S, or NT600M and not using direct connection

S **Noti/Scrn No.:**

If not using direct connection, set the screen number of the screen displayed when the touch switch is pressed. If using direct connection, set the PC bit used to notify the fact that the switch has been pressed.

## S No. /Lamp Bit:

If not using direct connection, set the touch switch number. If using direct connection, set the PC bit that controls the ON, OFF, or flashing state of the touch switch (lamp bit).

## S Label:

Set the characters (label) that will be displayed together with the touch switch. If this setting is omitted, nothing will be displayed together with the touch switch.

S Pressing the [F3] (Mark) key allows marks to be input.

S With the NT30, NT30C, NT612G, and NT610C, pressing [F4] (Image) allows images to be input.

## S Details

|                                             |                                           |                                |
|---------------------------------------------|-------------------------------------------|--------------------------------|
| <input checked="" type="checkbox"/> Inverse | <input checked="" type="checkbox"/> Yes   | <input type="checkbox"/> No    |
| <input type="checkbox"/> Attribute          | <input checked="" type="checkbox"/> Light | <input type="checkbox"/> Flash |


S Inverse: Specifies whether the graphic will be inverted when there is input on the PT screen.

[Normal, solid 1, square, circle, polygon, fan]

Other than NT30C and NT610C: Becomes inverted

NT30C, NT610C: Assumes the ON color

 [Solid 2] (NT30, NT30C, NT610C only)



S Attribute: Specify ON display or flashing display.

When using an NT20S, NT20M, NT600S, or NT600M, the setting is fixed as “ON display” and cannot be specified.

S Shape: Specifies the type of touch switch display area.

S Color: Specifies the frame color, OFF color, ON color (inverted color when ON) and flashing color (NT30C, NT610C only).

## S Label Det:

Set the label display settings.

Display attributes and smoothing cannot be specified with the NT20S, NT20M, NT600S, or NT600M. It is also not possible to specify a scale of x64 when using an NT20S or NT20M.

## S Label Col:

Specifies the character color and background color of the “Label” (NT30C, NT610C only).

4. Press the  key with the cursor on “Exec”.

5. If “square”, “circle”, “polygon”, or “fan” was specified for the shape of the display area, create the graphic.

For details on how to create the graphic, see 4-3 “Creating Fixed Displays” (p.80).

6. Create the sensitive area for the touch switch.

Specify the start point and end point by using the  cursor.

7. The specified label and touch switch graphic will be displayed.

8. The screen on which registration fields for touch switches can be selected will be displayed.

To create another touch switch, select a field.

To quit touch switch creation, press the [Esc] key.

## 4-7-2 Modifying Touch Switches

The contents, shape, and position of a touch switch created on the screen can be modified.

- Procedure** 1. Select "TOUCH SW" on the initial editing screen.


" It is also possible to proceed straight to step 3. by left clicking on the touch switch to be modified (see p.57).

2. Select the touch switch to be modified in the window ("Func" field) and press the  key.

" It is also possible to select the touch switch to be modified by left clicking on it.

" For "Bit" (notify bit) and "Label", direct modification is possible by locating the cursor where the modification is to be made and pressing the  key.

3. Select the type of modification from the options in the window and press the  key.

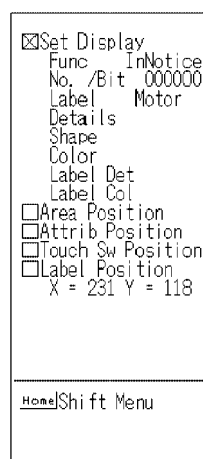

A screenshot of a menu for modifying touch switches. The menu is enclosed in a rectangular box. At the top, there is a checked checkbox next to the text "Set Display". Below this, several fields are listed: "Func" with the value "InNotice", "No. /Bit" with the value "000000", "Label" with the value "Motor", "Details", "Shape", "Color", "Label Det", and "Label Col". Below these fields, there are four unchecked checkboxes: "Area Position", "Attrib Position", "Touch Sw Position", and "Label Position". At the bottom of the menu, the coordinates "X = 231 Y = 118" are displayed. Below the menu box, there is a horizontal line, and below that, the text "Home Shift Menu" is visible.

- |                      |                                                                                                                                                                      |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S Set Display:       | Select to change the function.                                                                                                                                       |
| S Area Position:     | Select to change the frame of the display area.                                                                                                                      |
| S Attrib Position:   | Select to change the tiling start position when the touch switch is lit or flashing.<br><br>This option is only displayed when a polygonal touch switch is selected. |
| S Touch Sw Position: | Select to change the sensitive area. The location of the modification (start point/end point) can be changed by pressing the [Esc] key.                              |
| S Label Position:    | Select to change the display position of the label.                                                                                                                  |
4. Press the [Esc] key to quit modification.

## 4-8 Creating Graphs

This section describes how to create graphs whose display corresponds to the numeric values in numeral memory tables. There are the following three types of graph.


When using an NT20S, NT20M, NT600S, NT600M, or NT612G, only bar graphs can be used.

S Bar graph: Numeral table contents are displayed in the form of a bar graph.





S Trend graph: Numeral table contents that change with time are displayed in the form of broken lines.

Trend graphs can only be used when using an NT30, NT30C, NT612G or NT610C with Ver.3 or a later version of the direct connection function.

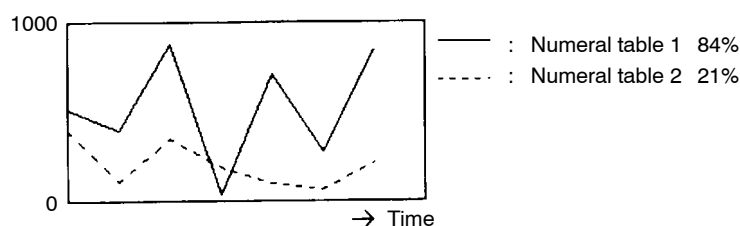

S Broken line graph: The contents of several consecutive numeral tables are displayed in the form of a broken line. The display intervals can be changed without restriction.

Broken line graphs can only be used when using an NT30, NT30C, NT612G or NT610C with Ver.3 or a later version of the direct connection function. If using Ver.3 or later, the display intervals can be changed without restriction.

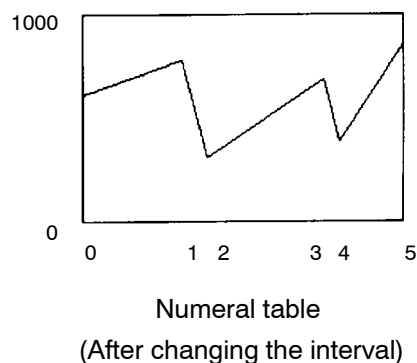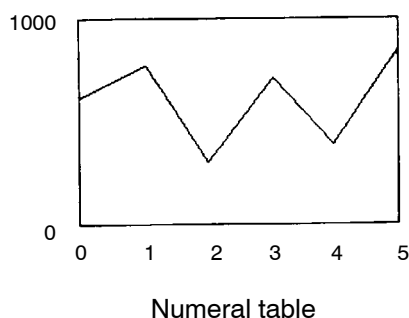

4-8-1     Setting Graphs

These are the procedures for setting graphs. For details on the display of character-strings and numeric values, setting display colors (NT30C and NT610C), setting numeral tables, and setting words and bits, see 4-2 “Common Setting Operations” (p.61).

Setting Bar Graphs

A maximum of 50 bar graphs can be set for display on one screen.  
When using an NT600S or NT600M, it is not possible to create bar graphs with a width of greater than 256 dots.

- Procedure
1. Select “GRAPH” from the initial editing screen.

2. If using an NT30, NT30C, NT612G or NT610C with Ver.3 or a later version of the direct connection function, select “BAR GRAPH” from the graph menu and press the  key.

If you are using an NT20S, NT20M, NT600S, or NT600M, the graph menu will not be displayed.

3. Select the field in which the bar graph is to be registered in the window and press the  key.

" To delete an existing bar graph from the field in which it is registered, locate the cursor at that field and press the [F1] (Delete) key.
- Reference:** To “increment copy” an existing entry into the next input field (incrementing the numeral memory table number), press the [F2] (iCopy) key with the cursor located on that entry. Note that there must also be an entry in the next input field. (See p.77).
4. Make the necessary settings.
- ☒Ref Way

☐Ref Table

☐100% Val

☐0% Val

☐-100% Val

☐Display %

☐Direct

[No. 0]

☒Fix Num

☐Num Table[

100]

☒Fix Num

☐Num Table[

0]

☒Fix Num

☐Num Table[

-100]

☒Yes

☐No

☐Details

☐Color

☐% Disp Det

☐% Col Set

BAR GRPH

0%

☐Exec

☐Abt

- S Ref Way:

Specify the method used to reference the memory table used for the display here.


" This item can only be set when using direct connection. Only the “Direct” setting is valid. Do not select “Indrct”.

- S Ref Table:

Specify the number of the memory table to be referenced here.  
  
Pressing the [F1] (Lst Slct) key enables selection from a memory table list.
- S 100% Val
- S 0% Val
- S -100% Val:

Specify the reference methods for 100%, 0%, and -100% values. If “Num Table” is specified, specify the numeral table number.  
  
If not using an NT30, NT30C, NT610G, or NT610C and Ver.2 or a later version of the direct connection function, only the “Fix Num” setting for the 100% value is valid.  
  
When “Num Table” is specified, pressing the [F1] (Lst Slct) key enables the memory table to be selected from a displayed list.
- S Display %:

Specify whether or not a percentage value is displayed on the screen.
- S Details

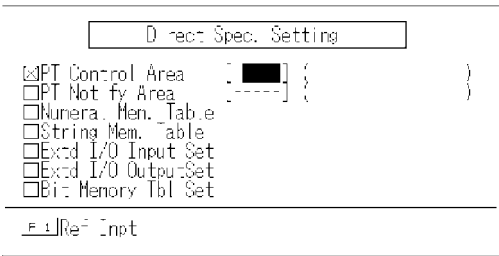

- S Direction:

Specify the orientation of the bar (up, down, right, left) here.
- S Frame:

Specify whether or not a graph frame is displayed here.
- S Dsp Sign:


Specify whether or not a minus sign is to be displayed in the case of negative values here. If “Yes” is specified, the center of the graph area is displayed at the origin to allow the display of negative values.
- S Color:

Specify the display color of the bar graph when it shows positive values and the display color when it shows negative values (NT30C, NT610C only).
- S % Disp Det:

Set the label display settings.  
  
Display smoothing cannot be specified with the NT20S, NT20M, NT600S, or NT600M. It is also not possible to specify a scale of x64 when using an NT20S or NT20M.
- S % Col Set:

Specifies the character color and background color of the “%” character (NT30C, NT610C only).

5. Press the  key with the cursor on "Exec".
6. Locate the cursor at the start point of the bar graph frame and press the  key. The bar graph will be created as a rectangular graphic. Graphics oriented either vertically or horizontally can be created.
7. A box that indicates the size of the percentage display will be displayed.  
Move this box to the required display position and press the  key.  
If "No" is set for "Display %", this box is not displayed.
8. The specified percentage display and bar graph will be displayed.
9. The screen on which registration fields for bar graphs can be selected will be displayed.  
To create another bar graph, select a field.  
To quit bar graph creation, press the [Esc] key.

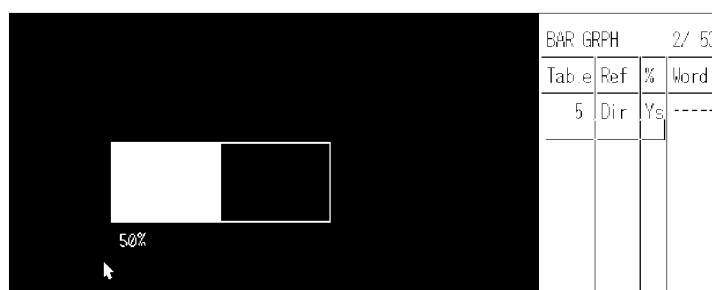

### Setting Trend Graphs (NT30, NT30C, NT612G, or NT610C with Ver.3 or later only)

One trend graph frame can be created per screen, and up to 50 broken lines can be set within this frame.

- Procedure**
1. Select "GRAPH" from the initial editing screen.  
The graph menu will be displayed.
  2. Select "TREND GRAPH" from the graph menu.  
" If there is already a trend graph, the screen for selecting the field for registration is displayed. Selecting an empty field allows you to proceed to step 7.
  3. Locate the cursor at the start point for the trend graph frame and press the  key.  
Trend graphs are created as rectangular graphics. They can be oriented either vertically or horizontally.
  4. Locate the cursor at the end point of the trend graph frame and press the  key.

5. Set the basic settings for the trend graph as required.

☒Type

☐Dw Width

☐Smplng Cycl

☐Mv Direct

☒Normal

[ 1]

1)x0.1sc (1to65535)

☒Rt

☐Up

☐Lf

☐Dn

☐Pen Reco

(1to640)

 
☐Lf

☐Dn

☐Detail Info

☐Color

TREND GRPH



☐Exec

☐Abt

- S Type:

Specify the type of trend graph.

Normal: The graph remains in a fixed position and successive points in the graph are drawn in the “Mv Direction”.

Pen Reco: The latest point is always drawn at a fixed position and the entire graph moves in the “Mv Direction”.
- S Dw Width:

Specify the direction in which the broken line moves with time here.
- S Sampling Cycl:

Specify the cycle in which the graph is rewritten in 0.1 second units (range: 1 to 65535 = 0.1 to 6553.5 seconds)
- S Mv Direct:

Specify the direction in which the broken lines move with time.
- S Details

☒Frame

☐Disp Sign

☒Yes

☐No

☐Yes

☒No

- S Frame:

Specify whether or not a graph frame is displayed.

If “No” is specified here only the broken lines within the graph are displayed.
- S Dsp Sing:

Specify whether or not a minus sign is to be displayed in the case of negative values here. If “Yes” is specified, the center of the graph area is displayed at the origin to allow the display of negative values.
- S Color:

Specify the graph’s frame color, the color of the positive area inside the frame, and the color of the negative area inside the frame (NT30C, NT610C only).

6. Press the  key with the cursor on “Exec”.

7. Set the required display settings for the trend graph.  
These settings have to be made for each broken line.

☒Ref Way

☐Ref Table

☐100% Val

☐0% Val

☐-100% Val

☐Display %

☐Direct

[No, 0]

☐Fix Num

☐Fix Num

☐Fix Num

☐Yes

☐Indrct

☐Num Table[ 100]

☐Num Table[ 0]

☐Num Table[ -100]

☐No


☐Line

☐Line Col

☐% Disp Det

☐% Col Set

TREND GRPH

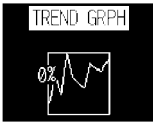

- S Ref Way:

Specify the method used to reference the memory table used for the display here.  
Only the “Direct” setting is valid. Do not specify the “Indrct” setting.
- S Ref Table:

Specify the number of the memory table to be referenced here.  
Pressing the [F1] (Lst Slct) key enables selection from a memory table list.
- S 100% Val:
- S 0% Val:
- S -100% Val:

Specify the reference methods for 100%, 0%, and -100% values. If “Num Table” is specified, specify the numeral table number.  
Pressing the [F1] (Lst Slct) key while “Num Table” is specified allows the memory table to be selected from a displayed list.
- S Display %:

Specify whether or not a percentage value is displayed on the screen.
- S Line:

Specify the line type for the broken lines.  
(Sold Lin, Brkn Lin, 1 Dot Chn, 2Dot Chn)
- S Line Col:


Specify the display color of the broken lines (NT30C, NT610C only).
- S % Disp Det:

Specify the label display settings.  
Display attributes and smoothing cannot be specified with the NT20S, NT20M, NT600S, or NT600M. It is also not possible to specify a scale of x64 when using an NT20S or NT20M.
- S % Col Set:

Specifies the character color and background color of the “%” character (NT30C, NT610C only).

8. Press the  key with the cursor on "Exec".
9. A box that indicates the size of the percentage display will be displayed.  
Move this box to the required display position and press the  key.  
If "No" is set for "Display %", this box is not displayed.
10. The specified percentage display and trend graph will be displayed.
11. The screen on which registration fields for trend graphs can be selected will be displayed.  
To create another trend graph, select a field.  
Further broken lines can be added by repeating the operation from step 7.  
To quit trend graph creation, press the [Esc] key.

**Reference:** S If a broken line extends beyond the frame, only the part contained by the frame will be displayed, as shown below.

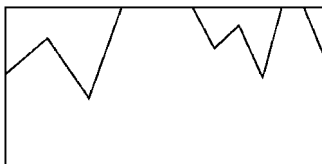

S Each time the [Tab] key is pressed, the graph display changes.

### Setting Broken Line Graphs (NT30, NT30C, NT612G, NT610C with Ver.3 or Later)

No more than one frame for a broken line graph can be created per screen; up to 256 broken lines can be set within this frame. Each broken line can display the data in up to 512 numeral tables. Broken line graph frames can be set for screen (maximum of eight) in an overlapping screen but in this case that the total number of broken lines for the overlapping screen as a whole cannot exceed 256.

- Procedure**
1. Select "GRAPH" from the initial editing screen.  
The graph menu will be displayed.
  2. Select "BRK-LIN GRAPH" from the graph menu.  
" If there is already a broken line graph (or graphs), the screen for selecting the field in which the broken line graph is to be registered is displayed. Select an empty field to proceed to step 7.
  3. Locate the cursor at the start point for the broken line graph frame and press the  key.  
Broken line graphs are created as rectangular graphics. They can be oriented either vertically or horizontally.
  4. Locate the cursor at the end point of the broken line graph frame and press the  key.

5. Set the basic settings for the broken line graph as required.

☒Mv Direct

☒Rt

☐Up

☐Lf

☐Dn

☐Detail Info

☐Color

BRKLN GRPH



☐Exec

☐Abrt

S Mv Direct:

Specify the direction in which the broken line is to be drawn in accordance with the ascending order of memory table numbers here.

S Detail Info

☒Frame

☐Disp Sign

☒Yes

☐Yes

☐No

☒No

S Frame:

Specify whether or not a graph frame is displayed.  
If “No” is specified here only the broken lines within the graph are displayed.

S Disp Sign:

Specify whether or not a minus sign is to be displayed in the case of negative values here. If “Yes” is specified, the center of the graph area is displayed at the origin to allow the display of negative values.

S Color:

Specify the graph’s frame color, the color of the positive area inside the frame, and the color of the negative area inside the frame (NT30C, NT610C only).

6. Press the  key with the cursor on “Exec”.
7. Set the required display settings for the broken line graph.
- These settings have to be made for each broken line.

☒Ref Table

☐Points

☐100% Val

☐0% Val

☐-100% Val

[No, 0]

[ 2] (2to512)

☒Fix Num

☐Num Table

☒Fix Num

☐Num Table

☒Fix Num

☐Num Table

100

 
0

-100

☐Line

☐Line Col

BRKLN GRPH



F1]Lst Slet


☐Exec

☐Abrt

- S Ref Table: Specify the memory table number from which reference is to be started here.
- Pressing the [F1] (Lst Slct) key allows the memory table to be selected from a list.
- S Points: Specify the number of vertices in the broken line.
- The contents of a number of numeral tables equivalent to this number and starting with the "reference start table" will be displayed in the form of a broken line.
- S 100% Val:
- S 0% Val:
- S -100% Val: Specify the reference methods for 100%, 0%, and -100% values. If "Num Table" is specified, specify the numeral table number.
- Pressing the [F1] (Lst Slct) key while "Num Table" is specified allows the memory table to be selected from a displayed list.
- S Line: Specify the line type for the broken lines.
- (Solid line, broken line, 1-dot chain, 2-dot chain)
- S Color: Specify the display color for the broken lines (NT30C and NT610C only).

8. Press the  key with the cursor on "Exec".
  9. The screen on which registration fields for broken line graphs can be selected will be displayed.
- To create another broken line graph, select a field.
- Further broken lines can be added by repeating the operation from step 7.
- To quit broken line graph creation, press the [Esc] key.

**Reference:** S If a broken line extends beyond the frame, only the part contained by the frame will be displayed, as shown below.

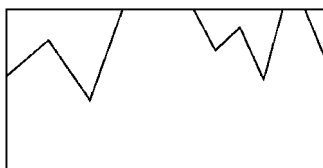

- S Each time the [Tab] key is pressed, the graph display changes.

4-8-2     Modifying Graphs

The contents and position of a graph created on the screen can be modified.

**Reference:** When using an NT30, NT30C, NT612G, or NT610C and Ver.3 or a later version of the direct connection function, the interval between the vertices in a broken line graph can be changed as required during modification.

- Procedure**
1.    Select “GRAPH” on the initial editing screen.

The graph menu will be displayed.

"    It is also possible to proceed straight to step 4. by left clicking on the graph to be modified (see p.57).

2.    Select the type of graph to be modified from the graph menu and press the  key.

3.    Select the graph to be modified in the window and press the  key.

"    To delete a graph that has already been set, locate the cursor at the field for that graph and press the [F1] (Delete) key.

Batch deletion of trend graphs and broken line graphs in frame units is possible by pressing the [F2] (All delete) key. Pressing the [F10] (Basic) key allows modification of the basic settings.

4.    Select the required item and execute the modification.

For details on the meanings of each of the items, refer to the sections describing the creation of each of the graph types.

Bar graph

☒Bar Graph Setting

Ref Way    Dir

Table [No.005]

100% Val    Fixd

0% Val    Fixd

-100% Val    Fixd

Display %    Yes

Details

Color

% Disp Det

% Col Set

☐Display Position

☐% Disp Position

X = 129 Y = 193

Home|Shift Menu

Trend graph  
basic settings

☒Display Position

☐Trnd Grph Bsc Set

Type    Norm

Mv Direct    Rt

Dw Width [ 1]

Smplng Cycl [ 1]

Detail Info

Color

Home|Shift Menu

Trend graph

☒Trnd Grph Setting

Ref Way    Dir

Table [No.000]

100% Ref    Fixd

0% Ref    Fixd

-100% Ref    Fixd

Display %    Yes

Line

Line Col

% Disp Det

% Col Set

☐% Disp Position

X = 251 Y = 229

Home|Shift Menu

Broken line graph  
basic settings

☒Display Position

☐Brk-Lin Bsc Set

Mv Direct    Rt

Detail Info

Color

Home|Shift Menu

Broken line  
graph

☒Brk-Lin Disp Set

Ref Start Tbl

Table [No.000]

Points [ 2]

100% Ref    Fixd

0% Ref    Fixd

-100% Ref    Fixd

Line

Line Col


☐Brk-Lin Intv Set

Home|Shift Menu

## S “Brkn-Line Grph Intv” setting

Used to change the interval between vertices in a broken line graph.

Use the space key to assign and delete marks. Vertices will be displayed at the locations where marks have been assigned. Always assign a number of marks equal to the number of vertices (if the numbers of vertices and marks do not the same, interval setting cannot be completed).

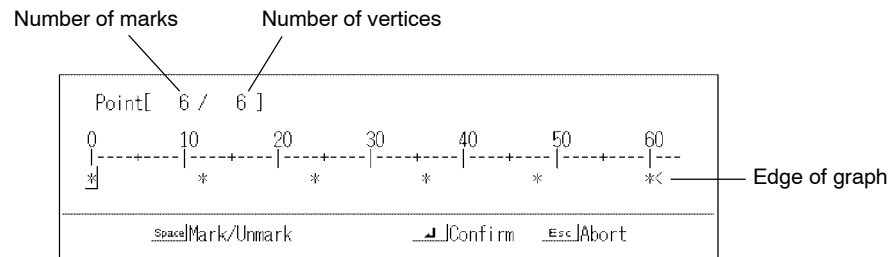

Use the [ ]/[ ] keys to move to the location where a mark is to be assigned and the [Page Up]/[Page Down] keys to shift the display range to the left or right.

Press the  key to quit interval setting.

5. Press the [Esc] key to quit modification.

## 4-9 Creating Input Settings

This section describes how to create the “numeral setting” and “character-string setting” input fields required to input numeric values and character-strings from a touch panel or extended I/O unit.

### What is a “Numeral Setting”?

Once a numeral setting input field has been created, it is possible to input numeric values from touch switches or extended I/O units.

The touch switches used to input numeric values (numeric keys) can be arranged without restriction on the screen. See “Creating Numeric Keys” (p.136).

There are the following two types of input for numeral settings.

The thumbwheel type can only be used with the following combinations of PT model and direct connection version.

§ NT20S or NT600S with Ver.5

§ NT30 or NT30C with Ver.4

§ NT612G or 610C with Ver.3

**Reference:** When not using direct connection, the touch switch or extended I/O unit is selected in accordance with the screen bit input attribute.

When not using direct connection, the correspondence between extended I/O unit input terminals and numeric keys is fixed. Refer to the operation manual for the PT you are using.

§ Numeric keys: Used to input numeric values into input fields as if using an electronic calculator.



 
§ Thumbwheel: There is a plus/minus touch switch for each digit of the numeric value and the value is input in one digit units (input from an extended I/O unit is not possible). This function is only available when using an NT20S or NT600S with Ver.5 of the direct connection function, or an NT30, NT30C, NT612G, or NT610C with Ver.3 of the direct connection function.

The switches come in three sizes, as shown below.

With thumbwheel setting, if “Yes” is set for “Disp Sign”, the maximum number of digits in the numeric value is reduced to 7.

When using an NT20S, only “small” and “medium” can be used, and when using an NT600S, only “medium” can be used.


Small



Medium



Large

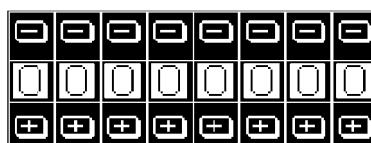

### What is a “Character-string Setting”?

Once a character-string setting has been created, the label that appears on a touch switch can be input as a character-string with one press of the switch.


In addition, if several window screens (keyboard screens) – which each comprise a group of related touch switches – are created, the windows required for specific purposes can be displayed whenever necessary, allowing various types of input.

Windows can be created in screen numbers 1900 through 1979 and can be displayed by pressing touch switches that have been set as “window keys”.

Character-string settings and window displays can only be used when using an NT30, NT30C, NT612G, or NT610C with Ver.3 or a later version of the direct connection function.

**Reference:** Character-string setting and keyboard display is only possible when using direct connection.

Character-string setting screen

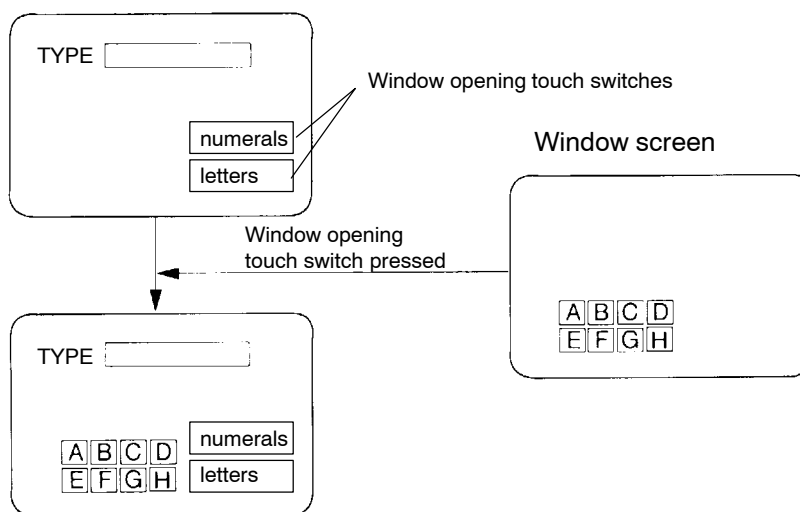


**Reference:** Temporary input fields

Only one numeral or character string setting input field can be registered for a window (screen number in the range 1900 through 1979). This input field can be used – in combination with a number of numeral and character-string input fields on base screens – for provisional input before any data is input into the actual input field on the base screen. This kind of numeral or character-string input field in a window is called a “temporary input field”.

Its advantage is that entries can be input into the temporary input field while checking the current setting on the base screen.

However, if the temporary input field in the window and the input field on the base screen are not of the same type, the temporary input field will not be displayed. Note also that temporary input fields cannot be used for thumbwheel type input fields. If it is not possible to use a temporary input field, the data has to be input directly onto the base screen.

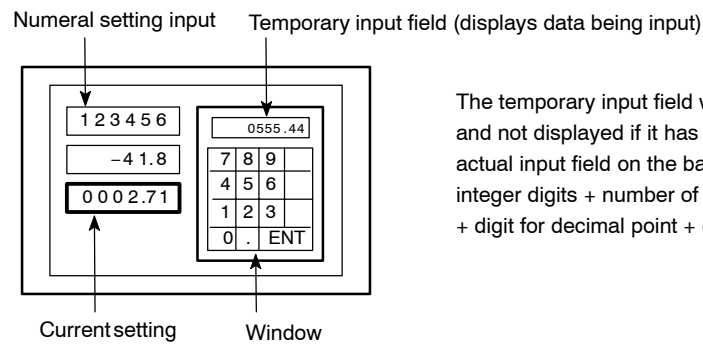

The temporary input field will also be unusable and not displayed if it has fewer digits than the actual input field on the base screen (number of integer digits + number of decimal fraction digits + digit for decimal point + digit for sign).

The temporary input field displays the contents of the current input field at that point in time. The display of the temporary input field is governed by the following attributes:

S Attributes determined by the settings for the temporary input field:

Character font, scale, display attribute, smoothing, character color, background color

S Attributes determined by the settings for the actual input field on the base screen:

Numbers of integer and decimal fraction digits, upper limit value, lower limit value, decimal/hexadecimal, zero suppress, sign display.

## 4-9-1 Creating Numeral Setting Input Fields

This is the procedure for creating input fields for numeral settings. For details on the display of numeric values, setting display colors (NT30C and NT610C), setting numeral tables, and setting words and bits, see 4-2 “Common Setting Operations” (p.61).

- Procedure**
1. Select “IN SET” from the initial editing screen.  
The input setting menu will be displayed.
  2. Select “DATA IN” from the input setting menu.
  3. Select the field in which the numeral setting input field is to be registered and press the  key.  
" To delete an existing numeral setting from the field in which it is registered, locate the cursor at that field and press the [F1] (Delete) key.

**Reference:** When using direct connection, to “increment copy” an existing entry into the next input field (incrementing the memory table number), press the [F2] (iCopy) key with the cursor located on that entry. Note that there must also be an entry in the next input field. (See p.77).

4. If the input type can be specified, specify either “Number Input” or “Thumb-wheel”, specify “Mv Crsr Sw” if necessary, then press the  key.  
" If the thumbwheel type cannot be used, the input type selection window will not be displayed.  
" If “Mv Crsr Sw” is set for “Yes”, touch switches for which the “cursor motion” function has been set will be automatically created and displayed overlying the input field (this function is not available when using the thumbwheel input type).

## 5. Set the necessary settings for the numeral setting input field.

[Numeric keys]

(NT20M, NT600M, without direct connection)

[Numeric keys]

(NT20S, NT600S, NT612G, NT610C, without direct connection)

[Numeric keys]


(Ver.1 to Ver.5)

[Thumbwheel]

The settings that are specific to numeral setting are listed below.

- S Sending: Specify the number of digits in the value notified to the host.
- S Dig Input: Specify the number of digits that can be input.
- S Max, Min: Specify the upper and lower limits for the numeric value.
- S Num Disp: Specify whether or not the input is displayed.
- S Crsr Frm: Specify whether or not a cursor frame, which indicates the currently selected input field, is to be displayed, here.
- S Slct Frm: Specify the display method for the cursor frame here.
- S Size: Specify the size for thumbwheel type touch switches here.
- S End plate: Specify whether or not end plates are to be displayed at the left and right of thumbwheel type switch displays.

6. Press the  key with the cursor on "Exec".
7. A box indicating the size of the input field will be displayed.  
Locate this box at the required display position and press the  key.
8. The specified input field for display setting, numeric keys, or system keys, will be displayed.
- " If the keypad attribute for the screen is "User", numeric keys and system keys are not displayed. If the numeral setting attribute is changed from "Syst" to "User" after completing numeral setting, the numeric keys and system keys will be lost.

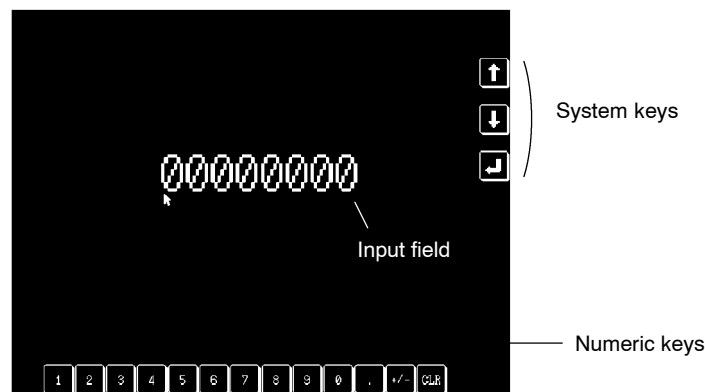


**Reference:** The two numeral setting attributes are used in the following cases:

- "Syst": Used to eliminate the need to carry out screen creation by using the PT default input keys.
  - "User": Used when creating customized input keys.
9. It is now possible to select another registration field and create another numeral setting input field.  
Press the [Esc] key to quit numeral setting.

## 4-9-2 Creating Character-String Setting Input Fields (NT30, NT30C, NT612G, NT610C with Ver.3 or Later Only)

This is the procedure for creating input fields for numeral settings. For details on the display of character-strings, setting display colors (NT30C or NT610C), setting numeral tables, and setting words and bits, see 4-2 “Common Setting Operations” (p.61).

- Procedure**
1. Select “IN SET” from the initial editing screen.  
The input setting menu will be displayed.
  2. Select “DATA IN” from the input setting menu.
  3. Select the field in which the character-string setting input field is to be registered and press the  key.  
" To delete an existing character-string setting input field from the field in which it is registered, locate the cursor at that field and press the [F1] (Delete) key.
- Reference:** To “increment copy” an existing entry into the next input field (incrementing the memory table number), press the [F2] (iCopy) key with the cursor located on that entry. Note that there must also be an entry in the next input field. (See p.77).
4. Specify “Str In”, specify “Mv Crsr Sw” if necessary, then press the  key.  
" If “Mv Crsr Sw” is set for “Yes”, touch switches for which “cursor motion” has been set will be automatically created and displayed overlying the input field.
  5. Set the necessary settings for the character-string input field.

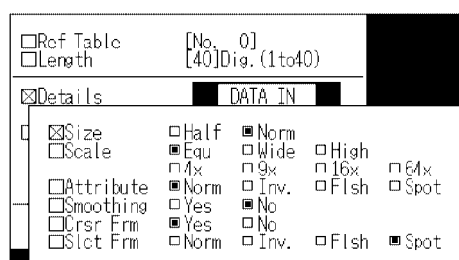

|                                          |                                                                                                                                    |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> Ref Table       | [No., 0]                                                                                                                           |
| <input type="checkbox"/> Length          | [40] Dig. (1 to 40)                                                                                                                |
| <b>Details</b>                           |                                                                                                                                    |
| <input checked="" type="checkbox"/> Size | <input type="checkbox"/> Half <input checked="" type="checkbox"/> Norm                                                             |
| <input type="checkbox"/> Scale           | <input checked="" type="checkbox"/> Equ <input type="checkbox"/> Wide <input type="checkbox"/> High                                |
|                                          | <input type="checkbox"/> 4x <input type="checkbox"/> 9x <input type="checkbox"/> 16x <input type="checkbox"/> 64x                  |
| <input type="checkbox"/> Attribute       | <input checked="" type="checkbox"/> Norm <input type="checkbox"/> Inv. <input type="checkbox"/> Flsh <input type="checkbox"/> Spot |
| <input type="checkbox"/> Smoothing       | <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No                                                                |
| <input type="checkbox"/> Crsr Frm        | <input checked="" type="checkbox"/> Yes <input type="checkbox"/> No                                                                |
| <input type="checkbox"/> Slct Frm        | <input type="checkbox"/> Norm <input type="checkbox"/> Inv. <input type="checkbox"/> Flsh <input checked="" type="checkbox"/> Spot |

The settings that are specific to character-string setting are listed below.

### S Details

- S Crsr Frm: Specify whether or not a cursor frame, which indicates the currently selected input field, is to be displayed, here.
- S Slct Frm: Specify the display method for the cursor frame here.

6. Press the  key with the cursor on “Exec”.
7. A box indicating the size of the input field will be displayed.  
Locate this box at the required display position and press the  key.
8. The input field for the specified display setting will be displayed.
9. It is now possible to select another registration field and create another character-string setting input field.

Press the [Esc] key to quit character-string setting.

### 4-9-3 Setting Window Displays (NT30, NT30C, NT612G, NT610C with Ver.3 or Later Only)

This is the procedure for setting windows to be displayed when a switch is made to a character-string setting screen.

It is also possible to display a created window and check the display position etc. during screen creation. It is possible to arrange elements on the screen so that they do not overlap with the displayed window.

**Procedure** 1. Select "IN SET" from the initial editing screen.

The input setting menu will be displayed.

2. Select "KEYBD/WINDOW DISP" from the input setting menu.

3. Specify the screen number of the window to be displayed when the screen is displayed and press the  key.

The specified window will be displayed.

" If "0" is specified, the window display disappears, and when the screen is displayed during operation, it is displayed without the window.

**Reference:** To check the display status when another window is displayed, repeat steps 1 through 3.

4-9-4     Creating Numeric Keys

Numeric keys are touch switches for inputting numeric values. If the keypad attribute for the screen is set as “User”, the keys can be positioned wherever required on the screen.


The arrangement of the numeric keys displayed on the screen can be changed by using the “TOUCH SW” and “EDIT” functions on the “Edit” screen.

- Procedure
1.

On the “Screen Selection” screen, locate the cursor at the screen number for which the numeric keys are to be created and press the [F4] (Attrib) key.
2.

Set “User” for “Keypad”.
- "

“F” will be displayed in the “Status” column of the screen for which attribute setting has been performed.

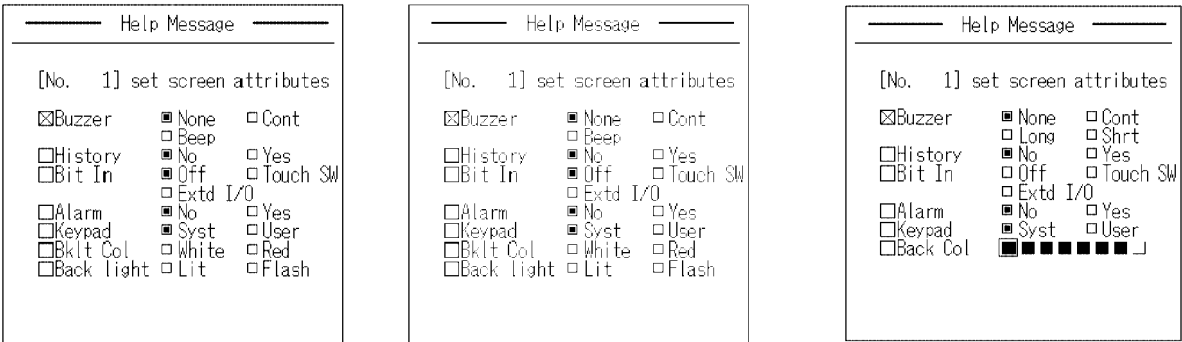

3.
- Select the screen for which the attribute has been set: the “Edit” screen will be displayed.

4.

Select “IN SET” on the initial editing screen.

5.

Specify “USER TKEY”.

The created keys differ according to the “PT Type” setting.




6. To change the arrangement of the numeric keys, use the following functions:

\$ TOUCH SW: Specify the relevant touch switch and change its position or other characteristics.

\$ EDIT: Move the numeric keys by using the “Move” function.

Example of a Change

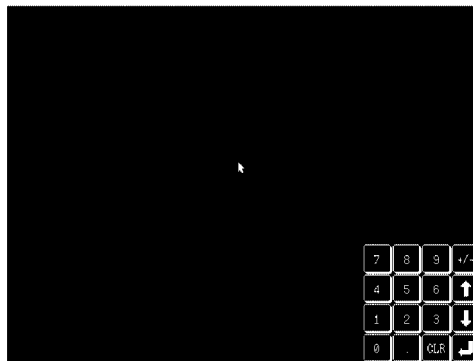

## 4-9-5 Modifying Numeral/Character-String Setting Input Fields

This is the procedure for modifying the contents of existing numeral and character-string settings.

- Procedure** 1. Select “IN SET” from the initial editing screen.

The input setting menu will be displayed.

" It is also possible to proceed straight to step 4. by left clicking on the numeral/character-string setting to be modified (see p.57).

2. Select “DATA IN” from the input setting menu.

3. Select the numeral or character-string setting to be modified and press the  key.

" The numeral/character-string setting can also be selected by clicking the left mouse button with the cursor located on it.

" When using direct connection, the allocated word for a memory table can be changed directly by locating the cursor on “USER TKEY” at an existing entry and pressing the  key.

4. Select the required item and execute the modification.

[Numeric key type]  
(NT20M, NT600M, without  
direct connection)

☒Num Disp Setting

Table [No. 0]

Integer 8Dig

Decimal 0Dig

Dis Send 4Dig

Dis Input 8Dig

Details

☐Display Position

X = 152 Y = 142

Home

Shift Menu

[Numeric key type]  
(NT20S, NT600S)

☒Num Disp Setting

Table [No. 0]

Integer 8Dig

Decimal 0Dig

Dis Send 4Dig

Details

Color

☐Display Position

X = 227 Y = 126

Home

Shift Menu

[Numeric key type]  
(Ver.3 to Ver.5)

☒Num Disp Setting

Table [No. 0]

Integer 8Dig

Decimal 0Dig

Max 99999999

Min 0

Details

Color

☐Display Position

X = 134 Y = 73

Home

Shift Menu

[Thumbwheel type]

[Character-string setting]

☒ThumWhl Setting

Table [No. 0]

Integer 8Dig

Decimal 0Dig

Max 99999999

Min 0

Details

Color

☐Display Position

X = 240 Y = 239

Home

Shift Menu

☒Str Disp Setting

Ref Way Dir

Table [No. 0]

Length 400Dig

Details

Color

☐Display Position

X = 132 Y = 207

Home

Shift Menu

- S Num Disp Setting:
- S ThumWhl Setting:
- S Str Disp Setting:

Used to modify the item specified in the window during setting.
- S Display Position:

Used to change the display position of a numeral/character-string setting input field.

5. Press the [Esc] key to quit modification.

#### 4-9-6 Changing Orders

In cases where there is more than one numeral/character-string setting on one screen, the order of movement between input fields can be changed using the system keys.

**Procedure** 1. Select “IN SET” from the initial editing screen.

The input setting menu will be displayed.

2. Select "DATA IN" from the input setting menu.

**3.** Press the [F3] (Ord) key.

The mode in which order specifications can be made will be established.

4. Locate the cursor at the numeral/character-string setting field that is to be set as No.1, and press the [Space] key.

“1” will be displayed in the “Or” column.

" The numeral/character-string setting can also be selected by locating the cursor at the relevant field and clicking the left mouse button twice.

5. Set the order for the remaining numeral/character-string settings by using the [Space] key.

Specify a position in the order for all numeral/character-string settings.

" Pressing the [CLR] key clears the sequence of settings made up to that point.

| No. | Type   | Table | Order |
|-----|--------|-------|-------|
| 1   | Num In | 0     | 1     |
| 2   | SIR IR | 0     | 1     |
| 3   | ThumWh | 1     | 2     |
| 4   |        |       |       |
| 5   |        |       |       |
| 6   |        |       |       |
| 7   |        |       |       |
| 8   |        |       |       |
| 9   |        |       |       |
| 10  |        |       |       |
| 11  |        |       |       |
| 12  |        |       |       |
| 13  |        |       |       |
| 14  |        |       |       |
| 15  |        |       |       |
| 16  |        |       |       |
| 17  |        |       |       |

☒ Cnfm
 ☐ Home
 ☐ Clear
   
 Space Set Order

**6.** After setting a position in the order for all settings, press the  key.

The order will be changed as specified.

7. Press the [Esc] key to quit.

## 4-10 Extended I/O Settings

This section describes how to apply the screen switching function to the input terminals of extended I/O units using the "Edit". When the input terminal of an extended I/O unit comes ON, the display switches to the specified screen.

An extended I/O unit is used in the following cases:

NT20M, NT600M: When not using direct connection

NT30, NT30C, NT612G, NT610C:

When using Ver.3 direct connection or a later version

However, when using an NT20M or NT600M, "extended I/O" cannot be selected and screen switching must be set using the standalone function.

**Reference:** When using an NT20 or NT30C, connect the extended I/O unit with a dedicated B7A interface unit.

- Procedure**
1. Select "EXTD I/O" from the initial editing menu.
  2. Locate the cursor at the extended I/O unit input terminal number at which the screen switching function is to be used.  
" To delete an existing terminal number setting from the field in which it is registered, locate the cursor at that field and press the [F1] (Delete) key.
  3. Specify the screen number of the screen to be switched to.  
If "0" is specified the display will return to the screen that was displayed before the current one.
  4. Press the [Esc] key to quit extended I/O setting.

**Reference:** The settings made for an input terminal on the "Edit" screen are valid only while the relevant screen is displayed at the PT.

When using direct connection, set "Direct" on the "Scr list" screen in order to make the settings valid regardless of which screen is currently displayed.

## 4-11 Inputting Image and Library Data

This section describes how to display image and library data created on the “Screen Selection” screen.

Images can only be used with the NT30, NT30C, NT612G, and NT610C. The codes that can be used are FE20 to FEFF (224 codes).

Library data can only be used when using an NT30, NT30C, NT612G, or NT610C with Ver.2 or a later version of the direct connection function.

The codes that can be used for library data are listed below:

Ver.3 and later: FA20 to FAFF, FB20 to FBFF, FC20 to FCFF, FD20 to FDFF (896 codes)

### S Displaying Images and Library Data

Images can be displayed in one of two ways: by specifying a code during character input, or by making a selection from the fixed display menu (library data can only be selected by making a selection from the fixed display menu).

Images and library data can also be specified for display when an “image & library lamp” goes OFF or comes ON (see p.102).

Setting “Yes” for “Brkn Line Frame Disp” in the environmental settings (tool settings for the “Edit” screen) will enable you to check the image/library data registration range on the screen at any time.

If “Hspeed” is set for “Disp Mode” in the environmental settings (tool settings for the “Edit” screen), only the broken line frame will be displayed, without the image/library data.

**Caution:** S To modify an image or library data that is already being used for display, either re-edit the registered data by using the “Image & Lib” option on the “Screen Selection” screen, or delete it and then redisplay it. However, note that when the registered data is modified, the data identified by the relevant code is changed for all screens that use that code.

S If an attempt is made to display the codes of image and library data for which no data is registered, ☒ marks will be displayed.


**Reference:** When using an NT30C or NT610C, if an image is displayed in the two-color mode, the display color and background color can be specified.

#### (1) Specification during character input

Pressing the [F4] (Image) key when inputting characters or a label enables selection of an image from the image selection screen.

It is possible to use images in combination with characters and marks.

Image data in a character input field is displayed as a [I] mark. In image editing, the real image is displayed, taking the left bottom extremity of the image as the origin.

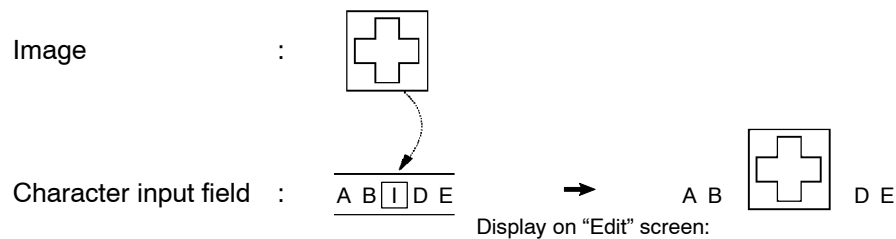

**Note** The following specifications are not valid for image displays:

Scales, smoothing, display attributes

(2) Specification from the fixed display menu

Images and library data can be displayed by selecting the "Image & Lib" option from the fixed display menu in the following way.

- Procedure**
1. Select "Image & Lib" in the initial editing menu.
  2. Locate the cursor at the code corresponding to the image or library data to be displayed and press the  key.  
  
The image codes are FE20 to FEFF. The library codes are FA20 to FAFF, FB20 to FBFF, FC20 to FCFF, and FD20 to FDFF when using Ver.3 direct connection.  
  
" Use [Shift] + [ ] or [Shift] + [ ] to move the bar cursor to the previous or next code for which there is data.  
" Press the [Tab] key to display the code input field.  
" The [ ]/[ ] keys can be used to switch between image data and library data.
  3. When displaying an image in the two-color mode with an NT30C or NT610C, specify the display color and background color, then press the  key with cursor on "Exec".
  4. A box indicating the size of the image/library display will be displayed. Move this box to the required display location and press the  key.
  5. Press the [Esc] key to quit image & library display.

### Deleting Images and Library Data

The images and library data displayed on the screen can be deleted by selecting the "EDIT" option on the initial editing screen. For details on the procedure, see "Delete" (p.152).

**Reference:** Images and library data are sometimes registered in a more extensive range than that visible on the screen. If the broken line frame display function is not used, select such images and data either by using "Simple", or by using "In frm" and enclosing the entire area saved at registration.

## **4-12 Editing Memory Tables**

It is possible to check the initial values in numeral memory tables and character-string memory tables, and to change these values.

For details of the procedure, see 4-2 “Common Setting Operations” (p.61).

- Procedure**
- 1.** Select “TBL EDIT” from the initial editing menu.
  - 2.** Select “Numeral”, “String” or “Bit Memory”.
  - 3.** Select “Numeral” or “String”.
  - 4.** Input data to the memory table or change its contents.
  - 5.** Press the [Esc] key to quit table editing.

## 4-13 Creating Alarm Lists/Histories

This section describes how to create “alarm lists” – which automatically display a character-string memory table in accordance with the status of the allocated bit in a bit memory table – and “alarm histories”, which record and display the status of allocated bits.


The alarm list/history function is only available when using an NT30, NT30C, NT612G, or NT610C and Ver.3 or a later version of the direct connection function.

S Alarm list: The contents (messages) of character-string memory tables, or images/library data, that correspond to the allocated bit in a bit memory table are displayed.

If a screen number is set in advance, screen switching is also possible.



S Alarm history: The day and hour on which the allocated bits in a bit table are set to “1” (come ON) is recorded and the order of occurrence or order of frequencies is displayed. It is also possible to display corresponding images or library data.

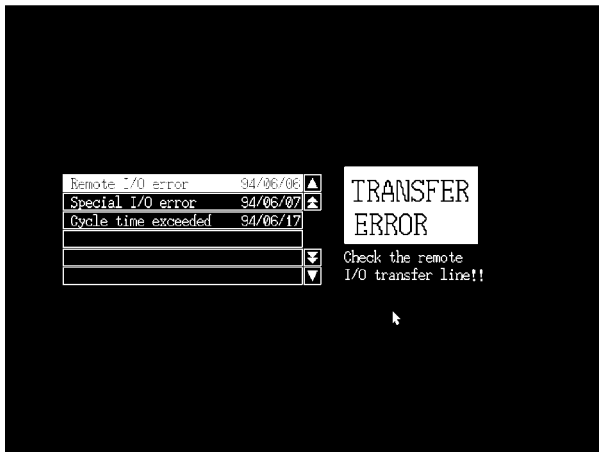

### 4-13-1 Setting Alarm Lists/Histories

This is the procedure for setting alarm lists and histories. For details on the display of character-strings, setting display colors (NT30C or NT610C), setting bit memory tables, and setting words and bits, see 4-2 “Common Setting Operations” (p.61).

A maximum of four alarm lists and alarm histories can be created on one screen. In the case of alarm histories, both an order of occurrence display and order of frequency display can be created on the same screen.

- Procedure**
1. Select “ALARM” on the initial editing screen.
  2. Select the field in which the alarm list/history is to be registered and press the  key.
    - " To delete an existing alarm list/history from the field in which it is registered, locate the cursor at that field and press the [F1] (Delete) key.
  3. Specify either “List” or “History” as the display type.
  4. Make the necessary settings.

## Alarm list

☐ Start Bit Tbl No. [No. 0]  
☐ Ref Bit Tbl Qty [11] (1to128)  
☐ Display Line Qty [11] Line (1to24)  
☐ Length [32] Dig. (1to40)  
☒ Display **Image** ☐ Yes ☒ No

☒ Details **ALARM**

☒ Scale ☒ Equ ☐ Wide ☐ High  
☐ 4x ☐ 9x ☐ 16x ☐ 64x  
☐ Smoothing ☒ Yes ☐ No

## Alarm history

☐ Disp Order    ☒ Occur    ☐ Frea  
☐ Line Qty    [ 1 ] Line (1to24)  
☐ Length    [ 40 ] Dig. (1to40)  
☐ Dsp **Image**    ☐ No  
☐ Hist & Line    ☒ Yes    ☐ No  
☐ Hist Info    ☒ Yes    ☐ No  
☐ Info Type    ☒ Y/M/D h:m    ☐ M/D h:m    ☐ h:m

☒ Details    **ALARM**

☐ ☒ Scale    ☒ Equ    ☐ Wide    ☐ High  
☐ Smoothing    ☒ 4x    ☐ 9x    ☐ 16x    ☐ 64x  
☐    ☒ Yes    ☐ No

- |                      |                                                                                                                                                                             |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S Start Bit Tbl No.: | Specify the bit memory table number from which reference is to start here.                                                                                                  |
|                      | Pressing [F1] (Ref Inpt) allows selection from a memory table list.                                                                                                         |
| S Ref Bit Tbl Qty:   | Specify the number of bits to be checked (read) for the alarm list.                                                                                                         |
|                      | This number of bit memory tables, starting from the “start bit table number”, will be subjected to the check. A maximum of 128 memory tables can be subjected to the check. |
| S Disp Order:        | Specify whether the order of display in the alarm history is to follow the order of occurrence or the order of frequency.                                                   |

|                    |                                                                                                                                                                                                                                                                                                                                                           |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S Line Qty:        | <p>Specify the number of messages/history entries to be displayed here.</p> <p>The numbers of lines that can be displayed are as follows:</p> <p>NT30, NT30C: Max. 12 lines</p> <p>NT612G: Max. 16 lines</p> <p>NT610C: Max. 24 lines</p>                                                                                                                 |
| S Length:          | <p>Specify the number of displayed characters in one message or history entry here. An area that will just accommodate the specified number of digits will be created.</p> <p>When using an NT30 or NT30C, a maximum of 36 lines can be displayed, but this maximum may be decreased depending on the display method and history information display.</p> |
| S Dsp Image & Lib: | Specify whether or not images and library data corresponding to messages/histories are to be displayed here.                                                                                                                                                                                                                                              |
| S Hist Info:       | When an order of frequency is displayed, specify whether or not the times of occurrence are also to be displayed here. This setting is invalid with order of frequency displays.                                                                                                                                                                          |
| S Info Type:       | <p>Specify one of the following formats for expressing times of occurrence:</p> <p>Y/M/D/ h : m: Year/Month/Day Hour/Minute (14 digits)</p> <p>M/D h : m: Month/Day Hour/Minute (11 digits)</p> <p>h : m: Hour/Minute (5 digits)</p>                                                                                                                      |
| S Details          |                                                                                                                                                                                                                                                                                                                                                           |
| S Scale:           |                                                                                                                                                                                                                                                                                                                                                           |
| S Smoothing:       | Specify the display method for messages or history entries here.                                                                                                                                                                                                                                                                                          |
| S Color:           | Specify the frame color, OFF/background color, and ON color for the alarm list/history, and the display color and background color for image/library data (NT30C and NT610C only). The display color for image/library data is only valid for images displayed in the two-color mode.                                                                     |



5. Press the  key with the cursor on "Exec".
6. A box indicating the size of the alarm list/history will be displayed.  
Move this box to the required display position and press the  key.

7. Locate the cursor at the start point for the image & library data display area and press the  key, then move the cursor to the end position and press the  key once more.
- " If "No" has been specified for "Dsp Image & Lib", nothing will be displayed.
8. The specified alarm list/history, image & library display area, and scroll keys will be displayed.
- " If the "Dsp Image & Lib" set in the display settings is 1 to 3 lines, "up" and "down" line scroll keys will be automatically displayed. If the "Dsp Image & Lib" set was 4 or more lines, "up" and "down" line scroll keys and a page scroll key will be automatically displayed.

4-13-2    **Modifying Alarm Lists/Histories**

This is the procedure for changing the contents, display position, etc., of created alarm lists and histories.

- Procedure
1. Select "ALARM" on the initial editing screen.
- " It is also possible to proceed straight to step 3. by left clicking on the alarm list/history to be modified (see p.57).
2. Select the alarm list/history to be modified and press the  key.
- " It is also possible to select the alarm list/history to be modified by left clicking on it.
3. Select the required item and execute the modification.
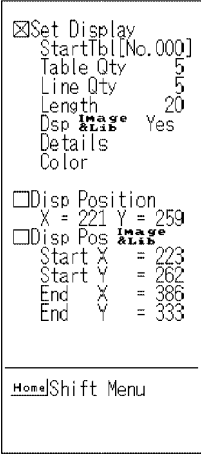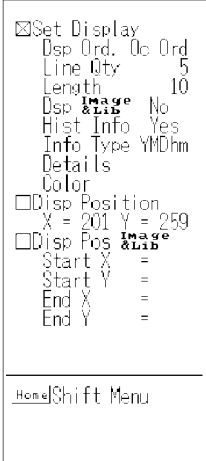
| Alarm list                                                                          | Alarm history                                                                        |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  |  |

- |                         |                                                                    |
|-------------------------|--------------------------------------------------------------------|
| S Set Display:          | Used to modify the item specified in the window during setting.    |
| S Disp Position:        | Select to change the display position of the alarm list/history.   |
| S Disp Pos Image & Lib: | Select to change the display position of an image or library data. |

4. Press the [Esc] key to quit modification.
5. Use the following editing functions to change the arrangement of the scroll keys or to add page scroll keys.

§ TOUCH SW:                      The control keys used for the “input keys” are set. Their positions and other characteristics can be changed by using the touch switch modification operation. New scroll keys can be set for existing alarm lists/histories by using control keys.

§ EDIT:                              The scroll keys can be moved by using the “Move” function.

**Reference:** § The scroll keys will automatically light if there are undisplayed messages or histories in the scrolling directions. Do not set lamp bits for them.

§ The scroll keys remain displayed even if the alarm list/history is deleted. Delete them using the “TOUCH SW” or “EDIT” function.

## 4-14 Standalone Settings

When using an NT20M or NT600M without direct connection, it is possible to assign screen switching functions to the input terminals of an extended I/O unit or touch switches. When the set input terminal or touch switch comes ON, the display switches to the specified screen. This screen switching function when using an NT20M or NT600M without direct connection is called the “standalone function”.

When direct connection is used, and when other PT models are used without direct connection, screen switching is set with the touch switch and extended I/O functions.

- Procedure**
1. Select “STANDALON” on the initial editing screen.
  2. Locate the cursor on the extended I/O unit input terminal number or touch switch number that is to be assigned the screen switching function and press the  key.

Whether the input terminals of an extended I/O unit or touch switches are used depends on the PT model used.

3. Specify the screen number of the screen to be switched to.
4. Press the [Esc] key to quit standalone setting.

**Reference:** A standalone setting is only valid while the screen for which it is set is displayed.

## 4-15 Editing Screen Data

This section describes how to copy, move, and delete existing screen data.

### Selecting the applicable screen data


Editing is executed in existing screen data units.

The method for specifying the object of the editing operation is set with “Edit way” on the EDIT. The object of the editing operation is selected as follows.

**Reference:** Depending on the lamp status, which is determined by the setting for “Lamp/TSW Disp Mode” in the environmental settings, image/library lamps may not be displayed and it may not be possible to select them using the “EDIT”.

§ For “In frm” specifications

- Procedure**
1. Specify the start point of the area that is to encompass the object of the editing operation.
  2. Set the end point at a diagonally opposite point chosen so that the object of the editing operation is accommodated within the frame.

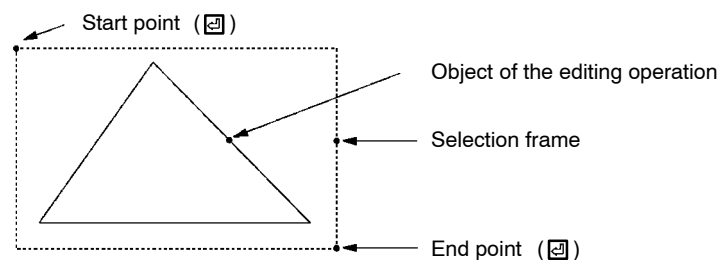


The object of the editing operation will be encompassed by a dotted line.

For copy and move operations, a frame the same size as the area enclosed by this dotted line becomes a cursor and can be moved.

§ For “On frm” specifications

- Procedure**
1. Specify the start point and end point of an area that contains some part of the object of the editing operation.

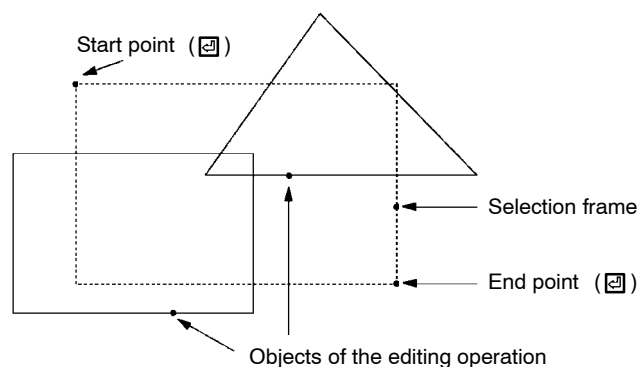


All the graphics that are wholly or partly contained within the area are selected as objects of the editing operation.

The objects of the editing operation will be encompassed by dotted lines.

For copy and move operations, a frame the same size as the area enclosed by this dotted line becomes a cursor and can be moved.

S For “Simple” specifications

**Procedure** 1. Locate the cursor over the object of the editing operation and press the  key.

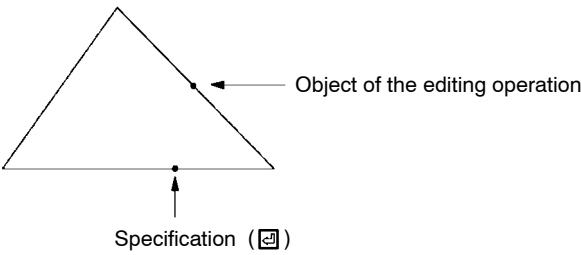


The object of the editing operation will be encompassed by a dotted line.

For copy and move operations, a frame the same size as the area enclosed by this dotted line becomes a cursor and can be moved.

Filtering Object Data

By specifying the data that is to be the object of the editing operation in advance using “Data sel” in the EDIT, it is possible to protect data that is not to be changed by editing operations.

Example: Exempting a bar graph from editing

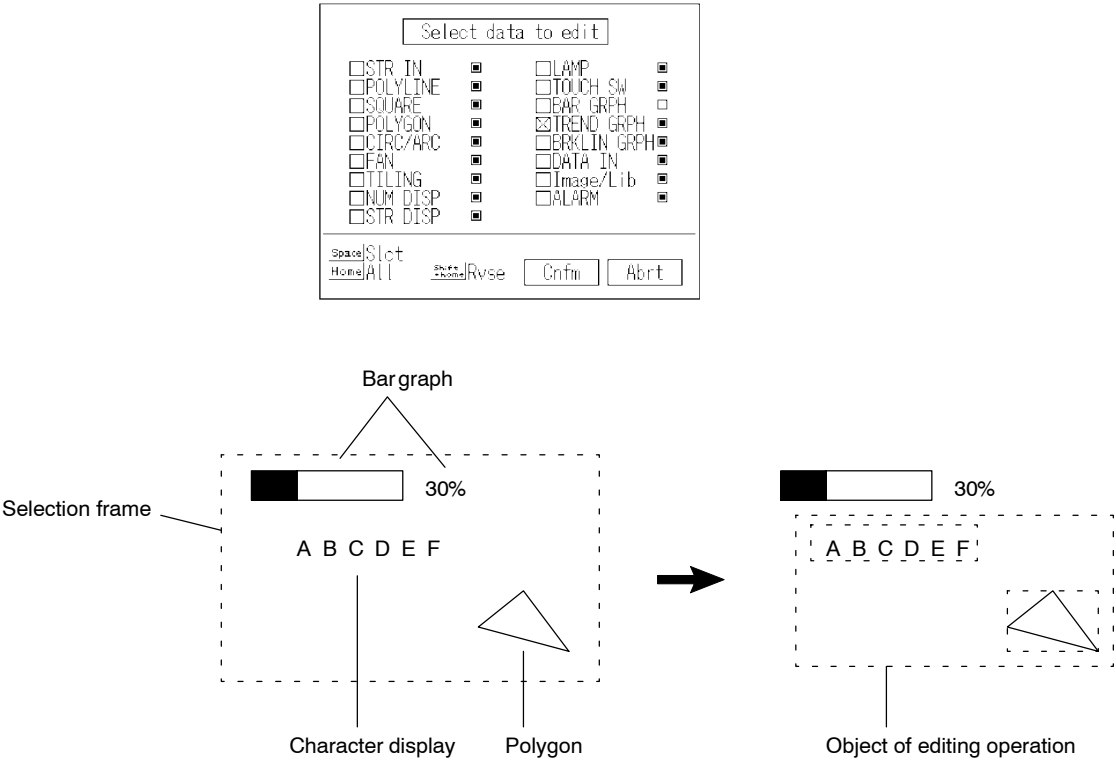

- Procedure**
1. Select "EDIT" from the initial editing menu.
  2. Select "Data sel" from the editing menu.
  3. Locate the box cursor at the data you do not want to edit and press the [Space] key to change the check mark ☐ to ☒.
  - " Pressing the [Home] (All) key will make all screen data types subject to editing again.
  4. Press the ☒ key with the cursor on "Exec".

**Copy and Move**

This is the procedure for copy and move operations. In a copy operation, the original object remains in existence. In a move operation, it does not.

- Procedure**
1. Select "EDIT" from the initial editing menu.
  2. Select "Copy" or "Move" from the editing menu.
  3. Select the object that is to be the copy source (or move source).
  4. Locate the cursor at the copy destination (move destination) and press the ☒ key.
  - " To abort the operation, press the [Esc] key.

**Delete**


This is the procedure for deleting the object of the editing operation.

- Procedure**
1. Select "EDIT" from the initial editing menu.
  2. Select "Delete" from the editing menu.
  3. Select the object of the deletion operation.
  4. Check the message and then press the ☒ key.
  - " To abort deletion, press the [Esc] key.


**Centering**

This is the procedure for centering labels or character input (fixed display) to locate them at the center of a lamp or touch switch display area (this positional adjustment is only performed in the left/right direction; the position in the vertical direction remains unchanged).

**Reference:** S In the case of lamps, only those characters that are completely contained within the area of the graphic will be subject to the centering operation.

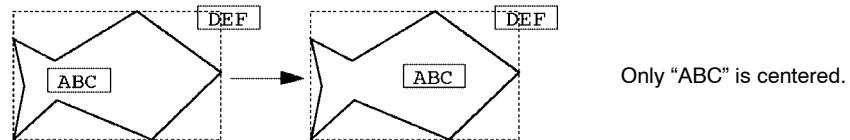


S In the case of touch switches, only those characters that are completely contained within the sensitive area will be subject to the centering operation.

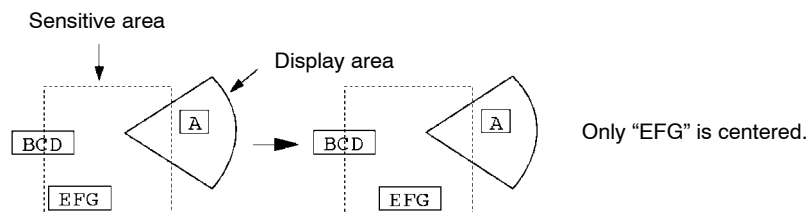

- Procedure**
1. Select "EDIT" from the initial editing menu.
  2. Select "Centering" from the editing menu.
  3. Select the object of the centering operation (a lamp or touch switch).
  4. Check the message and then press the  key.
- " To abort centering, press the [Esc] key.

**Alter** Using this function, the object of the editing operation (fixed display only) can be reduced, enlarged, inverted, moved, or copied.

When an Alter is performed, a frame is displayed surrounding the object of the editing operation and the symbol  is displayed at each vertex and on each side of this frame, as shown below. By dragging one of these symbols with the mouse (dragging is moving the mouse with the left button held down), the object of the editing operation can be reduced, enlarged, or inverted. It can also be moved or copied by dragging the entire frame.

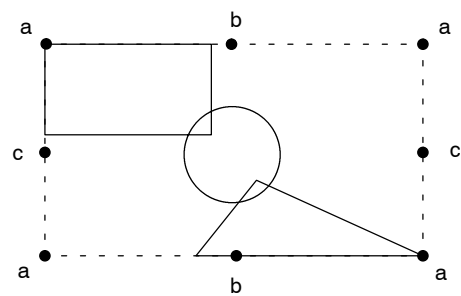

- a: Used to enlarge or reduce the object of the editing operation with the diagonally opposite point as the reference point, while maintaining the same relative proportions. By moving to the opposite side of the diagonally opposite point, the object of the editing operation can be inverted vertically or laterally.
  - b: Used to enlarge or reduce the object of the editing operation in the vertical direction only with the opposite side as the reference. Vertical inversion is possible by moving the cursor beyond the opposite side.
  - c: Used to enlarge or reduce the object of the editing operation in the horizontal direction only with the opposite side as the reference. Horizontal inversion is possible by moving the cursor beyond the opposite side.
- Frame: Used to move the object of the editing operation. If the [CTRL] key is being pressed when the left mouse button is released at the destination, the object of the editing operation is copied.


Only fixed displays can be the objects of “Alter” operations. The following restrictions may also apply depending on the type of the object being edited.

| Object of Editing Operation      | Shape<br>(vertical/horizontal ratio) | Size | Position |
|----------------------------------|--------------------------------------|------|----------|
| Continuous line, square, polygon | f                                    | f    | f        |
| Circle, arc, fan                 | ¢                                    | f    | f        |
| Character, mark, tiling          | ¢                                    | ¢    | f        |

f : Can be changed ¢ : Cannot be changed

**Reference:** “Alter” operations can only be performed using the mouse. Key operations are not possible.


## S Lateral enlargement

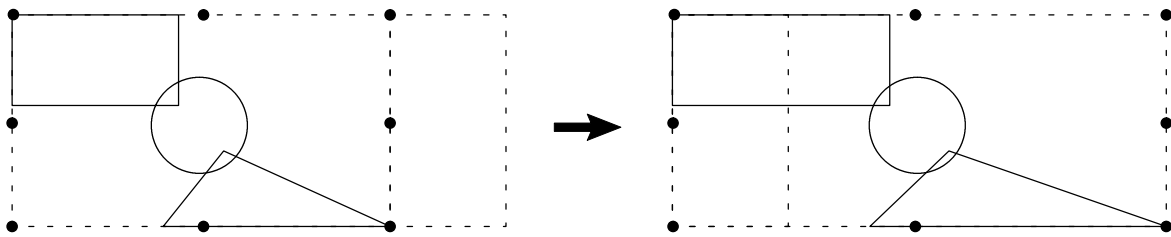


The circle does not change shape.

**Note** If a circle, arc, or fan which has been reduced in the vertical or horizontal direction and whose position has been changed is returned to its original size, it will not return to its original position (in contrast, shapes which are modified while retaining their relative proportions can be returned to their original position by returning them to their original size).

## S Enlargement while retaining relative proportions

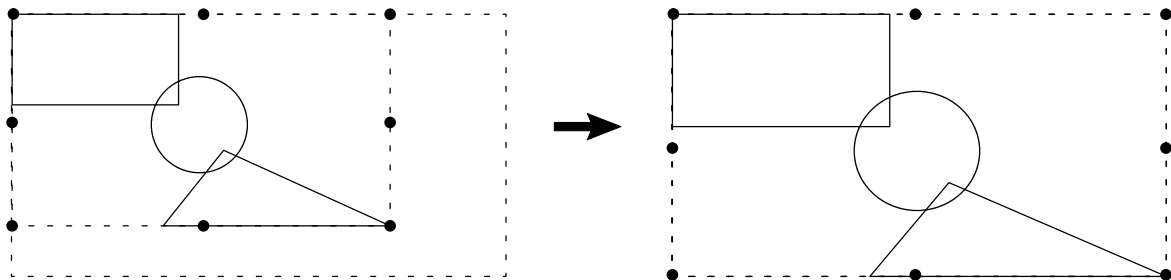

## S Inversion

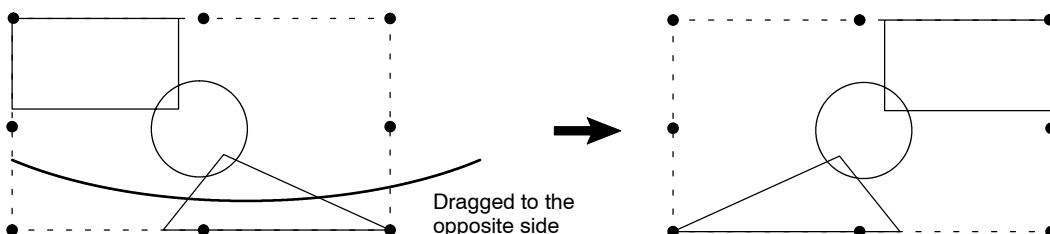


- Procedure**
1. Select "EDIT" from the initial editing menu.
  2. Select "Alter" from the editing menu.
  3. Select the object of the editing operation.
  4. Perform modification by dragging a ■ symbol or the frame.
- To abort the operation, press the [Esc] key.

Rotation

This function rotates the object of the editing operation by 90\_ in the clockwise direction.

Rotation is performed with the center of the frame that encloses the object of the editing operation as the reference point. If a rotation operation would cause the object of the editing operation to project beyond the edge of the screen, rotation is not performed.

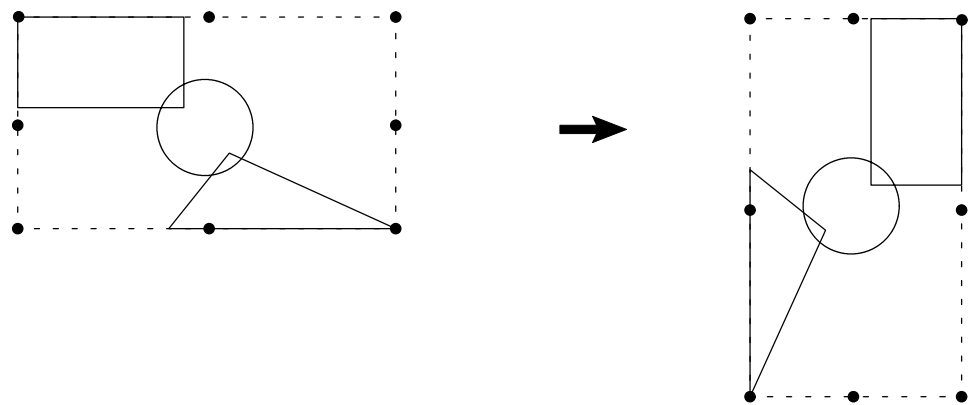

Only fixed displays can be the objects of “Rotate” operations. The following restrictions may also apply depending on the type of object being edited.

| Object of Editing Operation                                | Rotation |
|------------------------------------------------------------|----------|
| Continuous line, square, polygon, circle, arc, fan, tiling | f        |
| Character, mark                                            | ¢        |

f : Can be changed ¢ : Cannot be changed

- Procedure**
- 1. Select “EDIT” from the initial editing menu.
  - 2. Select “Rotate” from the editing menu.
  - 3. Select the object of the editing operation.
  - 4. Check the message and press the  key.


To abort the operation, press the [Esc] key.

**Batch Changing Colors (NT30C and NT60C only)**

Used to change the colors for specified data within a specified area in a batch.

- Procedure**
1. Select "EDIT" from the initial editing menu.
  2. Select "ColChg" from the editing menu.
  3. Select the objects subject to the batch color change operation.

However, note that a specification to change to transparent color will be ignored if it applies to a part of the image for which transparent color cannot be used.

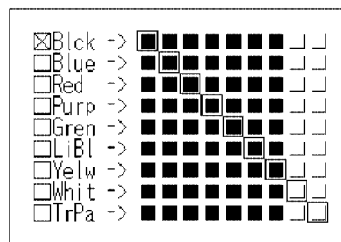

4. Specify the color change method and press the  key.
  5. Check the message and press the  key.
- " To abort the batch color change, press the [Esc] key.

**Quitting Editing**

Select whether to quit after saving the result of editing or to quit without saving the result of editing.

- Procedure**
1. Press the [Esc] key while the editing menu is displayed.
  2. Check the message.
    - \$ Press the  key to quit after saving the result of editing.
    - \$ Press the [Space] key to quit without saving the result of editing (the status before editing started will be re-established).



---

## SECTION 5

# Creating Marks, Images, and Library Data

It is possible to create customized characters and symbols called “marks” and display them on the screen.

Marks can be treated in the same way as wide font characters: they can be displayed at various scales of enlargement and attributes can be set for them.

They can also be used in the creation of image data and library data for display on the screen.

|       |                                           |     |
|-------|-------------------------------------------|-----|
| 5-1   | Marks .....                               | 160 |
| 5-1-1 | Mark Creation Procedure .....             | 160 |
| 5-1-2 | Mark Creation Screen .....                | 160 |
| 5-1-3 | Mark Creation Functions .....             | 161 |
| 5-2   | Images .....                              | 164 |
| 5-2-1 | Procedure for Image Creation .....        | 165 |
| 5-2-2 | Image Editing Operations .....            | 166 |
| 5-3   | Library Data .....                        | 171 |
| 5-3-1 | Procedure for Library Data Creation ..... | 171 |
| 5-3-2 | Library Editing Operations .....          | 172 |

## 5-1 Marks

This section describes how to create customized characters and symbols and display them on the screen.

Marks can be created in three sizes: 16x16, 32x32, or 64x64 dots.

When using an NT20S, NT20M, NT600S, or NT600M, only 16x16 dot marks can be created.

### 5-1-1 Mark Creation Procedure

The procedure for creating marks is as follows.

- Procedure**
1. Press the [F9] (Mark) key on the "Screen Selection" screen.
  2. Specify the size of the mark to be created.

Three sizes are available: 16x16, 32x32, and 64x64 dots.

- " An existing mark can be copied by pressing the [F1] (Copy) key, specifying the range for the copy source by inputting a start point and end point, and then specifying the position of the copy destination.

An existing mark can be moved by pressing the [F2] (Move) key, specifying the range for the move source by inputting a start point and end point, and then specifying the position of the move destination.

An existing mark can be deleted by pressing the [F3] (Delete) key and specifying the range by inputting a start point and end point.

3. Move the cursor to specify the position at which the mark is to be registered once it has been created.
4. Create the mark graphic in the creation area.
5. Press the [F8] key to register the created mark.
6. Press the [Esc] key to quit mark creation.


### 5-1-2 Mark Creation Screen

Marks are created on the mark creation screen.

Up to 224 marks of the 16x16 dot size can be registered.

Since the same registration area is used for each mark size, 32x32 dot marks occupy four times the area that 16x16 dot marks do, and 64x64 dot marks occupy sixteen times the area that 16x16 dot marks do.

<Example: 16x16 dot screen>

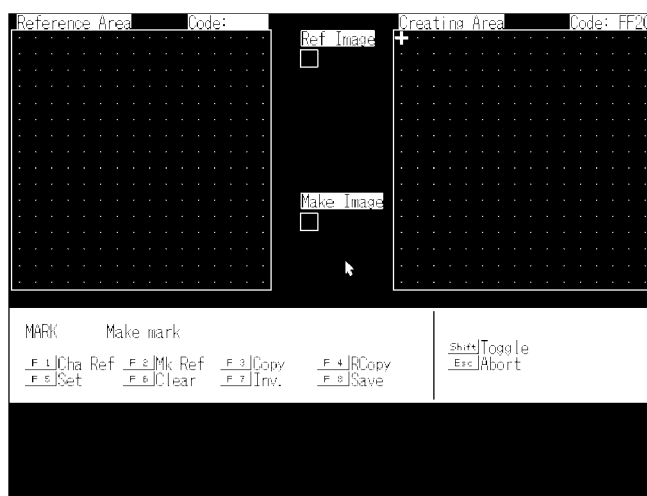

S Reference Area: Area used to display other marks for reference during mark creation.

S Creating Area: Area used for creating marks with dot data.

### 5-1-3 Mark Creation Functions

#### Dot Operations

S Dot display/deletion

When the [Shift] key is pressed, a dot is displayed at the cursor position.

If the [Shift] key is pressed while the cursor is located over a displayed dot, the dot will be deleted.


When using a mouse, click with the left button to display dots and click with the right button to delete them.

S Continuous display or deletion of dots

To display or delete a continuous line of dots, move the cursor by pressing one of the arrow keys while holding down the [Shift] key.


S Screen rotation

Each time the [ ] or [ ] key is pressed while holding down the [Alt] key and [Shift] key, the mark displayed on the screen will be rotated by 90.

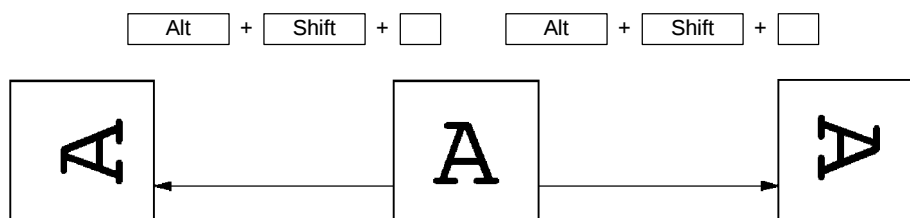

## S Moving the screen

Pressing one of the arrow keys while holding down the [Alt] key will move the mark displayed on the screen.

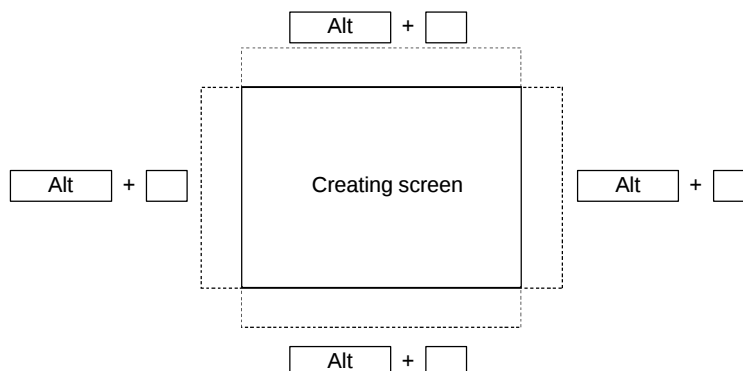

## Functions of the Function Keys

[Cha Ref] [F1] . . . Character reference

Used to display an input character in the reference area.

- (1) Press the [F1] (Cha Ref) key.
- (2) Input the character to be used for reference (one wide font character or a maximum of two normal font characters).
- (3) Press the  key: the character will be displayed.

[Mk Ref] [F2] . . . Mark reference

Used to display an existing mark in the reference area.

- (1) Press the [F2] (Mk Ref) key.
- (2) Locate the cursor on the mark in the mark list window that is to be displayed.
- (3) Press the  key: the character will be displayed.

[Copy] [F3] . . . Area copy

Used to copy the dots in a specified area into the creating area.

- (1) Press the [F3] (Copy) key.
- (2) Specify the start point and end point of the area to be copied.
- (3) Move the area to the copy destination and press the  key: the dots will be copied.

[RCopy] [F4] . . . Copy from the reference area

Used to copy the dots in a specified area of the reference area to the creating area.

- (1) Press the [F4] (RCopy) key.
- (2) Specify the start point and end point of the area within the reference area that is to be copied. Specify diagonally opposite points to specify a rectangular area.
- (3) Move the area to the copy destination within the creating area and press the  key: the dots will be copied.

|         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| [Set]   | <p>[F5] . . . Set dots in a specified area</p> <p>Used to set (display) all the dots within a specified area.</p> <ol style="list-style-type: none"> <li>(1) Press the [F5] (Set) key.</li> <li>(2) Specify the start point and end point of the area in which the dots are to be set.<br/>Specify diagonally opposite points to specify a rectangular area.</li> <li>(3) Press the  key: the dots inside the specified area will be set.</li> </ol>                                                               |
| [Clear] | <p>[F6] . . . Reset dots in a specified area</p> <p>Used to reset (clear) all the dots within a specified area.</p> <ol style="list-style-type: none"> <li>(1) Press the [F6] (Clear) key.</li> <li>(2) Specify the start point and end point of the area in which the dots are to be cleared.<br/>Specify diagonally opposite points to specify a rectangular area.</li> <li>(3) Press the  key: the dots inside the specified area will be cleared.</li> </ol>                                                   |
| [Inv.]  | <p>[F7] . . . Invert dots</p> <p>Used to invert the display of all the dots within a specified area: displayed dots are cleared and cleared dots are displayed.</p> <ol style="list-style-type: none"> <li>(1) Press the [F7] (Inv.) key.</li> <li>(2) Specify the start point and end point of the area in which the dots are to be cleared.<br/>Specify diagonally opposite points to specify a rectangular area.</li> <li>(3) Press the  key: the dots inside the specified area will be inverted.</li> </ol> |
| [Save]  | <p>[F8] . . . Register a mark</p> <p>Used to register a mark that has been created.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## Displaying Marks

Marks can be displayed in either of the two following ways.

### (1) Specification during character input

If the [F3] (Mark) key is pressed when inputting characters or a label, a mark can be selected from the mark selection screen (only 16x16 dot marks can be selected).

It is possible to use marks in combination with characters.

Mark data is displayed as data in the character input field. On the "Edit" screen, the actual mark is displayed, taking the left bottom extremity of the mark as the origin.

### (2) Specification from the Fixed Display Menu

On selecting "Mark" from the fixed display menu and specifying a size, a mark can be selected from the mark selection screen.

For details on the operating procedure, see "Inputting Marks" (p.82).

## 5-2 Images

Image data is created in dot units and can be displayed on the screen. Marks and symbols can be created and registered.

Images are handled in the same way as characters and marks.

Illustrations and figures can be read with an image scanner.

Images can only be used when using an NT30, NT30C, NT610G, or NT610C.

**Reference:** The sizes of images that are not reduced are as follows, depending on the width and height of the image area.

NT610G :  $\{(width + 7) \div 8\} \times height + 558$  bytes

NT30, NT30C, NT610C :  $\{[(width + 7) \div 8] \times 3 + 48\} \times height + 510$  bytes

("÷" indicates a division operation in which decimal fractions are discarded.)

When an image is reduced, the size will be smaller than indicated above. The reduction scale will differ according to the nature of the image data.


### 5-2-1 Procedure for Image Creation

Image data is created on the screen in dot units using mouse and key operations, then the required area is specified and the image registered. Up to 224 images can be registered.

- Procedure**
1. Select "Image & Lib" on the "Screen Selection" screen.
  2. Locate the cursor at the code (from FE20 to FEFF) of the image to be created and press the  key.
    - " Use [Shift] + [ ] or [Shift] + [ ] to move the bar cursor to the previous or next code for which there is data.
    - Use the [ ]/[ ] keys to switch between image and library data.
    - Press the [Tab] key to display the code input field.
    - The data of a code for which data already exists can be deleted by pressing the [F1] (Delete) key and then specifying that code.
    - The data of a code can be copied by pressing the [F2] (Copy) key and then specifying the copy source code and the copy destination code.
    - Existing comments can be changed by pressing the [F6] (Commnt) key and inputting the required characters.
  3. Draw image data on the screen using the mouse and keys (see "Image Editing Operations" on the next page).
  4. Press the [Esc] key to quit image creation.
    - On quitting, specify "Confirm".
  5. Select whether or not to reduce the saved data.
    - " Displaying reduced image data takes more time than displaying image data that is not reduced.
  6. Specify the area that is to be saved as the image data.
    - locate the cross-hair cursor at the start point and end point of the area and press the  key at each.
  7. Input a comment.
    - This is a memo that indicates the nature of the image data.

5-2-2 Image Editing Operations

On selecting an image code, the image editing screen shown below is displayed.

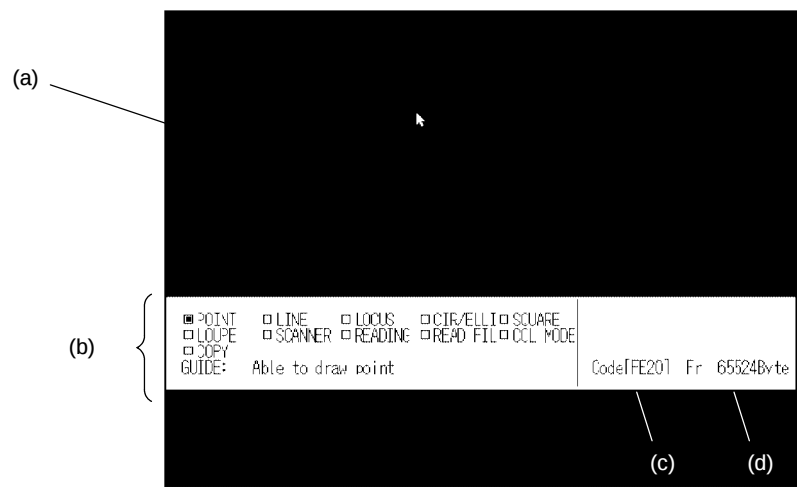


- (a) Image editing screen: This is the screen on which images are created. No grid is displayed.
- (b) Image editing menu: This is the menu for editing images.
- (c) Code: This is the code of the image that is currently being edited.
- (d) Remaining capacity: The data size (number of bytes) that can still be used for image creation.

S Color Mode

If using an NT30C or NT610C, the color mode (2 colors or 8 colors) can be changed by selecting “COL MODE” from the image editing menu.

**Enlarged Display**

A part of the image display screen can be displayed enlarged by selecting "LOUPE" from the image editing menu: this allows editing in dot units.

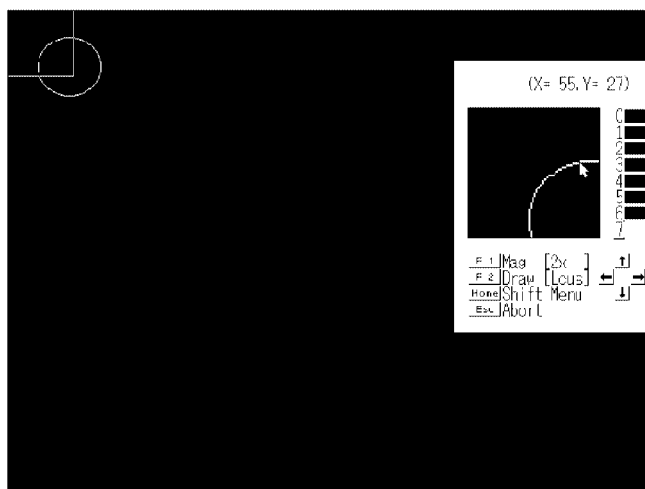**S Key Operations**

- [Home] key: Used to shift the help message window.
- Arrow keys: Used to move the cursor (the cursor can be moved more quickly by pressing an arrow key while holding down the [Shift] key, but this operation can only be used in the box tiling mode).
- [Ctrl] + arrow keys: Used to shift the enlarged display window (it can be moved faster by pressing the [Shift] key also).
- [F1] key: Used to change the enlargement scale (2x, 4x, 8x)
- [F2] key: Used to change the drawing mode (locus, box tiling)

The enlarged display window can also be moved by locating the cursor inside it, pressing the  key, then moving the cursor and pressing the  key again.

**S Drawing method**

On this screen, images are drawn with dots in the manner described below. If using an NT30C or NT610C, the color used for the help message window has to be selected (this selection can be made using the numeric keys).

**[Locus mode]**

- Key operation: Dots are drawn by moving the cursor while holding down the [Shift] key.
- Mouse operation: Dots are drawn by dragging the mouse while holding down the left mouse button.

**[Box tiling mode]**

- Key operation: Press the  key at the diagonally opposed corners of the area (rectangle) to be tiled.
- Mouse operation: Click the left mouse button at the diagonally opposed corners of the area (rectangle) to be tiled.

- Procedure**
1. Select "LOUPE" from the image editing menu.
  2. Carry out drawing in dot units.
  3. Press the [Esc] key to quit the enlarged display.

### Drawing Operations Using the Image Editing Menu

Functions are selected from the image editing menu in order to carry out drawing.

The following graphic elements can be used:

Points, lines, locus, circles, ellipses, squares

In the case of circles, ellipses and squares, it is also possible to select normal or inverted displays.

When using an NT30C or NT610C, the color can also be specified.

Ellipses can only be drawn as images.

#### S Points

Key operation: Press the  key.

Mouse operation: Click the left mouse button.

#### S Lines

Key operation: Press the  key at the start point and end point.

Mouse operation: Click at the start point and end point.

#### S Locus

Key operation: Locus drawing is not possible with key operations.

Mouse operation: Drag the mouse while holding down the left mouse button.

#### S Circles/ellipses

Key operation: Press the  key at diagonally opposed points to draw a circle or ellipse that just makes contact with the inside of the rectangle defined by these points.

Mouse operation: Click at diagonally opposed points to draw a circle or ellipse that just makes contact with the inside of the rectangle defined by these points.

#### S Squares

Key operation: Press the  key at the diagonally opposed points.

Mouse operation: Click at the diagonally opposed points.

**Reading Existing Image Data**

Existing image data can be read onto the image editing screen.

- Procedure**
1. Select "READ FIL" from the image editing menu.
  2. Locate the bar cursor on the code of the image to be read and press the  key.
  3. A box that indicates the size of the image will be displayed.  
Move this box to the required display position and press the  key.

**Reading Bit map Files (.BMP)**

Bit map files can be read as image data.

However, only bit map files that comply with the following conditions can be read:

S The bit map must be monochrome, 16-color, or 256-color.

S The data must not be compressed.

- Note**
1. PCX format bit map files cannot be read.
  2. When 16-color and 256-color bit map files are read, the number of colors is reduced to eight. This means that the rendition of color will not be the same as in the original file.

- Procedure**
1. Press the [F7] (Image & Lib) key on the "Screen Selection" screen.
  2. Select the image code (range: FE20 to FEFF).
  3. Select "READ FIL" (read file) from the image editing menu.
  4. A prompt requesting the file name of the bit map file will appear: specify the path and enter the file name (see the example below). An extension must be specified.

**Example**

C:\WIN\PUPPY.BMP<ENTER>

5. After reading, the data can be edited as image data.

**Storing Screen Data in Files**

Existing screen data can be converted to the bit map file format and stored as a file.

- Procedure**
1. Locate the bar cursor on the screen to be converted to bit map data, press the [F10] key, then press the [F3] (Co File) key.
  2. Follow the screen messages to create a file for the screen data. The file name will be registered in the format shown below.

NT612G: NTGVVVV.BMP

NT610C: NTCVVVV.BMP

\* The screen number is entered in the section represented as VVVV.

## Copying Images on the Image Editing Screen

Images can be copied on the image editing screen.

Since it is possible to repeatedly specify copy destinations for the same copy source, moving the mouse with the mouse button held down has the effect of using a thick pen or eraser.

- Procedure**
1. Select [COPY] from the image editing menu.
  2. Press the  key with the cursor on the diagonally opposite point of the copy source.
  3. Move the cursor to the copy destination and press the  key.
- The image will be copied. Other copy destinations can now be specified.
- " Press the [Esc] key to quit copying.
  - " Continuous copying is possible by moving the mouse with the button held down.

## Displaying Images


Images can be displayed in either of the following two ways.

### (1) Specification during character input

If the [F4] (Image) key is pressed when inputting characters or a label, an image can be selected from the image selection screen.

It is possible to use images in combination with characters and marks.

Image data in a character input field is displayed as a [I] mark. In image editing, the real image is displayed, taking the left bottom extremity of the image as the origin.

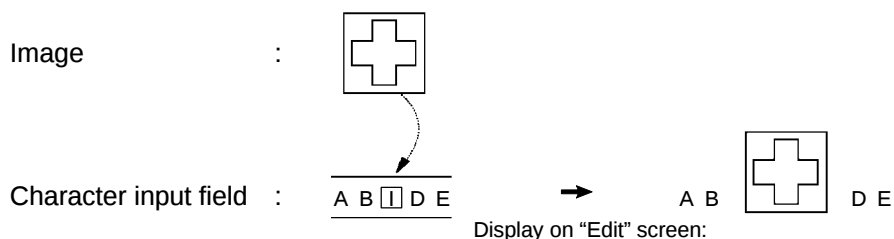

## WARNING

The following specifications are not valid for image displays:  
Scales, smoothing, display attributes



### (2) Specification on the initial editing screen

Selecting "Image & Lib" from the initial editing screen enables selection of images from the image/library selection screen (the image codes are FE20 to FEFF).

For details on the procedure, see 4-11 "Inputting Image and Library Data" (p.141).

Images can also be set for the ON and OFF codes of image/library lamps. For details, see "Setting Image/Library Lamps" (p.102).

## 5-3 Library Data

Two or more graphics can be registered together as library data. Complex graphics need only be created once, after which they can be used repeatedly.

Library data can only be used when using an NT30, NT30C, NT610G, or NT610C.

The following codes can be used for library data:

FA20 to FAFF, FB20 to FBFF, FC20 to FCFF, FD20 to FDFF (896 items).

### 5-3-1 Procedure for Library Data Creation

Library data is created by registering two or more graphics created on the library editing screen collectively under one code. Up to 896 library data can be registered.

- Procedure**
1. Select "Image & Lib" on the "Screen Selection" screen.
  2. Locate the cursor at the code of the library data to be created and press the  key.
    - " Use [Shift] + [ ] or [Shift] + [ ] to move the bar cursor to the previous or next code for which there is data.
    - Use the [ ]/[ ] keys to switch between image and library data.
    - Existing comments can be changed by pressing the [F6] (Commnt) key and inputting the required characters.
    - Press the [Tab] key to display the code input field.
    - The data in a code for which data already exists can be deleted by pressing the [F1] (Delete) key and then specifying that code.
    - The data in a code can be copied by pressing the [F2] (Copy) key and then specifying the copy source code and the copy destination code.
  3. Draw the library data on the screen using the mouse and keys (see "Library Editing Operations" on the next page).
  4. Press the [Esc] key to quit library data creation.
    - On quitting, specify "Confirm".
  5. Specify the area that is to be saved as the library data.
    - Regardless of the environmental settings (tool settings for the "Edit" screen), only graphics that are completely contained within the specified area will be registered.
    - Locate the cross-hair cursor at the start point and end point of the area and press the  key at each.
  6. Input a comment.
    - This is a memo that indicates the nature of the library data.

## 5-3-2 Library Editing Operations

On selecting a library code, the library editing screen shown below is displayed.



- (a) Library editing screen: This is the screen on which library data is created.
- (b) Library editing menu: This is the menu for editing library data.
- (c) Code: This is the code of the library data that is currently being edited.

### Drawing Operations in the Library Editing Menu

Functions are selected from the library editing menu in order to carry out drawing.

The following graphic elements can be used. All of them are fixed display graphics. For details on the drawing methods, see the relevant pages of 4-3 "Creating Fixed Displays".

- Character input (fixed display) (p.80)
- Marks (display) (p.82)
- Continuous lines (p.84)
- Squares (p.86)
- Polygons (p.88)
- Circles/Arcs (p.90)
- Fans (p.92)
- Tiling (p.93)

Also see the relevant pages of 4-14 "Editing Screen Data" for details on editing (p.150) and environmental settings (p.59).

**Reading From Existing Screen Data**

Existing screen data can be read onto the library editing screen.

**WARNING**

The only data that can be read is fixed displays on the specified screen.



**Reference:** Read graphics are overlapped with any graphics that are already present on the library editing screen, leaving these existing graphics in place.

- Procedure**
1. Select "READ SCR" from the library editing menu.
  2. Locate the bar cursor on the code of the screen from which the graphic is to be read and press the  key.

**Displaying Library Data**

Use the following method to display library data.

Select "Image & Lib" from the initial editing screen to allow select of library data from the image/library selection screen (the library codes are FA20 to FAFF, FB20 to FBFF, FC20 to FCFF, and FD20 to FDFF).

For details on the procedure, see 4-11 "Inputting Image and Library Data" (p.141).

Library data can also be set for the ON and OFF codes of image/library lamps. For details, see "Setting Image/Library Lamps" (p.102).



---

## **SECTION 6**

### **Printing Data**

Various types of data can be printed in file units or in screen data units.

|                                                                      |     |
|----------------------------------------------------------------------|-----|
| 6-1-1 Things that can be Done Using the Data Printing Function ..... | 176 |
| 6-1-2 Printing from the “File Selection” Screen .....                | 178 |
| 6-1-3 Printing from the “Screen Selection” Screen .....              | 180 |

## 6-1-1 Things that can be Done Using the Data Printing Function

Various data relating to the support tool, such as screen data and the conditions of use of memory tables, can be printed out at a printer and checked.

### § Specifiable output destinations

Any of the following three output destinations can be specified:

Printer: Screen images, various settings, etc., can be printed out at a printer.

File (specify the file name): Various settings and other data can be output as a DOS text file. However, screen images cannot be output to a file.

Display: Screen images, various settings and other data, can be displayed on the screen.

### § Types of data that can be displayed

Printing can be initiated in one of two ways: by selecting "Print" on the "File Selection" screen or by selecting "Print" on the "Screen Selection" screen. The data that can be printed differs according to the method used.

### § When "Print" is selected on the "File Selection" screen

- (1) Print out of the file list
- (2) Print out of the screen list
- (3) Print out of screen images
- (4) Print out of cross-references (the conditions of use of memory tables)
- (5) Print out of display history records received from the PT
- (6) Print out of the mark list
- (7) Print out of image/library data
- (8) Printout of direct connection information (only when using direct connection)

The mark list can only be output to the printer.

### § When "Print" is selected on the "Screen Selection" screen

The following information can be specified, in single screen units.

- (1) Screen images
- (2) Color printing (NT30C and NT610C)
- (3) Detailed information

Before attempting printing, make sure that the printer is connected and that there is paper in the printer.

- Reference:** S The environmental settings (tool settings for the “Edit” screen) determine whether or not lamp/touch switch numbers, memory table numbers, and image/library numbers are printed or not.
- S The type of printer and the presence or absence of a sheet feeder are set in the “Tool Settings” (see p.22).


6-1-2     Printing from the “File Selection” Screen

Use the following method to specify printing from the “File Selection” screen.

- Procedure
1.

2.

3.
- Locate the bar cursor on the file to be printed.  
Press the [F3] (Print) key.  
Locate the bar cursor on the data to be printed.

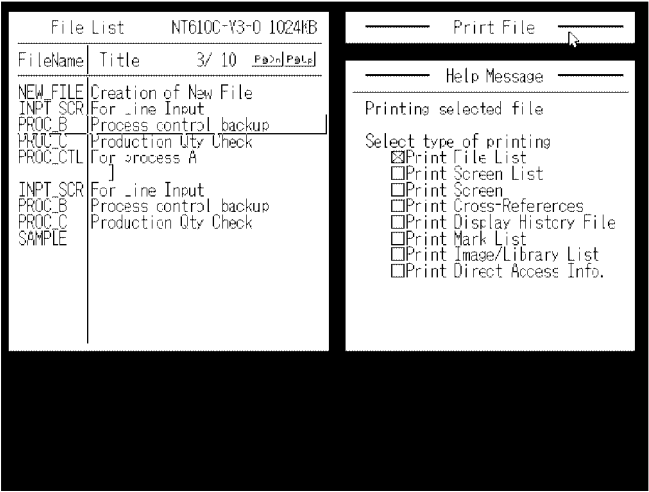

- S Print File List:

Select to print the set memory, memory used, etc., for all files.
- S Print Screen List:

Select to print the screen numbers, comments in screens, etc.
- S Print Screen:

Select to print images or other data in the screen in a file.

Set the following settings:

S Printing/non-printing of screen images

S Method for printing color (NT30C and NT610C) ... No / Imitation / 8 colors

("Imitation" is printing in monochrome with 8 grayscale levels).

S Printing/non-printing of detailed information

S Print Cross-References:

Select to print numeral memory tables, character-string memory tables, and the conditions of use of bits.

Set the following settings:

S Memory Table

Print the conditions of use of memory tables.

S Bit

Print the conditions of use of bits.

178

- S All  
Print the conditions of use of all memory tables.
    - S Use Data only  
Print only the part of the file used for screen data.
  - S Print Display History File: Select to print the display history record data received from the PT.  
  
Input the file whose display history record data is to be printed.
  - S Print Mark List: Select to print a list of marks.
  - S Print Image/Library List: Select to print a list of image data and library data. This list can only be printed out when using an NT30, NT30C, NT612G, or NT610C.
  - S Print Direct Access Info.: Select to print the direct connection information.  
  
Set the following settings:
    - S All  
Print all direct connection information.
    - S Use Data only  
Print only the specified direct connection information.
- (4) Specify the output destination and press the  key.  
Depending on the data to be printed, further settings may be necessary.  
When the marks list is printed "Print Mark List" is not displayed.
- (5) Check the printer and press the  key.  
The data will be printed.  
Press the [Esc] key to stop printing.

### 6-1-3 Printing from the “Screen Selection” Screen

Use the following method to specify printing from the “Screen Selection” screen.

- Procedure**
1. Locate the bar cursor on the screen number whose data is to be printed.  
If the screen data of more than one screen is to be printed, “mark” each of the relevant screen numbers.  
" For details on using the mark function, see 3-5 “Screen Selection” Screen (p.31).
  2. Press the [F3] (Print) key.
  3. Specify the output destination.
  4. Specify the printing format.

| Help Message                              |                                         |                                            |                               |
|-------------------------------------------|-----------------------------------------|--------------------------------------------|-------------------------------|
| Select the print format                   |                                         |                                            |                               |
| <input checked="" type="checkbox"/> Image | <input checked="" type="checkbox"/> Yes | <input type="checkbox"/> No                |                               |
| <input type="checkbox"/> Color            | <input type="checkbox"/> No             | <input checked="" type="checkbox"/> Imitat | <input type="checkbox"/> 8Col |
| <input type="checkbox"/> Detl             | <input type="checkbox"/> Yes            | <input checked="" type="checkbox"/> No     |                               |

S Scr Image: Specify whether or not the screen image is to be printed as it is.

S Col Print: If using an NT610C, specify the method that will be used to print color (“Imitat” means printing in monochrome with 8 grayscale levels).

S Detl Info: Specify whether or not to print detailed information relating to the screen.

5. Check the printer and press the key.

The data will be printed.

Press the [Esc] key to stop printing.

<Restrictions on data printing>

S If there is no data for an item, nothing will be printed.

S Up to 62 lines can be printed on one page.

S Up to 32 character data can be printed.

S If continuous screens or overlapping screens are printed with “No” set in the detailed information printing settings, only the child screen numbers will be printed.

S If continuous screens are printed with “Yes” set in the detailed information printing settings, the screen image and child screen number of the child screen specified as number one will be printed.

S If overlapping screens are printed with “Yes” set in the detailed information printing settings, the screen image and child screen numbers will be printed.

NT30C and NT610C Screen Data Printing Example


Shown here is an example of screen data printing with an NT610C. Printing is carried out in the same way when using an NT30C.

In this example, the screen includes black characters on a white background, and squares colored with all the available colors: the results of printing with “Imitat” and “No” selected for “Col Print” are shown below.

Col Print: Imitat



Col Print: No

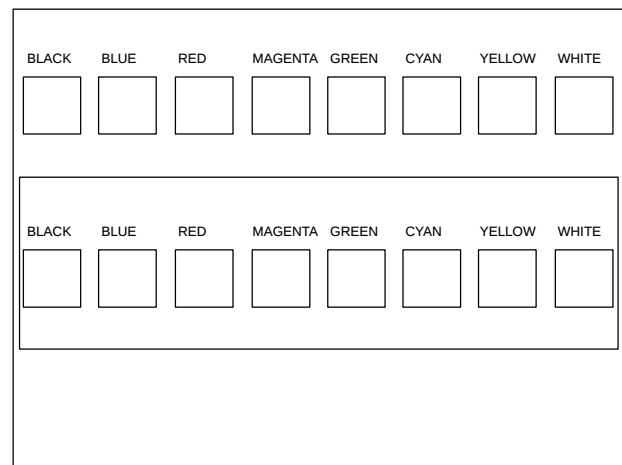

When “No” is selected, neither the tiling nor the inversion of the graphics are shown and only the outlines are printed.



---

## **SECTION 7**

### **Data Communication**

This chapter describes how screen data created using the support tool can be sent to the PT or written to a memory board, and how data such as screens and display histories received from the PT can be communicated.

|       |                                                                    |     |
|-------|--------------------------------------------------------------------|-----|
| 7-1   | Preparation and Procedure for Data Communication with the PT ..... | 184 |
| 7-2   | Transmitting Data .....                                            | 188 |
| 7-3   | Receiving Data .....                                               | 190 |
| 7-3-1 | Data Reception .....                                               | 190 |
| 7-3-2 | Reception of Display History Records .....                         | 192 |

## 7-1 Preparation and Procedure for Data Communication with the PT

Screen data created using the support tool, and mark and memory table information, etc., can be transferred to the PT data memory. It is also possible to receive various types of data and display history records from the PT and save them.

**Caution:** When using an NT30, NT30C, NT612G, or NT610C, data is communicated in file units. Communication in screen units is not possible.

### Connection to the PT


Connect the PT and personal computer with an RS-232C connecting cable.

Connect this cable to the tool interface at the PT side and to the RS-232C interface at the personal computer side. Note that this connection with the PT is established only for data communication; it is not usually necessary to make this connection.


#### S Connection method

Make the connection with the RS-232C cable in the manner shown below.


#### Connection to an NT20M/NT20S

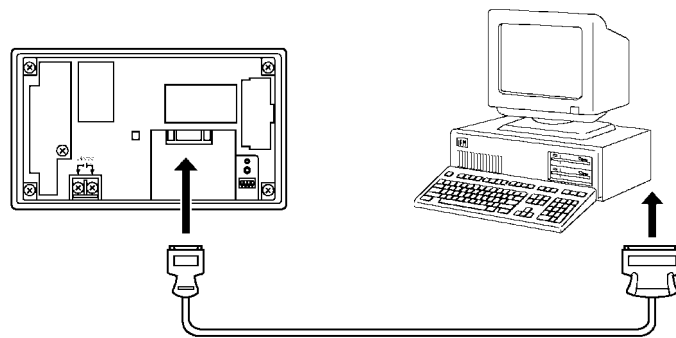


#### Connection to an NT2000M

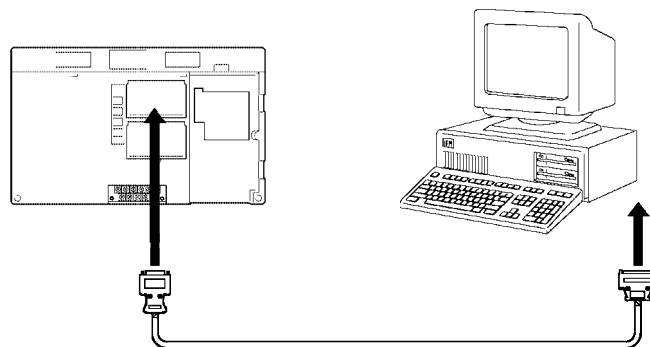


## Connection to an NT600M/NT600S/NT612G/NT620S/NT620C

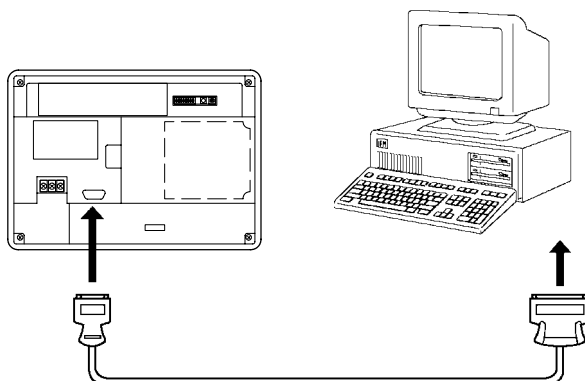

## Connection to an NT30/NT30C

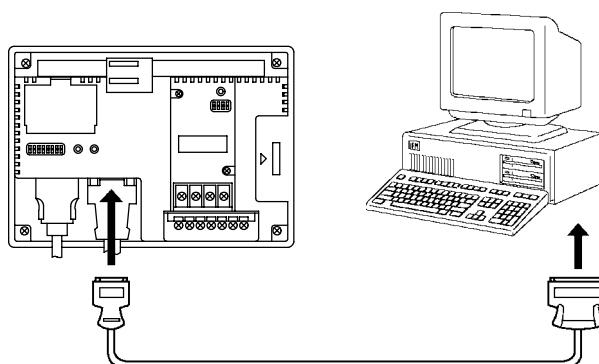

## Connection to an NT610C

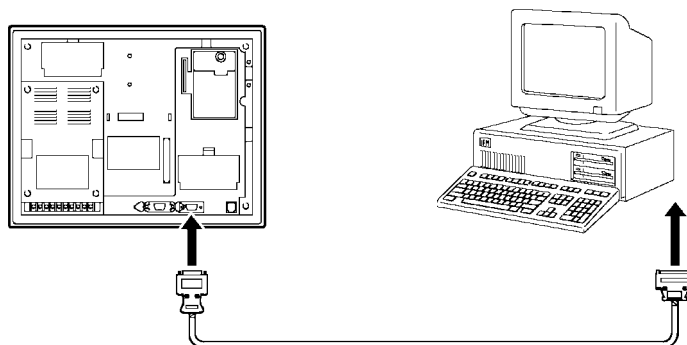

## S Connecting cable

Make the connecting cable by referring to Appendix A "Connecting Cable Specifications".

**Communication Speed**

Select the communication speed for communication with the PT by setting "Communication Mode" on the "Tool Settings" screen.

Setting "Hspeed" for this setting will enable high-speed data transfer.

If the communication environment is unfavorable or communication errors occur, set "Stndrd" for low-speed communication so that the data will be communicated reliably.

**Reference:** Presented below are OMRON's measurements of the time taken to transfer the entire capacity of the image memory when transfer is in the "Hspeed" mode. Use these as a guide to data communication times.

§ When using a capacity of 512 Kbytes: 5 min. 5 sec.

§ When using a capacity of 1 Mbyte: 9 min. 30 sec.

Communication in the "Stndrd" mode takes approximately twice as long as communication in the "Hspeed" mode.

**Tool Settings When Communicating With an NT20S or NT600S**

When using an NT20S or NT600S, the combination of tool settings that allows communication with the support tool depends on which model is used.

Set the tool settings for communication with an NT20S or NT600S correctly by referring to the table below.

§ When using an NT20S

| Tool Settings     |               | Model       |                             |             |
|-------------------|---------------|-------------|-----------------------------|-------------|
| "PT Type" Setting | Direct Access | NT20S-ST121 | NT20S-ST121-V1/<br>ST122-V1 | NT20S-ST128 |
| 20M               | Not used      | x           | x                           | x           |
| 20S               | Not used      | x           | x                           | f           |
| 20M               | Ver.4         | f           | f in NT20M compatible mode  | x           |
| 20S               | Ver.4         | x           | f                           | x           |
| 20S               | Ver.5         | x           | f                           | x           |

f : possible x: not possible

§ When using an NT600S

| Tool Settings     |               | Model                       |                                                    |                                                   |
|-------------------|---------------|-----------------------------|----------------------------------------------------|---------------------------------------------------|
| "PT Type" Setting | Direct Access | NT600S-ST121/<br>ST211      | NT600S-ST 121-V1/<br>ST211-V1 direct<br>connection | NT600S-ST121-V1/<br>ST211-V1 direct<br>connection |
| 600M              | Not used      | x                           | x                                                  | x                                                 |
| 600S              | Not used      | x                           | x                                                  | f                                                 |
| 600M              | Ver.4         | f in NT600M compatible mode | f in NT600M compatible mode                        | x                                                 |
| 600S              | Ver.4         | f                           | f                                                  | x                                                 |
| 600S              | Ver.5         | x                           | f                                                  | x                                                 |

f : possible x: not possible

## Types of Data Communication with Each PT Model

There are two methods for data communication, as follows:

- S Data communication in file units executed using the “File Selection” screen
- S Data communication in screen units executed using the “Screen Selection” screen.

Whether or not data communication in file units or screen units can be used is shown in the table below for each PT model.


| PT Model      | File Units | Screen Units                                         |
|---------------|------------|------------------------------------------------------|
| NT20S         | f          | ST121: x<br>ST121-V1: n*<br>ST122-V1: n*<br>ST128: f |
| NT20M/NT2000M | f          | f                                                    |
| NT600S        | f          | n*                                                   |
| NT600M        | f          | f                                                    |
| NT30          | f          | x                                                    |
| NT30C         | f          | x                                                    |
| NT612G        | f          | x                                                    |
| NT610C        | f          | x                                                    |
| NT620S        | f          | x                                                    |
| NT620C        | f          | x                                                    |

f : possible n : partly possible x : not possible

\*: In the NT20S/NT600M compatible mode, simultaneous transmission of multiple screens and verification are not possible.

## Procedure for Data Communication

Use the following procedure to make preparations at the PT and support tool sides and execute data communication.

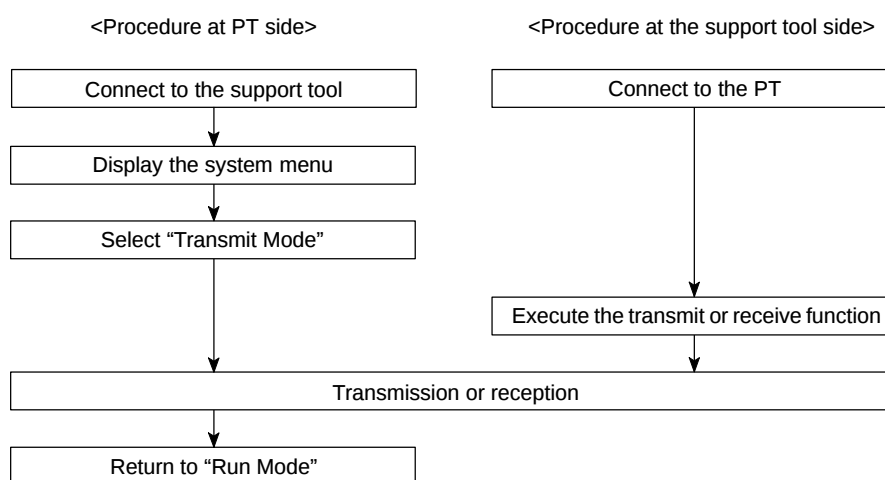

**Reference:** For details on the operations at the PT side, refer to the operation manual for the PT.

## 7-2 Transmitting Data

This is the procedure for transmitting data such as image data or memory table data to the PT, and writing it into the flash memory type data memory of the PT.

There are two methods for transmitting data, as follows:

- § Selecting a file from the “File Selection” screen and transmitting it to the PT.
- § Selecting a screen from the “Screen Selection” screen and transmitting it to the PT.

### Transmitting Data in File Units

Select a file from the “File Selection” screen and transmit it to the PT.

- Procedure**
1. Set the PT to the “Transmit Mode”.
    - " Check that the write switch of the screen data memory board is released.
  2. Locate the bar cursor on the file to be sent on the “File Selection” screen.
  3. Press the [F6] (Tmx.) key.
  4. A message will be displayed for the purpose of confirmation.
    - Check the message and press the  key.
    - " Press the [Esc] key to abort data transmission.
  5. Data transmission will start.
    - On completion of the transmission, the message “Data successfully transmitted.” will be displayed.
    - " Press the [Esc] key to stop transmission part way through.

**Reference:** When data transmission has been aborted part way through, initialize the image data memory: do this by using the DIP switch on the PT.

For details, refer to the operation manual for the PT.

Also initialize the image data memory by this means if data transmission is stopped due to trouble.

**Data Transmission in Screen Units**

Whether or not data communication in screen units is possible depends on the PT model used. For details, see "Types of Data Communication with Each PT Model" (p.185).

- Procedure**
1. Set the PT to the "Transmit Mode".  
Check that writing to the screen data memory is possible.
  2. Locate the bar cursor at the screen to be transmitted on the "Screen Selection" screen.  
  
When transmitting multiple screens, "mark" the appropriate screens. For details on using the marking function, see 3-5 "Screen Selection Screen" (p.31).  
  
If transmitting numeral or character-string memory table data only, it does not matter where the bar cursor is.
  3. Press [F10] (Next), then [F6] (Tmx).
  4. Specify either "Screen Data" or "Memory Table" as the data to be transmitted, and press the  key.
  5. Specify whether or not verification (writing check) is to be executed, then press the  key.
  6. A confirmation message will be displayed.  
Check the message and press the  key.  
  
To abort transmission, press the [Esc] key.
  7. Transmission will start.  
  
On completion of transmission, the message "Data successfully transmitted" is displayed.  
  
To abort transmission part way through, press the [Esc] key.

**Reference:** After aborting data transmission part way through, initialize the screen data memory. To do this, perform forced initialization with the DIP switch on the PT. For details, refer to the Operation Manual for the PT. Take the same measures if data transmission is discontinued due to trouble.

## 7-3 Receiving Data

This is the procedure for receiving screen data, memory table data, display histories, etc., from the PT and storing this data as support tool files, and for receiving data in screen units, and writing it to the screen data of the support tool.

### 7-3-1 Data Reception

Use the following procedure to receive all the data in the data memory and write it to a file.

There are two methods for receiving data, as follows:

S Receiving all the data in the PT's data memory and writing it to a file.

S Receiving data in screen units and writing it to the support tool.

#### Receiving Data in File Units

- Procedure**
1. Set the PT to the "Transmit Mode".
  2. Display the "File Selection" screen.  
It does not matter where the bar cursor is.
  3. Press the [F7] (Rcv.) key.
  4. Input the file name of the file to which the received data is to be written.
  5. Press the  key.  
File reception will start.
- " If a file that already exists is specified, a message asking whether or not the file is to be overwritten will be displayed. If you do not want to overwrite it, press the [Esc] key.
- " Press the [Esc] key to stop reception part way through.
- On completion of reception, the message "Data successfully transmitted" will be displayed.

**Receiving Data in Screen Units**

Whether or not it is possible to execute data reception in screen units depends on the PT model. For details, see “Types of Data Communication with Each PT Model” (p.185).

- Procedure**
1. Set the PT to the “Transmit Mode”
  2. Display the “Screen Selection” screen.  
It does not matter where the bar cursor is.
  3. Press the [F10] (Next) key, then press the [F7] (Rcv.) key.
  4. Specify “Screen Data” or “Memory Table” as the type of data to be received, then press the  key.
  5. Specify the screen number at the PT side and the screen number at the support tool side, pressing the  key after each specification.
  6. A message will be displayed for the purpose of confirmation.  
Check the message and press the  key.  
" Press the [Esc] key to abort reception.
  7. Reception will start.  
On completion of reception, the message “Data successfully transmitted” will be displayed.  
" Press the [Esc] key to stop reception part way through.

## 7-3-2 Reception of Display History Records

When a screen for which the "History" screen attribute is set is displayed during PT operation, the PT records this display in the display history record.

This display history record can be read using the support tool in order to analyze how the screen is used or its frequency of display, for example.

Received files are saved in the DOS text format in the set data directory, and the extension ".G6L" is automatically assigned to them. The data directory is set in the "Tool Settings".

The received data is stored in the order of the order of occurrence record and the order of frequency record.

**Reference:** Received display history data can be printed out by selecting [F3] (Print) on the "File Selection" screen.

**Procedure** 1. Set the PT to the "Transmit Mode".

2. Display the "File Selection" screen.

It does not matter where the bar cursor is.

3. Press the [F5] (Hist.) key.

4. Input the file name of the file in which the received display history record is to be saved.

Specify a file name no longer than eight characters. Do not specify an extension: the support tool will automatically assign the extension ".G6L" to the file.

5. Press the  key to start file reception.

" If a file that already exists is specified, a message asking whether or not the file is to be overwritten will be displayed.

Press the  key to start reception. If you do not want to overwrite data, press the [Esc] key.

" To stop reception part way through, press the [Esc] key.

On completion of reception, the message "Data completely received" will be displayed.

## APPENDIX A

### Connecting Cable Specifications

#### Tool Interface Connector Specifications


The following specifications apply to the connection between the PT and the support tool (personal computer).

| Pin No. | Signal Name | Meaning         |
|---------|-------------|-----------------|
| 1       | FG          | Frame ground    |
| 2       | SD          | Send data       |
| 3       | RD          | Receive data    |
| 4       | RS          | Request to send |
| 5       | CS          | Clear to send   |
| 9       | SG          | Signal ground   |

#### Assembly of Connecting Cables

Wiring should be carried out in one of the following ways, depending on the type of RS-232C connector.


##### 25-pin Connector

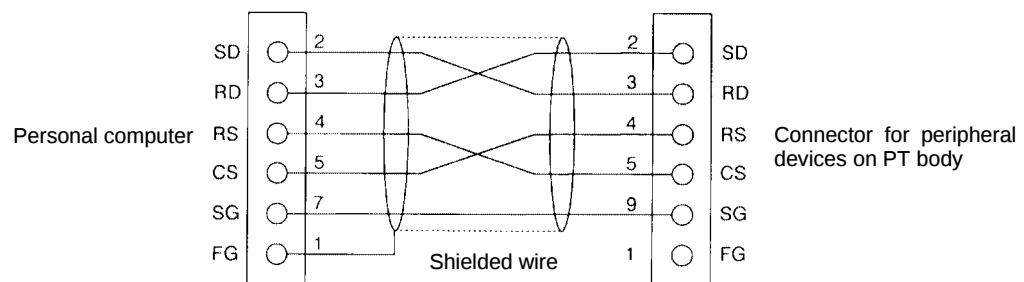

Use the following recommended products when making the connecting cable.

| Name           | Model                   | Remarks                                          |
|----------------|-------------------------|--------------------------------------------------|
| Connector      | XM2D-2501               | 25-pin Made by OMRON                             |
|                | XM2A-0901               | 9-pin Made by OMRON                              |
| Connector hood | XM2S-2511               | 25-pin Made by OMRON                             |
|                | XM2S-0911               | 9-pin Made by OMRON                              |
| Cable          | AWG28×5P<br>IFVV-SB     | Multi-core shielded cable Made by Fujikura, Ltd. |
|                | CO-MA-VV-SB<br>5P×28AWG | Multi-core shielded cable Made by Hitachi, Ltd.  |

## 9-pin Connector

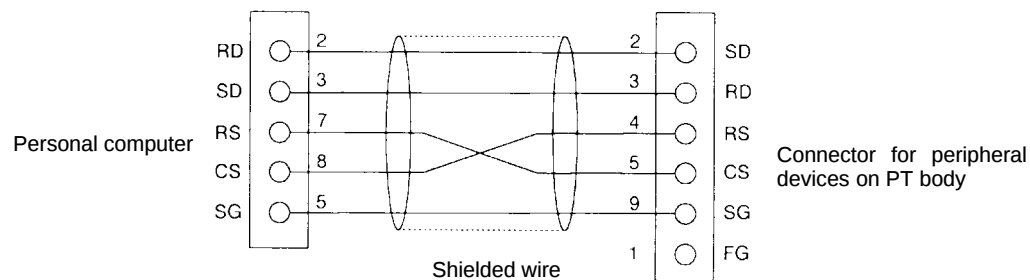

Use the following recommended products when making the connecting cable.

| Name           | Model                   | Remarks                                          |
|----------------|-------------------------|--------------------------------------------------|
| Connector      | XM2D-0901               | 9-pin Made by OMRON                              |
|                | XM2A-0901               | 9-pin Made by OMRON                              |
| Connector hood | XM2S-0911               | 9-pin Made by OMRON (Two)                        |
| Cable          | AWG28×5P<br>IFVV-SB     | Multi-core shielded cable Made by Fujikura, Ltd. |
|                | CO-MA-VV-SB<br>5P×28AWG | Multi-core shielded cable Made by Hitachi, Ltd.  |

## APPENDIX B

### Error Messages

The error messages that may be displayed while using the support tool, and the action to take in response to them, are shown below.

| Error Message                                                                                   | Corrective Action                                                                                                                                                                        |
|-------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3,000 I/O comments registered. (Confirm)<br>No more can be registered.                          | If there unnecessary comments, delete them.                                                                                                                                              |
| One screen exceeds 16 Kbytes. (Confirm)                                                         | The maximum data size for one screen is 16 Kbytes. If there is unnecessary data, delete it (see 3-5 "Screen Selection Screen" on p.31).                                                  |
| Image/Library area exceeds 64 KBytes. (Confirm)                                                 | Delete unnecessary data.                                                                                                                                                                 |
| The number of bits for cross-referencing has exceeded 3000. (Confirm)                           | If there is unnecessary screen data, delete it.                                                                                                                                          |
| Not usable with this version. (Confirm)<br>Check usable functions and adjust the tool settings. | The current tool settings ("PT Model", "Direct Access") do not correspond with the specified function.                                                                                   |
| This file can't be sent. (Confirm)<br>Check the tool settings and file (detailed info).         | Files displayed in red cannot be transmitted. Match the tool settings with the file to be transmitted.                                                                                   |
| Work directory disk capacity insufficient. (Confirm)                                            | Set the data in a directory with sufficient free area (1 MB or greater).                                                                                                                 |
| Data directory disk capacity insufficient. (Confirm)                                            |                                                                                                                                                                                          |
| Seek error detected. (Confirm)                                                                  | The disk is damaged, or the drive may be faulty. Either replace the disk or inspect the disk drive.                                                                                      |
| Disk is faulty. (Confirm)                                                                       |                                                                                                                                                                                          |
| Sector not found. (Confirm)                                                                     | Initialize (format) the disk in DOS format before using it.                                                                                                                              |
| Check the direct access version. (Confirm)                                                      | Adjust the tool settings to match the direct connection version of the selected file.                                                                                                    |
| Error detected in the data (Confirm)                                                            | Part of the data has been destroyed and it cannot be used as it is. Delete the data and create it again. Or, if there is backup data, use that.                                          |
| Disk may be broken. (Confirm)                                                                   | Replace the disk. If there is a backup disk, use that.                                                                                                                                   |
| Disk is protected. (Confirm)<br>[ G G : Retry      G G : Abort ]                                | Try again after releasing the disk's write protection.                                                                                                                                   |
| Disk not ready. (Confirm)<br>[ G G : Retry      G G : Abort ]                                   | Set the floppy disk correctly in the designated drive and try again.                                                                                                                     |
| Too many registered channels: correct to MAX value?<br>( G G Yes/ G G Abort)                    | The number of registered counter words has been set to two or more by a batch change operation: this is automatically corrected to one word (see "Batch Changing Bits and Words", p.79). |

| Error Message                                                                        | Corrective Action                                                                                                                                                                                                                             |
|--------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PT memory capacity insufficient. (Confirm)<br>Expand the image memory.               | Increase the size of the PT screen memory.                                                                                                                                                                                                    |
| The PT image memory is an EEP-ROM.                                                   | In the case of an EEP-ROM or EP-ROM or Flash ROM, delete data in file units.                                                                                                                                                                  |
| The PT image memory is an EP-ROM.                                                    |                                                                                                                                                                                                                                               |
| Check the combination of PT Type, Memory Size, and Direct Access settings. (Confirm) | Items displayed in red in the tool settings cannot be set.                                                                                                                                                                                    |
| Can't read file. (Confirm)                                                           | Either the disk is faulty, or data has been destroyed. Replace the disk or delete the files and create them again. If there is a backup disk, use that.                                                                                       |
| Can't read screen data. (Confirm)                                                    |                                                                                                                                                                                                                                               |
| Can't read or write data. (Confirm)                                                  |                                                                                                                                                                                                                                               |
| Can't save file.                                                                     | Input the data directory name in the tool settings correctly, then try again.                                                                                                                                                                 |
| Number of files is max. (Confirm)<br>Number of data directory files exceeds max.     | The maximum number of files that can be handled by the support tool is 200. Delete unnecessary files (see 3-4 "File Selection Screen" on p.26).                                                                                               |
| Data this support tool can't handle received.                                        | Either the received data is destroyed, or the support tool you are using is not compatible with the direct connection version of the data. If the same message is displayed even when the latest support tool is used, create the data again. |
| ROM data that support tool can't handle received.                                    |                                                                                                                                                                                                                                               |

## APPENDIX C

### Special Characters

#### English Character Codes

Pin 3 of SW1 must be ON to enable English language messages to use the following codes.

#### Example

Hex code is represented by 30, decimal code by 48, and character by 0.

|    |   |
|----|---|
| 30 | 0 |
| 48 |   |

Code 20 and 32 in the table represents a space, as indicated by "SP".

| Hex Digits<br>1st →<br>2nd ↓ | 2- |    | 3- |   | 4- |   | 5- |   | 6-  |   | 7-  |   | 8-  |   | 9-  |    |
|------------------------------|----|----|----|---|----|---|----|---|-----|---|-----|---|-----|---|-----|----|
| -0                           | 20 | SP | 30 | 0 | 40 | @ | 50 | P | 60  | ' | 70  | p | 80  | Ç | 90  | É  |
|                              | 32 |    | 48 |   | 64 |   | 80 |   | 96  |   | 112 |   | 128 |   | 144 |    |
| -1                           | 21 | !  | 31 | 1 | 41 | A | 51 | Q | 61  | a | 71  | q | 81  | ü | 91  | æ  |
|                              | 33 |    | 49 |   | 65 |   | 81 |   | 97  |   | 113 |   | 129 |   | 145 |    |
| -2                           | 22 | "  | 32 | 2 | 42 | B | 52 | R | 62  | b | 72  | r | 82  | é | 92  | Æ  |
|                              | 34 |    | 50 |   | 66 |   | 82 |   | 98  |   | 114 |   | 130 |   | 146 |    |
| -3                           | 23 | #  | 33 | 3 | 43 | C | 53 | S | 63  | c | 73  | s | 83  | à | 93  | ô  |
|                              | 35 |    | 51 |   | 67 |   | 83 |   | 99  |   | 115 |   | 131 |   | 147 |    |
| -4                           | 24 | \$ | 34 | 4 | 44 | D | 54 | T | 64  | d | 74  | t | 84  | ä | 94  | ö  |
|                              | 36 |    | 52 |   | 68 |   | 84 |   | 100 |   | 116 |   | 132 |   | 148 |    |
| -5                           | 25 | %  | 35 | 5 | 45 | E | 55 | U | 65  | e | 75  | u | 85  | ä | 95  | ò  |
|                              | 37 |    | 53 |   | 69 |   | 85 |   | 101 |   | 117 |   | 133 |   | 149 |    |
| -6                           | 26 | &  | 36 | 6 | 46 | F | 56 | V | 66  | f | 76  | v | 86  | å | 96  | û  |
|                              | 38 |    | 54 |   | 70 |   | 86 |   | 102 |   | 118 |   | 134 |   | 150 |    |
| -7                           | 27 | '  | 37 | 7 | 47 | G | 57 | W | 67  | g | 77  | w | 87  | ç | 97  | ù  |
|                              | 39 |    | 55 |   | 71 |   | 87 |   | 103 |   | 119 |   | 135 |   | 151 |    |
| -8                           | 28 | (  | 38 | 8 | 48 | H | 58 | X | 68  | h | 78  | x | 88  | ê | 98  | ÿ  |
|                              | 40 |    | 56 |   | 72 |   | 88 |   | 104 |   | 120 |   | 136 |   | 152 |    |
| -9                           | 29 | )  | 39 | 9 | 49 | I | 59 | Y | 69  | i | 79  | y | 89  | ë | 99  | Ö  |
|                              | 41 |    | 57 |   | 73 |   | 89 |   | 105 |   | 121 |   | 137 |   | 153 |    |
| -A                           | 2A | *  | 3A | : | 4A | J | 5A | Z | 6A  | j | 7A  | z | 8A  | è | 9A  | Ü  |
|                              | 42 |    | 58 |   | 74 |   | 90 |   | 106 |   | 122 |   | 138 |   | 154 |    |
| -B                           | 2B | +  | 3B | ; | 4B | K | 5B | [ | 6B  | k | 7B  | { | 8B  | ï | 9B  | ç  |
|                              | 43 |    | 59 |   | 75 |   | 91 |   | 107 |   | 123 |   | 139 |   | 155 |    |
| -C                           | 2C | ,  | 3C | < | 4C | L | 5C | \ | 6C  | l | 7C  |   | 8C  | ì | 9C  | £  |
|                              | 44 |    | 60 |   | 76 |   | 92 |   | 108 |   | 124 |   | 140 |   | 156 |    |
| -D                           | 2D | -  | 3D | = | 4D | M | 5D | ] | 6D  | m | 7D  | } | 8D  | í | 9D  | ¥  |
|                              | 45 |    | 61 |   | 77 |   | 93 |   | 109 |   | 125 |   | 141 |   | 157 |    |
| -E                           | 2E | .  | 3E | > | 4E | N | 5E | ^ | 6E  | n | 7E  | ~ | 8E  | À | 9E  | Pt |
|                              | 46 |    | 62 |   | 78 |   | 94 |   | 110 |   | 126 |   | 142 |   | 158 |    |
| -F                           | 2F | /  | 3F | ? | 4F | O | 5F | _ | 6F  | o | 7F  | ˆ | 8F  | Á | 9F  | f  |
|                              | 47 |    | 63 |   | 79 |   | 95 |   | 111 |   | 127 |   | 143 |   | 159 |    |

| Hex Digits<br>1st →<br>2nd ↓ | A-  |     | B-  |   | C-  |   | D-  |   | E-  |   | F-  |    |
|------------------------------|-----|-----|-----|---|-----|---|-----|---|-----|---|-----|----|
| -0                           | A0  | ā   | B0  | ⋮ | C0  | ┐ | D0  | ⌌ | E0  | α | F0  | ≡  |
|                              | 160 |     | 176 | ⋮ | 192 | ┐ | 208 | ⌌ | 224 |   | 240 |    |
| -1                           | A1  | ī   | B1  |   | C1  | ┘ | D1  | ⌍ | E1  | β | F1  | ⊥  |
|                              | 161 |     | 177 |   | 193 | ┘ | 209 | ⌍ | 225 |   | 241 |    |
| -2                           | A2  | ó   | B2  | ⋮ | C2  | ┘ | D2  | ⌍ | E2  | Γ | F2  | ≥  |
|                              | 162 |     | 178 | ⋮ | 194 | ┘ | 210 | ⌍ | 226 |   | 242 |    |
| -3                           | A3  | û   | B3  | ┘ | C3  | — | D3  | ⌌ | E3  | π | F3  | ≤  |
|                              | 163 |     | 179 | ┘ | 195 | — | 211 | ⌌ | 227 |   | 243 |    |
| -4                           | A4  | ñ   | B4  | ┘ | C4  | — | D4  | ⌌ | E4  | Σ | F4  | ┘  |
|                              | 164 |     | 180 | ┘ | 196 | — | 212 | ⌌ | 228 |   | 244 |    |
| -5                           | A5  | N   | B5  | ⌌ | C5  | + | D5  | F | E5  | σ | F5  | J  |
|                              | 165 |     | 181 | ⌌ | 197 | + | 213 | F | 229 |   | 245 |    |
| -6                           | A6  | a   | B6  | ⌌ | C6  | ⌌ | D6  | ⌌ | E6  | μ | F6  | ÷  |
|                              | 166 |     | 182 | ⌌ | 198 | ⌌ | 214 | ⌌ | 230 |   | 246 |    |
| -7                           | A7  | q   | B7  | ┘ | C7  | ┘ | D7  | ⌌ | E7  | τ | F7  | ≈  |
|                              | 167 |     | 183 | ┘ | 199 | ┘ | 215 | ⌌ | 231 |   | 247 |    |
| -8                           | A8  | ¿   | B8  | ⌌ | C8  | ⌌ | D8  | + | E8  | Φ | F8  | °  |
|                              | 168 |     | 184 | ⌌ | 200 | ⌌ | 216 | + | 232 |   | 248 |    |
| -9                           | A9  | ┘   | B9  | ⌌ | C9  | ⌌ | D9  | ┘ | E9  | Θ | F9  |    |
|                              | 169 |     | 185 | ⌌ | 201 | ⌌ | 217 | ┘ | 233 |   | 249 |    |
| -A                           | AA  | —   | BA  | ⌌ | CA  | ⌌ | DA  | ⌌ | EA  | Ω | FA  | *1 |
|                              | 170 |     | 186 | ⌌ | 202 | ⌌ | 218 | ⌌ | 234 |   | 250 |    |
| -B                           | AB  | 1/2 | BB  | ┘ | CB  | ┘ | DB  | ■ | EB  | δ | FB  | *1 |
|                              | 171 |     | 187 | ┘ | 203 | ┘ | 219 | ■ | 235 |   | 251 |    |
| -C                           | AC  | 1/4 | BC  | ┘ | CC  | ┘ | DC  | ■ | EC  | ∞ | FC  | *1 |
|                              | 172 |     | 188 | ┘ | 204 | ┘ | 220 | ■ | 236 |   | 252 |    |
| -D                           | AD  | ┘   | BD  | ┘ | CD  | — | DD  | ■ | ED  | ø | FD  | *1 |
|                              | 173 |     | 189 | ┘ | 205 | — | 221 | ■ | 237 |   | 253 |    |
| -E                           | AE  | «   | BE  | ┘ | CE  | ┘ | DE  | ■ | EE  | ε | FE  | *2 |
|                              | 174 |     | 190 | ┘ | 206 | ┘ | 222 | ■ | 238 |   | 254 |    |
| -F                           | AF  | »   | BF  | ┘ | CF  | ⌌ | DF  | ■ | EF  | ○ | FF  | *3 |
|                              | 175 |     | 191 | ┘ | 207 | ⌌ | 223 | ■ | 239 |   | 255 |    |

\*1 Used as the prefix for library data codes ( 2 bytes).

\*2 Used as the prefix for image data codes ( 2 bytes).

\*3 Used as the prefix for mark data codes ( 2 bytes).

# INDEX

## A

|                                     |        |
|-------------------------------------|--------|
| Alarm .....                         | 145    |
| Alarm history .....                 | 144    |
| Alarm list .....                    | 144    |
| Allocated bit .....                 | 75     |
| Allocated word .....                | 75     |
| Alter .....                         | 154    |
| Arcs .....                          | 90     |
| Assembly of connecting cables ..... | 193    |
| Attribute .....                     | 62, 64 |

## B

|                                          |          |
|------------------------------------------|----------|
| Back-up .....                            | 3        |
| Background color .....                   | 66       |
| Backlight OFF cancelling attribute ..... | 45       |
| Bar cursor .....                         | 10       |
| Bar graph .....                          | 117, 118 |
| Basic color .....                        | 66       |
| Batch changing .....                     | 79, 157  |
| Bit map files .....                      | 169      |
| Bit memory table .....                   | 144      |
| Bit memory table setting .....           | 47, 72   |
| Bits .....                               | 75, 178  |
| Boundary color .....                     | 66       |
| Box cursor .....                         | 10       |
| Box tiling mode .....                    | 167      |
| Brkn line frame disp. ....               | 60       |
| “Brkn-line grph intv” setting .....      | 127      |
| Broken line graph .....                  | 117, 123 |
| Bus mouse .....                          | 2        |

## C

|                            |     |
|----------------------------|-----|
| Cables .....               | 193 |
| Center of the screen ..... | 52  |
| Centering .....            | 153 |
| Cha ref .....              | 162 |
| Change comment .....       | 38  |
| Change file title .....    | 30  |

|                                                                       |                      |
|-----------------------------------------------------------------------|----------------------|
| Changing orders .....                                                 | 139                  |
| Character input .....                                                 | 54, 61               |
| Character keys .....                                                  | 108                  |
| Character reference .....                                             | 162                  |
| Character-string displays .....                                       | 61                   |
| Character-string memory table ...                                     | 40, 98, 143, 177     |
| Character-string memory table setting .....                           | 44, 70               |
| Character-string setting input fields .....                           | 134                  |
| Check box .....                                                       | 10                   |
| Check on continuous screens/overlapping<br>screens .....              | 39                   |
| Child screen .....                                                    | 38                   |
| Circles .....                                                         | 90, 168              |
| Clear .....                                                           | 163                  |
| Clicking .....                                                        | 12                   |
| Clock function .....                                                  | 68                   |
| Col print .....                                                       | 180, 181             |
| Color mode .....                                                      | 166                  |
| Color specification when the NT model setting<br>is “30” (NT30) ..... | 58                   |
| Communication mode .....                                              | 23, 184              |
| Communication port .....                                              | 23                   |
| Communication speed .....                                             | 186                  |
| Connecting cable .....                                                | 185                  |
| Connecting cable specifications .....                                 | 193                  |
| Connection to the PT .....                                            | 184                  |
| Connector .....                                                       | 193, 194             |
| Connector hood .....                                                  | 193, 194             |
| Continuous screen .....                                               | 38                   |
| Control keys .....                                                    | 109                  |
| Coordinate display .....                                              | 52                   |
| Copy .....                                                            | 27, 35, 77, 152, 162 |
| Copy setting .....                                                    | 110                  |
| Creating area .....                                                   | 161                  |
| Cross-hair cursor .....                                               | 13                   |
| Cup cursor .....                                                      | 10                   |
| Cursor motion .....                                                   | 111                  |
| Cursors .....                                                         | 10                   |

## D

|                                            |             |
|--------------------------------------------|-------------|
| Data communication .....                   | 184         |
| Data communication with P-ROM writer ..... | 30          |
| Data communication with the PT .....       | 182         |
| Data directory .....                       | 23          |
| DATA IN .....                              | 131, 134    |
| Decimal .....                              | 64          |
| Delete .....                               | 27, 35, 152 |
| Direct .....                               | 61, 63      |
| Direct Access .....                        | 22          |
| Direct connection information .....        | 42          |
| Direct input .....                         | 75          |
| Direct Macn Type .....                     | 22          |
| Direct modification .....                  | 57          |
| DISKCOPY .....                             | 4           |
| Disp mode .....                            | 59          |
| Disp sign .....                            | 64          |
| Disp type .....                            | 64          |
| Display .....                              | 2           |
| Display area .....                         | 112         |
| Display color .....                        | 66          |
| Display color for negative value .....     | 67          |
| Display color for positive value .....     | 67          |
| Display library data .....                 | 173         |
| Display sequence .....                     | 53          |
| Displaying images .....                    | 170         |
| Displaying marks .....                     | 163         |
| DOS .....                                  | 2           |
| Double click .....                         | 13          |

## E

|                           |     |
|---------------------------|-----|
| Editing .....             | 150 |
| Editing screen data ..... | 150 |
| "Edit" screen .....       | 51  |
| Ellipses .....            | 168 |
| EMS .....                 | 3   |
| End plate .....           | 132 |
| Enlarged display .....    | 167 |
| Enquiry cursor .....      | 10  |

|                                                                       |     |
|-----------------------------------------------------------------------|-----|
| Environmental settings<br>(Tool settings for the "Edit" screen) ..... | 59  |
| Error messages .....                                                  | 195 |
| Exit procedure .....                                                  | 9   |
| Extended I/O .....                                                    | 140 |
| Extended I/O input setting .....                                      | 45  |
| Extended I/O output setting .....                                     | 46  |

## F

|                                     |        |
|-------------------------------------|--------|
| Fans .....                          | 92     |
| File .....                          | 26     |
| "File list" screen .....            | 26     |
| Fixed displays .....                | 80     |
| Flashing color .....                | 67     |
| Floppy disk drive .....             | 2      |
| Flsh .....                          | 62, 64 |
| FORMAT .....                        | 4      |
| Frame color .....                   | 66, 67 |
| Function keys .....                 | 11     |
| Functions of the support tool ..... | xvi    |

## G

|              |        |
|--------------|--------|
| Graphs ..... | 117    |
| Grid .....   | 52, 59 |

## H

|                             |          |
|-----------------------------|----------|
| Half-size .....             | 64       |
| Half-size font .....        | 62       |
| Hard disk drive .....       | 2        |
| Hardware .....              | 2        |
| Hardware combinations ..... | xii      |
| Help messages .....         | 15       |
| Hexadecimal .....           | 64       |
| History .....               | 145, 192 |
| Hspeed .....                | 184      |

## I

|                                   |      |
|-----------------------------------|------|
| IBM DOS .....                     | 2    |
| IBM PC/AT personal computer ..... | 2, 4 |
| Icon .....                        | 12   |

|                                        |               |
|----------------------------------------|---------------|
| Image & Lib .....                      | 142, 165, 171 |
| Image creation .....                   | 165           |
| Image editing screen .....             | 166           |
| Image/library # disp. ....             | 60            |
| Image/library lamp .....               | 102           |
| Images .....                           | 141, 164      |
| Imitat .....                           | 180           |
| In frm .....                           | 150           |
| Increment copy .....                   | 77            |
| Indrct .....                           | 61, 63        |
| Initial editing screen .....           | 51            |
| Input keys .....                       | 106           |
| Input settings .....                   | 128           |
| Inputting image and library data ..... | 141           |
| Inputting marks .....                  | 82            |
| INSTALL .....                          | 4             |
| Installation method .....              | 4             |
| Integer .....                          | 64            |
| Inv. ....                              | 62, 64, 163   |

## K

|                               |     |
|-------------------------------|-----|
| Key input prompt cursor ..... | 10  |
| Keyboard display .....        | 135 |

## L

|                              |          |
|------------------------------|----------|
| Lamp bit .....               | 107      |
| Lamp/TouchSw # disp. ....    | 60       |
| Lamp/TSW disp mode .....     | 60       |
| Lamps .....                  | 100      |
| Left clicking .....          | 12       |
| Left mouse button .....      | 12       |
| Length .....                 | 62       |
| Library data .....           | 141, 171 |
| Library data creation .....  | 171      |
| Library editing screen ..... | 172      |
| Lines .....                  | 168      |
| List .....                   | 145      |
| Lit color .....              | 66       |
| Locus .....                  | 168      |
| Locus mode .....             | 167      |

|             |     |
|-------------|-----|
| LOUPE ..... | 167 |
|-------------|-----|

## M

|                                          |         |
|------------------------------------------|---------|
| Main menu .....                          | 8, 21   |
| Mark creation .....                      | 39      |
| Mark creation screen .....               | 160     |
| Mark reference .....                     | 162     |
| Marks .....                              | 82, 160 |
| Memory size .....                        | 22      |
| Memory Table # Disp. ....                | 60      |
| Menu box .....                           | 51      |
| Menu Tree .....                          | xvii    |
| “–” range in frame .....                 | 67      |
| Mk Ref .....                             | 162     |
| Monochrome with 8 grayscale levels ..... | 177     |
| Mouse .....                              | 2, 23   |
| Mouse cursor .....                       | 10      |
| Move .....                               | 152     |
| Moving the cursor .....                  | 54      |

## N

|                                            |                       |
|--------------------------------------------|-----------------------|
| Next function keys .....                   | 30, 39                |
| Norm .....                                 | 62, 64                |
| Normal .....                               | 64                    |
| Normal font .....                          | 62                    |
| Normal lamps .....                         | 100                   |
| Notify bit .....                           | 45, 107               |
| NT20M/NT20S enlrgd disp .....              | 60                    |
| Numeral displays .....                     | 96                    |
| Numeral memory table settings .....        | 44                    |
| Numeral memory tables .....                | 40, 96, 117, 143, 178 |
| Numeral setting input fields .....         | 131                   |
| Numeric keys .....                         | 45, 128, 136          |
| Numeric value/character-string input ..... | 54                    |

## O

|                                  |     |
|----------------------------------|-----|
| OMRON product references .....   | vi  |
| On frm .....                     | 150 |
| Organization of the manual ..... | xi  |
| Overlapping screen .....         | 38  |

## P

|                                        |                    |
|----------------------------------------|--------------------|
| Parent screen .....                    | 38                 |
| “+” range in frame .....               | 67                 |
| Points .....                           | 168                |
| Polygons .....                         | 88                 |
| Polylines .....                        | 84                 |
| Previous function keys .....           | 30, 41             |
| Print .....                            | 2, 23, 28, 35, 176 |
| Print cross-references .....           | 178                |
| Print direct access info. ....         | 179                |
| Print display history file .....       | 179                |
| Print file list .....                  | 178                |
| Print image/library list .....         | 179                |
| Print mark list .....                  | 179                |
| Print screen list .....                | 178                |
| Print screen setting .....             | 112, 178           |
| Procedure for data communication ..... | 187                |
| PT status control area .....           | 43                 |
| PT status notify area .....            | 43                 |
| PT type .....                          | 22                 |
| Ptot color .....                       | 66                 |

## Q

|                                      |    |
|--------------------------------------|----|
| Quitting after saving the data ..... | 52 |
| Quitting without saving data .....   | 52 |

## R

|                                                 |        |
|-------------------------------------------------|--------|
| RCopy .....                                     | 162    |
| Re-input .....                                  | 54     |
| Re-input into fields that have inputs .....     | 54     |
| Read .....                                      | 36     |
| READ FIL .....                                  | 169    |
| READ SCR .....                                  | 173    |
| Reading from existing screen data .....         | 173    |
| Receive data from the PT .....                  | 28     |
| Receive display history registration data ..... | 28     |
| Reception of display history records .....      | 192    |
| Recommended environment .....                   | 3      |
| Redisplaying a screen .....                     | 57     |
| Ref table .....                                 | 62, 64 |

|                                |        |
|--------------------------------|--------|
| Ref way .....                  | 61, 63 |
| Reference area .....           | 161    |
| Reference input .....          | 76     |
| Right clicking .....           | 12     |
| Right mouse button .....       | 12     |
| Rotation .....                 | 156    |
| RS-232C connecting cable ..... | 3, 184 |

## S

|                                                   |              |
|---------------------------------------------------|--------------|
| Safety precautions .....                          | v            |
| Save .....                                        | 163          |
| Scale .....                                       | 62, 64       |
| Screen applicability .....                        | 34           |
| Screen attributes .....                           | 36           |
| Screen number .....                               | 32, 34       |
| Screen range .....                                | 52           |
| Screen status, attribute .....                    | 32           |
| Screen switching .....                            | 45, 108, 140 |
| Scr image .....                                   | 180          |
| “Scr list” screen .....                           | 31           |
| Scrol keys .....                                  | 148          |
| Scrolling .....                                   | 55           |
| Searching .....                                   | 78           |
| Selecting numbers and codes .....                 | 16           |
| Selecting options .....                           | 11           |
| Send data to the PT .....                         | 28           |
| Sensitive area .....                              | 112          |
| Serial mouse .....                                | 2            |
| Set .....                                         | 163          |
| Setting character/character-string displays ..... | 61           |
| Setting numeral displays .....                    | 63           |
| Setting numeral memory tables .....               | 68           |
| Setting screen switching functions .....          | 73           |
| Setting the alarm list/history function .....     | 74           |
| Setting words and bits .....                      | 75           |
| Sheet feeder .....                                | 23           |
| Shifting display fields .....                     | 56           |
| Shortcut keys .....                               | 55           |
| Simple .....                                      | 151          |
| Size .....                                        | 62, 64       |

|                                 |         |
|---------------------------------|---------|
| Sizes of images .....           | 164     |
| Skipping parameter input .....  | 55      |
| Smoothing .....                 | 62, 64  |
| Snap ON fun. ....               | 59      |
| Software .....                  | 2       |
| Specifiable tool settings ..... | xiv     |
| Spot .....                      | 62, 64  |
| Squares .....                   | 86, 168 |
| Standalone .....                | 149     |
| Start-up procedure .....        | 8       |
| Stdndr .....                    | 186     |
| STR DISP .....                  | 98      |
| STR IN .....                    | 81, 134 |
| System memory .....             | 28      |

## **T**

|                                                                   |                         |
|-------------------------------------------------------------------|-------------------------|
| TBL EDIT .....                                                    | 143                     |
| Temporary input fields .....                                      | 130                     |
| Things that can be done using the data printing<br>function ..... | 176                     |
| Thumbwheel .....                                                  | 128                     |
| Tiling .....                                                      | 93                      |
| Tiling pattern .....                                              | 93                      |
| Time setting .....                                                | 25                      |
| Time taken to transfer .....                                      | 186                     |
| Tmx. ....                                                         | 28, 188, 189            |
| Tool interface .....                                              | 184                     |
| Tool interface connector specifications .....                     | 193                     |
| Tool settings .....                                               | xiv, 28                 |
| “Tool settings” screen .....                                      | 22                      |
| Tool settings when communicating<br>with an NT20S or NT600S ..... | 186                     |
| TOUCH SW .....                                                    | 113                     |
| Touch switch elements .....                                       | 105                     |
| Touch switches .....                                              | 105                     |
| Transmit mode .....                                               | 188, 189, 190, 191, 192 |
| Transparent color .....                                           | 66                      |
| Trend graph .....                                                 | 117, 120                |
| Typ Sel .....                                                     | 24                      |
| Types of data communication .....                                 | 187                     |

## **U**

|                                  |     |
|----------------------------------|-----|
| USER TKEY .....                  | 136 |
| Using the marking function ..... | 34  |
| Using the mouse .....            | 12  |

## **W**

|                                             |        |
|---------------------------------------------|--------|
| Warning .....                               | v      |
| What is a “character-string setting”? ..... | 129    |
| What is a “Numeral setting”? .....          | 128    |
| Wide .....                                  | 62, 64 |
| Window keys .....                           | 109    |
| Window screen .....                         | 129    |
| Windows displays .....                      | 135    |
| Wiring .....                                | 193    |
| Words .....                                 | 75     |
| Work directory .....                        | 23     |
| Write-protected .....                       | 3      |

## **Z**

|                |    |
|----------------|----|
| Zero Sup. .... | 64 |
|----------------|----|

## Revision History

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

Cat. No. V028-E1-1



Revision code

The following table outlines the changes made to the manual during each revision. Page numbers refer to the previous version.

| Revision code | Date      | Revised content     |
|---------------|-----------|---------------------|
| 1             | July 1995 | Original production |

**OMRON CORPORATION**

**PT Business Promotion Department**

**FA Division H.Q.**

Yokohama Business Park  
134 Godo-cho, Hodogaya-ku, Yokohama-shi  
Kanagawa 240 Japan  
Tel: (81)45-336-6209/Fax: (81)45-336-6239

***Regional Headquarters***

**OMRON EUROPE B.V.**

Wegalaan 69, NL-2132 JD Hoofddorp  
The Netherlands  
Tel: (31)2503-81-300/Fax: (31)2503-81-388

**OMRON ELECTRONICS, INC.**

1 East Commerce Drive, Schaumburg, IL 60173  
U.S.A.  
Tel: (1)708-843-7900/Fax: (1)708-843-8568

**OMRON MANAGEMENT CENTRE OF ASIAPACIFIC PTE LTD.**

510 Thomson Road #13-03  
SLF Bldg.  
1129 Singapore  
Tel: (65)353-2611/Fax: (65)353-5391

# OMRON

**Authorized Distributor:**