


廠 址：小米通信技術有限公司
 製 造 商：上海創米科技有​​限公司
 （小米生態鏈企業）
 知 道 所 在 地：上海青浦行波路888號1層1011室
 聯 系 電 話：400-20277620
 本 廠 高 品 質 售 後 服 務 請 直 接 咨 詢：www.mi.com/hk/service

Manufactured for: Xiaomi Communications Co., Ltd.
 Manufactured by: Shanghai Huihui Technology Co., Ltd.
 (A MI Ecosystem company)
 Address: Room 1011, Floor 11, Block 1, No. 888 Zhang Road, Minhang District, Shanghai, China
 Service Line: 400-20277620
 For further information, please go to www.mi.com/hk/service

小米智能家居攝像機 2K Pro 雲台版 使用說明書 1
 Mi 360° Home Security Camera 2K Pro User Manual 12



即時查看

在米家APP的小米智能家居攝像機 2K Pro 雲台版控制介面中，可以即時查看攝像機即時畫面，可以調整攝像機的拍攝角度、水平和垂直角度，可以旋轉和傾斜攝影機，還可以進行遠端推鏡。

紅外夜視

攝像機可根據環境光線變化程度，晚上自動切換到夜視模式，內建紅外補光燈，夜視距離可達3米，黑暗中也能清晰拍攝。


歷史回看

當在小米智能家居攝像機 2K Pro 雲台版安裝了相應的 MicroSD 卡後，才可以使用回放歷史影片的功​​能。

- 安裝好MicroSD卡後開機後，攝像機會自動偵測錄影片，在米家APP的小米智能家居攝像機 2K Pro 雲台版控制介面中，按一下查看按鈕即可進入回看介面，期間持續輪播歷史錄影的片段，支援最高16倍遠快進或快退查看。


看家助手

- 開啟看家助手功能，本產品能夠在攝影機視角內偵測到家中有人進和移動變化，定時有人進和移動變化的畫面將影片傳送給APP，實現自動看護。
- 可以在米家APP的小米智能家居攝像機 2K Pro 雲台版控制介面中，設定開機或關閉看家助手功能。
- 可以設定白天、白天或晚上看護，也可以自​​定看護時間和設定看護靈敏度，靈敏時間短等等。




How to Use

- Inserting a MicroSD card
 Make sure the camera is turned off. Push the lens upward to reveal the MicroSD card slot, insert the microSD card into the card slot with its correct polarity (see diagram).
 Note: Disconnect the camera from the power before installing or removing a MicroSD card. Please use a genuine MicroSD card (up to 32GB, manufactured by a qualified supplier). It is recommended to use a card with a reading/writing speed of no less than U1 Class 10.

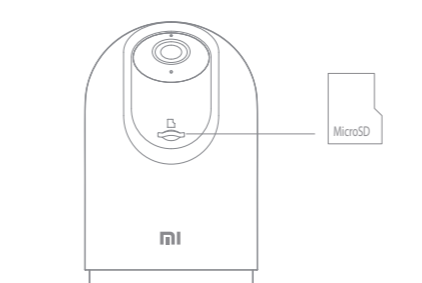

- Turning on the camera
 Plug the charging cable into Micro USB port on the back, the camera automatically turns on, and the indicator quickly blinks orange.

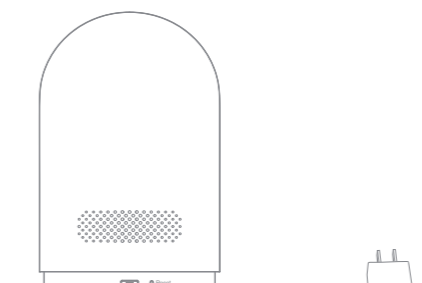


Note: When the camera is working, do not turn the lens of the camera out force to rotate. If the positioning of the lens is inaccurate, please calculate it in the MI Home/Xiaomi Home app.

- Indicator
 Blue: Connected successfully/Working properly
 Blinking blue: Network error
 Quickly Blinking orange: To be connected
 Slowly Blinking orange: Updating

產品介紹

 使用產品前請仔細閱讀本說明書，並妥善保管。

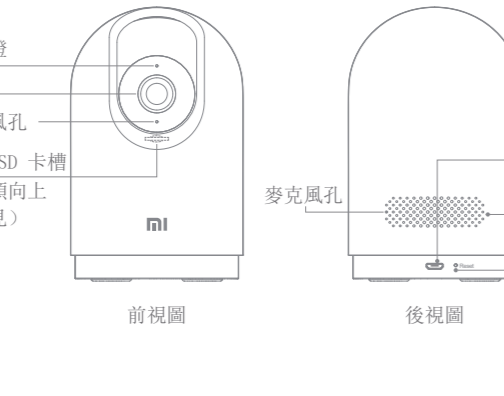


包裝清單：小米智能家居攝像機 2K Pro 雲台版、電源適配器、電源連接線、掛牆配件包、說明書

安裝

可以將小米智能家居攝像機 2K Pro 雲台版攝錄在數字台、餐桌、茶几等平面，也可以固定安裝在牆壁上。

掛牆安裝：

 - 先用鉛筆在牆壁上按標記標記好標記，再用鑽孔工具在標記處打兩個孔，鑽孔直徑約為 6mm，孔深約為 30mm。
- 將兩個掛牆螺絲螺絲釘入打好的孔中。

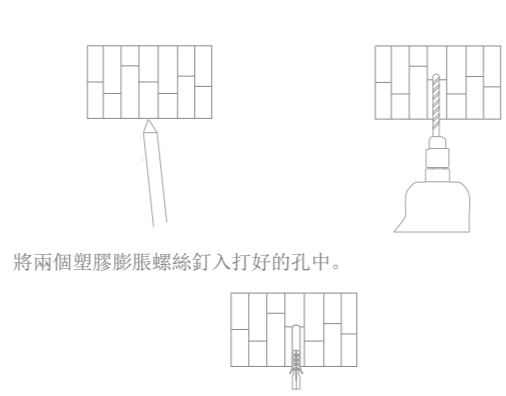

共用影片


在米家APP的小米智能家居攝像機 2K Pro 雲台版控制介面中，通過設定功能表中的裝置共用選項可將攝像機設定為共用裝置，讓其他人觀看。最多分享者需要下載米家APP並使用小米帳號進行登入。

物理越獄

不要拆卸，可以在米家APP的小米智能家居攝像機 2K Pro 雲台版控制介面中，按一下「越獄」以清除物理越獄設定。攝像機會自動調整視角，視角調整後會自動記憶，保護用戶隱私。

基本規格

產品名稱	小米智能家居攝像機 2K Pro 雲台版	產品尺寸	122 × 111 × 78mm
產品重量	333.01g	產品淨重	319g
電壓/電流	DC 5V 3A	鏡面角度	110°
解 像 率	1296P	元 素 鏡 面	31.4
工作溫度	-10°C~40°C	影片編碼	H.265
支援系統	Android 4.4 或 iOS 9.0 及以上	MicroSD 卡 (最大支援容量)	32GB
無線連接	Wi-Fi 1180 Mbps, 11ac/802.11n/2.4GHz/5GHz, 藍牙 4.2		

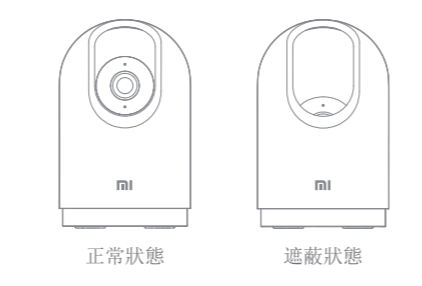 


提示：說明書中的產品、配件、使用介​​面等標圖均為示意圖，僅供參考。由於產品的安裝與升級，產品實際安裝圖可能與您有差異，請以實物為準。

Connect with MI Home/Xiaomi Home App

This product works with MI Home/Xiaomi Home app. Control your device, and interact it and other smart Home devices with MI Home/Xiaomi Home app.

Scan the QR code to download and install the app. This will be directed to the connection setup page of the app is installed already. Or search "MI Home/Xiaomi Home" in the app store to download and install it.



Open MI Home/Xiaomi Home app. Tap "on the upper right, and then follow prompts to add your device. *The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Note: The version of the app might have been updated, please follow the instructions based on the current app version. Make sure the camera turns on and the network connection is stable during connecting. The indicator is quickly blinking orange when waiting for a connection, and turns into blue once the camera is successfully connected.

- Restoring factory settings
 In case the network the camera is connected to, or the MI account the camera is paired with has to be changed, use a pin to press and hold the reset button for about five seconds to restore factory settings. Then reconnect the network and the app with the camera. Note: Restoring factory settings will not delete the content on the MicroSD card.

Real-time Surveillance

In the app, you can view the real-time surveillance, adjust the sharpness of the image, adjust the horizontal and vertical angles, capture and record, and make calls.

Infrared Night Vision

The camera can automatically switch to night vision mode at night according to the change in ambient light. The camera is equipped with built-in infrared night vision lights reaching a night vision distance of up to 9 meters, which enables it to clearly capture videos in the dark.

 
Playback

- The playback feature of the camera is only available when a compatible MicroSD card is installed.
- Once a MicroSD card is installed and the camera is plugged in, it will automatically start recording video. Tap the playback button in the app, then drag the timeline to select the time period you want to playback. The maximum supported playback speed is 16x.


- 將攝像機有鏡頭的一面朝外，底座上的十字螺絲孔對準牆上的孔位置，將螺絲穿過底座孔，用十字螺絲將攝像機安裝在牆上的掛牆螺絲上。

使用

安裝MicroSD卡
 將攝像機電源關閉，將攝像機從其上方，露出MicroSD卡槽。將MicroSD卡有金點的一面朝下插入卡槽。
 注意：安裝或取出MicroSD卡時，需要先切斷攝像機電源後再操作。請使用正規廠牌生產的MicroSD卡（最大支援容量為32GB），建議MicroSD卡讀寫速度不能低於U1 Class 10。

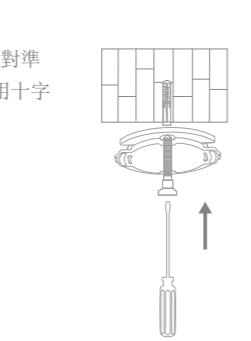

- 將攝像機底座的掛牆螺絲上凸起的部分安裝到合體，順時針旋轉直至固定到位。

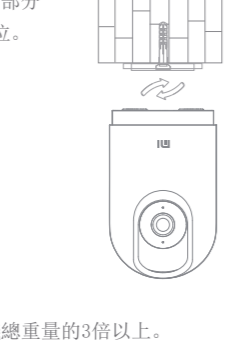 

掛牆安裝注意事項：

 
- 安裝前請至少先能夠承受攝像機重量的1倍以上。
- 為防止震害，必須按安裝說明將裝置牢固地固定在天花板或牆壁上。

注意事項

- 本產品適用的工作溫度為-10°C~40°C，請在溫度過高或過低的環境下使用本產品。
- 本產品為精密電子產品，請在溫度範圍內可能會導致本產品過熱的環境下使用本產品，以免影響正常使用。
- 為了更好地使用本產品，應避免鏡頭正面及鏡頭表面玻璃、白蠟等反光物體，以免造成畫面眩光、模糊或產生奇怪的現象。
- 請確保本產品安裝於無任何阻礙物的環境中，並確保攝像機安裝於Wi-Fi信號良好的位置，攝像機安裝在金屬櫃及微波爐等可能對信號產生影響的位置。

Product Overview


Read this manual carefully before use, and retain it for future reference. The example of this camera is located on its bottom.

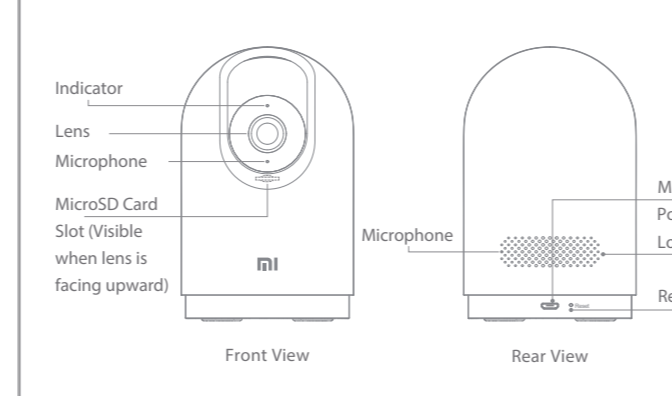

Package Contents: MI 360° Home Security Camera 2K Pro, power adapter, charging cable, wall mounting kit, user manual

 
Home Surveillance Assistant

- When the home surveillance assistant is enabled, the camera will record videos if it detects human movement and changes in real-time within its surveilled area. Then you will get the app push notification.
- You can enable or disable the function of automatic surveillance in the app.
- You can set 24-hour, daytime, nighttime, custom period surveillance, alert sensitivity and alert time intervals, etc.




Video Sharing

In the app, you can select the device sharing option in the settings menu to share the camera with others. The camera will share the camera with need to download the MI Home/Xiaomi Home app and log in with their MI account to view contents.

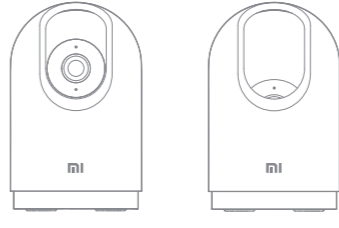


Physical Lens Blocking

 When recording is not required, you can enable the physical lens blocking function. The camera will automatically adjust the lens so that it is covered by the casing of the camera itself to protect the user's privacy.

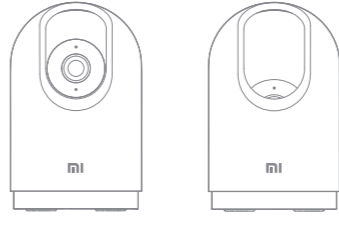


Note: Locations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

 - 閃爍
 將電源線插入攝像機背部的Micro-USB電源接口，攝像機會自動開機，指示燈顏色快閃。

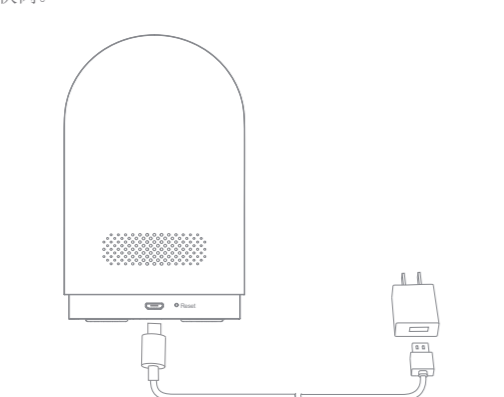

連接米家APP

本產品已連接米家，可通過米家APP操作，並與其他產品互聯互控。請按QR Code，下載並安裝米家APP。已安裝米家APP的用戶可直接進入設置選擇頁面，或在Google Play商店及Apple App Store搜尋「米家」，下載並安裝米家APP。
 打開米家APP首頁，在頁面上角點擊「+」，根據引導方式安裝新裝置。



提示：由於米家APP的升級更新，實際操作可能與本產品插圖略有差異，請按目前最新米家APP版本指引進行操作。連接時需保證網絡暢通，且攝像機正常開機，指示燈顏色快閃，連接成功後，指示燈顏色閃爍。

- 恢復廠設定
 如果要更換攝像機或線路或者米家APP帳號，則需使用針插入攝像機底座孔長約3秒左右，將攝像機恢復到廠設定，然後重新連接APP。提示：恢復廠設定不會刪除MicroSD卡中的內容。

 
提示：開機後，請將攝像機的鏡頭調整到旋轉，如果檢測定位不準確，可通過APP進行校正。
 閃爍藍色：請檢查Wi-Fi連接是否正常
 藍色閃爍：網絡異常
 綠色快閃：正在升級
 綠色閃爍：正在升級

Installation

The MI 360° Home Security Camera 2K Pro can be placed on horizontal surfaces, such as desks, dining tables, and coffee tables. It can also be mounted on a wall.

Mounting the camera on a wall

- For one panel to mark the positions for the base mounting holes on the wall, then drill two holes at the marked positions. The diameter of each hole is approximately 6 mm, and the depth is approximately 30 mm.
- Insert a plastic wall plug into each drilled hole.
- Place the side of the base with arrow facing forward, and then align the holes, insert the screws and then tighten them into the wall plugs with a Phillips head screwdriver.
- Align the grooves on the bottom of the camera with the raised part on the base, and then turn it clockwise until it locks into place.

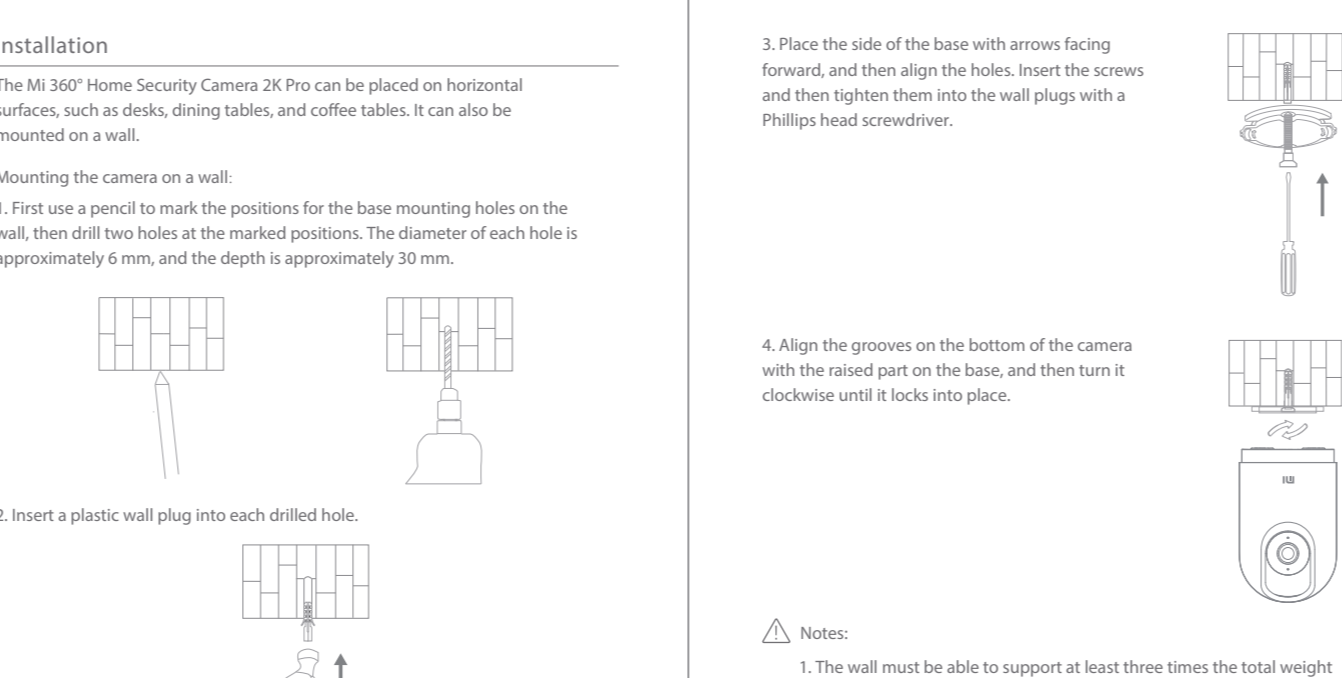

Notes:

- The wall must be able to support at least three times the total weight of the camera.
- To prevent possible injury, the camera must be securely fixed to the ceiling or wall according to the installation instructions.

Specifications

Name: MI 360° Home Security Camera 2K Pro
 Model: M360SCM
 Item Dimensions: 122 × 78 × 78 mm
 Viewing Angle: 110°
 Aperture: F1.8
 Operating Temperature: -10°C to 40°C
 Compatible with: Android 4.4 & iOS 9.0 or above
 Storage: MicroSD card (up to 32 GB)
 Wireless Connectivity: 802.11a/b/g/n/ac 2.4 GHz/5 GHz, Bluetooth 4.2

Net Weight: 349 g
 Input: 5V → A
 Resolution: 1920p
 Video Codec: H.265

Precautions

- The operating temperature range for this camera is between -10°C and 40°C. Do not use the camera in environments with temperatures above or below the specified range.
- The camera is a precision electronic product. In order to ensure its normal operation, do not install the camera in environments with high humidity levels (do not allow water to get into it).
- To improve the camera's performance, do not place the lens facing or next to a reflective surface, such as glass windows or white walls. As this will cause the image to appear overly bright in areas close to the camera and darker in areas further away, or cause the camera to produce white images.
- Make sure the camera is installed in an area with a strong Wi-Fi signal. Do not place the camera near the objects that may affect its Wi-Fi signal, such as metal objects, microwave ovens.