

## Spectralink 7202/7212 Handset

### Quick Start Guide



14226913-IG Ed. 8.0, Original document

**Note:** If a menu/submenu/setting/function is not visible, it is controlled by a local administrator. Contact them, if a change is needed.

Charge your handset for 5 hours prior to first use for best performance.

#### Turning Handset On

- Press left softkey to turn on handset.

#### Turning Handset Off

1. Press left softkey until the question 'Turn off?' appears in display.
2. Press **Yes** to confirm.

#### Adjusting Speaker/Headset Volume

- While on call, press the keys placed at the upper right side of the handset for volume control.

#### Adjusting Ringing Volume

1. Press **Menu** to enter main menu.
2. Scroll to **Settings**, and press **Select**.
3. Scroll to **Ringing volume**, and press **Select**.
4. Press the **left or right side of the navigation key** to adjust the volume of the ring tone.
5. Press **Set**.

#### Changing Ringing Tone

1. Press **Menu** to enter main menu.
2. Scroll to **Settings**, and press **Select**.
3. Scroll to **Ringing tone**, and press **Select**.
4. Scroll to the desired ring tone, and press the **right side of the navigation key** to listen to the ring tone.
5. Press the **left side of the navigation key** to listen to the internal calls ring tone.
6. Scroll to the desired ring tone, and press **Change** to select the new ring tone.

#### Off Hook Dialling (Dial Directly)

1. Press **[Call]**.
2. Dial number.
3. Press **[Call]** to end the call.

#### On Hook Dialling (Pre-Dial)

1. Dial number.
2. Press **[Call]**.
3. Press **[Call]** to end the call.

#### Speed Dial Calls

- Press and hold a key (0-9) for three seconds, until the call is initiated.

#### Answering and Ending Calls

- To answer or end a call, press **[Call]**.

#### Call List Calls


1. Press the **left side of the navigation key** to enter **Call List**.
2. Scroll to the desired name or number, and press **[Call]**.

#### Call Missed calls

1. Press the **right side of the navigation key** to enter **Missed Call List**.
2. Scroll to the desired name or number, and press **[Call]**.


#### Phone Book Calls (Local)

1. Press the **bottom of the navigation key** to enter local phonebook.
2. Scroll to the desired name and press **[Call]** to make a call.

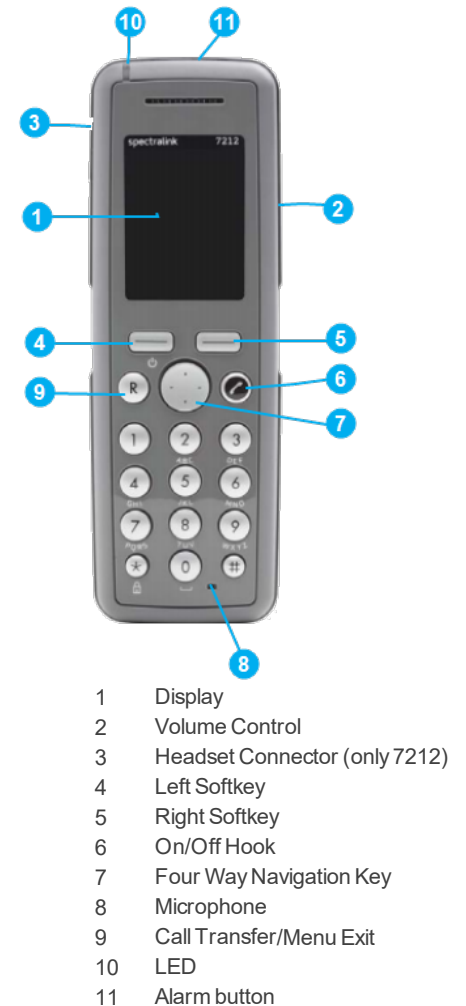

- 1 Display
- 2 Volume Control
- 3 Headset Connector (only 7212)
- 4 Left Softkey
- 5 Right Softkey
- 6 On/Off Hook
- 7 Four Way Navigation Key
- 8 Microphone
- 9 Call Transfer/Menu Exit
- 10 LED
- 11 Alarm button

## Company Phone Book Calls

1. While on hook, press the **top of the navigation key** to enter the company phone book.
2. Search for name or number, press **Select**, then scroll to either telephone number or mobile number and press **Dial** or  to dial the number.

## Adding a New Contact to Phone Book

1. Press **Menu** to enter main menu.
2. Scroll to **Phone Book**, and press **Select**.
3. Scroll to **Add name/number**, and press **Select**.
4. Type the name of the contact using the keys 0-9.
5. Scroll to number, and enter the directory number of the contact (max. 24 digits/64 characters).
6. Press **Save** to store name and directory number.

If the display shows **Memory full**, it is necessary to delete one or more contacts from phone book.

## Assigning Speed Dials

1. Press **Menu** to enter main menu.
2. Scroll to **Phone Book**, and press **Select**.
3. Scroll to **Speed dial**, and press **Select**.
4. Scroll to the desired speed dial, and press **Add name**.
5. Scroll to desired number, and press **Ok**.

## Locking/Unlocking Keypad

- Press left softkey followed by \* button to lock or unlock the keypad.

## Silent Mode On/Off

- Press **Menu**, followed by the # button to turn the handset silent mode on/off. In silent mode there is no sound for incoming calls and notifications.

## Exit Menus

- Exit menus and return to home screen, press **R**.

## Speakerphone On/Off

1. While in a call, press **Options**, scroll to **Spkr. on** to enable speakerphone.
2. To disable speakerphone, press **Options**, scroll to **Spkr. off** to disable speakerphone.
3. Alternatively, pressing the **left side of the navigation key** during a call can enable or disable the speakerphone.

## Microphone Mute On/Off

1. While on a call, press **Mic Mute** to turn microphone mute on.
2. To turn microphone mute off, press **Mic on**.

## Handset Icons



Missed calls



Incoming calls



Battery charging (in charger)



Battery charging (handset turned on in charger)



Battery capacity decreasing (handset out of charger)



Battery capacity low



Message received



Keypad locked



Silent mode



Appears when loudspeaker is turned on



Microphone muted

## Technical Specifications

### Capacity Spectralink 7202

- Active talking time (Economy mode) up to 22 hours.
- Standby time up to 141 hours.

### Capacity Spectralink 7212

- Active talking time (Economy mode) up to 22 hours.
- Standby time up to 141 hours.

### Temperature

- Operating temperature: -10° - 55°C/14° - 131°F
- Charging temperature: 0° - 40°C/32° - 104°F

© 2013 - 2021 Spectralink Corporation All rights reserved. Specifications subject to change without notice.

US Location  
Spectralink Corporation  
2560 55th Street  
Boulder, CO 80301  
USA

Denmark Location  
Spectralink Europe ApS  
Bygholm Søpark 21 E Stuen  
8700 Horsens  
Denmark

[info@spectralink.com](mailto:info@spectralink.com)

[info@emea@spectralink.com](mailto:info@emea@spectralink.com)

[www.spectralink.com](http://www.spectralink.com)