





## What's included

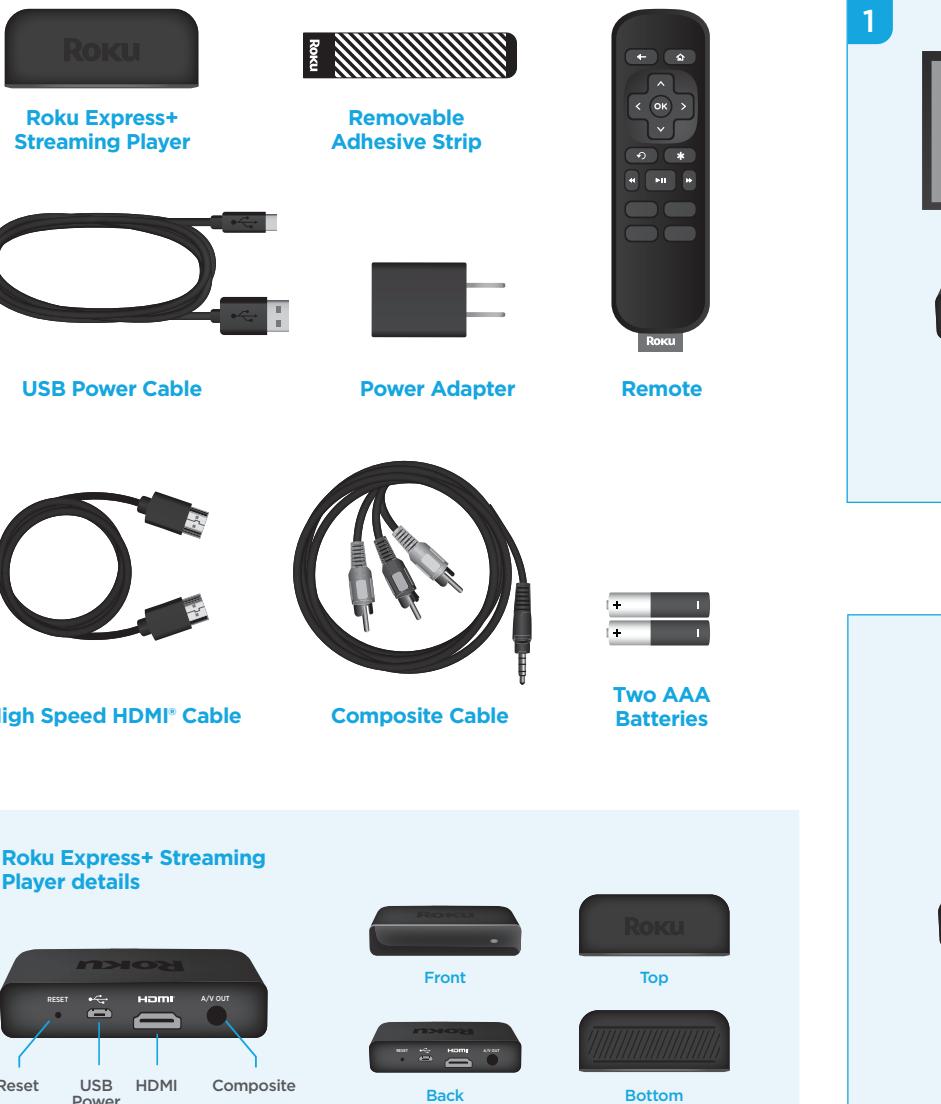

## Setup

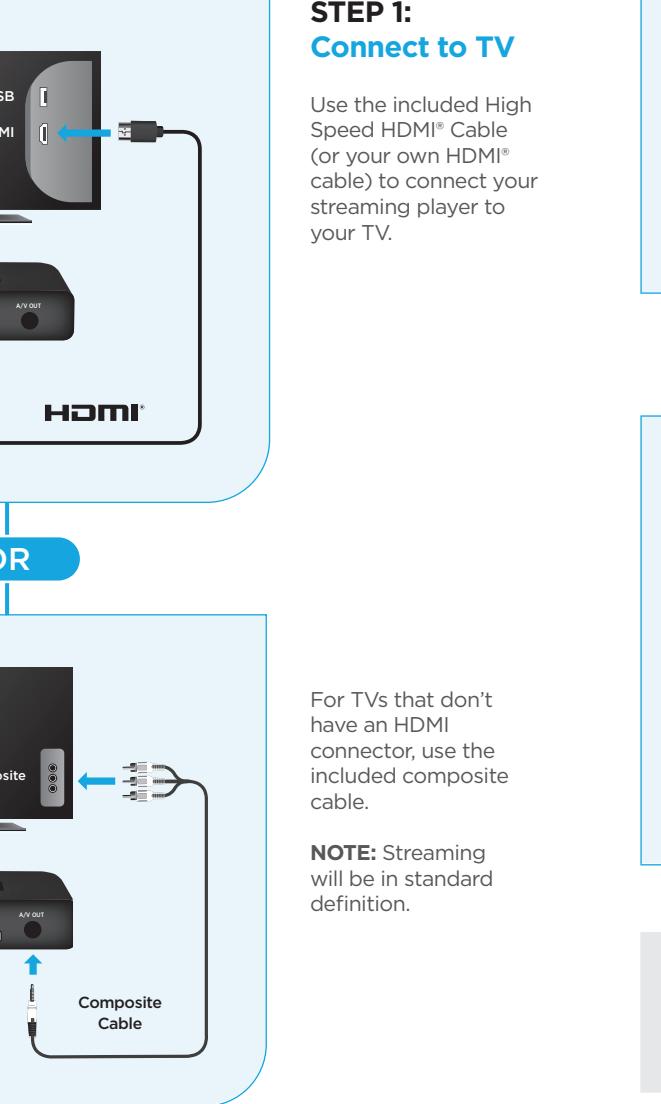


### STEP 1: Connect to TV

Use the included High Speed HDMI® Cable (or your own HDMI® cable) to connect your streaming player to your TV.

### STEP 2: Connect to power

For the best streaming experience, use the included USB power cable and power adapter to connect your streaming player to a wall outlet.


OR

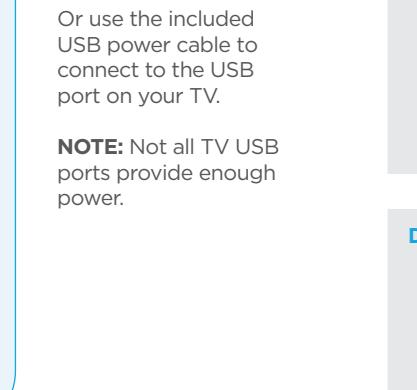

Or use the included USB power cable to connect to the USB port on your TV.

**NOTE:** Not all TV USB ports provide enough power.

2

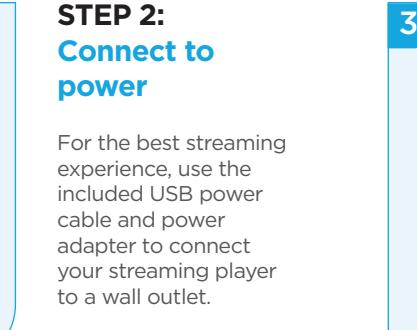


### STEP 3: Position Roku streaming player

Place the streaming player near your TV.

The streaming player can be attached to your TV with the included double-sided adhesive strip. The strip is for single-use and can be removed.

3

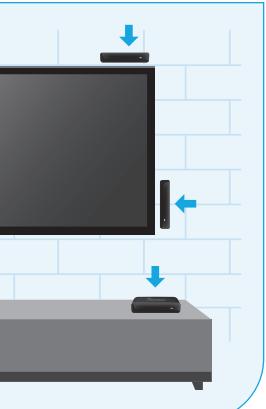

### STEP 4: Power on TV and select input

Use your TV remote to power on your TV and select the input you used to connect your streaming player.

For help on how to select the correct input, visit [go.roku.com/selectinput](http://go.roku.com/selectinput)


### STEP 5: Insert batteries

On the back side of the remote, slide open the battery cover. Insert included batteries placing the negative (-) end in first.

DO:



**DO NOT:**

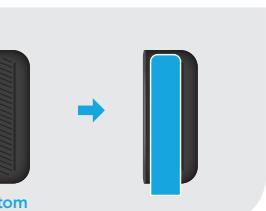

**OPTIONAL:**