
Model No: DA3729

UPC CODE:

0-65857-16286-8

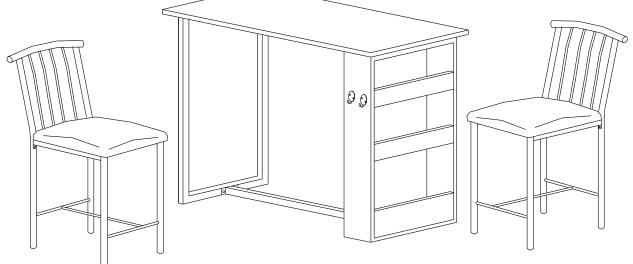

NOTE:

THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Lot number: (TAKEN FROM CARTON)

Date of purchase:

/ /_____

DO <u>NOT</u> **RETURN PRODUCT TO THE STORE**. If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

CUSTOMER SERVICE

If you are missing parts or have any questions about this product, contact our customer service representative first!

CALL 1-800-295-1980

You can also order parts by writing to the address listed below. Please include the product model number, color and a detailed description of the part.

Customer Service Department No. 413 12345 Albert-Hudon Boulevard, Suite 100 Montreal, Quebec Canada H1G 3L1 E-MAIL: das@dorel.com

NOTES:

* Ensure all parts and components are present before beginning assembly.

* Assemble on a soft, smooth surface to prevent damage to product finish.

* Assembly and handling may require two people.

* Estimated assembly time is 45 - 60 minutes.

* Read all instructions completely before assembly.

* **DO NOT** use power tools.

* CAUTION: Adult assembly required.

* Phillips head screw driver is not included.

CARE AND CLEANING

Dust this item regularly with a soft, lint-free cloth to prevent soil build up. Wipe away spills immediately to prevent staining using a clean cloth dampened with water. Do not use liquid or abrasive cleaners on the metal frame as this may damage the finish.

Dust the upholstery regularly with a clean, dry cloth to avoid soil build-up. A damp cloth may be used occasionally to clean surface. Buff dry. Keep leather soft and supple by applying a leather care product occasionally. Avoid contact with oil, furniture polish and varnish.

MAINTENANCE

Check bolts/screws periodically and tighten them if necessary.

LIMITED WARRANTY

Dorel Asia warrants its product to be free from defects in material and workmanship and agrees to remedy any such defect. This warranty covers 1 year from the date of original purchase. This warranty is valid only upon presentation of proof of purchase. This is solely limited to the repair or replacement of defective furniture components and no assembly labor is included. This warranty does not apply to any product which has been improperly assembled, subjected to misuse or abuse or which has been altered or repaired in any way. Any wearing, tearing, fading or splitting of the leather is not covered under the warranty. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.





WARNING: Should this product become damaged, and/or components are broken or missing, DO NOT USE.

HARDWARE LIST

1	2	3
Ø1/4" X 1/2"	Ø1/4" X 1-9/16"	Ø1/4" X 1-3/8"
BOLT	BOLT	BOLT
24 PCS	2 PCS	8 PCS
4 (A)	5 Aunum	6
Ø3/16" X 5/8"	Ø1/8" X 5/8"	
WOOD SCREW	PHILLIPS HEAD SCREW	CAM LOCK
8 PCS	4 PCS	42 PCS
7	8	9
CAM BOLT	НООК	ALLEN KEY
42 PCS	2 PCS	1 PC

PARTS LIST

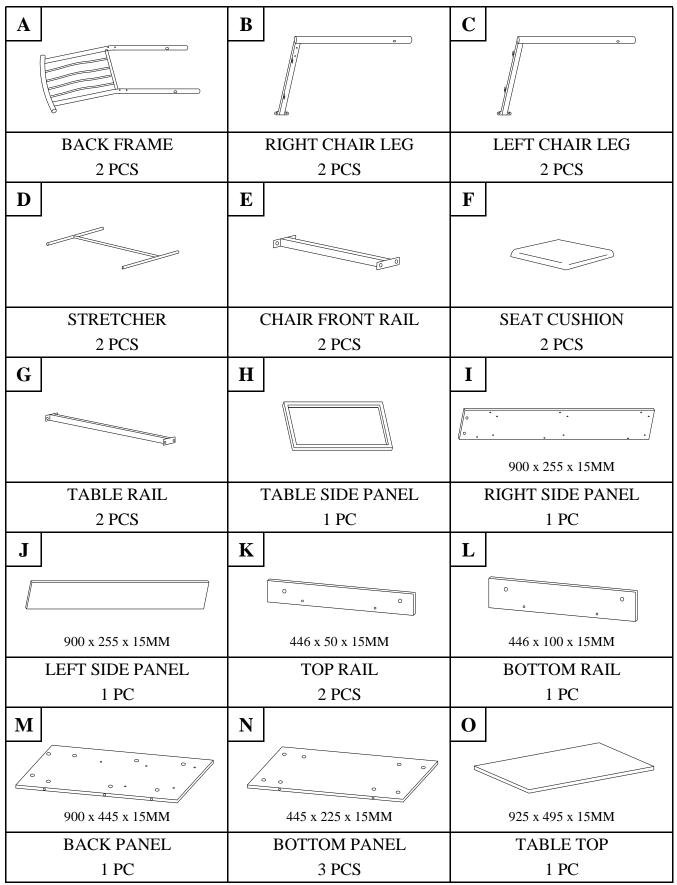


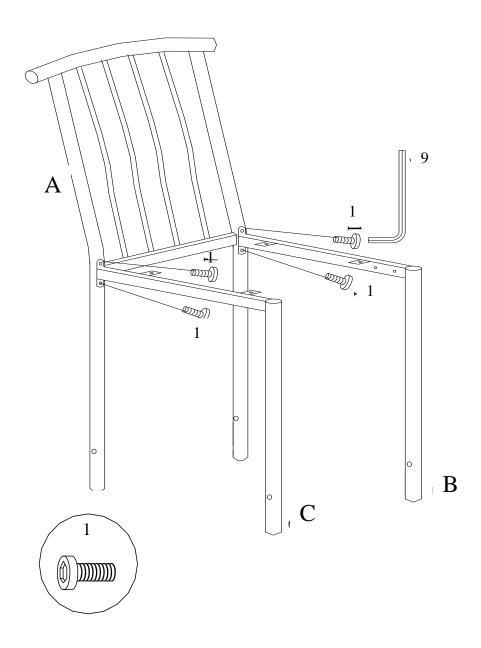

STEP 1

Attach the right and left chair legs (B & C) to the back frame (A) with bolts (1). Use Allen Key (9) to install the bolts.


NOTE: Do not fully tighten the bolts. Leaving them loose will facilitate assembly in the following steps.

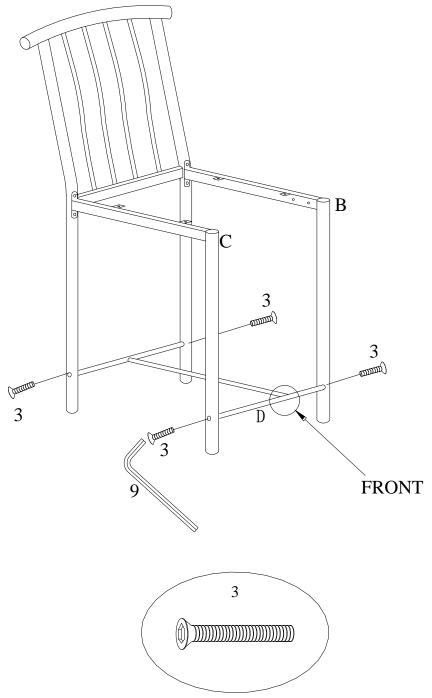

STEP 2

Attach stretcher (D) to the right and left chair legs (B & C) with bolts (3). Use Allen Key (9) to install the bolts.


NOTE: Do not fully tighten the bolts. Leaving them loose will facilitate assembly in the following steps.

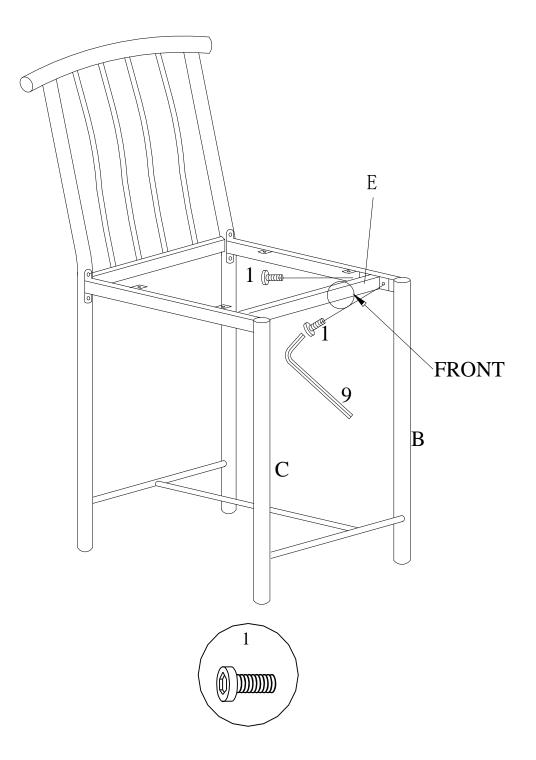

STEP 3

Attach the chair front rail (E) to the chair legs (B & C) with bolts (1). Ensure that the chair front rail (E) goes smoothly into the two chair legs before tightening bolts (1).


Tighten all bolts previously installed.

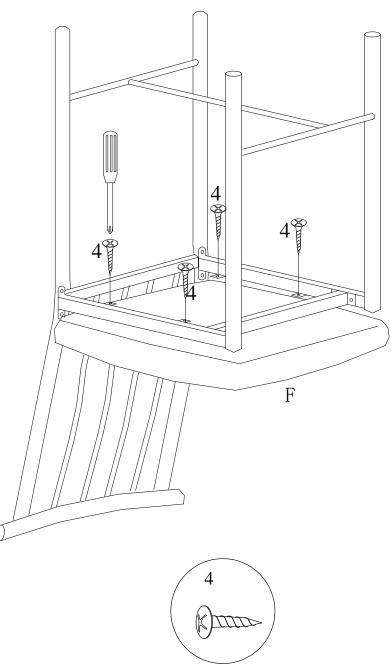

STEP 4

Attach the seat cushion (F) to the chair with wood screws (4) using a Phillips head screw driver (not included).


Repeat steps 1-4 to assemble the other chair.

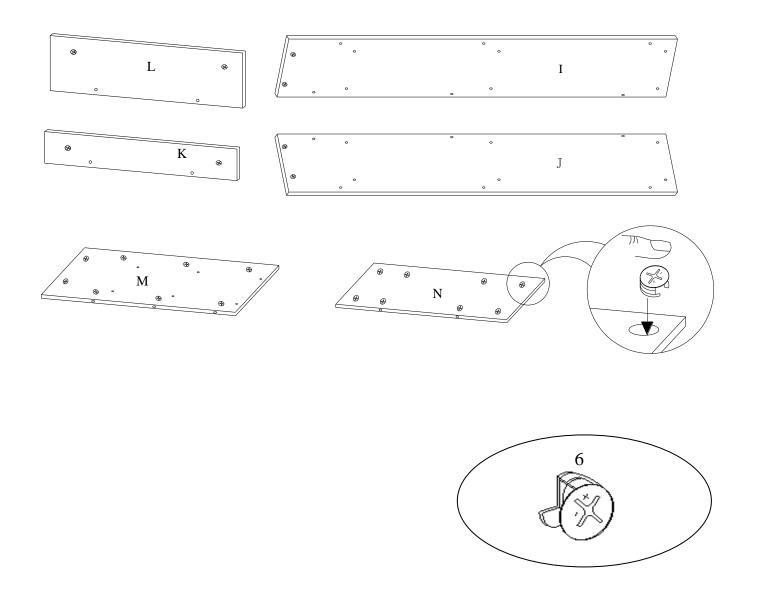


STEP 5

Insert cam locks (6) into the holes of right side panel (I), top rails (K), bottom rail (L), back panel (M) and bottom panels (N).

A Phillips head screwdriver can be used to rotate the cam locks (6) to align with cam bolts (7) in the following steps.

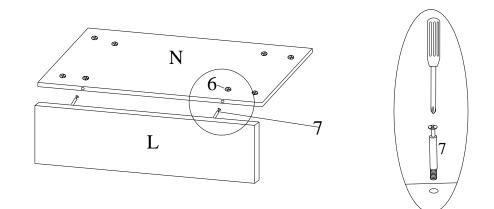


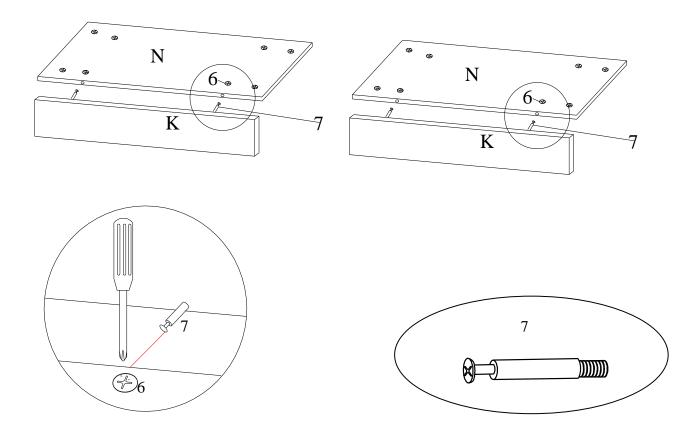

STEP 6


Insert cam bolts (7) into the holes of bottom rail (L). Attach bottom rail (L) to bottom panel (N). Use a Phillips head screw driver (not included) to rotate the cam locks (6) to secure cam bolts (7).

Repeat the above step using top rails (K) and bottom panels (N).

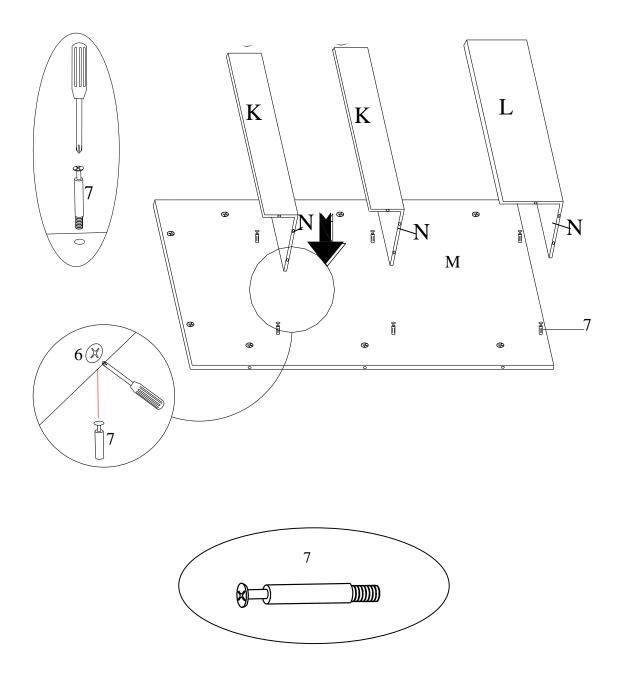


STEP 7

Insert the cam bolts (7) into the holes of the back panel (M). Attach bottom panles (N) to the back panel (M) as shown above. Use a Phillips head screw driver (not included) to rotate the cam locks (6) to secure cam bolts (7).

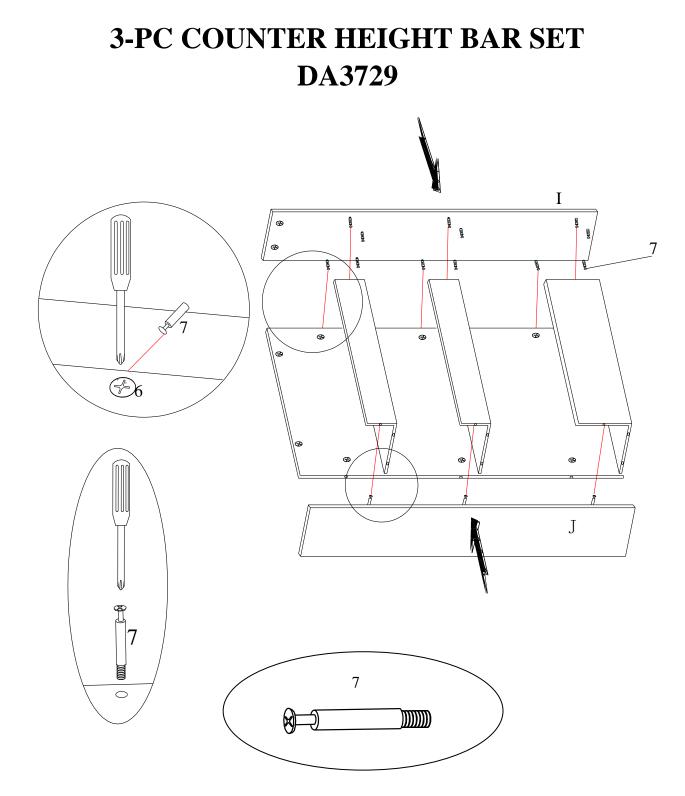

STEP 8


Insert the cam bolts (7) into the holes of the right and left side panels (I & J). Attach the side panels (I & J) to the assembled unti as shown. Use a Phillips head screw driver (not included) to rotate the cam locks (6) to secure cam bolts (7).

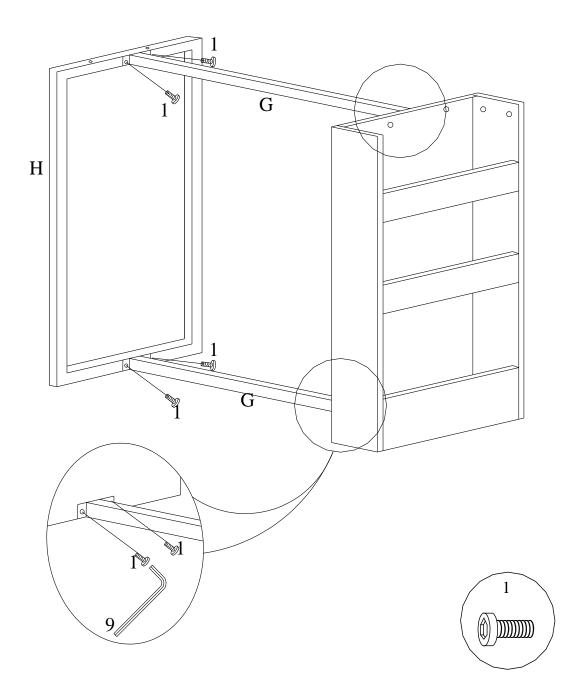

STEP 9


Attach the table rails (G) to the table side panel (H) and the assembled unit using bolts (1) as shown. Use Allen Key (9) to tighten bolts.

NOTE: Do not tighten the bolts in this step. Leaving the bolts loose will facilitate assembly in the following steps.

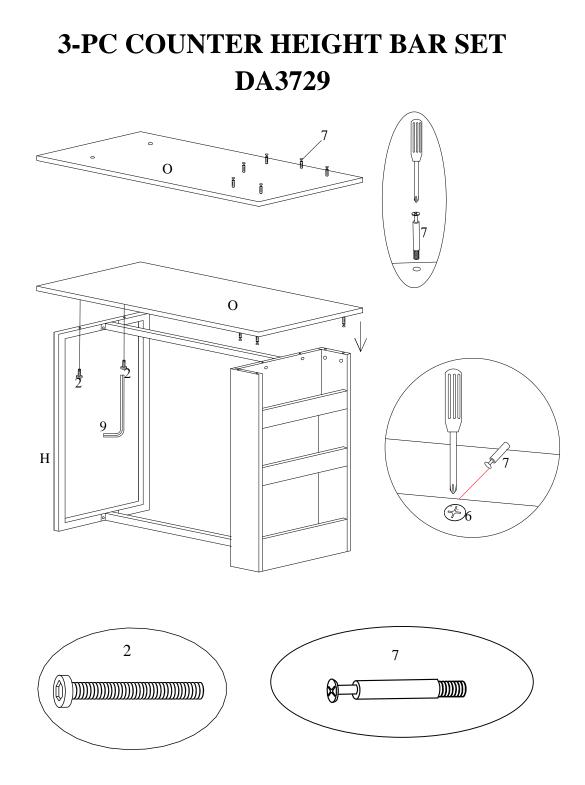

STEP 10

Insert the cam bolts (7) into the holes of the table top (O). Attach the table top (O) to the assembled unit with bolts (2). Use Allen Key (9) to tighten bolts (2) and use a Phillips head screw driver (not included) to tighten the cam bolts (7). Tighten all bolts previously installed.

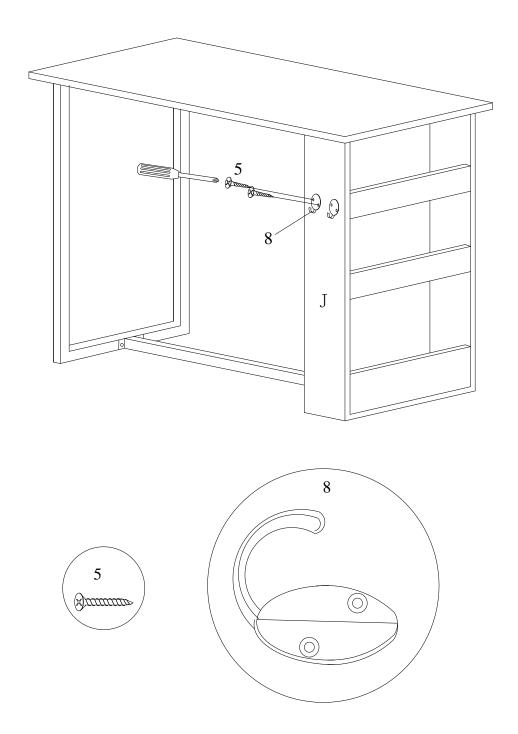


STEP 11

Attach the hooks (8) to the left side panel (J) with Phillips head screws (5) using a Phillips head screw driver (not included).

NOTE: The screws (5) will make their own holes so that you can place hooks (8) in the desired location.

AUTION: This unit is intended for use only with the products and/or maximum weights indicated. Use with other products and/or products heavier than the maximum weights indicated may result in instability or cause possible injury.

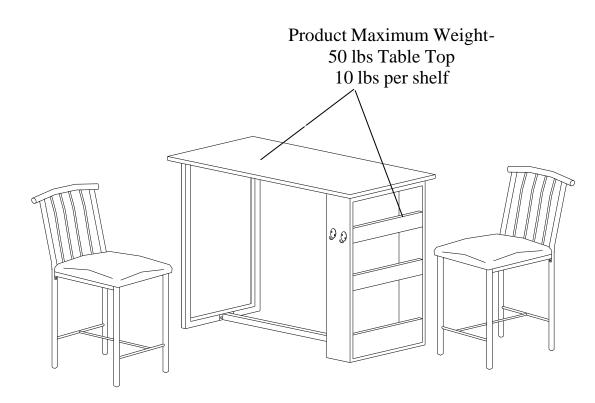

That's it ! You've finished assembling your counter height bar set.

DO NOT RETURN PRODUCT TO THE STORE.

If a part is missing or damaged, contact our customer service department. We will replace the part **FREE** of charge.



Tel #: 1-800-295-1980 E-Mail: das@dorel.com Fax #: 514-353-7819

Customer Service

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE

PLEASE CONTACT CUSTOMER SERVICE REPRESENTATIVES AT THE FOLLOWING NUMBERS SHOULD THERE BE ANY MISSING OR DEFECTIVE PART(S).

	Service Phone Number 1-800-295-1980 Service Fax Number 514-353-7819	Email: das@dorel.com
Request Date:		
Name:		
Shipping Address:		
Street & Number:		
City & State: Zip Code:		
Day Time Phone Number: (including area code)		
Date & Place of Purchase:		

Part(s) description and quantity: (Please be sure to list model number or SKN number)

Customer Service Representative Mailing Address:

Customer Service Department No. 413, 12345 Albert-Hudon Boulevard, Suite 100, Montreal, QC, Canada, H1G 3L1