# Alienware Aurora R9 Setup and Specifications

# Notes, cautions, and warnings i Note: A Note indicates important information that helps you make better use of your product.

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

MARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2019-2021 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

# **Contents**

Chapter 1: Set up your computer	4
Chapter 2: Views of Alienware Aurora R9	7
- Front	
Back	
Back panel	10
Chapter 3: Specifications of Alienware Aurora R9	12
Dimensions and weight	12
Processors	12
Chipset	12
Operating system	13
Memory	13
Ports and connectors	13
Communications	14
Video	15
Audio	15
Storage	15
Power ratings	16
Computer environment	16
Chapter 4: Alienware Command Center	18
Chapter 5: Getting help and contacting Alienware	19

# Set up your computer

1. Connect the keyboard and mouse.



**2.** Connect to your network using a cable, or connect to a wireless network.



3. Connect the display.



- (i) NOTE: The DisplayPort on the back panel of your computer is covered. Connect the display to the discrete graphics card of your computer.
- i NOTE: If you have two graphics cards, the card installed in PCI-Express X16 (graphics slot 1) is the primary graphics card.
- **4.** Connect the power cable.




5. Press the power button.



### Views of Alienware Aurora R9

### **Front**

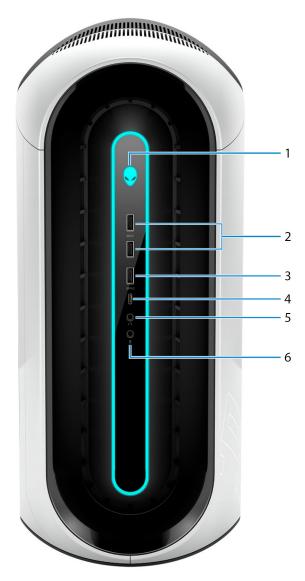

#### 1. Power button (Alien head)

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

Press to put the computer in sleep state if it is turned on.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 4 seconds to force shut-down the computer.

NOTE: You can customize the power-button behavior in Windows. For more information, see *Me and My Dell* at <a href="https://www.dell.com/support/manuals">www.dell.com/support/manuals</a>.

#### 2. USB 3.1 Gen 1 ports (2)

Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

#### 3. USB 3.1 Gen 1 port with PowerShare

Connect devices such as external storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge connected USB devices.

NOTE: Connected USB devices will not charge when the computer is turned off or in sleep state. To start charging connected devices, turn on the computer.

#### 4. USB 3.1 Gen 1 (Type-C) port

Connect devices such as external storage devices, printers, and external displays.

Provides data transfer speeds up to 5 Gbps. Supports Power Delivery that enables two-way power supply between devices. Provides up to 15 W power output that enables faster charging.

(i) NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.


#### 5. Headphone port

Connect a headphone or speakers.

#### 6. Microphone port

Connect an external microphone to provide sound input.

### **Back**

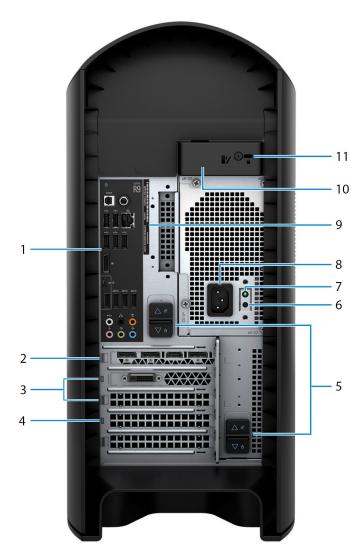

#### 1. Back panel

Connect USB, audio, video, and other devices.

#### 2. PCI-Express X16 (graphics slot 1)

Connect a PCI-Express card such as graphics, audio, or network card to enhance the capabilities of your computer.

For optimal graphics performance, use a PCI-Express X16 slot for connecting the graphics card.

- i NOTE: The PCI-Express X16 slot works at X8 speed only.
- i) NOTE: If you have two graphics cards, the card installed in PCI-Express X16 (graphics slot 1) is the primary graphics card.

#### 3. PCI-Express X4 slots (2)

Connect a PCI-Express card such as graphics, audio, or network card to enhance the capabilities of your computer.

#### 4. PCI-Express X16 (graphics slot 2)

Connect a PCI-Express card such as graphics, audio, or network card to enhance the capabilities of your computer.

For optimal graphics performance, use a PCI-Express X16 slot for connecting the graphics card.

(i) NOTE: The PCI-Express X16 slot works at X8 speed only.

#### 5. Power-supply cage release-latches (2)

Allows you to remove the power supply unit from your computer.

#### 6. Power-supply diagnostics button

Press to check the power-supply state.

#### 7. Power-supply diagnostics light

Indicates the power-supply state.

#### 8. Power port

Connect a power cable to provide power to your computer.

#### 9. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.


#### 10. Side panel release latch

Allows you to remove the side panel from your computer.

#### 11. Security-cable slot (for Kensington locks)

Connect a security cable to prevent unauthorized movement of your computer.

### **Back panel**

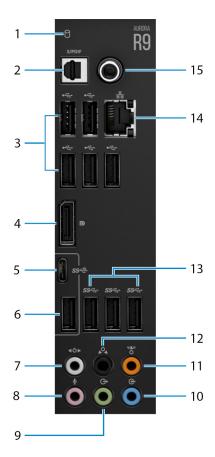

#### 1. Hard-drive activity light

The activity light turns on when the computer reads from or writes to the hard drive.

#### 2. Optical S/PDIF port

Connect an amplifier, speakers, or a TV for digital audio output through an optical cable.

#### 3. USB 2.0 ports (5)

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

#### 4. DisplayPort

Connect an external display or a projector.

NOTE: The DisplayPort on the back panel of your computer is covered. Connect the display to the discrete graphics card of your computer.

#### 5. USB 3.1 Gen 2 Type-C port

Connect peripherals, such as external storage devices and printers. Provides data transfer speeds up to 10 Gbps.

(i) NOTE: This port does not support video/audio streaming or power delivery.

#### 6. USB 3.1 Gen 2 port

Connect peripherals, such as external storage devices and printers. Provides data transfer speeds up to 10 Gbps.

#### 7. Side L/R surround port

Connect audio-output devices such as speakers and amplifiers. In a 7.1 speaker channel setup, connect the side-left and side-right speakers.

#### 8. Microphone port

Connect an external microphone to provide sound input.

#### 9. Front L/R surround line-out port

Connect audio-output devices such as speakers and amplifiers. In a 2.1 speaker channel setup, connect the left and right speakers. In a 5.1 or a 7.1 speaker channel setup, connect the front-left and front-right speakers.

#### 10. Line-in port

Connect recording or playback devices such as a microphone or CD player.

#### 11. Center/subwoofer LFE surround port

Connect the center speaker or the subwoofer.

i NOTE: For more information about the speaker setup, refer the documentation that shipped with the speakers.

#### 12. Rear L/R surround port

Connect audio-output devices such as speakers and amplifiers. In a 5.1 or a 7.1 speaker channel setup, connect the rear-left and rear-right speakers.

#### 13. USB 3.1 Gen 1 ports (3)

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

#### 14. Network port (with lights)

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

The two lights next to the connector indicate the connectivity status and network activity.

#### 15. Coaxial S/PDIF port

Connect an amplifier, speakers, or a TV for digital audio output through a coaxial cable.

# **Specifications of Alienware Aurora R9**

# **Dimensions and weight**

Table 1. Dimensions and weight

Description	Values
Height:	
Front	441.80 mm (17.39 in.)
Rear	481.60 mm (18.96 in.)
Width	222.80 mm (8.77 in.)
Depth	431.90 mm (17 in.)
Weight (maximum)	17.80 kg (39.24 lb)  (i) NOTE: The weight of your computer depends on the configuration ordered and the manufacturing variability.

### **Processors**

**Table 2. Processors** 

Description	Values		
Processors	9 <sup>th</sup> Generation Intel Core i5k	9 <sup>th</sup> Generation Intel Core i7k	9 <sup>th</sup> Generation Intel Core i9k
Wattage	95 W	95 W	95 W
Core count	6	8	8
Thread count	6	8	16
Speed	4.4 GHz	4.6 GHz	4.7 GHz
Cache	9 MB	12 MB	16 MB

# Chipset

The following table lists the details of the chipset supported by your Latitude 5320.

Table 3. Chipset

Description	Values
Chipset	9 <sup>th</sup> Generation Intel Core i5k/i7k/i9k
Processor	Intel Z370
DRAM bus width	Single channel = 64-bit, dual channel = 128-bit

#### Table 3. Chipset (continued)

Description	Values
Flash EPROM	16 MB
PCIe bus	PCle Gen3/Gen2

# **Operating system**

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)

### Memory

#### **Table 4. Memory specifications**

Description	Values	
Slots	Four UDIMM	
Туре	DDR4	
Speed	2666 MHz up to 3200 MHz (XMP memory)	
Maximum memory	64 GB	
Minimum memory	8 GB	
Memory per slot	8 GB and 16 GB	
Configurations supported:	<ul> <li>8 GB DDR4 at 2666 MHz</li> <li>16 GB DDR4 at 2666 MHz</li> <li>32 GB DDR4 at 2666 MHz</li> <li>64 GB DDR4 at 2666 MHz</li> <li>16 GB XMP at 2933 MHz</li> <li>32 GB XMP at 2933 MHz</li> <li>64 GB XMP at 2933 MHz</li> <li>16 GB XMP at 3200 MHz</li> <li>32 GB XMP at 3200 MHz</li> <li>64 GB XMP at 3200 MHz</li> <li>64 GB XMP at 3200 MHz</li> </ul>	

### Ports and connectors

Table 5. Ports and connectors

Description	Values	
External:		
Network	One RJ-45 port	
USB	<ul> <li>Five USB 2.0 ports</li> <li>Five USB 3.1 Gen 1 ports</li> <li>One USB 3.1 Gen 1 Type-C port</li> <li>One USB 3.1 Gen 2 port</li> </ul>	

Table 5. Ports and connectors (continued)

Description	Values	
	<ul> <li>One USB 3.1 Gen 2 Type-C port</li> <li>One USB 3.1 Gen 1 port with PowerShare</li> </ul>	
Audio	<ul> <li>One audio output/headphone port (supports 2 channel audio)</li> <li>One audio input/microphone port</li> <li>One optical S/PDIF port</li> <li>One coaxial S/PDIF port</li> <li>One front L/R surround line-out port</li> <li>One side L/R surround port</li> <li>One rear L/R surround port</li> <li>One center/subwoofer LFE surround port</li> <li>One line-in port</li> </ul>	
Video	One DisplayPort port - optional  (i) NOTE: The DisplayPort on the back panel of your computer is covered. Connect the display to the discrete graphics card of your computer.	
Memory card reader	Not supported	
Power port	Not applicable	
Security	Kensington lock slot	
Internal:		
PCIe expansion card slots	<ul><li>Two PCle x16 slots</li><li>Two PCle x4 slots</li></ul>	
mSATA	Not supported	
SATA	Four	
M.2	<ul> <li>One M.2 card slot for WLAN and Bluetooth</li> <li>One PCle/SATA M.2 card slot for 2242/2260/2280 solid-state drive</li> <li>NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article <u>SLN301626</u>.</li> </ul>	

# **Communications**

### Ethernet

Table 6. Ethernet specifications

Description	Values
Model number	Killer E2500 Ethernet controller integrated on system board
Transfer rate	10/100/1000 Mbps

### Wireless module

Table 7. Wireless module specifications

Description	Values			
Model number	Qualcomm DW1810	Qualcomm DW1820	Killer AX1650	
Transfer rate	Up to 433 Mbps	Up to 867 Mbps	Up to 867 Mbps	
Frequency bands supported	Dual band 2.4 GHz/5 GHz	Dual band 2.4 GHz/5 GHz	Dual band 2.4 GHz/5 GHz	
Wireless standards	Wi-Fi 5 (WiFi 802.11ac)	Wi-Fi 5 (WiFi 802.11ac)	Wi-Fi 5 (WiFi 802.11ax)	
Encryption	<ul><li>64-bit/128-bit WEP</li><li>AES-CCMP</li><li>CKIP</li><li>TKIP</li></ul>	<ul><li>64-bit/128-bit WEP</li><li>AES-CCMP</li><li>CKIP</li><li>TKIP</li></ul>	<ul><li>64-bit/128-bit WEP</li><li>AES-CCMP</li><li>CKIP</li><li>TKIP</li></ul>	
Bluetooth	Bluetooth 4.2	Bluetooth 4.2	Bluetooth 5.0	

### Video

Table 8. Discrete graphics specifications

Discrete graphics			
Controller	External display support	Memory size	Memory Type
NVIDIA GeForce GTX 1650 Super	One HDMI port and one DVI port	6 GB	GDDR5
NVIDIA GeForce RTX 2080	One HDMI port and one DisplayPort	8 GB	GDDR6
NVIDIA GeForce RTX 2080 Ti	One HDMI port and one DisplayPort	11 GB	GDDR6

### **Audio**

**Table 9. Audio specifications** 

Description	Values
Туре	Integrated 7.1 channel audio with S/PDIF port
Controller	Realtek ALC3861
Internal interface	High-definition audio
External interface	7.1 channel output, Microphone-in, stereo headphones, and headset combo connector

# Storage

Your computer supports one of the following configurations:

- One M.2 2242/2260/2280 solid-state drive, one 3.5-inch hard drive, and two 2.5-inch hard drives
- One U.2 drive and two 2.5-inch hard drives

- One 3.5-inch hard drive and two 2.5-inch hard drives
  - (i) **NOTE:** The primary drive of your computer varies depending on the storage configuration.

Table 10. Storage specifications

Form factor	Interface type	Capacity
Two 2.5-inch hard drives	SATA AHCI 6 Gbps	Up to 2 TB
One 3.5-inch hard drive	SATA AHCI 6 Gbps	Up to 1 TB
One M.2 2242/2260/2280 solid-state drive	<ul><li>SATA AHCI 6 Gbps</li><li>PCle NVMe up to 32 Gbps</li></ul>	Up to 1 TB

# **Power ratings**

Table 11. Power ratings specifications

Тур	е	460 W	850 W
Inp	ut voltage	90 VAC to 264 VAC	90 VAC to 264 VAC
Inp	ut frequency	47 Hz to 63 Hz	47 Hz to 63 Hz
Inp	ut current (maximum)	8 A	8 A
Out	tput current (continuous)	5 V/25 A, 12 VA/18 A, 12 VB/16 A, 12 VC/8 A, 3.3 V/17 A, 5 Vaux/3 A	5 V/25 A, 12 VA/18 A, 12 VB/16 A, 12 VC/8 A, 3.3 V/17 A, 5 Vaux/3 A
Rated output voltage		5V, 12VA, 12VB, 12VC, 3.3V, 5Vaux	5V, 12VA, 12VB, 12VC, 3.3.V, 5Vaux
Tem	nperature range		
	Operating	5°C to 50°C (41°F to 122°F)	5°C to 50°C (41°F to 122°F)
	Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

# Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 12. Computer environment

Description	Operating	Storage
Temperature range	10°C to 35°C (50°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	20% to 90% (non-condensing)	5% to 95% (non-condensing)
Vibration (maximum)*	0.26 GRMS	1.37 GRMS
Shock (maximum)	40 G for 2 ms with a change in velocity of 20 in/s (51 cm/s)†	105 G for 2 ms with a change in velocity of 52.5 in/s (133 cm/s)‡
Altitude (maximum)	-15.2 m to 3,048 m (-50 ft to 10,000 ft)	-15.2 m to 10,668 m (-50 ft to 35,000 ft)

- $^{\star}$  Measured using a random vibration spectrum that simulates user environment.
- $\dagger$  Measured using a 2 ms half-sine pulse when the hard drive is in use.

### **Alienware Command Center**

Alienware Command Center (AWCC) provides a single interface to customize and enhance the gaming experience. The AWCC dashboard displays most recently played or added games, and provides game-specific information, themes, profiles, and access to computer settings. You can quickly access settings such as game-specific profiles and themes, lighting, macros, and audio that are critical to the gaming experience.

AWCC also supports AlienFX 2.0. AlienFX enables you to create, assign, and share game-specific lighting maps to enhance the gaming experience. It also enables you to create your own individual lighting effects and apply them to the computer or attached peripherals. AWCC embeds Peripheral Controls to ensure a unified experience and the ability to link these settings to your computer or game.

AWCC supports the following features:

- FX: Create and manage the AlienFX zones.
- Fusion: Includes the ability to adjust game-specific Power Management, Sound Management, and Thermal Management features.
- Peripheral Management: Enables peripherals to appear in and be managed in Alienware Command Center. Supports key peripheral settings and associates with other functions such as profiles, macros, AlienFX, and game library.

AWCC also supports Sound Management, Thermal Controls, CPU, GPU, Memory (RAM) monitoring. For more information about AWCC, see the *Alienware Command Center Online Help*.

### Getting help and contacting Alienware

### Self-help resources

You can get information and help on Alienware products and services using these online self-help resources:

Table 13. Alienware products and online self-help resources

Self-help resources	Resource location
Information about Alienware products and services	www.alienware.com
My Dell app	Dell
Tips	
Contact Support	In Windows search, type <b>Contact Support</b> , and press <b>Enter</b> .
Online help for operating system	www.dell.com/support/windows
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals and documents.	Your Alienware computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at <a href="https://www.dell.com/support">www.dell.com/support</a> . For more information on how to find the Service Tag for your computer, see <a href="https://www.dell.com/support">Locate the Service Tag on your computer</a> .
VR Support	www.dell.com/VRsupport
Videos providing step-by-step instructions to service your computer	www.youtube.com/alienwareservices

# Contacting Alienware

To contact Alienware for sales, technical support, or customer service issues, see www.alienware.com.

- (i) NOTE: Availability varies by country/region and product, and some services may not be available in your country/region.
- (i) NOTE: If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.