


DOG TRAINING COLLAR WITH GPS TRACKER

**MODELS: GPS-DTR 25000-25002-25003 (GPS and Training Function)
GPS 25000-25002-25003 (No Training Function)**

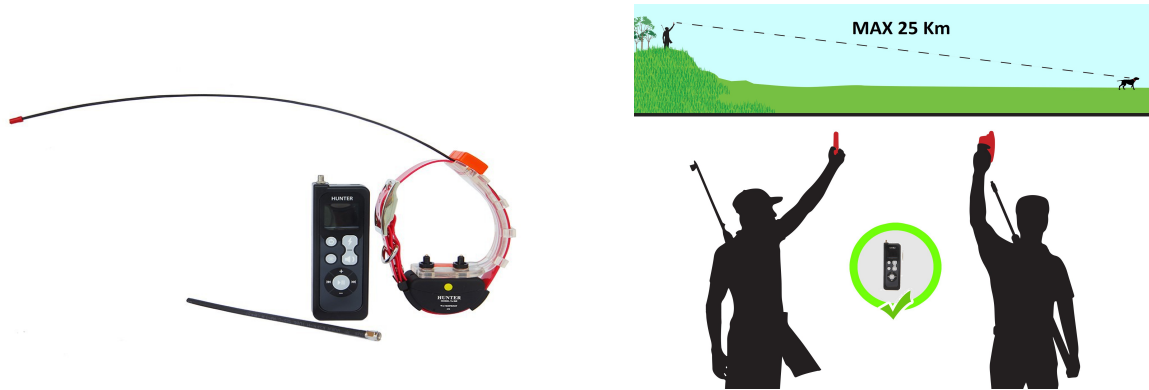


PRODUCT INCLUDES:

Collar, USB Charger, USB Cable, Adapter
Remote Control and antenna, long/short probes if trainer

PREPARING THE GPS-TRAINING COLLAR FOR FIRST USE

Charge the collar for 7-8 hours. The battery has a standby time of 20 hours when fully charged. Connect the small USB adapter to the USB cable, and then the cable to the USB charger. Then connect the charger to the collar as shown on the picture below. Lift the orange plastic protective cover and connect the charger. Now switch on the collar. To switch it on, hold for 1 second the back side of the remote control at the USB output (where the built-in magnet is), at the point where the collar indicator led is. Then remove the remote control. The red indicator led of the collar will continuously light showing that the device is charging. In order to complete a full charge you need to switch off the collar with the remote control magnet.

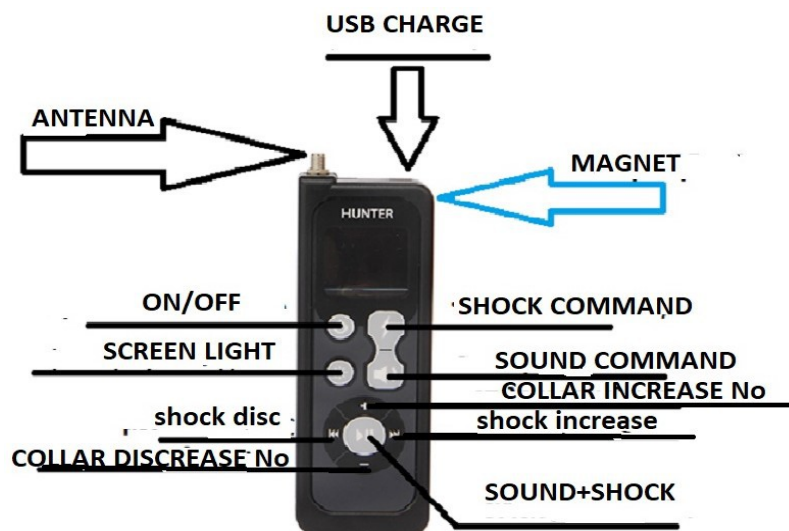

After 7-8 hours of charging, remove the charger. To switch off the collar, hold for 4 seconds the remote control part (where the built-in magnet is) at the point where the collar indicator led is.

The remote control should be charged for 4-5 hours. Connect the charger to the remote control USB connector on the top.

PAIRING AND USE THE GPS-TRAINING COLLAR

The collar you purchased is already paired with the remote control. If you want to pair it again, follow the instructions below. The remote control can control up to 9 collars. The remote control has a + and a - button for collar selection to send commands.

PAIRING: Switch on the remote control from the ON / OFF button, then switch on the collar. When the collar is switched on the red indicator led of the collar flashes. Press for 4-5 seconds the screen light button and the speaker icon on the screen will start flashing. The remote control is in tuning mode. Now hold for 10 seconds the back of the remote control (where the built-in magnet is) at the point where the collar indicator led is located. After 10 seconds remove the remote control from the collar and if you hear 3 consecutive beep sounds from the collar, press the shock command button for 2 seconds. You will hear a beep sound, indicating that the sync was successful.

Repeat the same procedure if you want to sync other collars.

When you finish adjusting the collars, press the audio command button to return the remote control to normal operation.

When you press the remote control shock button, a shock command is sent to the corresponding collar. Each time you press the audio command or the push button or the audio + shock button, the screen flashes, indicating that the command is being sent to the collar. The level of shock fluctuates using the number buttons on the remote control from 1 to 8. Level 1 is the lowest and level 8 is the highest.

After use, you can switch off the remote control using the ON / OFF switch.

TIPS FOR USING THE GPS-TRAINING COLLAR

The device is specially designed for hunting dogs and works under harsh conditions (rain, dense vegetation etc). It is lightweight, durable and is ideal for both small and large size dogs.

The collar should be positioned on the bottom of the dog's neck (facing the ground). The two probes should touch the dog's skin so it can feel the stimulus. Place it tight on the neck and if the dog has long fur, trim it slightly so that the probes make contact with the skin.



You need to find the right power level for your dog. Start from level 1 and if you see no reaction use level 2. Increase the level until you see a reaction from the dog. When the dog reacts you have found the level you need to use. If you use level 8 which is the highest and you see no reaction from the dog then the collar has not been properly placed on its neck. It should be tight and if the dog has long fur, trim it so the probes make contact with the skin. Use short or long probes depending on the dog's fur.

Always be present during the charging process of the devices. It is recommended to charge once per month during the period you do not use the device and store it always charged in a dry place with temperatures below 40 degrees. We advise to charge the collar and the remote control prior to each use.




GPS TRACKER

The collar has a build-in GPS antenna and the remote control a Bluetooth module. The remote control communicates with the mobile phone or tablet via Bluetooth. The mobile phone or tablet must be Android 4.4 or later version and Bluetooth version 4 or 5. To synchronize the remote with your mobile, follow these steps:

1. Download and install the app on your mobile.
2. Turn on the remote control from the switch.
3. Start the application.
4. You will see the picture below (first). Select Start Scan and then tap the Bluetooth icon (second picture) and you'll go straight to the map.
5. You can see on the map a dog's head indicating the dog's position (the collar must be outdoors facing the sky)
6. By tapping the dog's head on the application you can see the distance between the user and the collar.

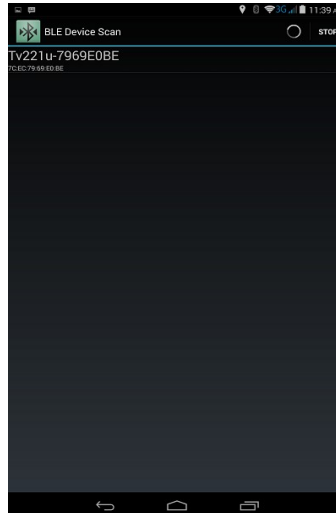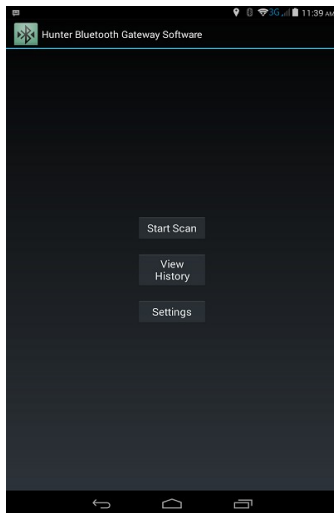

The following pictures show how to select the time interval for GPS information, and the buttons of the remote control on the application. You can select 2 = 60 seconds, 3 = 30 seconds, 4 = 20 seconds, 5 = 15 seconds, 10 = 2 seconds for the GPS info pack.

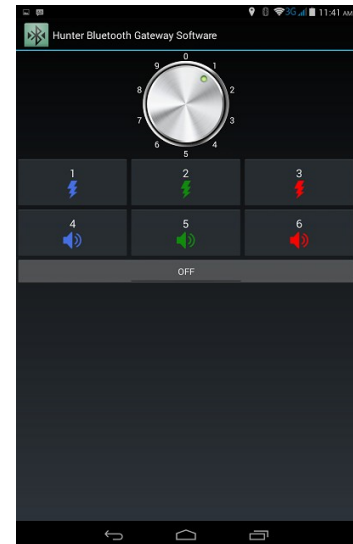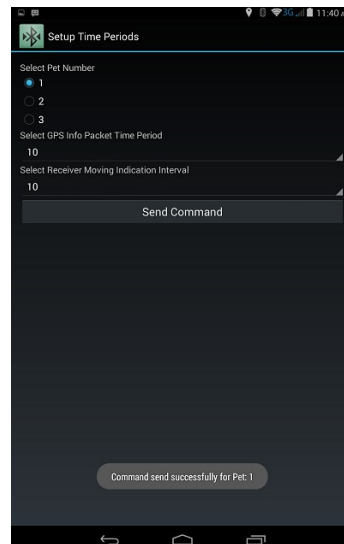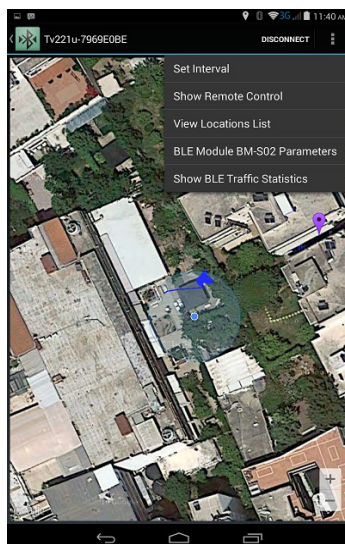

WARRANTY

We offer 1 year warranty and quick service upon expiry. The warranty does not cover the built-in rechargeable batteries of the collar and the remote control.