

Dear customer

(Read Before Using the Unit)

Minimize battery usage when the unit is not in use.

The unit has a standby function which allows you to connect to a network (wired LAN/Wi-Fi) as soon as the unit is turned on. This function is enabled by default.

When the standby function is enabled, it maintains network connectivity (wired LAN/Wi-Fi) even when the unit is not in use, therefore battery life is still being consumed.*


We therefore recommend that you leave the supplied AC adaptor connected when the unit is not in use.

You can also minimize battery usage that occurs by disabling the standby mode when the unit is not in use.

■ How to disable the standby mode

- ① Turn on the unit.
If the network indicator flashes blue and red alternately, wait for about 1 minute until the alternate flashing stops.
- ② Touch and hold [NET] and [▶/||] until the operation Indicator (amber) flashes twice.
(This may take up to 4 seconds)

The process is now complete.

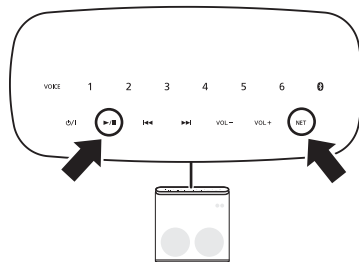

If you disable the standby mode the unit will operate in the following manner:

- When the unit is turned on, it will take about 1 minute until it connects to a network.
- When the unit is turned off, the network lamp (purple) does not light.
- Even if you include the unit in a group using the “Panasonic Music Streaming” app, it will be removed from the group when the unit is turned off.

■ To re-enable the standby mode setting, please follow the below instructions:

- ① Turn on the unit.
If the network indicator flashes blue and red alternately, wait for approx 1 minute until the alternate flashing stops.
- ② Touch and hold [NET] and [▶/||] until the operation indicator (amber) flashes once. (This may take up to 4 seconds)

The process is now complete.

If you enable the standby mode, the unit will operate in the following manner:

- When the unit is turned off, the network lamp (purple) will flash 3 times.

※ The battery lasts about 13 hours from full to empty.