

Maintenance Service Operations

Non-hybrid models only

Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Engine																
Engine oil and filter, replace		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine/Transmission/Timing gear check for leaks ^A			X		X		X		X		X		X		X	
Service Reminder Indicator (SRI), reset		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Fuel lines and fuel filter, check for leakage and damage					X				X				X			
Engine Air cleaner (ACL), clean the air cleaner housing/replace filter ^B .					X				X				X			
Spark plugs, replace							X						X			
Engine coolant check & adjust antifreeze rating & anti-corrosion agent		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Accessory drive belt, belt tensioner & idler pulley, replace ^C																X
Timing belt tensioner & idler pulley, replace ^C																X
Steering, Front and Rear Suspension																
Power steering fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Steering/front suspension, check for wear according to: Wheel angles check					X				X				X			
Rear suspension, check for wear according to: Wheel angles check					X				X				X			
Transmission, Driveshaft and Differential																
Automatic transmission fluid level, check/adjust ^D						X					X					X
Final drive/bevel gear, visual inspection (AWD models only) ^E					X				X				X			
Driveshaft joints, check for wear/play					X				X				X			
Driveshafts, check rubber boots					X				X				X			
Propeller shaft, pilot bearing and universal joints, check wear (AWD models only)					X				X				X			
Controls and Lighting																
Washer fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check all wiper blades and washers for headlights and windshields for function and signs of wear		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
External lighting, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Headlights, fog lights, check and align			X		X		X		X		X		X		X	

SERVICE AND MAINTENANCE



Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Horn, check function		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Body																
Cabin air filter, replace ^F			X		X		X		X		X		X		X	
Clean inside of windshield in front of camera (vehicles with camera for collision warning)		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Seatbelts																
Seatbelts, check function		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake System																
Brake fluid level, check & adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake fluid, replace ^G					X				X				X			
Parking brake, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake pads/discs, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake hoses and lines, check for damage/leaks					X				X				X			
Wheels and Tires																
Wheels and tires, check wear and condition		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Wheels and tires check inflation pressure			X		X		X		X		X		X		X	
Tire inflator kit ^H																

Service operation		Schedule of services														
All Non-hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Spare tire check for damage, wear, and tire pressure ¹		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Check and replace parts or software, as required by Volvo Car USA, LLC, that are covered under the terms of the Volvo New Car Warranty.

A In the event of a leak from the transmission, check the oil level.

B May be necessary to change more frequently when driving in dusty/dirty areas.

C Replace at 150,000 miles/240,000 kilometers or 10 years, whichever comes first.

D Check automatic transmission fluid level only if an external leak is identified. **Volvo recommends changing transmission fluid every 50,000 miles/80,000 kilometers, only on vehicles used for towing, or when a message appears in the instrument panel text window.**

E Only check the level if there is leakage.

F Recommended to replace at least once a year or more often in heavy traffic or dirty/dusty areas.

G Recommended to replace every 3 years or 40,000 miles (if driven in mountainous areas or humid climates – every one year) at owner's request.

H Check expiration date label every four years for replacement date on vehicles with this equipment.

I Check spare tire pressure (where applicable) every two years or every 40,000 miles/64,000 kilometers.

◀◀ Hybrid models only

Service operation		Schedule of services														
Hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Engine																
Engine oil and filter, replace		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Engine/Transmission/Timing gear check for leaks ^A			X		X		X		X		X		X		X	
Service Reminder Indicator (SRI), reset		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Fuel lines and fuel filter, check for leakage and damage					X				X				X			
Engine Air cleaner (ACL), clean the air cleaner housing/replace filter ^B .					X				X				X			
Spark plugs, replace							X						X			
Engine coolant check & adjust antifreeze rating & anti-corrosion agent		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Accessory drive belt, belt tensioner & idler pulley, replace ^C																X
Timing belt tensioner & idler pulley, replace ^C																X
Steering, Front and Rear Suspension																
Power steering fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X

Service operation		Schedule of services														
Hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Steering/front suspension, check for wear according to: Wheel angles check					X				X				X			
Rear suspension, check for wear according to: Wheel angles check					X				X				X			
Transmission, Driveshaft and Differential																
Automatic transmission fluid level, check/adjust ^D						X					X					X
Final drive/bevel gear, visual inspection (AWD models only) ^E					X				X				X			
Driveshaft joints, check for wear/play					X				X				X			
Driveshafts, check rubber boots					X				X				X			
Propeller shaft, pilot bearing and universal joints, check wear (AWD models only))					X				X				X			
Controls and Lighting																
Washer fluid level, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check all wiper blades and washers for headlights and windshields for function and signs of wear		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
External lighting, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Headlights, fog lights, check and align			X		X		X		X		X		X		X	
Horn, check function		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X



SERVICE AND MAINTENANCE



Service operation		Schedule of services														
Hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
Body																
Cabin air filter, replace ^f			X		X		X		X		X		X		X	
Clean inside of windshield in front of camera (vehicles with camera for collision warning)		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Seatbelts																
Seatbelts, check function		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake System																
Brake fluid level, check & adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake fluid, replace ^g					X				X				X			
Parking brake, check/adjust		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake pads/discs, check		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Brake hoses and lines, check for damage/leaks					X				X				X			
Wheels and Tires																
Wheels and tires, check wear and condition		X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Wheels and tires check inflation pressure			X		X		X		X		X		X		X	
Tire inflator kit ^h																

Service operation		Schedule of services														
Hybrid Models	miles x 1000	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150
	km x 1000	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240

Check and replace parts or software, as required by Volvo Car USA, LLC, that are covered under the terms of the Volvo New Car Warranty.

A In the event of a leak from the transmission, check the oil level.

B May be necessary to change more frequently when driving in dusty/dirty areas.

C Replace at 150,000 miles/240,000 kilometers or 10 years, whichever comes first.

D Check automatic transmission fluid level only if an external leak is identified. **Volvo recommends changing transmission fluid every 50,000 miles/80,000 kilometers, only on vehicles used for towing, or when a message appears in the instrument panel text window.**

E Only check the level if there is leakage.

F Recommended to replace at least once a year or more often in heavy traffic or dirty/dusty areas.

G Recommended to replace every 3 years or 40,000 miles (if driven in mountainous areas or humid climates – every one year) at owner's request.

H Check expiration date label every four years for replacement date on vehicles with this equipment.

Maintenance/Service records

The following pages contain the service interval records section.

A Word About Your Service Records

After each service is performed, your authorized Volvo retailer will validate the appropriate record section by entering the date serviced, mileage, representative signature, and the retailer stamp.



NOTE

It is your responsibility, and extremely important for you to retain documentation of all service or warranty repairs to your Volvo (including work performed by you as well as by non-authorized repair facility), in the event that questions regarding warranty coverage arise.

Volvo Genuine Parts... Keep Your Volvo a Volvo

Regardless of where you service your Volvo, make sure Volvo Genuine Parts are used to assure the safety and high quality of your vehicle.

From oil filters to replacement lamps, from complete assemblies to useful accessories, all Volvo Genuine Parts are rigorously tested to ensure the reliability and durability you have come to expect from Volvo products.

You won't have to worry about compromising the special safety features originally built into your Volvo when you insist on using only Volvo Genuine Parts for all service, maintenance, and repairs performed on your vehicle.

Volvo Genuine Parts are available at authorized

Volvo retailers located throughout North America. Experienced and knowledgeable people will help you be certain that your Volvo remains a Volvo.



Maintenance Service No. 1

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 2

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 3

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 4

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP



◀ Maintenance Service No. 5

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 6

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 7

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 8

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 9

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 10

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP



⏪ **Maintenance Service No. 11**

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 12

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 13

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 14

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Maintenance Service No. 15

Carried out
miles/km

Date

Mileage

Retailer Authorized Signature

SIGNATURE

Retailer Stamp

STAMP

Brake Fluid Changes

The following pages contain brake fluid change interval records.

3rd Year 1

Carried out
Date

Odometer reading

Service Manager's Signature

SIGNATURE

Retailer Stamp

STAMP

6th Year 1

Carried out
Date

Odometer reading

Service Manager's Signature

SIGNATURE

Retailer Stamp

STAMP

9th Year 1

Carried out
Date

Odometer reading

Service Manager's Signature

SIGNATURE

Retailer Stamp

STAMP

12th Year 1

Carried out
Date

Odometer reading

Service Manager's Signature

SIGNATURE

Retailer Stamp

STAMP

Overseas Operations/Global Special Sales**General information**

The warranties provided in this booklet are for 2020 Volvo passenger vehicles built to U.S. or Canadian specifications sold by Volvo Car USA, LLC or Volvo Car Canada Limited and normally operated and registered in any of the 50 states of the U.S., the District of Columbia, any territories or commonwealths of the United States, or any territories or provinces of Canada. Volvo Car Corporation is responsible for meeting the warranty obligations set forth in the 2020 Warranty and Maintenance Records Information Manual.

Travel Outside of the U.S. and Canada

Should warranty repairs be required while you are temporarily abroad, bring your Volvo to any authorized Volvo retailer for repairs. These repairs will be covered under the Volvo Car USA, LLC New Vehicle Limited Warranty or the Volvo Car Canada Limited New Vehicle Warranty.

Registration Outside of the U.S. or Canada

If you register your U.S. or Canadian specification vehicle outside of the 50 states of the U.S., the District of Columbia, or the territories or provinces of Canada, the New Vehicle Limited Warranty (U.S.) or New Vehicle Warranty (Canada) will still apply, only if the vehicle was originally registered in the U.S. or Canada.