

USER MANUAL

TENDER COVER

G NAUTICS NAUTICAL ACCESSORIES

This PU coated Polyester adjustable cover fits most popular inflatable boats.

The G-Nautics tender covers are originally designed for covering the tender up to the transom plate, so it is not necessary to remove the outboard. The multiple strap assembling points give great flexibility in length. For smaller size tenders the back part needs be to folded double. The G-nautics tender covers have an opening for the davits system. There are a lot of different davits systems on the market. The opening will help most likely for easier assembly on the davits but that depends on your personal situation.


2 bottom straps with quick-release buckles keep the cover in place while stowed on deck or in the davits. One middle strap pulls the cover tightly to the transom plate. Two back straps provide a strong fixation on the back tube. One around pull strap gives extra fixation around the bottom.

Available in 3 sizes:

Tender Cover M (250-280) Tender Cover L (285-320 cm) Tender Cover XL (325-360 cm)

Step by step


1. Cover the inflatable tender with the cover
2. Position the bow section first and work backwards
3. Close the quick-release buckles from the bottom straps and give a little bit tension
4. Look for the best buckle position for your specific inflatable tender and fix the adjustable strap around the end cone. In some cases you need to fold the extra material under the cover.
5. Fix the middle strap tightly to the transom plate or outboard engine (this is not always possible or necessary)
6. Pull and fix the rope that tunnels around the bottom of the cover to get a nice lean fit
7. Adjust the quick-release buckles from the bottom straps to keep the cover firmly in place

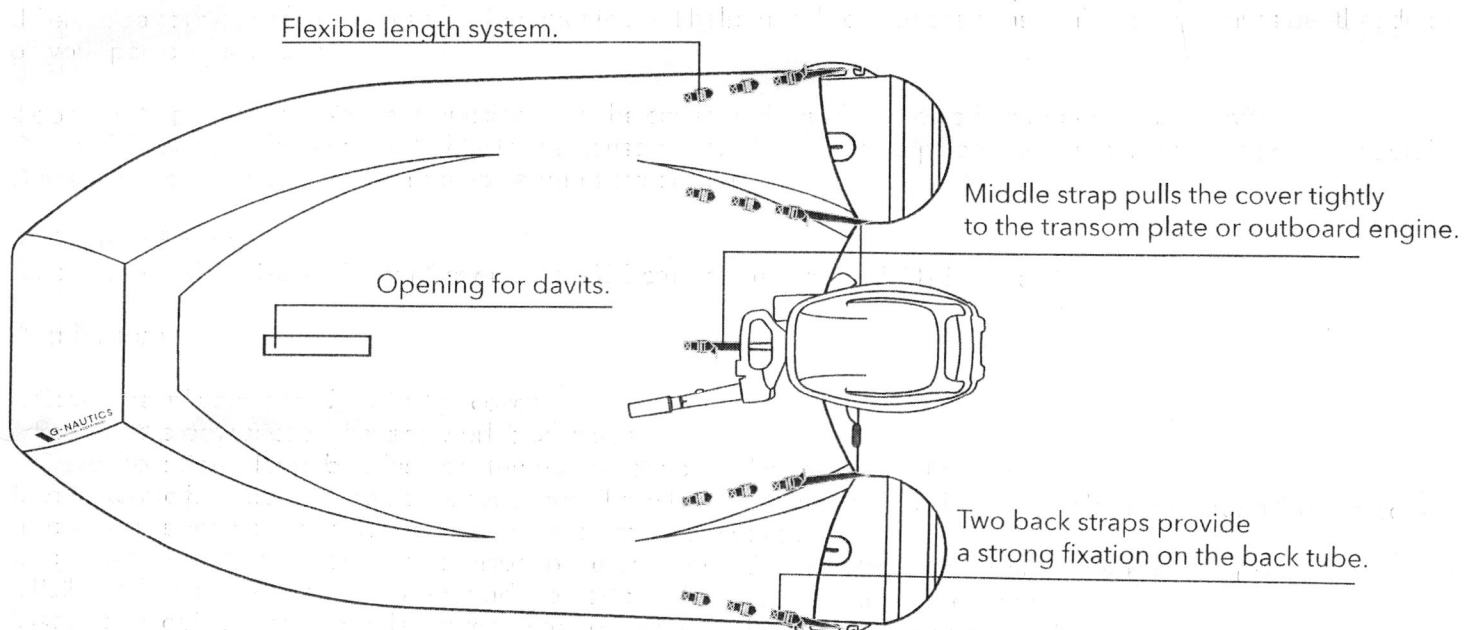

SEE MORE AT G-NAUTICS.COM

2 bottom straps with quick-release buckles

Two back straps provide a strong fixation on the back tube.

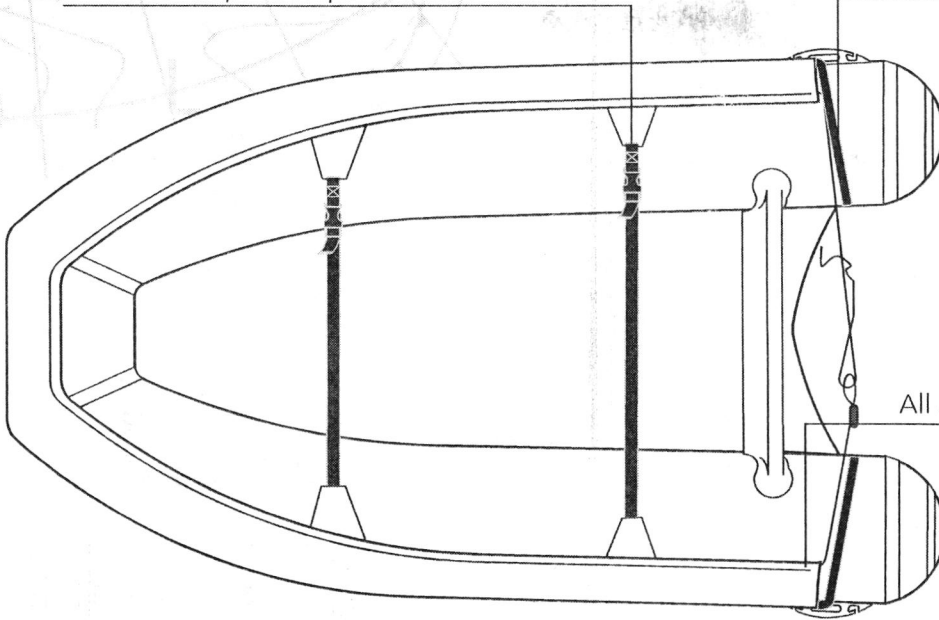

All around pull rope for bottom fixation

