



Codes: TV

Códigos: TV

Accurian	1803
Action	0873
Admiral	0093,0463
Advent	0761,0783,1933
Aiko	0092
Aiwa	1362
Akai	0812,1675,0702,0765,0030,0672,1207,1385,1935,2232
Akura	1687
Albatron	0843
Alfide	0672
America Action	0180
Anam	0180
AOC	0030,1365,1589,1590,2014,2087,2402,2479
Aomni	1623
Apex Digital	0748,0879,0765,0767,0890,1217,1992,2397
Astar	1531,1738
Audinac	0180
Audiovox	1564,0451,0180,0092,0623,0802,0846,0875,1284,1766,1769,1803,1865,1937,1951,1952,2121
Aventura	0171
Axion	1937
Bay	0236,0463,0180
Bell & Howell	0154
BenQ	1032,1315,1756
BGH	0876,0898
Blue Sky	1254
Boigle	1696
Bradford	0180
Brilliant	1007
Bronkonic	0236,0463,1935,1938
BydSing	1309
Candle	0030,0056
Carnivale	0030
Carver	0054
Casio	1205
CCE	0037,0623
Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Cineral	0451,0092
Citizen	0451,0060,0030,0092,0056,0561,1672,1935
Clarion	0180
Coby	1538,1634,2306,2314,2315,2338,2340,2343,2344,2345,2350,2560,3202
Commercial Solutions	1447,0047
Concerto	0056
Conia	1687
Contec	0180
Continental	2357
Coradir	2844
Craig	0180
Croma	1011
Crosley	0000,0054
Crown	0180,0672
Crown Mustang	0672
Curtis	1200,1326,2352,2397,2466
Curtis Mathes	0047,0054,0154,0451,0093,0060,0702,0030,0145,0166,1661,0056,1147,1347,1959
CXC	0180
Cytron	1326
Daenyng	0180,0672
Daewoo	0154,0451,0092,1661,0623,0661,0672,1816
Daytron	0180
Dell	1264,1080,1178,1863
Denon	0145
Diamond Vision	1997
Digistar	1565
Digital Lifestyles	1765
Disney	1665,2152
Drean	0037
DSE	1565
Dumont	0017
Durabrand	0463,0180,0178,0171,1034,1463,1665
Dynex	1463,1785,1810,2049,2184
Electroband	0000
Electrograph	1755,1623
Electrohome	0463,1670,1672
Elektra	0017,1661
Element	1687,1886,2183
Emerson	1864,0154,0451,0236,0463,0180,0178,0171,1661,0623,1394,1665,1886,1944,1963,1997
Emprex	1422,1765
Encross	0876
Envision	0030,0813,1365,1589,2014,2087

TROUBLESHOOTING

RESOLUCIÓN DE PROBLEMAS

Problem:	Mode key does not blink when a key is pressed.
Solution:	Replace batteries.
Problem:	Mode key blinks, but remote does not control my equipment.
Solution:	Press correct mode key and point remote at equipment you need to control.
Problem:	Tried all codes for my brand of device and none work.
Solution:	Try CODE SEARCH (METHOD C) method.
Problem:	I want to switch VOLUME LOCK from TV to AUX control.
Solution:	Follow instructions in Locking Volume Controls to One Device and press the AUX mode key.
Problem:	POWER button not turning ON/OFF both TV and STB at the same time.
Solution:	TV code is not properly programmed. Follow one of the setup methods shown on prior page.

Tip/Consejo:
Write the working code here for future use.
Escriba el código de funcionamiento aquí para una referencia futura.

TV code	Código de TV	Audio code	Código de Audio	DVD code	Código deDVD

Megatron	0178,0145
Memorex	0154,0463,0150,0178,0877,1665,1670,1785,1892,1924,1927,1938
MGA	0150,0178,0030
Midland	0047,0017,0051
Mintek	1603,1990
Mitsubishi	1250,0093,0150,0178,0836,1797
Monivision	0843
Motorola	0093
MTC	0060,0030,0056
Multitech	0180
Mx Onda	1687
NAD	0156,0178,0037,0056,0866,1156
Naxa	2104
NEC	0030,0056,0704,0876,1398,1704,1797
Netsat	0037
NetTV	1755,0762
NITC	1814
NEXUS Electronics	2183
Nikko	0178,0030,0092
Nimbro	2104
Noblex	0154
Nokia	0180,0861
Norcent	0748,0824,1365,1589,1590,1591,1745,2110
Norwood Micro	1286
NTC	0092
Nu-Tec	2157
NuVision	0054
Olevia	1610,1144,1240,1331
Onwa	0180
Optimus	0250,0154,0166,0650,1924,1927
Optoma	1348
Optonica	0093
Orion	0236,0463,1463,1938
Otic	0748,1314,1660,2098,2355,2419
Packard Bell	0092
Panasonic	1480,0250,0051,0650,1271,1291,1345,1924,1927,1941,1946,1947,2240,2264
Panavox	0861
PARK	2104
Penney	0047,0156,0051,0060,0178,0030,1347
Pinc	1746
Petters	0054
Philco	0054,0451,0463,0030,0145,0171,0092,1661,0082,1271,1394,1665,1963
Philips	1454,1866,0054,0171,0037,0690,1394,1455,1483,1744,1806,1867,1961,2372,2374,2564
Pilot	0030
Pioneer	1457,0166,0679,0866,1260,1398,2240
Polarar	1288,1589
Polonaroid	1523,0765,2425,2121,2117,2063,2002,1992,1769,1767,1746,1766,1763,1762,1687,1565,1538,1385,1341,1327,1326,1316,1314,1286,1276,1262,0865
Portland	0451,0092,1661
Precision	1792
Prima	0761,0783,1749,1753,1785,1933
Prism	0051
Proscan	1447,0047,0030,1347,1922,2147,2183,2256
Proton	0178
Proview	1687
Pulsar	0017
Punktal	2687
Pye	0412
Pyle	1200
Quasar	0250,0051,0650,1291,1924,1927
RadioShack	0047,0154,0180,0178,0030,0056,1904
RCA	1547,1447,0047,0051,0093,0060,1661,2932,2746,2434,2247,2187,2002,1959,1958,1953,1922,1781,1347,1147,0679
Realistic	0154,0180,0178,0030,0056
RevolutionHD	1623
Runco	0017,0030,1398
Sampo	1755,0030,0762
Samsung	0812,0060,0702,0178,0030,2814,2697,2596,2137,2103,2051,1959,1060,0814,0766,0650,0056,0037
Sansei	0451,0092
Sansui	0463,0171,1463,1409,1670,1892,1904,1935,1938
Sanyo	0054,0154,1142,1362

TROUBLESHOOTING

RESOLUCIÓN DE PROBLEMAS

Problema:	La tecla de modo no parpadea al presionar una tecla.
Solución:	Reemplace las pilas.
Problema:	La tecla de modo parpadea, pero el control remoto no controla mi equipo.
Solución:	Presione la tecla de modo correcta y apunte el control remoto al equipo que necesita controlar.
Problema:	Probé con todos los códigos que corresponden a mi marca de equipo y ninguno funciona.
Solución:	Solución: Intente con el método BÚSQUEDA DE CÓDIGOS (MÉTODO C).
Problema:	Deseo cambiar el BLOQUEO DE VOLUMEN pasando de control de TV a control de AUX .
Solución:	Siga Conguración de los Controles de Volumen, pero presione la tecla de modo AUX en lugar de la tecla de modo TV .
Problema:	Tecla POWER no gira ON / OFF de la TV y STB, al mismo tiempo.
Solución:	Código de TV no está correctamente programado. Siga uno de los métodos de configuración que aparecen en la página anterior.

TV code	Código de TV	Audio code	Código de Audio	DVD code	Código deDVD



Codes: DVD

Códigos: DVD

 
ABS	1972
Accurian	0675,0000
Admiral	0048
Adventura	0000
Aiko	0278
Aiwa	0641,0037,0000
Akal	0675,0695,0000
Alco	0790
Alienware	1972
Allegro	0869,0039
America Action	0278
American High	0035
Amosonic	0764
AMTC	1630
Apex Digital	0672,0717,0755,0796,1020,1056,1061
Asahi	2615
Asha	0240
Astar	1461
Astry	1513
Audio Authority	2555
Audiovox	0717,0790,0037,0278
Beaumarck	0240
Bel Canto Design	1571
Bell & Howell	0104
Blaupunkt	0717
Blue Parade	0571
Blue Sky	2623
Broksonic	0695,0184
California Audio Labs	0480
Calix	0037
Cambridge Soundworks	0690
Canon	0035
Carver	0081
CCF	0278
Superscan	0093,0864,1944
Supersonic	1753,2104,3204
Supreme	0000
SVX	0748,0865,1963
Sylvania	1864,0054,0030,0171,1271,1314,1394,1665,1886,1944,1963
Symphonic	0180,0171,1394,1904,1944
Syntax	1610,1144,1240,1331
Tahoci	0561
Talent	0178
Tandy	0093
Tatung	1286,1288,1361,1756,2496
TCL	2414,2434,3183
Tec	0250,0051
Technics	0051,0056
Techwood	0054,0180,0150,0060,0092,0056
Teknika	0702,0056
Telefunken	0739
Thomas	1904
TMK	0178,0056
Dynatech	0000
Dynex	2596
Emax	0330
Electrohome	2116,0037,0043
Electrophonic	0037
Emerex	0032
Emerson	0591,0675,2213,0037,0184,0000,0043,0278,1593
Enterprise	0591
F&D	2533
Fisher	0670,0047,0104
Fuji	0035,0039
Funai	0675,0000,1593
Garrard	0000
Gateway	1077,1158,1972
GE	0522,0717,0060,0035,0240
General Electric	0717
GFH	0675,1593
Global Home	2123
Go Video	0744,0741,0783,0869,1075,1158,0240,0614
GoldStar	0741,0869,0037
Gradiente	0651,0000
Greenhill	0717
Grundig	0539,0705
Harley Davidson	0000
Harman/Kardon	0582,0702,1229,2927,3228,0081
Headquarter	0046
Helios	2192
Hello Kitty	0831
Hewlett Packard	1972
HI-Q	0047
Hitachi	0573,0664,0695,0000,0042
Hiteker	0672
Howard Computers	0717
HP	1972
Hughes Network Systems	0042
Humax	1588,0739
Hush	1972
Hyundai	1451
iBLYPOWER	1972
ilo	1348
Initial	0717
Insignia	0675,0741,2095,2428,2596
Instant Replay	0035
Integra	0571,1769,0627,1634,2147
Irradio	0646
IRT	0783,1654
JBL	0702
JVC	0558,0623,1164,1275,1550,1602,2365,2855,0067
Kawasaki	0796
KEC	0037,0278
Kenwood	0490,0534,0067
KLH	0717,0790,1020
Kodak	0035,0037
Koss	0651
Lasonic	0798
Lexicon	2545
LG	0591,0741,0869,1602,2135,0037
Linksys	1972
LiteOn	1158
Lloyd's	0000
Logitech	2639
LXI	0037
Magnasonic	0651
Magnavox	0503,0539,0646,0675,1354,1506,0035,0039,0081,0000,1593
Magnin	0240
Marantz	0539,2414,0035,0081
Marta	0037
Matsushita	0035,0162
Media Center PC	1972
ME	0025
Memorex	0695,0831,1270,2213,2331,3153,0035,0162,0037,0048,0039,0047,0240,0000,0104,0046
MGA	0240,0043
MGN Technology	0240



Codes: Blu-ray

Códigos: Blu-ray

Denon	2258,2748
Harman/Kardon	2523,3228
Insignia	0675,2428,2596
Integra	2147
JVC	2365,2855
Lexicon	2545
LG	0741,1602
Magnavox	0675
Marantz	2414
Memorex	2331
Olevia	2331
Onkyo	2147
Oppo	2545
Panasonic	1641
Philips	2084,2434
Pioneer	0142,2442,2854
Samsung	0199
Sharp	2260
Sony	1516
Sylvania	0675
Toshiba	2705,3157
Viore	2553
Vizio	2563
Yamaha	2298



Codes: Audio

Códigos: Audio

Aiwa	1405,0189,1388,1641
Alco	1390
Altec Lansing	2720
AMC	1077
Anam	1609
Apex Digital	1257,1430,1774
Apple	1115
Arcam	1189,0189
Audiotronic	1189
Audiovox	1390
Bose	1629,1933
Carver	1189,0189
Coby	1389,2127
Curtis	1289
Daewoo	1350
Denon	2706,2857,1360,1460,2247,2279,2516,2820,2987,3001,2502
Dynex	2971
Fisher	1801
Gateway	1517
Harman/Kardon	0892,3045,0110,0189,1304,1306,2241,2443
Hitachi	1801
HifiPlus	2483
iHome	2435
iLive	2013
Insignia	1030,1077,1751,1893,2126,2169,175,2472,2929,2966
Integra	1298,1320,1805
iSymphony	2442
JBL	0110,1306,2241
JVC	1374,1495,1871,2040,2239,2331,2969
Kenwood	1313,1569
KLH	1390,1428
Koss	1366,1497
Left Coast	0892
LG	1293,2197,2284,2676
Linn	0189
Liquid Video	1497
Magnavox	1189,1269,0189,1514,1831
Marantz	0892,1892,1189,1269,0189,1289,2114
McIntosh	1289
Micromega	1189
Myryad	1189
Nakamichi	1313
NexTech	1751
Norcent	1389,1751
Nova	1389
Onkyo	0842,1298,1320,1531,1805
Optimus	1023
Orltron	1366,1497
Panasonic	1517,2454,2695
Philco	1390
Philips	0892,1189,1269,0189,1831,2311,2455,2467,2608,3030,1797,2021,2458
Pioneer	1023,1384,1935
Polk Audio	0892,018