



Affinity United Development Co., Limited (Affinity)

Address: Rm 1102, Building 114, YuanFengXinCun, LongHua Town, BaoAn Dist, Shenzhen, China

Contact: Tel: 0086-755-2973 8755 Email: miky@hkaffinity.com SKYPE: mikyaffinity

Company Brief Introduction:

HK Affinity Specializes in new and original industrial products from original factory. In addition, we still sell used in good quality, refurbished industrial parts and equipments.

Meanwhile, cannot find the part you're looking for? Pls feel free contact us. We promise will response to you as soon as possible from our working day Monday to Friday.

We have 5 years of experience in the market of industrial products. Anything we can do for you, pls tell us without any hesitation. We will provide you with an acceptable solution by our professional knowledge.

Your satisfaction is our great happiness.

Our Powerful Product & Brand line contains:

Cooling Fan



Hand Wheel



NEMICON

Industrial connector



LCD

SHARP



NEC

HMI

Kinco®

switch

tend

Encoder Step Motor



CNC



FUJI ELECTRIC


SIEMENS

NO#	Fanuc part number	Manufacturer & Part Number	Note
1	/	NMB-MAT 1606KL-05W-B69	(0.08A) 40mm x 40mm x 15mm
2	A90L-0001-0507/A	NMB-MAT 1608KL-05W-B39	(0.13A) 40mm x 40mm x 20mm
3	A90L-0001-0507/B	NMB-MAT 1608KL-05W-B39	(0.13A) 40mm x 40mm x 20mm
4	A90L-0001-0506	NMB-MAT 2406KL-05W-B59	(0.13A) 60mm x 60mm x 15mm
5	A90L-0001-0506	Panaflo FBA06T24HS	(0.13A) 60mm x 60mm x 15mm
6	A90L-0001-0508	NMB-MAT 2410KL-05W-B59	(0.13A) 60mm x 60mm x 25mm
7	A90L-0001-0508	NMB-MAT 2410ML-05W-B59	(0.13A) 60mm x 60mm x 25mm
8	A90L-0001-0422	NMB-MAT 3106KL-05W-B59	(0.16A) 80mm x 80mm x 15mm
9	A90L-0001-0422	Panaflo FBA08T24HS	(0.16A) 80mm x 80mm x 15mm
10	A90L-0001-0378	NMB-MAT 3610KL-05W-B59	(0.20A) 92mm x 92mm x 25mm
11	A90L-0001-0509	NMB-MAT 4715KL-05W-B39	(0.04A) 120mm x 120mm x 38mm
12	A90L-0001-0385	Sanyo 109P0424H6D03	Sanyo Denki DC Fine Ace 20 with 80mm
13	A90L-0001-0385/A	Sanyo 109P0424H6D04	Sanyo Denki DC Fine Ace 20 with 95mm
14	A90L-0001-0385/B	Sanyo 109P0424H6D11	Sanyo Denki DC Fine Ace 20 with 250mm
15	A90L-0001-0385/T	Sanyo 109P0424H6D14	Sanyo Denki DC Fine Ace 20 with 40mm
16	A90L-0001-0441	Sanyo 109P0424H7D08	Sanyo Denki DC Fine Ace 15 with 70mm
17	A90L-0001-0441/100	Sanyo 109P0424H7D13	Sanyo Denki DC Fine Ace 15 with 100mm
18	A90L-0001-0441/39	Sanyo 109P0424H7D20	Sanyo Denki DC Fine Ace 15 with 39mm
19	A90L-0001-0335/B	Toyo UTHS457C	AC 220V
20	A90L-0001-0335/B	Style Electric US12D23	
21	A90L-0001-0316/R	Fanuc Fan	
22	A90L-0001-0442/R	Fanuc Fan	
23	A90L-0001-0515/RL	Fanuc Fan	
24	A90L-0001-0541/R	Fanuc Fan	
25	A90L-0001-0446/R	Fanuc Fan	
26	A90L-0001-0538/RL	Fanuc Fan	
27	A90L-0001-0538/R	Fanuc Fan	



Module: FANUC, FUJI

NO#	Fanuc part number	FUJI part number	Note
1	A44L-0001-0069	1MBI600NP-060	Please E-mail to info@hkaffinity.com to get price and confirmed delievery day
2	A44L-0001-0165	2MBI150KB-060	
3	A44L-0001-	2MBI200K-060-01	
4	A44L-0001-	2MBI400K-060-01	
5	A44L-0001-0165#20	6DI50AH-050	
6	A76L-0300-0193	6DI150A-060	
7	A76L-0300-0189	6MBP20JB-060	
8	A76L-0300-0182	6MBP50NA-060	
9	A76L-0300-0186	6MBP50NA-060	
10	A76L-0300-0170	6MBP50RTA-060	
11	A76L-0300-0035	6MBP150KB-060	
12	A76L-0300-0077	6MBP200KA-060	
13	A76L-0300-0227	7MBR15UG-060	
14	A76L-0300-0195	7MBR75U2H-060	
15	A76L-0300-0193	MBM200HT12	
16	A76L-0300-0231	MBM400GS6AW	
17	A76L-0300-0164	MG150N2YS40	
18	A76L-0300-0191	MG200J2YS50	
19	A44L-0001-0165#	MG400Q1US1	
20	A44L-0001-	MIG100J7CSA0A	
21	A44L-0001-	PM150CBS-060	
22	A44L-0001-	PM300CBS-060	
23	A44L-0001-0165#200	QM75DY-H	
24	A50L-0001-0260	BSM25GD120DN2E3224	
25	A50L-0001-0261/N	BSM150GB120DN11	
26	A76L-0300-0133B	6MBP50RA-060 6MBP75NA-060	
27		6MBP50RTA-060	
28		6MBP75RA-060	

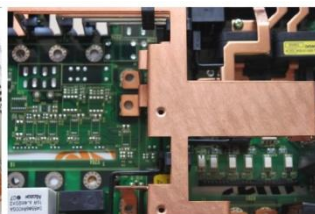

We will be very happy to help with any request or questions.

2) Encoder: FANUC Mitsubishi

NO#	FANUC encoder	Mitsubishi encoder	Note
1	A860-0360-T201	OSA104	Please E-mail to info@hkaffinity.com to get price and confirmed delievery day
2	A860-0360-T101	OSA104S	
3	A860-0360-V501	OSA104S2	
4	A860-0365-T101	OSE104	
5	A860-2000-T301	OSE105S2	
6	A20B-2002-0300	OSE105S	
7	A20B-2002-0310	OSA253	
8	A20B-9000-0300	OSA253S	
9	A20B-9000-0380	OSE253	
10		OSA17	

Batteries

NO#	FANUC encoder	Description	Note
1	A98L-0031-0004	FANUC CNC Alkaline D cell	
2	A98L-0031-0005	FANUC CNC Alkaline D cell	
3	A98L-0031-0006	FANUC CNC 16i/18i 用锂电池 (松下)	Memory backup 16B/18B, 16A, 21A, 21B,
4	A98L-0031-0007	FANUC CNC 16i/18i 用锂电池 (松下)	Memory backup 16A/18A
5	A98L-0031-00011	FANUC CNC 16i/18i 用锂电池	
6	A98L-0031-00012	FANUC CNC 16i/18i 用锂电池	Memory backup 15B, 16i/18i/21i, 16B/18B
7	A98L-0001-0902	FANUC CNC 16i/18i 用锂电池(松下)	Absolute pulse coder alpha series
8	A06B-6073-K001	FANUC CNC 16i/18i 用锂电池	
9	A02B-0177-K106	FANUC CNC 16i/18i 用锂电池	
10	A02B-0200-K102	FANUC CNC 16i/18i 用锂电池	

The followin Fanuc Parts is available for us! Please E-mail us at info@hkaffinity.com to get offer

NO#	Specification	Description	product group
1	411AP	ROTARY SWITCH FOR OP PANEL	consumable parts
2	44A717186-042	LAMP, 28V 40MA INCAN-T-1 3/4M	consumable parts
3	A02B-0072-K893	BURNDY CONNECTOR (3P,	consumable parts
4	A02B-0120-K323	CONNECTOR, AMP, 3 PINS,	consumable parts
5	A02B-0120-K324	CONNECTOR, AMP, 3 PINS,	consumable parts
6	A02B-0124-K001	ACCESSORIES CABLE CLAMP,8	consumable parts
7	A02B-0207-J561/613K	PC CARD	PCB
8	A02B-0213-K211	COMPACT FLASH CARD, 256 MB	consumable parts
9	A02B-0213-K212	COMPACT FLASH CARD, 1GB	consumable parts
10	A02B-0236-C203	SEPARATE DETECTOR I/F UNIT 1	consumable parts
11	A02B-0236-C205	SEPARATE DETECTOR I/F UNIT	consumable parts
12	A02B-0236-C230	OPERATOR PANEL (MAIN PANEL	consumable parts
13	A02B-0236-C931/16	PC CARD MAINTENANCE KIT	consumable parts
14	A02B-0236-C932/16	PC CARD MAINTENANCE KIT	consumable parts
15	A02B-0236-C932/211	PC CARD MAINTENANCE KIT	consumable parts
16	A02B-0236-K150	COMPACT FLASH CARD	consumable parts
17	A02B-0236-K170	SET OF 55 TRANSPARENT KEY	consumable parts
18	A02B-0236-K312	CONNECTOR, CM67	consumable parts
19	A02B-0236-K313	CONNECTOR, CM68, CM69	consumable parts
20	A02B-0259-C221/A	HANDY OPERATOR PANEL 20	consumable parts

21	A02B-0261-	SEPARATE TYPE MDI 61 FULL	consumable parts
22	A02B-0281-C125/TBE	SEPARATE TYPE MDI, TURNING	consumable parts
23	A02B-0281-K601	COMPACT FLASH CARD, 128 MB	consumable parts
24	A02B-0303-C231	MACHINE OPERATOR PANEL	consumable parts
25	A02B-0303-C245	MACHINE OPERATOR PANEL+	consumable parts
26	A02B-0303-K150	COMPACT FLASH CARD	consumable parts
27	A03B-0801-C141	DO MODULE OD64A	I/O Units
28	A03B-0815-C001	I/O MODULE FOR CONNECTOR	I/O Units
29	A03B-0815-C003	I/O MODULE FOR CONNECTOR	I/O Units
30	A03B-0815-C005	I/O MODULE FOR CONNECTOR	I/O Units
31	A03B-0815-C021	TERMINAL MODULE A	I/O Units
32	A03B-0819-C002	BASE UNIT ABU5A HORIZONTAL	I/O Units
33	A03B-0819-C011	INTERFACE MODULE AIF01A	I/O Units
34	A03B-0819-C051	ANALOG INPUT MODULE AAD04A	I/O Units
35	A03B-0819-C052	ANALOG OUTPUT MODULE	I/O Units
36	A03B-0819-C104	DIGITAL INPUT MODULE AID16D	I/O Units
37	A03B-0819-C105	DIGITAL INPUT MODULE AID32E1	I/O Units
38	A03B-0819-C109	DIGITAL INPUT MODULE AID32F2	I/O Units
39	A03B-0819-C114	DIGITAL INPUT MODULE AID16L	I/O Units
40	A03B-0819-C152	DIGITAL OUTPUT MODULE	I/O Units
41	A03B-0819-C154	DIGITAL OUTPUT MODULE	I/O Units
42	A03B-0819-C156	DIGITAL OUTPUT MODULE	I/O Units
43	A03B-0819-C160	DIGITAL OUTPUT MODULE	I/O Units
44	A03B-0819-C161	DIGITAL OUTPUT MODULE	I/O Units
45	A03B-0819-C167	DIGITAL OUTPUT MODULE	I/O Units
46	A03B-0819-C182	DIGITAL OUTPUT MODULE	I/O Units
47	A03B-0823-C001	BASIC I/O MODULE WITH	I/O Units
48	A03B-0823-C003	EXTENSION I/O MODULE B W/	I/O Units
49	A04B-0800-C009*LR	TURBO BLOWER	Laser Parts
50	A04B-0800-C011*LR	TURBO BLOWER	Laser Parts
51	A04B-0800-C015*LR	TURBO BLOWER	Laser Parts
52	A04B-0800-C015*LR	TURBO BLOWER	Laser Parts
53	A04B-0800-K328/1	TURBO BLOWER OIL (1x200ml)	Laser Parts
54	A04B-0800-K367	LASER GAS FILTER 0.5 MICRON	Laser Parts
55	A04B-0817-D201	REAR MIRROR	Laser Parts
56	A04B-0817-D202	FOLDING MIRROR	Laser Parts
57	A04B-0817-D203	FOLDING MIRROR	Laser Parts
58	A04B-0818-D201	REAR MIRROR	Laser Parts
59	A04B-0819-D200	OUTPUT COUPLER	Laser Parts
60	A06B-0031-B077/7008	SERVO MOTOR BETA 1/3000	Beta Motor
61	A06B-0032-B075/7000	SERVO MOTOR BETA 2/3000	Beta Motor
62	A06B-0032-B075/7008	SV MOTOR BETA 2/3000	Beta Motor
63	A06B-0032-B077/7008	SERVO MOTOR BETA 2/3000	Beta Motor
64	A06B-0034-B075/7000	SERVO MOTOR BETA 6/2000	Beta Motor
65	A06B-0034-B075/7008	SERVO MOTOR BETA 6/2000	Beta Motor
66	A06B-0061-B403	SV MOTOR BETA iS 2/4000	Beta Motor
67	A06B-0075-B003	SV MOTOR BETA iS 8/3000	Beta Motor
68	A06B-0112-B103	SV MOTOR BETA iS 0.3/5000	Beta Motor
69	A06B-0113-B075/7008	SERVO MOTOR BETA 0.5/3000	Beta Motor
70	A06B-0113-B077/7000	SERVO MOTOR BETA 0.5/3000	Beta Motor
71	A06B-0115-B103	SV MOTOR BETA iS 0.5/6000 IP67	Beta Motor

72	A06B-0115-B103/0100	SV MOTOR BETA iS 0.5/6000 IP67	Beta Motor
73	A06B-0115-B403/0100	SV MOTOR BETA iS 0.5/6000	Beta Motor
74	A06B-0116-B103	SV MOTOR BETA iS 1/6000	Beta Motor
75	A06B-0116-B103/0100	SV MOTOR BETA iS 1/6000 IP67	Beta Motor
76	A06B-0116-B203	SV MOTOR BETA iS 1/5000 KEY	Beta Motor
77	A06B-0123-B075/7000	SERVO MOTOR ALPHA 3/3000	Alpha Motor
78	A06B-0123-B077/7000	SERVO MOTOR ALPHA 3/3000	Alpha Motor
79	A06B-0123-B577/7008	SERVO MOTOR ALPHA 3/3000	Alpha Motor
80	A06B-0127-B077/7000	SERVO MOTOR ALPHA 6/2000	Alpha Motor
81	A06B-0128-B577/7000	SERVO MOTOR ALPHA 6/3000	Alpha Motor
82	A06B-0142-B077/7000	SERVO MOTOR ALPHA 12/2000	Alpha Motor
83	A06B-0147-B077/7000	SERVO MOTOR ALPHA 22/2000	Alpha Motor
84	A06B-0172-B575/7000	SERVO MOTOR ALPHA 6/3000HV	Alpha Motor
85	A06B-0202-B101	SV MOTOR ALPHA iF 1/5000	Alpha i Motor
86	A06B-0205-B000	SV MOTOR ALPHA iF 2/5000	Alpha i Motor
87	A06B-0212-B200	SV MOTOR ALPHA iS 2/5000 KEY	Alpha i Motor
88	A06B-0212-B700/0100	SV MOTOR ALPHA iS 2/5000	Alpha i Motor
89	A06B-0213-B100/0100	SV MOTOR ALPHA iS 2/5000HV	Alpha i Motor
90	A06B-0213-B200	SV MOTOR ALPHA iS 2/5000HV	Alpha i Motor
91	A06B-0213-B400/0100	SV MOTOR ALPHA iS 2/5000HV	Alpha i Motor
92	A06B-0215-B100/0100	SV MOTOR ALPHA iS 4/5000 IP67	Alpha i Motor
93	A06B-0215-B700/0100	SV MOTOR ALPHA iS 4/5000	Alpha i Motor
94	A06B-0216-B100	SV MOTOR ALPHA iS 4/5000HV	Alpha i Motor
95	A06B-0216-B100/0100	SV MOTOR ALPHA iS 4/5000HV	Alpha i Motor
96	A06B-0216-B400/0100	SV MOTOR ALPHA iS 4/5000HV	Alpha i Motor
97	A06B-0216-B500	SV MOTOR ALPHA iS 4/5000HV	Alpha i Motor
98	A06B-0223-B000	SV MOTOR ALPHA iF 4/4000	Alpha i Motor
99	A06B-0223-B001	SV MOTOR ALPHA iF 4/4000	Alpha i Motor
100	A06B-0227-B400	SV MOTOR ALPHA iF 8/3000	Alpha i Motor
101	A06B-0236-B100	SV MOTOR ALPHA iS 8/4000HV	Alpha i Motor
102	A06B-0239-B100	SV MOTOR ALPHA iS 12/4000HV	Alpha i Motor
103	A06B-0239-B400	SV MOTOR ALPHA iS 12/4000HV	Alpha i Motor
104	A06B-0266-B400	SV MOTOR ALPHA iS 22/4000HV	Alpha i Motor
105	A06B-0269-B400	SV MOTOR ALPHA iS 30/4000HV	Alpha i Motor
106	A06B-0273-B420	SV MOTOR ALPHA iS 40/4000HV	Alpha i Motor
107	A06B-0314-B005/7000	AC SERVO MOTOR 5S	Alpha Motor
108	A06B-0314-B572/7000	AC MOTOR 5S	Alpha Motor
109	A06B-0371-B577/7000	SERVO MOTOR ALPHA 1/3000	Alpha Motor
110	A06B-0372-B077/7000	SERVO MOTOR ALPHA 2/2000	Alpha Motor
111	A06B-0373-B075/7000	SERVO MOTOR ALPHA 2/3000	Alpha Motor
112	A06B-0373-B077/7000	SERVO MOTOR ALPHA 2/3000	Alpha Motor
113	A06B-0373-B175/7000	SERVO MOTOR ALPHA 2/3000	Alpha Motor
114	A06B-0373-B577/7008	SERVO MOTOR ALPHA 2/3000	Alpha Motor
115	A06B-0373-B588/7076	SERVO MOTOR ALPHA 2/3000	Alpha Motor
116	A06B-0374-B569/7000	SERVO MOTOR 0-OSP A 100ABS	Alpha Motor
117	A06B-0374-B575/7000	SERVO MOTOR ALPHA 2.5/3000	Alpha Motor
118	A06B-0374-B577/7000	SERVO MOTOR ALPHA 2.5/3000	Alpha Motor
119	A06B-0374-B588/7075	SERVO MOTOR ALPHA 2.5/3000	Alpha Motor
120	A06B-0374-B677/7000	SERVO MOTOR ALPHA 2.5/3000	Alpha Motor
121	A06B-0376-B575/7075	SERVO MOTOR ALPHA M2/3000	Alpha Motor
122	A06B-0377-B575/7075	SERVO MOTOR ALPHA M2.5/3000	Alpha Motor

123	A06B-0377-B675/7075	SERVO MOTOR ALPHA M2.5/3000	Alpha Motor
124	A06B-0377-B677/7000	SERVO MOTOR ALPHA M2.5/3000	Alpha Motor
125	A06B-0850-B391/3000	SPINDLE MOTOR ALPHA 1/8000	Alpha Motor
126	A06B-0850-B395/3000	SPINDLE MOTOR ALPHA 1/15000	Alpha Motor
127	A06B-0851-B190/3000	SPINDLE MOTOR ALPHA 1.5/8000	Alpha Motor
128	A06B-0851-B391/3000	SPINDLE MOTOR ALPHA 1.5/8000	Alpha Motor
129	A06B-0853-B130/3000	SPINDLE MOTOR ALPHA 3/8000	Alpha Motor
130	A06B-0866-B300/3000	SPINDLE MOTOR ALPHA 0.5/3000	Alpha Motor
131	A06B-0866-B380/3000	SPINDLE MOTOR ALPHA 0.5/3000	Alpha Motor
132	A06B-1501-B102	SP MOTOR ALPHA ii 0.5/10000HV	Alpha i Motor
133	A06B-1501-B105	SP MOTOR ALPHA ii 0.5/10000HV	Alpha i Motor
134	A06B-1503-B101	SP MOTOR ALPHA ii 1.5/10000HV	Alpha i Motor
135	A06B-1503-B103	SP MOTOR ALPHA ii 1.5/10000HV	Alpha i Motor
136	A06B-6050-K115	CONNECTOR (SIGNAL LINE)	consumable parts
137	A06B-6050-K120	CONNECTOR (SIGNAL LINE)	consumable parts
138	A06B-6058-H005	AC SERVO UNIT 10,20M	Servo Units
139	A06B-6058-H006	AC SERVO UNIT 20,30S	Servo Units
140	A06B-6058-H224	AC SERVO UNIT	Servo Units
141	A06B-6066-H006	AC SERVO AMP C	Servo Units
142	A06B-6066-H233	2-AXIS SERVO	Servo Units
143	A06B-6066-H244	C SERIES DGT SERVO	Servo Units
144	A06B-6070-H005	E SERIES SERVO AMPLIFIER	Servo Units
145	A06B-6071-K203	CONNECTOR AMP FOR PSM (PS,	consumable parts
146	A06B-6077-H106	POWER SUPPLY PSM 5.5	Servo Units
147	A06B-6077-H111	POWER SUPPLY PSM 11	Servo Units
148	A06B-6078-C001	FAN ADAPTOR PSM-11 SPM-11	consumable parts
149	A06B-6078-	SPINDLE AMPLIFIER SPM 2.2	Servo Units
150	A06B-6078-	SPINDLE AMPLIFIER SPM 5.5	Servo Units
151	A06B-6078-	SPINDLE AMPLIFIER SPM 11	Servo Units
152	A06B-6079-H103	SERVO AMPLIFIER SVM 1-40S	Servo Units
153	A06B-6079-H105	SERVO AMPLIFIER SVM 1-80	Servo Units
154	A06B-6079-H106	SERVO AMPLIFIER SVM 1-130	Servo Units
155	A06B-6079-H201	SERVO AMPLIFIER SVM 2-12/12	Servo Units
156	A06B-6079-H206	SERVO AMPLIFIER SVM 2-40/40	Servo Units
157	A06B-6079-H207	SERVO AMPLIFIER SVM 2-40/80	Servo Units
158	A06B-6079-H208	SERVO AMPLIFIER SVM 2-80/80	Servo Units
159	A06B-6079-H301	SERVO AMPLIFIER SVM 3-	Servo Units
160	A06B-6079-K815	CONNECTOR (POWER LINE),	consumable parts
161	A06B-6082-	SPINDLE AMPLIFIER SPMC 2.2	Servo Units
162	A06B-6082-	SPINDLE AMPLIFIER SPMC-11	Servo Units
163	A06B-6087-H115	POWER SUPPLY PSM 15	Servo Units
164	A06B-6087-H126	POWER SUPPLY PSM 26	Servo Units
165	A06B-6087-H130	POWER SUPPLY PSM 30	Servo Units
166	A06B-6087-H155	POWER SUPPLY PSM 55	Servo Units
167	A06B-6088-	SPINDLE AMPLIFIER SPM 26	Servo Units
168	A06B-6088-	SPINDLE AMPLIFIER SPM 30	Servo Units
169	A06B-6089-H101	SERVO AMPLIFIER SVU 1-12	Servo Units
170	A06B-6089-H105	SERVO AMPLIFIER SVU 1-80	Servo Units
171	A06B-6089-H106	SERVO AMPLIFIER SVU 1-130	Servo Units
172	A06B-6089-H206	SERVO AMPLIFIER SVU 2-40/40	Servo Units
173	A06B-6089-H208	SERVO AMPLIFIER SVU 2-80/80	Servo Units

174	A06B-6090-H003	SERVO AMPLIFIER SVUC 1-12	Servo Units
175	A06B-6090-H004	SERVO AMPLIFIER SVUC 1-40	Servo Units
176	A06B-6090-H006	SERVO AMPLIFIER SVUC 1-80	Servo Units
177	A06B-6090-	SERVO AMPLIFIER SVUC 1-80	Servo Units
178	A06B-6090-H233	SERVO AMPLIFIER SVUC 2-12/12	Servo Units
179	A06B-6090-H244	SERVO AMPLIFIER SVUC 2-40/40	Servo Units
180	A06B-6091-H130	POWER SUPPLY PSM 30 HV	Servo Units
181	A06B-6091-H145	POWER SUPPLY PSM 45 HV	Servo Units
182	A06B-6091-H175	POWER SUPPLY PSM 75 HV	Servo Units
183	A06B-6093-H101	SERVO AMPLIFIER SVU 1-12	Servo Units
184	A06B-6093-H102	SERVO AMPLIFIER SVU 1-20	Servo Units
185	A06B-6093-H111	SERVO AMPLIFIER SVU 1-12	Servo Units
186	A06B-6093-H112	SERVO AMPLIFIER SVU 1-20	Servo Units
187	A06B-6093-H151	SERVO AMPLIFIER SVU 1-12	Servo Units
188	A06B-6093-H152	SERVO AMPLIFIER SVU 1-20	Servo Units
189	A06B-6093-H401	REGENERATION RESISTOR	Servo Units
190	A06B-6093-K303	CONNECTOR KIT BATTERY LINK	consumable parts
191	A06B-6093-K305	CONNECTOR KIT BETA SVU 1-	consumable parts
192	A06B-6093-K306	CONNECTOR KIT BETA SVU 1-	consumable parts
193	A06B-6093-K313	CONNECTOR KIT BETA SVU 1-	consumable parts
194	A06B-6096-H101	SERVO AMPLIFIER SVM 1-12	Servo Units
195	A06B-6096-H102	SERVO AMPLIFIER SVM 1-20	Servo Units
196	A06B-6096-H103	SERVO AMPLIFIER SVM 1-40S	Servo Units
197	A06B-6096-H104	SERVO AMPLIFIER SVM 1-40L	Servo Units
198	A06B-6096-H105	SERVO AMPLIFIER SVM 1-80	Servo Units
199	A06B-6096-H106	SERVO AMPLIFIER SVM 1-130	Servo Units
200	A06B-6096-H116	SERVO AMPLIFIER SVM 1-130S	Servo Units
201	A06B-6096-H201	SERVO AMPLIFIER SVM 2-12/12	Servo Units
202	A06B-6096-H203	SERVO AMPLIFIER SVM 2-20/20	Servo Units
203	A06B-6096-H203	SERVO AMPLIFIER SVM 2-20/20	Servo Units
204	A06B-6096-H204	SERVO AMPLIFIER SVM 2-12/40	Servo Units
205	A06B-6096-H206	SERVO AMPLIFIER SVM 2-40/40	Servo Units
206	A06B-6096-H207	SERVO AMPLIFIER SVM 2-40/80	Servo Units
207	A06B-6096-H208	SERVO AMPLIFIER SVM 2-80/80	Servo Units
208	A06B-6096-H301	SERVO AMPLIFIER SVM 3-	Servo Units
209	A06B-6096-H304	SERVO AMPLIFIER SVM 3-	Servo Units
210	A06B-6096-H305	SERVO AMPLIFIER SVM 3-	Servo Units
211	A06B-6097-H204	SERVO AMPLIFIER SVM 2-40/40	Servo Units
212	A06B-6097-H206	SERVO AMPLIFIER SVM 2-60/60	Servo Units
213	A06B-6102-	SPINDLE MODULE SPM 2.2 TYPE	Servo Units
214	A06B-6102-	SPINDLE MODULE SPM 5.5 TYPE	Servo Units
215	A06B-6102-	SPINDLE MODULE SPM 11 TYPE	Servo Units
216	A06B-6102-	SPINDLE MODULE SPM 22 TYPE	Servo Units
217	A06B-6102-	SPINDLE MODULE SPM 26 TYPE	Servo Units
218	A06B-6102-	SPINDLE MODULE SPM 30 TYPE	Servo Units
219	A06B-6104-	SPINDLE MODULE SPM 45 HV	Servo Units
220	A06B-6110-C601	FAN UNIT	consumable parts
221	A06B-6110-C602	FAN UNIT	consumable parts
222	A06B-6110-C603	FAN UNIT	consumable parts
223	A06B-6110-H011	POWER SUPPLY ALPHA iPS 11	Servo Units
224	A06B-6110-H015	POWER SUPPLY ALPHA iPS 15	Servo Units

225	A06B-6110-K200/XXM	CONNECTOR POWER, AMP, XX	consumable parts
226	A06B-6110-K200/XXS	CONNECTOR POWER, AMP, XX	consumable parts
227	A06B-6110-K201/XYM	CONNECTOR POWER, AMP, XY	consumable parts
228	A06B-6110-K201/XYS	CONNECTOR POWER, AMP, XY	consumable parts
229	A06B-6110-	CONNECTOR POWER, AMP, XY	consumable parts
230	A06B-6110-K202/YYM	CONNECTOR POWER, AMP, YY	consumable parts
231	A06B-6110-K202/YYs	CONNECTOR POWER, AMP, YY	consumable parts
232	A06B-6110-K203/ZZL	CONNECTOR POWER, AMP	consumable parts
233	A06B-6110-K203/ZZM	CONNECTOR POWER, AMP	consumable parts
234	A06B-6110-K203/ZZS	CONNECTOR POWER, AMP	consumable parts
235	A06B-6110-K210	CONNECTOR FOR ALPHA-i	consumable parts
236	A06B-6111-H403	SSM-100 SUB MODULE SM FOR	Servo Units
237	A06B-6114-H103	AMP. ALPHA iSV 1-20 FSSB	Servo Units
238	A06B-6114-H104	AMP. ALPHA iSV 1-40 FSSB	Servo Units
239	A06B-6114-H205	AMP. ALPHA iSV 2-20/20 FSSB	Servo Units
240	A06B-6114-H208	AMP. ALPHA iSV 2-40/80 FSSB	Servo Units
241	A06B-6114-H209	AMP. ALPHA iSV 2-80/80 FSSB	Servo Units
242	A06B-6114-H303	AMP. ALPHA iSV 3-20/20/20 FSSB	Servo Units
243	A06B-6114-K204/S	CONNECTOR, MOTOR	consumable parts
244	A06B-6114-K230/E	CONNECTOR, MOTOR POWER	consumable parts
245	A06B-6114-K232/E	CONNECTOR, MOTOR BRAKE	consumable parts
246	A06B-6120-H011	POWER SUPPLY ALPHA iPS 11HV	Servo Units
247	A06B-6120-H018	POWER SUPPLY ALPHA iPS 18HV	Servo Units
248	A06B-6120-H030	POWER SUPPLY ALPHA iPS 30HV	Servo Units
249	A06B-6120-H045	POWER SUPPLY ALPHA iPS 45HV	Servo Units
250	A06B-6120-H075	POWER SUPPLY ALPHA iPS 75HV	Servo Units
251	A06B-6120-H100	POWER SUPPLY iPS 100HV 400V	Servo Units
252	A06B-6121-	AMP. ALPHA iSP 5.5HV TYPE A	Servo Units
253	A06B-6121-	AMP. ALPHA iSP 11HV TYPE A	Servo Units
254	A06B-6121-	AMP. ALPHA iSP 30HV TYPE A	Servo Units
255	A06B-6122-	AMP. ALPHA iSP 30HV TYPE B	Servo Units
256	A06B-6122-	AMP. ALPHA iSP 45HV TYPE B,	Servo Units
257	A06B-6124-H102	AMP. ALPHA iSV 1-10HV 400V,	Servo Units
258	A06B-6124-H104	AMP. ALPHA iSV 1-40HV 400V,	Servo Units
259	A06B-6124-H106	AMP. ALPHA iSV 1-180HV 400V,	Servo Units
260	A06B-6124-H202	AMP. ALPHA iSV 2-10/10HV 400V,	Servo Units
261	A06B-6124-H205	AMP. ALPHA iSV 2-20/20HV 400V,	Servo Units
262	A06B-6124-H207	AMP. ALPHA iSV 2-40/40HV 400V,	Servo Units
263	A06B-6124-H208	AMP. ALPHA iSV 2-40/80HV 400V,	Servo Units
264	A06B-6124-H209	AMP. ALPHA iSV 2-80/80HV 400V,	Servo Units
265	A06B-6127-H202	AMP. ALPHA iSV 2-10/10HV 400V,	Servo Units
266	A06B-6127-H207	AMP. ALPHA iSV 2-40/40HV 400V,	Servo Units
267	A06B-6127-H208	AMP. ALPHA iSV 2-40/80HV 400V,	Servo Units
268	A06B-6130-H001	SERVO AMPLIFIER BETA i SVM1-	Servo Units
269	A06B-6130-H002	SERVO AMPLIFIER BETA i SVM1-	Servo Units
270	A06B-6130-H003	SERVO AMPLIFIER BETA i SVM1-	Servo Units
271	A06B-6130-H401	SEP.REGENERATIVE RESISTOR	Servo Units
272	A06B-6130-K200	CONNECTOR KIT FOR CZ7 FOR	consumable parts
273	A06B-6130-K201	CONNECTOR KIT FOR	consumable parts
274	A06B-6130-K202	CONNECTOR KIT FOR CA20 FOR	consumable parts
275	A06B-6130-K203	CONNECTOR KIT FOR CX29 FOR	consumable parts

276	A06B-6130-K204	CONNECTOR KIT FOR CX30 FOR	consumable parts
277	A06B-6132-H002	SERVO AMPLIFIER BETA i SVM1-	Servo Units
278	A06B-6150-H030	POWER SUPPLY ALPHA iPS 30HV	Servo Units
279	A13B-0154-B001	OPTICAL I/O LINK ADAPTOR	consumable parts
280	A13L-0197-	VARIABLE RESISTANCE	consumable parts
281	A14B-0061-B002	POWER SUPPLY UNIT	consumable parts
282	A14B-0067-B002	POWER SUPPLY UNIT	consumable parts
283	A14B-0076-B001	INPUT UNIT L	consumable parts
284	A14B-0082-B211	POWER SUPPLY UNIT FOR	consumable parts
285	A15L-0001-0060/A	CONNECTOR UNIT FOR 2 SLOTS	consumable parts
286	A15L-0001-0077/K1	CABLE	consumable parts
287	A16B-1010-0285	PCB - MASTER FS-0B 3/4 AXIS	PCB
288	A16B-1100-0200	PCB - AC SPINDLE CONTROL DIG	PCB
289	A16B-1200-0670	PCB - AC SERVO CONTROL	PCB
290	A16B-1200-0800	PCB - AC SERVO CONTROL	PCB
291	A16B-1210-0560	PCB - POWER SUPPLY	PCB
292	A16B-1211-0850	PCB - POWER SUPPLY	PCB
293	A16B-1211-0970	PCB - I/O E3 104/72	PCB
294	A16B-1212-0100	PCB - POWER SUPPLY	PCB
295	A16B-1212-0110	PCB - POWER SUPPLY B2	PCB
296	A16B-1212-0210	PCB - MEMORY	PCB
297	A16B-1212-0871	PCB - POWER SUPPLY B1	PCB
298	A16B-1212-0901	PCB - POWER SUPPLY A1	PCB
299	A16B-1212-0950	PCB - POWER SUPPLY CE MARK	PCB
300	A16B-1213-0070	PCB - POWER SUPPLY	PCB
301	A16B-1213-0160	PCB - POWER SUPPLY	PCB
302	A16B-1213-0161	PCB - POWER SUPPLY	PCB
303	A16B-1310-0010	PCB - POWER SUPPLY	PCB
304	A16B-1310-0380	PCB - OPERATORS PANEL	PCB
305	A16B-2200-0120	PCB - BASE 0 512 KB	PCB
306	A16B-2200-0121	PCB - BASE 0 512 KB	PCB
307	A16B-2200-0131	PCB - BASE 1 WITH DRAM 512 KB	PCB
308	A16B-2200-0360	PCB - 3/4 AXIS CONTROL	PCB
309	A16B-2200-0390	PCB - 4 AXIS CONTROL SERIAL	PCB
310	A16B-2201-0101	PCB - MEMORY WITH SERIAL	PCB
311	A16B-2201-0103	PCB - MEMORY	PCB
312	A16B-2201-0110	PCB - OP.PANEL CONTROL	PCB
313	A16B-2202-0421	PCB - ALPHA PSU CONTROL PSM	PCB
314	A16B-2202-0710	PCB - MAIN POWER MATE E	PCB
315	A16B-2202-0831	PCB - SERVO POWER PM-E	PCB
316	A16B-2203-0110	PCB - I/O C7 104/72	PCB
317	A16B-2203-0332	PCB - ALPHA SPINDLE CONTROL	PCB
318	A16B-3200-0260	PCB - MAIN CPU	PCB
319	A16B-3200-0425	PCB - MASTER 21/210iS-B	PCB
320	A16B-3200-0495	PCB - MASTER	PCB
321	A17B-3300-0201	PCB - AXIS CARD i - SERIES	PCB
322	A20B-0009-0320	PCB - DC SERVO CONTROL	PCB
323	A20B-1000-0560	PCB - AC-SERVO CONTROL	PCB
324	A20B-1001-0120	PCB - AC SPINDLE DIG CONTROL	PCB
325	A20B-1001-0160	PCB - PSU 9" CRT/MDI MONO	PCB
326	A20B-1001-0720	PCB - SOFT KEY	PCB

327	A20B-1003-0010	PCB - AC SPINDLE CONTROL	PCB
328	A20B-1003-0020	PCB - POWER (WIRING)	PCB
329	A20B-1003-0080	PCB - SERVO WIRING DIGITAL	PCB
330	A20B-1003-0081	PCB - SERVO WIRING DIGITAL	PCB
331	A20B-1003-0090	PCB - AC SERVO CONTROL	PCB
332	A20B-1003-0230	PCB - BACKPLANE 13 SLOT	PCB
333	A20B-1006-0271	PCB - SOFT KEY FS-21B	PCB
334	A20B-2000-0170	PCB - MASTER A FS-0C 32 BIT	PCB
335	A20B-2000-0175	PCB - MASTER A FS-0C 32 BIT	PCB
336	A20B-2002-0470	PCB - I/O CARD	PCB
337	A20B-2002-0520	PCB - I/O CARD WITH MPG	PCB
338	A20B-2002-0521	PCB - I/O CARD WITHOUT MPG	PCB
339	A20B-2003-0150	PCB - BACK PLANE 2 SLOTS	PCB
340	A20B-2100-0540	PCB - ALPHA SERVO CONTROL	PCB
341	A20B-2100-0541	PCB - ALPHA SERVO CONTROL	PCB
342	A20B-2100-0543	PCB - ALPHA SERVO CONTROL	PCB
343	A20B-2100-0762	PCB - CONTROL BOARD ALPHA I	PCB
344	A20B-2100-0920	PCB - POWER SUPPLY	PCB
345	A20B-2101-0041	PCB - CONTROL BOARD FOR	PCB
346	A20B-2101-0050	PCB - BETA i AMPLIFIER	PCB
347	A20B-2101-0392	PCB - CONTROL BOARD FOR	PCB
348	A20B-2900-0380	PCB - SERVO INTERFACE	PCB
349	A20B-2900-0620	PCB - DRIVER MODULE C-SERIES	PCB
350	A20B-2901-0360	PCB - SERVO MODULE	PCB
351	A20B-2902-0070	PCB - SERVO MODULE RAM 32KB	PCB
352	A20B-2902-0390	PCB - DRIVER MODULE	PCB
353	A20B-2902-0420	PCB - DIGITAL SERVO MODULE	PCB
354	A20B-3300-0032	PCB - SERVO CONTROL CARD 4	PCB
355	A20B-3300-0120	PCB - SERVO CONTROL CARD	PCB
356	A20B-3300-0260	PCB - CPU CARD PENTIUM NEW	PCB
357	A20B-3300-0310	PCB - CPU CARD, DRAM 16MB	PCB
358	A20B-3300-0311	PCB - CPU CARD, DRAM 32MB	PCB
359	A20B-3300-0390	PCB - SERVO CARD UP TO 24	PCB
360	A20B-3300-0391	PCB - SERVO CONTROL WITH 6	PCB
361	A20B-3300-0392	PCB - SERVO CARD UP TO 16-	PCB
362	A20B-3300-0472	PCB - CPU CARD A6	PCB
363	A20B-3300-0479	PCB - CPU CARD D3	PCB
364	A20B-3900-0020	PCB - SRAM MODULE 3MB	PCB
365	A20B-3900-0042	PCB - DRAM MODULE 4MB 4M	PCB
366	A20B-3900-0052	PCB - SRAM MODULE 512KB	PCB
367	A20B-3900-0060	PCB - SRAM MODULE 2MB 2M	PCB
368	A20B-3900-0061	PCB - SRAM MODULE 1MB	PCB
369	A20B-3900-0073	PCB - F ROM MODULE 6MB	PCB
370	A20B-3900-0131	PCB - DRAM MODULE 8MB 8M	PCB
371	A20B-3900-0132	PCB - DRAM MODULE 4MB	PCB
372	A20B-3900-0163	PCB - FROM 32MB / SRAM 1MB	PCB
373	A20B-3900-0170	PCB - ANALOG SPINDLE MODULE	PCB
374	A20B-3900-0222	PCB - FROM 16MB / SRAM 3MB	PCB
375	A20B-8001-0291	PCB - HSSB INTERFACE	PCB
376	A20B-8001-0621	PCB - TOUCH PANEL CONTROL	PCB
377	A20B-8001-0630	PCB - SUB CPU	PCB

378	A20B-8001-0730	PCB - HSSB INTERFACE	PCB
379	A20B-8001-0730	PCB - HSSB INTERFACE	PCB
380	A20B-8001-0920	PCB - INVERTER i - SERIES FOR	PCB
381	A20B-8001-0961	PCB - PC SIDE HSSB I/F BOARD 1	PCB
382	A20B-8002-0020	PCB - CONTROL I/O OP.PANEL	PCB
383	A20B-8002-0251	PCB - BACKPANEL FOR PENTIUM	PCB
384	A20B-8100-0135	PCB - MASTER FS-18 i	PCB
385	A20B-8100-0663	PCB - MASTER FS-21i-B PMC-SB7	PCB
386	A20B-8100-0665	PCB - MASTER FS-21i-B PMC-SB7	PCB
387	A20B-8100-0670	PCB - FAST EHTERNET BOARD	PCB
388	A20B-8101-0030	PCB - FAST DATA SERVER	PCB
389	A20B-8101-0360	PCB - PENTIUM M MAINBOARD	PCB
390	A20B-8101-0368	PCB - MAINBOARD FOR PANEL i	PCB
391	A20B-8101-0500	PCB - MASTER BOARD DISPLAY	PCB
392	A210-0114-X032	FIXING RAIL	consumable parts
393	A230-0480-T001	FRAME FOR SPINDLE AMP.	consumable parts
394	A230-0533-X003	BATTERY CASE FOR BETA	consumable parts
395	A230-0577-X002	COVER FOR I/O MODULE A03B-	consumable parts
396	A230-0602-T104	COVER	consumable parts
397	A230-0602-T109	BATTERY CASE FOR ALPHA	consumable parts
398	A230-0604-T109	BATTERY CASE FOR ALPHA i	consumable parts
399	A230-0604-X003	FAN COVER	consumable parts
400	A250-0620-T001	FRAME FOR CRT/MDI 9" SMALL	consumable parts
401	A250-0689-X006	FILTER	consumable parts
402	A250-0854-T003	COVER FOR 10.4" LCD i SERIES	consumable parts
403	A250-0854-X020/C	CASE 2 OPTION SLOTS W/O PC i	consumable parts
404	A250-0854-X021	DOOR FOR CASE W/ 2 OPTION	consumable parts
405	A250-8002-Z350/064	SHORT BAR DC-LINK 64 MM	consumable parts
406	A250-8002-Z350/085	SHORT BAR	consumable parts
407	A250-8002-Z350/090	SHORT BAR DC-LINK 90 MM	consumable parts
408	A250-8002-Z350/154	SHORT BAR	consumable parts
409	A290-0121-X035	MOTOR COVER	Motor parts
410	A290-0141-X035	MOTOR COVER	Motor parts
411	A290-0371-X503	SMALL TYPE OLDHUMS	Motor parts
412	A290-0501-V535	OLDHUM ASSY	Motor parts
413	A290-0501-X531	OLDHUMS COUPLING	Motor parts
414	A290-0561-V501	PULSE CODER PLATE:A860	Motor parts
415	A290-0561-V502	PULSE CODER	Motor parts
416	A290-0561-V503	PULSE CODER LPLATE:A860	Motor parts
417	A290-0601-V001	BRUSH, AXIS	Motor parts
418	A290-0601-X713	BRUSH FOR TACHOGENERATOR	Motor parts
419	A290-0632-V001	BRUSH OOM	Motor parts
420	A290-0641-V001	BRUSH, AXIS	Motor parts
421	A290-0651-V001	BRUSH	Motor parts
422	A290-0651-V511	PULSE COD 2000P<7R	Motor parts
423	A290-0651-X004	BRUSH CAP M10,20,30	Motor parts
424	A290-0731-V410	COVER ASSEMBLY	Motor parts
425	A290-0731-X437	PLUG	Motor parts
426	A290-0817-V001	MOTOR BRUSH	Motor parts
427	A290-0820-V001	BRUSH	Motor parts
428	A290-0850-T500	FAN ASSEMBLY	Motor parts

429	A290-0850-T511	FAN ASSEMBLY	Motor parts
430	A290-0853-V350	SENSOR ASS'Y	Motor parts
431	A290-0854-V320	PULSE GENERATOR	Motor parts
432	A290-0854-V330	PULSE GENERATOR	Motor parts
433	A290-0854-V350	PULSE GENERATOR	Motor parts
434	A290-0856-X501	FAN COVER	Motor parts
435	A290-1003-T500	FAN MOTOR ASSY	Motor parts
436	A290-1003-X003	GEAR	Motor parts
437	A290-1012-T500	FAN MOTOR ASSY	Motor parts
438	A290-1406-T500	FAN UNIT ASSEMBLY	Motor parts
439	A290-1406-V410	COVER FOR TERMINAL BOX	Motor parts
440	A290-1502-T501	FAN ASSY	Motor parts
441	A290-1619-T231	ROTOR FOR BUILT IN SPINDLE	Motor parts
442	A290-4513-X252	CAP	Laser Parts
443	A290-4516-T020	DISCHARGE TUBE	Laser Parts
444	A290-4533-T001	DISCHARGE TUBE	Laser Parts
445	A290-4540-V170	OIL MIST CLEANER C4000-E	Laser Parts
446	A290-4541-T001	DISCHARGE TUBE	Laser Parts
447	A300-0001-0022/L10	STUD BOLT	consumable parts
448	A300-0001-X133	SCREW i SERIES FOR NEW	consumable parts
449	A300-0009-X352	GASKET FOR C SERIES SERVO	consumable parts
450	A30L-0010-0075/3X6	SCREW M3X6	consumable parts
451	A370-3083-0039	WARNING LABEL FOR ALPHI i	consumable parts
452	A370-3083-0040	WARNING LABEL FOR	consumable parts
453	A45L-0001-0329	CHOKE COIL	consumable parts
454	A50L-0001-0091	TRANSISTOR MODULE FUJI	consumable parts
455	A50L-0001-0096/AM	TRANSISTOR MODULE FUJI EVK	consumable parts
456	A50L-0001-0109/M	TRANSISTOR MODULE FUJI	consumable parts
457	A50L-0001-0118/A	TRANSISTOR MODULE FUJI	consumable parts
458	A50L-0001-0125/A	TRANSISTOR MODULE FUJI	consumable parts
459	A50L-0001-0175/M	TRANSISTOR MODULE FUJI	consumable parts
460	A50L-0001-0178	TRANSISTOR MODULE FUJI	consumable parts
461	A50L-0001-0179/30A	TRANSISTOR REGENERATIVE	consumable parts
462	A50L-0001-0209	TRANSISTOR MODULE FUJI	consumable parts
463	A50L-0001-0221	TRANSISTOR MODULE FUJI	consumable parts
464	A50L-0001-0295/NS	TRANSISTOR MODULE FUJI	consumable parts
465	A50L-0001-0327	TRANSISTOR MODULE	consumable parts
466	A50L-0001-0329	TRANSISTOR MODULE FUJI	consumable parts
467	A50L-0001-0331	TRANSISTOR MODULE FUJI	consumable parts
468	A50L-0001-0337	TRANSISTOR MODULE FUJI	consumable parts
469	A50L-0001-0338	TRANSISTOR MODULE FUJI	consumable parts
470	A50L-0001-0340	TRANSISTOR MODULE FUJI	consumable parts
471	A50L-0001-0342	TRANSISTOR MODULE FUJI	consumable parts
472	A50L-0001-0384	TRANSISTOR MODULE FUJI	consumable parts
473	A50L-2001-0257/R	DIODE FOR LASER	consumable parts
474	A50L-2001-0439	DIODE MODULE USR120PP6A	consumable parts
475	A50L-5000-0029/50	THYRISTOR MODULE PDT508	consumable parts
476	A50L-8101-0033/100H	THERMISTOR	consumable parts
477	A55L-0001-0041/904O	SCREEN	consumable parts
478	A55L-0001-0241/02R	ESP SWITCH	consumable parts
479	A55L-0001-	SWITCH	consumable parts

480	A55L-0001-	KEY SWITCH FOR OPERATORS	consumable parts
481	A56L-0001-	ROTARY SWITCH	consumable parts
482	A56L-0001-	ROTARY SWITCH OPERATORS	consumable parts
483	A56L-0001-	ROTARY SWITCH OPERATORS	consumable parts
484	A56L-0001-	ROTARY SWITCH OPERATORS	consumable parts
485	A56L-0001-0134/2A2B	ESP SWITCH	consumable parts
486	A57L-0001-0037	MAGNETIC SENSOR WITH HEAD	consumable parts
487	A57L-0001-0037/B	SENSOR HEAD	consumable parts
488	A57L-0001-0037/N	MAGNETIC SENSOR N, 12000	consumable parts
489	A58L-0001-0337	MAGNETIC CONTACTOR	consumable parts
490	A60L-0001-0031/5A	FUSE 5 A, GLASS TYPE	consumable parts
491	A60L-0001-0036/PC1-	FUSE PC1-30, 30 A 50 x 15 mm	consumable parts
492	A60L-0001-0039/M-5	FUSE M-5, 5 A GLASS TUBE 32 x	consumable parts
493	A60L-0001-0046/0.32	FUSE MP032, 0.32 A WITH ALARM	consumable parts
494	A60L-0001-0046/0.5	FUSE MP05, 0.5 A WITH ALARM	consumable parts
495	A60L-0001-0046/1.0	FUSE MP10, 1.0 A WITH ALARM	consumable parts
496	A60L-0001-0046/1.6	FUSE MP16, 1.6 A WITH ALARM	consumable parts
497	A60L-0001-0046/2.0	FUSE MP20, 2.0 A WITH ALARM	consumable parts
498	A60L-0001-0046/3.2	FUSE MP32, 3.2 A WITH ALARM	consumable parts
499	A60L-0001-0046/5.0	FUSE MP50, 5.0 A WITH ALARM	consumable parts
500	A60L-0001-0046/5.0R	FUSE MP50, 5.0 A REVERSE	consumable parts
501	A60L-0001-0046/6.3	FUSE MP63, 6.3 A WITH ALARM	consumable parts
502	A60L-0001-0046/7.5	FUSE MP75, 7.5 A WITH ALARM	consumable parts
503	A60L-0001-0046/7.5R	FUSE MP75, 7.5 A REVERSE	consumable parts
504	A60L-0001-0075/1.6	FUSE SMP16, 1.6 A WITH ALARM	consumable parts
505	A60L-0001-0075/2.0	FUSE SMP20, 2.0 A WITH ALARM	consumable parts
506	A60L-0001-0075/3.2	FUSE SMP32, 3.2 A WITH ALARM	consumable parts
507	A60L-0001-0075/5.0	FUSE SMP50, 5.0 A WITH ALARM	consumable parts
508	A60L-0001-	FUSE P405H, 0.5 A ALARM FUSE	consumable parts
509	A60L-0001-	FUSE P4100H, 10 A ALARM FUSE	consumable parts
510	A60L-0001-	FUSE P413H, 1.3 A ALARM FUSE	consumable parts
511	A60L-0001-	FUSE P420H, 2 A ALARM FUSE	consumable parts
512	A60L-0001-	FUSE P430H, 3.0 A ALARM FUSE	consumable parts
513	A60L-0001-	FUSE P435H, 3.5 A ALARM FUSE	consumable parts
514	A60L-0001-	FUSE P450H, 5.0 A ALARM FUSE	consumable parts
515	A60L-0001-	FUSE P475H, 7.5 A ALARM FUSE	consumable parts
516	A60L-0001-0118	FUSE PL4150S, 15 A ALARM	consumable parts
517	A60L-0001-	FUSE 25FH75, 75 A SCREW	consumable parts
518	A60L-0001-0145	FUSE 25SH100, 100 A SCREW	consumable parts
519	A60L-0001-0147	FUSE 25FH50, 50 A SCREW	consumable parts
520	A60L-0001-0149	FUSE 25SH140, 140 A SCREW	consumable parts
521	A60L-0001-0163	FUSE 25SH150, 150 A SCREW	consumable parts
522	A60L-0001-	FUSE DM03, 0.3 A GRID 2.5 MM	consumable parts
523	A60L-0001-	FUSE DM10, 1.0 A GRID 2.5 MM	consumable parts
524	A60L-0001-	FUSE DM20, 2.0 A GRID 2.5 MM	consumable parts
525	A60L-0001-	FUSE DM32, 3.2 A GRID 2.5 MM	consumable parts
526	A60L-0001-0175/0.3A	FUSE HM03, 0.3 A GRID 5 MM 1/5	consumable parts
527	A60L-0001-0175/0.5A	FUSE HM05, 0.5 A GRID 5 MM 1/5	consumable parts
528	A60L-0001-0175/1.0A	FUSE HM10, 1.0 A GRID 5 MM 1/5	consumable parts
529	A60L-0001-0175/2.0A	FUSE HM20, 2.0 A GRID 5 MM 1/5	consumable parts
530	A60L-0001-0175/3.2A	FUSE HM32, 3.2 A GRID 5 MM 1/5	consumable parts

531	A60L-0001-0175/5.0A	FUSE HM50, 5.0 A GRID 5 MM 1/5	consumable parts
532	A60L-0001-	FUSE RAPID 100 A QFS25U-100	consumable parts
533	A60L-0001-0183/200A	FUSE CR2L-200, 200 A	consumable parts
534	A60L-0001-0194/3.2	FUSE HP32, 3.2 A	consumable parts
535	A60L-0001-0194/5.0	FUSE HP50, 5 A CNC POWER	consumable parts
536	A60L-0001-	FUSE PC2F-50, 50A 50 x 15 mm	consumable parts
537	A60L-0001-0208/150A	FUSE SHB150, 150 A SCREW	consumable parts
538	A60L-0001-	FUSE GP100, 10 A WITH ALARM	consumable parts
539	A60L-0001-	FUSE GP20, 2 A WITH ALARM	consumable parts
540	A60L-0001-	FUSE GP32, 3.2 A WITH ALARM	consumable parts
541	A60L-0001-	FUSE GP50 5 A WITH ALARM	consumable parts
542	A60L-0001-	FUSE GP75 7.5 A WITH ALARM	consumable parts
543	A60L-0001-0276/3.15	FUSE 218/3.15 A	consumable parts
544	A60L-0001-0290/LM03	FUSE LM03, 0.3 A GRID 5 MM 1/5	consumable parts
545	A60L-0001-0290/LM10	FUSE LM10, 1.0 A GRID 5 MM 1/5	consumable parts
546	A60L-0001-0290/LM20	FUSE LM20, 2.0 A GRID 5 MM 1/5	consumable parts
547	A60L-0001-	FUSE LM20C, 2.0 A	consumable parts
548	A60L-0001-0290/LM32	FUSE LM32, 3.2 A GRID 5 MM 1/5	consumable parts
549	A60L-0001-	FUSE LM32C, 3.2 A GRID 5 MM	consumable parts
550	A60L-0001-0290/LM50	FUSE LM50, 5.0 A GRID 5 MM 1/5	consumable parts
551	A60L-0001-	FUSE LM50C, 5.0 A GRID 5 MM	consumable parts
552	A60L-0001-0359	FUSE MINI FOR AMPLIFIER 5.0 A	consumable parts
553	A60L-0001-0396/8.0A	FUSE	consumable parts
554	A61L-0001-0074	CRT COLOR 14" FS-10/11	consumable parts
555	A61L-0001-0092	CRT MONOCHROME 9" YELLOW	consumable parts
556	A61L-0001-0093	CRT MONOCHROME 9" FS-0, FS-	consumable parts
557	A61L-0001-0094	CRT COLOR 14" FS-15A	consumable parts
558	A61L-0001-0094/A	CRT 14" COLOR FS-15A	consumable parts
559	A61L-0001-0096	CRT COLOR 14" FS-16B/18B	consumable parts
560	A61L-0001-0142	LCD MONOCHROME 7.2" i	consumable parts
561	A61L-0001-0142/BLS	BACKLIGHT FOR 7,2 " LCD	consumable parts
562	A61L-0001-0154	LCD MONOCHROME 9.5" i	consumable parts
563	A61L-0001-0168	LCD COLOR 10.4" i SERIES	consumable parts
564	A61L-0001-0168/BL	BACKLIGHT FOR LCD 10.4"	consumable parts
565	A61L-0001-0168/BLN	BACKLIGHT FOR LCD 10.4" (NEC	consumable parts
566	A61L-0001-0168/BLS	BACKLIGHT FOR LCD 10.4"	consumable parts
567	A620-0002-T083	KNOB FOR ROTARY SWITCH FS-	consumable parts
568	A63L-0001-0133/23A	CONNECTOR HONDA MR-20RMH	consumable parts
569	A63L-0001-0133/24A	CONNECTOR HONDA MR-20RFH	consumable parts
570	A63L-0001-0134/01	CONNECTOR HONDA 50 PIN	consumable parts
571	A63L-0001-0134/02	CONNECTOR HONDA 20 PIN	consumable parts
572	A63L-0001-0134/101	CONNECTOR,50PINS	consumable parts
573	A63L-0001-0134/11	CONNECTOR 50 PIN MALE	consumable parts
574	A63L-0001-0134/12	CONNECTOR HONDA 20 PIN	consumable parts
575	A63L-0001-0135/F112	CONTACT DOUBLE PIN GOLD	consumable parts
576	A63L-0001-0219/12-	PLUG HOUSING	consumable parts
577	A63L-0001-	PIN	consumable parts
578	A63L-0001-	PIN	consumable parts
579	A63L-0001-0226	PIN FOR CONNECTOR (SILVER)	consumable parts
580	A63L-0001-	HONDA CONNECTOR + CASE 20	consumable parts
581	A63L-0001-	HIROSE CONNECTOR + CASE, 20	consumable parts

582	A63L-0001-0399/20FP	HONDA CONNECTOR 15 PIN FOR	consumable parts
583	A63L-0001-	HONDA CONNECTOR + CASE 15	consumable parts
584	A63L-0001-	HONDA CONNECTOR + HOUSING	consumable parts
585	A63L-0001-	CONNECTOR, SOLDER, CABLE	consumable parts
586	A63L-0001-0406/SY	TERMINAL BLOCK FOR I/O	consumable parts
587	A63L-0001-0428/CT	CONNECTOR FOR MAIN POWER	consumable parts
588	A63L-0001-0456/AS	CONTACT GOLD PLATED FOR	consumable parts
589	A63L-0001-0456/ASL	CONTACT GOLD PLATED FOR	consumable parts
590	A63L-0001-0456/ASM-	CONTACT	consumable parts
591	A63L-0001-	CONTACT GOLD PLATED	consumable parts
592	A63L-0001-0456/BSL	CONTACT TIN PLATED FOR WIRE	consumable parts
593	A63L-0001-	CONNECTOR HOUSING 2 PIN	consumable parts
594	A63L-0001-	CONNECTOR FOR POWER	consumable parts
595	A63L-0001-0472/S20	CONNECTOR	consumable parts
596	A63L-0001-0508/201S	CONNECTOR	consumable parts
597	A63L-0001-	PLUG CONNECTOR POWER LINE	consumable parts
598	A63L-0001-	PLUG CONNECTOR ALPHA SER.	consumable parts
599	A63L-0001-0829/P1	CONNECTOR	consumable parts
600	A63L-0001-0848/CB	CONNECTOR	consumable parts
601	A63L-0001-0875/EC	CONNECTOR	consumable parts
602	A63L-0001-0875/SC	CONNECTOR	consumable parts
603	A63L-0001-0923/CA	CONNECTOR STRAIGHT	consumable parts
604	A63L-0001-0923/CB	CONNECTOR ELBOW FOR	consumable parts
605	A63L-0001-0931/K2	SET OF 10 GASKETS, RUBBER	consumable parts
606	A65L-0001-0630/SD	SHORT BAR	consumable parts
607	A660-2003-	CABLE	consumable parts
608	A660-2004-	CABLE	consumable parts
609	A660-2004-	CABLE	consumable parts
610	A660-2004-	CABLE	consumable parts
611	A660-2005-	CABLE	consumable parts
612	A660-2040-	CABLE	consumable parts
613	A660-2040-T189/0100	EXTENSION CABLE A FOR I/O	consumable parts
614	A660-8011-	BATTERY CABLE	consumable parts
615	A66L-2003-	SIGNAL CABLE FOR DPL/MDI, 2M	consumable parts
616	A66L-2050-0010/A	CABLE FOR MEMORY CARD i	consumable parts
617	A66L-2050-0010/B	CABLE FOR MEMORY CARD	consumable parts
618	A66L-2050-0025/A	FLAT CABLE FOR PCMCIA SLOT	consumable parts
619	A66L-2050-0025/B	FLAT CABLE FOR PCMCIA SLOT	consumable parts
620	A66L-6001-	OPTICAL FIBER CABLE 0.15M,	consumable parts
621	A66L-6001-	OPTICAL FIBER CABLE 1M,	consumable parts
622	A66L-6001-	OPTICAL FIBER CABLE 2M,	consumable parts
623	A66L-6001-	OPTICAL FIBER CABLE 0.3M,	consumable parts
624	A66L-6001-	OPTICAL FIBER CABLE 3M,	consumable parts
625	A66L-6001-	OPTICAL FIBER CABLE 0.5M,	consumable parts
626	A66L-6001-	OPTICAL FIBER CABLE 10M,	consumable parts
627	A66L-6001-	OPTICAL FIBER CABLE 15M,	consumable parts
628	A66L-6001-	OPTICAL FIBER CABLE 1M,	consumable parts
629	A66L-6001-	OPTICAL FIBER CABLE 20M,	consumable parts
630	A66L-6001-	OPTICAL FIBER CABLE 2M,	consumable parts
631	A66L-6001-	OPTICAL FIBER CABLE 30M,	consumable parts
632	A66L-6001-	OPTICAL FIBER CABLE 3M,	consumable parts

633	A66L-6001-	OPTICAL FIBER CABLE 5M,	consumable parts
634	A66L-6001-	OPTICAL FIBER CABLE 7M,	consumable parts
635	A6-N1-8S	NUT M8	consumable parts
636	A6-SSA-4X8S	SCREW	consumable parts
637	A6-SW2NA-3X6S	SCREW M3X6	consumable parts
638	A6-SW2NA-3X8S	SCREW M3X8	consumable parts
639	A6-SW2NA-5X16S	SCREW	consumable parts
640	A6-WM-8S	WASHER FOR M8 SCREW	consumable parts
641	A860-0106-X015	KEY TOP RED	consumable parts
642	A860-0106-X016	KEY TOP GREEN	consumable parts
643	A860-0203-T001	MANUAL PULSE GENERATOR	consumable parts
644	A860-0203-T014	MANUAL PULSE GENERATOR G	consumable parts
645	A860-0301-T002	INCREMENTAL PULSE CODER	consumable parts
646	A860-0309-T302	ALPHA POSITION CODER 1024	consumable parts
647	A860-0309-T352	ALPHA POSITION CODER S	consumable parts
648	A860-0315-T102	PULSE CODER 2500P	consumable parts
649	A860-0319-T002	HIGH-RESOLUTION POSITION	consumable parts
650	A860-0333-T801	HI-RESOLUTION SERIAL OUTPUT	consumable parts
651	A860-0346-T041	SENSOR W/COVER	consumable parts
652	A860-0346-T141	PULSE CODER ABS	consumable parts
653	A860-0360-T001	PULSE CODER ALPHA	consumable parts
654	A860-0360-T021	PULSE CODER	consumable parts
655	A860-0360-T211	PULSE CODER	consumable parts
656	A860-0360-V501	PULSE CODER ALPHA	consumable parts
657	A860-0360-V511	PULSE CODER	consumable parts
658	A860-0360-V906	CABLE ASSEMBLY	consumable parts
659	A860-0365-T001	PULSE CODER	consumable parts
660	A860-0365-T101	PULSE CODER	consumable parts
661	A860-0365-V501	ALPHA PULSE CODER	consumable parts
662	A860-0372-T001	PULSE CODER ALPHA A1000S	consumable parts
663	A860-0390-X001	SENSOR GEAR	consumable parts
664	A860-0390-X011	Z PHASE RING	consumable parts
665	A860-0392-T011	BZ SENSOR 256 TEETH 128	consumable parts
666	A860-0392-V160	BUILT-IN SENSOR	consumable parts
667	A860-0392-V166	BUILT-IN SENSOR	consumable parts
668	A860-2000-T301	a1000i ABSOLUTE PULSE CODER	consumable parts
669	A860-2000-T321	PULSE CODER	consumable parts
670	A860-2001-T301	A16000i PULSE CODER WITH	consumable parts
671	A860-2001-T321	A16000i PULSE CODER	consumable parts
672	A860-2002-T321	A1000i ABSOLUTE PULSE CODER	consumable parts
673	A860-2005-T301	I1000i PULSE CODER	consumable parts
674	A860-2020-T301	PULSECODER	consumable parts
675	A860-2100-V001	Mi SENSOR	consumable parts
676	A860-2110-V001	MZi SENSOR	consumable parts
677	A860-2120-T401	iBZ SENSOR 256 TEETH	consumable parts
678	A860-2120-T511	iBZ SENSOR 384 TEETH	consumable parts
679	A860-2120-V003	SENSOR ASSEMBLY	consumable parts
680	A860-2150-V001	BZi SENSOR 512 TEETH	consumable parts
681	A86L-0001-0125	KEY BOARD FOR CRT/MDI	consumable parts
682	A86L-0001-0126	KEY BOARD FOR OPERATORS	consumable parts
683	A86L-0001-0127	KEYBOARD FOR OT/OP	consumable parts

684	A86L-0001-0237	54 KEYS KEYBOARD OT/OM, PCB	consumable parts
685	A86L-0001-0252/TBS	MDI (STANDARD)SYMBOLIC KEY	consumable parts
686	A86L-0001-0261	SOFT KEYS 10.4" LCD i - SERIES	consumable parts
687	A86L-0001-0287	SOFTKEY	consumable parts
688	A86L-0001-0290/A	KEYBOARD SOFTKEY	consumable parts
689	A86L-0001-0298	KEYBOARD	consumable parts
690	A86L-0001-0301	SOFTKEY	consumable parts
691	A87L-0001-0180	FLASH MEMORY CARD 4MB	consumable parts
692	A87L-0001-	HDD 40 GB	consumable parts
693	A90L-0001-0049/V	FAN MOTOR	consumable parts
694	A90L-0001-0219/A	FAN MOTOR	consumable parts
695	A90L-0001-0219/A-L	FAN MOTOR	consumable parts
696	A90L-0001-0316/R	FAN MOTOR	consumable parts
697	A90L-0001-0317/R	FAN MOTOR	consumable parts
698	A90L-0001-0335/B	FAN MOTOR FOR ALPHA UNIT	consumable parts
699	A90L-0001-0335/B-L	FAN MOTOR FOR ALPHA UNIT	consumable parts
700	A90L-0001-0378	FAN MOTOR 2.4W	consumable parts
701	A90L-0001-0385/A	FAN MOTOR FOR ALPHA UNIT	consumable parts
702	A90L-0001-0385/B	FAN MOTOR FOR ALPHA UNIT	consumable parts
703	A90L-0001-0385/C	FAN MOTOR	consumable parts
704	A90L-0001-0385/T	FAN	consumable parts
705	A90L-0001-0396/T	COOLING FAN FOR MATCHING	consumable parts
706	A90L-0001-0396/TPC	COOLING FAN	consumable parts
707	A90L-0001-0396-L	FAN MOTOR	consumable parts
708	A90L-0001-0422	FAN MOTOR FOR ALPHA UNIT	consumable parts
709	A90L-0001-0423/105	FAN MOTOR FOR ALPHA UNIT +	consumable parts
710	A90L-0001-0423/105S	FAN MOTOR FOR ALPHA UNIT 60	consumable parts
711	A90L-0001-0423/300	FAN MOTOR	consumable parts
712	A90L-0001-0425*LR	VACUUM PUMP	consumable parts
713	A90L-0001-0441	FAN MOTOR FOR i SERIES 24V	consumable parts
714	A90L-0001-0441/100	FAN MOTOR	consumable parts
715	A90L-0001-0441/39	FAN MOTOR	consumable parts
716	A90L-0001-0441/400	FAN MOTOR	consumable parts
717	A90L-0001-0441/650	FAN MOTOR	consumable parts
718	A90L-0001-0442/R	FAN MOTOR	consumable parts
719	A90L-0001-0443/R	FAN KIT FOR EXHAUST FAN	consumable parts
720	A90L-0001-0443/RL	FAN KIT FOR EXHAUST FAN	consumable parts
721	A90L-0001-0444/R	FAN MOTOR	consumable parts
722	A90L-0001-0444/RS	FAN KIT FOR EXHAUST FAN	consumable parts
723	A90L-0001-0455	FAN FOR SHUTTER	consumable parts
724	A90L-0001-0487	FAN	consumable parts
725	A90L-0001-0488	FAN MOTOR	consumable parts
726	A90L-0001-0491/F	FAN MOTOR	consumable parts
727	A90L-0001-0506/105	FAN MOTOR	consumable parts
728	A90L-0001-0506/135	FAN MOTOR	consumable parts
729	A90L-0001-0506/280	FAN FOR REAR COVER (BIG)	consumable parts
730	A90L-0001-0507/A	FAN	consumable parts
731	A90L-0001-0507/B	FAN	consumable parts
732	A90L-0001-0508	FAN	consumable parts
733	A90L-0001-0509	FAN	consumable parts
734	A90L-0001-0510	FAN	consumable parts

735	A90L-0001-0511	FAN	consumable parts
736	A90L-0001-0515/R	FAN	consumable parts
737	A90L-0001-0519/R	FAN	consumable parts
738	A90L-0001-0519/RL	FAN	consumable parts
739	A90L-0001-0528/70	FAN	consumable parts
740	A90L-0001-0538/R	FAN	consumable parts
741	A90L-0001-0539/F	FAN	consumable parts
742	A90L-0001-0541/F	FAN MOTOR	consumable parts
743	A90L-0001-0541/R	FAN MOTOR	consumable parts
744	A90L-0001-0548/R	FAN	consumable parts
745	A90L-0001-0551/A	FAN FOR BASIC UNIT, 40 mm	consumable parts
746	A90L-0001-0552/A	FAN FOR BASIC UNIT, 60 mm	consumable parts
747	A91L-0001-0219	HOUR METER	consumable parts
748	A97L-0200-0649/2-2-S	FILTER (QTY1)	consumable parts
749	A97L-0200-0666/8-75-	BOLT	consumable parts
750	A97L-0201-0211	CARTRIDGE FILTER (QTY1)	consumable parts
751	A980-0005-0283	PACKING (SPONGE)	consumable parts
752	A98L-0001-0481/M	KEY SHEET FOR CRT/MDI 9" FS-	consumable parts
753	A98L-0001-0482/M	KEY SHEET	consumable parts
754	A98L-0001-0482/T	KEY SHEET	consumable parts
755	A98L-0001-0518/M02	KEY SHEET FOR CRT/MDI 9" FS-0	consumable parts
756	A98L-0001-0518/MB	KEY SHEET FOR SMALL-T	consumable parts
757	A98L-0001-0518/MR	KEY SHEET FOR 9" SMALL M	consumable parts
758	A98L-0001-0518/T	KEY SHEET FOR CRT/MDI 9" FS-0	consumable parts
759	A98L-0001-0518/TB	KEY SHEET FOR CRT/MDI 9" FS-	consumable parts
760	A98L-0001-0518/TR	KEY SHEET FOR SMALL-T	consumable parts
761	A98L-0001-0519	KEY SHEET FOR SOFTKEY 9" FS-	consumable parts
762	A98L-0001-0524/A	KEY SHEET FOR OPERATORS	consumable parts
763	A98L-0001-0524/B	KEY SHEET FOR OPERATORS	consumable parts
764	A98L-0001-0524/BI	KEY SHEET FOR OPERATORS	consumable parts
765	A98L-0001-0524/BK	KEY SHEET FOR OPERATORS	consumable parts
766	A98L-0001-0524/BL	KEY SHEET FOR OPERATORS	consumable parts
767	A98L-0001-0524/DP	KEYSHEET TORNOS	consumable parts
768	A98L-0001-0524/F	KEY SHEET FOR OPERATORS	consumable parts
769	A98L-0001-0524/J	KEY SHEET FOR OPERATORS	consumable parts
770	A98L-0001-0524/K	KEY SHEET FOR OPERATORS	consumable parts
771	A98L-0001-0524/M	KEY SHEET	consumable parts
772	A98L-0001-0524/MB	KEY SHEET FOR OPERATORS	consumable parts
773	A98L-0001-0524/MBR	KEY SHEET	consumable parts
774	A98L-0001-0524/TB	KEY SHEET FOR OPERATORS	consumable parts
775	A98L-0001-0524/TBR	KEY SHEET	consumable parts
776	A98L-0001-0567/P02	MDI KEY SHEET	consumable parts
777	A98L-0001-0568/M02	KEY SHEET FOR CRT/MDI 9 FS-	consumable parts
778	A98L-0001-0568/MR	KEY SHEET	consumable parts
779	A98L-0001-0568/T	KEY SHEET FOR OT FULL KEY	consumable parts
780	A98L-0001-0568/TB	KEY SHEET FOR FULL T SYMBOL	consumable parts
781	A98L-0001-0568/TR	KEY SHEET FOR FULL T ENG	consumable parts
782	A98L-0001-0615/B	FOLDING MIRROR	consumable parts
783	A98L-0001-0616/C	ZERO-DEGREE SHIFT MIRROR	consumable parts
784	A98L-0001-0617/C	CIRCULAR POLARIZATION	consumable parts
785	A98L-0001-0619/1025	O-RING	consumable parts

786	A98L-0001-0619/2030	O-RING	consumable parts
787	A98L-0001-0628/A	KEY SHEET FOR CRT/MDI 14" FS-	consumable parts
788	A98L-0001-0628/E	SURFACE SHEET(HORZ.10TF)	consumable parts
789	A98L-0001-0629	KEY SHEET OT/M SOFT KEY	consumable parts
790	A98L-0001-0630	KEY SHEET FOR SOFTKEY 14"	consumable parts
791	A98L-0001-0633/M	KEY SHEET FOR OPERATORS	consumable parts
792	A98L-0001-0633/MB	KEY SHEET FULL OP.PANEL 0-M	consumable parts
793	A98L-0001-0633/T	KEY SHEET FOR OPERATORS	consumable parts
794	A98L-0001-0633/TB	KEY SHEET FULL OP.PANEL 0-T	consumable parts
795	A98L-0001-0633/TBR	KEY SHEET	consumable parts
796	A98L-0001-0634/B	KEY SHEET FOR FS-0M	consumable parts
797	A98L-0001-0646/A	KEYSHEET FOR CRT/MDI 14" FS-	consumable parts
798	A98L-0001-0646/B	KEYSHEET FOR CRT/MDI 14" FS-	consumable parts
799	A98L-0001-0646/C	KEYSHEET FOR CRT/MDI 14" FS-	consumable parts
800	A98L-0001-0647/M	KEYSHEET FOR CRT/MDI 9" FS-	consumable parts
801	A98L-0001-0756	OUTPUT MIRROR	consumable parts
802	A98L-0001-0757/B	REAR MIRROR	consumable parts
803	A98L-0001-0866/B	FOLDING MIRROR	consumable parts
804	A98L-0003-	O-RING	consumable parts
805	A98L-0003-0004/P26S	O-RING	consumable parts
806	A98L-0003-	O-RING DISCHARGE TUBE	consumable parts
807	A98L-0003-0004/P58	O-RING	consumable parts
808	A98L-0003-0015/D	OUTPUT MIRROR	consumable parts
809	A98L-0003-0016/C	REAR MIRROR	consumable parts
810	A98L-0003-0027	OUTPUT COUPLER	consumable parts
811	A98L-0003-0036	OUTPUT COUPLER	consumable parts
812	A98L-0003-0037	REAR MIRROR	consumable parts
813	A98L-0004-0096	BATTERY CASE-F3	consumable parts
814	A98L-0004-0149	BATTERY CASE	consumable parts
815	A98L-0004-	OIL SEAL	consumable parts
816	A98L-0004-	OIL SEAL	consumable parts
817	A98L-0004-0348/2-N	NYLON GAS FERRULE, 1/4 INCH	consumable parts
818	A98L-0004-0348/3-N	NYLON GAS FERRULE, 3/4 INCH	consumable parts
819	A98L-0004-0348/4-N	NYLON GAS FERRULE, 1/2 INCH	consumable parts
820	A98L-0004-0652/GS	KNOB FOR ROTARY SWITCH	consumable parts
821	A98L-0004-	O-RING	consumable parts
822	A98L-0004-0799/A	RUBBER VR. ISOLATOR	consumable parts
823	A98L-0004-0799/B	RUBBER VR. ISOLATOR	consumable parts
824	A98L-0004-0801/4-15	BOLT FOR TRIGGER ELECTRODE	consumable parts
825	A98L-0005-0032/B	KEY SHEET	consumable parts
826	A98L-0005-0032/D	COVER SHEET FOR CTRL OT-F	consumable parts
827	A98L-0005-0032/F	KEY SHEET	consumable parts
828	A98L-0005-0032/Q	KEY SHEET	consumable parts
829	A98L-0005-0181	BLANK KEY TOP (QTY 1)	consumable parts
830	A98L-0005-0187	TRIGGER ELECTRODE	consumable parts
831	A98L-0005-0252	SOFT KEYSHEET	consumable parts
832	A98L-0005-0255	KEYSHEET	consumable parts
833	A98L-0031-0005	BATTERY MONOBLOCK QTY 1	consumable parts
834	A98L-0031-0006	BATTERY LITHIUM 3V-POWER	consumable parts
835	A98L-0031-0011	BATTERY LITHIUM 6V FOR PM	consumable parts
836	A98L-0031-0011/L	BATTERY LITHIUM 6V FOR BETA	consumable parts

837	A98L-0031-0012	BATTERY LITHIUM 3V CNC	consumable parts
838	A98L-0031-0017	BATTERY FOR INTELL.	consumable parts
839	A98L-0031-0025	BATTERY FOR ABSOLUTE PULSE	consumable parts
840	A98L-0031-0026	LITHIUM BATTERY FOR	consumable parts
841	A990-0163-0023	PROTECTION SHEET FOR 10.4"	consumable parts
842	A990-0163-0026	PROTECTION SHEET FOR 7.2"	consumable parts
843	A990-0165-0002	SHEET FOR TOUCH PANEL 12,1"	consumable parts
844	A990-0165-0004	PROTECTION SHEET FOR	consumable parts
845	A990-0165-0005	PROTECTION SHEET FOR	consumable parts
846	A990-0165-0011	PROTECTION SHEET	consumable parts
847	A99L-0035-0001	CABLE CLAMP METAL 14MM FOR	consumable parts
848	A99L-0128-0002/14	LABEL	consumable parts
849	A99L-0164-0001	PEN FOR TOUCH PANEL LCD i	consumable parts
850	B-62760IT	PARAMETER MANUAL 16/18-C	Manuals
851	B-63007EN	HANDBOOK ENGLISH 16i/160i,	Manuals
852	B-63524CZ	OPERATOR'S MANUAL CZECH	Manuals
853	B-63524IT	OPERATOR'S MANUAL ITALIAN	Manuals
854	B-63524PL	OPERATOR'S MANUAL POLISH	Manuals
855	B-63524RU	OPERATOR'S MANUAL RUSSIAN	Manuals
856	B-63524SW	OPERATOR'S MANUAL SWEDISH	Manuals
857	B-63525CZ	MAINTENANCE MANUAL CZECH i	Manuals
858	B-63525EN	MAINTENANCE MANUAL	Manuals
859	B-63525FR	MAINTENANCE MANUAL FRENCH	Manuals
860	B-63525GE	MAINTENANCE MANUAL	Manuals
861	B-63525IT	MAINTENANCE MANUAL ITALIAN	Manuals
862	B-63525RU	MAINTENANCE MANUAL	Manuals
863	B-63527EN	OPERATION & MAINTENANCE	Manuals
864	B-63530IT	PARAMETER MANUAL ITALIAN	Manuals
865	B-63534CZ	OPERATOR'S MANUAL CZECH	Manuals
866	B-63534GE	OPERATOR'S MANUAL GERMAN	Manuals
867	B-63534PL	OPERATOR'S MANUAL POLISH	Manuals
868	B-63534SW	OPERATOR'S MANUAL SWEDISH	Manuals
869	B-63604CZ	OPERATOR'S MANUAL CZECH	Manuals
870	B-63604SW	OPERATOR'S MANUAL SWEDISH	Manuals
871	B-63614CZ	OPERATOR'S MANUAL CZECH	Manuals
872	B-63834CZ	OPERATOR'S MANUAL, CZECH	Manuals
873	B-63874CZ	OPERATOR'S MANUAL, CZECH	Manuals
874	B-63874DU	OPERATOR'S MANUAL, DUTCH	Manuals
875	B-63874FI	OPERATOR'S MANUAL, FINNISH	Manuals
876	B-63874GE	OPERATOR'S MANUAL, GERMAN	Manuals
877	B-63874SW	OPERATOR'S MANUAL, SWEDISH	Manuals
878	B-63944CZ	30i/300i/300is CNC, CZECH	Manuals
879	B-63944EN	30i/300i/300is CNC, ENGLISH	Manuals
880	B-63944EN-1	USERS MANUAL (TURNING)	Manuals
881	B-63944FR	USERS MANUAL	Manuals
882	B-63944GE-1	USERS MANUAL (TURNING)	Manuals
883	B-63944GE-2	USERS MANUAL (MILLING)	Manuals
884	B-63944SW-1	USERS MANUAL (TURNING)	Manuals
885	B-63945EN	SERIES 30i/300i/300is CNC	Manuals
886	B-63945FR	MAINTENANCE MANUAL,	Manuals
887	B-63945GE	MAINTENANCE MANUAL,	Manuals

888	B-63947EN	SERIES 30i/300i/300is CNC OPER.	Manuals
889	B-64114CZ	OPERATOR MANUAL, 0i-TC Czech	Manuals
890	B-64114PL	OPERATOR MANUAL, 0i-TC	Manuals
891	B-64114SW	0i-TC, SWEDISH OPERATOR	Manuals
892	B-64115CZ	MAINTENANCE MANUAL, CZECH	Manuals
893	B-64115IT	MAINTENANCE MANUAL, Italian 0i	Manuals
894	B-64115PL	MAINTENANCE MANUAL, POLISH	Manuals
895	B-64124CZ	OPERATOR MANUAL, CZECH 0i-	Manuals
896	B-64124IT	OPERATOR MANUAL, ITALIAN 0i-	Manuals
897	GFME-0004-ML	quaeroCNC FOR ENDUSER	Manuals
898	GFTE-589-CZ	TRAINING BOOK MANUAL GUIDE	Manuals
899	GFTE-589-EN	TRAINING BOOK MANUAL GUIDE	Manuals
900	GFTE-589-FR	TRAINING BOOK MANUAL GUIDE	Manuals
901	GFTE-589-GE	TRAINING BOOK MANUAL GUIDE	Manuals
902	GFTE-598-CZ	TRAINING BOOK MG, MILLING	Manuals
903	GFTE-598-EN	TRAINING BOOK MG, MILLING	Manuals
904	GFTE-598-FR	TRAINING BOOK MG, MILLING	Manuals
905	GFTE-598-GE	TRAINING BOOK MG, MILLING	Manuals
906	JB-OR4D-G45	O-RING	Laser Parts
907	JB-OR4D-G55	O-RING	Laser Parts
908	JB-OR4D-P10	O-RING TRIGGER ELECTRODE	Laser Parts
909	JB-OR4D-P24	O-RING	Laser Parts
910	JB-OR4D-P28	O-RING	Laser Parts
911	JB-OR4D-P31	O-RING	Laser Parts
912	JB-OR4D-P34	O-RING	Laser Parts
913	JB-OR4D-P38	O-RING	Laser Parts
914	JB-OR4D-P41	O-RING	Laser Parts
915	LX02B-0100-K004/A	SIGNAL CONNECTOR	consumable parts
916	LX02B-0100-K846	LED FOR OPERATOR PANEL LED	consumable parts
917	LX02B-0121-K800	LIGHT BULB FOR OPERATOR	consumable parts
918	LX02B-0124-K002	VACUUM GREASE APIEZON L 50	Laser Parts
919	LX02B-0124-K003	LENS CLEANING TIS.	Laser Parts
920	LX02B-0124-K006	ACRYLIC BLOCK 250X50X30 MM	Laser Parts
921	LX02B-0126-K001	MEMORY CARD ADAPTOR	consumable parts
922	LX63L-0001-	CONNECTOR, SOLDER TYPE	cable
923	LX63L-0001-	CONNECTOR, SOLDER TYPE	cable
924	LX660-2007-	I/O LINK SIGNAL CABLE PVC	cable
925	LX660-2007-	I/O LINK SIGNAL CABLE PVC	cable
926	LX660-2007-	I/O LINK SIGNAL CABLE	cable
927	LX660-2077-	SERVO SIGNAL CABLE ALPHA i	cable
928	LX660-2077-	SERVO SIGNAL CABLE ALPHA i	cable
929	LX660-2077-	SERVO SIGNAL CABLE ALPHA i	cable
930	LX660-2077-	SIGNAL CABLE SERVO	cable
931	LX660-4024-	SIGNAL CABLE RS232C	cable
932	LX660-4024-	SIGNAL CABLE HANDY MACHINE	cable
933	LX660-4077-	SERVO SIGNAL CABLE	cable
934	LX660-4077-	SERVO SIGNAL CABLE	cable
935	LX660-4077-	SPINDLE MOTOR THERMOSTAT	cable
936	LX660-4077-	SPINDLE MOTOR THERMOSTAT	cable
937	LX660-4077-	SPINDLE SIGNAL CABLE	cable
938	LX660-4077-	SERVO SIGNAL CABLE	cable

939	LX660-4077-	SERVO SIGNAL CABLE	cable
940	LX660-4077-	SERVO SIGNAL CABLE	cable
941	LX660-4077-	SERVO SIGNAL CABLE ELBOW	cable
942	LX660-4077-	SERVO SIGNAL CABLE ELBOW	cable
943	LX660-4077-	SERVO SIGNAL CABLE ELBOW	cable
944	LX660-4077-	SERVO SIGNAL CABLE	cable
945	LX660-4077-	SERVO SIGNAL CABLE	cable
946	LX660-4077-	SERVO SIGNAL CABLE	cable
947	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
948	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
949	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
950	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
951	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
952	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
953	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
954	LX660-4077-	SERVO SIGNAL CABLE ALPHA I	cable
955	LX660-4077-	SPINDLE SIGNAL CABLE ALPHA I	cable
956	LX660-8000-	SERVO FEEDBACK CABLE	cable
957	LX660-8007-	I/O CONNECTION CABLE	cable
958	LX660-8015-	SERVO MOTOR FEED BACK	cable
959	LX660-8024-	SIGNAL CABLE MOP-CNC	cable
960	LX660-8050-	POWER CABLE SERVO MOTOR	cable
961	LX660-8077-	SERVO POWER CABLE	cable
962	LX660-8077-	SERVO POWER CABLE	cable
963	LX660-8077-	SERVO POWER CABLE	cable
964	LX660-8077-	SPINDLE/SERVO POWER CABLE	cable
965	LX660-8077-	SERVO POWER CABLE ALPHA I	cable
966	LX660-8077-	SERVO POWER CABLE ALPHA I	cable
967	LX660-8077-	SERVO POWER CABLE ALPHA I	cable
968	LX660-8077-	SERVO POWER CABLE ALPHA I	cable
969	LX660-8077-	SERVO POWER CABLE ALPHA I	cable
970	LX660-8077-	SERVO POWER CABLE ALPHA I	cable
971	LX660-8077-	SERVO/SPINDLE MOT POWER	cable
972	LX660-8077-	SERVO POWER CABLE ALPHA i	cable
973	LX660-8077-	SERVO POWER CABLE ALPHA i	cable
974	LX660-8077-	SERVO POWER CABLE ALPHA i	cable
975	LX98L-0001-0911	VACUUM PUMP EXH. FILT (QTY1)	Laser Parts
976	LX98L-0040-	EXHAUST PUMP OIL SERIES I	Laser Parts
977	MS3057-10A	CLAMP	consumable parts
978	MS3057-12A	CLAMP	consumable parts
979	MS3057-4A	CLAMP	consumable parts
980	MS3102A10SL-3P	BRAKE CONNECTOR 3 PINS	consumable parts
981	MS3102A18-10P	CONNECTOR	consumable parts
982	MS3102A20-29PW	CONNECTOR MOTOR 5M F	consumable parts
983	MS3102A22-22P	CONNECTOR	consumable parts
984	MS3108B10SL-3S	CONNECTOR	consumable parts
985	MS3108B18-10S	CONNECTOR	consumable parts
986	MS3108B20-29S	CONNECTOR L	consumable parts
987	MS3108B20-29SW	FEEDBACK CONNECTOR	consumable parts
988	MS3108B22-14S	CONNECTOR	consumable parts
989	MS3108B22-22S	CONNECTOR	consumable parts

990	MS3108B24-10S	CONNECTOR	consumable parts
991	P413/SFAB250/402A	FUSE P413, 1.3 A ALARM FUSE	consumable parts
992	P430/SFAB250/402A	FUSE P430, 3.0 A ALARM FUSE	consumable parts
993	P450/SFAB250/402A	FUSE P450, 5.0 A ALARM FUSE	consumable parts

Confirmed By HK Affinity Product Department in 2010-7-26