


MAGNASONIC

User Manual

Mini Fridge

MF50

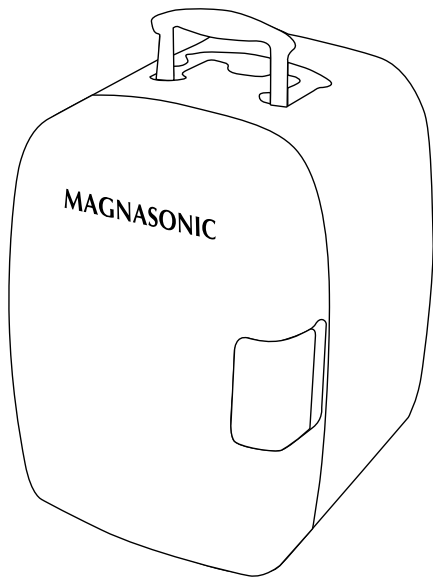

Thank you for your purchase of this Magnasonic product.

Please read this user manual carefully before using
product to ensure proper use.

Keep this manual in a safe place for future reference.

magnasonic.com/support

TABLE OF CONTENTS

Product.....	3
Application.....	3
Work Performance.....	3
Operation Guide.....	4
When Car Power is Used	4
When the Household Power is Used	4
Warning Notice.....	5
Magnasonic® Warranty.....	9

PRODUCT

This cooler and warmer is portable and lightweight. It's thermoelectric technology allows for the dual function of cooling and warming without the use of a compressor or cryogenic.

- Dimensions: 12.0 x 8.0 x 9.5 inches
- Volume Capacity: 5.0L
- AC/DC Input: 100-240V, 2.0A
- AC/DC Output: 12VDC, 5.0A
- Maximum Cooling: 20°C below ambient temperature
- Maximum Warming: Up to 65°C

APPLICATION

- For picnics and camping trips
- For taxi drivers
- In student's dormitories or dinning halls
- In playgrounds
- In the office or construction sites
- For traveling by cars
- On a yacht or going fishing
- In wagons, trucks, or traveling on buses
- For storage of medicine at a low temperature
- For preservation of fresh milk or warm food
- For a home bar

WORK PERFORMANCE

For optimal cooling, it is recommended to put in pre-chilled foods and drinks. The cooler and warmer is not designed to heat cold food, but to preserve hot foods at a warm temperature.

OPERATION GUIDE

1. First make sure the switch at the back of the appliance is set to OFF. Insert the plug of the power cord into the socket of the unit.
2. Insert the DC plug into the cigarette lighter socket of the car.
3. Cooling: set the switch at the back of the unit to COLD. The green light indicator will be on signaling the unit is in cooling mode
4. Heating: set the switch on the back of the appliance to HOT. The red light indicator will be on signaling the unit is in warming mode.

WHEN CAR POWER IS USED

(DC 12V APPLICATION IS SUBJECT TO THE TYPE OF CAR)

1. The car engine should be on.
2. Plug the DC power cord into the power socket on the appliance.
3. Insert the plug of DC power cord into the socket of the lighter in the car.

WHEN THE HOUSEHOLD POWER IS USED

1. Connect the AC cord to the appliance.
2. Insert the AC power plug into the household socket.
3. Turn the power switch to the AC side.

WARNING NOTICE

For proper operation, please read the statements below carefully before using the appliance. Misuse of the appliance can result in personal injury or damage to the appliance.

1. Ensure the fan does not become stuck and is rotating at all times. If the fan is unable to rotate it could cause overheating.
2. Please ensure the appliance is fully plugged into the socket or wall outlet during use.
3. Keep the appliance away from flammable items and damp areas.
4. Do not disassemble the appliance.
5. Do not switch the function of cool/warm abruptly. Please leave OFF for at least 30 minutes before switching between HOT and COLD.
6. Do not rinse or submerge in water.
7. Please prevent the appliance from being upside down.
8. Do not drop the appliance.
9. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have supervision to ensure that they do not play with the appliance.

MAGNASONIC® WARRANTY

Thank you for choosing Magnasonic® Consumer Electronics Products! Magnasonic gives the following express warranty to the original consumer purchaser or gift recipient for this Magnasonic product, when shipped in its original container and sold or distributed by Magnasonic or by an Authorized Magnasonic Dealer: Magnasonic warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, Magnasonic shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.

Any Magnasonic product tampered with, modified, adjusted or repaired by any party other than Magnasonic or Magnasonic Authorized Service Centres.

Damage caused or repairs required as a result of the use with items not specified or approved by Magnasonic, including but not limited to head cleaning tapes and chemical cleaning agents.

Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands and shelves.

Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.

Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.

Any product received without appropriate model, serial number and CSA /cUL / cULus /cETL /cETLus markings.

Any products used for rental or commercial purposes. Any installation, setup and/or programming charges. Should this Magnasonic product fail to operate during the warranty period, warranty service may be obtained upon delivery of the Magnasonic product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized Magnasonic Service Centre. In-home warranty service may be provided at Magnasonic's discretion on any Magnasonic television with the screen size of 40" or larger. This warranty constitutes the entire express warranty granted by Magnasonic and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of Magnasonic. To the extent the law permits, Magnasonic disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this Magnasonic product or the loss of information. The purchaser will be responsible for any removal, re installation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of Magnasonic Electronics to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

1 YEAR PARTS & LABOUR WARRANTY PERIODS

To obtain the name and address of the nearest Authorized Magnasonic Service Centre or for more information on this warranty

Contact Magnasonic Support by:

Support: magnasonic.com/support

By mail: Magnasonic Customer Service,

4080 Montrose Road,

Niagara Falls, ON

L2H 1J9

Magnasonic is a registered trade-mark of Circus World Displays Limited 2015

Please Read These Instructions Carefully Before Use!

MAGNASONIC

www.magnasonic.com