

RIO

Features & Functions Guide

Delivery

The priority that delivers more



WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and – above all – your satisfaction.

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area – with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or “take a picture” of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader app. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos.

1. If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader app; not all apps are created equal

2. After scanning, you may experience a “connection error” message or a “connecting” message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

One Click Fuel Cap Video



Refer to this page for more information on QR codes.
www.youtube.com/KiaFeatureVideos

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

| | |
|--|------------|
| Smart Key | 31 |
| Fuel Door Release Lever | 33 |
| 6-Way Adjustable Driver's Seat* / Front Seat Headrest Adjustment | 29 |
| Folding Rear Seatback | 30 |
| Windshield Wipers & Washers | 16 |
| Cruise Control* | 17 |
| Normal Maintenance Schedule | Back Cover |
| User Settings – Instrument Cluster | 07 |
| <i>Bluetooth</i> ® Wireless Technology | 18-19 |
| UVO link Activation* / UVO Assistance* | 21 |
| Standard Audio System - Value with UVO link* | 24 |
| Kia Access with UVO link App Download | 23 |
| Kia Access with UVO link App Features Guide. | 23 |
| Android Auto™ / Apple CarPlay® Setup | 20 |

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

www.kia.com
 Consumer Affairs - Roadside Assistance¹¹⁸:
 1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.



| | |
|---|----|
| | 02 |
| Instrument Cluster Overview | 03 |
| Indicators & Warning Lights | 04 |
| Tire Pressure Monitoring System (TPMS) | 05 |
| Fuel Economy | 05 |
| Instant Fuel Consumption Mode | 05 |
| | |
| Trip Mode/Trip Computer | 06 |
| LCD Instrument Cluster Modes | 06 |
| User Settings - Instrument Cluster | 07 |
| Service Interval Mode | 07 |
| | |
| Lane Keeping Assist (LKA)* | 08 |
| Lane Following Assist (LFA)* | 10 |
| Forward Collision-Avoidance Assist (FCA)* | 11 |
| Driver Attention Warning (DAW)* | 12 |
| | |
| Instrument Cluster Control | 13 |
| Electronic Stability Control (ESC) | 13 |
| Hill-Start Assist Control (HAC) | 13 |
| Power Windows, Window Lock & Central Door Lock | 14 |
| Auto Door Lock/Unlock | 14 |
| Power/Heated Outside Mirrors | 14 |
| Engine Start/Stop Button | 14 |

| | |
|--|----|
| Headlights & High Beams | 15 |
| Turn Signals | 15 |
| Windshield Wipers & Washers | 16 |
| Rear Wiper & Washer (5-Door Only)* | 16 |
| Tilt Steering Wheel | 17 |
| Cruise Control* | 17 |
| | |
| <i>Bluetooth</i> ® Wireless Technology | 18 |
| Audio Controls | 19 |
| Android Auto™ / Apple CarPlay® Setup | 20 |
| UVO link Activation* / UVO Assistance* | 21 |
| Standard Audio System* | 22 |
| Kia Access with UVO link App Download | 23 |
| Kia Access with UVO link App Features Guide | 23 |
| Standard Audio System - Value with UVO link* | 24 |
| | |
| Digital Clock | 25 |
| Aux/Multimedia USB Ports, Power Outlets & USB Charger Port* | 25 |
| Automatic Climate Control* | 26 |
| Manual Climate Control | 27 |
| Automatic Gear Shift / Sportmatic® Shifting* | 28 |
| | |
| 6-Way Adjustable Driver's Seat | 29 |
| Front Seat Headrest Adjustment | 29 |
| Rear Occupant Alert (ROA) with Door Monitoring* | 30 |
| Folding Rear Seatback | 30 |

| | |
|---|-------------------|
| Smart Key | 31 |
| Remote Keyless Entry (Folding Key)* | 32 |
| Door Locks / Double-Turn Unlock All | 32 |
| Fuel Cap / Malfunction Indicator | 32 |
| Hood Release Lever and Latch | 33 |
| Fuel Door Release Lever | 33 |
| Trunk Release Lever (4-Door)* | 33 |
| Sunvisor | 33 |
| Map/Room Lamps | 34 |
| Rear View Monitor (RVM)* | 35 |
| Child-Protector Rear Door Locks | 35 |
| Liftgate Release Button (5-Door)* | 35 |
| | |
| Occupant Detection System (ODS) / Passenger Airbag Off Indicator | 36 |
| Seat Belts | 36 |
| | Back Cover |
| | Inside Back Cover |

Instrument Cluster Overview

Tachometer

Turn Signal Indicators

Speedometer

Warning and Indicator Lights

Gear Shift Position Indicator

 
Odometer

Trip Computer

Engine Coolant Temperature Gauge

Fuel Gauge


 Arrow direction indicates the side of the vehicle the fuel door is located

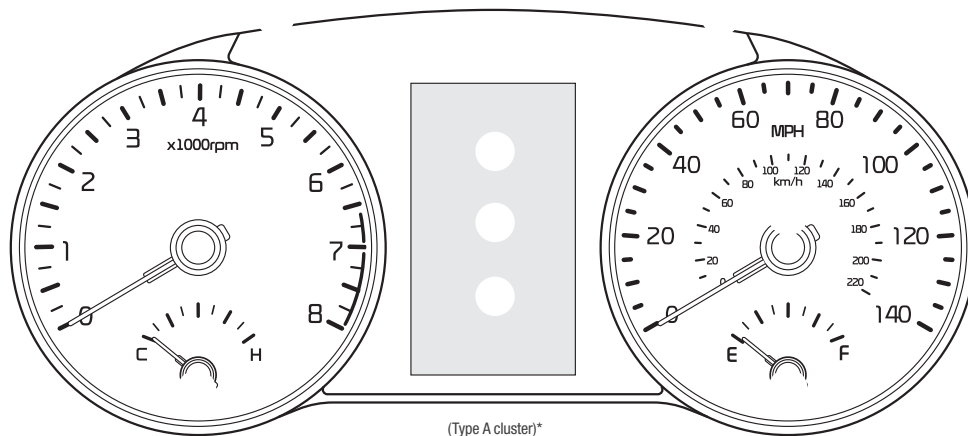

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD warning messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

 Indicators & Warning Lights

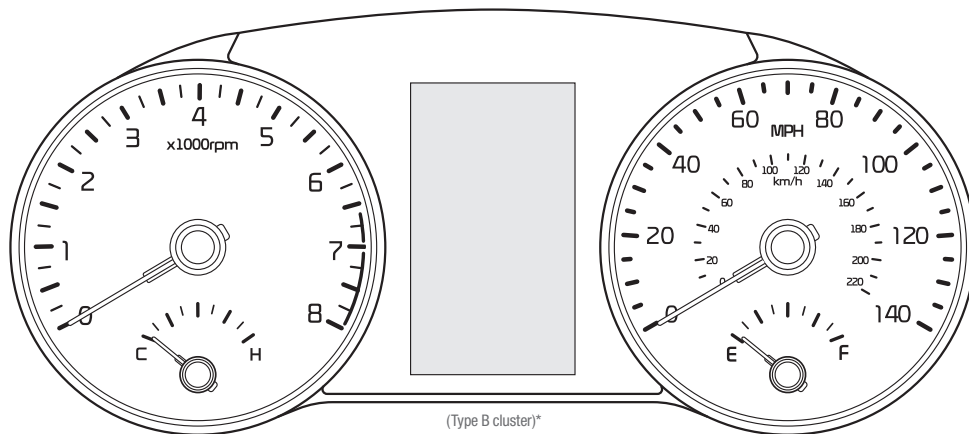

(Type B cluster)*

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. For more information on the instrument cluster, the LCD warning messages and the function of all indicator and warning lights, please refer to the Owner's Manual.

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Immobilizer Indicator*
 Engine Oil Pressure Warning Indicator
 Airbag Warning Indicator
 Malfunction Indicator Lamp (MIL)
 Seat Belt Warning Indicator
 Electric Power Steering (EPS) System Warning Indicator*
 Charging System Warning Indicator
 Light On Indicator
 High Beam Indicator Light
 High Beam Assist Indicator Light

LED Headlamp Warning Light*
 Cruise Control Indicator*
 Cruise SET Indicator*
 Electronic Stability Control (ESC) Indicator*
 Electronic Stability Control (ESC) OFF Indicator*
 Low Fuel Level Warning Indicator
 Low Tire Pressure Indicator
 Engine Coolant Temperature Warning Indicator
 Anti-lock Braking System (ABS) Warning Indicator*

Parking Brake & Brake Fluid Warning Indicator
 Door Ajar Warning Indicator
 Electronic Brake Force Distribution (EBD) System Warning Indicator (Two separate indicators on Instrument Cluster lit at same time)
 Washer Fluid Warning Indicator*
 Master Warning Indicator*
 Icy Road Warning Indicator*
 Trunk (liftgate) Open Warning Light*

Tire Pressure Monitoring System (TPMS)^{†22}

The TPMS indicator functions as both Low Tire Pressure Light and TPMS Malfunction Indicator. The indicator will illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn the Low Tire Pressure Light off. See front driver's door jamb for PSI specification. The Low Tire Pressure Position Indicator* is displayed on the LCD screen in the instrument cluster when the tire(s) is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator will blink for approximately one minute and then illuminate – see dealer for service.

REMINDERS:

- Check the recommended tire pressure label located on the left side of the driver's door jamb, visible when the door is opened
- Consult your dealer for service if the Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate



Type B

Fuel Economy

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 20 minutes, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance, safety and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

Instant Fuel Consumption Mode*

Press the Mode button to cycle to Trip Computer mode. Then scroll up/down to TRIP mode, and scroll to Instant Fuel Economy. The screen displays the calculated fuel consumption during the past few seconds.

REMINDERS:

- Not to be used in calculating or as a reference for AVERAGE fuel economy
- If the vehicle speed exceeds 1 mph (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (----)
- For more information, refer to the Owner's Manual

 
Tire Pressure Monitoring System Video



Fuel Economy Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

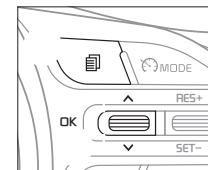

Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving on the display when the Engine Start/Stop button is in the ON position.

 
To cycle through the LCD Instrument Cluster modes, press the Mode button .

To select and enter the Trip Computer mode , press the Move button up/down and then press Set/Reset (OK) to enter. To cycle through and select the different screens (Fuel Economy, Trip A, Trip B), press the Move button up/down again and then press the OK button . When displaying the TRIP A or TRIP B screens, press and hold the OK button to reset the Tripmeter to zero.

Press the OK button to go back to the previous mode/item.


REMINDERS:

- Appearance of Trip Computer / Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range / Distance to Empty) is reset if the battery is disconnected

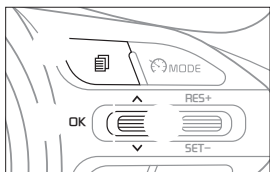

(Type B shown; located on the right side of the Steering Wheel)

 Your vehicle's steering wheel buttons may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

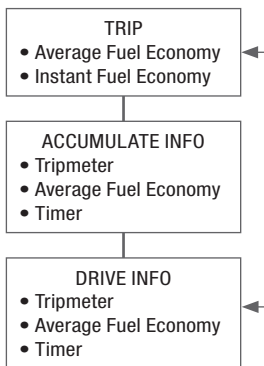

(Type B cluster)

LCD Instrument Cluster Modes

Press the Mode button to cycle through the different LCD Instrument Cluster Modes:

Trip Computer Mode: Displays driving information for tripmeter, fuel economy, drive info, drive mode, etc.

Driving Assist Mode: Displays information on Smart Cruise Control with Stop & Go*, Lane Safety and Driver Attention Warning*. In AWD AUTO MODE, the cluster displays the traction force distribution status of the front and rear wheels. In AWD LOCK MODE, the cluster doesn't display the status

Master Warning Mode: Informs on low tire pressure warnings, Blind-Spot Collision Warning (BCW)* system malfunction and other systems

User Settings Mode: Change settings of the Driver Assistance, doors, lights, sound other features

Information Mode*: Displays the speedometer, engine temperature, TPMS and AWD traction information

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Refer to section 4 in the Owner's Manual for more information.

Instrument Cluster's LCD Display Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

User Settings* (Type B cluster)

To enter the User Settings mode in the LCD Instrument Cluster modes, press the Mode button when the vehicle is at a standstill, gear shift in Park, and with the ignition ON, select User Settings.

You can navigate the selections on the display by toggling the Move button. Select the item by pressing the OK (Set/Reset) button.

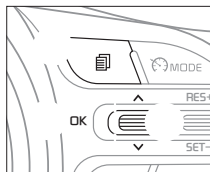

(Type B shown; located on the right side of the Steering Wheel)

User Settings Menu

Driving Assist*:

- Warning Timing*
- Driver Attention Warning*
- Forward Safety*
- Lane Safety*
- Blind-Spot Safety*
- Parking Safety*

Lights:

- One Touch Turn Signal
- Headlight Delay
- High Beam Assist (HBA)

Door*:

- Automatically Lock
- Automatically Unlock
- Two Press Unlock*
- Horn Feed Back*

Language:

- To select the language

Convenience:

- Rear Occupant Alert*
- Wiper/Light Display*
- Icy road warning*

Service Interval:

- Enable Service Interval
- Adjust Interval
- Reset

Theme Selection*:

- Select the theme for the Instrument Cluster

Other Features:

- Fuel Economy Auto Reset
- Speed Unit
- Fuel Economy Unit
- Temperature Unit
- Tire Pressure Unit*

 
Reset:

- Reset menus in User Settings

Service Interval Mode* (Type A cluster)

When service is required, the following screens will be displayed:

- Rotate Tire
- Change Engine Oil

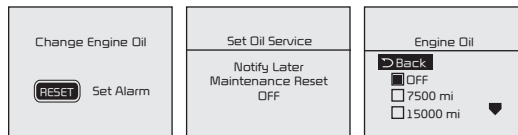

(Type B cluster)

To enter Service Interval Mode, press the Mode button and scroll to User Settings. Then scroll to Service Interval using the Move button.

To reset or deactivate the Maintenance system reminder, press the Reset button for more than one second. Then toggle to the preference and select by pressing the Reset button.

Service Interval Setting (Type B Steering Wheel)

When in User Settings mode, press the Mode button to scroll to Service Interval and select by pressing the OK button.

When in the Service Interval mode, scroll to the menu item and press the OK button to enter:

- Engine Oil
- Tire

Scroll to your selection and press the OK button to set.

Ambient, Mood & Theme Lighting Video



LCD Display: Maintenance Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information on the User Settings mode, please refer to your Owner's Manual.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Lane Keeping Assist (LKA)*†6

Lane Keeping Assist (LKA) is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the instrument cluster indicator will initially illuminate white when turned on. It will remain white when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LKA icon will illuminate green.

If the LKA detects that you are moving outside of your lane, the system may give an audible warning and display Lane Departure Warning on the instrument cluster. If the vehicle continues to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane.

LKA is the operating mode by default when the Lane Safety/LKA button* is depressed to ON.

There are three available modes:

- **Active LKA** – Provides more frequent steering inputs than standard LKA
- **Lane Keeping Assist** – Guides driver to keep vehicle within lanes and provides steering inputs when vehicle is about to deviate from the lane
- **Lane Departure Warning** – Alerts driver when the system detects the vehicle leaving the lane. In this mode the system will not provide steering inputs

All systems will operate under the following conditions:

- The vehicle speed exceeds approximately 40 mph
- LKA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is between the lane markers



 
When the front-view camera does not detect the lane traveling in, the lanes are not illuminated



When the front-view camera detects the lane traveling in, both lanes are illuminated



When the front-view camera detects the vehicle moving outside of the lane traveling in, a vehicle crossing lane indicator will blink, either on the left or right lane (as shown in both images above)

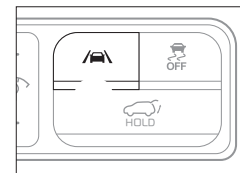


(Located on Driver's Panel to the left of the steering wheel)


Lane Keeping Assist (LKA)*†6 (continued)

LKA User Settings:

 
- To turn LKA ON, with the ignition on or the Engine Start/Stop button* in the ON position, press the Lane Safety/LKA button* . The instrument cluster indicator will initially illuminate white indicating the system is on
- To turn LKA on in the user settings, go to the User Settings menu in the Instrument Cluster, press the Mode button on the Steering Wheel when the vehicle is at a standstill, gear shift in Park and with the ignition on or the Engine Start/Stop button* in the ON position, and select User Settings
- To switch between LKA modes (Lane Keep Assist, Lane Departure Warning), go to User Settings in the Instrument Cluster. Press the Move (OK) button up/down and select desired setting and press the OK button

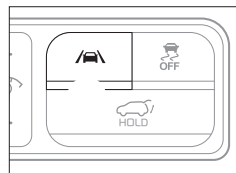

 
(Located on Panel to the left of the steering wheel)

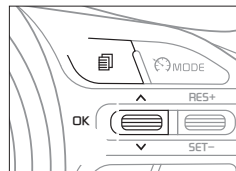

(Type B shown; located on the right side of the Steering Wheel)

The LKA Warning Volume can be adjusted in the User Settings  in the Instrument Cluster or the Vehicle Settings* on the audio head unit

REMINDERS:

- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state
- Some models access settings through the Vehicle Settings in the audio head unit. Press the Setup hard key on the audio head unit, then  on the screen to enter Vehicle Settings

Lane Keeping Assist and Lane Departure Warning are not substitutes for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Actual User Settings steps may vary by model. Refer to section 4 in the Owner's Manual for more information.

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Lane Keeping Assist and Lane Departure Warning are not substitutes for safe driving and may not always alert the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Actual User Settings steps may vary by model. Refer to section 4 in the Owner's Manual for more information.

Lane Following Assist (LFA)*†6

Lane Following Assist (LFA) is designed to help ensure that the vehicle stays centered in its lane by monitoring the detected lane markings ahead and adjust the steering. When turned on, the instrument cluster indicator will initially illuminate white when turned ON, and on some vehicles, when SCC is engaged. It will remain white when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LFA icon will illuminate green.

LFA will operate only when these conditions are met:

 
- When the SCC is on and operating
- LKA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 95 mph

LFA User Settings:

- To go to User Settings in the Instrument Cluster, press the Mode button on the Steering Wheel when the vehicle is at a standstill, gear shift is in Park and with the ignition on or the Engine Start/Stop button* in the ON position, and select User Settings
- To enable LFA, when in User Settings, press the Move (OK) button up/down and Select Driver Assistance then Driving Assist, Select Lane Following Assist. Press the OK button
- Some models access settings through the Vehicle Settings in the audio head unit. Press the SETUP hard key on the audio head unit, then on the screen to enter Vehicle Settings
- Some vehicles have a Lane Driving Assist / Lane Safety button* on the Driver's Panel or the Steering Wheel. Press to activate Lane Following Assist

REMINDERS:

- If the ignition is cycled, LFA returns to its previous state, on or off, if activated in the User Settings menu and when combined with SCC. If using the Steering Wheel LKA button, then LKA defaults to off
- LFA is not a substitute for safe and proper driving. Always drive safely and use caution

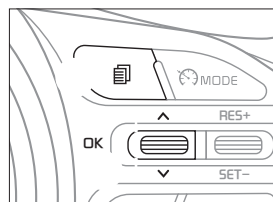

(Type B shown; located on the right side of the Steering Wheel)

Lane Following Assist (LFA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual User Settings steps may vary by model. See section 5 in the Owner's Manual for more detailed information, limitations and conditions.

Forward Collision-Avoidance Assist (FCA)^{†6}

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, temporarily apply emergency braking. Initially, FCA provides Forward Collision Warning (FCW) when it detects a potential collision with a vehicle, pedestrian, or cyclist, emitting an audible warning and visual alert on the instrument cluster.

 
If the system detects that the collision risk has increased, Forward Collision-Avoidance Assist (FCA) automatically applies the brakes to reduce your speed, potentially helping to reduce the effects of a possible collision.

FCA User Settings:

- FCA is ON by default in most Kia models. FCA can be turned ON/ OFF by going to the User Settings in the Instrument Cluster
- To go to User Settings, press the Mode button on the Steering Wheel when the vehicle is at a standstill, gear shift in Park and with the ignition on or the Engine Start/Stop button* in the ON position
- Press the OK button up/down and select User Settings then Driver Assistance
 - In some models, go to Driving Assist, then Forward Collision-Avoidance Assist or Forward Collision Warning and press the OK button
 - In other models, go to Forward Safety and select Active Assist, Warning Only or Off
- Active Assist: Vehicle will provide a warning (audible & visual) and apply the brakes if needed
- Warning Only: Vehicle will provide a warning only (audible & visual)
- Off: System is off, no warnings or braking provided
- To adjust the FCA initial warning activation time, go to User Settings, Driver Assistance, Warning Timing then select Normal, Early or Late, depending on your Kia model:
 - Early/Normal: Maximizes the amount of distance between the vehicles before the initial warning occurs
 - Late: Reduces the amount of distance between the vehicles before the initial warning occurs

FCA/FCW will become active when the:

- Ignition is on or the Engine Start/Stop button* is ON
- Vehicle is traveling faster than 5 mph
- Electronic Stability Control (ESC) is ON

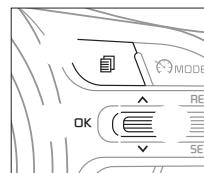

(Type B shown; located on the right side of the Steering Wheel)

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA system is automatically turned off
- When the FCA system is off, the FCA warning indicator is on in the Instrument Cluster

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution.

Actual User Settings steps may vary by model. Refer to section 4 in the Owner's Manual for more information.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Forward Collision-Avoidance Assist (FCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

FCA Warning Volume can be adjusted in the User Settings in the Instrument Cluster or the Vehicle Settings* on the audio head unit. Go to Driver Assistance, then Warning Volume

Driver Attention Warning (DAW)*†7

Driver Attention Warning is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving. There are three modes:

 
 
- **Normal Sensitivity:** Driver Attention Warning warns the driver of his/her inattentive driving practices.
- **High Sensitivity:** Driver Attention Warning warns the driver of his/her inattentive driving practices faster than Normal mode.
- **Off:** Driver Attention Warning is deactivated

If DAW is activated, the DAW information will appear on the Instrument Cluster LCD when you select the Driving Assist menu in User Settings . A message, “Consider taking a break,” appears on the LCD and a warning sounds to suggest the driver to take a break when the driver’s attention level becomes low.

DAW User Settings:

To turn DAW on/off, with the ignition on, press the Mode button on the Steering Wheel and go to User Settings in the Instrument Cluster. Then go to Driver Assistance and select Driver Attention Warning. Set DAW to Normal Sensitivity, High Sensitivity or Off.

- Some models access settings through the Vehicle Settings in the audio head unit. Press the Setup hard key on the audio head unit, then press on the screen to enter Vehicle Settings

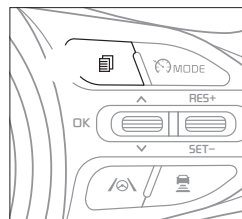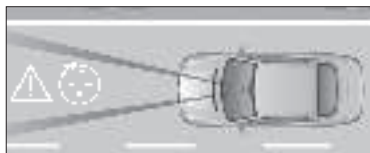

(Type B shown; located on the right side of the Steering Wheel)

REMINDERS:

- The setup of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display “Consider taking a break” message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

Driver Attention Warning (DAW) Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

See section 5 in the Owner's Manual for more information.

Instrument Cluster Control

Press switch  up or down to adjust display brightness of the instrument panel illumination.


REMINDER: The Instrument Cluster Control does not adjust brightness on the audio control unit screen. Use setup to adjust brightness on the audio control unit screen.

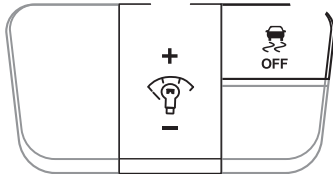


(Buttons located on left side of Driver's Panel)


Electronic Stability Control (ESC)^{†8}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press the ESC OFF button  to disable Traction Control in ESC (ESC OFF indicator will illuminate).

To turn both the Traction Control and Stability Control off, press and hold the ESC OFF button  (ESC OFF indicator will illuminate, and an alert sounds).

REMINDERS:

- ESC is active by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light  in the instrument cluster will be lit momentarily whenever the ESC is active

For more information on Electronic Stability Control (ESC) and its specific features and operation, please refer to your Owner's Manual.

Hill-Start Assist Control (HAC)^{†8}

HAC can help to prevent the vehicle from rolling backwards when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINDERS:

- The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an authorized Kia dealer for service

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator – this is normal HAC operation
- HAC provides a 2-second delay before the vehicle may start rolling backwards

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Power Windows, Window Lock & Central Door Lock

Pull/Press to operate Driver's Window Auto Up/Down*

Press button again to stop Auto Up/Down function.

Press to Unlock/Lock All Doors

Press the Power Window Lock button* to disable the Rear Passenger Window switches

 
Automatic Door Lock/Unlock*

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Power/Heated Outside Mirrors

To adjust outside mirror positions, press the switch left or right to select mirror, then press the arrows to adjust.

Mirror heaters are activated when Rear Defroster is turned on.

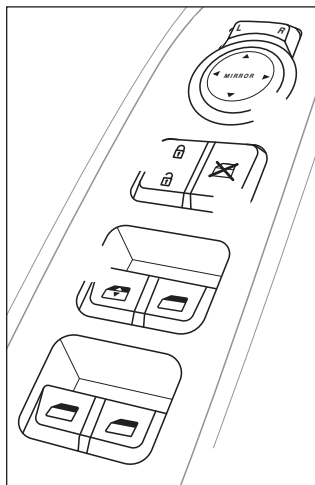

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
Engine Start/Stop Button*†10

To start the engine:

1. Depress the brake pedal
2. Press the Engine Start/Stop button while gear shift is in P (Park) or N (Neutral)

To turn the engine OFF: Press the Engine Start/Stop button.

To use the Engine Start/Stop button, you must have the Smart Key fob inside the vehicle.

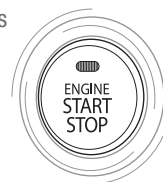

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once (amber light)

ON position

- When already in the ACC position (amber light) and without depressing the brake pedal, press the Engine Start/Stop button (red light)
- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button twice (red light)

Keeping the vehicle in the ACC or ON position for extended periods of time without turning the engine on may discharge the vehicle's battery.

Engine Start/Stop Button Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

See section 5 in the Owner's Manual for more information.

Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights/High Beams

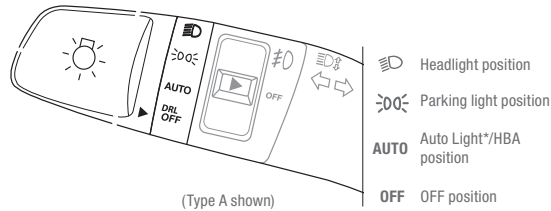

AUTO Light Position — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

High Beam Assist (HBA)* – High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDERS:

- High Beam Assist does not operate below certain speeds, or in some lighting and driving conditions. Please be aware of your surroundings and exercise proper road etiquette when operating a vehicle using the high beams
- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously. If the lever is pulled toward you while HBA is operational, HBA will turn off
- If the light switch is switched to the headlight position, HBA will turn off and low beams will be on continuously
- When the HBA indicator illuminates on the instrument cluster, the HBA is not working properly. See an authorized Kia dealer for service

 
See section 4 in the Owner's Manual for more information.

Turn Signals

To operate:

- **Turn Signals** – Move lever Up/Down for Right/Left Turn Signal
- **One-Touch Lane Change Signal** is activated by briefly pressing the Turn Signal Lever Up/Down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.
- To turn the One-Touch Lane Change Signal off/on, go to User Settings Mode in the LCD Instrument Cluster modes.
- To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Instrument Cluster modes.

One-Touch Lane
Change Signal

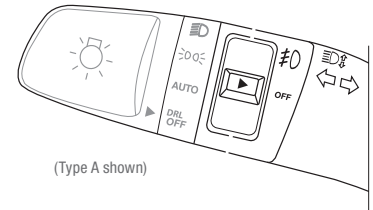


Refer to section 4 in the Owner's Manual for more information.
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Windshield Wipers & Washers

To operate:

 - Move lever up/down to change Wiper modes
- Press switch up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

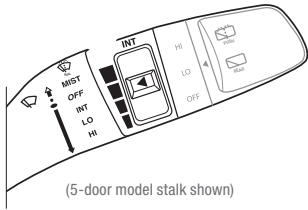

MIST: Single wipe
OFF: Wiper off
INT: Intermittent wipe
LO: Low wiper speed
HI: High wiper speed

 
- Moving switch up increases intermittent wipe frequency and wipe speed. Moving switch down decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 4 in the Owner's Manual for more information.

Rear Wiper & Washer (5-Door only)*

To operate:

- Rotate Rear Wiper switch to change wiper modes
- Push lever to spray and wipe

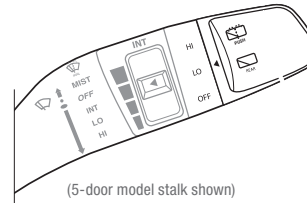

HI: High wiper speed
LO: Low wiper speed
OFF: Wiper off

LO and HI sets wiper speed. No intermittent wipe function is available on rear wipers

For illustrative purposes only. Your actual display, buttons and/or features may vary. Refer to section 4 in the Owner's Manual for more information.

 
Wipers and Wiper Stalk Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


Tilt Steering Wheel†21

To adjust the Steering Wheel position, press the lock-release lever down and adjust the desired angle . When finished, pull the lock-release lever up to lock Steering Wheel in place.

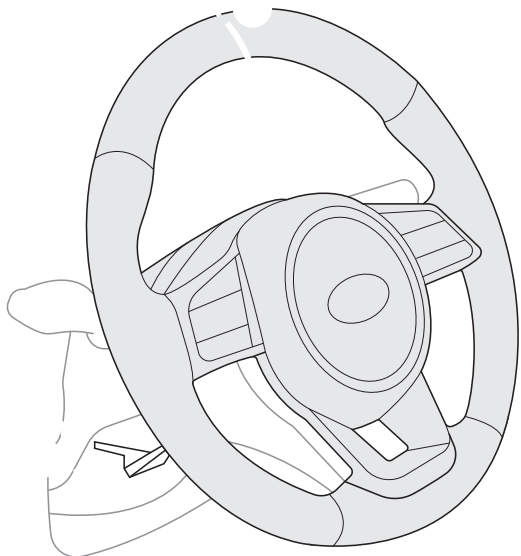

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 Cruise Control*†19

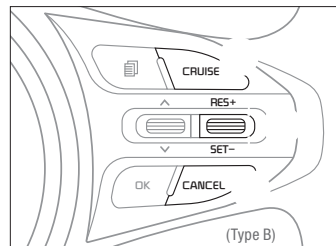

CRUISE Control button: Press to turn the Cruise Control ON/OFF

Resume (RES) Cruising Speed button: Press up to resume or increase cruising speed

SET Cruising Speed button: Press down to set or decrease Cruising Speed

Cruise Control CANCEL button: To cancel Cruise Control, do one of the following:

- Press the brake pedal
 - Press the CANCEL button
-
- Cruise Control is designed to function above approximately 20 mph
 - The cruise control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

Bluetooth® Wireless Technology†5,19

 
Talk button: Press to activate voice recognition. Press and hold to exit voice recognition.

Volume button: Press up/down to raise/lower speaker volume

Mute button: Press to mute the microphone during a call and to mute the audio system speakers

Receive/Place Call button: Press to receive/place/transfer calls. In vehicles with navigation, if no phone is paired, press button to pair a phone

End Call button: Press to end a call, reject an incoming call or cancel a function

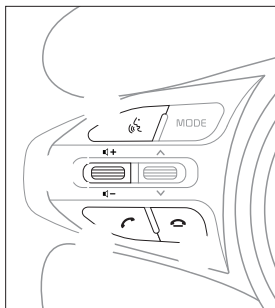

(Type B)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

- Option 1: Press the Receive/Place Call button (displays the phone screen with number keypad)
- Option 2: Press the Talk button . Then say the command "Call {name}" or "Dial {number}"

- When using the voice command feature, wait for the system BEEP before speaking the command.
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

REMEMBER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

For more information, refer to the Car Multimedia System User's Manual. For Bluetooth® Wireless Technology FAQs, go to www.kia.com, Owners section, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA. Refer to your Owner's Manual for more specific Bluetooth® Wireless Technology phone pairing and operation instructions.

Bluetooth® Wireless Technology^{†5,19} (continued)

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips.

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)

Audio Controls^{†19}

Audio MODE button: Press to cycle through FM/AM/SiriusXM®^{†16}/Media modes

Audio System ON/OFF: Press to turn power on; Press and hold to turn power off

Seek/Preset button

FM/AM/SiriusXM®^{†16} Modes: Press to advance through Preset Stations. Press and hold to Auto Seek

Media Modes: Press to move Track Forward/Back. Press & hold to Fast Forward/Rewind (except for Bluetooth® Audio)

Volume button: Press up/down to raise/lower volume

 
Mute button: Press to mute all audio

- **Bluetooth® Music Streaming** – If the Bluetooth® music is inaudible or too low, you may need to turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and turn off A/C – Open windows, weather (wind/rain), or an A/C fan operating at higher speeds can interfere with Voice Recognition
- Press the talk button and say “Help” to get a list of available commands

Voice Recognition Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

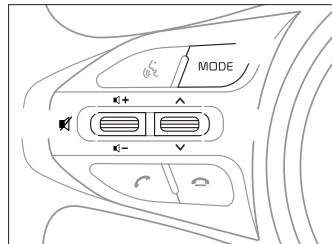

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

For further audio system operation, refer to pages 20-24.

Android Auto™^{†3} / Apple CarPlay®^{†4} Setup

Android Auto™ compatible smartphone setup – Download the Android Auto™ app from the Google Play™ Store^{†10}. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay®
(Standard Audio System & Standard Audio System-Value with UVO link):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ *(Standard Audio System, Standard Audio System-Value with UVO link & UVO link with Navigation):*

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

- If Android Auto™ / Apple CarPlay® randomly disconnects:

- Ensure the USB cable is certified by the phone manufacture for both power and data
- Clean the phones port, which the USB cable connects to, with disposable compressed air
- The Phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
- Visit the phone manufactures website for Android Auto/Apple CarPlay app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Cable Connection setup for Apple CarPlay®
(UVO link with Navigation only):

1. Connect the Apple CarPlay® compatible iPhone®^{†11} with the vehicle's USB port using the manufacturer's cable provided with your iPhone®^{†11}
2. Press the SETUP key on the audio head unit
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the audio head unit home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - UVO link with Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection):
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan with applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - UVO link with Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (Wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

Wireless Apple CarPlay
& Android Auto Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to the Car Infotainment System Quick Reference Guide for more information.

UVO link Activation*†1 (Systems equipped with UVO link only):

Follow these steps to activate your UVO link system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press UVO icon
 - c. Press Activate UVO
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter smartphone number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone SMS or email:
 - a. Check your phone SMS or email for verification code
 - b. Open the link in your SMS or email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the email as your login ID, you will need to provide your password prior to receiving the verification code

- c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
- d. Enter the code in the head unit and press ACTIVATE
 - e. Go back to the page with your verification code and press "I have entered my PIN."
A link will be provided to download the Kia Access with UVO link app from your app store. After installing the app, log in and enjoy

REMINDER: This vehicle is not equipped with over-the-air system updates.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

 
For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide.

UVO Assistance*

Virtual Assistant ⓘ – Press to connect to the UVO Center to hear information about the UVO features

UVO – Press to activate phone projection with Android Auto™ or Apple CarPlay® (smartphone must be connected via wireless or USB cable – see previous page for availability and setup)

Roadside Assist – Press to connect to the UVO Center where you can request vehicle towing services

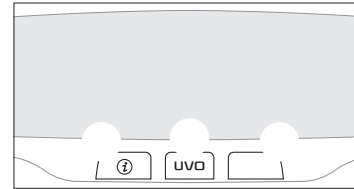

(Buttons on rearview mirror*)

For more information, refer to the Car Infotainment System Quick Reference Guide.

Kia Access with UVO link app Video



UVO Assistance Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Standard Audio System*


FM/AM/SiriusXM®+22/Media (USB, *Bluetooth*® Audio, My Music)*

Press to Power On/Off. Rotate to adjust volume



Press to select FM/AM/SiriusXM® modes

 
Press to select MEDIA modes

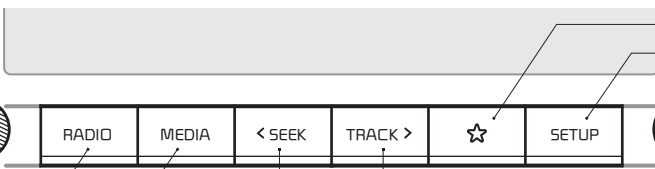

Press to enter CUSTOM mode

Press to enter SETUP mode

 Rotate to change Radio Station/Media tracks/songs/files. Press to select



Press briefly to do the following:

- FM/AM/SiriusXM® mode: Play the previous/next frequency
- MEDIA mode: Change the track, file or title

Press and hold to do the following:

- FM/AM mode: Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- MEDIA mode: Rewinds or fast forwards the track or file (except for *Bluetooth*® Audio)

Standard Audio System Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Radio Presets – You can listen to FM and AM radio and save frequently used stations. Press and hold the desired slot. This saves the current station in the selected slot.

SiriusXM® Smart Favorites – For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM®, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key : A programmable key to provide quick access to one of several available system features. Press and hold the Custom Key. Select one of the available features you would like the Custom Key to open.

Sound Settings – To adjust the Standard Audio Systems sound settings:

1. Press the SETUP key on the audio control unit or the onscreen MENU button when in MEDIA mode
2. Select the onscreen SOUND button
3. Select the menu item (Position, Volume, Priority, Advanced, Default)
4. Using the touchscreen, press arrows to adjust the settings

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 19-24 or see your Owner's Manual.

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, *Bluetooth*® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using *Bluetooth*® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the smartphone's navigation^{†11} system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Kia Access with UVO link App Download

Go to an app marketplace to download the new Kia Access with UVO link App. Once you download, make sure you register your vehicle and start an account (refer to UVO link Activation page). Get to know your new Kia and the available convenient features on the app.

The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use UVO. If these conditions are not met, remote command may not execute or takes long time. It will also effect voice commands

To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked

Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine

The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal

In order to preserve the vehicle battery, UVO will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use UVO again



Download the **Kia Access with UVO link App** by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access with UVO link App Features Guide. Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes



Kia Access with UVO link App Features Guide

The Kia Access with UVO link App Features Guide is a step-by-guide helping you utilize the app to its full potential by detailing how to set up and use each feature and adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Remote Start/Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia App Screen for illustrative purposes only. Actual App screen and functionality may vary.

 
For further UVO link operations, refer to the Car Infotainment System Quick Reference Guide.

ALWAYS CHECK THE OWNER'S MANUAL FOR COMPLETE OPERATING INFORMATION AND SAFETY WARNINGS.

*IF EQUIPPED

Standard Audio System – Value with UVO link*

— FM/AM/SiriusXM® †22/Media (USB, Bluetooth® Audio)*

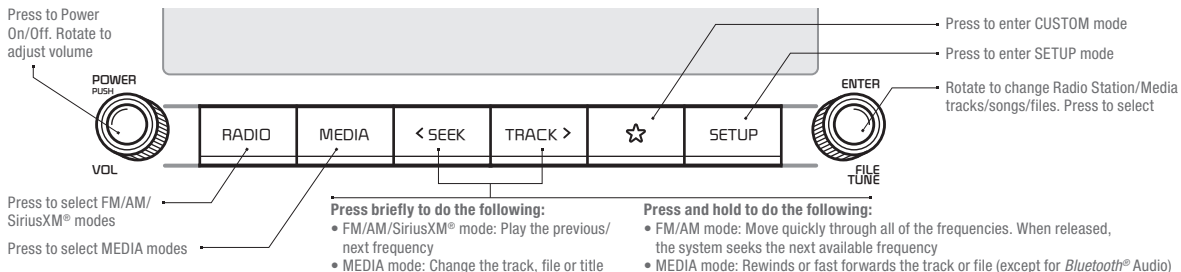

Standard Audio System - Value with UVO link Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Sound Settings – To adjust the sound settings:

1. Press the SETUP key on the audio head unit or the onscreen MENU button, when in MEDIA mode. Select the onscreen SOUND button, or SOUND SETTINGS
2. Select the menu item (Position, Volume, Tone, Priority, Advanced, Default, FM Radio Noise Cancel*)
3. Use the onscreen buttons to adjust settings. Press the return button to save settings

Presets – Press the STAR button next to or below the Radio Station display. This saves the current station as a preset.

SiriusXM® Smart Favorites – For the first ten favorite SiriusXM® channels, you may play live or repeat from the beginning of a song or a program segment. In Radio mode, choose SiriusXM®, then select any of the first ten favorites. During song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key : A programmable key to provide quick access to one of several available system features. **To Program the Custom Key:** Press and hold the Custom key. Select one of the available features you would like the Custom key to open.

REMINDERS:

- Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the audio system controls while driving. To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.
- Prolonged use of the audio head unit in ACC mode may drain the vehicle's battery

 
Your vehicle's audio system may differ from that in the illustration. For more information, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 19-23.

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to BT Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- This system supports Android Auto™ (USB & wireless connection) and Apple CarPlay® (wireless connection only)
- Navigation may be available when connected to Android Auto™ or Apple CarPlay® supported smartphones
- When using the voice command feature, wait for the system to BEEP before speaking the command
- At any time, you can interrupt Command Feedback by pressing the TALK button
- A warning screen may appear periodically to remind users that the UVO link should be operated when the engine is running to prevent battery discharge

Digital Clock

Clock Setup:

Press the **SETUP** button, then press the onscreen Clock icon to enter date/time settings.

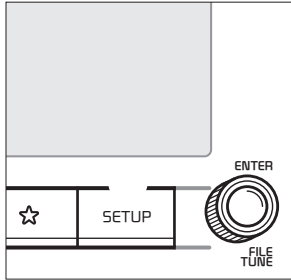

(UVO eServices audio head unit shown)

 
For illustrative purposes only. Your actual display, buttons and/or features may vary.

Multimedia USB Ports, Power Outlets & USB Charger Port*

Use the Multimedia USB port to connect USB audio devices and smartphones.

Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

The power outlets are inactive when ignition is in the OFF position.

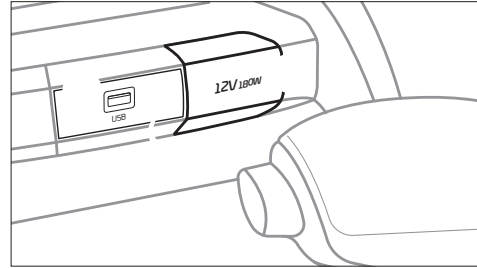


USB Charger Port*:

The USB Charger Port is located at the rear of the Center Console.

REMINDERS:

- Using the power outlets and AUX/Multimedia USB ports for prolonged periods of time with the ignition ON (engine OFF) could cause the battery to discharge
- The ignition in ACC mode could cause the battery to discharge
- The USB data port (Multimedia USB port) is located next to the Power Outlets. The USB Charger ports do not support data transfer
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device

 
For more information on the Aux/Multimedia USB Ports, Power Outlets and the USB Charger Port, refer to the Owner's Manual.

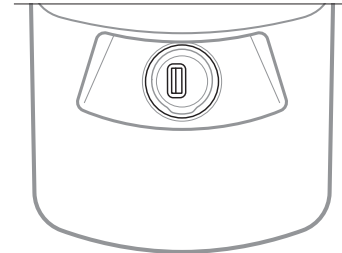

(Located at rear of Center Console)

CENTER
PANEL

 Automatic Climate Control*

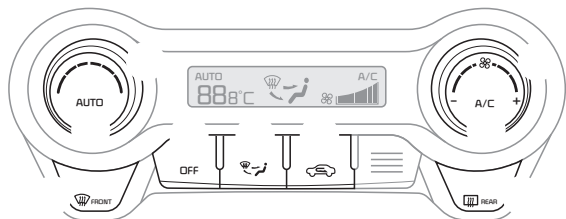

Auto climate control button

Temperature control knob

Front windshield defroster

System OFF button

Mode selection control

Recirculated air button


Air conditioning ON/OFF button

Fan speed control knob

Rear windshield defroster

Climate Control Auto Function:



1. Press **AUTO** to select Full Auto Operation – The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected
2. Set desired **Temperature**
3. Rotate Passenger Temperature knob to select Dual Temperature Control Operation

- Defrost Mode  activates A/C and opens Fresh Air Vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator will NOT illuminate. The fan speed, air intake, airflow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

Your Automatic Climate Control system may differ from those in the illustrations. Refer to section 4 in the Owner's Manual for more information.

Auto Defogging System:

Auto Defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default. To cancel Auto Defogging, press the Front Defrost button  for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button  for three seconds.

Defrost Outside Windshield:

1. Set Temperature to Hot
2. Press the Front Defrost button

Defog Inside Windshield:

1. Set Fan Speed to highest position
2. Set Temperature to highest position
3. Press the Front Defrost button

Air Flow Modes:

To select Air Flow Modes, press the Mode selection buttons:



Face-Level



Bi-Level



Floor-Level



Floor/Defrost-Level

Automatic Climate Control Video



Auto Defogging System Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:

- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control
- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow Mode and Fan Speed do not display on the Climate Control Display

Manual Climate Control*

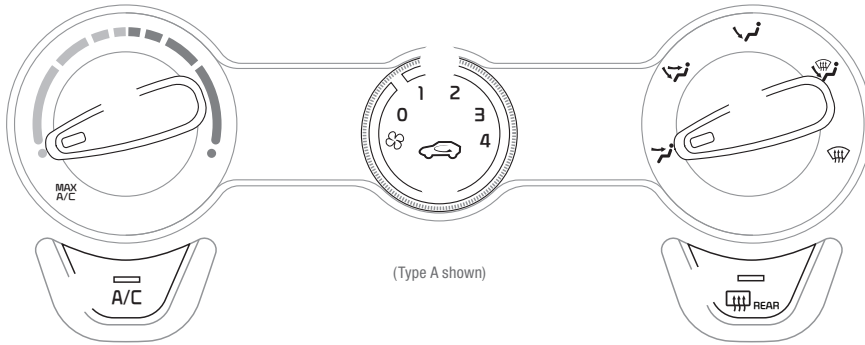

- Temperature control
- Fan speed control
- Recirculated/Fresh Air button
- Mode selection control
- Air conditioning ON/OFF button
- Rear windshield defroster button

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Select **Front Defrost** mode

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set **Temperature** to desired position
3. Select **Front Defrost** mode

Air Flow Modes

To select Air Flow modes, rotate the mode selection knob :



- To help achieve desired / maintain desired temperature, select Floor-Level for heating and Face-Level for cooling
- Defrost Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit). Outside air temperature may not be warm depending on outside temperature

Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Automatic Gear Shift with Sportmatic^{®†18} Shifting*

P: Park

R: Reverse

N: Neutral

D: Drive

 
 
[+]: Manual Mode Upshift

[-]: Manual Mode Downshift

Manual Mode:

To enter **Manual mode**, move shift lever from **D** to left gate .

To shift while in **Manual mode**, move shift lever up **[+]** to upshift or down **[-]** to downshift.

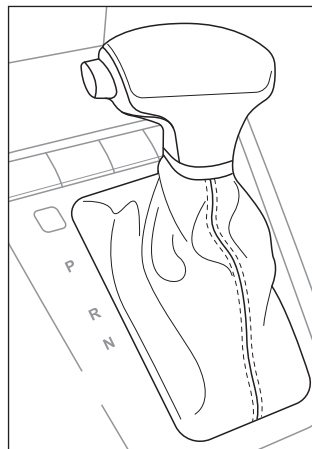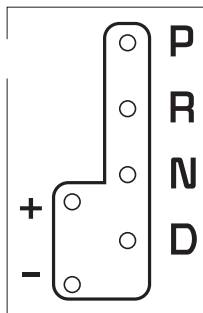

Sportmatic[®] Shifting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
 
- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

6-Way Adjustable Driver's Seat^{†15}

Pull lever to slide Seat forward/backward.

Pull/press lever up/down one or more times to adjust Seat height.

Pull lever to adjust Seatback Recline.

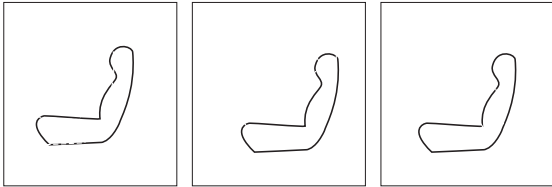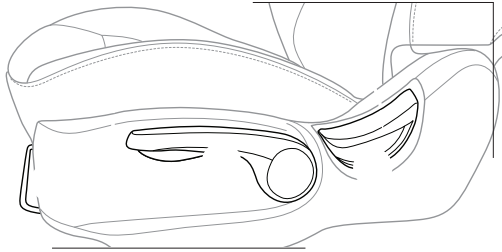


When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

Front Seat Headrest Adjustment^{†9}

To raise headrest: Pull headrest up.

 To lower headrest: Press lock, then press the headrest down.

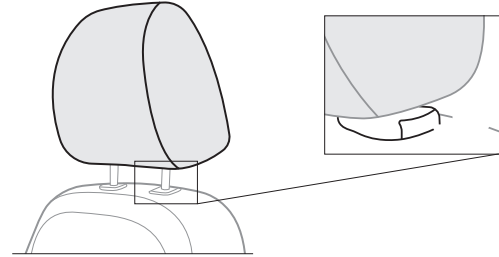

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDERS:

- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Rear Occupant Alert (ROA) with Door Monitoring

The Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster stating to “Check rear seats” and a chime will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to User Settings in the Instrument cluster or Vehicle Settings*, on the audio head unit select Convenience, then Rear Occupant Alert and check/uncheck the box.

REMINDER: Always be sure to check the passenger areas before leaving the vehicle.



Rear Occupant Alert (ROA) with Door Monitoring Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Folding Rear Seatback^{†15}

To Fold:

1. Ensure the rear seat belt is out of way of the Seatback folding (4-door model)
Insert the metal seat belt tab into the holder (5-door model)
2. Adjust the Front Seatback to the upright position and lower the rear headrest to the lowest position
3. Pull on the Rear Seatback lock release lever, then fold the seat toward the front

To Unfold:

1. Pull the lock release lever and lift the Seatback backward until it clicks firmly in place
2. Return the rear seat belt to the proper position

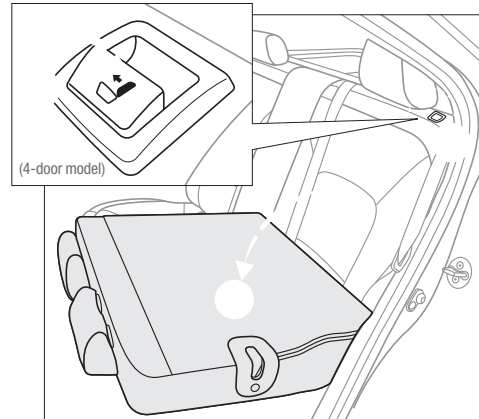

ROA is not a substitute for one's attention. Always check the vehicle's interior before exiting.

See section 4 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

- It may be necessary to adjust the front seatbacks to fully lower rear seats
- Ensure seat is locked by pressing down on Seatback and ensuring red line is NOT visible on bottom of Folder Lever

REMINDEERS:

- Before unfolding Seatback, ensure the metal seat belt tab is placed into the holder (5-door model)
- Always make sure the seatback is locked in place when unfolded

Smart Key*†9

Press to lock All Doors

Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors

Press and hold to open Trunk. Then lift by the handle

REMINDER: Trunk lid will partially open. To fully open, lift up manually. The Trunk unlocks when the Smart Key fob is within close proximity to the vehicle.

Press and hold more than 1 second for Panic Alarm.

To turn off Alarm, press any button

Press to release Mechanical Key (on reverse side of fob)

Mechanical Key

Driver's Door Lock/Unlock button :

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors

Mechanical Key: Use to unlock/lock Driver's Door:

1. Pull out door handle
2. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown
3. Insert Mechanical Key and turn right to Unlock Driver's Door
4. Turn twice within 4 seconds to Unlock All Doors
5. Insert Mechanical Key and turn left to Lock All Doors
6. Return keyhole cover to its original position

Note: Use to unlock trunk, lock glove box* and to turn Child Protector Rear-Door Locks.



REMINDER: Remote button configuration may vary depending on vehicle options.



(Type B handle shown)

Engine Start/Stop Button Video



Key Fob Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell phone or smartphone. To help prevent this, store each device separately

For illustrative purposes only. Your actual display, buttons and/or features may vary. See section 4 in the Owner's Manual for more information.

Remote Keyless Entry (Folding Key)*

Press the release button to unfold the key

 
Press to lock all Doors. If pressed again within 4 seconds the hazard lights will blink and the horn will sound.

Press to unlock Driver's Door.
Press twice in 4 seconds to unlock all Doors and Trunk/Liftgate*

Press for more than 1 second to automatically open Trunk/Liftgate*

Press and hold for approximately one second for Panic Alarm. To turn OFF Alarm, press any button

REMINDER: Remote button configuration may vary depending on vehicle options.

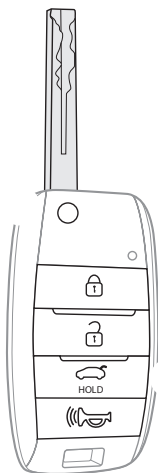


(Type A)

Fuel Cap / Malfunction Indicator (Check Engine Light)

To install the fuel cap, turn the fuel cap clockwise for ONE CLICK to prevent Malfunction Indicator from illuminating. Close and lightly push the Fuel Filler Lid to ensure it's securely closed.

REMINDERS:

 - The Fuel Filler Door Release lever is located on the lower part of the driver's door sill
- It is normal operation when tightening to hear one click and then, when Fuel Cap is released, it clicks

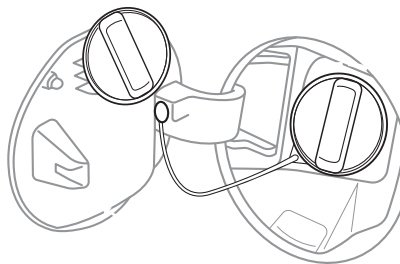

One Click Fuel Cap Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Door Locks / Double-Turn Unlock All

- Turn counterclockwise once to unlock Driver's Door
- Turn counterclockwise again within 4 seconds to unlock all Doors
- Turn clockwise once to lock all Doors

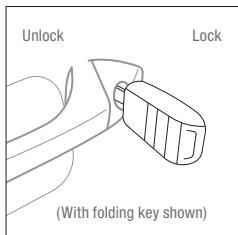


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever to unlatch the Hood

In the front of the vehicle, lift the Hood slightly, push the secondary Latch to the left inside of the hood's center and lift the Hood

 
2. Pull out the support rod from the Hood and set into place to hold the Hood open

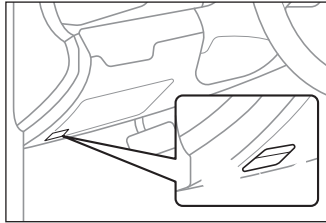

(Lever located under Driver's Panel buttons)

REMINDER: Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake.

 (Latch located inside hood)

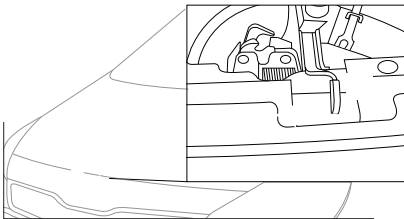


Closing the Hood:

Lower the Hood by pressing the front center of the Hood. Then, press down to securely lock in place.

REMINDER: While lowering and closing, keep hands away from under the Hood.

Fuel Door Release Lever

 Pull the lever upwards to release the fuel door.

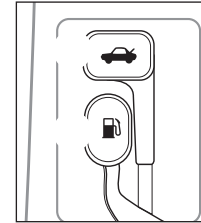

(Lever located on the driver's floor near door sill; Image shown is 4-door model)

 
Trunk* Release Lever

(4-door model)

Pull the lever upwards to open the trunk lid.

Sunvisor†20

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

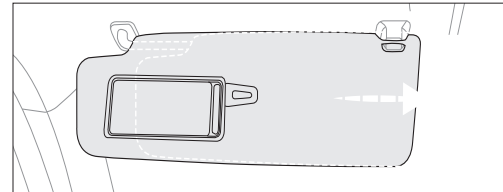

REMINDEMS:

- Sunvisor may not shield all direct light
- The Sunvisor may impair visibility if not adjusted properly. Do not operate the vehicle if Sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging Sunvisor around to or from the front or side windows

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Map/Room Lamps

Map Lamp*

Press the lens to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a map or personal lamp for the driver or front passenger.

When the Door switch is in the middle position, the lamp turns ON when any door is opened. When pressed on the left side, the light will turn on. When pressed on the right side, the light will be off, even when a door is opened.

 
Room Lamp

- **On:** In the ON position, the lamp stays on continuously
- **Door:** In the DOOR position, the lamp turns ON when any door is opened
- **Off:** In the OFF position, the lamp is OFF even if the door is opened


- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 5 seconds after the doors are locked
- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds

REMINDER: Using interior lights for an extended period of time may cause battery discharge.

Map Lamp

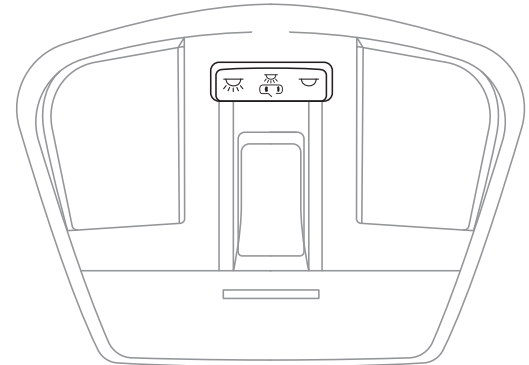

Room Lamp

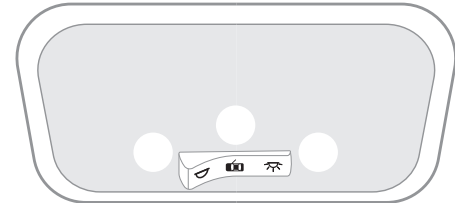 

(Type A shown)

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Rear View Monitor (RVM)*

 
 
The Rear View Monitor is a supplemental system that displays the view behind the vehicle through the audio control unit screen while the vehicle is in Reverse.

The Rear View Monitor System activates when the:

1. Ignition is ON
2. Gear Shift Lever is in the R (Reverse) position

REMINDER: Always drive carefully and use caution when backing up.

The Rear View Monitor System is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Rear View Monitor may not display every object behind the vehicle.

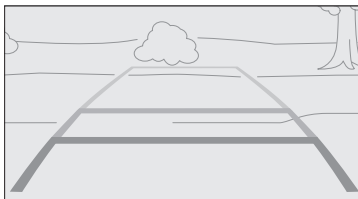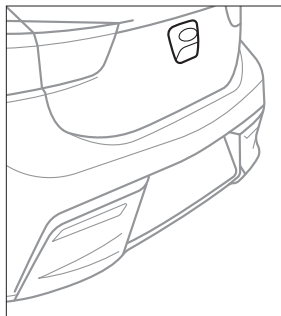

(Image displays on the audio control unit screens)

 
(5-door model shown; camera located on liftgate handle (5-door) or trunk (4-door); Liftgate Release button located underneath handle (5-door))

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Child-Protector Rear Door Locks

Located just below the latch mechanism of the rear passenger doors, insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.


REMINDER: Child-protector rear door locks are located on rear passenger's door jamb.

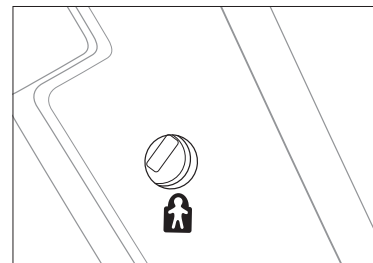

Liftgate Release Button (5-Door)*

Button is located underneath the liftgate handle. With doors unlocked, press the Liftgate Release button and pull the liftgate up by the handle to open.

 The liftgate must be unlocked before it can be opened by the Liftgate Release Button.

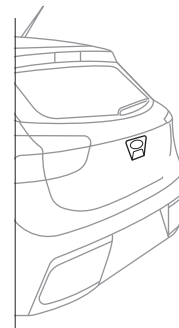

Occupant Detection System (ODS)^{†13} / Passenger Airbag^{†2} Off Indicator

ODS is designed to detect the presence of the front passenger and adjusts or turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

PASSENGER
AIR BAG

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

If the system determines that the airbag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

For more information on the Occupant Detection System / Passenger Airbag Off Indicator, please refer to the Owner's Manual.

Seat Belts^{†17}

To properly fasten your safety belts:

 
1. Insert the belt tongue plate into the buckle until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion

The Seat Belt warning chime operates for driver's seat only.

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS**, seat belt retractors will automatically lock the belts to reduce the risk of injury.

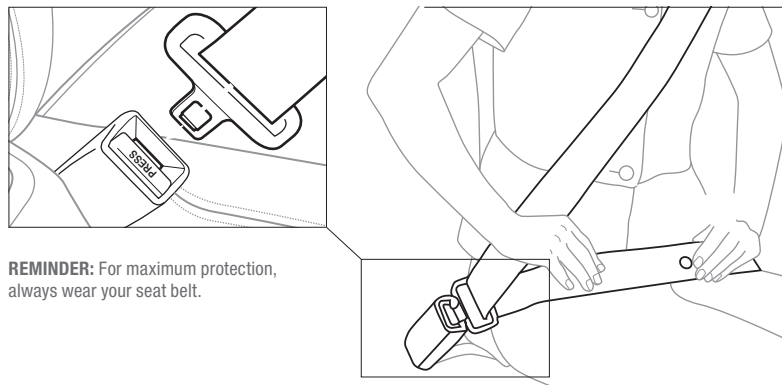

REMINDER: For maximum protection, always wear your seat belt.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.

1. **UVO link:** Purchase/lease of certain 2020 and newer Kia vehicles with UVO link includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year UVO link subscription expires, continued access to the full suite of UVO link available on your Kia will require a paid subscription at the then current subscription rate or your use of certain UVO link features may immediately terminate. Use of UVO is subject to agreement to the UVO Privacy Policy (available at <https://owners.kia.com/us/en/privacy-policy.html>) and Terms of Service (available at <https://owners.kia.com/us/en/terms-of-service.html>). UVO link is transferable to subsequent owner during the original UVO link service term. Only use UVO link when safe to do so. Kia Access with UVO link App is available from the Apple® App Store® or Google Play™. Kia Motors America, Inc. reserves the right to change or discontinue UVO link at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. UVO link features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit <https://owners.kia.com> or your authorized Kia dealer. Apple and App Store are registered trademarks of Apple Inc. Google and logos are trademarks of Google, LLC.
2. **Airbags:** For maximum protection, always wear your seat belt.
3. **Android Auto™:** Vehicle user interface is a product of Google and its terms and privacy statements apply. Requires the Android Auto app on Google Play and an Android compatible smartphone running Android™ 5.0 Lollipop or higher. Data plan rates apply. Android Auto is a trademark of Google LLC.
4. **Apple CarPlay®:** Apple® and Apple CarPlay® are trademarks of Apple, Inc., registered in the U.S. and other countries. Apple CarPlay® runs on your smartphone cellular data service. Normal data rates will apply.
5. **Bluetooth® Wireless Technology:** The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG Inc., and any use of such marks by Kia is pursuant to license. A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.
6. **Driver Assist Features – Lane Keeping Assist, Lane Following Assist (LFA), Rear View Monitor (RVM), Forward Collision-Avoidance Assist (FCA):** These features are not substitutes for safe driving, and may not detect all objects in front of the vehicle. Always drive safely and use caution.
7. **Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of driver fatigue or inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
8. **Electronic Stability Control (ESC) / Traction Control System (TCS) / Hill-start Assist Control (HAC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
9. **Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
10. **Google Play™ Store** is a trademark of Google, Inc. ©2020 Google Inc. All rights reserved. Google and the Google Logo are registered trademarks of Google Inc.
11. **iPhone®:** iPhone is a registered trademark of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
12. **Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
13. **Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
14. **Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
15. **Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
16. **Seat belts:** For maximum protection, always wear your seatbelt.
17. **SiriusXM®:** SiriusXM Satellite Radio, SiriusXM Traffic and SiriusXM Travel Link each require a subscription sold separately, or as a package, by SiriusXM Radio Inc. **If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM Customer Agreement for complete terms at www.siriusxm.com.** Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM Internet Radio service is available throughout our satellite service area and in AK and HI. ©2020 SiriusXM Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM Radio Inc.
18. **Sportmatic®** is a registered trademark of Kia Motors America.
19. **Steering-wheel-mounted controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
20. **Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if sunvisor is impairing your visibility.
21. **Tilt/Telescoping Steering Wheel:** Never attempt to adjust steering wheel position when vehicle is in motion.
22. **Tire Pressure Monitoring System (TPMS):** Even with Tire Pressure Monitoring System, check tire pressure on a regular basis.



RIO CUSTOMER DELIVERY CHECKLIST

Demonstrate the following with the customer:

- Standard Audio System* – page 22

For further operational information, refer to the Car Multimedia System User's Manual



 
- Standard Audio System Value with UVO link* – page 24

For further operational information, refer to the Car Multimedia System User's Manual




- Android Auto™ / Apple CarPlay® Setup – page 20

UVO link Activation / UVO Assistance* – page 21

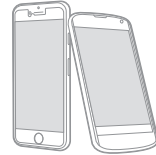


- Rear View Monitor (RVM) – page 35

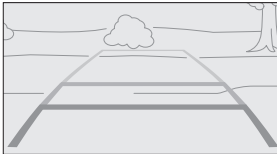 

- Kia Access with UVO link App Download – page 23

- Kia Access with UVO link App Features Guide – page 23

 - Bluetooth® Wireless Technology* – pages 18-19
Demonstrate operation

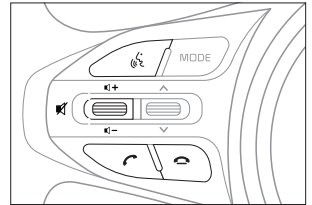

- Multimedia USB Ports – page 25
- Digital Clock – page 25
- Folding Rear Seatback – page 30
- Passenger Airbag Off Indicator – page 36

- Sunvisor – page 33
- Tire Pressure Monitoring System (TPMS) – page 5

- Explain first service process and schedule first service appointment
- Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
- Review recommended maintenance schedule and maintenance requirements to validate warranty
- Review business hours
- Review the Kia 10-year/100,000-mile warranty program
- Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
- Confirm time and best contact number for initial dealer follow-up

*if equipped

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



RIO CUSTOMER DELIVERY CHECKLIST

 
 
Owner's Name: _____ VIN: _____ Mileage: _____

Dealership Name: _____ Sales Consultant: _____ Date: _____

- Confirm vehicle is in customer mode (transportation mode disabled)
- Test and confirm "Good Battery" using a Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, Features & Functions Guide and any supplemental audio user's guides)

Automatic Climate Control - page 26 – Demonstrate Air Flow Modes, Defogging and Defrosting Windshield

Manual Climate Control - page 27 – Demonstrate Air Flow Modes, Defogging and Defrosting Windshield

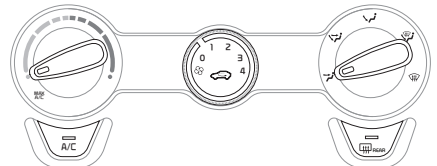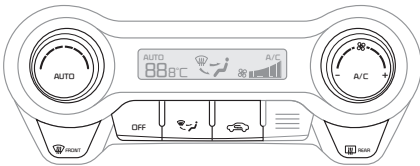


Windshield/Rear (5-door model) Wipers & Washers* – page 16

Cruise Control*– page 17
Demonstrate operation


To operate:

 - Move lever Up/Down to change Wiper modes
- Rotate lever ring to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

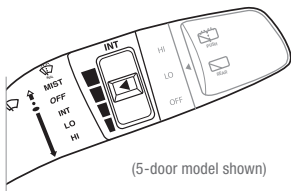

(5-door model shown)

 - MIST:** Single wipe
- OFF:** Wiper off
- INT:** Intermittent wipe
- LO:** Slow wipe
- HI:** Fast wipe

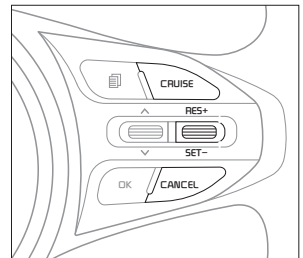

NORMAL MAINTENANCE SCHEDULE

=Perform • =Replace • =Inspect^g

(up to 60,000 miles)^A

| | 7,500 | 15,000 | 22,500 | 30,000 | 37,500 | 45,000 | 52,500 | 60,000 |
|--|-------|--------|--------|--------|--------|--------|--------|--------|
| Add fuel additive ^c | | | | | | | | |
| Rotate tires | P | P | P | P | P | P | P | P |
| Engine oil and filter | | | | | | | | |
| Battery condition | I | I | I | I | I | I | I | I |
| Brake lines, hoses and connections | | | | | | | | |
| Brake discs and pads | I | I | I | I | I | I | I | I |
| Vacuum hose | | | | | | | | |
| Steering gear rack, linkage & boots | I | I | I | I | I | I | I | I |
| Suspension ball joints and mounting bolts | | | | | | | | |
| Air conditioner compressor/refrigerant | I | I | I | I | I | I | I | I |
| Exhaust system | | | | | | | | |
| Air cleaner filter | I | I | I | R | I | I | I | R |
| Brake/clutch fluid | | | | | | | | |
| Climate control air filter (for evaporator and blower unit) | | R | | R | | R | | R |
| Fuel tank air filter ^{1D} | | | | | | | | |
| Parking brake | | I | | | | I | | I |
| Vapor hose and fuel filler cap | | | | | | | | |
| Driveshaft and boots | | I | | I | | I | | I |
| Cooling System | | | | | | | | |
| Manual transmission fluid ^{1E} | | | | I | | | | I |
| Fuel lines, fuel hoses and connections | | | | | | | | |
| Drive belts (First 60,000 miles, then every 15,000 miles) ^F | | | | | | | | I |

Check your Maintenance Schedule or schedule an appointment with a dealer using your UVO link account by logging into your Kia Access with UVO App or your account on <https://owners.kia.com/> (Vehicles equipped with UVO only)

‡ If equipped.

A. See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals.

Refer to vehicle mileage for maintenance item schedule.

B. And, if necessary, adjust, correct, clean or replace.

C. If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

D. Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow

restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.

E. Manual transmission fluid should be changed anytime it has been submerged in water

F. The drive belt should be replaced when cracks occur or tension is reduced excessively.

G. Inspect for excessive valve noise and/or engine vibration and adjust if necessary. Have an authorized Kia dealer perform the operation.

See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

©2020 Kia Motors America, Inc. All rights reserved.

Consumer - Roadside Assistance¹³: 1-800-333-4KIA (4542)

Part Number: SC210-PS-004

†LEGAL DISCLAIMERS ON BACK INSIDE COVER