



onyX EZ USER GUIDE

Dock & Play Radio



HOME
KIT INCLUDED



Table of Contents

Introduction	4	Using Onyx EZ With a Vehicle Dock	43
Features	4	Find Available FM Channels in Your Area	43
Safety and Care Information	5	Set and Select an FM Channel	46
What's in the Box?	7	FM Presets	48
Onyx EZ Button Functions	8	Auto Shut Off	49
Home Dock	9	Using the Vehicle Dock From the Universal Xpress Car Kit	49
Remote Control Functions	10	Turn FM Transmitter On/Off	50
Home Installation	11	To turn the FM Transmitter Off:	51
Step 1: Connect the Home Dock and Dock the Onyx EZ Radio	11	AUX Detect	52
Step 2: Place and Aim the Indoor/Outdoor Home Antenna	13	Troubleshooting	54
Step 3: Connect the Home Dock to a Stereo System or Powered Speakers	18	Product Specifications	57
Step 4: Subscribe	20	Patent and Environmental Information	58
Using Your Onyx EZ	22	Copyrights and Trademarks	60
The Main Display	22	Owners Record	61
Navigation Basics	23	Indoor/Outdoor Home Antenna Template	62
Listening to Satellite Radio	25		
Parental Controls	29		
Configuring Your Onyx EZ	35		
Radio ID	35		
Jump Settings	36		
Set Brightness or Contrast	37		
Set Audio Level	38		
Signal Indicator	39		
Factory Settings	40		
Demo Mode	41		

Introduction

Features

Thank you for purchasing the XM Onyx EZ with Home Kit!

XM Onyx EZ has these exciting features to enhance your overall experience:

- Add SiriusXM to a home audio system or powered speakers with easy, do-it-yourself set-up.
- Use the remote control to conveniently operate your Radio from across the room.
- Browse other channels while listening to the current one.
- View artist name, song or program title, and channel information on the large color display.
- Store your favorite channels for one-touch access.
- One-Touch Jump™ to the previous channel to which you were listening, or to the traffic and weather for the city of your choice.
- Easily lock and unlock channels with mature content.
- Listen at home, in the office, in multiple vehicle or outdoors - all with just one subscription.
- Home Kit included - add accessories for your vehicle, office or outdoors.

Please read the entire User Guide before Using Your Onyx EZ!

Introduction

Safety and Care Information



IMPORTANT! Self installation instructions and tips are provided for your convenience. It is your responsibility to determine if you have the knowledge, skills, and physical ability required to properly perform an installation. SiriusXM shall have no liability for damage or injury resulting from the installation or use of any SiriusXM or third party products. SiriusXM product warranties do not cover the installation, removal or reinstallation of any product.

- Do not expose to extreme temperatures (above 140°F or below -4°F, or above 60°C or below -20°C).
- Do not expose to moisture. Do not use device near or in water. Do not touch the device with wet hands.
- Do not let any foreign matter spill into device.
- Do not store in dusty areas.
- Do not expose to chemicals such as benzene and thinners. Do not use liquid or aerosol cleaners. Clean with a soft damp cloth only.
- Do not expose to direct sunlight for a prolonged period of time, and do not expose to fire, flame, or other heat sources.
- Do not try to disassemble and/or repair device yourself.
- Do not drop your device or subject it to severe impact.
- Do not place heavy objects on device.
- Do not subject device to excessive pressure.
- If the LCD screen is damaged, do not touch the liquid crystal fluid.


Introduction

Warning!


- Opening the case may result in electric shock.
- Make sure that you insert the Home Power Adapter's plug all the way into the outlet.
- If the liquid crystal fluid comes in contact with your skin, wipe the skin area with a cloth and then wash the skin thoroughly with soap and running water. If the liquid crystal fluid comes into contact with your eyes, flush the eyes with clean water for at least 15 minutes and seek medical care. If the liquid crystal fluid is ingested, flush your mouth thoroughly with water. Drink large quantities of water, and induce vomiting. Seek medical care.
- If you use this Radio in your vehicle, installation, service activation, and Radio configuration functions should not be performed while driving. Park your vehicle in a safe location before beginning installation, or configuring the radio.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Introduction


What's in the Box?

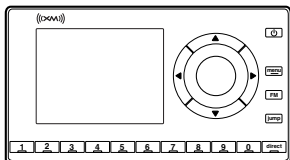


Onyx EZ Radio

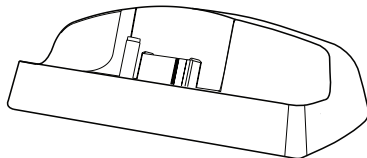


Home Dock

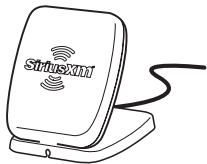


Indoor/
Outdoor Home
Antenna

 

Home Power
Adapter

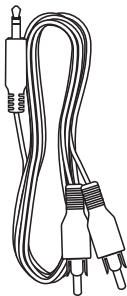

Stereo Audio
Cable

 

Remote Control

Introduction

Onyx EZ Button Functions

Up and Down Buttons

Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight menu items.

Left and Right Buttons

Press to search for channels by category.

Power Button

Press to turn Radio on and off.

Select Button

Press to confirm selection of highlighted items in a menu or list.

Menu Button


Press to access advanced features and configuration options; in configuration options, press and hold to return to main display screen.

FM Button

Press to access and cycle through FM presets (Vehicle Dock only).

Jump Button

Press to directly access traffic and weather for the city of your choice; or press it to go back to the previous channel to which you were listening.

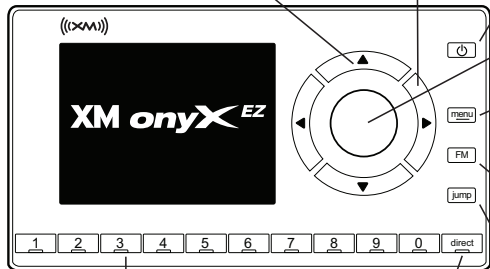

Number Buttons

Press to tune to a stored favorite channel, press and hold to store a favorite channel; also enter a channel number.

Direct Button


Press first before entering the channel number, to directly tune to a channel.

Introduction

Home Dock

Color-Coded Connections

The color-coded Home Dock makes it simple to connect. Just match the colors on the cable ends to the colors on the dock to see what goes where.

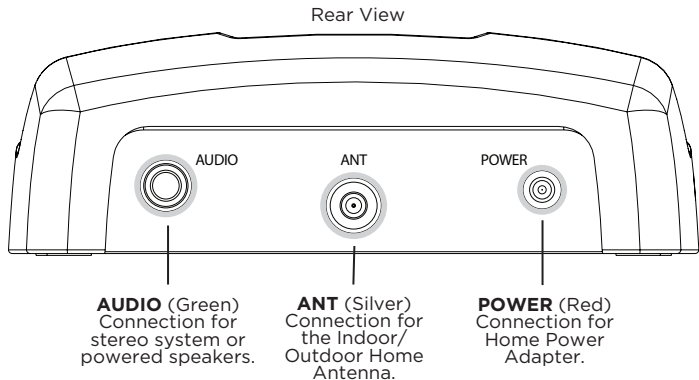

Introduction

Remote Control Functions

Power Button

Press to turn Radio on and off.

Not Used

Select Button

Press to confirm selection of highlighted items in a menu or list.

Not Used

— / FM Button

FM: Press to access and cycle through FM presets (Vehicle Dock only).


— : Not used.

Number Buttons

Press to tune to a stored favorite channel, press and hold to store a favorite channel; also enter a channel number.

Jump Button

Press to go back to the previous channel to which you were listening; or press it to directly access traffic and weather for the city of your choice.

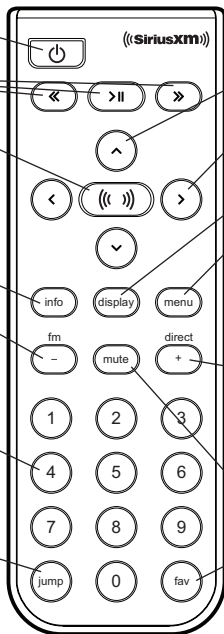

Arrow Buttons Up/Down

Press to preview and tune to channels through the channel lineup; also press to scroll through lists and highlight menu items.

Arrow Buttons Left/Right

Press to search for channels by category.

Not Used

Menu Button

Press to access advanced features and configuration options; in configuration options, press and hold to return to main display screen.

+ / Direct Button

Direct: Press first before entering the channel number, to directly tune to a channel.

+ : Not used.

Mute Button

Press to silence XM audio.

Not Used

Home Installation

There are several parts to setting up your Home Kit. Follow these 4 steps for an easy installation.


Step 1: Connect the Home Dock and Dock the Onyx EZ Radio

When installing the Home Dock in your home, choose a location in close proximity to your stereo system or powered speakers, and also where the cable from the Indoor/Outdoor Home Antenna can reach the Home Dock. The location should be easily accessible and provide good visibility of the display, but should not be located where it will be in direct sunlight, which will affect the visibility of the display screen.

A. Connect the Indoor/Outdoor Home Antenna

Once you have selected a location, connect the antenna to the **silver ANT** connector at the rear of the Home Dock.


We will work on the location and aiming of the antenna in the next step.

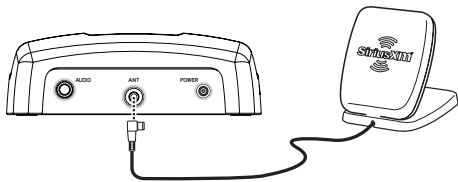

Home Installation


B. Connect the Home Power Adapter

Connect the Home Power Adapter to the **red Power** connector at the rear of the Home Dock, and plug it into a wall outlet.

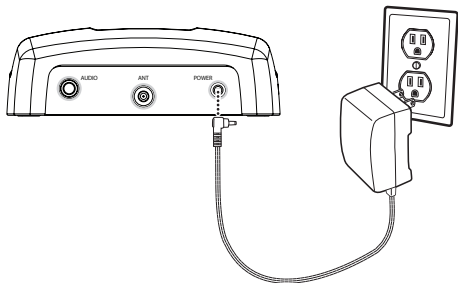

C. Dock the Onyx EZ Radio

Place your Onyx EZ Radio into the Home Dock and press the **Power button** to turn it on.

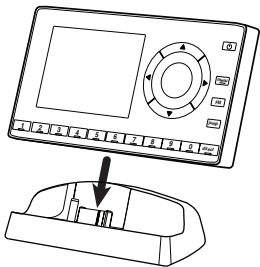


Home Installation

Step 2: Place and Aim the Indoor/Outdoor Home Antenna

To begin, try experimenting with the Indoor/Outdoor Home Antenna to get a feel for the reception in your location. In major metropolitan areas, you might find that you get great reception in several locations without worrying too much about aim and placement. If two to three bars of signal strength are being displayed at the lower left corner of the screen, continue with step 3 on page 18.

If there is not at least two bars of signal strength displayed, refer to “Signal Indicator” on page 39 and access the **Signal Indicator** screen to see a visual indication of signal strength. Move the antenna around the room or from room to room. Aim it from different windows. If you find a location where you are receiving good Satellite or Terrestrial signal strength (or both), press and hold **menu** to exit the Signal Indicator screen. Onyx EZ should be tuned to channel 1, the XM Preview channel. Continue with the step 3 on page 18.

If you are unable to find a location where you are receiving good Satellite or Terrestrial signal strength, try some of the suggestions which follow.

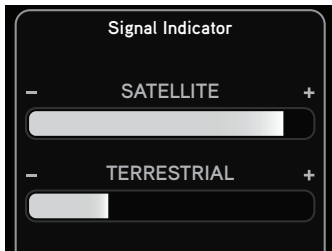

Home Installation


Other Indoor/Outdoor Home Antenna Installation Suggestions



NOTE! If the signal reception is low, intermittent, or **Acquiring Signal** is displayed, after a period of time Onyx EZ may enter demo mode. Demo mode is a feature for retail display purposes, and Onyx EZ will automatically exit demo mode once it begins to receive a good signal. To exit demo mode immediately, press and hold the **Select button** for 10 seconds. Demo mode can be disabled, if desired, by following the instructions in “Demo Mode” on page 41.

Try moving the Indoor/Outdoor Home Antenna closer to a window, ideally one that is facing due south.

Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing? Move the antenna closer to the window.

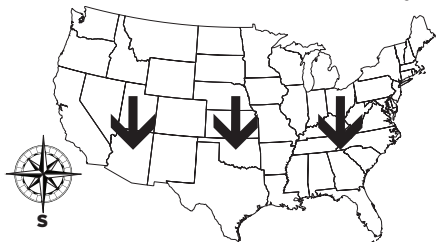

TIP! Still not sure which way is south or where to place your Indoor/Outdoor Home Antenna? Look up your location on an online mapping website that offers satellite views of street addresses where you can easily see which way is south, and what window may offer an unobstructed view of the sky.

Another easy method is to start at any window, then work from window to window in a simple pattern to find the window gives the best signal strength. Note that the antenna must also have an unobstructed view, with no trees or buildings blocking its aim. If the antenna is aimed through a window, be aware that blinds, screens, or any other non-glass elements such as thermal insulation can sometimes cause reception issues. If this is the case, you may want to use another window or place the antenna outside of the window.

Home Installation


If you find a window that gives you good signal strength, you can place the antenna on the windowsill. The antenna may need to be placed on something to raise it above the level of the window frame.

If you don't have a window where you receive a consistent signal, or placing the antenna in a window is not a practical solution for you, **BETTER** reception can be achieved by placing the antenna outside on a window ledge, porch, table, or patio. The location you choose should provide the antenna with a clear view of the southern sky.

If none of the previous solutions work for you, then the **BEST** reception can be achieved by mounting the antenna outdoors, with a clear view of the southern sky.

Note that you will want to consider any potential hazards when you choose the mounting location, and possibly consider professional installation. Sirius XM Radio Inc. is not liable for any damages.

To mount the antenna, you will need four screws (not included) with a 1/4" head (e.g., an M3 screw), and that are suitable for the material onto which you are affixing the antenna, (e.g., wood, metal,

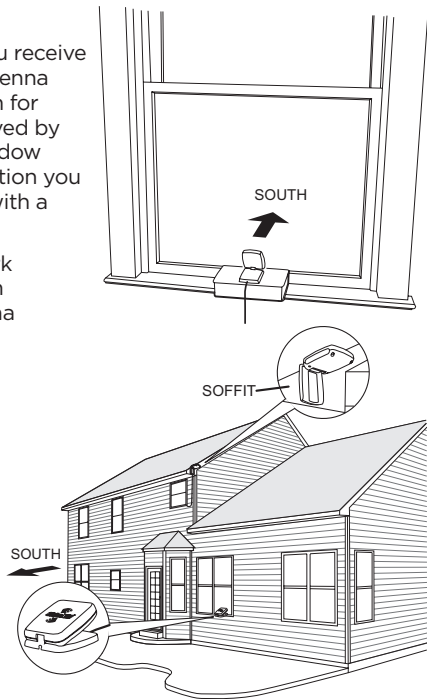



Home Installation

etc.). The screws should be spaced 1-3/8" apart horizontally and 1-1/8" vertically. Refer to the template on "Indoor/Outdoor Home Antenna Template" on page 62.

Once you have found a suitable location for the antenna, route the antenna cable to the Home Dock. Be sure you avoid any obstructions that could crimp, kink, or twist the cable. Use protective grommets wherever rough openings are encountered. If the antenna is installed outdoors, route the cable from the antenna location to the interior of the home, working the cable through the basement, under a window sill, etc., and make adjustments to take up cable slack as necessary. Reconnect the antenna to the **silver ANT** connector at the rear of the Home Dock.




TIP! If your Indoor/Outdoor Home Antenna's cable isn't long enough, visit www.siriusxm.com/accessories, or your favorite retailer, and consider a 50 ft. Home Antenna Extension Cable or a Wireless Home Signal Repeater.

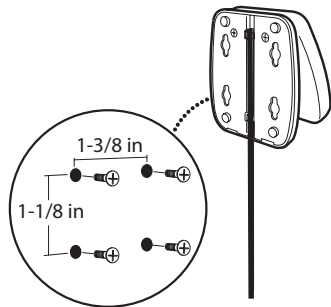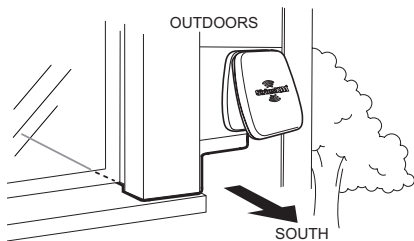

Verify that the antenna is pointed south, and that the antenna's view of the sky is not blocked by a tree, a building, a bridge, or anything else. Try various locations until you find one where are receiving a good signal.

Home Installation

The Indoor/Outdoor Home Antenna's reception can also be tweaked by opening or closing the antenna clamshell, and turning the antenna. While observing the signal strength, make small adjustments to the angle of tilt of the clamshell until the highest possible signal strength is achieved. If you have not wall-mounted the antenna, turn the antenna slightly to the right or left and observe if the signal strength increases. For each tweak, allow a few seconds in each position to determine if the signal strength increases.

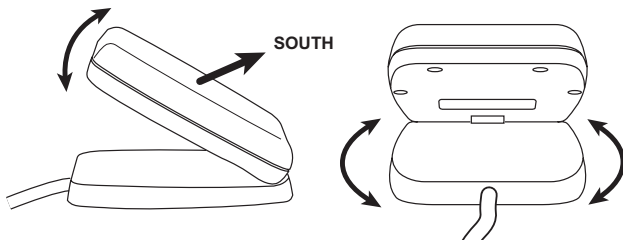

If either the Satellite or the Terrestrial signal bar (or both) are more than half filled, you are receiving a good signal and are done aiming the antenna. Exit the **Signal Indicator** screen by pressing and holding **menu**. If Onyx EZ is displaying channel 1, the XM Preview channel, with two to three bars of signal strength displayed at the lower left of the screen, continue with the next step, otherwise, continue trying other locations for the antenna.

1

XM Preview

866-635-2349

siriusxm.com



Home Installation


Step 3: Connect the Home Dock to a Stereo System or Powered Speakers

The Home Dock can be connected to your stereo system, or to a set of powered speakers. If you are connecting to a stereo system, see the following section. If you are connecting to a set of powered speakers, see “To Connect the Home Dock to Your Powered Speakers” on page 19.

To Connect the Home Dock to Your Stereo System

The Home Dock can be connected to your stereo system through the **AUX In** or **LINE In** connection of your stereo system, using the provided Stereo Audio Cable.

1. Take the provided Stereo Audio Cable and connect the single 1/8" (3.5 mm) connector to the **green AUDIO** connector at the rear of the Home Dock.
2. Connect the white left and red right Stereo Audio Cable connectors (“L” and “R” are also on each respective tip) to any available input other than PHONO on your stereo system. (If your stereo’s inputs are marked red and black, simply connect the white plug to the black input.)

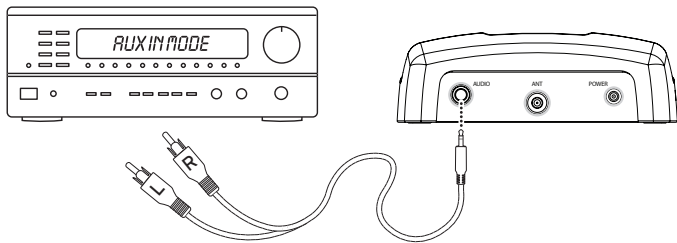


Home Installation

3. Turn the stereo system On, and make sure you select the correct input on your stereo system for the **AUX In** or **LINE In** connection.
4. If you have connected everything correctly, and you are receiving the XM signal, you should hear the XM audio from channel 1.
5. The audio level of your Radio can also be adjusted, if necessary. Refer to “Set Audio Level” on page 38 to adjust the audio level. The installation is complete.

To Connect the Home Dock to Your Powered Speakers

The Home Dock can be connected directly to a set of powered speakers.

1. Connect the 1/8" (3.5 mm) connector from the powered speakers to the **green AUDIO** connector at the rear of the Home Dock.
2. Plug the powered speakers into a wall outlet.
3. Turn On the powered speakers.
4. If you have connected everything correctly, and you are receiving the XM signal, you should hear the XM audio from channel 1.

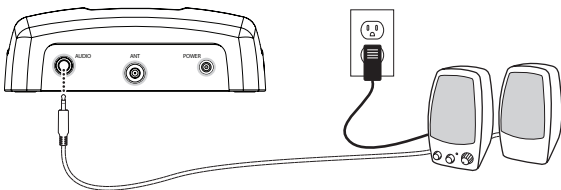

5. The audio level of your Radio can also be adjusted, if necessary. Refer to “Set Audio Level” on page 38 to adjust the audio level. The installation is complete.

Home Installation

Step 4: Subscribe

You can either follow the general activation and subscription process or use the on-board activation guide to activate your Onyx EZ and subscribe to the XM service.

General activation and subscription process:

1. Make sure your Onyx EZ is turned on, tuned to XM Preview channel 1, and receiving the XM signal so that you can hear the XM audio.
2. Make a note of the XM Radio ID. You can find it:
 - by selecting **Radio ID** in menu items
 - on channel 0 (zero)
 - on a label on the bottom of the gift box
 - on the label on the back of your Onyx EZ



*The phone number shown above may differ from the one shown on your Onyx EZ. All numbers are valid.



NOTE! The XM Radio ID does not use the letters I, O, S, or F.

3. To subscribe:
 - Online: Go to **www.siriusxm.com/activatenow** to access or set up an online account, subscribe to the service, and activate your Radio.
OR
 - By phone: Call **1-866-635-2349**.

Activation usually takes 10 to 15 minutes after you have completed the subscription process, but may take up to an hour. We recommend that your Radio remain on until subscribed. Once subscribed, the Radio will receive and you can tune to channels in your subscription plan.


Home Installation

Press ▲ or ▼ to tune to other channels, and ◀ or ▶ to browse the different categories of channels. Learn what all the buttons do by turning to “Navigation Basics” on page 23.

Activation guide:

For your convenience, Onyx EZ has an on-board activation guide. You can activate your radio and subscribe to the XM service by using this guide, where you will be guided step-by-step through the subscription process. To access and use the guide, simply follow these steps:


1. Turn Onyx EZ on and press the **menu button**.
2. **Activate Radio** will be highlighted. Press the **Select button**.
3. Follow the directions on each successive screen until you complete the subscription process.

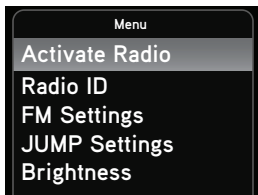

Using Your Onyx EZ

The Main Display

When listening to a channel, information about the channel and what is currently playing is displayed.

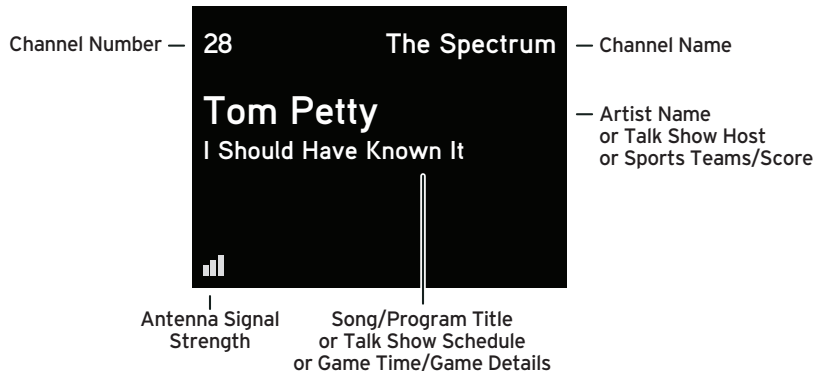

Using Your Onyx EZ

Navigation Basics

Power Button

Pressing the **Power button** turns Onyx EZ On or Off.



Navigation Buttons

Pressing **Left**, **Right**, **Up**, and **Down** navigates through various features and functions of Onyx EZ.



- **Left ◀ or Right ▶ button:** Displays the channel categories such as Rock, Pop, Sports, Talk/News, etc. Repeated presses cycle through the categories one at a time. Also, decreases or increases the settings of various menu options such as Brightness, Audio Level, etc.
- **Up ▲ or Down ▼ button (press and release):** Immediately tunes to the next or previous channel in the channel lineup. Also, scrolls through lists and highlights an item in the list.
- **Up ▲ or Down ▼ button (press and hold):** Continuously scrolls through any list. While on the main display screen, continuously scrolls through the channel lineup and briefly displays the information of each channel. When the button is released, Radio tunes to the last channel it had scrolled to in the channel lineup.

Select Button

Pressing the **Select button** selects a highlighted item in a list and confirms settings.



Using Your Onyx EZ

Menu Button



Pressing **menu** displays various options to make setup and feature changes. Pressing **menu** when in menu options returns to the previous menu option screen until menu options is exited. Pressing and holding **menu** returns to the main display screen in most instances.

FM Button (Applies to Vehicle Dock)



Pressing **FM** provides easy tuning of FM presets for optimized *PowerConnect* performance. Repeatedly pressing **FM** displays and cycles through the list of preset FM channels one at a time. The Radio automatically tunes to the displayed FM channel. Pressing and holding **FM** accesses the FM Settings menu. It is not available when Aux In Cable or Cassette Adapter is used for audio connection.

Jump Button



Depending on how it is configured, pressing **jump** either tunes to the channel broadcasting traffic and weather conditions of a city of your choice, selected from a list of the 22 most congested cities, or tunes to the previous channel that was being played. Pressing it again returns it to the original channel.

Direct Button



Pressing **direct** prompts for the entry of a channel number using the number buttons. Once the channel number is entered, the Radio directly tunes to the new channel.

Number Buttons



Each number button stores a favorite channel in its button location and provides one touch access to it afterward. Number buttons also directly tune to a channel when the channel number is entered after pressing **direct**.

Using Your Onyx EZ

Listening to Satellite Radio

Tune to a channel:

1. Press and release ▲ and ▼ to immediately tune to the next or previous channel.
2. Press and hold ▲ and ▼ to quickly scroll through the channels. Release to tune to the channel that is displayed.



TIP! You can also use the Remote Control to control the Radio.

View a category:

Channels are organized into categories to make it easier for you to find the ones that suit your taste.

1. To view a category press ◀ or ▶.
2. Scroll through the category using ▲ and ▼, and find the channel you want.
3. Press the **Select button** to select the channel, or press ◀ or ▶ for the previous or next category.



TIP! To briefly listen to each channel in the category, scroll to and highlight Scan at the end of the category list and press the **Select button**. Refer to “Scanning Channels in a Category” on page 28 to learn more about Scan.

Using Your Onyx EZ

Direct Tune

A channel can be tuned directly by entering the channel number using the number buttons.

1. To directly tune to a channel press **direct**.
2. Use the number buttons **0-9** to enter the channel number and wait a moment until the channel is tuned, or press the **Select button** to immediately tune to the channel.



Jump

Depending upon how you configure the mode, pressing **jump** will either go to the traffic and weather channel for the city of your choice which you select from a list of the 22 most congested cities, or go to the last channel to which you were listening.



TIP! By default **jump** is configured to tune to a traffic/weather channel. To select a city for traffic and weather, or to configure **jump** to tune to the last channel to which you were listening, refer to “Jump Settings” on page 36.

Return to Main Display Screen

Pressing and holding **menu** in most instances will return you to the main display screen. In some cases, you may need to follow the instructions on the display screen.

Using Your Onyx EZ

Favorite Channels

You can set up to 10 of your favorite channels so you can easily access them. Each favorite channel can be assigned to a number button.

To assign a favorite channel to a number button:

1. Tune to the desired channel.
2. Press and hold a number button between **0-9** that you want to assign to that favorite channel. An advisory with the channel number and name will be displayed on the screen confirming that the channel has been assigned.


Favorite Saved

10 The Pulse
saved as
Favorite 1

To listen to a favorite channel:

1. Press the number button between **0-9** that was assigned to the desired favorite channel. Onyx EZ will tune to that channel.



TIP! When you are at the main display screen, press  to see your list of favorite channels. Scroll to highlight a favorite and press the **Select button** to listen to that channel.



Using Your Onyx EZ

Scanning Channels in a Category

You can scan a category and listen to each channel for 10 seconds before Onyx EZ automatically tunes to the next channel. If you want to stay tuned to the channel being played and stop the scan, just press the **Select button**.

To scan a category:

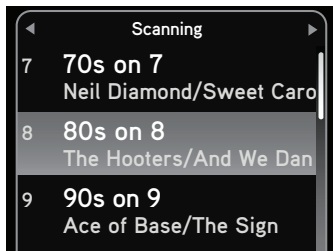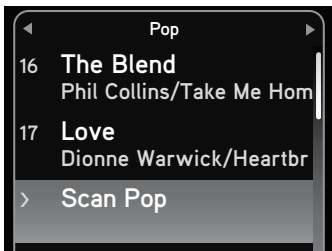


1. Press ◀ or ▶ until the desired category is displayed.
2. Scroll down to highlight the last item in the category which will be **Scan** and the category name.
3. Press the **Select button**. The scan will begin.
4. Press the **Select button** to stop the scan, and to continue to listen to the channel currently being played, or press ▼ or ▲ to return to the channel you were listening to before you began the scan.





Special Features

Parental Controls


Onyx EZ has a parental control feature which allows you to lock access to channels, or lock access to an entire category. A 4-digit code controls access to the locked channel or locked category.

When you browse a category, the number of the locked channel will be shown but not the artist and song/program information. Instead, a lock icon  and the word “Locked” is shown. If you scroll through the channels using  and , the locked channels are skipped and are neither displayed, nor tuned.

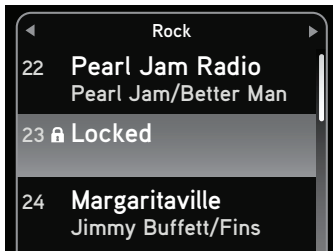



If you attempt to tune to a locked channel, either by using direct tune or through the category list, you'll be prompted to enter your 4-digit code. When the correct code is entered, you'll be able to tune to and listen to the channel. All locked channels become unlocked and remain unlocked until you turn Onyx EZ Off, and back On. In the category list, the previously locked channels will show an unlocked icon .

To turn Parental Controls On (or Off):

1. Press **menu**.
2. Press  to scroll to and highlight **Parental Controls**. Press the **Select button**.
 - If this is the first time you want to turn on Parental Controls, **Parental Controls** will be highlighted. Press the **Select button**. You will be prompted to select a 4-digit code:

Special Features

- i. For each digit, press one of the **0-9** keys and then press **▶** to advance to the next digit. (Press **◀** if you need to go back and edit a previous digit.)
 - ii. When you have selected all 4 digits of your code press the **Select button**.
 - iii. The Code Confirmation screen will be displayed. For your records, write down the code you have selected. Press the **Select button**. Continue with step 3.
- If you had previously selected a 4-digit code you will be prompted to enter your code:
- i. For each digit, press one of the **0-9** keys and then press **▶** to advance to the next digit. (Press **◀** if you need to go back and edit a previous digit.)
 - ii. When you have selected all 4 digits of the code press the **Select button**.
3. At the “Parental Controls” screen, **Parental Controls** will be highlighted. Press the **Select button** to turn parental control On (or press the **Select button** to turn parental control Off).
 4. Press and hold **menu** to return to the main display screen.

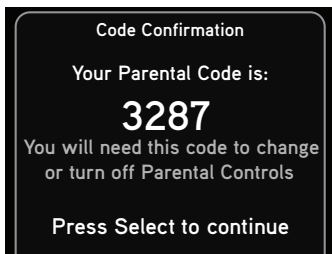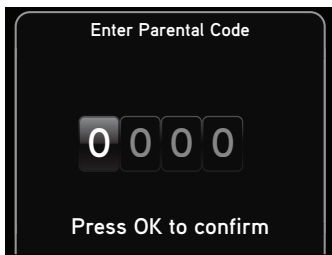


Special Features


To lock (or unlock) channels or categories:

1. Press **menu**.
2. Press ▼ to scroll to and highlight **Parental Controls**. Press the **Select button**.
3. You will be prompted to enter the 4-digit code. For each digit, press one of the **0-9** keys and then press ► to advance to the next digit. (Press ◀ if you need to go back and edit a previous digit.)
4. When you have entered all 4 digits of the code press the **Select button**.
5. If **Parental Controls** is shown as Off, press the **Select button** to turn it On, otherwise continue with the next step.
6. At the “Parental Controls” screen, Press ▼ to scroll to and highlight **Locked Channels**. Press the **Select button**.
7. A list of all the categories and the channels in each category will be displayed. Press ▼ and ▲ to scroll to and highlight a channel or category you want to lock. Press the **Select button**. A lock icon 🔒 will be displayed to the left of the channel or category you locked. (To

Locked Channels

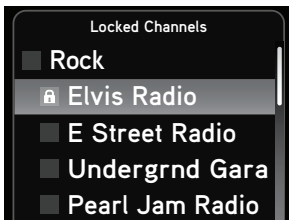

Locked Categories

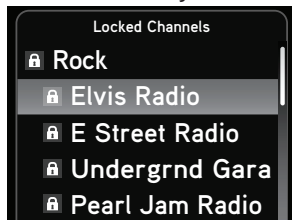


Special Features

unlock a locked channel or category, simply highlight the locked channel or category and press the **Select button**. The lock icon will disappear indicating the channel or category is unlocked.)

8. You can continue to lock and unlock as many channels or categories as you wish. When you are finished, press and hold **menu** to return to the main display screen.

To change your code:

1. Press **menu**.
2. Press ▼ to scroll to and highlight **Parental Controls**. Press the **Select button**.
3. You will be prompted to enter your existing 4-digit code. For each digit, press one of the **0-9** keys and then press ► to advance to the next digit. (Press ◀ if you need to go back and edit a previous digit.)
4. When you have entered all 4 digits of the code press the **Select button**.
5. If **Parental Controls** are shown as Off, press the **Select button** to turn it On, otherwise continue with the next step.
6. At the "Parental Controls" screen, Press ▼ to scroll to and highlight **Change My Code**. Press the **Select button**.
7. You will be prompted to enter a new 4-digit code. For each digit, press one of the **0-9** keys and then press ► to advance to the next digit. (Press ◀ if you need to go back and edit a previous digit.)
8. The Code Confirmation screen will be displayed. For your records, write

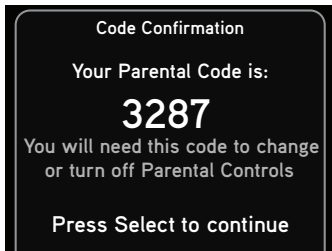

Special Features

down the code you have selected. Press the **Select button**.

9. Press and hold **menu** to return to the main display screen.

To listen to a locked channel:


There are two ways to tune to a channel which has been locked. The first is to directly tune to the locked channel, and the second is to select the locked channel from a category list.

1. Directly tune to or select the locked channel:

To directly tune to a locked channel:

- i. Press **direct** and enter the channel number using the **0-9** keys.

To select a locked channel from the category list:

- i. Press ◀ or ▶ to view the category list of the locked channel to which you wish to tune.
 - ii. Press ▼ to scroll to and highlight the locked channel. Press the **Select button**.
- 2 You will be prompted to enter your existing 4-digit code. For each digit, press one of the **0-9** keys and then press ▶ to advance to the next digit. (Press ◀ if you need to go back and edit a previous digit.)
 - 3 When you have entered all 4 digits of the code, press the **Select button**. If your code is correct the channel will be tuned. All locked channels become unlocked and remain unlocked until you turn Onyx EZ Off, and back On. In the category list, the previously locked channels will show an unlocked icon .

Where Else Can You Use Your Onyx EZ?

SiriusXM offers a variety of accessories that allow you to adapt your Onyx EZ to your lifestyle and enhance your listening experience. With these accessories, you can effortlessly take your Satellite Radio listening experience from your home or office to your vehicle or on the go — all with a single subscription.

- In Your Other Vehicles – With Vehicle Kits, you can enjoy your Onyx EZ in other vehicles.
- In Your Office, Other Homes, etc. – With additional Home Kits, you can play your Onyx EZ through an existing stereo system or powered speakers where you work, or in other homes.
- In Almost Any Location You Like – With a portable Sound System you have the freedom to listen to your Onyx EZ where and when you want, from your kitchen or den, to the office, to outside on the deck, or at a picnic.

For more information on XM accessories or to purchase an accessory, please visit your local retailer or **www.siriusxm.com/accessories**.

Configuring Your Onyx EZ

Radio ID

Your Onyx EZ has an 8 character alphanumeric ID which uniquely identifies your Radio. This ID is used during the subscription process.

To display the Radio ID:

1. Press **menu**.
2. **Radio ID** will be highlighted. If it is not highlighted, press ▼ to scroll to and highlight **Radio ID**. Press the **Select button**. The Radio ID will be displayed.
3. Press and hold **menu** to return to the main display screen.





Configuring Your Onyx EZ

Jump Settings

The **jump** button can be configured to either jump to the traffic and weather for the city of your choice from a list of 22 of the most congested cities, or to jump back to the last channel to which you were listening. When configuring for traffic/weather, you'll need to select your city.

To configure jump:


1. Press **menu**.
2. Press ▼ to scroll to and highlight **JUMP Settings** and press the **Select button**.
3. **Mode** will be highlighted with either **Traffic/Weather** or **Last Channel**. If you want to change the mode, press the **Select button**. Otherwise, just leave it as is. (Repeatedly pressing the **Select button** toggles between the choices.)
4. If you have selected **Last Channel**, press and hold **menu** to return to the main display screen. If you have selected **Traffic/Weather** continue with step 5.
5. Press ▼ to scroll to and highlight **Set Location** and press the **Select button**.
6. A list of cities will be displayed. Press

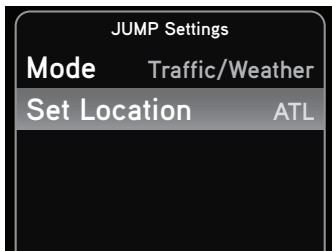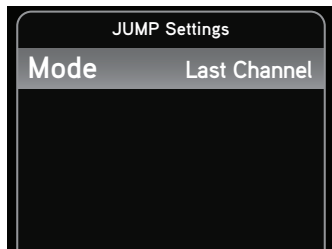

Configuring Your Onyx EZ

▼ to scroll to and highlight your desired location and press the **Select button**.

7. The **JUMP Settings** screen will display the location you selected. Press and hold **menu** to return to the main display screen.

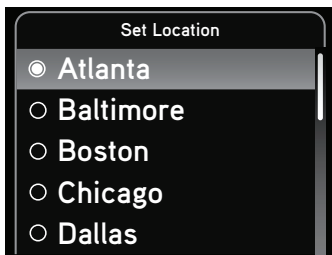

Set Brightness or Contrast

To change the display's brightness or contrast:

1. Press **menu**.
2. Press ▼ to scroll to and highlight **Display Settings** and press the **Select button**.
3. Press the **Select button** to change the brightness, or press ▼ to scroll to and highlight **Contrast** and press the **Select button**.
4. Press ◀ to decrease or ▶ to increase the brightness or contrast of the display.
5. Press the **Select button** to confirm the brightness or contrast setting.
6. Press and hold **menu** to return to the main display screen.



Configuring Your Onyx EZ


Set Audio Level

The audio level of Onyx EZ can be adjusted when an audio connection is made between the dock and the stereo system or powered speakers. Audio level is used to adjust Onyx EZ's volume level to match the volume of other audio sources you may use, such as a CD player, or an MP3 player, etc.

Do not use the audio level as a volume control. Use the volume control on your stereo system or powered speakers instead.

To adjust the audio level:

1. Press **menu**.
2. Press **▼** to scroll to and highlight **Audio Level** and press the **Select button**.
3. Press **◀** to decrease or **▶** to increase the audio level.
4. Press the **Select button** to confirm the new audio level.
5. Press and hold **menu** to return to the main display screen.

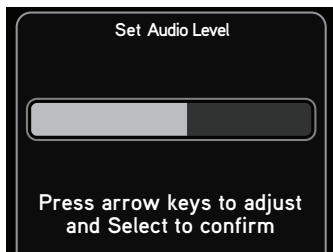

Configuring Your Onyx EZ


Signal Indicator

For best reception, your antenna should have an unobstructed view of the XM satellites. In large cities, there are terrestrial transmitters (ground repeaters) to help increase the signal coverage.

Your Onyx EZ can display the strength of the satellite and terrestrial signals being received.

To display the signal strength:

1. Press **menu**.
2. Press ▼ to scroll to and highlight **Signal Indicator** and press the **Select button**.
3. The Satellite and Terrestrial bars show the strength of the signal being received.
4. Reposition the antenna if you are having trouble receiving the signal.
5. Press and hold **menu** to return to the main display screen.

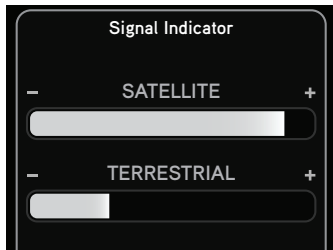

Configuring Your Onyx EZ

Factory Settings

The factory settings menu has two choices, **AUX Detect** and **Restore Defaults**. **AUX Detect** applies to the Vehicle Dock only (refer to page 48).

Restore Defaults


You can clear all of your personal settings, such as favorite channels, color theme, etc., and return the Radio to its original out-of-the-box settings

To reset Onyx EZ to factory defaults:



NOTE! Restoring defaults permanently removes all personal settings.

1. Press **menu**.
2. Press ▼ to scroll to and highlight **Factory Settings** and press the **Select button**.
3. Press ▼ to scroll to and highlight **Restore Defaults** and press the **Select button**.
4. A warning screen will be displayed. If you are certain that you want to reset your Onyx EZ to the default settings, press the **Select button** to confirm.
5. If you want to cancel, press **menu** to return to **Factory Settings**.

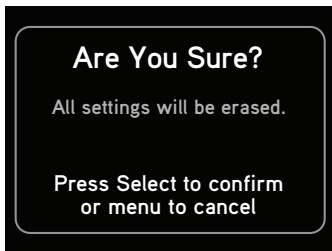

Configuring Your Onyx EZ


Demo Mode

Your Onyx EZ has a demo mode that starts playing when, for a prolonged period of time (more than 5 minutes), the Radio either detects it's not connected to the antenna, or the antenna stops receiving a signal. It disappears when the antenna is connected properly or when the Radio starts receiving a signal. You can also exit demo mode at any time, by pressing and holding the **Select button** for 10 seconds. If desired, you can also manually put Onyx EZ in demo mode.

The ability for Onyx EZ to enter demo mode is enabled by default. If you don't want Onyx EZ to ever enter the demo mode, you can disable the demo feature. You can enable it again at another time if desired.


To enable or disable the demo mode:

1. Press **menu**.
2. Press ▼ to scroll to and highlight **Demo Mode** and press the **Select button**.
3. **Status** will be highlighted. Press the **Select button** to toggle the setting between enabled or disabled. (Repeatedly pressing the **Select button** toggles between the choices.)
4. If you have selected disabled, press and hold **menu** to return to the main display screen. If you have selected enabled continue with step 5.
5. Press ▼ to scroll to and highlight **Enter Demo Mode** and press the **Select button**. The demo mode will start in 10 seconds.

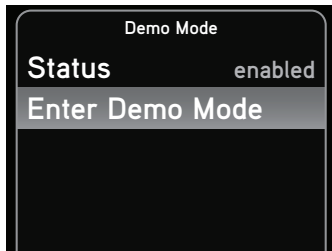

Configuring Your Onyx EZ

6. To exit demo mode at any time, press and hold the **Select button** for 10 seconds.

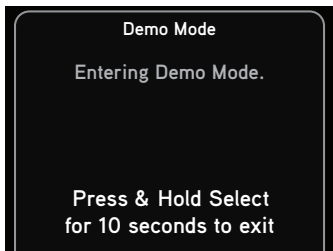

Using Onyx EZ With a Vehicle Dock

This section contains information applicable only when Using Your Onyx EZ with a Vehicle Dock.

- If you purchase an XM Dock and Play *PowerConnect* Additional Vehicle Kit to use your Onyx EZ in your vehicle, follow the instructions included with the kit for installation. When those instructions refer you to the User Guide for your Radio for additional instructions, you will find the information in this User Guide, in these sections:
 - “Find Available FM Channels in Your Area” on page 43
 - “Set and Select an FM Channel” on page 46
 - “FM Presets” on page 48
 - “Turn FM Transmitter On/Off” on page 50
- If you decide to use a Vehicle Dock from a Universal Xpress Car Kit, you'll need to do some additional configuration found in this User Guide in the section:
 - “Using the Vehicle Dock From the Universal Xpress Car Kit” on page 49.

For troubleshooting information when using a Vehicle Dock, refer to the User Guide for the Vehicle Dock.

Find Available FM Channels in Your Area

Before attempting any of the procedures below, you should park your vehicle in a safe location. Do not attempt to set up your FM channels or any Onyx EZ function while driving.

PowerConnect allows you to listen to SiriusXM through your existing vehicle radio. You will first need to find an available FM channel, which is a channel that is not being used by an FM radio station in your area. When you tune

Using Onyx EZ With a Vehicle Dock

your vehicle's FM radio to an available channel, you should only hear static or silence – not talk or music.

Once you have found an available FM channel, you'll need to tune Onyx EZ and your vehicle's radio to the same FM channel to receive XM audio through your vehicle's radio.

We recommend one of the following methods to find an available FM channel:

1. Use the SiriusXM FM Channel Finder

Use the SiriusXM FM Channel Finder at www.siriusxm.com/frequency. Go to the website and enter your zip code. The Channel Finder will suggest a list of available FM channels in your area. For convenience, write down or print out the list.

Tune Onyx EZ to a favorite XM channel (or to channel 1, if it's not activated). Turn on your vehicle's FM radio. Pick the first FM channel on your Channel Finder list and tune the FM radio to that channel. If you do not hear a local FM station broadcast, then tune Onyx EZ to the same FM channel. (Refer to "Set and Select an FM Channel" on page 46.) You should hear the XM channel through your vehicle's radio. If you are satisfied with the sound quality, you're done! If this FM channel doesn't work well for you, work down the list until you find an FM channel that allows you to hear XM clearly.

OR

2. Manually tune through your local FM channels

Manually tune through your local FM channels on your vehicle's FM radio. Turn on your vehicle's FM radio. Start at 88.1 and use the 'Manual' tune function on your vehicle's FM radio to tune through each FM channel one-by-one (88.1 followed by 88.3 etc.) to locate channels that aren't being used by a local FM radio station. Write down each FM

Using Onyx EZ With a Vehicle Dock

channel that has only static or silence on it, until you reach 107.9. Once you have created your list of available FM channels, you will need to find the one that provides the best match for Onyx EZ.

Tune Onyx EZ to a favorite XM channel (or to channel 1, if it's not activated). Pick the first FM channel on your list and tune the FM radio to that channel. Then tune Onyx EZ to the same FM channel. (Refer to "Set and Select an FM Channel" on page 46.) You should hear the XM channel through your vehicle's radio. If you are satisfied with the sound quality, you're done! If this FM channel doesn't work well for you, work down the list until you find an FM channel that allows you to hear XM clearly.



NOTE! You may find an FM channel with static or silence that does not work with Onyx EZ. It is possible that some type of inaudible interference is present that prevents reception of the XM broadcast. Your only options are to use another FM channel or a different audio connection method.



TIP! If you regularly drive from one location to another, such as your daily commute, you may need to use different FM channels along your route for best performance. If this is the case, we recommend saving the best FM channels as presets on your FM radio and Onyx EZ. Then you simply select and match the best channel for the area you are in.



TIP! It will be much more difficult to find available FM channels in large cities than in most suburban or rural locations. A direct audio connection using the Aux In Cable, Cassette Adapter, or professional installation is your best solution if you drive in or near large metropolitan areas.



NOTE! The SiriusXM FM Channel Finder relies on data from the Federal Communications Commission. The data may not reflect the latest stations in your area. In addition, local geography and weather conditions can impact reception, so your results may be different from the list.



NOTE! The performance of FM radios are different, based on manufacturer and vehicle style. Some may not work well with the type of FM transmitter used by Onyx EZ. This is why we recommend a direct audio connection using the Aux In Cable or Cassette Adapter if they can be used in your vehicle. Professional installation can also resolve almost any performance issue.

Using Onyx EZ With a Vehicle Dock

Set and Select an FM Channel

Onyx EZ allows you to easily store (i.e., preset) up to 5 different FM channels. At any time, you can select any one of these 5 FM presets to hear SiriusXM through your existing vehicle radio. Having a choice of 5 FM presets also makes it easy to switch to the appropriate FM channel as you travel from one area to another. Each FM preset is stored in its own storage location. You can easily add or edit the FM preset in any one of the 5 storage locations.



IMPORTANT! Onyx EZ and the vehicle's FM radio need to be tuned to the same FM channel in order to hear the audio.



TIP! The FM 1 storage location is preset with FM channel 97.9.

To set and select an FM preset:

1. Press **menu**.
2. Press ▼ to scroll to and highlight **FM Settings** and press the **Select button**.
3. **FM Channels** will be highlighted. If it is not highlighted, press ▼ to scroll to and highlight **FM Channels**. Press the **Select button**.
4. Press ▼ to scroll to and highlight the storage location (FM 1 to FM 5) you want to set and press the **Select button**. You can choose among the following options:
 - i. If the chosen storage location is empty (denoted by “---”), or if the storage location contains the FM preset currently being used

FM Channels	
FM 1	97.9
FM 2	99.3 current
FM 3	103.7
FM 4	---
FM 5	---

Using Onyx EZ With a Vehicle Dock

(denoted by “current”), then the FM channel tuning screen is displayed.

- ii. If the chosen storage location has an FM preset that is not currently being used, and you want to edit it, **Edit Channel** is highlighted. Press the **Select button**. The FM channel tuning screen is displayed.
 - iii. If the chosen storage location has an FM preset that is not currently being used, and you want to start using it, press ▲ to highlight **Start Using** and press the **Select button**. Skip to step 7.
4. Press ◀ and ▶ to tune to the desired FM channel in steps of .2, i.e., 99.3 to 99.5. Press ▼ and ▲ to tune to the desired channel in steps of 1, i.e., 99.3 to 100.3. Press the **Select button** to select the FM channel.
 5. If you are editing the storage location that has the “current” FM preset, skip to step 7. Otherwise, **Start Using** will be highlighted. Press the **Select button**.



NOTE! You can also set an FM preset without having to start using it right away. Just press menu and exit the screen.

6. The chosen FM channel will be confirmed on the display screen and Onyx EZ will tune to that FM channel.
7. Set your vehicle’s FM radio to same FM channel.



IMPORTANT! You’ll first need to find a suitable FM channel that is unused or available in your area.

Edit FM Channel 2

99.3 FM



Press arrow keys to tune
and Select to confirm

99.3 FM

Set your vehicle radio to the
above channel to enable audio.

Using Onyx EZ With a Vehicle Dock

FM Presets

FM presets make it easy to quickly access stored FM channels and choose a new FM channel from them.

Use FM presets when you use *PowerConnect* or the *FMDA* to listen to your Onyx EZ through your vehicle's FM radio.

To use a different FM preset:

1. Press **FM** to display the current FM preset.
2. To display and select the next FM preset, press **FM**. The Radio will tune to the displayed FM channel. If the preset is the one you want, press **menu** or wait for the screen to time out.
3. Repeatedly pressing **FM** will cycle through the FM presets.
4. Set your vehicle's FM radio to the same FM channel.



IMPORTANT! You need to ensure that your vehicle's FM radio is tuned to the same FM channel.



TIP! To configure the list of preset FM channels, you need to find available FM channels in your area. Refer to "Find Available FM Channels in Your Area" on page 43. Next, refer to "Set and Select an FM Channel" on page 46.

99.3 FM

Set your vehicle radio to the above channel to enable audio.

103.7 FM

Set your vehicle radio to the above channel to enable audio.


Using Onyx EZ With a Vehicle Dock

Auto Shut Off

Auto Shut Off is applicable only when Onyx EZ is in a Vehicle Dock.

Onyx EZ will automatically shut off after 8 hours of inactivity, i.e., when no buttons have been pressed. This feature prevents the vehicle battery from being discharged if you forget to turn your Onyx EZ off.

When Onyx EZ is about to shut off, the message **Auto Shut Off, Started auto shut off due to inactivity** is displayed, followed by **Press any button to cancel**. If you wish to continue listening, press any button.

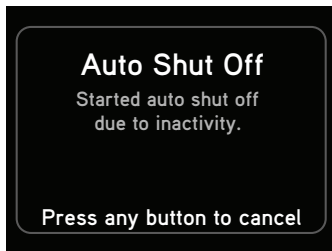

Using the Vehicle Dock From the Universal Xpress Car Kit

If you have chosen to use the Vehicle Dock from the Universal Xpress Car Kit with Onyx EZ, you will need to complete some additional installation steps. When you have completed these additional steps, you can continue with the installation of Onyx EZ.

When you are using the Universal Xpress Vehicle Dock, the screen will initially display "AUX Connected" when you power on Onyx EZ. Ignore this message. Once you have completed the steps below, it will not be displayed again.

Using Onyx EZ With a Vehicle Dock

If you are connecting the audio through your vehicle's FM radio (SureConnect or FMDA):

1. Disable the AUX Detect feature. Refer to "AUX Detect" on page 52, and disable AUX Detect.
2. Turn the FM Transmitter in Onyx EZ On. Refer to "Turn FM Transmitter On/Off" on page 50, and turn the FM Transmitter On.
3. Continue with the installation.

If you are connecting the audio using the Aux In Cable or Cassette Adapter:

1. Disable the AUX Detect feature. Refer to "AUX Detect" on page 52, and disable AUX Detect.




TIP! The FM Transmitter must be Off. To verify that the FM Transmitter is Off, refer to "Turn FM Transmitter On/Off" on page 50.

2. Continue with the installation.

Turn FM Transmitter On/Off

Turning the FM Transmitter On applies only if you are using the older model Vehicle Dock from the Universal Xpress Car Kit, and plan to use *SureConnect* or *FMDA* as the audio connection option.

You'll have to turn On the FM Transmitter under the **FM Settings** menu. However, before you can access the **FM Settings** menu, you first need to disable AUX Detect. Refer to "AUX Detect" on page 52. Once you have disabled AUX Detect, the **FM Settings** menu will be accessible.

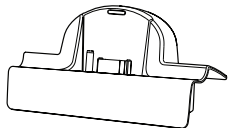

AUX Connected

Audio enabled through
auxiliary line. FM turned OFF.

Using Onyx EZ With a Vehicle Dock

To turn the FM Transmitter On:

1. Press **menu**.
2. Press ▼ to scroll to and highlight **FM Settings** and press the **Select button**.
3. **FM Transmitter** will be highlighted. Press the **Select button** to toggle the setting from Off to On.
4. The **FM Channels** menu item will now be accessible, allowing you to tune Onyx EZ and the FM radio in your vehicle to the same FM channel.





TIP! Onyx EZ is programmed with FM channel 97.9 as the default setting.

To turn the FM Transmitter Off:

If you are using the older model Vehicle Dock from the Universal Xpress Car Kit, and plan to use the Aux In Cable or a Cassette Adapter as the audio connection option, you'll have to turn the FM Transmitter under the **FM Settings** menu in Onyx EZ Off, if it was previously turned On.

1. Press **menu**.
2. Press ▼ to scroll to and highlight **FM Settings** and press the **Select button**.
3. **FM Transmitter** will be highlighted. Press the **Select button** to toggle the setting from On to Off.
4. A warning message will be displayed advising you to connect the Aux In Cable. Press the **Select button** to

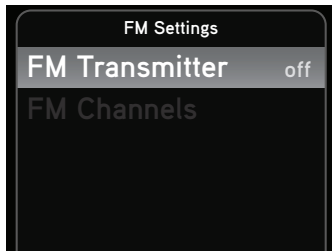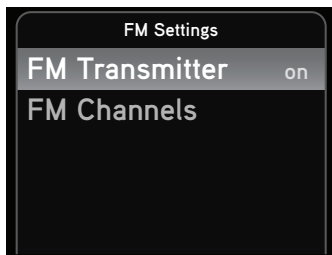

Using Onyx EZ With a Vehicle Dock

confirm that you want to turn off the FM Transmitter.

5. Press and hold **menu** to exit.

Turn OFF FM?

Please connect an AUX cable
or no audio will be available.

Press Select to confirm

AUX Detect

AUX Detect allows Onyx EZ to automatically detect a connection made to the **AUDIO** connector of the *PowerConnect* Vehicle Dock by an Aux In Cable or Cassette Adapter. AUX Detect is enabled by default.



IMPORTANT! If you are using the *PowerConnect* Vehicle Dock which came with your Onyx EZ, AUX Detect should remain enabled.

If you are using the older model Vehicle Dock from the Universal Xpress Car Kit, and plan to use *PowerConnect* or FMDA as the audio connection option, you will need to disable AUX Detect. Please read the additional instructions, “Using the Vehicle Dock From the Universal Xpress Car Kit” on page 49. Once AUX Detect is disabled, you’ll have to turn the FM Transmitter On. Refer to “Turn FM Transmitter On/Off” on page 50.

To disable AUX Detect:

(Do this only when using the older model Vehicle Dock.)

1. Press **menu**.
2. Press ▼ to scroll to and highlight **Factory Settings** and press the **Select** button.

Using Onyx EZ With a Vehicle Dock

- AUX Detect** should be highlighted and show as enabled. Press the **Select button** to toggle the setting.
- A warning screen will be displayed. Press the Select button to confirm that you want to disable AUX Detect.
- If you want to cancel press **menu** to return to **Factory Settings**. AUX Detect will remain enabled.
- AUX Detect will show as disabled. Press and hold **menu** to return to the main display screen.

Disable AUX Detect?

Disable only if using vehicle dock from Universal Xpress Car Kit. Otherwise, leave it enabled.

**Press Select to confirm
or menu to cancel**

To enable AUX Detect

(Do this when the Radio is transferred to the *PowerConnect* Vehicle Dock from an older model Vehicle Dock.)

- Press menu.
- Press ▼ to scroll to and highlight **Factory Settings** and press the **Select button**.
- AUX Detect** will be highlighted and show as disabled. Press the **Select button** again to toggle the setting to enabled.
- Press and hold **menu** to return to the main display screen.

Troubleshooting

Onyx EZ has been designed and built to be trouble-free but if you experience a problem, try this:

- Check that all connections are firm and secure.
- Make sure you have connected the Home Dock as described in this User Guide. Verify that the AC power outlet is working.

If you see this on the screen:	Try this:
Acquiring Signal	<ul style="list-style-type: none">• Move the antenna to a south-facing window. Not sure which way is south? Think about where the sun rises (in the east) and sets (in the west). Then stand so that east is to your left and you'll be facing south. Is there a window in the direction you're facing?• You may need to find a better location for the antenna. Refer to "Step 2: Place and Aim the Indoor/Outdoor Home Antenna" on page 13.
Check Antenna Connection	<ul style="list-style-type: none">• Make sure that the antenna cable is firmly and securely plugged into the Home Dock. Make sure the cable is not bent or broken.• Turn Onyx EZ Off, then On, to reset this message.• If the message persists, most likely the Indoor/Outdoor Home Antenna cable has been damaged. Replace the antenna.
Channel Off Air	<ul style="list-style-type: none">• The channel you've selected is not currently broadcasting. Tune to another channel.
Loading	<ul style="list-style-type: none">• Onyx EZ is acquiring audio or program information This message usually goes away in a few seconds.

Troubleshooting

If you see this on the screen:	Try this:
Updating	<ul style="list-style-type: none">• Onyx EZ is updating with the latest encryption code. Wait until the update is done.• You may be trying to tune to a channel that is blocked or unavailable. Tune to another channel.
—	<ul style="list-style-type: none">• No program information, such as artist name, song title, or channel exists.
If this happens:	Try this:
You do not receive all the channels to which you subscribed	<ul style="list-style-type: none">• Ensure that you have subscribed to the service by following the steps in “Step 4: Subscribe” on page 20.• Go to www.siriusxm.com/refresh and follow the directions to refresh your Radio.• Call 1-866-635-2349 for further assistance.
Audio sounds too soft	<ul style="list-style-type: none">• Raise the volume of your stereo system or powered speakers, or increase the audio level of Onyx EZ until the sound quality improves. Refer to “Set Audio Level” on page 38.
Audio fades	<ul style="list-style-type: none">• Check all cables for a firm and secure connection.
No audio	<ul style="list-style-type: none">• Check all cables between Onyx EZ and your stereo system or powered speakers for a firm and secure connection.• Ensure you have selected the proper input source on your stereo system, or try another source.• Increase the audio level of Onyx EZ. Refer to “Set Audio Level” on page 38.

Troubleshooting

If this happens:	Try this:
No song title or artist name is displayed	<ul style="list-style-type: none">• The information may not be available or updates may be in progress.
Traffic and Weather channels sound different from other channels	<ul style="list-style-type: none">• These channels use a different audio technology than other channels so they often sound different from other channels.
The demo is playing	<ul style="list-style-type: none">• The Indoor/Outdoor Home Antenna is not connected or you are not receiving the XM signal. Check that the antenna is connected properly and is not obstructed.• Press and hold the Select button for 10 seconds to exit Demo Mode.• You can disable Demo Mode. Refer to “Demo Mode” on page 41.

Product Specifications

System

Power Requirements:	110 V AC, 400 mA (max)
Operating Temperature:	-4°F to +140°F (-20°C to +60°C)
Audio Output:	1.5 V _{rms} (max)

Onyx EZ Radio

Dimensions:	4.5 in (width) x 2.4 in (height) x 0.7 in (depth) 115 mm (width) x 61 mm (height) x 17 mm (depth)
Weight:	3.4 oz (95 g)

Home Dock

Dimensions:	3.6 in (width) x 1.1 in (height) x 1.5 in (depth) 93 mm (width) x 29 mm (height) x 38 mm (depth)
Weight:	3.8 oz (109 g)
Audio Connector:	1/8 in (3.5 mm) female
Antenna Connector:	SMB male

Home Power Adapter

Input:	100-240 V AC, 50-60 Hz, 0.4 A
Output:	5.2 V DC, 1.6 A

Indoor/Outdoor Home Antenna

Type:	XM Indoor/Outdoor
Connector:	SMB female, right angle
Cable Length:	20 ft (6.1 m)

Stereo Audio Cable

Connectors:	1/8 in (3.5 mm) stereo male to RCA left & right
Cable Length:	3 ft (91 cm)

Patent and Environmental Information

Patent Information

It is prohibited to, and you agree that you will not, copy, decompile, disassemble, reverse engineer, hack, manipulate, or otherwise access and/or make available any technology incorporated in this product. Furthermore, the AMBE® voice compression software included in this product is protected by intellectual property rights including patent rights, copyrights, and trade secrets of Digital Voice Systems, Inc. The software is licensed solely for use within this product. The music, talk, news, entertainment, data, and other content on the Services are protected by copyright and other intellectual property laws and all ownership rights remain with the respective content and data service providers. You are prohibited from any export of the content and/or data (or derivative thereof) except in compliance with applicable export laws, rules and regulations. The user of this or any other software contained in a SiriusXM Radio is explicitly prohibited from attempting to copy, decompile, reverse engineer, hack, manipulate or disassemble the object code, or in any other way convert the object code into human-readable form.

Environmental Information

Follow local guidelines for waste disposal when discarding packaging and electronic appliances.

FCC Statement

The user is cautioned that changes or modifications not expressly approved by Sirius XM Radio Inc. can void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna of the affected receiver.
- Increase the separation between the SiriusXM equipment and the affected receiver.
- Connect the SiriusXM equipment into an outlet on a circuit different from that to which the affected receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING! The FCC and FAA have not certified this Satellite Radio Receiver for use in any aircraft (neither portable nor permanent installation). Therefore, Sirius XM Radio Inc. cannot support this type of application or installation.

Copyrights and Trademarks

© 2013 Sirius XM Radio Inc. “Sirius”, “XM” and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. “BBC” and “Radio One” are trademarks of the British Broadcasting Corporation and are used under license. BBC logo © BBC 1996. Radio 1 logo © BBC 2001. Cosmopolitan® is a registered trademark of Hearst Communications, Inc. Elvis Radio logo © EPE Reg. U.S. Pat & TM off. IndyCar (and Design) are registered trademarks of Brickyard Trademarks, Inc., used with permission. Major League Baseball trademarks and copyrights are used with permission of Major League Baseball Properties, Inc. Visit the official website at MLB.com. Games subject to availability and change and may not include all spring training games. All rights reserved. NASCAR® is a registered trademark of the National Association for Stock Car Auto Racing, Inc. The NBA identifications are the intellectual property of NBA Properties, Inc. and the respective NBA member teams. © 2013 NBA Properties, Inc. © 2013 NFL Properties LLC. All NFL-related trademarks are trademarks of the National Football League. NHL and the NHL Shield are registered trademarks of the National Hockey League. © NHL 2013. All NHL logos and marks and NHL team logos and marks depicted herein are the property of the NHL and the respective teams and may not be reproduced without the prior written consent of NHL Enterprises, L.P. The Home Ice® channel is a registered trademark of XM Satellite Radio Inc. The Swinger Golfer logo is a registered trademark of PGA TOUR, Inc. Visit www.siriusxm.com/channellineup for updates. All programming/channel lineup/XM service subject to change or preemption. All other marks and logos are the property of their respective owners. All rights reserved.

IMPORTANT NOTICE: REQUIRED SUBSCRIPTION

Hardware and subscription sold separately, and activation fee required. Other fees and taxes may apply. **Subscriptions governed by SiriusXM Customer Agreement; see www.siriusxm.com.** Prices and programming are subject to change. **Service automatically renews into the subscription Package you choose (which may differ from the Package which arrived with the Radio), for additional periods of the same length, and automatically bills at the then current rates, after any complimentary trial or promotional period ends, until you call us at 1-866-635-2349 to cancel.** XM U.S. Satellite service available only to those at least 18 years of age in the 48 contiguous USA and DC, while SiriusXM Internet Radio is available throughout our satellite area and also AK, HI and PR.

Owners Record


The Radio model number is located below and the XM Radio ID is located on the label on the back of Onyx EZ.

Record the XM Radio ID in the space provided below. Refer to these numbers whenever you call your dealer regarding this product.

Radio Model Number: XDNX1

XM Radio ID: _____

Indoor/Outdoor Home Antenna Template

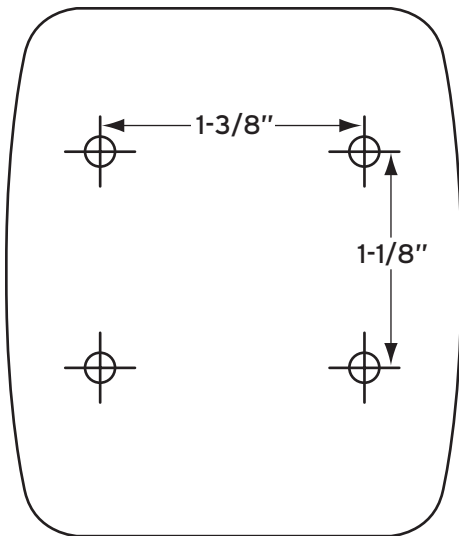

Sirius XM Radio Inc.
1221 Avenue of the Americas
New York, NY 10020

1.866.635.2349

siriusxm.com

© 2013 Sirius XM Radio Inc.

XDNX1HKUG 130415a