Identifion Of Parts

Functional Operation

Care And Cleaning

Control Panel

Cooling Current

Discharge Side

Suction Side perssure

Perssure

Refrigerant

Rated Voltage DC 24V

Air Flow Volume 48CFM

Electrical Protection Class I

Noise Level ≤50dB(A)

Figures noted in the contents are for reference only; variation may result due t the application countries or regions, and shall be based on practical operation.

2.8MPa

Shows Compulsion

"Electric waste products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling

Marning Means improper handling may result in a death or a serious

Cautions Means improper handling may result in an injury or damage to

Precautions For Use

warnings and the cautions stated in "Precautions" must be observed for • To prevent resin parts from melting or catching on fire, do not place this machine near portable heaters.

 DO NOT connect this machine to an outlet having the electrical ratings below the products requirements . The power cord must not be damaged or modified. Do not place

To avoid damages to the power cord, avoid pinching the cord in a door.

 In case of any abnormality, turn off this machine immediately and, disco nect the plug and contact to the seller of your appliance (Abnormal operation may result in a failure of the unit, electric shock, fire, or the like.)

DO NOT attempt to turn off this machine by disconnecting the plug.

• DO NOT disassemble or repair this unit by yourself.

To avoid accidents caused by electric shock, please keep your hands dry

Clean any dust from the blades of the power plug and insert the plug into

 Wipe off dust

 To avoid fire or other accidents, do not spray this machine with water. and do not place flammable or chemical substances near the unit.

Prohib

its service agent or similarly qualified persons in order to avoid a

and knowledge if they have been given supervision or instruction concernof the appliance in a safe way and understand the hazards anything hot or heavy on the cord. Do not pull the cord out, or bundle it

> d. "Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children "

> > may result in overheating, and possibly electric shock and fire.

Do not use this machine where any leakage of oil or flammable gas

(In case of any water spills, into the unit can deteriorate the insulation.)

Do not put water container on this machine.

Do not use the unit in places subject to chemicals.

Do not to sit or step on this unit

 Never place any objects into the openings of this machine. This unit contains a fan running at high speed, contact with the moving fan \leftarrow

This machine must be used on a level and stable surface.

 To prevent the water from freezing, do not use this machine and the (Accidentally drinking of the water or using it for other purpose may drain hose at ambient temperature below 41 °F.

arts.do not operate unit with back cover removed. Hot parts. Do not

operate unit with back cover removed. To aovid electric shock-switch in off position does not de-energize all

ousehold wastes throughout the EU. To prevent possible harm to the

contact the retailer where the product was purchased. They can take this

This marking indicates that this product should not be disposed with othe

Remove water that has been collected in the tank.

cause illness and /or unforeseen accidents.)

onment or human health from uncontrolled waste disposal, recycle i rn your used device, please use the return and collection systems (

product for environmental safe recycling.

b. "If the supply cord is damaged, it must be replaced by the manufacturer.

C. "This appliance can be used by children aged from 8 years and above with reduced physical, sensory or mental capabilities or lack of experience

To avoid damage to the power cord, do not pull the cord while

For safety purpose, disconnect the power plug if the unit is not used for

Be sure to hold of the power plug when plugging in or removing from

Do not dismantle the water tank float in the tank.

an extended period of time.

an outlet.

Do not block up the air intakes and the air outlets. Do not cover the

 Prior to continuous operation for extended period of time, periodic checking is required Pay special attention to filters and other similar Prohibit

Turn off the unit and disconnect the power plug before starting cleaning and or any other routine maintenance.

 To avoid the risk of electric shock, never sprinkle or spill water on this machine if there is any leakage of oil or flammable gas takes place.

• When moving the unit, please turn off the unit and hold the body

The bottom water should be drained after each use.

 Please use the machine flat, if the unit is tilted more than 30 degrees, you will not be able turn on any function. Be careful not to place an electric heater near the fan of this product

Identification Of Parts Open the package, take out the machine, and let the machine stand for 2 hours before turning it on again. Assemble the attached parts of the machine as shown below.

Accessories Include

2. Continuous drair 3. User manual.

1. Screw the exhaust pipe to the rear air outlet (as shown)

_____8

1、 Operation Panel

Tip: The compressor has a 3-minute protection function, and it takes 3 minutes to restart after stopping.

Key Description

Power switch ——Press this button to turn the machine on and off

Volume down—— Press this button to decrease the volume of the

Cooling mode setting——Press this button to set the running cooling mod

(**\varepsilon**) Fan only mode setting—Press this button to set the fan only mode .

switch in the cooling and fan only mode of the machine.

Light switch ——Press this button to run the illumination

switch between full light and half full light.

When the ambient temperature <41°F stops running.

wind speed.

only mode, and the corresponding indicator light displays a red light. 2.In the fan only mode, you can press the fan speed setting button to control the

1. Press the illumination button for the light to be fully illuminated (corresponding Bluetooth function switch—— Press this button to turn the Bluetor

> 2. In the full light mode, press the illumination button again and the light is half bright (the corresponding indicator light shows blue light)

 Volume up—— Press this button to increase the volume of the Bluetooth 3. In the half-light mode, press the illumination button again to turn off the light

to the Bluetooth device named "PCA".

When the humidity is greater than 70% or the temperature is greater

light flashes red.Please remove the water plug to drain the machine.

the corresponding indicator light displays a blue light. 2. Then it is automatically running according to the room temperature.

When the ambient temperature is ≥59°F running cooling mode. 41°F ≤ when the ambient temperature < 59°F running fan only mode

3. In the cooling mode, you can press the fan speed setting button to control the

Tip: When using, try to reduce the length of the duct, keep away from the direct sunlight, and try to keep the indoor closed, and the cooling effect is better.

Ventilation mode

1.In the power on state, press the fan only mode setting button to open to the fan

Fan speed setting—Press this button to set the high or low wind speed

Press the Bluetooth function button and the Bluetooth function will be enabled. Then, you can turn on the Bluetooth function of the mobile device and connect.

3. When the machine makes a beep, it indicates a successful connection, and then

than 89.6 °F, the machine may be full of water and the power indicator

tablets, not to transfer music as U disk.

1. In the power-on state, press the cooling button to run the cooling mode, and

Every two weeks of usage: Clean the filter

Cut off the power supply to ensure that the machine is of

Take out the filter.

Clean the filter with the brush

Note: Failure to keep air filter clean will result in poor air circulation .DO NOT clean the screen while it's on the machine, you need to remove the screen 1st.

maintenance shall not be made by children!

6. Correct Disposal of this product

experience and knowledge if they have been given supervision or instruct

involed. Children SHOULD NOT play with the appliance. Cleaning and user

concerning use of this appliance in a safe way and fully understand the hazards

This product should not be disposed with other household health from waste disposal, Recycle it responsibly to promot sustainable reuse of material resources. To return your used

device please return the product to where it was originally purchased. They can recycle this product for environmental safe.

Tip: to reduce the risk of fire, electric shock or injury while using air conditioner,

1. The socket must be a 3 pronged socket plugged with a ground pin.

2.Don't drag on the ground.

3.Don't use extension cords.

4. Unplug the air conditioner before performing normal maintenance.

Output: 5V, 2.1A is only used to charge mobile phones or

When draining, pay attention to the water inside the machine.