 


This quick start guide provides you with basic instructions only. For more complete instructions, refer to your user’s manual provided in the package, or see the online user’s manual at www.telephones.att.com/manuals.

 
 
Telephone base and charger installation

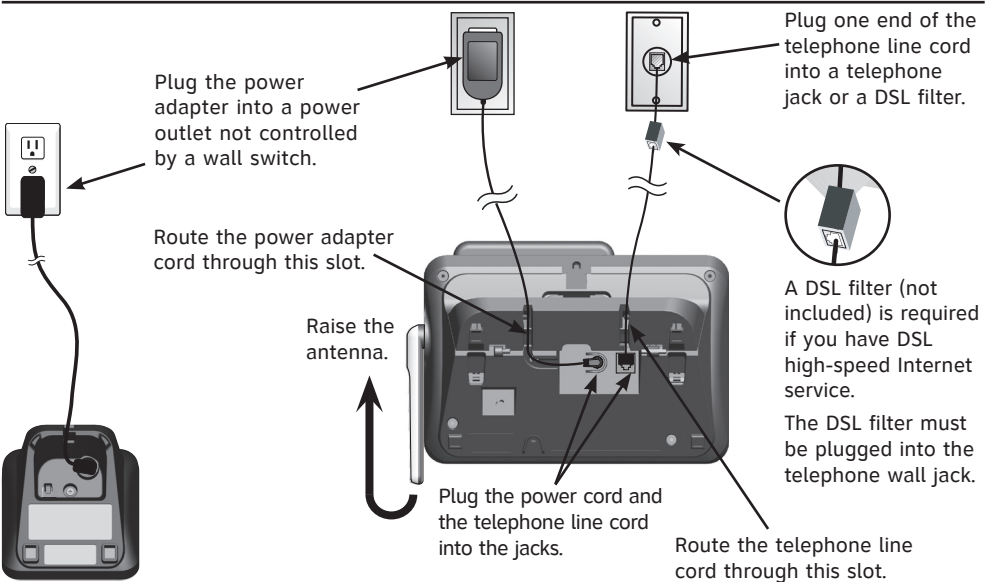

Caution: Use only the power adapter provided with this product. To obtain a replacement, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Battery installation

Install the battery as shown below. Charge your handset(s) before initial use. The battery is fully charged after 16 hours of continuous charging.

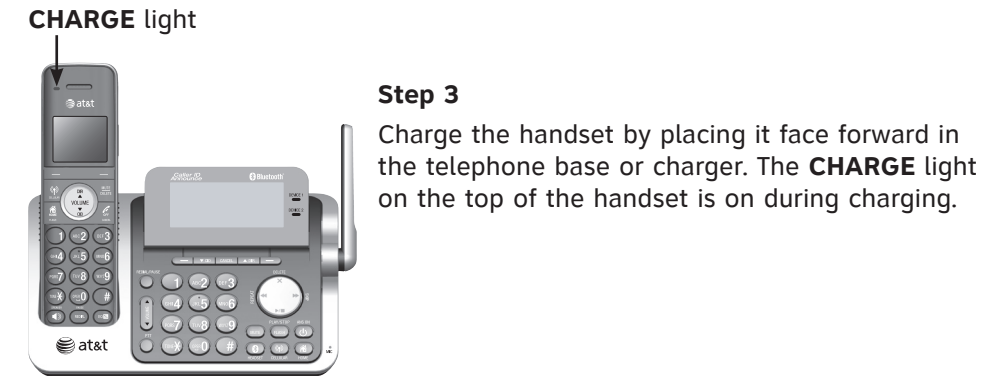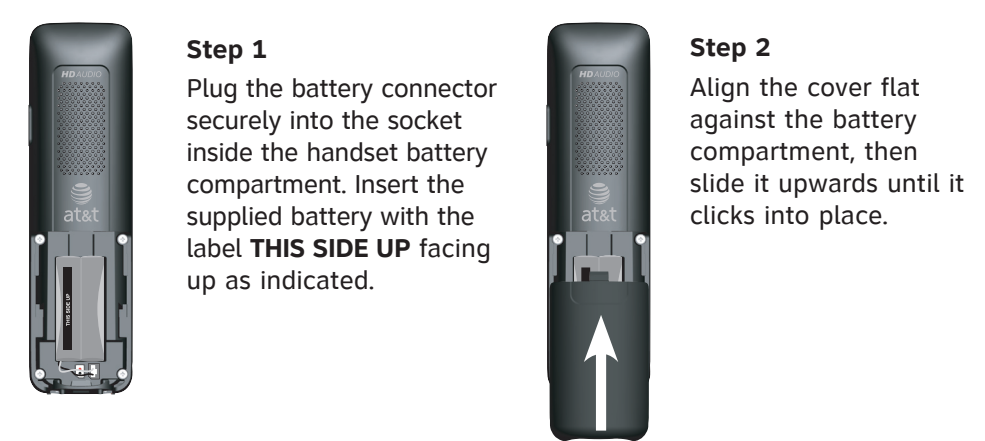

Caution: Use only the supplied rechargeable battery or replacement battery (model BT166342).

Quick reference guide - handset

Softkeys (2)

- Show the menu.
- Select an item or save an entry or setting.

CHARGE light

- On when the handset is charging.

CELLULAR

- Make or answer a cell call.
- Answer a call waiting call during a cell call.

HOME/FLASH

- Make or answer a home call.
- Answer a call waiting call during a home call.

1

- Press repeatedly to add or remove **1** in front of the call log entry before dialing or saving it to the directory.

TONE ✕

- Switch to tone dialing temporarily during a call if you have pulse service.
- Toggle the name order when saving a caller ID log entry into directory.

)/SPEAKER

 
- Make or answer a home or cell call using the speakerphone.
- Switch between the speakerphone and the handset.

REDIAL/PAUSE

- Press repeatedly to view the last 10 numbers dialed.
- Press and hold to insert a dialing pause while entering numbers.

EQ

- During an outside call, intercom call, message or announcement playback, press to change the quality of the audio to best suit your hearing.

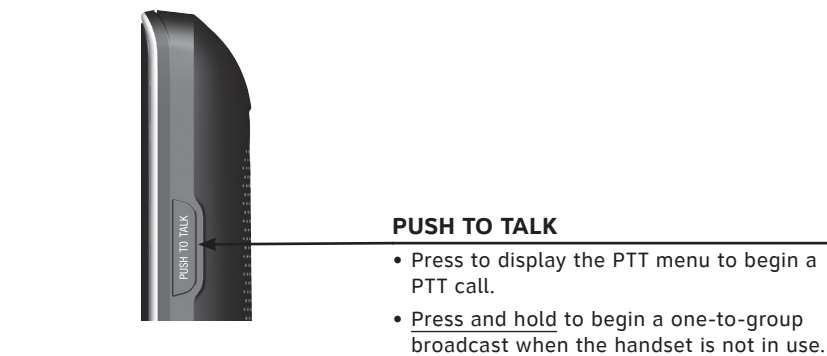

PUSH TO TALK

- Press to display the PTT menu to begin a PTT call.
- Press and hold to begin a one-to-group broadcast when the handset is not in use.

DIR▲/VOLUME

- Scroll up in menus.
- Increase listening volume when on a call or message playback.
- Show directory entries.
- Move the cursor to the left while entering names or numbers.

MUTE/DELETE

- Mute the microphone during a call.
- Delete digits while predialing.
- Delete an individual entry while reviewing the redial list, directory or caller ID history.
- Erase a digit or character while entering or editing a directory entry.
- Silence the ringer temporarily.
- Delete a message or announcement during message or announcement playback.

OFF/CANCEL

- Cancel an operation, back up to the previous menu, or exit the menu display while using menus.
- Press and hold to return to idle mode.
- Hang up a call.
- Press and hold to erase all the **Missed calls** or **Download fail** messages.
- Silence the ringer temporarily.

CID▼/VOLUME

- Scroll down in menus.
- Decrease listening volume when on a call or message playback.
- Show caller ID history.
- Move the cursor to the right while entering names or numbers in the directory.

(pound key)

- Press repeatedly to display other dialing options when reviewing a caller ID history entry.

Quick reference guide - telephone base

REDIAL/PAUSE

- Press repeatedly to view the last 10 numbers dialed.
- While entering numbers, **press and hold** to insert a dialing pause.

)/HANDSET LOCATOR

- Press the button to page all system handsets.
- Press and hold to begin handset deregistration.

▼ VOLUME ▲

- Adjust the volume during message playback.
- Adjust the volume during a call.
- Adjust the telephone base ringer volume for all lines when in idle mode.

)/REPEAT

- Press to repeat a message or press twice to play the previous message.

)/PLAY/STOP

- Press to start or stop message playback.

MUTE

- Mute the microphone during a call.
- Silence the ringer temporarily.

HEADSET

- Transfer a call from the telephone base to a connected Bluetooth headset.
- Press to use a connected Bluetooth headset.
- Press to end a call while you are using the Bluetooth headset.

CANCEL

 
- While in a menu, press to exit without making changes or **press and hold** to return to idle mode.
- Press and hold to erase the displayed messages.

▼CID

- Press to scroll down while in a menu.
- Press to review the caller ID log.
- While entering names or numbers, press to move the cursor to the left.

Softkeys (2)

- Press to select the menu item displayed above the key.

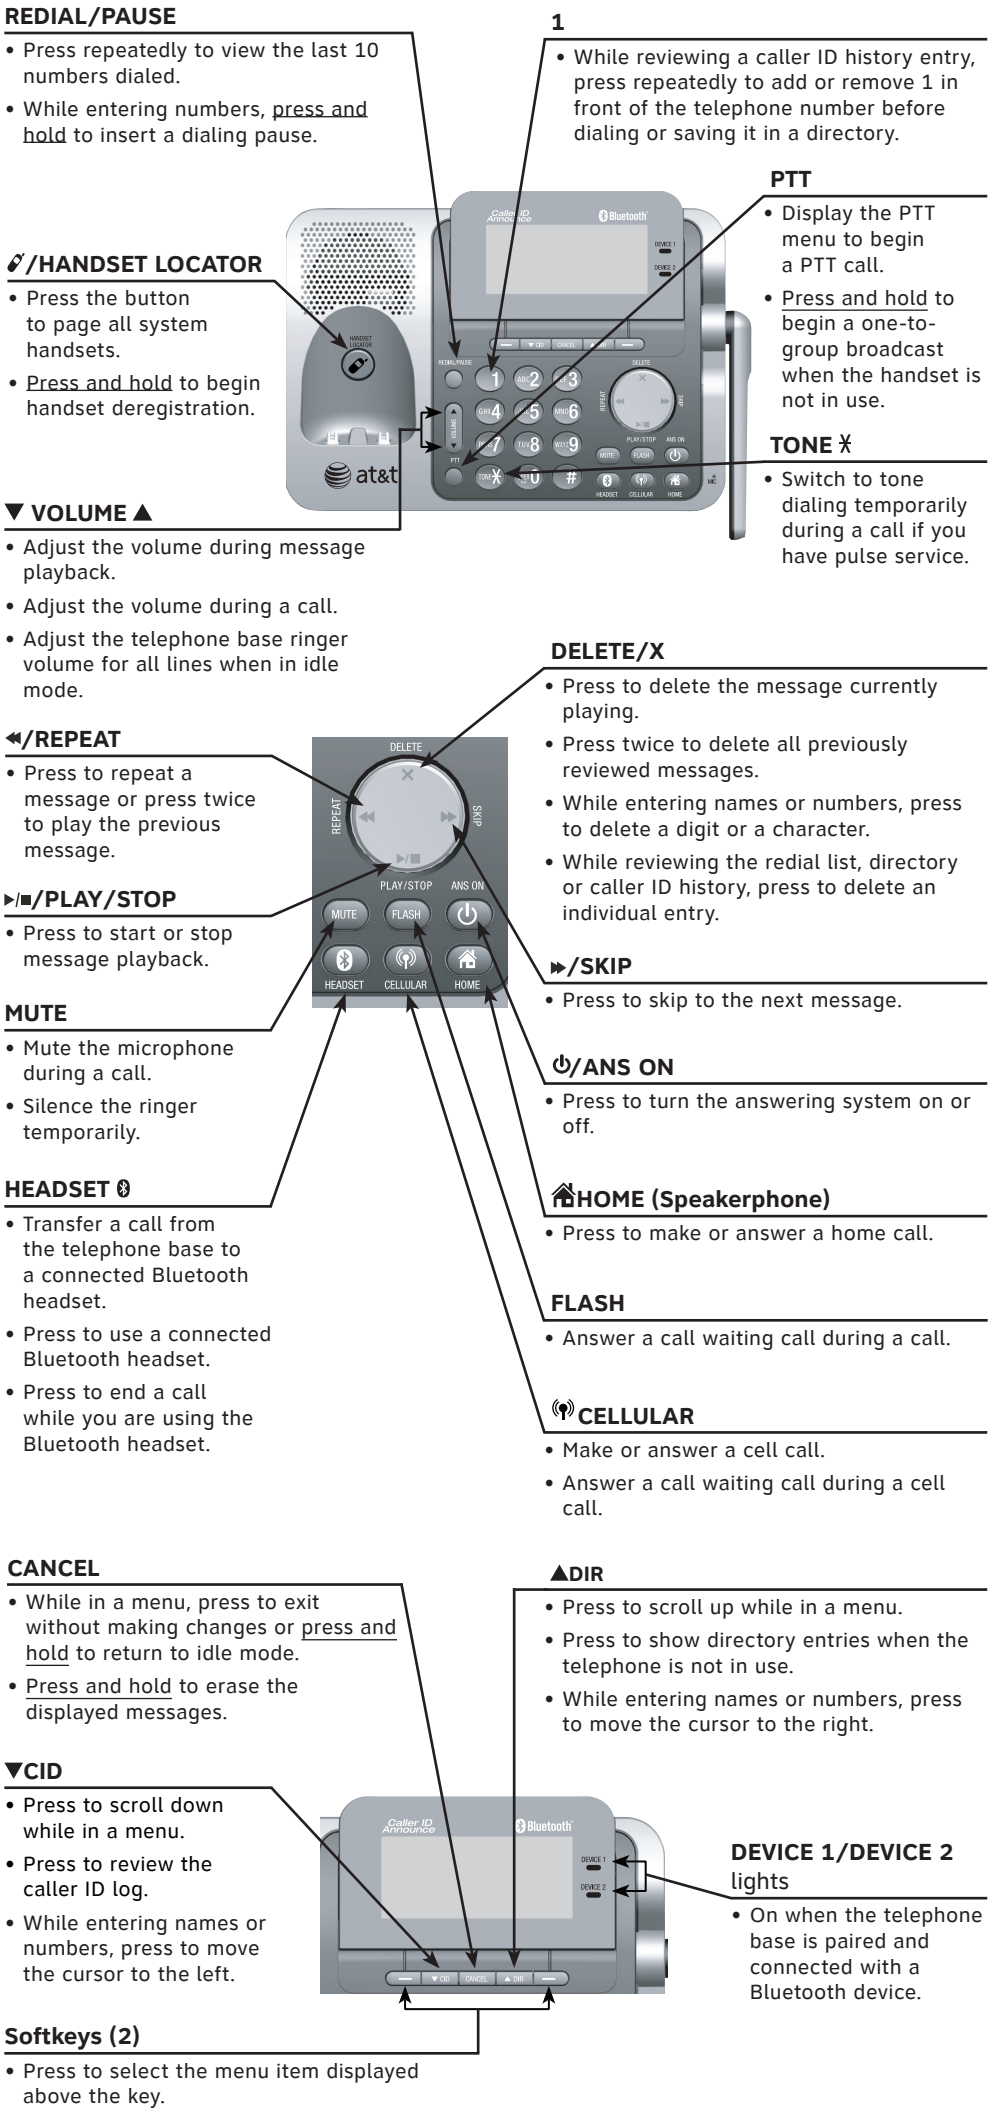

Initial settings

We recommend you program your telephone system before use.

The following are a few examples of common features to set before using the telephone. Refer to the **Handset and telephone base settings** and **Answering system settings** in the user’s manual for detailed instructions on setting all telephone features.

Set date/time
Set the date/time before using the answering system. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Set date/time -> SELECT . 2. Enter the month, day and year using the dialing keys -> SET . 3. Enter the hour and minute using the dialing keys. 4. ▼ or ▲ to choose AM or PM -> SET .
Record your own announcement
Your outgoing announcement plays when calls are answered by the answering system. You can use the preset announcement to answer calls, or replace it with your own recorded announcement. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Answering sys -> SELECT . 2. SELECT to select Announcement -> RECORD . 3. Facing the handset or telephone base, record your announcement and press STOP to end recording.
Number of rings
You can set the answering system to answer an incoming call after 2, 3, 4, 5 or 6 rings, or toll saver. If you choose toll saver, the answering system answers a call after two rings if you have new messages, or after four rings when there are no new messages. If you want the built-in answering system instead of the voicemail to answer a call, you should set the answering system to answer a call at least two rings before the voicemail is set to answer. Contact your telephone service provider for information on your voicemail settings. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Answering sys -> SELECT . 2. ▼ or ▲ -> Ans sys setup -> SELECT . 3. ▼ or ▲ -> # of rings -> SELECT . 4. ▼ or ▲ -> choose among 6, 5, 4, 3, 2 or Toll saver -> SET .
Ringer volume
You can set the ringer volume level to one of the six levels or turn the ringer off. Using a cordless handset or the telephone base: 1. MENU -> ▼ or ▲ -> Ringers -> SELECT . 2. SELECT to select Ringer volume . 3. ▼ or ▲ -> All lines, Home, Cell-D1 or Cell-D2 -> SELECT . 4. ▼ or ▲ to choose the desired level -> SET .

