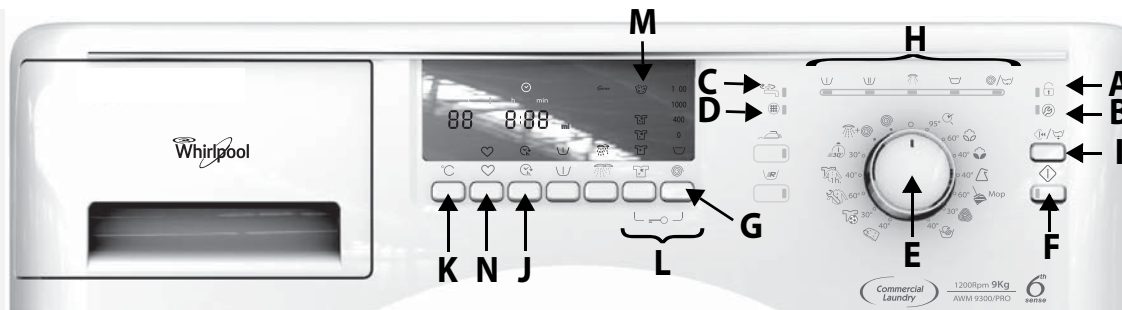


A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication C. "Water tap closed" indication D. "Clean pump" indication 

E. Programme selector

F. "Start (Pause)" button G. "Spin" button (incl. Rinse hold

H. Programme flow bar

I. "Reset/Drain" button J. "Cycle end" button K. "Temperature" button L. "Child lock" button combination M. "Detergent overdose" indication N. "Favourites" button

Programme		Temperature °C	Care Labels	Max. Load kg	Type of wash/Notes - Respect the manufacturer's recommendations on the care label	Detergents and additives			Special options							Max Spin Speed rpm
						Prewash	Main wash	Softener	Cycle end	Prewash	Intensive rinse	Soil level	Easy ironing	Rapid	Spin	
Cotton/ Antibacterial 95°		70 - 95 °C		9.0	Normally to heavily soiled white bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry.	*	Yes	*	*	*	*	*	*	—	*	max.
Cotton 60°		50 - 60 °C	 	9.0	Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	max.
Coloured cotton 40°		cold - 40 °C	 	9.0	Normally soiled garments made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	*	max.
Synthetics 40°		cold - 60 °C	  	3.5	Normally soiled garments made of artificial fibres (like polyester, polyacryl, viscose etc.) or their blends with cotton.	*	Yes	*	*	*	*	*	*	*	*	max.
Mops and towels 60°	 Mop	cold - 95 °C	   	5.0	Normally to heavily soiled washable cleaning cloths, mops, towels and similar laundry made of robust cotton cloth types. Intensive wash programme with an included prewash; add detergent also to the prewash chamber of the detergent drawer in case of heavy soiling.	*	Yes	*	*	*	*	*	*	*	*	max.
Wool 30°		cold - 40 °C	 	2.5	Only woollens, labelled with the Woolmark and identified as machine washable.	—	Yes	*	*	—	—	*	—	—	*	1000 ¹⁾
Handwash 40°		cold - 40 °C		2.0	Textiles made of silk, linen, wool and viscose marked as "handwashable".	—	Yes	*	*	—	—	*	—	—	*	400 ¹⁾
Big Items 40°		cold - 60 °C	  	3.0	Blankets made of synthetic fibres; bedcovers filled with feathers, polyester or other artificial fibres; sleeping bags, bathmats and similar items.	*	Yes	*	*	*	*	*	—	—	*	1000 ¹⁾
Sport 30°		cold - 30 °C	 	3.5	Normally soiled and sweaty sportswear made of cotton jersey or microfibres. This programme includes a prewash cycle – you can add detergent also to the prewash chamber. Do not add softener.	*	Yes	—	*	*	*	*	*	*	*	max.
Working clothes 60°		cold - 60 °C	   	5.0	Dirty working clothes made of robust cotton material or cotton-synthetics blends. Options "Prewash" and "Intensive rinse" are preset in this programme - thus it is optimized to enable the best cleaning result. For extremely dirty garments, we recommend to shake them out thoroughly before putting them into the washing machine. - If you want, you can use a stain remover on oxygen basis.	*	Yes	*	*	*	*	*	*	*	*	max.
Mixed 40°		cold - 60 °C	   	6.0	Lightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends. Effective one-hour programme. Make sure to wash only similar colours together in one wash load. If soil level requires, add oxygen-based stain removers.	—	Yes	*	*	—	*	*	*	—	*	max.
Quick wash 30°		cold - 30 °C	 	6.0	Briefly worn clothing made of cotton, artificial fibers and blends with cotton. Refresh programme. Use lowest recommended detergent amount.	—	Yes	*	*	—	—	—	—	—	*	max.
Rinse & Spin		—	—	9.0	Separate rinse and intensive spin programme. Suitable for robust laundry.	—	—	*	*	—	*	—	—	—	*	max.
Spin		—	—	9.0	Separate intensive spin programme. Suitable for robust laundry.	—	—	—	*	—	—	—	—	—	*/—	max.

 optional / Yes : dosing required

¹⁾ For improved garment care, spin speed is restricted in this programme.

Whirlpool is a registered trademark of Whirlpool USA

5019 300 00769

IF THE WASHING MACHINE APPEARS TO BE DAMAGED, CONTACT THE MACHINE OWNER AND, IF NECESSARY, THE AFTER-SALES SERVICE.

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes) ☹	
					without "Rapid"	with "Rapid"
Cotton/Antibacterial 95°	95	9.0	90*	2.60	02:30	—
Cotton 60°	60	9.0	64	1.53	02:10	1:30
Cotton 40°	40	9.0	82	0.85	01:55	1:15
Synthetics 40°	40	3.5	45	0.55	01:20	0:55
Mops and towels 60°	60	5.0	65	1.40	02:30	1:50
Wool 30°	30	2.5	60	0.40	00:42	—
Handwash 40°	40	2.0	49	0.63	00:40	—
Big Items 40°	40	3.0	70	0.75	01:30	—
Sport 30°	30	3.5	53	0.50	01:35	1:05
Working clothes 60°	60	5.0	80	1.45	02:40	1:55
Mixed 40°	40	6.0	67	0.58	01:00	—
Quickwash 30°	30	6.0	73	0.30	00:30	—

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. The consumption data indicated are based on an inlet water temperature of approx. 15°C through cold and hot fill valve. They may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

- ☹ The time indicated on the display can deviate from the values in the table, because it takes into account the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).
- * To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Load your laundry, close the door and add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

Turn the programme selector to the desired programme – the **"Start/Pause"** indicator blinks. Temperature and spin speed shown on the display can be altered by pressing the "Temperature" or "Spin" button. The washing machine is designed to save energy; therefore, if you have selected a programme but do not start it with about a quarter of an hour, it will switch off automatically. To switch it on again, turn the programme selector to **"Off/O"** and then to the desired programme again.

SELECT ANY DESIRED OPTION

Push the button of any option desired - the respective indicator lights up. If the combination programme/option or option/option is not possible, the indicator will switch off automatically.

"Easy Ironing" button

- Reduces creasing by an increased water quantity and a very gentle spin.

"Rapid" button

- Enables quicker washing by shortening the programme duration.
- Recommendable for only lightly soiled laundry.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately a quarter of an hour.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

Soil level" button

- Adapts the programme duration to the soil level of your laundry.

 = lightly soiled –

 = normally soiled –

 = heavily soiled

Not all soil levels are selectable for each programme.

"Spin" button (incl. "Rinse Hold"

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If you select spin speed "0", the final spinning is cancelled and the water is drained out only. However, intermediate spin phases remain during the rinse.
- If you select "Rinse hold" , the laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing and prevent colours from changing. To activate the "Rinse hold", press the "Spin" button repeatedly until the "Rinse hold" symbol  on the display lights up.
 - The wash programme stops to "Rinse hold" when the "Rinse hold" symbol  on the display blinks; the **"Start/Pause"** indicator also blinks.
 - To terminate the "Rinse hold" by spinning the laundry, press **"Start/Pause"** - the laundry will be spun with the default spin speed. You can also select another spin speed with the "Spin" button before you start the spin cycle with **"Start/Pause"**.
 - To terminate the "Rinse hold" by draining the water without spinning, press the "Spin" button until spin speed "0" appears on the display; then press **"Start/Pause"** to start the draining.
 - Do not leave the laundry to soak for too long in the "Rinse hold" (especially silk!).

SET CYCLE END

With this function you can postpone your programme to complete at a later time: press the button to select in how many hours the programme shall be finished. Thus, it allows you to have your laundry ready at a particular time and to profit from more favourable energy rates during the night, for example.

- The time until the "Cycle end" can be selected in full hour time segments (1 to 24 h). When you press the button, the shortest possible time will be displayed; keep on pressing the button to loop through all the available times. To remove it again, keep on pressing the button until you see the value "0:00".
- When you have selected the desired time until the "Cycle end", press **"Start/Pause"** - the countdown will begin.
- During the countdown, you can still modify the programme setting (select or deselect options, change spin speed etc.). If the modifications prolong the programme duration so that it overruns the originally set time until the "Cycle end", the programme will start immediately.
- Sometimes the programme may finish before the selected time until the "Cycle end" has expired (e.g. for small loads). In this case, the washing machine will tumble the laundry regularly to keep it fresh, until the selected "Cycle end" time has expired. During tumbling, the display will show an animation. The tumbling phase can be stopped at any time either by pressing any button or by rotating the programme selector; the animation will stop and the door will unlock in about 1 minute as indicated on the display.

SAVE YOUR FAVOURITE PROGRAMMES

If there is a programme setting which you use frequently, the appliance offers the possibility to save one setting for each programme so that it can be used again by just pressing one button.

- Select the desired programme, temperature, spin speed and option(s), press and hold the "Favourites" button  for at least 3 seconds. The symbol on the display  briefly blinks and then lights up - the programme setting is saved.

Next time you want to use your individual programme setting, select the programme, briefly press the "Favourites" button  and start by pressing "Start/Pause" .

If you want to replace the saved programme setting by another one:

- Proceed as already described above - the previously saved programme setting will be replaced by the new one..

PROGRAMME START

Open the tap and press **"Start (Pause)"** ; the indicator stops blinking and is on. The programme flow bar shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the display.**

CHILD LOCK

Activating the child lock prevents children from starting a wash cycle or changing the settings of a running programme. The child lock cannot be activated or deactivated when the programme selector is in the "Off/O" position. To activate the child lock:

- Turn the programme selector to a programme position, or run a programme as usual.

- Press the 2 buttons marked with the key symbol  simultaneously for at least 3 seconds; a key-like symbol will shortly appear on the display to indicate that the child lock is active. Any time you try to change a programme setting with active child lock, the display will briefly show the key-like symbol. The programme setting cannot be changed anymore; the only change possible is to switch the washer off by turning the programme selector to the "Off/O" position. To deactivate the child lock:
 - Press again the 2 buttons marked with the key symbol  simultaneously for at least 3 seconds.

"DOOR OPEN" INDICATOR

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset a running programme".

FAILURE INDICATORS

If one of the failure indicators lights up, consult the "Troubleshooting Guide" in your Instructions for Use.

"Water tap closed" : No or not sufficient inlet water.

"Service" : Failure or malfunction of an electrical component.

"Clean pump" : Waste water is not pumped out. Spin indicator blinks: unbalance during spinning.

PROGRAMME END

The "Door open" indicator  lights up, and the display shows "End". After about a quarter of an hour, the washing machine will switch off completely to save energy.

- Turn the programme selector to the "Off/O" position.
- Close the water tap.
- Open the door and unload the machine.
- Leave the door ajar to allow the drum to dry..

DETERGENT OVERDOSAGE INDICATION

The symbol will light up at the end of the programme if you used too much detergent. Use less detergent next time. If the symbol lights up and the display shows "Fod", too much foam interrupted the wash process; refer to the "Troubleshooting Guide" in your Instructions for Use.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press **"Start (Pause)"**  to pause the programme; the indicator blinks.
- Select the new programme, temperature, any options and another spin speed if you want.
- Press **"Start (Pause)"**  again. The indicator is on, and the programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME

The **"Reset/Drain"** button  cancels a programme before the end.

- Press the **"Reset/Drain"** button  for at least 3 seconds; "rES" appears on the display. The water is drained out; it may last some time until the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA

5019 300 00769