

# SYRIUS PRO

# VENTURA PRO

# TRUCKMATE PRO

AVN S9010/20



## User manual





# SNOOPER

## AVN S9010/20

## Contents

Page		Page	
3	<b>Registering AVN S9010/20</b>	64	Map Text Size
4	<b>Introduction</b>		Vehicle Icon
	<b>Product Functions</b>	65	Lane Guidance
5	<b>Notes on Installation</b>		Junction Number
6	<b>Connection Diagrams</b>		Display Camera Page
9	<b>Notes on Bluetooth</b>	66	Alert Sound
	<b>Important Notice</b>		School
10	<b>Basic Operation</b>		Touch Tone
11	<b>Radio Operation</b>	67	Route Alert
14	<b>Satellite Navigation Operation</b>		Auto Scale
15	<b>Installing the SD Card</b>		My Speed
	<b>System Requirements and Downloading</b>	68	My Speed XL
16	<b>Downloading the AURA™ Camera Database</b>		Sharp Curve Alert
17	<b>Satellite Navigation</b>	69	GPS Status
	<b>Easy Setup</b>		Change Map Colour
	Screen Settings	70	Qwerty Keyboard
20	Volume	71	System Security Code
21	<b>Setting Vehicle Parameters Ventura</b>		Configuration Security Code
	<b>Setting Vehicle Parameters Sirius</b>	72	Route Timer
22	<b>Environmental Settings</b>	73	Version (Hardware & Software)
23	<b>Setting Vehicle Parameters Truckmate</b>		Show POI
24	<b>Setting Vehicle Parameters Bus Coach</b>	74	<b>Route Option</b>
25	<b>Environmental Settings</b>		Shortest Time
26	<b>Planning a Route</b>		Shortest Distance
	By Full Postcode		Avoid Tollway
27	Find by City		Avoid Motorway
28	Home	75	Navigate Avoiding Road
29	Office		Avoid by Road Name
	Recent Route or Clear Route		Avoid by Range
30	Multi-route	76	Clear Avoided Road
34	Find by Favourites		Navigate via Location
	Recent Destinations	77	Change Start Position
35	Find by Points of Interest (POI)		Summary Screen
36	Find by Nearest POI	78	<b>Quick Access Menu</b>
38	User POI		Volume
42	Find by Map		Scroll Map
43	Find by coordinate		Day or Night Settings
44	Re-Route	79	Camera Alerts
	Avoid by Road Name		Magnify or Reduce Function
	Avoid by Range	81	<b>Understanding the Mapping Screen</b>
45	Avoid by TMC - AVNS 9020 only	82	<b>Updating Maps</b>
	Clear Avoided Road	83	<b>Troubleshooting Downloads</b>
46	<b>Your Route</b>	85	<b>DVD Function Operation</b>
48	Route Description	91	<b>Bluetooth Handsfree</b>
	TMC (Traffic Message Channel) - AVN S9020 ONLY	94	<b>iPod Function Operation</b>
50	<b>Campsite Search Ventura ONLY</b>	95	<b>AV Function Operation</b>
52	<b>My Favourite Menu</b>		<b>Auxiliary Function</b>
	Favourites	96	<b>Rear Zone Operation</b>
53	Recent Destination		<b>Camera Function Adjustment</b>
54	Home		<b>Button Background Adjustment</b>
55	Office	97	<b>Sytem Setup Menu</b>
56	<b>Configure Menu</b>	100	<b>Control Calibration</b>
	Caravan/Motorhome	101	<b>Description of the Buttons on Remote Control</b>
	Car	103	<b>Precautions</b>
59	Truck	104	<b>Trouble Shooting</b>
60	Bus & Coach	105	<b>Product Specifications</b>
61	Brightness Control	106	<b>Packing List with Built-in NAV Module</b>
62	Change Language		Disposal
	Setup	107	Service Under Warranty
	2D/3D/North		
63	Speed/Time		
	MPH/KMH		
	Arrival Time/Remaining Time		



## Registering AVN S9010/20

**IMPORTANT!**

**PLEASE READ BEFORE USING AVN S9010/20**

To enable AVN S9010/20 to locate Fixed Speed Cameras and Accident Black spots you will have to register and download the AURA™ Camera Database.

### Register Online

Go to the official website [www.snooperneo.co.uk](http://www.snooperneo.co.uk) and register your unit online. Your unit should normally be activated within 30 minutes of registration.

**Please Note: To register AVN S9010/20 you will need the serial number of your unit which can be found on the bottom of the device.**

**Monthly** Debit or Credit Card payment of £2.99 inc VAT\*

**Quarterly** Debit or Credit Card payment of £7.99 inc VAT\*

**Annual** Debit or Credit Card payment of £29.99 inc VAT

\*Minimum subscription term of 12 months.

**Before you begin to use this product, please read this user manual carefully to ensure correct usage and to ensure maximum enjoyment.**

**Due to continuing improvement the specifications of this unit may change without further notice.**

### COPYRIGHT

The copyright of this manual is reserved by the 'company' (Performance Products Ltd). All rights are reserved.

This manual may not be copied, reproduced or translated in whole or in part without the express written permission of our company. Our company reserves the right to improve, amend or change the product, and it's hardware and software.

This manual is an operating and installation guide only.

The product is subject to change without further notice, any revision will appear in the next edition of this guide.

Performance Products Ltd reserves the right of final interpretation for the manual.

Trademark  
licence:



1. Manufactured under license from Dolby Laboratories.
2. "Dolby and the "double-D" symbol are trademarks of Dolby Laboratories.



# SNOOPER

## AVN S9010/20

**Thank you for purchasing the AVN S9010/20. This system is a multifunction car AV entertainment system with an intuitive GUI, which is designed for easy operation. Combined with Snoopers award winning navigation software.**

## Product Functions

### **Built-in Functions:**

Built-in Navigation, Radio, DVD player, Bluetooth hands-free, display and high power amplifier.

### **Radio Receiving:**

Automatic seeking and radio station presetting are both available. Up to 30 radio stations can be stored. Traffic Information can be received via RDS (dependent on geographic conditions)

### **DVD Player:**

DVD/VCD/CD/MP3/WMA/ JPEG/MPEG4 disc.

### **USB Port:**

Supports USB 2.0. Supported media files formats: MP3/MP4/MPG/AVI.

### **Bluetooth Hands-free:**

Supports Bluetooth hands-free communication and A2DP music streaming. (Not all Bluetooth devices support A2DP).

### **TouchScreen:**

### **DisplayScreen:**

Wide screen, high definition, Thin Film Transistor LCD.

### **TF CardPort**

Micro SD card slot for built in navigation.

### **Optional Function**

iPod play function.

### **Dual Zone**

The AVN S9010/20 allows rear seat passengers to enjoy audio or video content on additional rear seat monitors and headphones, even while the front passenger and driver listen to audio from other sources or operate navigation functions simultaneously.

### **Traffic Message Channel (TMC) AVN S9020 ONLY**

The Traffic Message Channel (TMC) is a FM data channel provided by the traffic news service that supplies continuously updated 'real time' traffic data. When your route has been selected, our navigation systems make use of this data to check traffic conditions and advise of delays.

**AV Function** It supports AV input from external equipment.

### **iPod Play:**

Supports iPod audio files playing. Most Apple devices are supported, such as iPod nano, iPod touch, iPhone 3G/3GS/4/4S/iPhone5/5S/iPad.

**Note: This function is available if it is connected using an iPhone/ iPad cable.**

**Note : For video function, users should use genuine Apple sync cable. Note: As a result of the continuous upgrading of iOS, this function may be invalid after an iOS update.**

### **Navigation**

Street level navigation provided by Snooper. A choice of Syrius, Truckmate and Ventura navigation packages are available.

### **Reversing Camera (optional)**

Snooper provide a range of reversing cameras specially designed to operate with the AVNS 9010. Please contact your local Snooper dealer for further details or visit [www.snooper.co.uk](http://www.snooper.co.uk)

### **Audio Output Port:**

It has 4 channel and 5.1 channel audio output ports, compatible with the external amplifier.

### **EQ Modes:**

Standard, Custom, Pop, Rock, Classic, and Jazz.

### **Tone Modes:**

Features Treble, Mid and Bass adjustments.

### **Spectrum Display Modes:**

5 spectrum modes are available.

### **Display System:**

Auto PAL NTSC compatible.

## Notes on Installation

We recommend this unit should be installed by a qualified technician. If you intend to install this unit by yourself please refer to the supplied Installation/connections manual .

Improper installation may cause battery drain or a short circuit. If the unit does not work refer to the Troubleshooting Guide on page 102 of this manual. Check the connections, referring to the supplied installation/connections manual.

### Considerations:

- Protect the unit screen from damage during the installation.
- Do not expose the unit surface to chemicals, such as insecticide, insect repellent, etc.
- When installing, be sure to fix securely. Snooper recommends the AVN S9010/20 Install kit (not supplied).
- Switch the ignition Off during the installation. Installing the unit with the ignition On may cause battery drain or a short circuit.
- When installing, be sure not to damage or trap any car parts such as pipes, fuel tank or wiring by using a drill, as this may cause a fire or damage to the vehicle.
- Run all ground (earth) leads to a common ground (earth) point.
- This unit is designed for negative ground (earth) 12 V DC operation only.
- Do not disassemble or modify the unit.
- Do not install in locations which interfere with airbag operation.
- Do not trap the leads under screws, or catch in moving parts (e.g. seat railing).
- Before making connections, turn the car ignition off to avoid short circuits.
- Connect the power supply connection cables to the unit and speakers before connecting it to the auxiliary power connector.
- Be sure to insulate any loose unconnected leads with electrical tape or heat shrink for safety.
- Do not press on the LCD when installing the unit.
- Install the unit with the monitor facing straight forward; do not install it at an angle.
- If your car was parked in a cold or hot place, the picture may not be clear. However, the monitor is not damaged, and the picture will become clear after the temperature in your vehicle becomes normal.
- Some stationary blue, red or green dots may appear on the monitor. These are called "bright spots," and can happen with any LCD. The LCD panel is precision-manufactured with more than 99.99% of its segments functional. However, it is possible that a small percentage (typically 0.01%) of the segments may not light up properly. This will not, however, interfere with your viewing.

### Notes on the power supply lead (yellow)


When connecting this unit in combination with other stereo components, the connected car circuit's rating must be higher than the sum of each component's fuse.


When no car circuits are rated high enough, connect the unit directly to the battery.

### Warning if your car's ignition has no ACC position


After turning the ignition off, be sure to press and hold OFF on the unit until the display disappears. Otherwise, the display does not turn off and this causes battery drain.

## Connection Diagrams

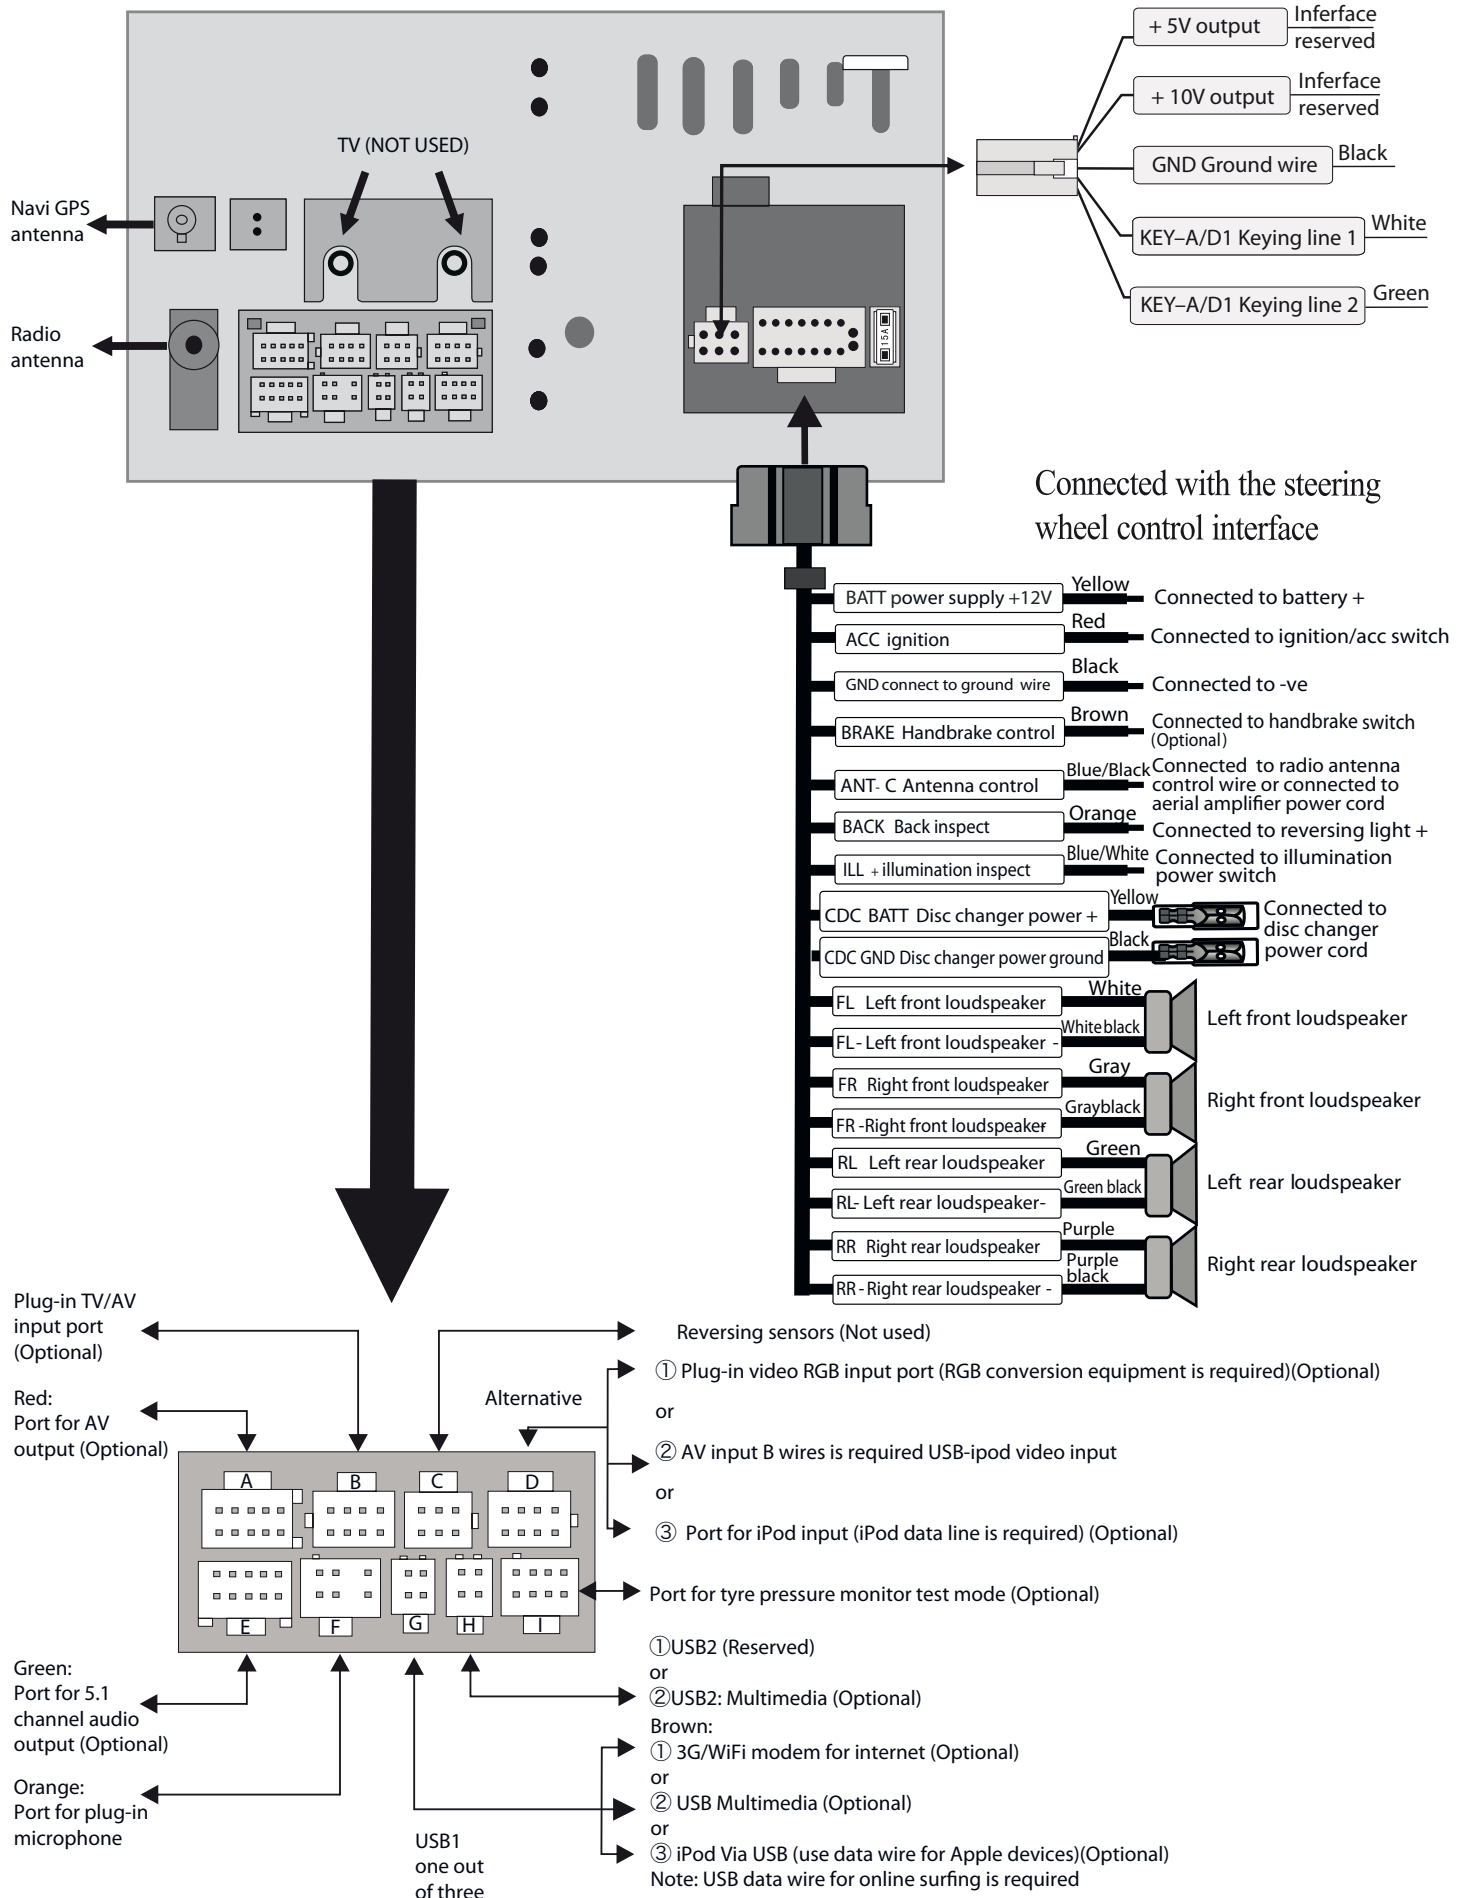

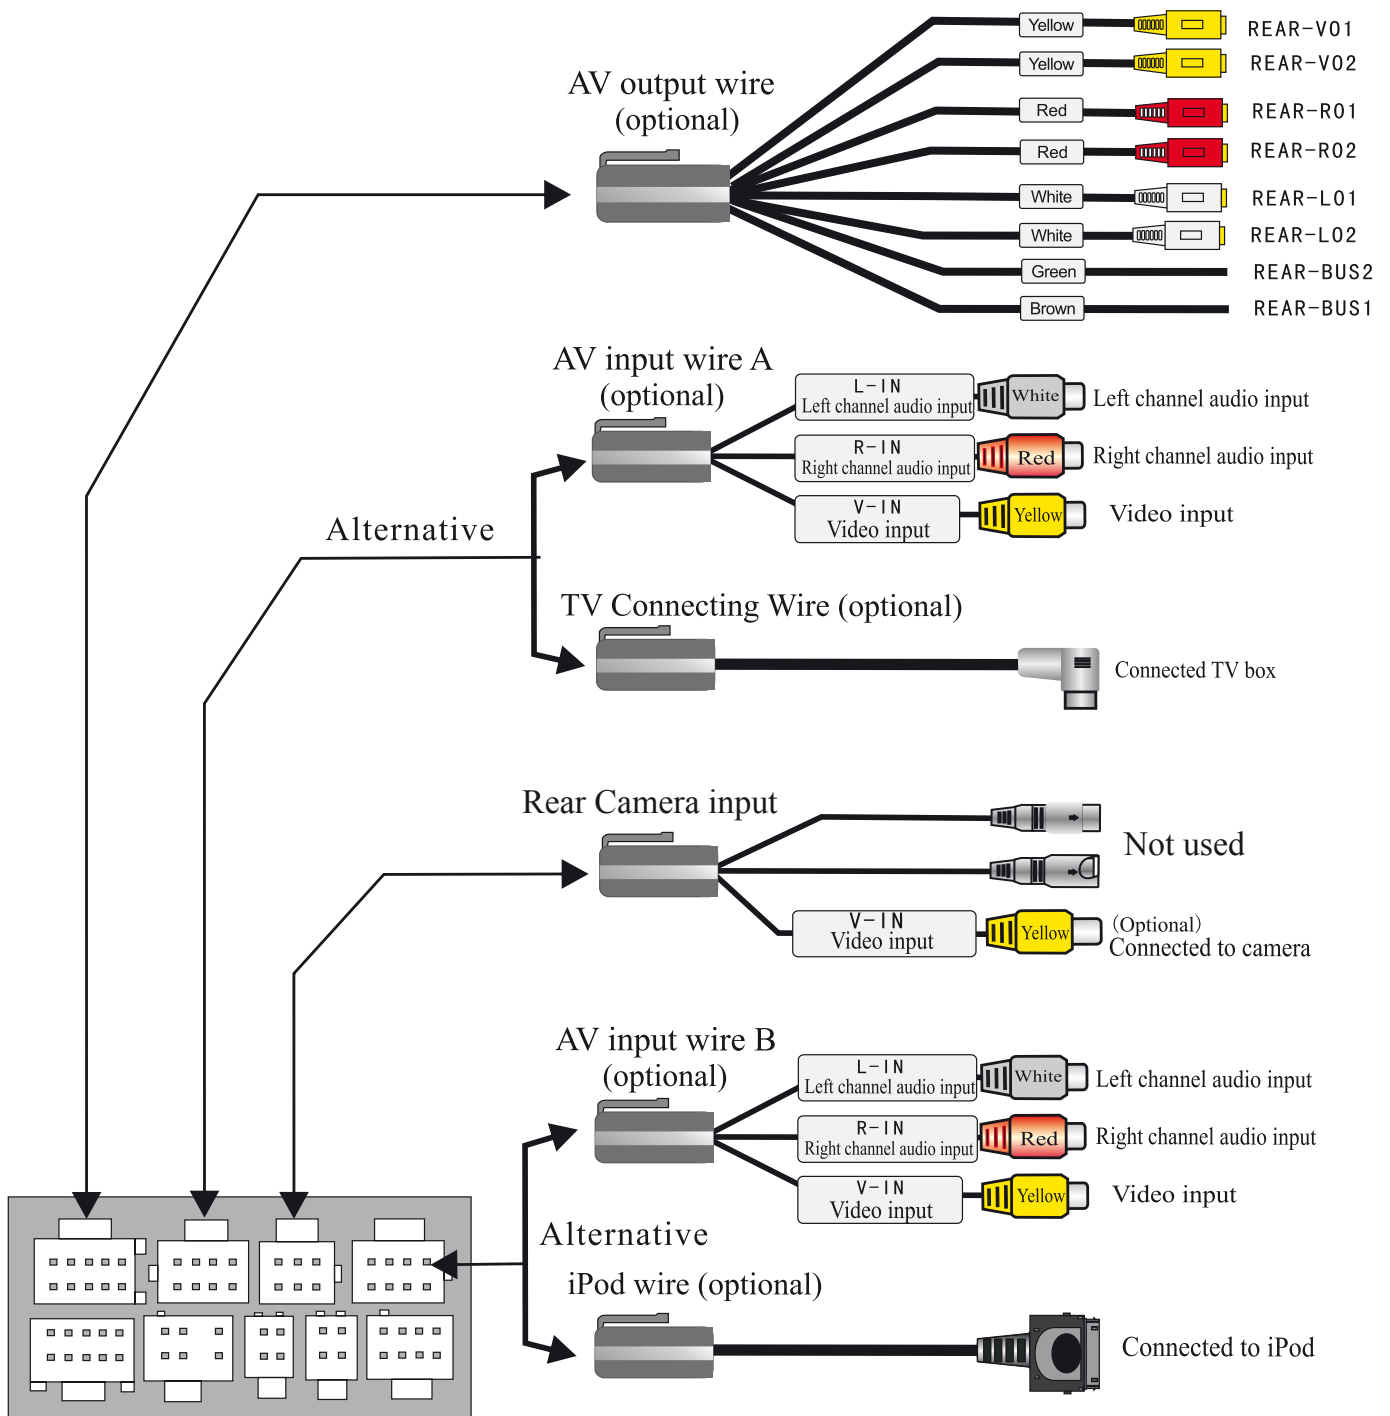

Multi-function compound interface

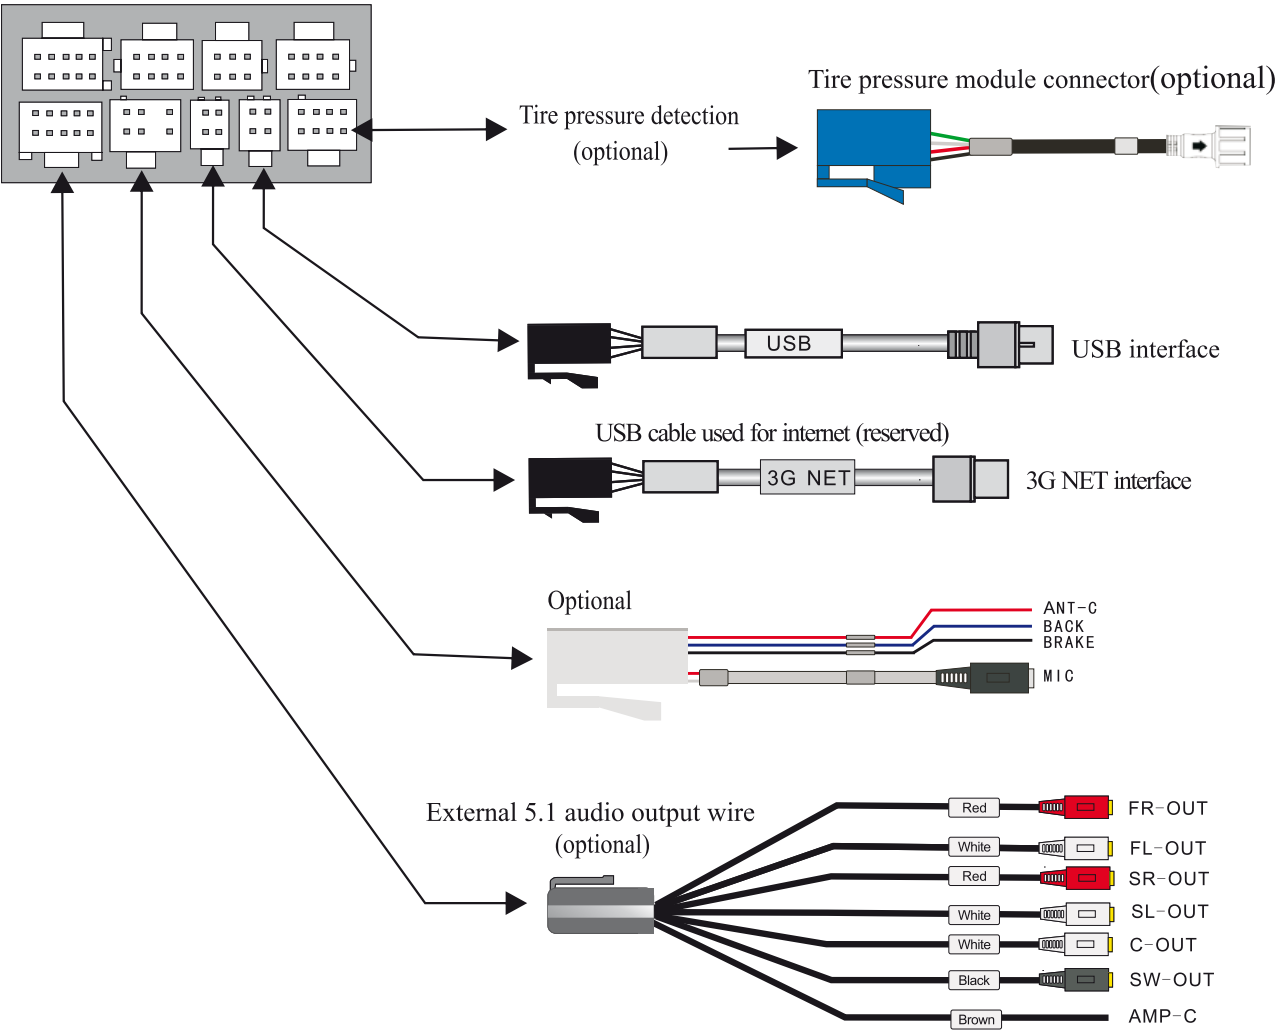



### **CAUTION**

IN NO EVENT SHALL SNOOPER BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR OTHER DAMAGES INCLUDING, WITHOUT LIMITATION, LOSS OF PROFITS, LOSS OF REVENUE, LOSS OF DATA, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME, AND PURCHASER'S TIME RELATED TO OR ARISING OUT OF THE USE OF THIS PRODUCT, ITS HARDWARE AND/OR ITS SOFTWARE.

## **IMPORTANT NOTICE!**

### **Safe and efficient use**

Changes or modifications to this unit not expressly approved by Snooper may void the user's authority to operate the equipment.

Please check for exceptions, due to national requirement or limitations, in usage of Bluetooth equipment before using this product.

### **Driving**

Check the laws and regulations on the use of mobile phones and hands free equipment in the areas where you drive.

Always give full attention to driving and pull off the road (when safe and legal to do so) and park before making or answering a call.

### **Connecting to other devices**

When connecting to any other device, please read its user guide for detailed safety instructions.

### **Radio frequency exposure**

RF signals may affect improperly installed or inadequately shielded electronic systems in cars, such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems or air bag systems. For installation or service of this device, please consult with the manufacturer or its representative of your car. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to this device.

Consult with the manufacturer of your car to ensure that the use of your cellular phone in the car will not affect its electronic system.

Check regularly that all wireless device equipment in your car is mounted and operating properly.

### **Emergency calls**

This Bluetooth car hands free and the electronic device connected to the hands free operate using radio signals, mobile, and landline networks as well as user-programmed function, which cannot guarantee connection under all conditions.

Therefore do not rely solely upon any electronic device for essential communications (such as medical emergencies).

Remember, in order to make or receive calls, the hands free and the electronic device connected to the hands free must be switched on in a service area with adequate cellular signal strength.

Emergency calls may not be possible on all mobile phone networks or when certain network services and/or phone features are in use.

Check with your local service provider.

# Basic Operation

## 1.1 Turn on/off the AVN S9010/20

### ● Turn on

The unit will switch on an off automatically with the ignition key. If connected to the accessory/ignition circuit on the vehicle.

### ● Turn off

Switch off the vehicle and the system will automatically turn off the unit.

If the AVN S9010/20 is not connected to the accessory/ignition circuit press and hold the power button for more than two seconds, and the system will turn off automatically.

## 1.2 Enter to Home Page Menu

When the AVN unit is powered On it will always start in Radio mode.

To enter the '**home page menu**' switch the AVN on and press anywhere on the touchscreen.

To select a function or Mode press the corresponding icon.

*Note: If, when an icon is precessed and the message "Device Not Connected" is displayed, this indicates that there are no connections between the AVN unit and the peripheral unit.*



## 1.3 Spectrum Display

While the spectrum display is enabled, the screen will automatically switch to spectrum mode if there is no operation within 10 seconds

when playing in radio, DVD or disc changer status, or CD.


When playing a DVD, open the home page, the screen will switch to spectrum mode after 10 seconds..

Touch "**SPECTRUM**" icon to switch to different spectrum display modes (as figure shows).


Panel Board Spectrum



Rectangle Spectrum

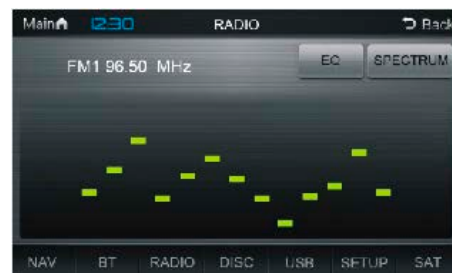

## 1.4 Sound Field Mode

During spectrum mode interface, touch  to switch to different sound field modes.

- CUSTOM
- ROCK
- JAZZ
- POP
- CLASSIC
- STANDARD

## 1.5 Volume adjustment of AVN S9010/20

Plus and Minus buttons to adjust the volume (Not Navigation).

Press the mute button to mute the unit, if mute is pressed then



# Radio Operation

## 2.11 Enter/Exit



Touch the "MAIN" icon to enter home page interface, and touch

On radio interface, the small spectra shown in the right-side of screen, click the icon "EXIT" to return to Main menu. If no operation within 10 seconds, the unit enters the spectra mode.



Touch the icon "SPECTRUM" to adjust the spectra value, touch the screen again to return to the radio interface.

Touch the icon "Main menu" to enter Main menu, touch these icons to enter the corresponding interface.

## 2.12 Automatic Search



Touch **AMS** icon to enter automatic search status, and save the station automatically during automatic search.

Touch the **AMS** icon again to stop automatic search.

18 radio stations can be stored for FM (6 stations for each of FM1, FM2 and FM3), 6 stations can be stored for AM.



FM: 87.50MHz-108.00MHz  
AM: 522KHz-1620KHz

## 2.13 Semi-automatic Search

Touch icon to seek previous or next available stations.

To program the station, press and hold preset station button.

During 'seek' the blue bar will move through the frequency range.

To stop semi-automatic seek press the 'seek' icon again



## 2.14 Band Selection

Touch "Band" icon slightly to switch between FM1, FM2, FM3 and AM.

## 2.15 Play Selected Radio

Select the band first, and then press and hold one of the preset bars to set the station.

 
Selected station will be highlighted.

For example: The figure on the right represents AM, and frequency of 972kHz.



### 2.1.16 Radio keyboard input



Click  icon to display the input keyboard, you can then enter the radio frequency manually. Input the frequency then press OK.

EG: If the radio is in AM mode and you want to tune to 909MHz simply type 909 into the keyboard and press OK to confirm, the radio tuner will now tune to 909MHz.

For FM, 87.5MHz, type 8750 then press OK to confirm the radio tuner will tune to 87.50MHz on the FM band.



### 2.1.17 Programme Type (PTY)

If the radio tuner is on the FM band and Radio Data System (RDS) is switched ON then by pressing the PTY button the radio will search for a particular type of programme.

The radio will then scan the frequency range to look for the programme type selected. If one is found, the radio will tune in to the station. There are several Programme Types. These include NEWS, CURRENT AFFAIRS, INFO(information), SPORT, EDUCATION, DRAMA, CULTURE, SCIENCE, POP MUSIC, ROCK MUSIC, MOR(middle of the road), LIGHT MUSIC (light classical music), OTHER MUSIC, CLASSICS (more 'serious' classical music) and VARIED (speech and/or music).



**Not all types are available in all countries**

**NOTE: If the PTY button is pressed but it does not respond, the radio tuner is either not on FM or RDS is switched Off. Press or to move to the next radio station.**

## Enhanced Other Networks (EON)

The RDS tuner has EON facility, which offers the ability for local stations to 'break into' a national station's broadcast for the duration of a Traffic Announcement. EG: When listening to a BBC national station, such as BBC Radio 3, EON will tell the radio about any traffic bulletins being broadcast by BBC stations in the local area.

The radio would switch to the local BBC radio station for the travel bulletin, then back to the national station when the bulletin had finished. For example, when travelling through Manchester whilst BBC Radio 2 is tuned-in, the radio will switch to BBC Radio Manchester for any travel bulletins, with the TA function switched on.

*This facility is not available in all countries or regions*

## Traffic Announcement (TA)

The radio display can show if the station broadcasts travel information.

The Traffic Announcement (TA) feature allows interruption of a CD or cassette tape when there is a travel report from the radio station that is currently tuned-in. The radio will automatically switch from CD or USB to the radio for the duration of the travel announcement.

For the TA feature to work the function marked TA must be switched on.

*This facility is not available in all countries or regions*



## Alternative Frequency (AF)

If RDS is enabled the radio will retune to a different frequency when the current signal becomes too weak, assuming an alternative frequency is available for the station. For this to happen, the AF function must be switched on. Sometimes the radio will keep trying to find a stronger signal for the station.

This can become distracting as the radio retunes itself, but can be overcome by switching the AF function off.


*This facility is not available in all countries or regions*



# Satellite Navigation Operation

## Start Navigation




To enter navigation press  on the main menu screen or the Navi button on the front of the unit.

The first time navigation is used the following screen will be displayed. Please wait while navigation initialises for the first time

**Note: In navigation mode press Navi button to exit navigation.  
Do not remove the MicroSD card when navigation is active. If navigation is active the touch screen will only access the navigation functions, to access any other function, such as the radio tuner or CD, please press Navi to exit navigation (navigation will still be active in the background).**

To listen to radio, CD, or Ipod whilst using navigation simply press the Navi button. When there are navigation voice instructions the music source will be muted and the navigation voice prompts will be played (through the front speakers ONLY).

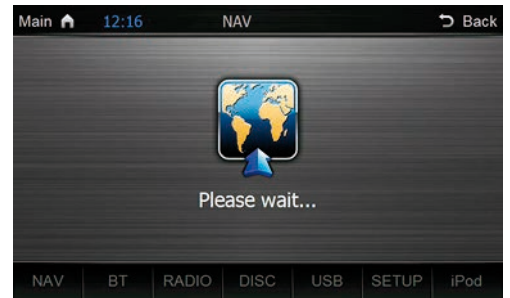

## Volume adjustment

In navigation when voice prompts are active the volume   will adjust the navigation volume.

When no voice prompts are active then the volume   will adjust the music source, such as radio, CD etc.

**Note: In 'system settings' the navigation prompts, which override the source can be switch on or off**

# Installing the SD Card

To start navigation switch AVN S9010/20 on and press the NAV button. Press the 'Navi' icon. When the 'Navi' icon is pressed the AVN S9010/20 will automatically synchronise the AVN S9010/20 serial number with the SD Card. Once the synchronisation is completed, the SD Card will not function with any other device. The AVN S9010/20 is now ready to navigate and the camera database can be downloaded if necessary.



Lift the cover to access the SD card

**NOTE:** Take care when inserting and removing the Micro SD card from the AVN S9010/20

## System Requirements and Downloading

Before you can begin to download the database onto AVN S9010/20, you will need to install the AVN S9010/20 Updater software provided on the software CD.

In order for the software to be installed successfully, there are certain minimum hardware and software requirements needed.

### Hardware Requirements

The computer must have an Intel Pentium Class processor or equivalent, a minimum of 32MB of RAM, a monitor with 256 (8-bit) colours or greater, a CD ROM drive, 20MB of free disc space and a spare USB connection.

### Software Requirements

The software will only operate on the following Windows based operating systems:

Windows Vista

Windows 7

Windows 8

**NOTE:** AVN S9010/20 Updater software does not support Windows 95, 98, Millennium, 2000 or Apple Macintosh operating systems. Windows XP systems are also not supported.

### Software Installation Instructions

Place the Software CD into a CD ROM or DVD drive. Your PC should automatically open a window displaying the instructions for installing the software. Follow the instructions onscreen to install the speed camera updater software.

To launch the CD manually: Click on '**Start**' and then '**Run**'. In the dialogue box that opens click on '**Browse**' – another dialogue box will open. Locate your CD ROM or DVD drive (drive letter is normally D) using the '**Look in**' option and select '**AVN S9010/20**' from the lower portion of the dialogue box. Once you have selected '**AVN S9010/20**' click on '**Open**' on the explorer box and then '**OK**' on the **Run** dialogue box.

Please make sure that the operating system installs the new hardware first before installing the Camera Updater software. Once the updater software has been installed click 'Finish' and then close the CD auto run window. After installing the software, click 'Start' then 'All Programs' and select the updater program to start it. Select your 'Language', 'Vehicle Type' and 'Download Settings' when prompted.

Any updates to the speed camera updater software can be obtained from [www.snooperneo.co.uk/software.cfm](http://www.snooperneo.co.uk/software.cfm). If you have any problems using this software please call 0333 240 1000 during office hours and select Option 3.

**Once the software is installed, you are ready to download the speed camera database onto AVN S9010/20.**

# Downloading the AURA™ Camera Database

**Please Note: You must register AVN S9010/20 before you can perform a download.**

Performing a download is simple.

1. Switch off the AVN S9010/20 and carefully remove the Micro-SD card from the AVN S9010/20. Insert the card into the Micro-SD card reader provided.
2. Double left click the Sirius/Truckmate/Ventura icon on your desktop to open the program.
- 3\* Left click 'Menu' in the top left hand corner of the program window and left click 'Download Settings'. Once you have selected what camera data you want to download 'Click OK'.
4. Connect the Micro-SD card reader to a spare USB socket on the PC.
5. The updater software will then start to run automatically and download the database files that you have selected onto your unit. The download process is as follows:



Micro SD card reader

- The software will display the serial number of the AVN S9010/20 and a green progress bar will start to progress across the screen.
- The software will then connect to our database server and then download\*\* the speed camera database.
- The software card will then save the data on to the micro-SD card..
- Finally, the software will indicate that the download is complete and will instruct you to disconnect the unit from your PC.

\*You only need to do these steps if you wish to change the data that is downloaded onto the AVN S9010/20. If you want the download settings to be the same as the previous download ignore this step.

\*\*If you have a Firewall on your computer, the Firewall software may inform you that the updater software is trying to access the internet. Please make sure that you grant/allow/permit access to the updater program through the Firewall.

Please read the messages supplied by your Firewall software carefully before choosing your option. If you do not allow the program to access the internet through the Firewall, the download process will fail. Once the download is complete, remove the Micro-SD card from the reader and reinsert it back into the AVN S9010/20.

# Satellite Navigation

## 1. Starting Up

First make sure your vehicle is parked in as open a space as possible, clear of tall trees and buildings so that the GPS antenna has a clear view of the sky above. Switch the unit to navigation mode by pressing the NAV button. If this is the first time the unit has been used the screen calibration will be shown, follow the on screen instructions to complete the screen calibration.


After the screen has been calibrated, a warning will be displayed (see images on the right).

Please read the warning and select the relevant vehicle type (where applicable).

Press **"I Agree"** to continue.

Whilst AVN S9010/20 software is loading a start-up display will be shown for just a few seconds and then the screen will show a section of a map. AVN S9010/20 needs to acquire a minimum of four satellites in order to work. Once this has been achieved AVN S9010/20 will ascertain your position and this will be indicated by a green arrow icon on the on-screen map and the GPS signal strength will be shown in the bottom right hand corner of the display. AVN S9010/20 is now ready to navigate.

**As the GPS engine and antenna have never been used before, the first 'Cold' start can take anywhere from 15 – 30 minutes to establish a satellite connection. Once initialised, subsequent start ups will take less time and eventually should take only a matter of minutes.**

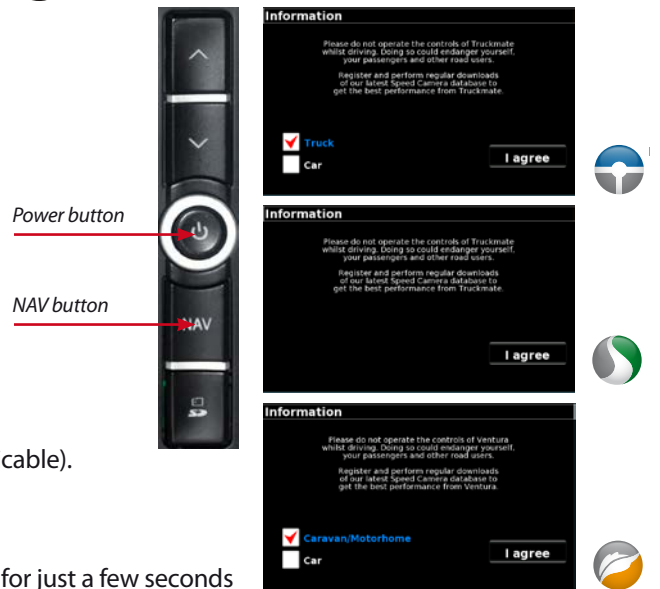


## 2. Easy Set Up

### 2.1 Screen settings

There are a number of map views or different types of information that can be displayed on the screen at any one time:-



1

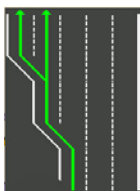

### Lane Guidance.

Snoopers' advanced lane guidance will assist the driver by clarifying which lane the vehicle should be using. Snooper has extensive coverage of motorway, complex junctions, some dual carriage way exits and some inner city junctions. The criteria for lane guidance is that the turning lanes or exit lanes will have more than ONE lane to be included.

2



### My Speed

The speed limit of nearly every road across Europe can now be clearly displayed on your AVN S9010/20 at all times. Choose between speed limits for cars and advisory speed limits for trucks from 3.5t and over. In addition, My Speed can also be set to alert you if you accidentally exceed the speed limit at any time. Inappropriate speed is often responsible for many road accidents resulting in serious injuries which some times can even be fatal. MY-SPEED will ensure that you know what the speed limit is on every road you travel on so you can drive safely at all times.

The text will show RED when the speed limit is exceeded



My Speed sounds an audible alert speed limit is exceeded and the current speed 3 Indicator will change from Black to RED text. Refer to page 65 for full details and settings

**PLEASE NOTE: These are advisory speed limits ONLY. Always check local road side speed limit signs and abide by local driving regulations and laws of the country you are driving in. It is the responsibility of the driver of the vehicle to ensure that they are driving within the posted speed limit at ALL times**

3



Current speed or time - Press to change the displayed information.

4



Indicates the current direction of travel

5

Current road name or road number.

6



Distance to destination

7




Displays the Estimated Time of arrival or remaining journey time. Press to change the displayed information.

8



Current satellite signal strength

9

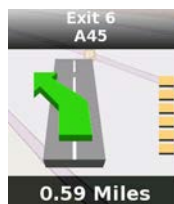

This pop up box will be displayed when the driver needs to take 'action' eg move to the left in 0.59 miles.



The indicator will count down the distance.

10



Route timer. Set Route timer to alert you when you need to take a break. Set the maximum driving time allowed and set the advanced warning time you require before your next break is due. The Route timer clock will keep you advised of the driving time you have left and will automatically alert you when it's time to take a break. Refer to page 70 for details.

Additional warning or information pop ups will appear at the bottom left hand corner of the screen. If lane guidance is displayed then the warning pop ups will be displayed at the top left hand side of the screen.



**Restrictions**

- Height: 4.4m / 14'6"
- Width: 2.0m / 6'6"
- Length: 32'6"
- Weight: 18T / 19.5W
- No trucks allowed
- No trailers
- No U-turn for trucks
- No right turn for trucks
- No left turn for trucks
- Trucks with hazardous goods forbidden
- Trucks with natural goods harmful to water forbidden

**Warning**

- Steep road up ahead
- Steep road down ahead
- Tight bend ahead
- Side winds
- Risk of grounding

or ONLY - Restriction and warnings will be displayed in the bottom left hand side of the screen, if lane guidance is also being displayed the restriction and/or warning will be displayed in the top left hand corner of the screen.

**Junction view**

Full screen images of main motorway junctions are displayed in advance to help you navigate more safely. These junction view images will be displayed on the screen for approximately 5 seconds




Examples of Junction view.

To modify the information shown:

- Press the centre of the screen to access the menu.
- Press the **'Configure'** button.



- Press the  icon where you will see the list of options below.
- Select the option you wish to change on the left.
- To change a setting, simply press on the radio button to indicate which option you would like to choose.
- Continue to select each option and select your preference.
- Press 'OK' at the bottom of the screen to save your preferences.



*use the up  
and down  
arrows  
to scroll to  
other options*

Your chosen settings will now be saved and will appear on the screen each time you use Snooper. If you want to switch between your Current Speed and the Atomic Clock or the Estimated Time of Arrival and Time to Destination during your journey simply touch the screen where either piece of information is displayed and the unit will display the alternate setting and vice versa. However each time you power the device up the original setting will be displayed.



## Setting up vehicle parameters

For Ventura to calculate a route suitable for your vehicle it needs to know certain information about the vehicle itself such as its height, weight and width. It is possible to save the settings of 10 different vehicles. Follow these instructions to enter your vehicles details.

Press the centre of the screen to access the menu, press '**Configure**' and then press the '**Caravan/Motorhome**' icon.

**Name:** Enter the name here.

**Height:** Enter the height of the vehicle here.

**NOTE:** *Maximum height including any protrusions (roof box, TV antenna etc)*

**Length:** Enter the length of the vehicle here.

**Weight:** Enter the weight of the vehicle here.

**Width:** Enter the width of the vehicle here.

**NOTE:** *Caravan - the maximum height, width and length must include the dimensions of the vehicle towing the caravan, whichever is the greatest (e.g. the car wing mirrors may be wider than the caravan being towed). The combined weight of the caravan and the vehicle must also be used.*

**Weight per axle:** Enter the weight per axle of the vehicle here

**Vehicle type:**

- **Fixed Axle:** Standard setting for fixed axle vehicles.
- **Trailer:** Specific traffic rules exist for vehicles towing caravans. For example, there are roads that are forbidden for towing vehicles. These will be avoided.




Name	MY CARAVAN		
Height	2.6m	Length	16.5m
Weight	4.2 t	Width	2.6m
Weight / axle	1.4 t		
Vehicle type	TRAILER		

OK

## Setting up vehicle parameters



To enter the emission settings of your vehicle in car mode press the  and enter the details as shown in the Environmental setting section page: 21.

## Environmental settings or Low Emission Zones (LEZ)

Low Emission Zones (LEZs) are areas or roads where the most polluting vehicles are restricted from entering. This means that vehicles are banned, or in some cases charged, if they enter the LEZ when their emissions are over a set level.

Vehicle emissions are classified by Euro Standards (1-6) for the vehicles that they affect. In many cases another factor is whether or not the vehicle has a particulate filter or catalytic converter. Before you travel into a LEZ, you need to find out the emissions standard of your vehicle.

All LEZs affect heavy duty goods vehicles (usually over 3.5 tonnes Gross Vehicle Weight (GVW)), and most buses and coaches (usually defined as over 5 tonnes GVW). Some LEZs also affect vans, cars and motorcycles.

Most LEZs operate 24 hours a day, 365 days a year, with some of the Italian LEZs currently the only exceptions to this rule. To enter your environmental setting press on the arrow once in the Environmental setting page press the arrow again to return to the vehicles setting page.




Click on the options to edit the information



Enter number of passengers carried.



Enter fuel type

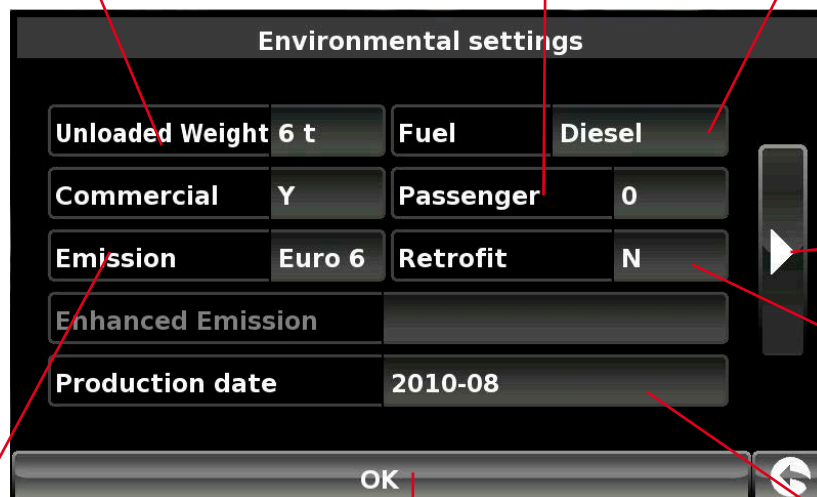

Press to return to the previous screen


Retrofit - switch between yes (Y) and No(N) by pressing the Retrofit button

press OK to save



Select Euro rating

Enter vehicle production date in YYYY-MM format

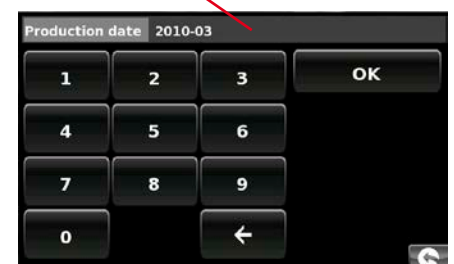

## Setting up vehicle parameters

For Truckmate to calculate a route suitable for your vehicle it needs to know certain information about the vehicle itself such as its height, weight and width. It is possible to save the settings of 10 different trucks. Follow these instructions to enter your vehicles details.

Press the centre of the screen to access the menu, press '**Configure**' and then press the '**Truck**' icon.

**Name:** Enter the name here (Top left field, default name TRUCK 1).

**Height:** Enter the height of the vehicle here.

**Length:** Enter the length of the vehicle here.

**Weight:** Enter the weight of the vehicle here.

**Width:** Enter the width of the vehicle here.

**Weight per axle:** Enter the weight per axle of the vehicle here



VOLVO FM	Height	2.6m
Length	16.5 m	Weight
Width	2.4 m	Weight / axle
Trailer type	1 trailer	
Load type	NONE(NORMAL)	
Load code	Not Applicable	

OK

### Truck type:

- **Truck:** Standard setting for fixed axle vehicles.
- **Trailer:** Specific traffic rules exist for trucks with trailers. For example, there are roads that are forbidden for vehicles with trailers. These will be avoided. Choose between: Truck with No trailer, Truck with 1 trailer, Truck with 2 trailers, Truck with 3 or more trailers or semi or tractor with 1 or more trailers.

### Load type:

- **None** (Normal)
- **Hazardous:** Hazardous goods that are not explosive or harmful for water.
- **Explosive and Flammable**
- **Harmful for water**

### Tunnel Category

ADR Tunnel Codes:

- Select one of the applicable tunnel codes , by default 'Normal' is selected
- The tunnel category codes consist of an individual letter from "A" to "E" this will be indicated by the use of road signs and or signals. Restrictions will not apply to category "A" tunnels as these are unrestricted and will not require any signage.



### B Most restrictive

Passage forbidden through tunnels of category B, C, D and E

### B1000C

Carriage where the total net explosive mass per transport unit exceeds 1000 kg: Passage forbidden through tunnels of category B, C, D and E; does not exceed 1000 kg: Passage forbidden through tunnels of category C, D and E

### B/D

Tank carriage: Passage forbidden through tunnels of category B, C, D and E; Other carriage: Passage forbidden through tunnels of category D and E

### B/E

Tank carriage: Passage forbidden through tunnels of category B, C, D and E; Other carriage: Passage forbidden through tunnels of category E

<b>C</b>	Passage forbidden through tunnels of category C, D and E
<b>C5000D</b>	Carriage where the total net explosive mass per transport unit exceeds 5000 kg: Passage forbidden through tunnels of category C, D and E; does not exceed 5000kg: Passage forbidden through tunnels of category D and E
<b>C/D</b>	Tank carriage: Passage forbidden through tunnels of category C, D and E; Other carriage: Passage forbidden through tunnels of category D and E
<b>C/E</b>	Tank carriage: Passage forbidden through tunnels of category C, D and E; Other carriage: Passage forbidden through tunnels of category E
<b>D</b>	Passage forbidden through tunnels of category D and E
<b>D/E</b>	Bulk or tank carriage: Passage forbidden through tunnels of category D and E; Other carriage: Passage forbidden through tunnels of category E
<b>E</b>	least restrictive Passage forbidden through tunnels of category E
<b>NORMAL</b>	Passage allowed through all tunnels (For UN Nos. 2919 and 3331, see also ADR 8.6.3.1).

For mixed loads choose the **MOST** restrictive category

#### Disclaimer

This content gives general guidance only and should not be regarded as a complete or authoritative statement of the law. The user guide will be updated to reflect any developments in new legislation or case law.

## Setting up vehicle parameters

For Bus & Coach to calculate a route suitable for your vehicle it needs to know certain information about the vehicle itself such as its height, weight and width. It is possible to save the settings of 10 different vehicles. Follow these instructions to enter your vehicles details.

Press the centre of the screen to access the menu, press '**Configure**' and then press the '**Bus/Coach**' icon.

**Name:** Enter the name here.

**Height:** Enter the height of the vehicle here.

**NOTE:** Maximum height including any protrusions (roof box, TV antenna etc)

**Length:** Enter the length of the vehicle here.

**Weight:** Enter the weight of the vehicle here.

**Width:** Enter the width of the vehicle here.

**Weight per axle:** Enter the weight per axle of the vehicle here

**Num of axles:** Enter the number of axles here.



Name	MB OM457 LA		
Height	3.7m	Length	12.1 m
Weight	18 t	Width	2.5 m
Weight / axle	7.1 t		
Num of axles	2		

OK 

## Environmental settings or Low Emission Zones (LEZ)

Low Emission Zones (LEZs) are areas or roads where the most polluting vehicles are restricted from entering. This means that vehicles are banned, or in some cases charged, if they enter the LEZ when their emissions are over a set level.

Vehicle emissions are classified by Euro Standards (1-6) for the vehicles that they affect. In many cases another factor is whether or not the vehicle has a particulate filter or catalytic converter. Before you travel into a LEZ, you need to find out the emissions standard of your vehicle.

All LEZs affect heavy duty goods vehicles (usually over 3.5 tonnes Gross Vehicle Weight (GVW)), and most buses and coaches (usually defined as over 5 tonnes GVW). Some LEZs also affect vans, cars and motorcycles.

Most LEZs operate 24 hours a day, 365 days a year, with some of the Italian LEZs currently the only exceptions to this rule. To enter your environmental setting press on the arrow once in the Environmental setting page press the arrow again to return to the vehicles setting page.




Click on the options to edit the information



Enter number of passengers carried.




Enter fuel type

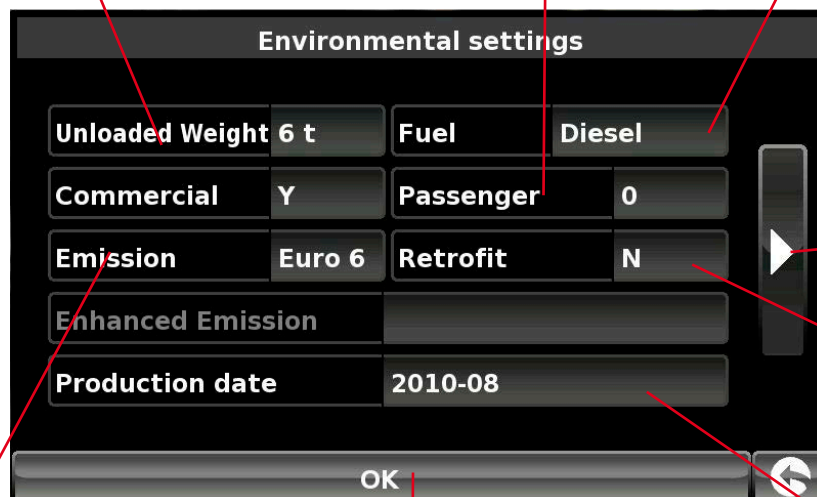

Press to return to the previous screen


Retrofit - switch between yes (Y) and No(N) by pressing the Retrofit button

press OK to save

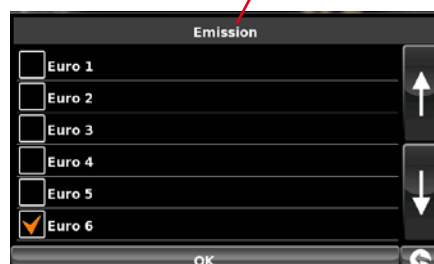

Select Euro rating

Enter vehicle production date in YYYY-MM format

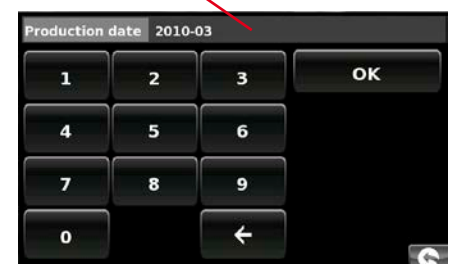

### 3. Planning a route

There are several ways to plan a route on Snooper.



#### 3.1 Find by post code

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press the **'Find by post code'** icon.
- If you have the European version of Snooper, you will need to select the **'Country'** first BEFORE typing the postcode. (If the correct country is already displayed, go to the next step). Use the arrow keys on the right of the display to scroll up and down the country options. Select the country with your finger.
- Press **'Post code'** and enter the full postcode using the onscreen keyboard.
- Press the **'OK'** button on the keyboard.



**Please Note: The button on the keyboard with no character on it is the 'Space' key. UK post codes can be entered with and without a space.**


If the following message is displayed **'Please, input correct postcode'**, the postcode has been entered incorrectly. Press **OK** and retype the postcode.

- Snooper will display a screen showing the postcode and the street name.
- If you know the house/property number of your destination, press the **House No.** button to enter it .
- Once you have entered the house number press the **'OK'** button.
- Alternatively, if you do not have a house or building number, you can navigate to a point where two roads meet instead.



Press the **'Intersection'** button and select the road **Intersection**.

**NOTE: For Truckmate or Ventura models you can select the vehicle type before the journey is calculated.**

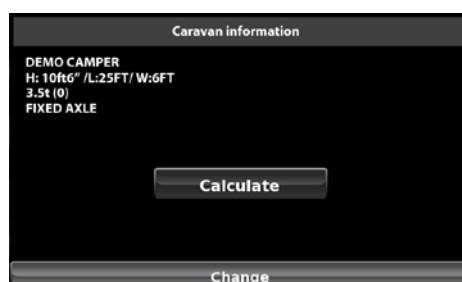

- Press the **'Calculate'** button.

[Return to contents](#)



Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**

**User advice - By subscribing to and downloading the AURA™ Speed Camera database you will automatically be alerted to all 'Fixed' Speed Cameras and other Accident Hotspots during your journey ensuring that you are always aware of the correct speed limit whilst travelling along any particularly hazardous stretches of road.**



### 3.3 Find by city

If you do not know the postcode but have the street name and the town or city that you would like to navigate to, then select this option.

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Find by city'** icon.
- Select the **'Country'** first BEFORE typing the city. (If the correct country is already displayed, go to the next step). Use the arrow keys on the right of the display to scroll up and down the country options. Select the country with your finger.
- Next press **'City'** and enter the city name using the keyboard displayed.

As you begin to input the city name, Snooper will automatically prompt you with a list of possible matches. If you can see the name of the destination you are searching for in the lower window, you can select it easily by pressing that name with your finger. If you wish to view the list of possible destinations in full, press the down arrow to the top right hand corner of the display and a list of cities will be displayed then select your destination by touching on it. Use the arrow keys on the right hand side of the display to scroll through the list.

- Press **'Street'** and use the keyboard displayed to type in the street name.  
**Note: if there is more than one street with the same name in that city then a list of streets will be displayed along with the post code or district**

As you begin to input the road or street name, Snooper will automatically prompt you with a list of possible matches similar to when searching for **'City'** described above. When you see the road you require select it by pressing it with your finger.

- If you wish, you can enter the property number by pressing **'House No.'** and then typing the house number on the keyboard. Once the house number has been selected, press the **'OK'** button. **Note: Truckmate & Ventura**-After the **OK** button is pressed an additional screen will be displayed where you can choose the relevant vehicle. Press **'Change'** to edit the vehicle choice or **'OK'** to continue.
- Press the **'Calculate'** button.

Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey

**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**



### 3.3.1 Home

You can navigate easily and quickly from a previous journey or destination to your home, by personalising Snooper so that a route can be calculated by pressing just a few buttons.

### 3.3.2 Setting the 'Home' Destination

- Press the centre of the display to enter the '**Navigate to**' menu.
- Press the '**Home**' icon.

*The first time the 'Home' function is used an information screen is displayed saying 'Set Home? Press 'OK' in the information window to continue, press 'CANCEL' to exit. If 'Home' has already been set it can be edited in My Favourites – refer to section 4.4 on page 51*



- You can search for your address by using one of the following options:  
'**Find address by city**' or '**Find address by post code**'. Please refer to **3.1** and **3.2** above on how to use these functions.
- Once you have entered the '**Home**' destination, a new field is available for you to '**Name**' the destination.
- Press '**Name**' and a keyboard will be displayed with the road name you selected.
- Press the '**Arrow**' key to erase this data then input the new name using the keyboard.

*Please note: You can enter a new name for the home destination using up to a maximum of sixteen characters.*

- Press '**Save**' once you have entered the name.
- Once your home address has been saved, Snooper will be able to calculate a route to this address.

### 3.3.3 Using the 'Home' Function

- To calculate a route:
- Press the centre of the display to enter the '**Navigate to**' menu.
- Press the '**Home**' icon.

Snooper will display details of the destination and offer a '**Go**' button and a '**Route Option**' button. Press '**Go**' to begin your journey.



### 3.4 Office

You can navigate easily and quickly from a previous journey or destination to your office or place of work, by personalising Snooper so that a route can be calculated by pressing just a few buttons.

#### 3.4.1 Setting the 'Office' Destination

- Press the centre of the display to enter the '**Navigate to**' menu.
- Press the '**Office**' icon.

*The first time the 'Office' function is used an information screen is displayed saying 'Set Office? Press 'OK' in the information window to continue, press 'CANCEL' to exit. If 'Office' has already been set it can be edited in My Favourites – refer to section 4.5 on page 52.*



- You can search for your address by using one of the following options:  
'Find address by city' or 'Find address by post code'. Please refer to 3.1 and 3.2 above on how to use these functions.

Once you have entered the '**Office**' destination, a new field is available for you to '**Name**' the destination.

- Press '**Name**' and a keyboard will be displayed with the road name you selected.
- Press the '**Arrow**' key to erase this data then input the new name using the keyboard.

*Please note: You can enter a new name for the office destination using up to a maximum of sixteen characters.*

- Press '**Save**' once you have entered the name.


Once your office address has been saved, Snooper will be able to calculate a route to this address.

#### 3.4.2 Using the 'Office' Function

To calculate a route:

Press the centre of the display to enter the '**Navigate to**' menu.

- Press the '**Office**' icon.  
Snooper will display details of the destination and offer a '**Go**' button and a '**Route Option**' button. Press '**Go**' to begin your journey.

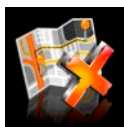

### 3.5 Recent Route or Clear route

Snooper automatically stores the last route that has been calculated, so that if you wish to return to that address you do not have to re-input all the details again.

- To use this function:
- Press the centre of the screen to enter the '**Navigate to**' menu.
- Press the '**Recent Route**' icon.

Snooper will now calculate the route to your selected location.

Once a route has been calculated, the **'Recent Route'** icon is replaced with a **'Clear Route'** icon. To cancel a route that you have calculated:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Clear Route'** icon.

The route will then automatically be deleted.

**Please Note: For the 'Clear Route' feature to operate you will need to have entered and calculated a route. If the 'Recent Route' icon is displayed a route has NOT been entered.**



### 3.6 Multi route

With Snooper you have the facility to enter more than one destination at a time (for instance if you wish to visit other locations before reaching your ultimate destination). You can store up to seven multi-routes, with up to sixteen destinations within each multi-route. The unit will process and calculate the destinations in the following order: A to B, B to C, and C to D etc. When entering the destinations you are able to review the routes and change the order of the routes before pressing **'Go'**.

#### 3.6.1 Create a Multi-route

- Press the centre of the display to enter the **'Navigate to'** menu.
- Press the **'Multi-route'** icon.


You will then see the 'Multi-route screen' that allows you to:

- Create a multi-route
- Use or edit a previously stored multi-route
- Delete a multi-route.
- Press **'Create multi-route'**.  
A screen is displayed where you can:
  - > **'Edit name'** the name of the multi-route
  - > **'Change Start'** the start point of the multi-route
  - > **'Add'** your destinations.
  - > **'Save'** your destinations
  - > **'Calculate'** your multi-route
- Press **'Edit Name'** to create a name for your new multi-route.

**Please note: You can enter a new name for the multi-route using up to a maximum of sixteen characters.**


- Press the **'Arrow'** key to delete the current name for your multi-route.
- Type the new name of your multi-route using the keyboard.
- Press the **'Save'** button in the top right hand corner.

**If you wish to change the start position of the multi-route, press 'Change Start' to change it. You are provided with several options to select your start position. To find out how to use these options please refer to the applicable sections earlier in this user manual.**

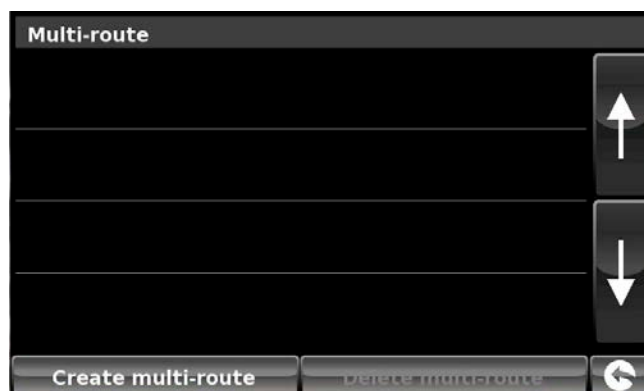

If you are happy with the start position, you can now begin to enter the data of your first destination. If you want to change the start position, press **'Change Start'**. You can then select how you want to find your start position

- Press **'Add'** – you are provided with several options to find your destination stage:
  - > Find address by city
  - > Find address by post code
  - > Find by POI
  - > Find by recently used
  - > Find by favourites

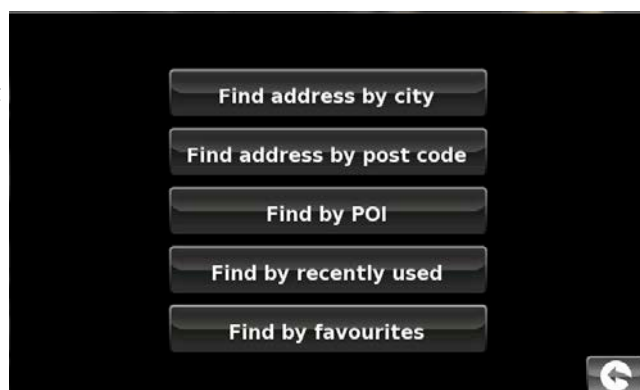


*To find out how to use these options please refer to the applicable sections in this user manual.*

- Once you have entered the data press **'Set'**.
- The destination stage will now appear in the multi-route screen.
- Press **'Add'** to enter additional destination stages.
- Once you have entered all your destination stages press **'Save'**.

### 3.6.2 Editing a Multi-route

If you wish to change the order or delete any of the stages in the multi-route:

- Press the centre of the display to enter the **'Navigate to'** menu.
- Press the **'Multi-route'** icon.
- Press the name of the multi-route destination you wish to edit
- Press one of the stages listed and some new options will appear near the bottom of the display.
  1. Deletes selected destination
  2. Changes destination. Choose between final destination and stops
  3. Move selected destination up
  4. Move selected destination down
  5. Route options, change the route option for that section of the journey (See section 6.0 for route options)

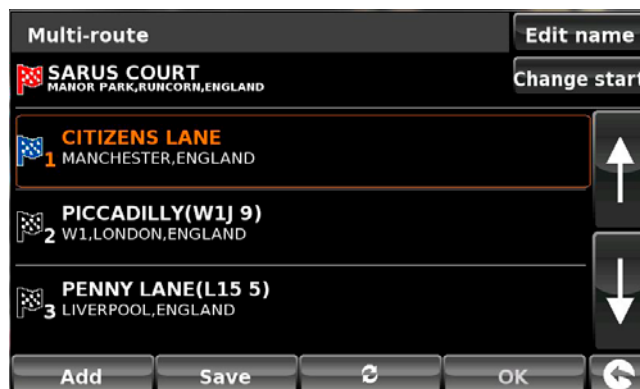

***Note:** These functions only apply to the stage that you have selected. To edit the other stages in the list press the 'Return Arrow' in the bottom right hand corner of the screen and select the new stage.*

Once you have made your desired changes press **'Save'**.

### 3.6.3 Using the Multi-route function

To use a saved multi-route:


- Press the centre of the screen to enter the '**Navigate to**' menu
- Press the '**Multi-route**' icon.
- Press the name of the multi-route destination you wish to use
- Press '**Calculate**'.

Snooper will calculate the route to each destination stage and provide a new summary screen with the distance to each destination stage along with the estimated duration of the journey to each destination stage from the start point.

- If you wish to view the calculated route on a map, press '**Map**'.
- If you wish to start using the Multi-route, press '**Go**'.


**Please Note:** If you press one of the stages listed before pressing '**Go**', you will see a summary screen where you can either press '**Go**' to start navigation, '**Simulation**' to see the actual route that will be taken or '**Guide**' which will list the turn by turn instructions for that stage of the journey. The '**Summary Screen**' will also display the distance to your destination, estimated time of arrival and the estimated time it will take to complete that stage of the journey.

Once you have pressed '**Go**' Snooper will now display your current map position along with a small summary screen located in the bottom right hand corner. The following information is displayed on the summary screen:

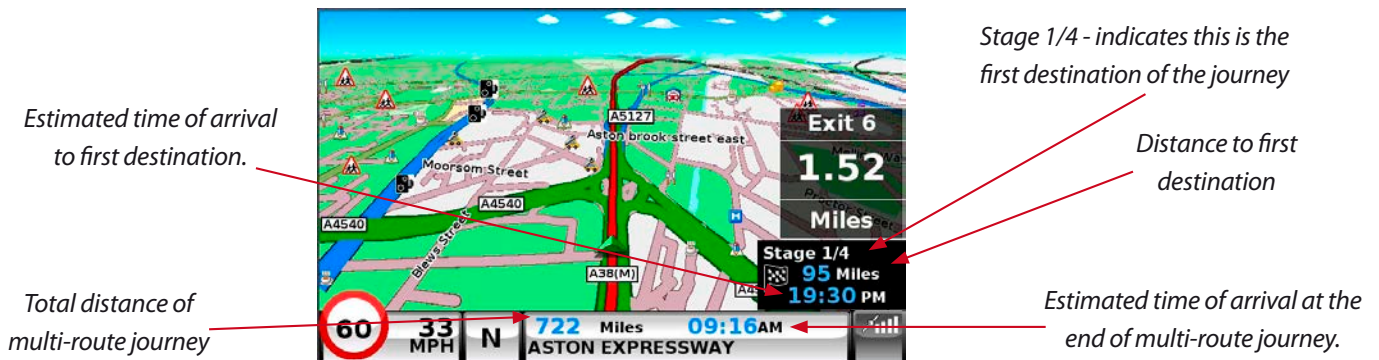


If, during the journey, you wish to cancel the current stage and begin travelling to the next stage in your multi-route journey press the summary screen in the bottom right hand corner of the display and the message '**Delete current stage?**' will be displayed. Press '**OK**' and the unit will calculate your route to the next stage in the multi-route from your current position.

**Note:** If Snooper is turned '**OFF**' and then '**ON**' during a multi-route journey the device will retain the current route and ask you if you wish to continue with the current destination or with the next stage of the destination or to cancel the multi-route.

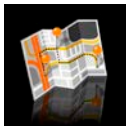


### 3.6.4 Auto arrange Multi-route

Once you create a multi-route Snooper can arrange the multi-route into a logical order by pressing the  icon




1. Add an additional destination to Multi-route
2. Save the Multi-route without making any further changes.
3. Rearrange the multi-route into the most efficient/logical order (based on route options and vehicle parameters)
4. OK - greyed out if no changes have been made
5. Return to previous screen

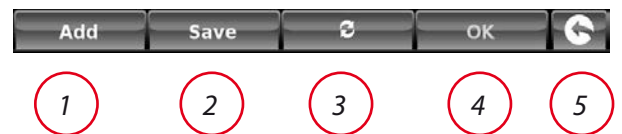


Once the route has been arranged press the  icon then OK. Press 

Snooper will now calculate the multi-routes estimated time and distances

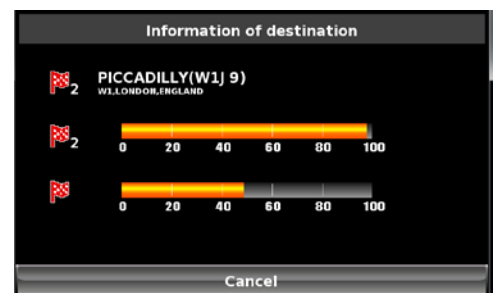

Then displays the route summary


Use the up and down arrows to view additional stops or the final destination.

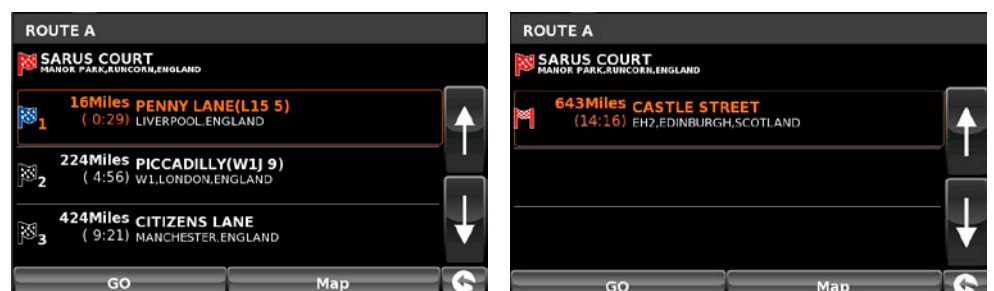

Press  to continue or  to display the route on a map.

Use the + and - buttons to zoom in and out of the map view. You can also 'drag' the map using your finger on the touch screen



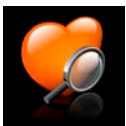


### 3.7 Find by favourites

Snooper has the capacity to store up to 150 user locations. To add your favourite locations see Section 4.1.1 on page 50.

To navigate to one of your stored locations:

- Press the centre of the screen to enter the '**Navigate to**' menu.
- Press the '**Find by favourites**' icon.
- Select the favourite you wish to navigate to from the list provided.

The information about your chosen favourite is displayed.

- To start the journey press '**Calculate**'
- To change the route parameters press '**Route Option**' (see Section 6.0: Route Options on page 72 for specific instructions).
- To view the location of the favourite, press '**Map**'.
- To return to the previous page press the return arrow  located in the bottom right hand corner of the display.

Once the calculation is complete you can either press '**Go**' to start navigation, '**Simulation**' to see the actual route that will be taken, '**Route Option**' to change the parameters of the route or '**Guide**' which will list the turn by turn instructions of the journey. The '**Summary Screen**' will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**


Press  to move to the next screen



### 3.8 Recent destination


Snooper is capable of storing the last 40 routes that have been calculated, so that if you wish to return to an address you do not have to re-input the details again.

To calculate a route using the '**Recent destination**' function:

- Press the centre of the screen to enter the '**Navigate to**' menu.
- Press the black arrow  once.
- Press the '**Recent destination**' icon.
- Select the recent route you wish to navigate to from the list provided\*.

\*A list of your most recent routes will be shown in chronological order. Use the arrows on the right hand side of the display to scroll up and down through the list and select the destination you would like.

To start the journey press '**Calculate**'

- To change the route parameters press '**Route Option**' (see Section 6.0: Route Options on page 72 for specific instructions).
- To view the location of the recent destination, press '**Map**'.
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.

Once the calculation is complete you can either press '**Go**' to start navigation, '**Simulation**' to see the actual route that will be taken, '**Route Option**' to change the parameters of the route or '**Guide**' which will list the turn by turn instructions of the journey. The '**Summary Screen**' will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.


**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**



### 3.9 Find by POI (points of interest)

If you would like to calculate a route to a hotel, airport, restaurant or even a golf course Snooper can calculate a route using its extensive database of POI's (Points of Interest).

To navigate using this database:

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **'Find by POI'** icon.
- Press **'Country'** and select the country where you would like to find the POI. (If the country is already displayed, go to the next step). Use the arrow keys on the right to scroll up and down the options.
- Next press **'City'** and enter the city name using the keyboard displayed.


As you begin to input the city name, Snooper will automatically prompt you with a list of possible matches. If you can see the name of the destination you are searching for in the lower window, select it by pressing that name with your finger. If you wish to view the list of possible destinations in full, press the down arrow to the top right hand corner of the display and a list will be displayed then, select your destination. Use the arrow keys on the right hand side of the display to scroll through the list.

- Press **'Category'** and enter the category type using the keyboard displayed.



If you do not know which category to type you can press the down arrow to the right of the lower window and all the category types will be displayed in alphabetical order. Use the arrows to the right of the display to scroll up and down through the category options. Once you find the category you are looking for select it with your finger.

- Press **'Name'**. If the name of your POI is displayed in the lower window select it with your finger. Alternatively you can start typing the name to narrow the options and then select it.

All the fields are now filled in for your chosen POI.

- To start the journey press **'Calculate'**
- To view the location of the POI, press **'Map'**.
- To change the route parameters press **'Route Option'** (see Section 6.0: Route Options on page 72 for specific instructions).
- Press **'Information'** to see more details about the POI.
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.

Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

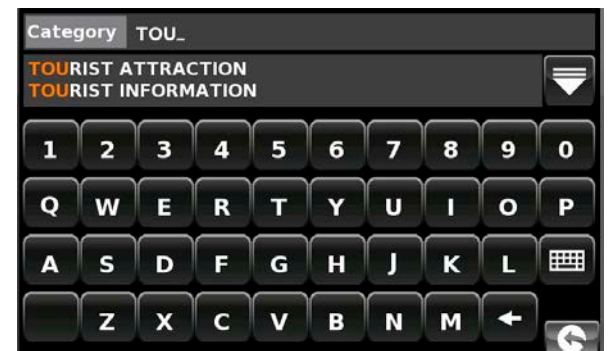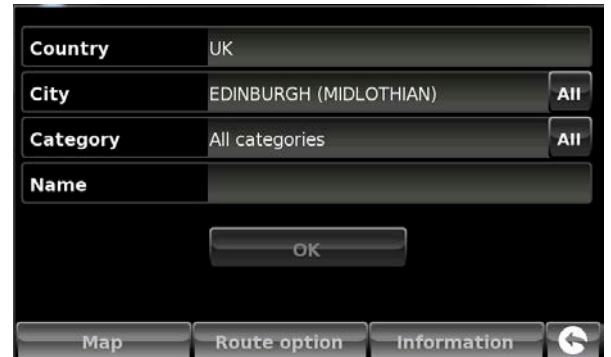


**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**




### 3.10 Find by nearest POI


This function will help you to find the nearest POI from either your '**Current Position**' or a '**Different Position**' within a certain radius which can be specified up to a maximum of 60 miles.

#### 3.10.1 To navigate using the 'Current Position'


- Press the centre of the screen to enter the '**Navigate to**' menu.
- Press the black arrow  once.
- Press the '**Find by nearest POI**' icon.
- Select '**Current Position**'
- Select the maximum radius you wish the unit to search for (the default setting is 30 miles) and then press '**OK**'
- Press '**Category**' and enter the category type using the keyboard displayed.

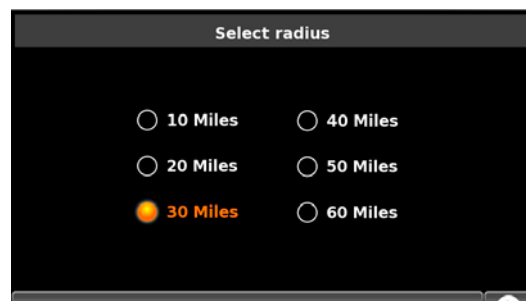

If you do not know which category to type, you can press the down arrow to the right of the lower window and all the category types will be displayed in alphabetical order. Use the arrows to the right of the display to scroll up and down through the category options. Once you find the category you are looking for select it with your finger.

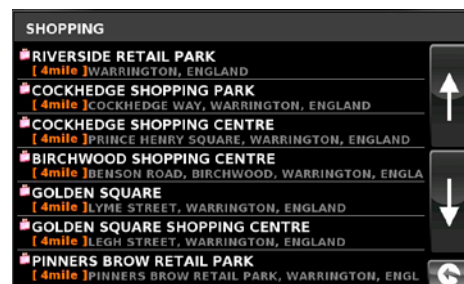

A list of POI's within the specified radius and category will be displayed. Use the arrows on the right hand side of the screen to scroll up and down through the options. When you find the POI that you are looking for, select it with your finger

- To start the journey press '**Calculate**'
- To view the location of the POI, press '**Map**'.
- To change the route parameters press '**Route Option**' (see Section 6.0: Route Options on page 72 for specific instructions).
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.




Once the calculation is complete you can either press '**Go**' to start navigation, '**Simulation**' to see the actual route that will be taken, '**Route Option**' to change the parameters of the route or '**Guide**' which will list the turn by turn instructions of the journey. The '**Summary Screen**' will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.



**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**

### 3.10.2 To navigate using a 'Different Position'

- Press the centre of the screen to enter the 'Navigate to' menu.
- Press the black arrow  once.
- Press the 'Find by nearest POI' icon.
- Select 'Different Position'
- Press 'Country' and select the country where you would like to find the POI. (If the country is already displayed, go to the next step). Use the arrow keys on the right to scroll up and down the options.
- Next press 'City' and enter the city name using the keyboard displayed.

As you begin to input the city name, Snooper will automatically prompt you with a list of possible matches. If you can see the name of the destination you are searching for in the lower window, you can select it easily by selecting that name. If you wish to view the list of possible destinations in full, press the down arrow to the top right hand corner of the display and a list of cities will be displayed then select your destination. Use the arrow keys on the right hand side of the display to scroll through the list.

- Press 'Street' and use the keyboard displayed to type in the street name.

As you begin to input the road or street name, Snooper will automatically prompt you with a list of possible matches similar to when searching for 'City' described above. When you see the road you require select it.


Once all fields have been completed you can view the new position by pressing 'Map' at the bottom of the screen.


- Press 'Set'
- Select the maximum radius you wish the unit to search for (the default setting is 30 miles) and then press 'OK'
- Press 'Category' and enter the category type using the keyboard displayed.

If you do not know which category to type, you can press the down arrow to the right of the lower window and all the category types will be displayed in alphabetical order. Use the arrows to the right of the display to scroll up and down through the category options. Once you find the category you are looking for select it.



A list of POI's within the specified radius and category will be displayed. Use the arrows to the right hand side of the screen to scroll up and down through the options. When you find the POI that you are looking for, select it.

- To start the journey press 'Calculate'
- To view the location of the POI, press 'Map'.
- To change the route parameters press 'Route Option' (see Section 6: Route Options on page 72 for specific instructions).
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.

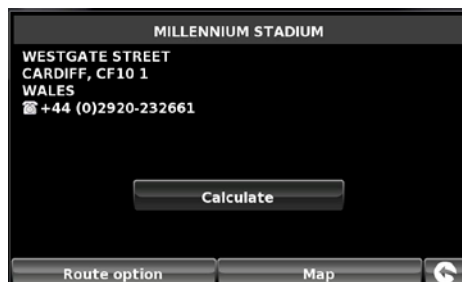

Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

*Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.*



### 3.10.3 To navigate using 'Along Route' (see section 3.11.4 for details)

Choose to search from our extensive list of Point's of Interest using our new 'Corridor Search' facility. The 'Corridor Search' search function enables you to search specifically along your pre-programmed route.

The instructions to use this facility are the same as above (see Section 3.10.2) but select **'Along Route'** to open the search.




### 3.11 User POI

The Snooper comes pre loaded with a number of 'User POI's'. You can add additional POI (Points Of Interest) by downloading them to the device via a PC. The User POI Updater program can be downloaded from: <https://www.snooperneo.co.uk/Software.cfm>. Once the program is installed it will be possible to select additional POI lists for the Snooper.



#### To navigate using User POI:


- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **User POI'** icon.
- A list of installed User POI's will appear, select the one you want to navigate to by pressing the name.
- The option to:  
Find around current position  
Find around different position will be displayed.




#### 3.11.1 Find by name

- If you know the name of the POI you are looking for select **'Find by name'** and then type the name of the POI.

Press  to reveal more locations

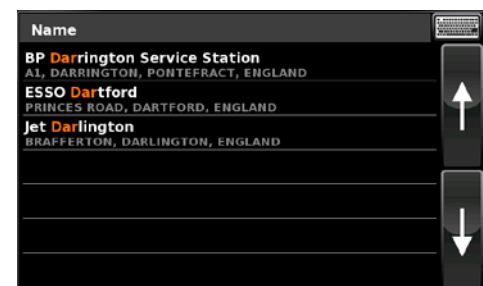


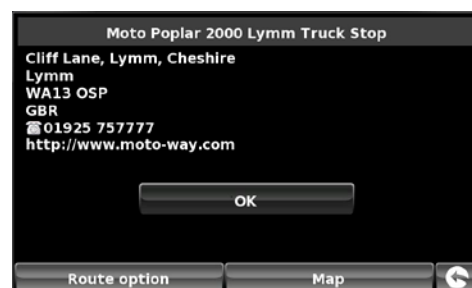
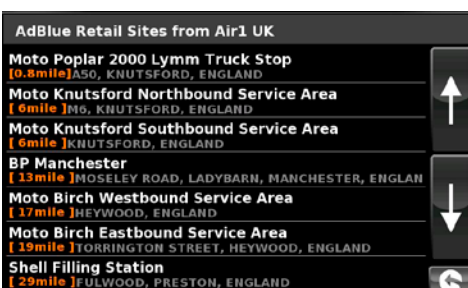
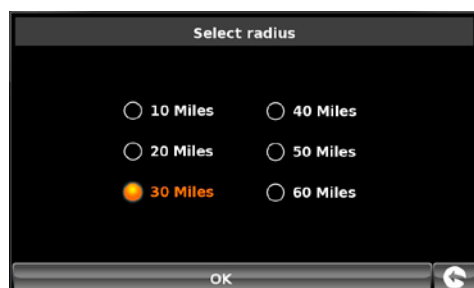
To return to the search screen press the keyboard icon 

Select the POI with your finger; an information screen will be displayed. Press **'OK'** if the POI is correct, press **'Map'** to view the POI location on the map, press **'Route options'** to change start position or press  to return to the previous screen.


Press **'Calculate'** and a journey summary screen will be displayed. Press **'GO'** to start navigation.


### 3.11.2 Find around current position

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **'User POI'** icon.
- Press the POI you wish to look for
- Select **'Find around current position'**
- Select the maximum radius you wish the unit to search for (the default setting is 30 miles) and then press **'OK'**



A list of POI's within the specified radius and category will be displayed. Use the arrows to the right hand side of the screen to scroll up and down through the options. When you find the POI that you are looking for, select it.


- To start the journey press **'OK'** followed by **'Calculate'**
- To view the location of the POI, press **'Map'**.
- To change the route parameters press **'Route Option'** (see Section 6: Route Options on page 72 for specific instructions).
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.

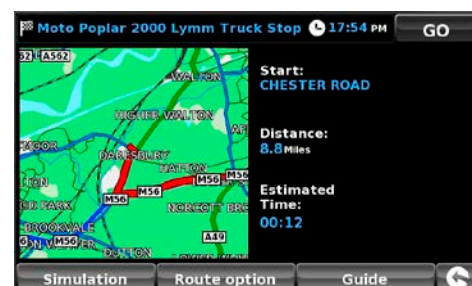

Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**

### 3.11.3 Find around different position

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **'User POI'** icon.
- Press the POI you wish to look for
- Select **'Find around different position'**
- Press **'Country'** and select the country where you would like to find the POI. (If the country is already displayed, go to the next step). Use the arrow keys on the right to scroll up and down the options.
- Next press **'City'** and enter the city name using the keyboard displayed.



As you begin to input the city name, Snooper will automatically prompt you with a list of possible matches. If you can see the name of the destination you are searching for in the lower window, you can select it easily by selecting that name. If you wish to view the list of possible destinations in full press the down arrow to the top right hand corner of the display and a list of cities will be displayed then select your destination. Use the arrow keys on the right hand side of the display to scroll through the list.

- Press **'Street'** and use the keyboard displayed to type in the street name.


As you begin to input the road or street name, Snooper will automatically prompt you with a list of possible matches similar to when searching for **'City'** described above. When you see the road you require select it.


Once all fields have been completed you can view the new position by pressing **'Map'** at the bottom of the screen.

- Press **'Set'**
- Select the maximum radius you wish the unit to search for (the default setting is 30 miles) and then press **'OK'**.

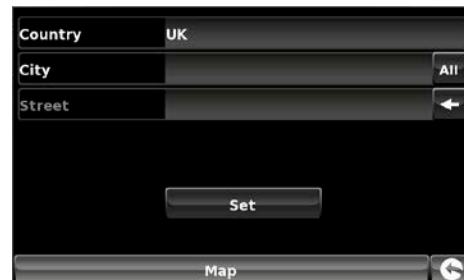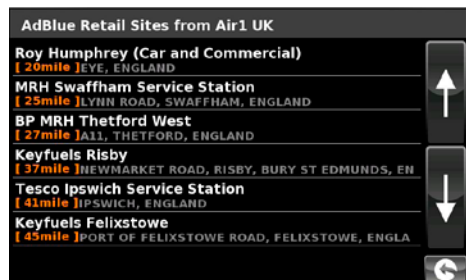

A list of POI's within the specified radius and category will be displayed. Use the arrows to the right hand side of the screen to scroll up and down through the options. When you find the POI that you are looking for, select it.

- To start the journey press **'OK'** followed by **'Calculate'**.
- To view the location of the POI, press **'Map'**.
- To change the route parameters press **'Route Option'** (see Section 6: Route Options on page 72 for specific instructions).
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.

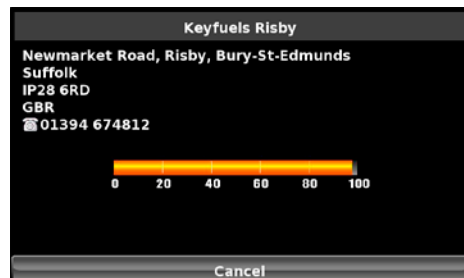

Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.


*Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.*




### 3.11.4 Along Route

This function allows you to select a POI along your current route.


**NOTE:** For this feature to work you must have a route plotted if not, the button does not function. Firstly, plot a route by any of the methods previously described in this user guide.



- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **'User POI'** icon.
- Press the POI you wish to look for.
- Select **'Along Route'**.
- Choose the POI from the list.

An information screen will be displayed.

- Press **OK** to accept or choose **'Route Options'** or **'Map'**. Press the return button  in the bottom left of the screen to return to the list.
- When **'OK'** is pressed choose **'Calculate'**

Once all fields have been completed you can view the new position by pressing **'Map'** at the bottom of the screen.

- To start the journey press **'OK'** followed by **'Calculate'**.
- To view the location of the POI, press **'Map'**.
- To change the route parameters press **'Route Option'** (see Section 6: Route Options on page 72 for specific instructions).
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.

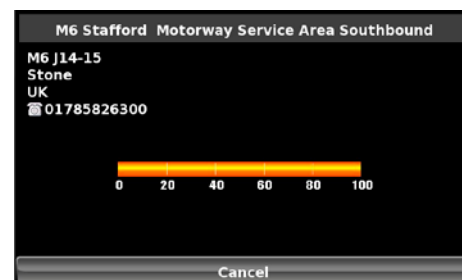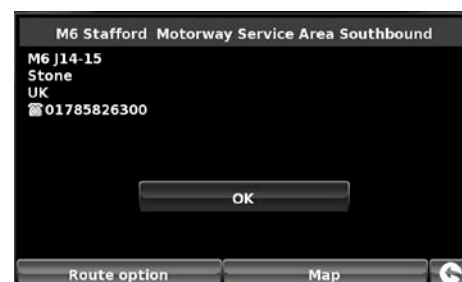






### 3.12 Find by map




This function allows you to select a destination by simply selecting any road on any area of the map stored within your unit or alternately you can navigate to motorway junction numbers.


To navigate using this facility:

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **'Find by map'** icon.

The screen will show a section of the map (usually of your current position with a road selected in red).

- To see a larger section of the map press the  button to zoom out.
- If you would like to see the map in more detail, use the  button to zoom in.
- By pressing and moving your finger on the screen you can move the map around until you find your desired location.

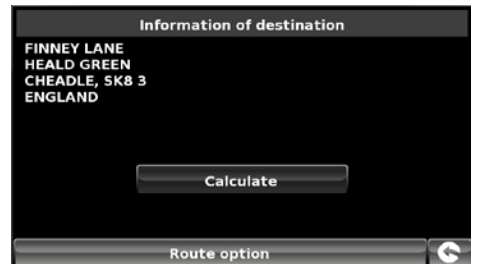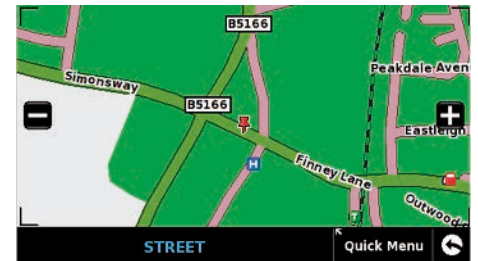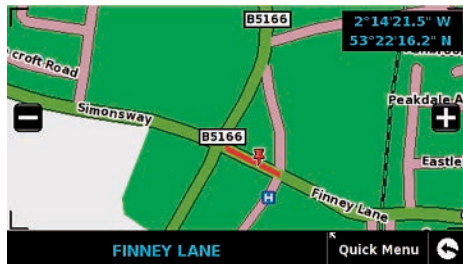

- When you can see the required destination, simply press on the road of the map you would like to navigate to and the road name selected will be displayed at the bottom of the screen.
- Press **'Quick Menu'** and then press **'Continue'**.
- To start the journey press **'Calculate'**.
- To view the location of the POI, press **'Map'**.
- To change the route parameters press **'Route Option'** (see Section 6: Route Options on page 72 for specific instructions).
- To return to the previous page press the return arrow  located on the bottom right hand corner of the display.


Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

**Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**



### 3.13 Find by coordinate

To navigate to a location using a coordinate:

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **'Find by coordinate'** icon.

Enter the coordinate using the key pad and press the **'OK'** button.

You can enter the coordinate in three different formats. For example.

#### Decimal Degrees (DD.ddddd°)

Latitude (N): 53.34878°

Longitude (W): -2.68214°

*Please note: when inputting the Longitude you ignore the minus symbol (-). The degree symbol MUST be used in order for this function to work (see image on the right).*

#### Degrees, Minutes, Seconds (DD°MM'SS.s")

Latitude (N): 53°20'55.6"N

Longitude (W): 2°40'55.71"W

*Please note: when inputting the Longitude and Latitude you ignore the letters 'N' and 'W'. You MUST use the degrees, minutes and seconds symbols when using this function (see image on the right).*

#### Degrees, Minutes (DD°MM.mmm')

Latitude (N): N 53 20.927

Longitude (W): W 2 40.928


*Please note: when inputting the Longitude and Latitude you ignore the letters 'N' and 'W'. The degree and minute symbols MUST be used when using this function (see image on the right).*

After pressing **OK**, the location of the coordinates will be shown on the map. If correct press **'Quick menu'** and then **'Continue'** and follow the on screen instructions to calculate a route.



Easting and northing are geographic Cartesian coordinates. Press the EN button to enter Easting and Northing co-ordinates



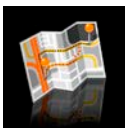


### 3.14 Re-route

Snooper can recalculate your route by avoiding certain roads or redirecting you by distance. This facility only becomes available once you have calculated a route.

To perform a re-route:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  once.
- Press the **'Re-route'** icon.

You can then choose how you would like to re-route your journey from the selections shown on the display.

*In order to use this function on Snooper you will need to have entered and calculated a route.  
If the 'Re-Route' icon is greyed out a route has NOT been entered.*

#### 3.14.1 Avoid By Road Name

If you know the road name or road number you wish to avoid, then select this option.

- Press **'Avoid by Road Name'**.

You will be provided with the turn by turn instructions of the route that you are currently following. If the road you are looking for is not visible, press the down arrow on the right hand side of the display to see further turn by turn instructions.

- Once you have found the road that you wish to avoid, select it.
- The route will be recalculated and a information screen will be displayed.
- The original route is shown in Red and the new route is shown in Yellow. To choose either route press the corresponding text at the bottom of the screen, alternatively press the return arrow (bottom left) to go back to the **'Re-Route'** menu.

Once you select which route you wish to use, the device will automatically start to navigate. The summary screen with simulation will not be displayed .



#### 3.14.2 Avoid by Range

If you wish to avoid several roads from the selected route calculated by Snooper, then this function allows you to re-calculate a route over a user defined distance, ranging from 1 mile up to a maximum of 100 miles.

To use this function:

- Press the **'Avoid by range'** button - the **'Select avoided range'** page will be displayed.
- Select the distance of the range you wish to avoid using your finger.

If you wish to view more range distances then press the down arrow on the right hand side of the display. Once you have selected the range you wish to avoid, Snooper will automatically re-calculate your route.

The methodology for using Avoid by Range is the same as Avoid by Road Name in section 3.1.4.1

### 3.14.3 Avoid by TMC - AVN S9020 ONLY

If you wish to avoid incidents and/or hold ups which have been received via TMC then you can use this option. Refer to section 3.7 for further details of TMC

To use this function:

- Press the **'Avoid by TMC'** button - the **TMC information page** will be displayed, choose TMC on Route.
- Select the incident you wish to avoid.

The methodology for using Avoid by Range is the same as Avoid by Road Name in section 3.1.4.1

### 3.14.4 Clear Avoided Road

If you do not wish to use the alternative routes offered by Snooper and you wish to return to the original calculated route, press the **'Clear Avoided Road'** button and the original route plotted by Snooper will be restored.


Once the re-calculation of the original route is complete the summary screen is displayed. Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

**Please Note: If you have already travelled some of the re-calculated route, Snooper may produce a slightly different route from what was originally plotted.**

**The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.**

**If the 'Avoid by Road' and 'Avoid by Range' have not been used, this feature is unavailable and the button will be greyed out**


Clear Avoided Road

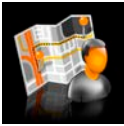




### 3.15 Your route








Create and save your own bespoke routes. Use the map view to select the roads you would like to travel on or search road by road. Use **'Your route'** to build your own personal, tailored routes.


To use this facility:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  twice.
- Press **'Your route'**.

#### 3.15.1 Creating a route.

1. Press **'Create'** - the screen will display your current location, illustrated by a **'push pin'**.
2. If you wish to use this as your start position press the  or to change the start position press the  button. You can now search by Country, City & Street.
3. Press **'Map'** to continue or the  button to return to the previous screen.

4. To add the location as the start position press the  button a  will appear on the map to indicate the start position.
5. To add additional roads or the journey end either select another road in the current map view, zoom out using the  then scroll the map or press the  button to search by Country, City & Street. Once the correct road has been highlighted press  as each link in the route is added a  will appear on the map.  
To remove a link press the  button.

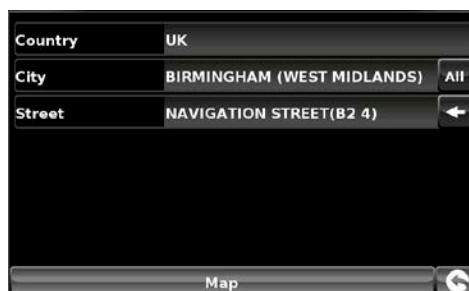

To calculate a route which is appropriate for your vehicle, once a second link has been added the following screen will be displayed:



If this is the correct vehicle press **'Calculate'** or if you need to change the vehicle press **'Change'**.


6. Continue adding roads to **'Your route'** until you have constructed your desired routing. For accurate routing select small **'links'**.




7. Once the journey has been built press **'Done'**. A summary of the journey is displayed and you now have the option to **'Save'** (by pressing the **'Save'** button) or start navigating by pressing **'GO'**.


8. If you choose to save your route you can now change the name of your route. Once the name has been edited press **'Save'**.

9. Additional **'My Routes'** can be created, saved and added by following steps #1-9

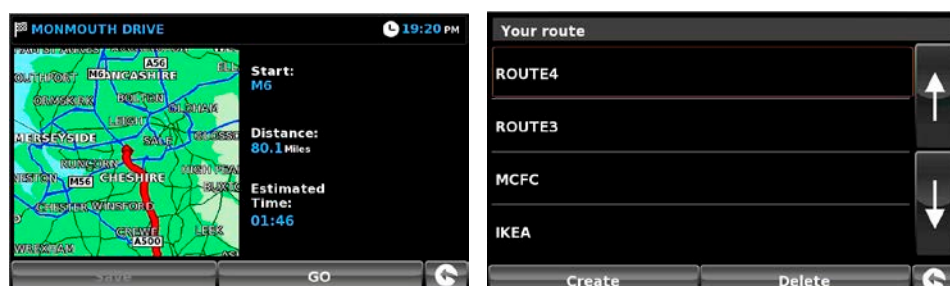

### 3.15.2 Navigating using My route

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  twice.
- Press **'Your route'**.
- Select which My Route you want to use by pressing on the name; a summary screen will appear. To start navigating press **'Go'**.

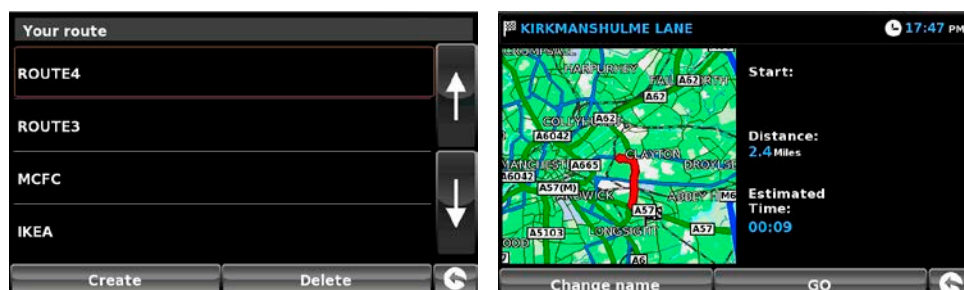




### 3.16 Route Description

After a route has been calculated and the journey has commenced, you can access the summary display again by using this function.

To view the summary screen:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the black arrow  twice.
- Press the **'Route description'** icon.

*In order to use this function on Snooper you will need to have entered and calculated a route.  
If the 'Route description' icon is greyed out a route has NOT been entered.*




From the summary display you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

*The summary screen is only displayed for approximately 10 seconds before the unit automatically returns to providing you with turn-by-turn instructions.*



### 3.17 TMC (Traffic Message Channel) - AVN S9020 ONLY

#### TMC Options

 
The type of alerts you receive whilst using TMC can be edited in the configuration menu of Snooper. To access the menu press the centre of the display, then press  then  twice and then .

The following options are displayed:



*Using the 'down arrow' will reveal more options*



The options can be deselected by pressing the ☒ – the box will be displayed with the red tick removed ☐. To finalize your selection press .

#### TMC Icon

Once the unit starts to receive TMC alerts one of the two following icons will appear on the main screen:




This icon appears if Snooper has received TMC information but the delay or incident is not on your route.



This icon appears if the Snooper has received TMC information and the delay or incident affects your plotted route.


To show the TMC incident press the  icon and the following screen is displayed:



To show TMC events which are NOT on your route press 



To see a more detailed description press the TMC warning:

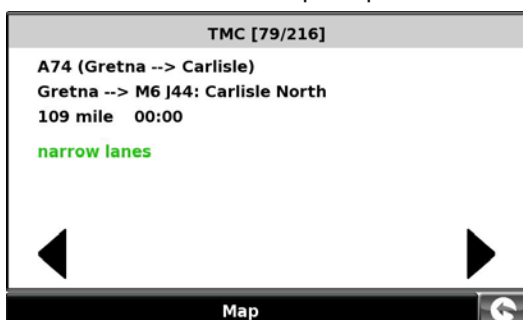

To avoid the incident press  Snooper will now calculate an alternative route.

To view the incident press 



To return to the previous screen press 

If you want to return to the original route (not avoiding the incident) then press the TMC icon  select the TMC alert you originally wanted to avoid and then press  Snooper will recalculate the original route.

**Note: TMC data is transmitted simultaneously by commercial FM radio stations - the reception of TMC data can be affected by geographical and environmental conditions.**

### 3.18 Campsite Search (Ventura ONLY)



Ventura can search from over 20,000 caravan and motor home sites and rest stops. This unique, content rich, data is supplied by some of the biggest camping organizations in Europe: ASCI, BordAtlas and Camperstop (by Facile en Route).




#### Advanced campsite search

Ventura can search campsites and camper stops based on different criteria:

##### 3.18.1 Find by name

If you know the name of the site you are looking for you can select **'Find by name'**.

- Enter the country and the city, if the city is not known select **'All'**.
- Press **'Search'**.
- Type in the name of the campsite/camperstop, once you start to enter the name a list of possible matches will be displayed. To expand the list press the select the campsite/camperstop by pressing on the name.

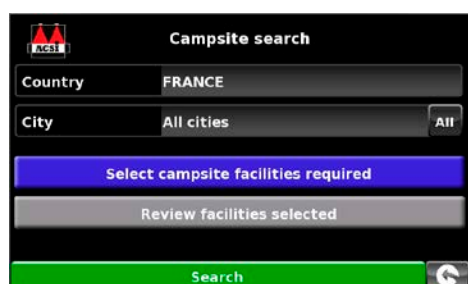

A summary screen is now displayed listing the campsite/camperstop contact details and general information including any facilities and/or restrictions they may have (the example shown to the right is from the ASCI data).

You now have the option to:




- View a photograph (where available).
- Save, this will save the campsite/camper stop to your favourites, see section 4.0 Favourites for details.
- Route this will commence the navigation to the selected campsite/camper stop.

If you do not know the name of the campsite/camper stop you can search for a suitable location by using either **'Find around current position'** or **'Find around different position'**.

##### 3.18.2 Find around current position

Ventura can search for a suitable location based on the following:

- Distance from your current position - selectable.
- Campsite facilities.

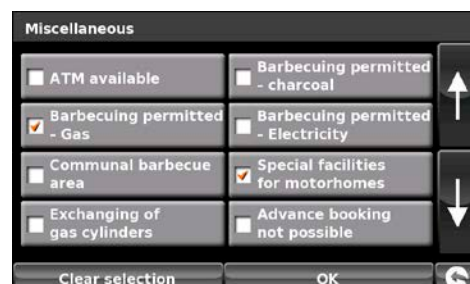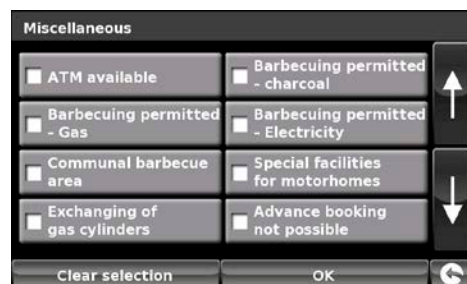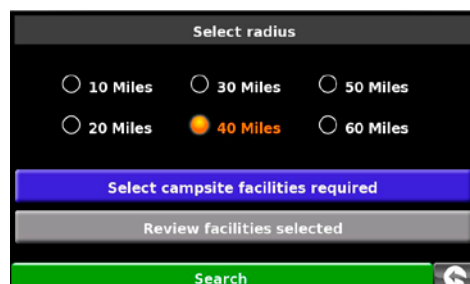

You can select as many or as few options as you require to narrow or expand the search.

- Press **OK** to continue.
- Press **'Review facilities selected'** to show a summary of the facilities chosen. If required, you can remove some of the facilities.
- On this screen you can edit the selected facilities.
- Select **OK** to continue.
- A list of campsites/ camper stops will be displayed - press on the **'destination'** to continue.



Use the arrows to scroll through the list.

A summary screen is now displayed listing the campsite/camper stop contact details and general information including any facilities and/or restrictions they may have (the example shown to the right is from the ACSI data).

You now have the option to:

- View a photograph (where available).
- Save, this will save the campsite/camper stop to your favourites, see section 4.0 Favourites for details.
- Route this will commence the navigation to the selected campsite/camper stop.



### 3.18.3 Find around different position

It is possible for Ventura to search for campsites/camper stops in a different location, this allows you to plan ahead. The instructions are similar to **'3.18.2 Find around current position'** with the exception that there is an additional step to determine the area of the search.

- Press **'Find around different position'**.
- Either search by **'All countries'** or press **'Country'** to enter the country details.
- Press **'City'** to enter the city details or press **'All'** to search all cities.
- Press **'Map'** to search using the map or press **'Set'** to continue.



## 4. My Favourite

The **'My Favourite'** menu allows you to store destinations that you visit frequently, retrieve recently visited destinations, modify user points and edit or store your **'Home'** and **'Office'** details without having to enter the destination details each time.



### 4.1 Favourites

This function allows you to store a number of your more common destinations. You can store up to a maximum of 150 different destinations.

#### 4.1.1 Add a favourite destination


- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Favourites'** icon.
- Press **'Add'**.

You can now search for the destination using the following options displayed:

- Find address by city
- Find address by post code
- Find by POI
- Find by recently used
- Save using current point

*To find out how to use these options please refer to the applicable sections in this user manual.*

Once you have entered your destination details you also have the facility to name your destination to make it easier to find.

- Press **'Name'** and a keyboard will be displayed with the road name of the destination you selected.
- Press the  key to erase this data then input the new name using the keyboard.
- Press **'Save'** once you have entered the name.

*Please note: You can enter a new name for the favourite using up to a maximum of sixteen characters.*

#### 4.1.2 Using a favourite destination

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press the **'Find by favourites'** icon.
- Select the favourite destination you wish to use.




### 4.1.3 Editing/Deleting a Favourite

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Favourites'** icon.
- Select the favourite destination you wish to edit/delete.

#### 4.1.4 To delete ALL favourites

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Favourite'** icon.
- Press the **'Delete All'** button – an information box will be displayed with 'Delete All?' and the options of **'OK'** and **'Cancel'**.
- Press the **'OK'** button and ALL the favourites will be deleted.

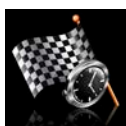

## 4.2 Recent destination

This function can be used to delete any or all of the recent destinations that are stored on Snooper. Snooper can store up to a maximum of 40 recent destinations.


### 4.2.1 To delete individually stored recent destinations

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Recent Destination'** icon.
- Select the recent destination you wish to delete.

You can scroll through the list of recent destinations using the up, down arrows located on the right hand side of the display, and select the destination you wish to delete with your finger.


The information relating to that destination is displayed.

- Press the **'Delete'** button at the bottom of the display.

If the destination selected is not the one you wish to delete you can press the  arrow located in the bottom right hand corner of the display to go back to the list and reselect the correct destination for deletion.

### 4.2.2 To delete ALL stored recent destinations

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Recent destination'** icon.
- Press the **'Delete All'** button – an information box will be displayed with 'Delete All?' and the options of **'OK'** and **'Cancel'**.
- Press the **'OK'** button and ALL the recent destinations will be deleted.

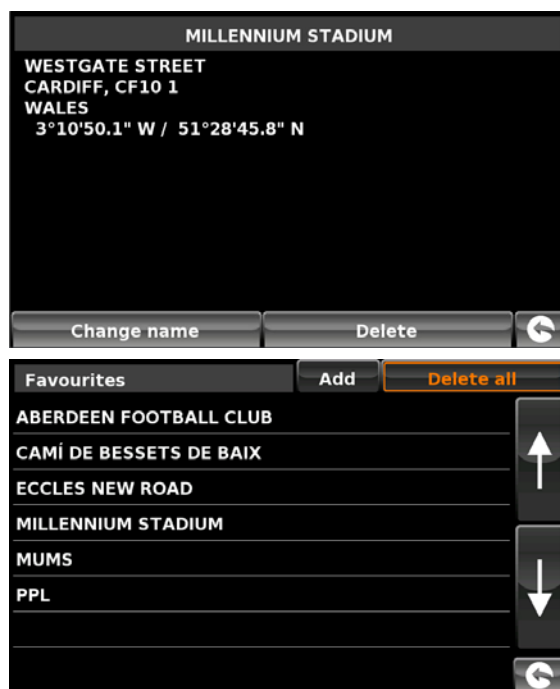



## 4.4 Home

To set up and use this function was explained in **Section 3.3** earlier in the manual. When this function is accessed from the **'My Favourite'** menu, you are able to change the **'Home'** location (for example if you move house) or to delete the **'Home'** location.

### 4.4.1 To change the home location

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Home'** icon.
- Press the **'Change'** button.



You can now search for the new **'Home'** location using the following options displayed:

- Find address by city
- Find address by post code
- Find by POI
- Find by recently used
- Save using current point

*To find out how to use these options please refer to the applicable sections in this user manual.*

Once you have entered your **'Home'** location details you also have the facility to name your destination.

- Press **'Name'** and a keyboard will be displayed with the road name of the destination you selected.
- Press the **'Arrow'** key to erase this data then input the new name using the keyboard.
- Press **'Save'** once you have entered the name.

*Please note: You can enter a new name for the favourite using up to a maximum of sixteen characters.*

### 4.4.2 To delete the home location

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Home'** icon.
- Press the **'Delete'** button – an information box will be displayed with **'Delete home?'** and the options of **'OK'** and **'Cancel'**.
- Press the **'OK'** button and the **'Home'** location will be deleted.





## 4.5 Office

To set up and use this function was explained in **Section 3.4** earlier in the manual. When this function is accessed from the **'My Favourite'** menu, you are able to change the **'Office'** location (for example if you move house) or to delete the **'Office'** location.

### 4.5.1 To change the office location

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Office'** icon.
- Press the **'Change'** button.

You can now search for the new **'Office'** location using the following options displayed:

- Find address by city
- Find address by post code
- Find by POI
- Find by recently used
- Save using current point




*To find out how to use these options please refer to the applicable sections in this user manual.*

- Once you have entered your **'Office'** location details you also have the facility to name your destination.
- Press **'Name'** and a keyboard will be displayed with the road name of the destination you selected.
- Press the **'Arrow'** key to erase this data then input the new name using the keyboard.
- Press **'Save'** once you have entered the name.

*Please note: You can enter a new name for the favourite using up to a maximum of sixteen characters.*

### 4.5.2 To delete the office location

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Office'** icon.
- Press the **'Delete'** button – an information box will be displayed with 'Delete Office?' and the options of **'OK'** and **'Cancel'**.
- Press the **'OK'** button and the **'Office'** location will be deleted.


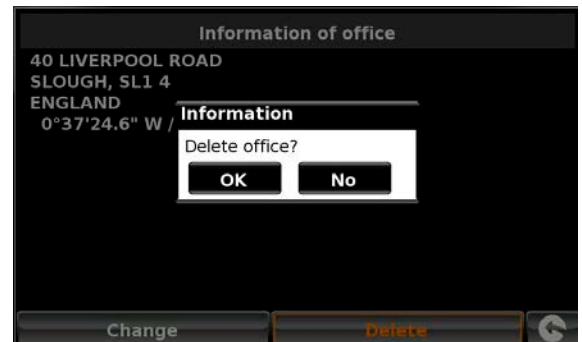


## 4.6 Advanced - Setting your Home or Office address using 'Save using current point'

It is also possible to create a **'Home'** and **'Office'** location using your current coordinates if you are situated at your home or office whilst setting up your unit.

- Press the centre of the screen to access the **'Navigate to'** menu.
- Press **'My Favourite'** at the top of the display.
- Press the **'Home'** or **'Office'** icon.
- Press the **'Change'** button.
- Press **'Save using current point'**.

A map will be displayed with a road highlighted in red closest to your current position. The name of the road selected will be displayed at the bottom of the display. If this is not correct, select the correct road with your finger.

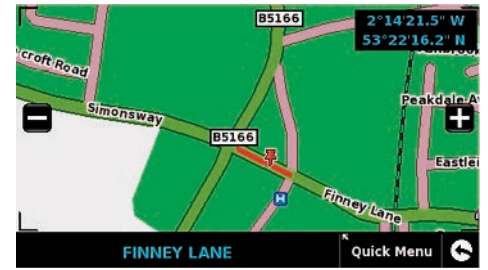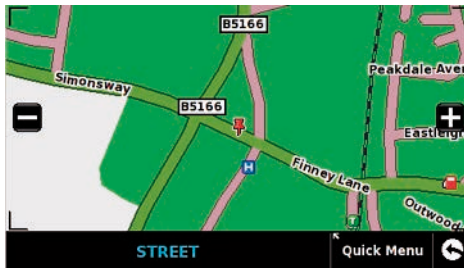

- Press **'Quick Menu'** and **'Continue'**.
- Press **'OK'**

Snooper will automatically save this location as your **'Home'** or **'Office'** destination.



## 5. Configure

The **'Configure'** menu is used to customise the operation and appearance of your unit. To access the **'Configure'** menu:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button at the top of the display.
- Depending on the model the following screen (s) will be displayed.





## 5.1 Bluetooth

Please refer to page 89 for further details.



## 5.2a Caravan/Motorhome

### Setting up vehicle parameters



For Ventura to calculate a route suitable for your vehicle it needs to know certain information about the vehicle itself such as its height, weight and width. It is possible to save the settings of 10 different vehicles. Follow these instructions to enter your vehicles details.

Press the centre of the screen to access the menu, press '**Configure**' and then press the '**Caravan/Motorhome**' icon.

**Name:** Enter the name here.

**Height:** Enter the height of the vehicle here.

**NOTE:** *Maximum height including any protrusions (roof box, TV antenna etc)*

**Length:** Enter the length of the vehicle here.

**Weight:** Enter the weight of the vehicle here.

**Width:** Enter the width of the vehicle here.

**NOTE:** *Caravan - the maximum height, width and length must include the dimensions of the vehicle towing the caravan, whichever is the greatest (e.g. the car wing mirrors may be wider than the caravan being towed). The combined weight of the caravan and the vehicle must also be used.*

**Weight per axle:** Enter the weight per axle of the vehicle here

**Vehicle type:**


- **Fixed Axle:** Standard setting for fixed axle vehicles.
- **Trailer:** Specific traffic rules exist for vehicles towing caravans. For example, there are roads that are forbidden for towing vehicles. These will be avoided.



## 5.2b Car

### Setting up vehicle parameters



To enter the emission settings of your vehicle in car mode press the  and enter the details as shown in the Environmental setting section page: 56.

Name	MY CARAVAN		
Height	2.6m	Length	16.5m
Weight	4.2 t	Width	2.6m
Weight / axle	1.4 t		
Vehicle type	TRAILER		
OK			

## Environmental settings or Low Emission Zones (LEZ)

Low Emission Zones (LEZs) are areas or roads where the most polluting vehicles are restricted from entering. This means that vehicles are banned, or in some cases charged, if they enter the LEZ when their emissions are over a set level.

Vehicle emissions are classified by Euro Standards (1-6) for the vehicles that they affect. In many cases another factor is whether or not the vehicle has a particulate filter or catalytic converter. Before you travel into a LEZ, you need to find out the emissions standard of your vehicle.

All LEZs affect heavy duty goods vehicles (usually over 3.5 tonnes Gross Vehicle Weight (GVW)), and most buses and coaches (usually defined as over 5 tonnes GVW). Some LEZs also affect vans, cars and motorcycles.

Most LEZs operate 24 hours a day, 365 days a year, with some of the Italian LEZs currently the only exceptions to this rule. To enter your environmental setting press on the arrow once in the Environmental setting page press the arrow again to return to the vehicles setting page.




Click on the options to edit the information



Enter number of passengers carried.




Enter fuel type

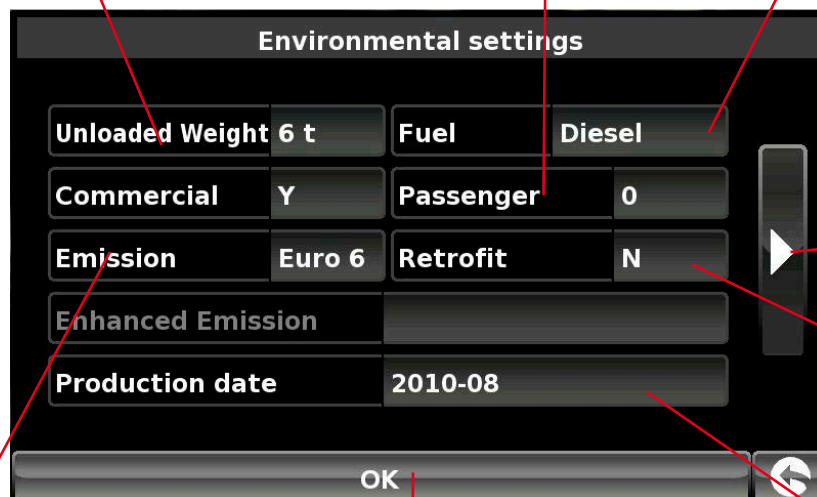

Press to return to the previous screen

Retrofit - switch between yes (Y) and No(N) by pressing the Retrofit button

press OK to save

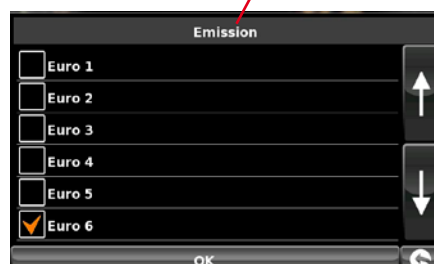

Select Euro rating

Enter vehicle production date in YYYY-MM format





## 5.2c Truck

### Setting up vehicle parameters



For Truckmate to calculate a route suitable for your vehicle it needs to know certain information about the vehicle itself such as its height, weight and width. It is possible to save the settings of 10 different trucks. Follow these instructions to enter your vehicles details.

Press the centre of the screen to access the menu, press '**Configure**' and then press the '**Truck**' icon.

**Name:** Enter the name here.

**Height:** Enter the height of the vehicle here.

**Length:** Enter the length of the vehicle here.

**Weight:** Enter the weight of the vehicle here.

**Width:** Enter the width of the vehicle here.

**Weight per axle:** Enter the weight per axle of the vehicle here

**Truck type:**

VOLVO FM	Height	2.6m
Length	16.5 m	Weight
Width	2.4 m	Weight / axle
Trailer type	1 trailer	
Load type	NONE(NORMAL)	
Load code	Not Applicable	
OK		

- **Truck:** Standard setting for fixed axle vehicles.
- **Trailer:** Specific traffic rules exist for trucks with trailers. For example, there are roads that are forbidden for vehicles with trailers. These will be avoided. Choose between: Truck with No trailer, Truck with 1 trailer, Truck with 2 trailers, Truck with 3 or more trailers or semi or tractor with 1 or more trailers.

**Load type:**

- **None** (Normal)
- **Hazardous:** Hazardous goods that are not explosive or harmful for water.
- **Explosive and Flammable**
- **Harmful for water**

**Tunnel Category**

ADR Tunnel Codes:

- Select one of the applicable tunnel codes , by default 'Normal' is selected
- The tunnel category codes consist of an individual letter from "A" to "E" this will be indicated by the use of road signs and or signals. Restrictions will not apply to category "A" tunnels as these are unrestricted and will not require any signage.
- Tunnel category A or Normal

**B Most restrictive**

Passage forbidden through tunnels of category B, C, D and E

**B1000C**

Carriage where the total net explosive mass per transport unit exceeds 1000 kg: Passage forbidden through tunnels of category B, C, D and E; does not exceed 1000 kg: Passage forbidden through tunnels of category C, D and E



<b>B/D</b>	Tank carriage: Passage forbidden through tunnels of category B, C, D and E; Other carriage: Passage forbidden through tunnels of category D and E
<b>B/E</b>	Tank carriage: Passage forbidden through tunnels of category B, C, D and E; Other carriage: Passage forbidden through tunnels of category E
<b>C</b>	Passage forbidden through tunnels of category C, D and E
<b>C5000D</b>	Carriage where the total net explosive mass per transport unit exceeds 5000 kg: Passage forbidden through tunnels of category C, D and E; does not exceed 5000kg: Passage forbidden through tunnels of category D and E
<b>C/D</b>	Tank carriage: Passage forbidden through tunnels of category C, D and E; Other carriage: Passage forbidden through tunnels of category D and E
<b>C/E</b>	Tank carriage: Passage forbidden through tunnels of category C, D and E; Other carriage: Passage forbidden through tunnels of category E
<b>D</b>	Passage forbidden through tunnels of category D and E
<b>D/E</b>	Bulk or tank carriage: Passage forbidden through tunnels of category D and E; Other carriage: Passage forbidden through tunnels of category E
<b>E</b>	least restrictive Passage forbidden through tunnels of category E
<b>NORMAL</b>	Passage allowed through all tunnels (For UN Nos. 2919 and 3331, see also ADR 8.6.3.1).

For mixed loads choose the **MOST** restrictive category

#### Disclaimer

This content gives general guidance only and should not be regarded as a complete or authoritative statement of the law. The user guide will be updated to reflect any developments in new legislation or case law.

## 5.2d Bus & Coach

### Setting up vehicle parameters



For Bus & Coach to calculate a route suitable for your vehicle it needs to know certain information about the vehicle itself such as its height, weight and width. It is possible to save the settings of 10 different vehicles. Follow these instructions to enter your vehicles details.

Press the centre of the screen to access the menu, press '**Configure**' and then press the '**Bus/Coach**' icon.

**Name:** Enter the name here.

**Height:** Enter the height of the vehicle here.

**NOTE:** Maximum height including any protrusions (roof box, TV antenna etc)

**Length:** Enter the length of the vehicle here.

**Weight:** Enter the weight of the vehicle here.

**Width:** Enter the width of the vehicle here.

**Weight per axle:** Enter the weight per axle of the vehicle here

**Num of axles:** Enter the number of axles here.

Name	MB OM457 LA		
Height	3.7m	Length	12.1 m
Weight	18 t	Width	2.5 m
Weight / axle	7.1 t		
Num of axles	2		

OK

Refer to page 56 for EZ settings



### 5.3 Brightness Control

Snooper brightness can be adjusted using this function within the **'Configure'** menu. To adjust the volume:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press **'Configure'**.
- Press the **'Brightness Control'** icon.
- There are 3 settings: Auto, Day and Night.

#### Auto brightness



If **'Auto'** is selected the device will automatically switch between the Day and Night brightness setting. The time the device switches is pre determined and can not be adjusted. This is the default setting.

#### Day

If you select **'Day'** you can adjust the day time brightness of the LCD screen.

The brightnesses setting is controlled by the AVN S9010/20 hardware and not by the navigation software - see page ??? for details.

- Press **'Day'**.

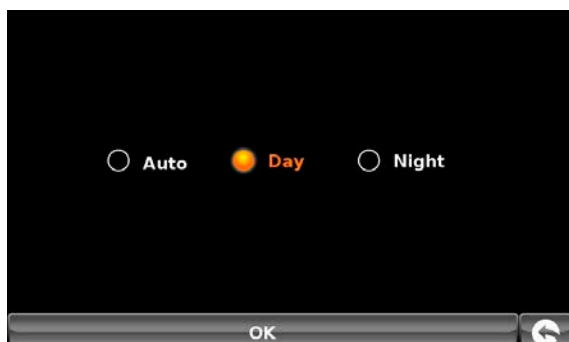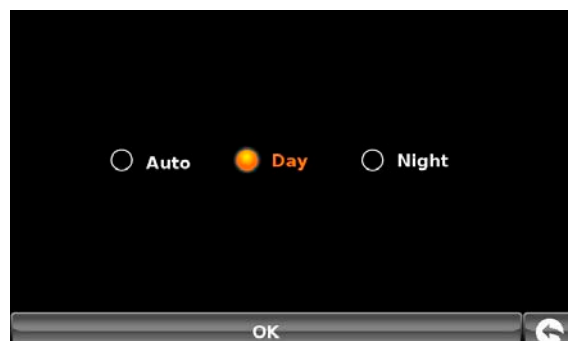


Day view

#### Night

If you select **'Night'** you can adjust the night time brightness of the LCD screen.

The brightnesses setting is controlled by the AVN S9010/20 hardware and not by the navigation software - see page ??? for details.

- Press **'Night'**.

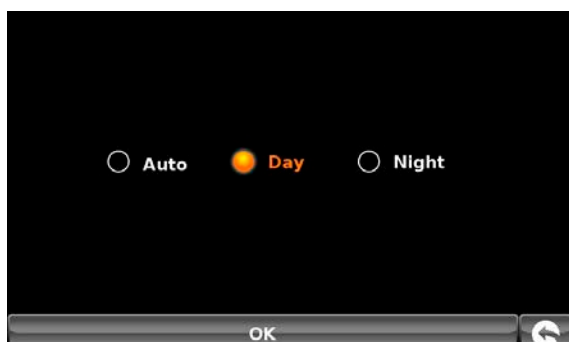

Night view will change both the screen brightness and the map colours.

Once you have adjusted both **'Day'** and **'Night'** brightness you should select **'Auto'** then **OK** to save the setting.

If Auto is not selected then the screen will not switch between day and night automatically.



## 5.4 Language

Snooper comes with a choice of voice prompts and alerts in several languages. Changing the language also changes the language of the menu items as well on the unit. To use this facility:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press **'Configure'**.
- Press the **'Change Language'** icon.
- Using the up and down arrows search for the voice you require.
- If you would like to listen to a sample of any voices simply press the **'Test'** button.
- Press **'OK'** to save your setting.



## 5.5 Setup

The **'Setup'** function allows you to customise the visual information provided by the navigation screen. To alter any of these settings:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button.
- Press the **'Setup'** icon where you will see the list of options below.
- Select the option you wish to change on the left.



There are number of different pieces of information that you can have displayed on the navigation screen at any one time as follows:

**Note: Text or settings highlighted in Orange are the current options selected.**

### 5.5.1 2D/3D or North

This option allows you to select the view of the map that you would like to have displayed. The 3D navigation view is displayed as the factory default and displays the map, calculated routes, Points Of Interest and safety camera data (if subscribed to) from a 3D perspective.

This facility customises the map view between.



3D



2D



North

To make your selection, touch the relevant radio button.

Use the up & down arrows to scroll through the menu options



### 5.5.2 Speed/Time

This option allows you to change the information displayed in the bottom left hand side of the navigation screen between the vehicle speed and the current time. You can also specify if you want to display a twelve or twenty-four hour clock and whether to display 'am' and 'pm'.

To make your selection, touch the relevant radio button.



### 5.5.3 MPH/KMH

This option allows you to switch the information on Snooper between imperial and metric measurement.

To make your selection, touch the relevant radio button.



### 5.5.4 Arrival/Remaining

This option allows you to display either the estimated time of arrival (ETA) or the estimated remaining time left for your journey towards the bottom of the navigation screen.

To make your selection, touch the relevant radio button.

To save the changes press the 'OK' button at the bottom of the display.




*If you wish to keep the settings unchanged you can exit the 'Setup' menu by pressing the return arrow  located in the bottom right hand corner of the display.*



Your new settings will now be saved and will appear on the screen each time you use Snooper.

### 5.5.5 Map Text Size

This option allows you to increase or decrease the size of the road and place name text which appears on the map screen.

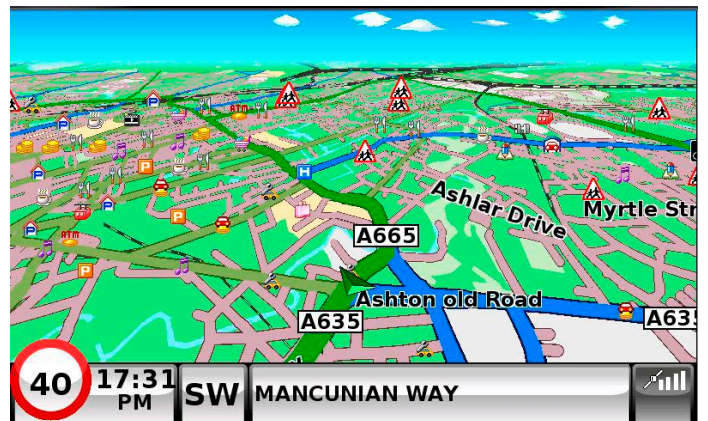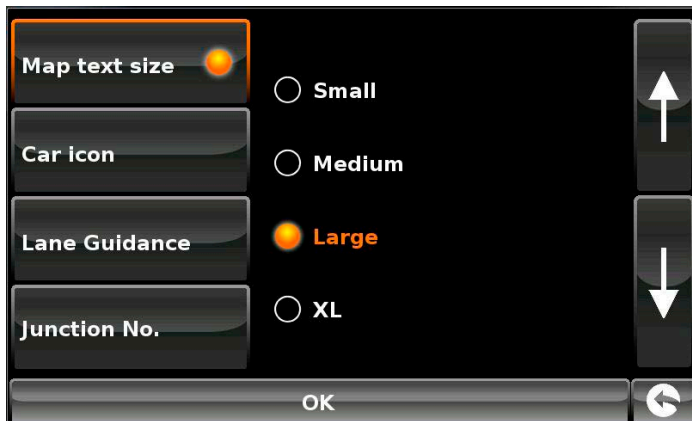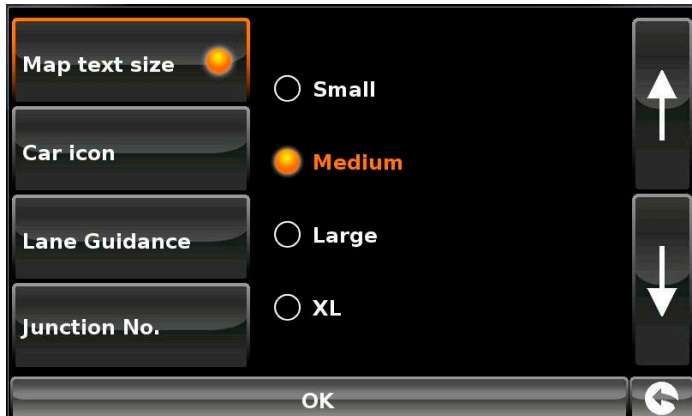

Select the text size then press **OK** to save and exit.

### 5.5.6 Car Icon

This option allows you to choose the icon which appears on the navigation screen.


Press the required icon then press **OK** to save.




Default



Car

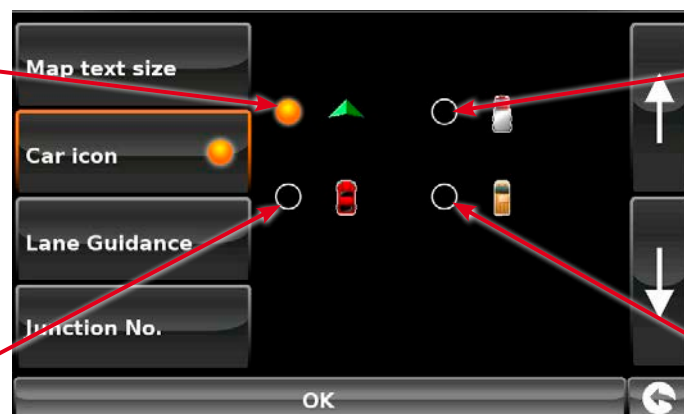

Truck

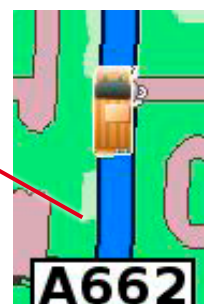

Motorhome

### 5.5.7 Lane Guidance

Lane guidance will show which lane you should take at a junction, road merges and/or road exits.


**Note:** A route must be active for lane guidance to operate.



Lane Guidance On



Lane Guidance Off

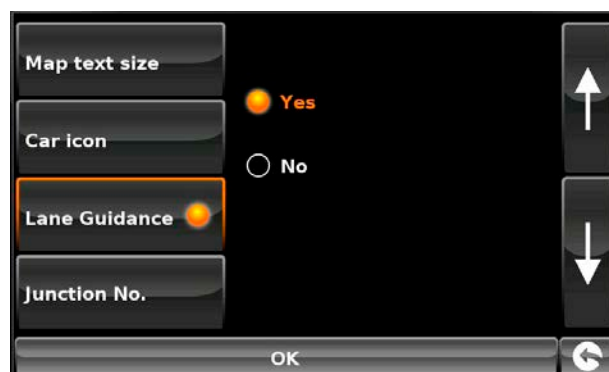

**Note:** Lane guidances currently only available on Motorway's and major trunk roads.

### 5.5.8 Junction Number

Choose between whether you want the junction numbers to be displayed or not.



Junction Numbers On



Junction Numbers Off



### Camera alert

**In order for these features to operate you will need to subscribe to and download the AURA™ Camera Database onto Snooper. See 'Registering Snooper' (Page 3) and 'System Requirements & Downloading' (page 15) for further details.**

### 5.5.9 Display Cameras

You can choose between the following options:


**Yes:** A safety camera visual warning will be displayed on the left hand side of the navigation screen as they are approached.

**No:** No fixed speed safety camera warnings are displayed on the navigation screen.

To make your selection, touch the relevant radio button.

To save the changes press 'OK' at the bottom of the display.

**If you wish to keep the settings unchanged you can exit the 'Setup' menu by pressing the return arrow located in the bottom right hand corner of the display.**

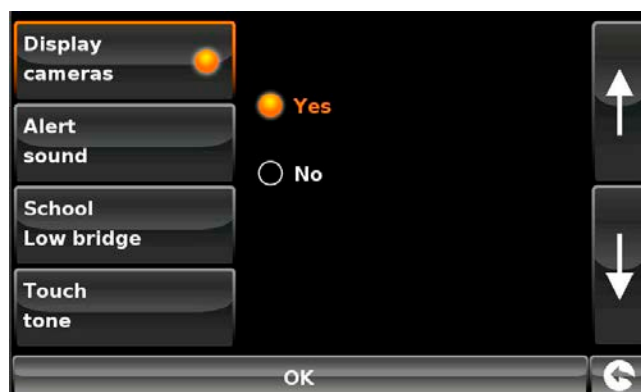

### 5.5.10 Alert Sound

You can choose between the following options:

**Yes:** The unit will emit an audible alert when you approach a fixed speed safety camera

**No:** No audible alert is emitted.

#### Beep Tone

This function allows you to change the audible camera alert tone to either a '**Hard**' or a '**Soft**' tone.


To make your selection, touch the relevant radio button.



### 5.6.11 School (Low bridge Truckmate and Ventura ONLY )

You can choose between the following options:

**Yes:** Provided you have selected the option to download schools on Snooper updater software, this feature enables the unit to alert you when you are near a primary school\*.

**No:** The unit will not provide alerts of Primary schools. Schools are indicated on Snooper display by the  icon.



**\*Please note: Snooper will only provide alerts to Primary Schools at the following specified times:  
08:30 – 09:30; 12:00 – 13:00 and 15:30 – 16:30.**

To make your selection, touch the relevant radio button.

### 5.5.12 Touch Tone

You can choose between the following options:

**Yes:** The unit emits a confirmation tone each time the screen is touched.

**No:** This will turn off the confirmation beep when the screen is touched.

To make your selection, touch the relevant radio button.



To save the changes press '**OK**' at the bottom of the display.

**If you wish to keep the settings unchanged you can exit the 'Setup' menu by pressing the return arrow  located in the bottom right hand corner of the display.**

### 5.5.13 Route Alert

If you deviate from the calculated route, Snooper will automatically recalculate a route without any user intervention. To indicate rerouting is in progress Snooper will emit an audible tone.

You can choose between the following options:

**Yes:** The re-route tone will be emitted during recalculation.

**No:** No re-route tone will be emitted.

To make your selection, touch the relevant radio button.



### 5.5.14 Auto Scale

Auto Scale is switched 'On' by default during manufacture. Auto Scale automatically magnifies the map as you approach a junction or roundabout, where you may need to make a turning, so that you can see it in more detail.

Auto Scale can be turned on and off as you wish.

The screen will show two options 'Yes' and 'No'. To make your selection, touch the relevant radio button.



To save the changes press the 'OK' button at the bottom of the display.

*If you wish to keep the settings unchanged you can exit the 'Setup' menu by pressing the return arrow  located in the bottom right hand corner of the display.*

### 5.5.15.1 My Speed

The speed limit of nearly every road across Europe can now be clearly displayed on your Snooper at all times.

To select the correct speed limits for your vehicle type:

**Car** - Advisory speed limits for a vehicle will be displayed

**Caravan** - Advisory speed limits for a vehicle towing a caravan will be displayed

**Motorhome** - Advisory speed limits for motor homes will be displayed

**Truck 3.5t - 7.5t** - Advisory speed limits for vehicles from 3.5T to 7.5T will be displayed

**Truck 7.5t - 12t** - Advisory speed limits for vehicles from 7.5T to 12T will be displayed

**Truck > 12t** - Advisory speed limits for vehicles greater than 12T will be displayed

Select the option you require by pressing the radio button next to the vehicle type. Press 'OK' to save the setting.



 


**WARNING: These are advisory speed limits and are subject to change.**

**It is the responsibility of the driver to check the road side speed limit signs and abide by local driving regulations.**

### 5.5.15.2 Over speed

It is possible for My Speed to alert the driver, via an audible warning, that they have exceeded the speed limit. To set the over speed warning:

Press the   to increase or decrease the over speed warning 

Press **OK** to save.

[Return to contents](#)




### 5.5.16 My Speed XL


If you are not using your device as a navigation device you can utilise the My Speed data and speed camera data\*.

If My Speed XL is switched On the navigation screen is replaced by the My Speed XL screen.


**Note: If a route is plotted and active, then My Speed XL will NOT be displayed on the main screen.**

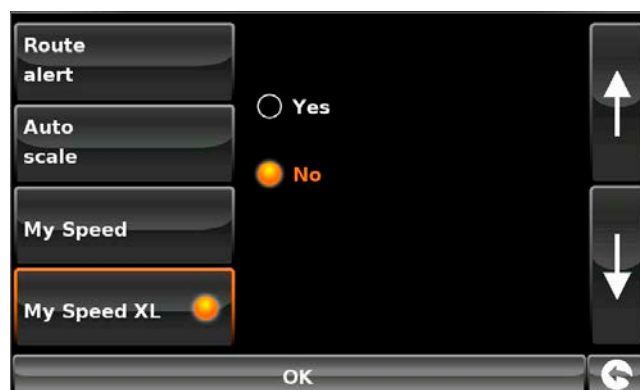

**\*In order for these features to operate you will need to subscribe to and download the AURA™ Camera Database onto Snooper. See 'Registering Snooper' (Page 3) and 'System Requirements & Downloading' (page 15) for further details.**

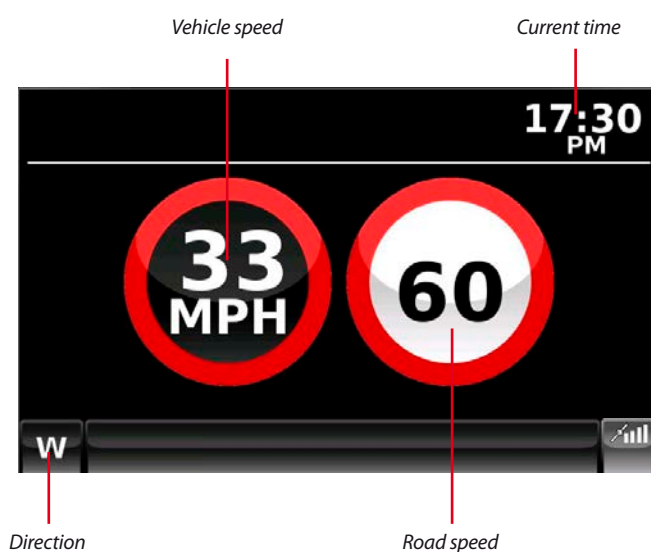

If you have subscribed to and downloaded the AURA™ database the speed will be replaced by a camera symbol and an audible warning will be heard.

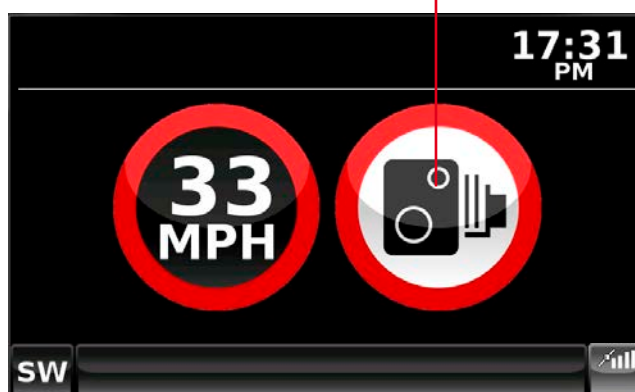

**WARNING: These are advisory speed limits and are subject to change. It is the responsibility of the driver to check the road side speed limit signs and abide by local driving regulations.**

### 5.5.17 Sharp curve alert

This will show or hide the on screen alerts for sharp bends.

This screen will show two options 'Yes' and 'No'. To make your selection, touch the radio button.



To save the changes press 'OK' at the bottom of the display.

**If you wish to keep the settings unchanged you can exit the 'Setup' menu by pressing the return arrow  located in the bottom right hand corner of the display.**



Press the right hand arrow to move to the next menu screen



## 5.6 GPS status

You can check the health of the GPS connection of your unit at any time as well as being able to see the exact coordinates of your current position by using this feature.

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button.
- Press the arrow once.
- Press the **'GPS status'** icon.

Your current GPS status will then be displayed. If you wish to revert the GPS engine to the factory default, press the **'Reset'** button.


If you wish to exit the **'GPS status'** menu press the return arrow located in the bottom right hand corner of the display.



## 5.7 Change Map Colour

This function allows you to choose between the alternative colour schemes that are available for the maps used in the Snooper system (several of which are most suitable for use at night). To access this facility:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button.
- Press the arrow once.
- Press the **'Change map colour'** icon.

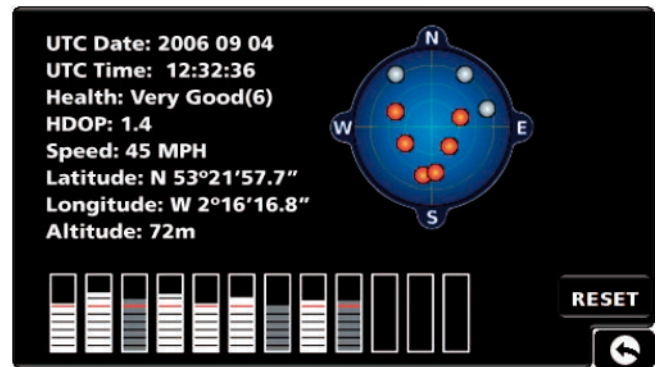

Use the arrows to the left and right hand side of the map display to cycle through the different colour schemes. There are ten colour schemes to choose from.


To save the changes press the **'OK'** button at the bottom of the display.

If you wish to keep the settings unchanged, you can exit the **'Change map colour'** menu by pressing the return arrow located in the bottom right hand corner of the display.



## 5.8 Qwerty Keyboard



This function allows you to switch between a **'Qwerty'** keyboard which is the keyboard selected as the factory default setting or a keyboard arranged in alphabetical order (ABC).

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button.
- Press the arrow  once.
- Press the **'Qwerty keyboard'** icon.
- Select **'Yes'** or **'No'** depending on the keyboard preferred.



**Note:** When a keyboard is displayed it can be changed from QWERTY/ABC to Cyrillic script.

Press the  and a list of available keyboards will be displayed.

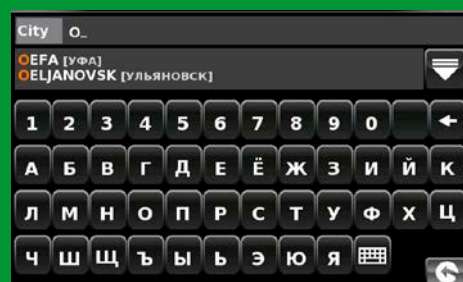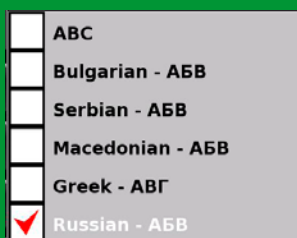

To save the changes press the **'OK'** button at the bottom of the display.

**If you wish to keep the settings unchanged, you can exit the 'Qwerty keyboard' menu by pressing the return arrow  located in the bottom right hand corner of the display.**




## 5.9 System Security Code (on Truckmate or Ventura this icon will NOT be visible if the unit is in CAR mode).

Snooper incorporates pin code security protection so that only users with access to the pin code can use and operate the device. To activate the security code press the centre of the display to access the menu, press **'Configure'**, press the black arrow twice and then press the **'System Security Code'** icon. Select **'Yes'** to switch the function on. Press the **'Enter Code\*'** button and enter the 4 digit code that you would like to use to protect your Snooper and press **'OK'**.

\*If the button displays **'Change Code'** then a security code has already been set. Press **'Change Code'** to edit the system security code.



Once this setting has been activated you will need to enter this code each time you power on your Snooper or you will not be able to operate the device.

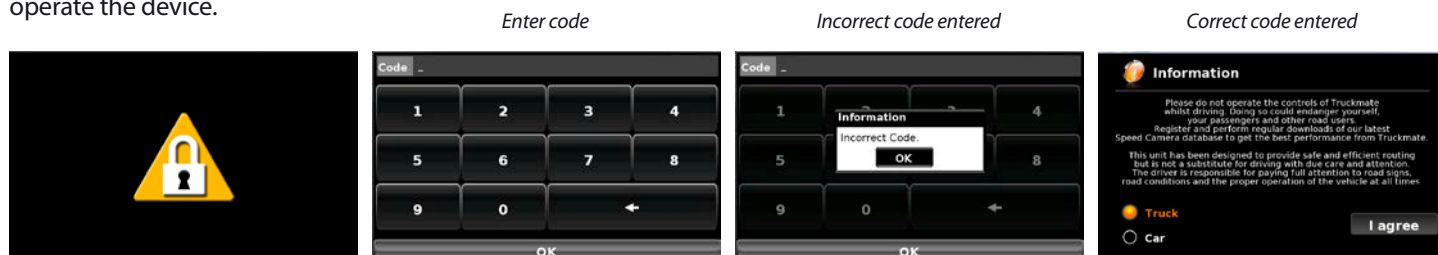

**NB. It is important that you do not lose or forget this code. If you forget this code you will need to return your Snooper so that the unit can be reset.**



## 5.10 Configuration Security Code (on Truckmate or Ventura this icon will NOT be visible if the unit is in CAR mode).

It is also possible to protect the configuration settings using a security pin code. To activate the security configuration code press the centre of the display to access the menu, press **'Configure'**, press the black arrow twice and then press the **'Configuration Security Code'** icon.

The methodology of setting this code is the same as described in section 5.12 **'System Security Code'**.

Once this code is set the user will not be able to change any of the settings, within the **'Configure'** menu, without entering the code. This includes using an alternative Truck or Caravan (when programmed) when plotting a route.




**NB. It is important that you do not lose or forget this code. If you forget this code you will need to return your Snooper so that the unit can be reset.**



## 5.11 Route Timer




This function allows you to set an alert for when you need to take a break. Set the maximum driving time allowed and set the advanced warning time you require before your next break is due. The Route timer clock will then keep you advised of the driving time you have left and will automatically alert you when it's time to take a break.

To access this function:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button.
- Press the arrow  once.
- Press the **'Route Timer'** icon.

The following screen will be displayed. In this screen you can:

- Activate the route timer function so that it is shown in the map display. Note: If **'Yes'** is not selected then you cannot amend the **'Set time limit'** and **'Alert time'** options

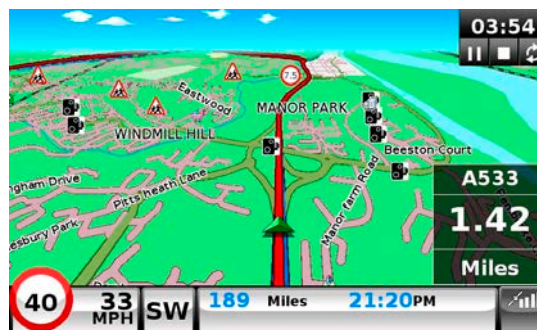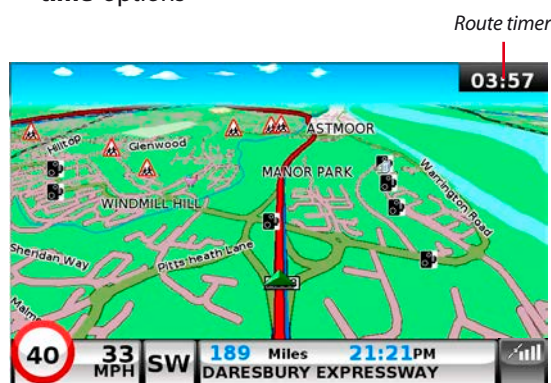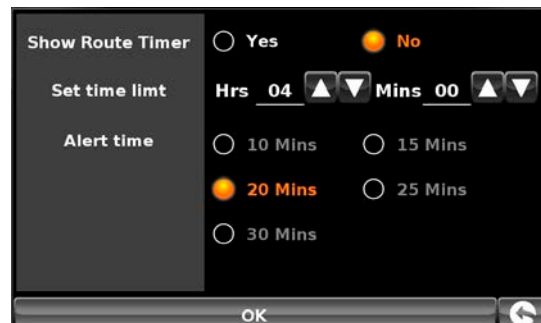

Press route timer to show options

Pause Stop Reset



- Set the duration of the time limit in hours and minutes - use the arrows to increase or decrease the time. The default setting is four hours.
- Before the time limit is up you can configure the unit to provide you with an alert to remind you that you are nearing your break period. The default period is 20 minutes.

Once you have set your desired preferences press **'OK'** to confirm the settings.

*If you wish to keep the setting unchanged, you can exit the menu by pressing the return arrow  located in the bottom right hand corner of the display.*

Press the right hand arrow to move to the next menu screen




Or press the left hand arrow to move to the previous menu screen





## 5.12 Version

This option allows you to view the hardware and software version numbers of your unit. To view this information:

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button.
- Press the arrow  twice.
- Press the **'Version'** icon.

The following screen will be displayed.

<b>H/W</b>	Displays the hardware version
<b>S/W</b>	Displays the current software version
<b>Map</b>	Displays the current map version
<b>Warn</b>	Displays the date the AURA™ camera database was last downloaded*.
<b>S/N</b>	Displays the unit serial number




***\*If you do not subscribe to the AURA™ camera database or the unit has never been downloaded the message 'No camera data available' will be displayed.***



## 5.13 Show POI

Snooper comes complete with a comprehensive list of POI's (Point's of Interest). You can search for addresses using POI's and save POI's in your list of favourites. You can also choose which of the POI's you would like to have indicated on your map. As standard ALL POI's are shown, however this list can be edited within the POI Menu.

- Press the centre of the screen to enter the **'Navigate to'** menu.
- Press the **'Configure'** button.
- Press the arrow  twice.
- Press the **'Show POI'** icon.

The screen will now show a list of POI's stored on your unit with a 'tick' box to the left of each type of POI. Simply press the tick box to select or deselect the POI. A tick in the box indicates that the POI will appear on your map, an un-ticked box will remove the POI from the map view. To scroll through the list of POI's you can press either the up or down arrows located on the right hand side of the display.

To deselect all POI's from the map un-tick the **'ALL'** tick box at the top of the list of POI's

To save the changes press the **'OK'** button at the bottom of the display.

***If you wish to exit the 'Show POI' list without saving any changes press the return arrow  located in the bottom right hand corner of the display.***



### 6. Route option

If you would like to personalise your route, press the **'Route option'** button, before pressing the **'Calculate'** button. This will give you a choice of calculating a route that takes the shortest time or the shortest distance and will also allow you to calculate a route that avoids any Toll Roads and Motorways if necessary.

There are a number of different options available to enable you to select either the most efficient route for you to take or to enable you to personalise the route calculated. The following options are available every time you program a route, whether you search by Post Code, City or by a POI.

Simply check the tick box with your finger the feature you would like to activate.

The choices are as follows:

#### 6.1.1 Shortest Time

This option will calculate a route based on time using a combination of Motorways, 'A Roads' and 'B Roads' as necessary. The route is calculated by Snooper to navigate you to your destination in the shortest time possible whilst adhering to the national speed limits.

#### 6.1.2 Shortest Distance

This option will navigate you to your destination using a combination of roads calculated to cover the least number of miles possible. It may be the most direct route but it could take you longer to arrive!

**Please note: Of the two options described above only ONE option can be selected during the Route Option configuration.**


#### 6.1.3 Avoid Tollway

If you want to calculate a route avoiding any type of Toll Roads, select this feature before calculating your route. Press again to deselect.

#### 6.1.4 Avoid Motorway

If you would like to take a more leisurely journey with the chance of a more picturesque view then select the **'Avoid Motorway'** option and your route will be calculated accordingly. Press again to deselect.

**Please note: The 'Avoid Tollway' and 'Avoid Motorway' options can be used in conjunction with each other.**

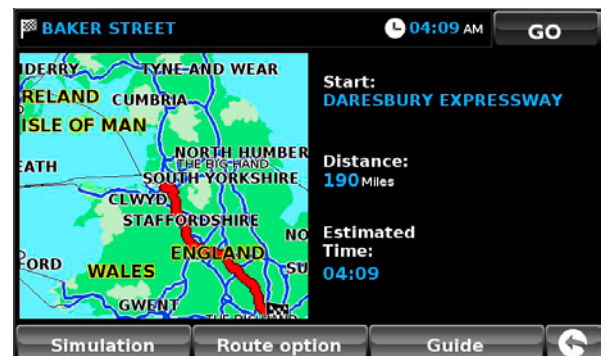

Other routing options are:

## 6.2 Navigate Avoiding Road

*Please note: This option can only be used once a route has been calculated. If a route has not been calculated then this is indicated by the button being greyed out.*



### 6.2.1 Avoid by Road Name

If you know the road name or road number you wish to avoid, then select this option.


- Press **'Avoid by Road Name'**.

You will be provided with the turn by turn instructions of the route that you are currently following. If the road you are looking for is not visible, press the down arrow on the right hand side of the display to see further turn by turn instructions.

- Once you have found the road that you wish to avoid, select it with your finger.

Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

*Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.*

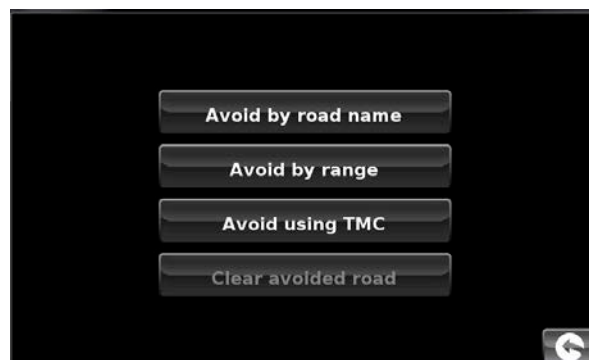


### 6.2.2 Avoid by Range

If you wish to avoid several roads from the selected route calculated by Snooper, then this function allows you to re-calculate a route over a user defined distance, ranging from 1 mile up to a maximum of 100 miles.

To use this function:

- Press the **'Avoid by range'** button - the **'Select avoided range'** page will be displayed.
- Select the distance of the range you wish to avoid.

If you wish to view more range distances then press the down arrow on the right hand side of the display. Once you have selected the range you wish to avoid, Snooper will automatically re-calculate your route.

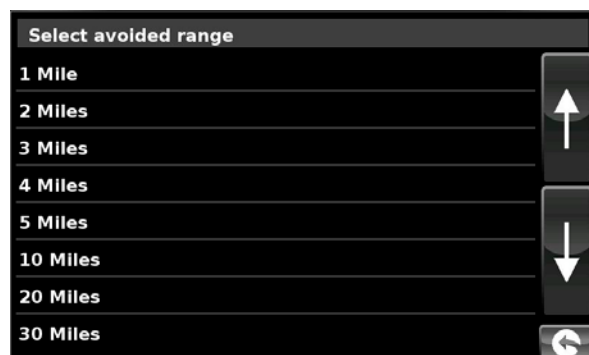

Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

*Please note: The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.*

### 6.2.3 Clear Avoided Road

If you do not wish to use the alternative routes offered by Snooper and you wish to return to the original calculated route, press the **'Clear Avoided Road'** button and the original route plotted by Snooper will be restored.

Once the re-calculation of the original route is complete the summary screen is displayed. Once the calculation is complete you can either press **'Go'** to start navigation, **'Simulation'** to see the actual route that will be taken, **'Route Option'** to change the parameters of the route or **'Guide'** which will list the turn by turn instructions of the journey. The **'Summary Screen'** will tell you the distance to your destination, estimated time of arrival and the estimated time it will take to complete your journey.

*Please Note: If you have already travelled some of the re-calculated route, Snooper may produce a slightly different route from what was originally plotted.*

*The summary screen is only displayed for approximately 10 seconds before the unit automatically begins to provide you with turn-by-turn instructions.*


*If the 'Avoid by Road' and 'Avoid by Range' have not been used, this feature is unavailable and the button will be greyed out.*

Clear Avoided Road

### 6.3 Navigate Via Location

If you would like to calculate a route to a destination but want to go via a specific location along the way you can use this function. Simply input the details of your final destination as usual but press the **'Route Option'** button in the summary screen and then select the **'Navigate Via Location'** button. You are provided with the following search options:

- Find address by City
- Find address by post code
- Find by POI
- Find by recently used

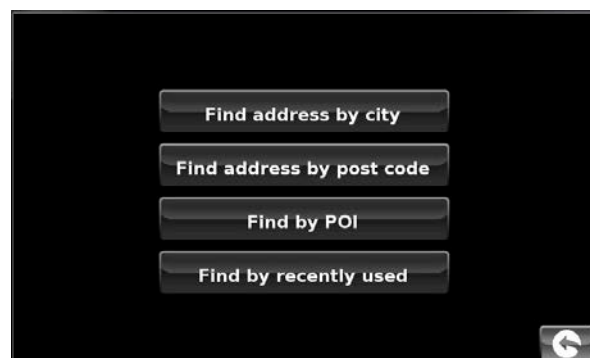

*To find out how to use these options please refer to the applicable sections in this user manual.*

Once you have found the address or location you would like to go to via your route, press the **'Set'** button. A red tick is now displayed on the **'Navigate Via Location'** button.

Now press the **'Done'** button followed by the **'Calculate'** button.

If you would like to check the route calculated prior to departure, press the **'Guide'** button on the Summary screen which will give you a list of each turn by turn instruction from the start of your journey to the end.



## 6.4 Change Start Position

You can use this function if you would like to calculate a route but from a different location to the one you are currently at. First input your destination address as normal but when you reach the Summary page, press the '**Route Option**' button.

Now press the '**Change Start Position**' icon. You are provided with the following search options:

- Find address by City
- Find address by post code
- Find by POI
- Find by recently used



*To find out how to use these options please refer to the applicable sections in this user manual.*

Once you have found the new starting point, press the '**Set**' button.

The '**Change Start Position**' is now highlighted. Now press the '**Done**' button followed by the '**Calculate**' button.


## 6.5 Summary Screen

The summary screen provides you with the information of your intended route such as distance to destination and estimated time of arrival for example and gives you the option of making any changes or viewing the route prior to commencing your journey.

### 6.5.1 Simulation

Press the '**Simulation**' button and Snooper will take you through the calculated journey step by step with full on screen and voice instructions.

Simulation speed can be increased to a maximum of ten times 'real time' by pressing the + and - buttons

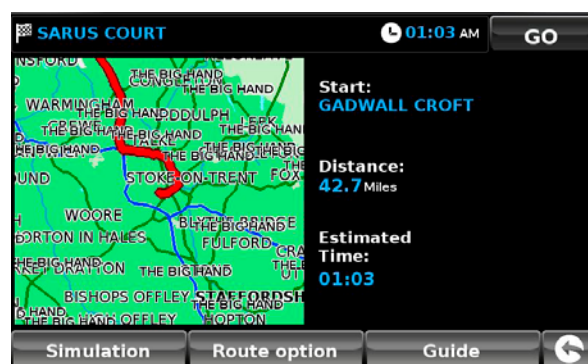

*Please Note: If at any time you wish to cancel the simulation press the return arrow  located in the bottom right hand corner of the display.*

### 6.5.2 Route Options

The '**Route Option**' function can be accessed from this page, this allows you to tailor your journey using options such as '**Shortest Time**' or '**Shortest Distance**'. Please refer to the '**Route Option**' section of this manual for more details.

### 6.5.3 Guide


If you would like to check the turn by turn instructions of the route calculated prior to departure press the 'Guide' button on the Summary screen.

## 7.0 Quick Access Menu

A small on-screen Menu can be launched by touching the screen anywhere along the top 10mm of the display. See diagram below.


 
The quick access menu will drop down automatically. If no other buttons on the drop down box are pressed the drop down box disappears after approximately three seconds.

From this Menu you can:

- Zoom closer in, or zoom further out from the map.
- Mute or alter the audio level.
- By pressing the  icon you can manipulate the map.
- Switch between the 2D, 3D and North views.
- Switch between day and night settings.
- Switch off the speed camera location facility.




### 7.1 Volume Setting

Selecting this option opens the Volume menu whereby you can increase or decrease the audio level of the unit. Press the '**Volume Control**' icon. To adjust the volume, use your finger to press either the  button to increase the volume or the  button to decrease the volume (Does not apply for the S2500 Model).



*Please note that this new setting is only temporary and if Snooper is switched off and then back on the audio level returns to either the factory default or your personalised setting.*

If you press the speaker icon  you can turn off the audio on the unit completely. A symbol is displayed in the top left hand corner of the display to indicate that the sound has been switched off. If Bluetooth is activated the symbol is not visible.


To switch the sound back on press the screen near the top of the display and select the '**Volume Control**' icon. Press either the speaker icon or the volume controls to restore audio on the unit.




### 7.2 Scroll Map

By pressing this icon you can manipulate the map by touching and moving your finger on the screen.

### 7.3 or Day or Night Settings

Bright colours are normally used for the mapping display so that you can see the map more clearly, even in bright sunlight. When it is dark outside however, you may want to switch to the Night Mode  as the daytime setting will be too bright.


The navigation view will then be displayed using dark and subdued colours that will not interfere with your night vision.


Use Day  to revert to the original colour scheme.

*Please note: If you switch the unit off and then back on the display reverts to your previous personalised setting.*



#### 7.4 Camera Alerts *(Only applicable if you have subscribed to the AURA™ Camera Database)*



This function allows you to temporarily disable the safety camera alerts. If you press the camera icon  you can turn the camera alert on or off. A symbol is displayed in the top right hand corner of the display to indicate that the alert has been switched off.

To restore the camera alerts press the top of Snooper's display to show the drop down menu and then press the camera icon. 

*Please note that if the unit is switched off and then switched back on the camera alerts are automatically enabled.*



#### 7.5 Magnify or Reduce Function


The map on the display can be magnified or reduced by pressing on the  or  buttons displayed from the drop down menu. This will also show the quick menu at the base of the display.

## 8. Understanding the Mapping Screen

### Distance to next junction or instruction

Whilst navigating a calculated route the Snooper display will show an information box. This box will tell you the next road you should be travelling on and the distance to that turn. The screen will also show you either the expected time of arrival or the time left to go. The distance left to your destination will also be displayed.

The red line on the map indicates the route you will be taking, clearly and precisely.

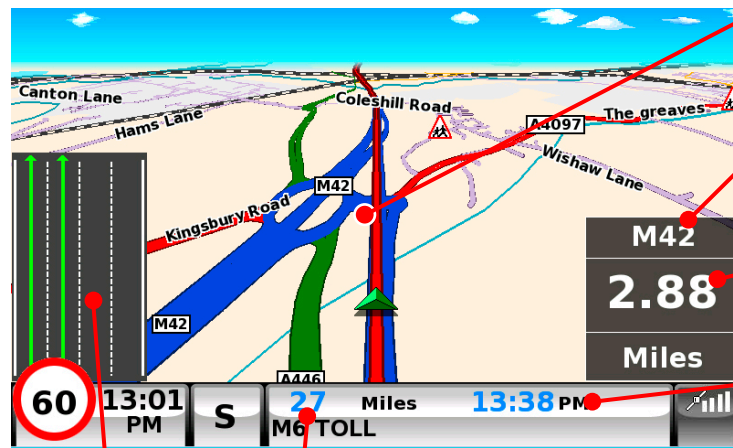

Lane Guidance Distance left to travel

The red line indicates the route you will be taking


Next motorway exit or road you are due to travel on

Distance left to next instruction

Estimated time of arrival  
(If you would like to change this to Time left to arrival simply tap the screen on time left to change it)

### Next turning or instruction

As you approach the next turning or instruction, a window will indicate the exact action that you need to take.

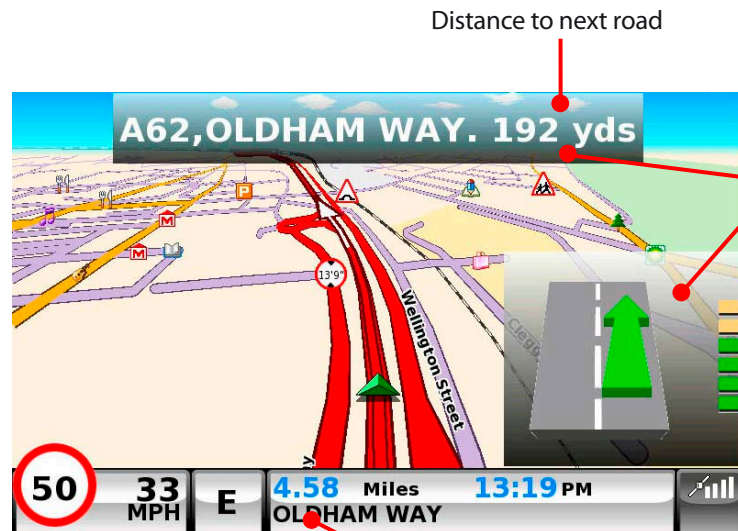

Current road

Indicates that you are approaching a filter lane and you need to keep RIGHT

# Updating Maps

New mapping is periodically released by Snooper. To check if map updates are available please visit:  
<https://www.snooperneo.co.uk/MapSerialCheck.cfm>

**NOTE: Your device must be registered at <https://www.snooperneo.co.uk/RegisterSatNav.cfm> to receive map updates and map updates may be chargeable.**

1. Once on the website you will be asked for information appertaining to your device. You will need: serial number (S/N), software version (S/W) and map version (Map). This information can be found on the 'Version' screen of your device (see page 72 for details of how to view the version screen).


**IMPORTANT: BEFORE STARTING THIS PROCESS PLEASE ENSURE YOUR DEVICE IS NOT CONNECTED TO THE PC.**

2. Download and SAVE the Snooper Map Downloader software to your PC. We recommend saving the file to your desktop. Once the file has downloaded, double click the file below to start the Map Downloader installation.






3. Please press the 'Run' button when/if the screen below appears.

4. The installation of the software should commence.

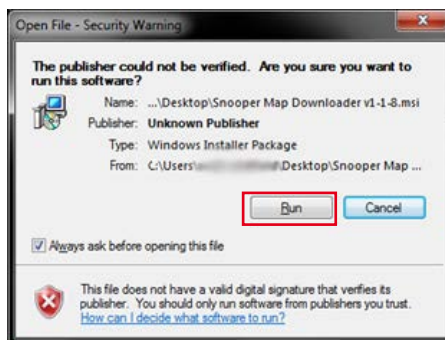


5. Continue to click 'Next' until the installation completes

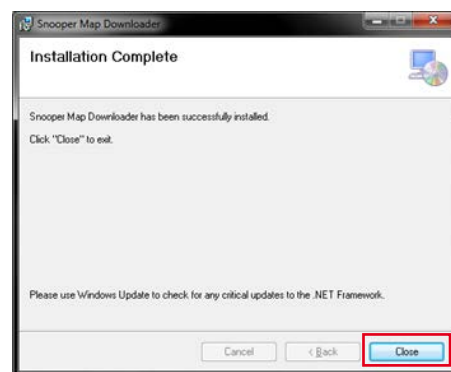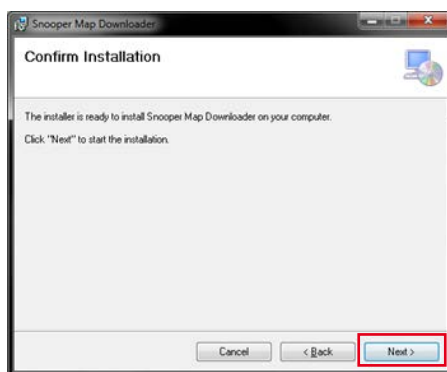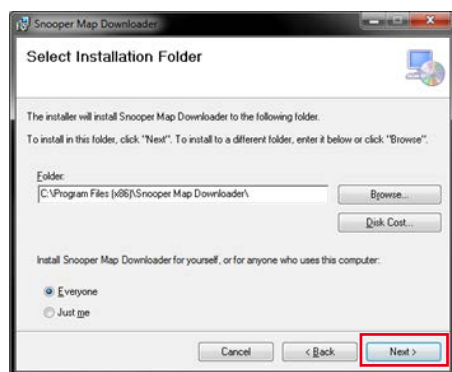

6. Click 'Close' to close the installation window.

7. A new icon will be on the desktop of your PC. Double click on the icon to open the program

8. Choose your language by clicking on the applicable flag.

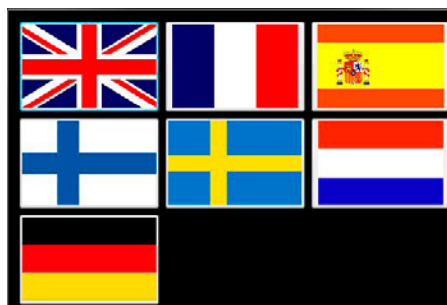


**PLEASE CONNECT THE NAVIGATION MicroSD TO THE PC USING THE SD CARD READER PROVIDED.**

9. The Map Downloader program will read your device's serial number and you will see the screen shown below.

**Note: Where the \*\*\*\*\* appears, your serial number will be displayed. Click 'Continue' to start the download process.**


**IMPORTANT: AFTER CLICKING 'CONTINUE REMOVE THE SD CARD READER FROM THE PC.**

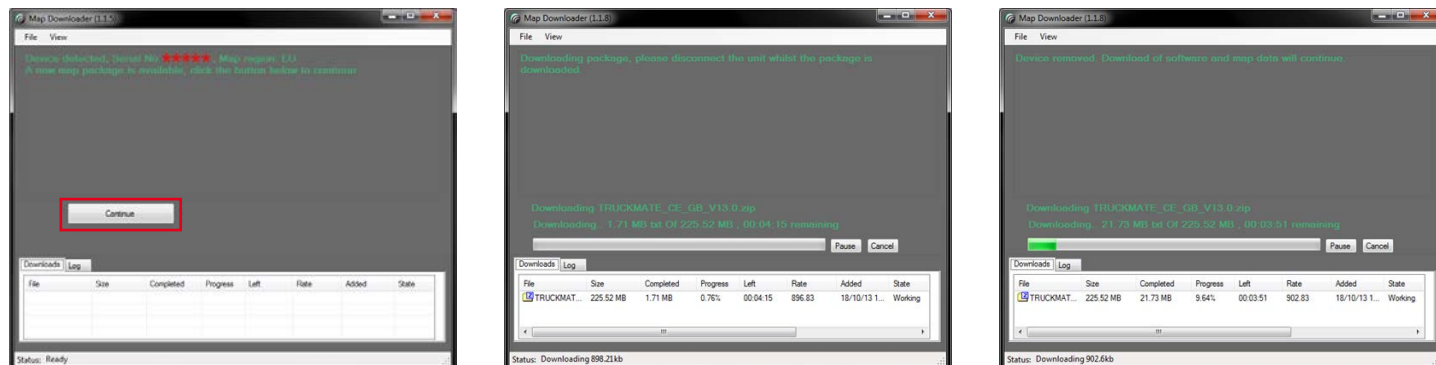

**Note: the version shown here will be different than the downloaded one and the download duration is dependent on the internet connection speed.**

10. Once the download has completed the Map Downloader will unpack the package in readiness for updating your device.

11. Click 'Run' to proceed.

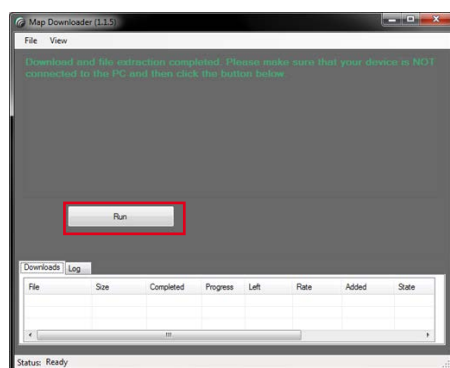

12. If you have not already done so, reconnect the MicroSD card reader to the PC.



13. The update is complete, disconnect your device from the PC and close the program.

**IMPORTANT: FOR SUBSEQUENT MAP UPDATES YOU DO NOT NEED TO CARRY OUT STEPS 1 to 6 AND THE MAP DOWNLOADER IS ALREADY INSTALLED ON YOUR PC.**

# Troubleshooting Downloads

If you are having any difficulty in performing a download onto the unit it is advisable to refer to the checklist in Section A first before contacting us.

If you are still unable to perform a download after following all of this checklist then please send an email to [Support@snooper.eu](mailto:Support@snooper.eu) stating the nature of your difficulty. To expedite your enquiry please supply as much detail as possible including your contact details, AVN S9010/20 serial number, PC operating system, error codes and any other relevant information. One of our technicians will reply as soon as possible.

Alternatively you can contact our Technical Helpline on 0333 240 1000 during office hours and select Option 3.

**This troubleshooting guide is in two sections; Section A is in the form of a checklist that will assist you with resolving common download problems. Section B consists of a few possible reasons and possible solutions to error messages that may be displayed by the operating system or the software whilst you are trying to perform a download.**

## SECTION A

### 1. Have you registered the unit?

You will not be able to download the database unless AVN S9010/20 is registered. If the unit has not been registered, a message will appear on the software informing you that the device is not enabled. Please register online at **[www.snooperneo.co.uk](http://www.snooperneo.co.uk)**.

### 2. What operating system are you using on your computer?

Snooper download software will only work on the following Windows operating systems:

**Windows Vista, Windows 7 and Windows 8.**

***The software will not work on Windows 95, 98, 98SE, Millennium, Windows 2000 and Windows XP; Apple Macintosh operating systems are not supported.***

To determine which operating system you have on your computer:

Right click on the **'My Computer'** icon on your desktop and select **'Properties'** from the drop down menu.

When the **'System Properties'** dialogue box opens, the **'General'** tab is selected by default. Under the heading of **'System'** the operating system is displayed.


If you do not have a **'My Computer'** icon on your desktop you can find this information by going to the **'Control Panel'** and double left clicking the **'System'** icon. The **'System Properties'** window will then be displayed as outlined in **'b'** above.

### 3. Is the MicroSD card reader supplied with AVN S9010/20 connected correctly?

Please make sure the card reader has a secure connection to the PC and is fully plugged in.

### 4. Have you installed Speed Camera or map download software onto your PC?

If you have not installed the speed camera or map update software you will not be able to perform a updates to AVN S9010/20.

Once the software is installed there will be a new icon in your system tray, desktop. The icon is similar to this 

Please check to see if you have the latest version of the software by visiting <http://www.snooperneo.co.uk/software.cfm>. To check what speed camera updater or map download software version you have, double left click the software icon on your desktop, look at the top of the window that opens and you will see the version number in brackets.

### 5. Have you connected the computer to the internet?

The software has to download files directly from our server and this can only be done if an internet connection is present.

Therefore make sure that your PC is connected to the internet **before** you begin to download the data to AVN S9010/20.

## SECTION B

This section is for supplying possible reasons and solutions to problems you may be experiencing whilst trying to download the database to AVN S9010/20. If after completing all the checks in Section A you are still experiencing difficulty or have received an error message please read through the following:

### 1. **ERROR MESSAGE – ‘The device has not been enabled yet.’**

Please refer to Step 1 in section A for further details.

### 2. **ERROR MESSAGE - ‘Error 521: There was a problem connecting to the Performance Products server...’**

If you get an error message as described above this normally means that there is something blocking communication between the software, most typically a firewall, and the AURA™ server. Windows Vista, Windows 7 & Windows 8 are supplied with a built in ‘Internet Connection Firewall’. Depending upon which firewall software you have you will need to access the firewall settings and allow access for the 8 Series update software.

If you do have a Firewall on your computer the speed camera or map downloader software may appear to stop and it is at this point that your Firewall software will inform you that software is trying to access the internet. Please make sure that you grant/allow/permit access through the Firewall.

**Please read the messages supplied by your Firewall software carefully before choosing your option. If you do not allow the program access to the internet through the Firewall, the download process will fail.**

If no message was prompted by the firewall software uninstall and then re-install the software and perform a download again.

**Warning: We do not recommend disabling your firewall software in order to perform a download to AVN S9010/20, nor can we provide advice on how to alter the settings on third party software, nor can we be held responsible for any action taken by the PC user that makes the PC more vulnerable to malicious viruses, software and computer hackers. Any changes made to the PC firewall settings are solely at the PC user’s discretion. We would recommend contacting the third party software manufacturer for further information of how to configure the firewall software.**

## SECTION C

### 1. **Can’t receive a GPS signal**

Please avoid places such as between tall buildings, overpass and tunnels and check the signal reception in a suitable place with a good view of the sky.

### 2. **Can’t hear anything from speaker or earphone**

Please check the volume level.

Please check the Mute status.

For earphone, please check if the jack is inserted properly.

### 3. **Screen is dark.**

Adjust the LCD brightness from the Setting menu.

### 4. **Touch function does not work well.**


Please touch the screen accurately because it will not be recognized if you touch the screen with fingernails only or with less pressure.

Please perform Touch Calibration.

# DVD Function Operation

The AVN S9010/20 will play the following formats: DVD/VCD/CD/MP3/JPEG/MPEG4/CD-R, etc.  
(Limited to diameter 12cm standard disc).

## 1. Enter/Exit

Touch  to enter DVD interface.

Touch **"MAIN"** icon to enter home page.

Press 'MAIN' to enter the main menu. Press DVD

 



When the unit is in Navigation mode and a DVD is inserted the AVN S9010/20 will play sound but the screen will not display the DVD images.



## 2. Disc Eject/Load


- A DVD can be inserted at any time and the system will automatically switch to DVD mode.
- Insert the disc with the label facing upwards. When the system detects the disc, it will automatically begin to play.

## 3. Numeric Keyboard

  Touch the  icon on the screen, to pop out the numeric keypad (as Figure on the right shows).

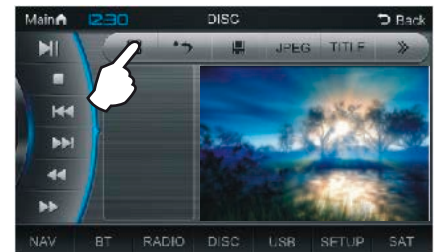

Touch the number, on the number pad to select a chapter directly, and then click  to confirm. Touch  to hide the numeric keypad.

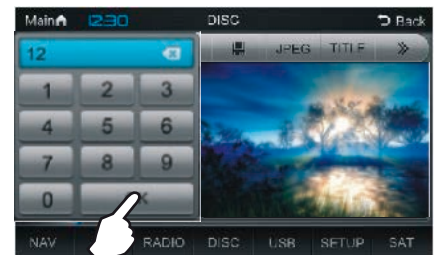

While MP3/MP4 playing, if you want to select a track greater than 10, first, select two digits on the numeric keypad and click "OK" to confirm. For example, to select track 12, first, select button "1", then button "2", finally, press "OK" to play.

## 4. Touch Menu Function Description



x FR



x FF



Previous track



Next track



Play/pause



Stop



Stop/Back to title menu/PBC switch (disc support is required)



Switch DVD language (disc support is required); switch VCD sound.



Switch DVD subtitle select (disc support is required)



Go to Title Menu (disc support is required)



Image can be captured when playing disc



Menu column of the next page



Enlarge/reduce image



Repeat



Shuffle



Menu column of the previous page

 
On fast-forward playback, press the fast-reverse button to enter the normal playback.

On fast-reverse playback, press the fast- forward button to enter the normal playback.

Touch the screen anywhere to show/hide the menu




icon to exit from touch menu.



icon to enter home page menu.


## 5. DVD Disc Playing

 If the DVD has no menu, the system will automatically read the disc and play directly. If the disc has a menu, touch the menu item to play.



Touch the icon II to return to main menu of the disc (Disc support may be required).

During playback of a disc, press the upper right part of the screen to display the play information (as per the picture on the right).

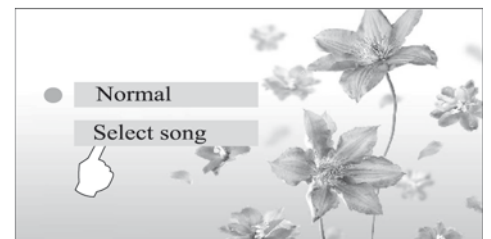

TRACK 5/12 ---	Current tracking NO./
PLAY -----	Total Chapters
00:00:45 -----	Play
	Playing time

Current track    Play time    Play status  
number

**Note** During playback, operate the touch menu to perform various play controls. For function definitions of touch menu, please refer the 4th item of DVD function operation "Functions of Touch Menu".

## 6. CD Disc Playback

Insert a CD, and the disc will be loaded and played in default order.




During playing a disc, the system will automatically switch to spectrum state if there is no operation within 10s.



If the disc has the title, the track can be chosen directly by the number pad.

**Note:** During playing, operate the touch menu to perform various play controls. For function definitions of touch menu, please refer to section 4 above for DVD "function operation".

## 7. MP3 Disc Playing

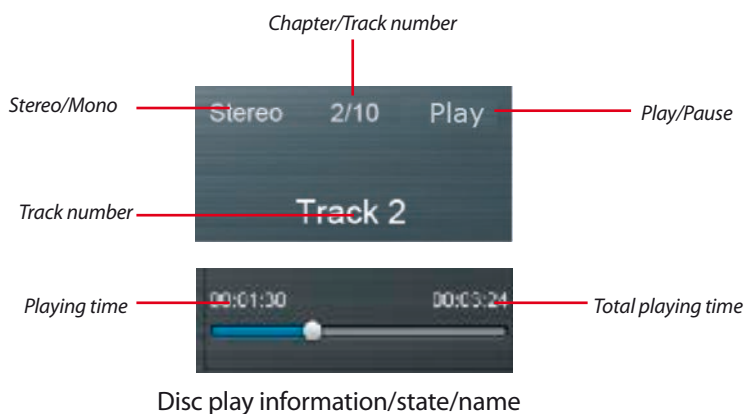Insert a MP3 disc, the disc will be loaded and will play the first file automatically.



Touch the title of the list to play directly, touch  /  to browse the list. During playing a disc, the system will automatically switch to Spectrum State if there is no operation within 10s.

## 8. MPEG4 Disc Playing

 
- MPEG is the abbreviation of "Moving Pictures Experts Group", and the MPEG4 is the fourth generation encoder standard for video audio as released by the specialist's group.
- The play operation of MPEG4 disc is basically the same as DVD disc.
- The MPEG4 disc adopts different kinds of format, such as: XVID, the AVI DIVX, RM, etc.
- MPEG files are displayed on the player in the form of folder/file. Move the cursor to the small icon at the front through the up & down arrows and press the play button for play. For detailed operation, please refer to the "MP3 disc playing".





The other play functions are the same as the one of DVD play.




## 9. JPEG Disc Playing

Insert JPEG disc into the DVD player, and the disc will be read, and the system will play the first file automatically.

  - During playing, click.  once to return to the image browse interface.

- Click the picture to view it.
- Click  /  to browse images.
- Click the icon  to view the picture(s) in the current folder at random.
- Click  one more time, it will return to the catalogue menu interface.

Play Status :

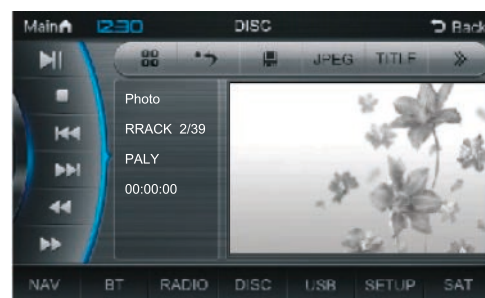


Contents menu interface:

## USB Operation

 If the AVN S9010/20 has the optional USB cable (with female USB port) fitted, a USB portable memory drive can be attached .

**NOTE: Before removing a portable USB drive from the AVN please exit USB mode.**

### Enter USB Mode

In the main menu press  or if you connect the portable USB memory drive the AVN will recognise that a device has been connected and it will automatically switch to USB mode.

Once the USB drive has been read the playing instructions are the same as for a MP3 disc, please refer to page 85 for details.

**As the standard of portable USB memory drives is not universal some devices may not operate with the AVN S9010/20.**

**For optimum performance keep the USB cable, between the AVN unit and the USB drive as short as possible.**



# DVD/CD. DVD System Setup

## 1. Turn on/off

To enter DVD set up menu please press 

Click  again to exit from the setting menu.

In DVD mode, press the icon to enter the corresponding function interface.

## 2. Operation

Press the tab of each setup menu to access the DVD settings.

Click **“exit”** to exit.

General	Audio	Prefer	Password	Exit
--General Setup Page--				
Tv Display		Wide		
Angle Mark		On		
Spdif Output				
Osd Lang		Eng		
Captions		Off		
Logo Type		DEF		
Go To General Setup Page				

## General Setup

### DVD Display

Normal/Ps Images will be scanned and output will be in Panoramic format.

Normal/Mb Images will be scanned and output in the format of **“Message Box”**

Wide Images will be scanned and output in the format of **“Wide Screen”**

### AngleMark

On/Off Display the angle mark

### SPDIF OUTPUT

SPDIF OFF Output signal is analog signal.

SPDIF/RAW Output original code stream source of the disc through digital port, when DVD coaxial output and digital amplifier are connected through coaxial port, this set should be selected.

SPDIF/PCM Original code stream source be transfer and output as PCM digital signal. When DVD audio output analog signal and 2 sound channel digital stereo amplifier are connected, this set should be selected.

**NOTE: PCM channel item can be set as long as “SPDIF IPCM” was selected. If LPCM coding sample rate of disc is lower than the one selected, then output is according to LPCM coding sample rate of the disc.**

### On Screed Display

English/French/Italian Select language display of DVD system

### LogoType

Default Display the default logo type

Captured Display the picture captured by customer.

## Audio (Speaker Setup page)

### DOWNMIX Mode

LT/RT	Dolby stereo, distributing the sound from the middle and surrounding sound channels to the left and right sound channels.
Stereo	Output left and right sound channel signal while playing disc.
V Surr	Left and right sound channel create surround sound effect.
Off	The audio output 5.1 channel signal (support 5.1 ch DVD disc only)

### Dual Mono

Stereo/L-Mono/R-Mono/Mix-Mono (Choose dolby digital sound channel)

## Prefer (Preference Page)

**Note:** Preference Set could be set only when there is no disc in the player.

TV Type	Pal TV/Multi/NTSC TV Select video output format (NTSC is recommended)
Audio	English/Chinese/French/Swedish/Italian/Russian/German/Spanish/Portuguese/others Select language for playing (Disc support is needed)
Subtitle	English/Chinese/French/Swedish/Italian/Russian/German/Spanish/Portuguese/others Select language for playing (Disc support is needed)

### Disc Menu Language

English/Chinese/French/Swedish/Italian/Russian/German/Spanish/Portuguese/others

Select language for playing (Disc support is needed)

### Parental

1 KID SAF / 2 G / 3 PG / 4PG 13 / 5 PGR / 6R / 7NCI7 / 8 ADULT

Select display level

### Default

Reset Resets the device to factory settings.

### Password Setup Page

#### Password

Select sub-item "**Change**" in password options and press OK to enter password change page. As the right figure shows.

Old Password	<input type="text"/>	<table><tr><td>1</td><td>2</td><td>3</td></tr><tr><td>4</td><td>5</td><td>6</td></tr><tr><td>7</td><td>8</td><td>9</td></tr><tr><td>0</td><td></td><td></td></tr></table>	1	2	3	4	5	6	7	8	9	0		
1	2		3											
4	5		6											
7	8		9											
0														
New password	<input type="text"/>													
Confirm Pwd	<input type="text"/>													
<input type="button" value="OK"/>														

Enter old password /new password / confirm PWD respectively and press OK.

Original PW : 1389

#### Exit

Press "**EXIT**" to exit setup menu.


# Bluetooth Handsfree

The system provides bluetooth hands free communication option. If your mobile phone is bluetooth enabled, it can establish a point-to-point connection with the AVN S9010/20, providing telephone dial up and call answering Phonebook, \* dependent of telephone model

**\* Note: \* The bluetooth module is compatible with most mobile phones.  
Some mobile phones and/or functions are not compatible with the AVN S9010/20.**

## 1. Enter/Exit

Touch  to enter bluetooth main interface.

Touch  icon to exit from bluetooth interface.




## 2. Pair/Connect


Before using the Bluetooth hands free function the AVN S9010/20 and the mobile phone must be **'paired'**. To pair the AVN S9010/20 and mobile phone press

 icon

Bluetooth main interface  
(as figure shown).

 
Touch  open the bluetooth function of your mobile phone and enable the bluetooth device search function, and **"Matching"** will be displayed on the screen.

 
After the connection has succeeded, the mobile phones will display the AVN name (Ample I).


While connecting, the mobile phone indicates the input device connection password. The device connection password can be seen on the screen (The default password is "1234" or "0000"). After matching, "Connected" will be displayed on the 'LT'~ matched mobile phone model will be displayed on the screen automatically, and  will be displayed on the upper right part of the screen.




## Settings



  Edit device name or Pin number. Enter new device name or pin number then press Enter to confirm - see page 90 for details

 For automatic connection, if pairing succeeds, the connection can be reestablished automatically after the AVN is off; and the connection can be reestablished automatically after several seconds if the connection is off.

  Automatically answer means at connection mode, after the AVN displays incoming call, after three rings the call will be answered automatically.

### 3. Modify the name and password

On the setup interface, touch the  icon to enter the modify interface.

Touch . Items to be modified are shown in the display box on the right screen, you can enter the new character by means of a keyboard, click the  icon to confirm the operation.

If input error, press the  icon to delete it.


Press the  icon to exit.


The method of modifying the password is similar to the method of modifying the name.



### 4. Dialling

You can dial number using the telephone keypad mobile phone or enter telephone number on the number button on the AVN screen.

Press number button to enter desired number, the entered number is displayed on the top line. To correct a wrongly inputted number press the  to delete one by one.

Once the correct number has been entered press  to call the number



Touch  to end the call

Pairing is OK



### 5. Answer the Phone

When an incoming call is received the AVN will automatically switch from its current mode to the Bluetooth interface.

 
Press  or  to choose to answer or refuse.

If "answer" is set up for: "automatically answer", after three rings the call will be answered automatically.

The incoming number will be displayed in the number line.




## 6. Phonebook

Touch  icon



Phonebook image appears. The phonebook displays incoming calls, received calls, and missed numbers (It displays 5 most recent calls in each category).




Choose the number you want to dial then press 

To access numbers in the SIM card phonebook, press 




To scroll up and down through the phonebook pages use  

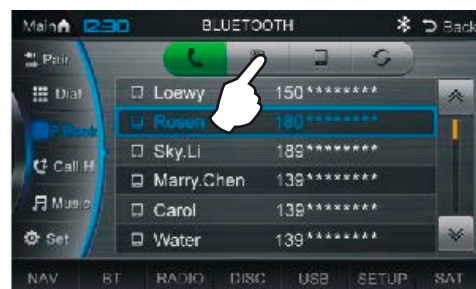


*Not all models of mobile phone are compatible with this feature*



To access the phonebook on the mobile phone press 

To refresh the phonebook content press 

## 7. Call Logs

Click on  to enter the phone log interface .

This interface displays the following information

- Address book
- Dialed calls
- Missed calls
- Received calls

Click on a dialed, missed or recived call then click  to dial.

Press   to scroll through the list.



## 8. Bluetooth playback

If your mobile phone supports it you can playback music from your mobile via the AVN unit using Bluetooth.

In the Bluetooth menu press 

 Play/Pause

 Stop

 Previous Track

 Next Track

# iPod Function Operation

When the unit is connected to an external iPod player, the audio and video files stored in iPod can be played back.

## 1. Enter/Exit


 








Touch  to access ipod main interface.

Touch the **"MAIN"** icon to return to the home page interface, and touch other function icon to exit.


**Note** If the iPod is connected when the AVN is switched On the iPod may not be recognized by the AVN unit. To establish a connection switch the AVN off then back On again while the iPod is connected.



## 2. Description of Touch Button

 - |   |  |
|---|--|
|  Enter iPod menu      |  Pop up/hide the number pad     |
|  Play/Pause           |  Switch to video playback       |
|  Next Track           |  Repeat the current played song |
|  Previous Track       |  Page Up                        |
|  Play songs at random |  Page Down                      |

## 3. Main Menu

Touch  to return to the previous menu.

The system classifies files according to the above-mentioned 6 types and stores files in the corresponding folders. Click to open a folder and play the first file.

Click on the arrows to scroll the directory

### Directory name

0. NO iPod
1. Playlists..... Playlists
2. Artists..... Artists
3. Albums..... Albums
4. Genres..... Genres
5. All Music..... All Music
6. Video..... Video



 
## 4. Audio File playing

Touch the song title/name to directly play the song

Touch   to select previous/next song.



## 5. Playing Information

Touch  and the play information will be displayed in the box on the right:

Current track/Total current folder's track number  
Play/pause  
Song name  
Artist  
Album



Current track  
playing time

All tracks  
Playing time


## 6. Video File Playing

Touch  to play back video files from the iPod

\* Most models of Ipod are compatible with AVN S9010/20 but not all functionality can be guaranteed.

*Note: When selecting the video play, you should switch to iPod Video settings to 'TV Out' to On or ask.*

*For detailed iPod operation, please refer to the iPod player manual.*

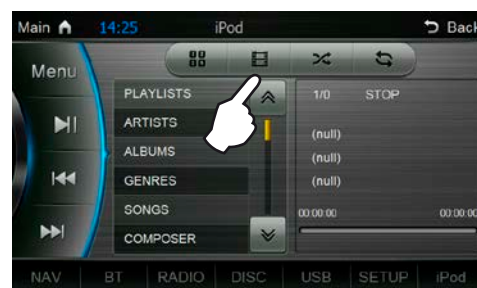

## AV Function Operation

Located on the rear of the AVN unit, there are multi-functional compound connection A and D.



For connecting external audio video (AV) sources such as games consoles, video or DVD player.

Press the **"MAIN"** icon to enter home page interface, and touch to enter AV main interface.

Press the **"MAIN"** icon to enter home page interface, and touch other function icon to exit from the AV function status.

*Note: Both the A and D interfaces of multi-function interfaces on the rear of the AVN unit can be used as AV input interface, but only one input source can be used at once.*

*When both the A and D interfaces are not connected to other device, please select A interface prior to B when selecting AV input; otherwise, AV input will be disabled.*

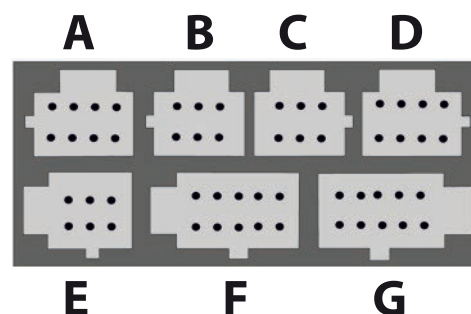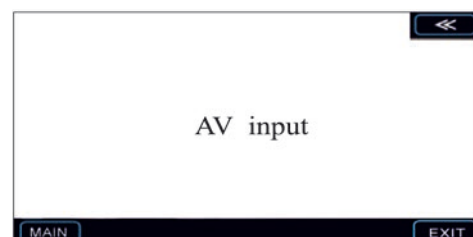

## Auxiliary Function (AUX)

### 1. Enter/Exit

From the main menu press the



# Rear Zone Function Operation

The AVN S9010/20 has a dual zone function. Dual Zone allows the front and rear passengers to listen to music or watch video from different sources. EG the driver and front passenger can listen to the radio and the rear passengers can watch a DVD.

Additional rear screens and headsets are required (not supplied).

## 1. Enter/Exit

Open the touch menu and press **AV OUT** to enter the rear zone interface while in any playing status.(except NAY)

Touch **"exit"** icon to exit.

## 2. Operation

Touch one of the **"TV/AV/DVD"** icon to select the rear zone media playing source.

**Note TV function is not available on the AVN S9010/20 unit.**



# Camera Function Operation

On this mode, if a rear camera connected, you can view the picture from the rear camera.

On the main menu, touch the icon **CAM** to enter the rear camera interface

Touch the icon **"Main"** to enter main menu, touch other function icon to enter the corresponding interface.

For automatic selection of the rear camera, when reverse gear is entered, the Orange 'back wire' needs to be connected - see page P6



# Button Background Adjustment

Enter **"System setting"** menu, and touch **L.SET** character to change the background colour of the panel buttons.

Numerical value of red, green, blue can be adjusted to change LED colour of the panel, Click **- +** icon to adjust.



Operate the direction cursor to move the light ring to select the background colour.


Touch directly to select background colour, and click **Back** to store the selected background colour.

# System Set Up

 
## Basic Operation of Setup Menu

### 1. Enter/Exit

Press the screen to open the touch menu.

Press the **"MAIN"** icon to enter home page interface, and touch  to enter system setting main interface.



Touch  icon to exit the current menu.



### 2. System Setup

Touch  to enter system settings. Touch  icon to exit.

### 3. Time Setup

Touch TIME DISP  /  icon to turn on/off time display function, the time will displayed on the lower right corner of the screen.





### 4. Spectrum Display

Touch SPECTRUM  /  icon to turn on/off spectrum display function.





### 5. Rear Camera Function (optional)

Touch BACK  /  icon to turn on/off reverse function. If a rear camera is fitted this will switch the rear camera auto switch, when reverse gear is selected, on and off.



The product has the second generation IPAS which results in a clearer image, and reversing will be safer. Snooper recommends cameras which are supplied by ourselves, these cameras have been tested and are fully compatible with the AVN S9010/20. Once the camera has been installed you will need to select **'Back'** to switch this function On. When you reverse your vehicle, the rear image will be displayed on the screen.

## 6. Key sound

Touch BEEP  /  icon to turn on/off the touch screen 'beep' sound effect



## 7. Audio navigation

Touch NAV AUDIO  /  icon to turn on/off Audio Navigation.

If On, this allows the navigation voice prompts be heard through the front two speakers, muting the original audio source.







## 8. Video navigation

Touch NAV VIDEO  /  icon to turn on/off Video Navigation.

If On, this allows the navigation prompts to interrupt the original video source.



## 9. Interface colours

Touch    or  to change the colour scheme of the user interface

## Video Setup

Touch  icon to enter video settings.

Touch   to adjust the brightness, chroma and contrast of the image.


Press     to change the colour mode.




## Audio Setup




Click  icon to enter audio settings.

 
Press icon   to adjust the tone.


Touch the icon  to revert the device to the default settings.

Press   to adjust the equaliser mode between Flat, Customised, Pop, Classic, Jazz and Rock.

Touch the icon  to enter the balance/fade setup interface.

Press the     to adjust the left to right balance and the front to rear fade.

To revert to factory default press 

 Press  icon to exit.

**Note "Center volume" adjustment is available only when 5.1-channel is on.**  
**Only with playback of a disc with 5.1ch encoding can you turn on and setup this feature. When playing a CD ,MP3 disc, please turn off 5.1ch.**



## Time Setup

Touch the icon  to enter the time setup interface.

Press  to change the time zone



Press the up or down arrow to adjust the Year, Month, Day, Hours or Minute



 
Press 24H to choose 24 hour format

Press RDS SYNC to synchronize the clock using the radio tuner RDS.

Press NAV SYNC to synchronise the clock using GPS.



# Control Calibration

Press  to enter control calibration.  
Touch “exit” icon to exit.

The AVN can be controlled by the vehicles multi-function steering wheel (where fitted) but the AVN controls must be calibrated with the corresponding functions on the steering wheel.

**NOTE: not all vehicle steering wheel controls are compatible with the AVN**

To calibrate the steering wheel controls follow these steps:

1. Press ‘Start’
2. Touch any key on the screen to start the test
3. Press the button on the AVN then press the corresponding button on the steering wheel
4. After the AVN has ‘learnt’ the first function you will be prompted to initiate the next function to be programmed. Once all of the steering wheel functions have been successfully programmed press ‘End’

**NOTE: the steering wheel control cable must be connected for this function to operate (see page 6)**




## Touch Screen Calibration

Occasionally the AVN screen may need calibrating.

To recalibrate the screen press  to enter touch calibration



Press OK to start the calibration then click the ‘+’ on the screen in this order:

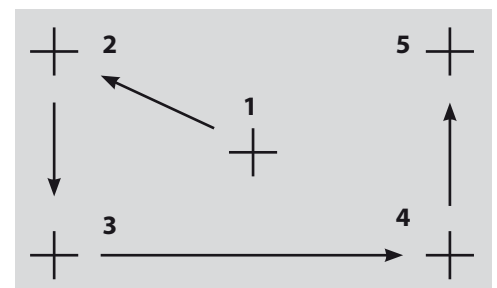


Once calibration has been completed click anywhere on the screen to exit.

## Main menu shortcuts

The shortcut menu bar, at the base of the screen, can be customised.

A maximum of seven shortcuts can be displayed on the shortcut menu bar.

Click  to enter the shortcut interface.

To add a shortcut to the menu bar simply click on the icon and drag it on to the menu bar.









If there are already seven items on the shortcut bar you will need to remove one item before you can add another. To remove a shortcut just press on the item, you want to remove, in the menu bar and drag the icon onto the main screen.

# Description of the Buttons on Remote Control



NO.	Button	Description of Button Function
1	<b>POWER</b>	Press and hold to switch the AVN Off /On, press twice to switch On Press for a short period to change screen brightness, Press once for day mode (bright), twice for night mode (dim) press three times to turn the LCD display Off.
2	<b>SRC</b>	Switch between audio/video sources
3	<b>MUTE</b>	Press to mute the audio source
4	<b>▲</b>	Press to eject the DVD/CD
5	<b>0-9</b>	In DVD/USB mode press the corresponding number to select the track on the DVD/USB In radio mode press buttons 1~6 to select memorised radio stations
6	<b>10+</b>	For track selection greater than 10 EG for track 19 press 10+ then press 9, for 25 press 10+ twice and then press 5.
7	<b>ANGLE</b>	Where supported on the DVD press to change the viewing angle
8	<b>SETUP</b>	Press and hold to enter DVD menu Press for 1 second to enter system menu
9	<b>MENU</b>	Press to access the home menu screen
10	<b>SUB-T</b>	Where supported on the DVD, press to switch subtitles On and Off

NO.	Button	Description of Button Function
11	<b>REP</b>	Repeat track
12	<b>RANDOM</b>	Play tracks in a random order (shuffle)
13	<b>ZOOM</b>	Zoom into photographs
14		STOP
15	<b>TITLE</b>	DVD disc playing title key
16	<b>BAND/TA</b>	Press for 1 second to change radio band AM/FM. Press and hold to switch TA On and Off
17	<b>SCAN/AF</b>	Press for 1second to scan radio frequency, press again to stop scan. Press and hold to switch AF On and Off
18	<b>AUDIO</b>	Where supported on the DVD, press to switch DVD languages
19	<b>VOL+</b>	Volume +
20	<b>VOL-</b>	Volume -
21	<b>AUTO. P</b>	Press to scan and automatically store radio stations
22	<b>RADIO</b>	Press to change the source to Radio
23	<b>NAVI</b>	Press and hold to calibrate LCD touch screen. Press for 1 second to enter or exit navigation.
24	<b>DVD/USB</b>	Press to change the source to DVD/USB
25	<b>IPOD</b>	Press to change the source to iPod
26	<b>AV/TV</b>	Press to change the source to AV (TV is not supported on the AVN 9010)
27		In audio playback Press 1second to fast forward/or in radio mode to scan frequency (up) Press for 2 seconds to fast forward x 2, press and hold to move curser Up
28		In audio playback Press 1second to Rewind or in radio mode to scan frequency (down) Press for 2 second to rewind x 2, press and hold to move curser down.
29		In radio mode press for 1 second to change to the last radio station. Press and hold to move the cursor to the left.
30		In radio mode press for 1 second to change to the last radio station. Press and hold to move the cursor to the left.
31		

# Precautions

## 1. Precaution When Using the Product

Please don't insert coins or metal object into the CD/DVD slot.

Please don't try to repair. This product is composed of precise electronic components and has no user serviceable parts inside..

Please don't use thinners or other chemicals to wipe the surface of the display screen. Grease or dirt should be wiped off by using a soft cloth.

If water or other substance enters into the product, please turn off the power supply immediately and contact the distributor.

Do NOT insert or remove map SD card and/or connect a wire or accessory during start-up.

If the drive mechanism is blocked, do NOT use force. Please call a dedicated maintenance engineer to repair.

## 2. Precautions for Installation of external AMP

Check if the resistance of the speaker matches with that of the AMP. Please use high-quality speaker wires, and the length of the wire must be exact.

To reduce the static noise, adjust the volume to 2/3 of the max volume, and adjust the volume of the AMP to the distortion when with AMP.

## 3. Precaution for Discs

Discs which have dirt, dust, scratches and bending on the surface will cause malfunction.

Do not place a disc on a sharp object, or rough surface, as the disc surface may be scratched.

Do not use discs with a diameter of less than 12cm (not including 12cm) or discs with irregular shapes such as heart or octangular shape, etc.

Disc cleaning: Rub the disc surface with a soft damp cloth.

# Trouble Shooting

Before sending the AVN S9010/20 for service, please carry out inspection or make adjustments according to possible causes of problems stated on the list below. It is possible that problems will be resolved and the AVN will go back to normal operation. If you have any doubt about the problems on the list or the problem can't be resolved effectively by following the remedy as instructed, please contact our company or a professional service center.

Problem	Possible Cause	Remedy
No display on LCD	Fuse blowing	Replace with a new fuse
	Loose wire	Reconnect properly.
	Communication between main machine and vehicle control system failed	Press Reset key of the main machine and reconnect
	Main machine control system communication failed	Press Reset key of the main machine and restart
	Too low storage battery voltage. System's automatic protection activated	Charge the storage battery to 12V
	Is the LCD screen in 'dark' mode	Touch the screen to restore the display
No sound played	System in mute state	Press Mute key exit from mute state
	Loose speaker wire	Reconnect properly.
	Damaged speaker	Replace with a new speaker
No image played	Wrong disc position	Ensure that the label faces upwards on the tray
	Dirty or damaged disc	Try another disc
	Loose/bad wire connection	Reconnect properly.
	Wrong use of AV input port	Please refer to AV function operation for selecting ports
	Wrong iPod play video file setting	Please refer to instructions of iPod function operation
Occasional sound skipping	Dirty or damaged disc	Try another disc
Disabled Bluetooth hands free function	Wrong mobile phone paired with AVN or BT is disabled	Rematch or switch on bluetooth
Bluetooth matching failed or unable to match	Compatibility problem exists between some models of mobile phone Bluetooth and the product.	Replug the car key to start up and match
Touch failed/too slow action	Touch coordinate offset	Recalibrate the touch screen
	Main machine control system communication error	Press the Reset key to start or restart the machine
Car reversing failed	Wrong or bad reversing wire connection	Reconnect
	Wrong or bad camera	Reconnect
	Rear camera setting isn't set to "On"	Access system settings, and set the reversing as "On".
No key tone	The "Key tone" is set to "Off"	Access system settings, and set "Key tone" to "On"
There is music but no accompanying sound during DVD playback	Wrong language setting	Reset the language key
	Set the speaker as S.ICR state and vehicle sound cabinet as 2CW4CR. The setting doesn't match the device.	Set the speaker as stereo, and set the audio setting "S.I" as "Off".
Key backlight can't be lit	The "Small lamp control" setting in factory mode is not corresponding the small lamp control wire connection state or small lamp power supply.	Reset the small lamp control form

Problem	Possible Cause	Remedy
Disabled hand brake	Wrong or bad hand brake connection	Reconnect
	Under factory mode, hand brake control is set up to off mode.	To turn on mode. Renew set up hand brake control
Disabled steering wheel control	Wrong connection between steering wheel wire and steering wheel control wire of the main machine	Reconnect
	Failed connection between steering wheel and main machine	Radio steering wheel calibration
	The steering wheel control is not compatible with AVN S9010/20.	Please contact our company for professional service or technical assistance.
Disabled tyre pressure detection/ Not accurate	Tyre pressure detection setting error	Reset
	Insufficient or no tyre pressure	Replace the battery

## Product Specifications

### System Parameters

Working voltage	DC 11V-14V
Working current	MAX 15A
Standby current	<6mA
Working temperature	-20 - 60
Storage temperature	-30 - 80
Video system	Auto PAL/NTSC/SECAM
Screen dimensions	137.52mm(H)×77.232mm(V)
Weight	2.6Kg
Consume power	120W

### DVD Parameters

Video output	1±0.2Vp-p75Ω
Disc format	Diameter 12cm
Disc compatible	DVD/VCD/CD/MP3/ WMA/JPEG/MPEG4

### Audio Parameters

Channel imbalance	≤2dB
Separation	≥45dB
Frequency response	20Hz~20KHz(±3dB)

### Tone Control

Bass	100Hz±8dB
Mid	1KHz±8dB
Treble	10KHz±8dB

### Amplifier Parameters

Test voltage	13.8V
Max output power	4×10W
Speaker resistance	4Ω (4-8Ω could be accepted)

## Packing List With Built-in NAV Module

Standard Accessories	
Model	Qty
Power/loudspeaker wire	1pcs
5.1 AV output wire	1pcs
USB patch cord	1pcs
Steering wheel connecting wire	1pcs
AV output wire	1pcs
External microphone	1pcs
GPS antenna	1pcs
Stylus	1pcs

Optional Accessories	
AV input wire A	1pcs
iPod adapter	1pcs
MicroSD card reader	1pcs
NAV MicroSD card	1pcs
Remote control	1pcs

### Disposal of Old Electrical & Electronic Equipment

(Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable accessories: Remote control, Microphone, GPS antenna (aerial)

### Disposal of waste batteries

(applicable in the European Union and other European countries with separate collection systems)



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly,

hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

# SERVICE UNDER WARRANTY

AVN S9010/20 comes with a standard 12 month manufacturer's warranty.

## LIMITED WARRANTY

This Snooper product is warranted against all defects in materials and workmanship for a period of one (1) year from the date of original purchase, when purchased from an authorized Snooper dealer.

### **ALL PURCHASES OF SNOOPER PRODUCTS FROM NON-AUTHORIZED SNOOPER DEALERS ARE SUBJECT TO FURTHER WARRANTY RESTRICTIONS AS DESCRIBED BELOW.**

The conditions of this Limited Warranty and the extent of responsibility of Performance Products Ltd (Snooper) under this Limited Warranty are as follows :

1. This Limited Warranty will become void if service is performed by anyone other than an approved Snooper Warranty Service Centre that results in damage to the product.
2. This Limited Warranty does not apply to any product which has been subject to misuse, neglect or accident, or which has had the serial number altered, defaced or removed, or which has been connected, installed, adjusted or repaired, other than in accordance with the instructions provided by Snooper.
3. Should you have any difficulties with the performance of this product during the warranty period, please call Snooper or visit our web site <http://www.snooperneo.co.uk>. You may also contact Snooper Customer Services at the address listed below for any service help you may need with Snooper products.
4. PROOF OF DATE OF PURCHASE FROM AN AUTHORIZED SNOOPER DEALER WILL BE REQUIRED FOR ANY WARRANTY SERVICE OF THIS PRODUCT.
5. SNOOPER PRODUCTS PURCHASED FROM A SOURCE OTHER THAN AN AUTHORIZED SNOOPER DEALER, INCLUDING ANY AND ALL PURCHASES VIA THE INTERNET FROM A NON INTERNET AUTHORIZED SNOOPER DEALER, SHALL NOT BE COVERED BY ANY SNOOPER LIMITED WARRANTY TO THE EXTENT ALLOWED BY APPLICABLE LAW.
6. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM EU COUNTRY TO EU COUNTRY.
7. ALL IMPLIED WARRANTIES, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, SHALL HAVE NO GREATER DURATION THAN THE WARRANTY PERIOD SET FORTH ABOVE. UNDER NO CIRCUMSTANCES SHALL SNOOPER BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT. BECAUSE SOME EU COUNTRIES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.
8. Product must be shipped in its original carton or equivalent carton, fully insured, with shipping charges prepaid. Snooper will not assume any responsibility for any loss or damage incurred in shipping.
9. The sole responsibility of Snooper under this Limited Warranty shall be limited to the repair of the product or the replacement of the product only (whichever is deemed appropriate and at the sole discretion of Snooper).
10. This Limited Warranty does not cover car static or other electrical interferences, labour costs or any other associated or incidental costs incurred for the removal or reinstallation of the unit for repair.

If, for some reason your unit requires service under warranty return AVN S9010/20 by special delivery or other suitable courier service and in suitable packaging to:

**The Returns Dept.,  
Performance Products Limited,  
Cleaver House,  
Sarus Court,  
Stuart Road,  
Manor Park,  
Runcorn WA7 1UL.  
Tel: 0333 240 1000  
Fax: 0333 240 1100**

Enclose the following information:

- (a) Your name, address and a full description of the problem.
- (b) A telephone number where you can be reached during business hours.
- (c) Serial number of your unit.
- (d) Proof of Purchase

***PLEASE NOTE: We cannot process any warranty claims unless proof of purchase is provided.  
Please retain your receipt as a precaution.***

***Full terms and conditions of warranty are available on request.***