


Read this instruction sheet thoroughly before installation and use of the FSA-410 4-Wire Smoke Detector. This instruction sheet is intended to be used with the Installation Manual of the alarm control panel. All the instructions specified within that manual must be observed.

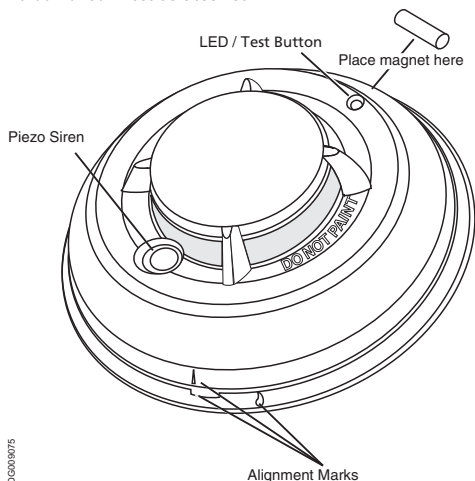

### Introduction

The FSA-410 is a 4-wire photoelectric smoke detector with the following available options: fixed temperature and rate of rise heat detector, internal piezoelectric alarm, auxiliary form C relay, and/or remote LED output. Three versions are available: US version (UL), Canadian version (ULC) and an International version (EU).

**NOTE:** Heat detection based on rate of rise has not been investigated by UL/ULC.

### Operation

Approximately every 7 to 8 seconds the unit tests for a smoke or heat alarm condition. During this sequence the unit also performs self diagnostics, and checks for faults. During normal operation the LED will flash every 50 seconds and the siren will not sound.

### Smoke Alarm

The smoke detector has a nominal fixed alarm sensitivity (refer to the *Specifications* on the last page) and it will go into alarm when the signal level exceeds the 'alarm' threshold and activates the alarm relay to send the alarm signal to the control panel. During an alarm the LED will flash once per second and the siren will sound the the evacuation temporal pattern.

### Remote Alarm - Interconnection

Multiple detectors (with sirens) can be connected using the PRM-4W Polarity Reversal Module. When a fire alarm occurs, the panel will signal the PRM-4W to reverse the polarity of the 4-wire loop. This will activate the sirens of all units connected on the loop. Refer to the PRM-2W/4W Installation Instructions for installation details.

### Smoke - Drift Compensation

The detector automatically compensates for long-term environmentally induced changes to maintain a constant smoke sensitivity. When the drift compensation has reached its high or low limit of adjustment, the detector will go into the trouble state.

### Heat Alarm

The heat detector will go into alarm when the heat signal level exceeds the heat alarm threshold (135°F/57°C); and send the alarm signal to the control panel. The detector will also go into heat alarm if there is a rapid increase in the temperature over a short period of time. During an alarm the LED will flash once per second and the siren will sound the evacuation temporal pattern.


### Alarm Indications

Condition	LED	Siren	Relay
Normal / Sensitivity in Production Range	Flash 1/50s	OFF	Deactivated
Alarm Smoke/Heat	Flash 1/1s	Beep	Activated
Alarm Restore	Flash 1/1s	Beep	Activated
Remote Alarm	Flash 1/50s	Beep	Deactivated
Low Power Trouble	OFF	OFF	Deactivated
Other Fault / Trouble	OFF	CHIRP 1/50s	Deactivated
Test Switch - Failed	OFF	CHIRP 1/50s	Deactivated
Test Switch - Pass	Flash 1/1s	Beep	Activated

## Installer Instructions

### 1. Smoke Detector Placement

On smooth ceilings, detectors may be spaced 9.1M (30 feet) apart as a guide. Other spacing may be required depending on ceiling height, air movement, the presence of joists, uninsulated ceilings, etc. Consult National Fire Alarm Code NFPA 72, Chapter 11 or other appropriate national

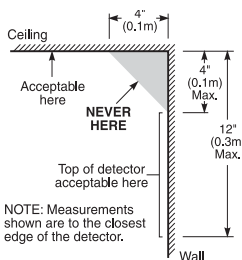

standards for installation recommendations.

Do **NOT** locate smoke detectors at the top of peaked or gabled ceilings; the dead air space in these locations may prevent the unit from detecting smoke. Avoid areas with turbulent air flow, (near doors, fans or windows). Rapid air movement around the detector may prevent smoke from entering the unit. Do **NOT** locate detectors in areas of high humidity.

Do **NOT** locate detectors in areas where the temperature rises above 38°C (100°F) or falls below 5°C (41°F).



**Install smoke detectors in accordance with NFPA 72, Chapter 11:** "Smoke detectors shall be installed outside of each sleeping area in the immediate vicinity of the bedrooms and on each additional story of the family living unit, including basements and excluding crawl spaces and unfinished attics. In new construction, a smoke detector shall also be installed in each sleeping room."

## 2. Mount Smoke Detector Backplate


Mount backplate using screws provided and the appropriate holes on the mounting plate.

**NOTE:** Install wiring in accordance with the appropriate national and local electrical codes. For UL/ULC Installations, the power supply must be supplied from a UL/ULC Listed alarm control unit.

**CAUTION:** The dust cover protects the unit when not in service. Remove dust cover before use.

## 3. Wiring

Refer to the wiring diagrams in this installation sheet and those provided in the Installation Manual of the alarm control panel being used with the unit. Before connecting the unit, prepare the wires from the electrical box for connection; Do not use wire frayed or bent wire.

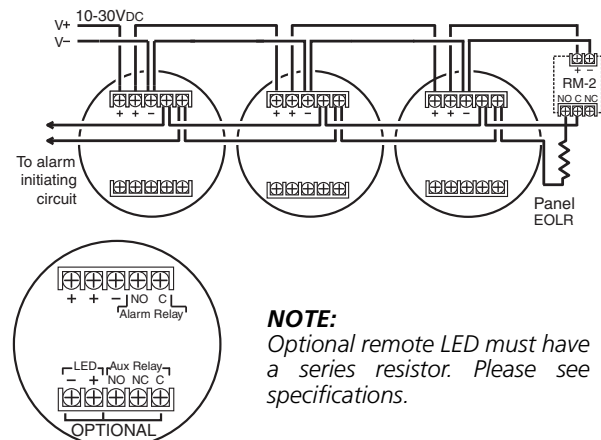

**CAUTION:** Do NOT use looped wire under terminals for system supervision. Break the wire run, to provide supervision of connections.

When wiring is completed, inspect it and correct any errors before applying power to the unit. When the wiring has been thoroughly reviewed, neatly insert the wires into the electrical box and secure the unit to the mounting plate.


To connect this device use only wiring listed as fit for the purpose.

## 4. Mounting Detector Installation

Position the detector on to the base plate using the detector and base plate alignment marks. Press the detector gently in place while rotating the detector clockwise until the detector

snaps into place. Remove the side tab from the locking tab to lock in place (optional).

**Removal:** If the side tab is removed to lock the detector, depress tab with a small flat blade screwdriver and rotate detector counter-clockwise until the alignment marks line up. Remove detector.

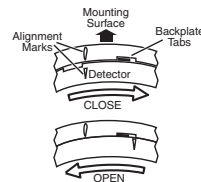

## 5. Test Unit

Initiate test for units without a siren by placing a magnet near the LED/Test Button for greater than 5 seconds. Initiate test for units with a siren by pressing the test button for greater than 5 seconds.

Alarm activation is indicated by the LED, the siren, and the alarm reporting to the control panel. If the smoke detectors are inter-connected using model PRM-4W and a detector is tested, then all detectors will sound. The detector restores to normal when the test button is released or when the magnet is removed.

**NOTE:** Allow a minimum of 20 seconds between test activations.

**NOTE:** If the detector is in one of the following states when a test is initiated; it will not enter an alarm state.

1. Compensation trouble.
2. Failure of heat or smoke detector.
3. Other internal faults that could prevent a smoke or heat alarm.

**NOTE:** Smoke sensitivity of installed detectors can be measured without removal or an alarm being generated using the FSD-100 Smoke Detector Test Meter.

## Test Unit with FSD-100 Smoke Detector Test Meter

To test the unit using the FSD-100, set the test meter up to read devices as per the instructions supplied with the test instrument. Depress the test button (or place the FSD-100 on the outside edge of the plastics beside the test button to activate the reed switch on units without siren) on the smoke detector for 1 second and release.

**NOTE:** If the test button is held for 5 seconds or longer, an alarm will be generated. Move the test meter over the center of the detector, wait until you hear the test meter beep, remove the unit and the information can be immediately reviewed. Please see the instructions supplied with the FSD-100 Smoke Detector Test Meter for more information.

## 6. Compensation Reset

Cleaning, replacement of the smoke sensor, or other changes may change the background signal/noise of the detector; this requires the drift compensation be reset. Compensation trouble is one of the faults indicated when the LED indicator is OFF while the siren is chirping.

- Remove power from the unit, then press and hold the test button for 30 seconds to power down unit.
- Power up unit while pressing the test button. The LED will flash; when 5 seconds has elapsed. Release the test button within 1 second after the fifth LED flash.
- The LED will flash every 8 seconds for 1 minute. When the detector stops flashing test the detector to verify normal operation.

# Owner's Instructions

## Fire Safety In The Home

Most fires occur in the home, and to minimize this danger, it is recommended that a household fire safety audit be conducted and a family escape plan be developed.

### Household Fire Safety Audit

1. Are all electrical appliances and outlets in safe condition? Check for frayed cords, overloaded lighting circuits, etc. If you are uncertain about the condition of your electrical appliances or household service, have a professional evaluation.
2. Are all flammable liquids safely stored in closed containers, and in a cool and well ventilated area? Avoid cleaning the unit with flammable liquids.
3. Are hazardous materials such as matches out of the reach of children?
4. Are furnaces and wood burning appliances properly installed, clean, and in good working order? If in doubt, have a professional evaluation.

### Family Escape Planning

There is often very little time between the detection of a fire and the time it becomes deadly. Because of this, it is very important that a family escape plan be developed and rehearsed.

- Include every family member when developing the escape plan.
- Study the possible escape routes from each location within the house. Since many fires occur at night, give special attention to the escape routes from sleeping quarters.
- It is essential that escape from a bedroom be possible without opening the interior door. Consider the following when making your escape plans:
  - Ensure that doors and windows that open to the outside are easily opened. Ensure that they are not painted shut and that the locking mechanisms operate smoothly.
  - Develop plans for rescue, if opening the exit or using the exit is too difficult for children, the elderly or handicapped. This plan includes making sure that those who are to perform the rescue can promptly hear the fire warning signal.
- If the exit is above the ground level, provide an approved fire ladder or rope, as well as training in its use.
- Keep exits on the ground level clear. Be sure to remove snow from exterior patio doors in the winter and that outdoor furniture or equipment does not block exits.
- Have a predetermined assembly point where everyone can be accounted for; for example, across the street or at a neighbor's house.
- Once everyone is out of the house, call the Fire Department.
- A good plan emphasizes a quick escape. Do not investigate first or attempt to fight the fire, and do not attempt to rescue belongings or valuables as this takes up time. Once outside, do not re-enter the house; wait for the Fire Department.
- Write the plan down and rehearse it frequently so that should an emergency ever arise, everyone will know what to do. Revise the plan as conditions change; for example, when there are more or fewer family members in the home or if there are changes to the house.

- Make sure your fire warning system is operational by conducting weekly tests. If you are unsure about system operation, contact your smoke detector installer or dealer.
- DSC recommends that you contact your local Fire Department and request further information on home fire safety and escape planning. If available, have your local fire prevention officer conduct an in-house fire safety inspection.

### Testing Your Smoke Detector

Follow the test procedure described here or contact your smoke detector dealer or installer for testing instructions. DSC recommends that you test the entire alarm system at least once a week to verify the operation of all system functions.

#### Units with Siren - Push-button switch

To test the smoke detector, press and hold the test button on the front of the unit for a minimum of 5 seconds, the siren initiates a clicking noise during this time. When the button is pressed, the unit's alarm will sound and an alarm will be sent to the control panel. When the button is released, the alarm will cease.

#### Units without Siren - Magnet-activated switch

To test the smoke detector, place a magnet adjacent to the test button on the front of the unit (see Fig. 1) and hold in place for 5 seconds (minimum). When the magnet is in place, the internal reed switch will activate and an alarm will be sent to the control panel. When the magnet is removed, the alarm will cease.

Upon completing the functional testing of the smoke detector, check the unit's sensing chamber to ensure proper operation. To test the sensing chamber, wave a lit cotton wick or punk stick around the outside of the unit until a generous amount of smoke enters the sensing chamber or the unit alarms. If the smoke detector does not function properly, call your smoke detector installer or dealer for service.


### Maintenance

The smoke detector is designed to require minimum maintenance. If the case becomes dusty, vacuum with a small brush attachment. If the case is greasy, wipe the case gently with a soft cloth slightly dampened with soapy water.

*Never disassemble the smoke detector; there are no user serviceable parts inside the unit. Never paint the unit. Paint may prevent smoke from entering the unit. If you are planning renovations or repainting, contact your installer and ask that the unit be temporarily removed until work is complete.*

If the unit is located in an area where it is exposed to high levels of dust or insects and causes false alarms, it may require service; contact your smoke detector installer or dealer.

### Smoke Detector Family

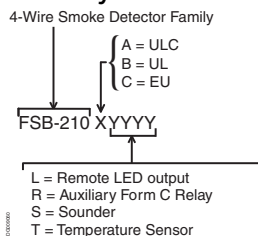

Model	Heat	Siren	Aux Relay	LED Output	Max. Alarm Current Draw
FSA-410A, FSA-410B, FSA-410C	NO	NO	NO	NO	25mA
FSA-410AT, FSA-410BT, FSA-410CT	YES	NO	NO	NO	25mA
FSA-410AR, FSA-410BR, FSA-410CR	NO	NO	YES	NO	40mA
FSA-410ART, FSA-410BRT, FSA-410CRT	YES	NO	YES	NO	40mA
FSA-410AS, FSA-410BS, FSA-410CS	NO	YES	NO	NO	75mA
FSA-410AST, FSA-410BST, FSA-410CST	YES	YES	NO	NO	75mA
FSA-410ARS, FSA-410BRs, FSA-410CRS	NO	YES	YES	NO	90mA
FSA-410ARST, FSA-410BRST, FSA-410CRST	YES	YES	YES	NO	90mA
FSA-410ALST, FSA-410BLST, FSA-410CLST	YES	YES	NO	YES	75mA
FSA-410ALRST, FSA-410BLRST, FSA-410CLRST	YES	YES	YES	YES	90mA

## Specifications

Diameter (base) . . . . . 5.8in (147mm)  
 Height (including base) . . . . . 2.077in (528mm)  
 Operating Temperature with Heat Detector . 32°-100°F (0°-37.8°C)  
 Humidity . . . . . 5%-93% RH, non-condensing  
 Operating Voltage Range . . . . . 10-30 VDC  
 Maximum Standby Current . . . . . 20µA@12 or 24VDC  
 Maximum Alarm Current . . . . . 25mA-90mA  
 Smoke Sensitivity ULC . . . . . 2% ± 0.5%/ft obscuration  
 Smoke Sensitivity UL . . . . . 3% ± 0.8%/ft obscuration  
 Heat Alarm . . . . . 135°F (57°C)  
 Siren Alarm Pattern ULC . . . . . Continuous Beeps  
 Siren Alarm Pattern UL . . . . . Evacuation Temporal Pattern  
 Minimum Remote LED Resistance:  
 12V system . . . . . 500 Ohm  
 24V system . . . . . 1000 Ohm  
 Maximum Remote LED output (if equipped) . . . . . 25mA  
 Auxiliary Relay Rating (Form C Relay) . . . . . 2A @ 30VDC (Resistive)  
 Alarm Relay Rating (Form A Relay) . . . . . 2A @ 30VDC (Resistive)

### FCC Compliance Statement

**CAUTION: Changes or modifications not expressly approved by DSC could void your warranty to use this equipment.**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/television technician for help.
- The user may find the following booklet prepared by the FCC useful: "How to Identify and Resolve Radio/Television Interference Problems". This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, Stock # 004-000-00345-4.

### Industry Canada Compliance Statement

This Class B digital apparatus meets all requirements of the Canadian interference-causing equipment regulations.  
 Cet appareil numérique de la Classe B respecte toutes les exigences de règlement sur le matériel brouilleur du Canada.

### SOFTWARE PRODUCT LICENSE

The SOFTWARE PRODUCT is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE PRODUCT is licensed, not sold.

- 1. GRANT OF LICENSE.** This EULA grants You the following rights:
  - (a) Software Installation and Use - For each license You acquire, You may have only one copy of the SOFTWARE PRODUCT installed.
  - (b) Storage/Network Use - The SOFTWARE PRODUCT may not be installed, accessed, displayed, run, shared or used concurrently on or from different computers, including a workstation, terminal or other digital electronic device ("Device"). In other words, if You have several workstations, You will have to acquire a license for each workstation where the SOFTWARE will be used.
  - (c) Backup Copy - You may make back-up copies of the SOFTWARE PRODUCT, but You may only have one copy per license installed at any given time. You may use the back-up copy solely for archival purposes. Except as expressly provided in this EULA, You may not otherwise make copies of the SOFTWARE PRODUCT, including the printed materials accompanying the SOFTWARE.

### 2. DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS

- (a) Limitations on Reverse Engineering, Decompilation and Disassembly - You may not reverse engineer, decompile, or disassemble the SOFTWARE PRODUCT, except only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation. You may not make any changes or modifications to the Software, without the written permission of an officer of DSC. You may not remove any proprietary notices, marks or labels from the Software Product. You shall institute reasonable measures to ensure compliance with the terms and conditions of this EULA.
- (b) Separation of Components - The SOFTWARE PRODUCT is licensed as a single product. Its component parts may not be separated for use on more than one HARDWARE unit.
- (c) Single INTEGRATED PRODUCT - If You acquired this SOFTWARE with HARDWARE, then the SOFTWARE PRODUCT is licensed with the HARDWARE as a single integrated product. In this case, the SOFTWARE PRODUCT may only be used with the HARDWARE as set forth in this EULA.
- (d) Rental - You may not rent, lease or lend the SOFTWARE PRODUCT. You may not make it available to others or post it on a server or web site.

(e) Software Product Transfer - You may transfer all of Your rights under this EULA only as part of a permanent sale or transfer of the HARDWARE, provided You retain no copies, You transfer all of the SOFTWARE PRODUCT (including all component parts, the media and printed materials, any upgrades and this EULA), and provided the recipient agrees to the terms of this EULA. If the SOFTWARE PRODUCT is an upgrade, any transfer must also include all prior versions of the SOFTWARE PRODUCT.

(f) Termination - Without prejudice to any other rights, DSC may terminate this EULA if You fail to comply with the terms and conditions of this EULA. In such event, You must destroy all copies of the SOFTWARE PRODUCT and all of its component parts.

(g) Trademarks - This EULA does not grant You any rights in connection with any trademarks or service marks of DSC or its suppliers.

**3. COPYRIGHT** - All title and intellectual property rights in and to the SOFTWARE PRODUCT (including but not limited to any images, photographs, and text incorporated into the SOFTWARE PRODUCT), the accompanying printed materials, and any copies of the SOFTWARE PRODUCT, are owned by DSC or its suppliers. You may not copy the printed materials accompanying the SOFTWARE PRODUCT. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE PRODUCT are the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants You no rights to use such content. All rights not expressly granted under this EULA are reserved by DSC and its suppliers.

**4. EXPORT RESTRICTIONS** - You agree that You will not export or re-export the SOFTWARE PRODUCT to any country, person, or entity subject to Canadian export restrictions.

**5. CHOICE OF LAW** - This Software License Agreement is governed by the laws of the Province of Ontario, Canada.  
**6. ARBITRATION** - All disputes arising in connection with this Agreement shall be determined by final and binding arbitration in accordance with the Arbitration Act, and the parties agree to be bound by the arbitrator's decision. The place of arbitration shall be Toronto, Canada, and the language of the arbitration shall be English.

### 7. LIMITED WARRANTY

(a) **NO WARRANTY** - DSC PROVIDES THE SOFTWARE "AS IS" WITHOUT WARRANTY. DSC DOES NOT WARRANT THAT THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE.

(b) **CHANGES IN OPERATING ENVIRONMENT** - DSC shall not be responsible for problems caused by changes in the operating characteristics of the HARDWARE, or for problems in the interaction of the SOFTWARE PRODUCT with non-DSC SOFTWARE or HARDWARE PRODUCTS.

(c) **LIMITATION OF LIABILITY; WARRANTY REFLECTS ALLOCATION OF RISK** - IN ANY EVENT, IF ANY STATUTE IMPLIES WARRANTIES OR CONDITIONS NOT STATED IN THIS LICENSE AGREEMENT, DSC'S ENTIRE LIABILITY UNDER ANY PROVISION OF THIS LICENSE AGREEMENT SHALL BE LIMITED TO THE GREATER OF THE AMOUNT ACTUALLY PAID BY YOU TO LICENSE THE SOFTWARE PRODUCT AND FIVE CANADIAN DOLLARS (CAD\$5.00). BECAUSE SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

(d) **DISCLAIMER OF WARRANTIES** - THIS WARRANTY CONTAINS THE ENTIRE WARRANTY AND SHALL BE IN LIEU OF ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF DSC. DSC MAKES NO OTHER WARRANTIES. DSC NEITHER ASSURES NOR AUTHORIZES ANY OTHER PERSON PURPORTING TO ACT ON ITS BEHALF TO MODIFY OR TO CHANGE THIS WARRANTY, NOR TO ASSUME FOR IT ANY OTHER WARRANTY OR LIABILITY CONCERNING THIS SOFTWARE PRODUCT.

(e) **EXCLUSIVE REMEDY AND LIMITATION OF WARRANTY** - UNDER NO CIRCUMSTANCES SHALL DSC BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, BUT ARE NOT LIMITED TO, LOSS OF PROFITS, LOSS OF THE SOFTWARE PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF CAPITAL, COST OF SUBSTITUTE OR REPLACEMENT EQUIPMENT, FACILITIES OR SERVICES, DOWNTIME, PURCHASERS TIME, THE CLAIMS OF THIRD PARTIES, INCLUDING CUSTOMERS, AND INJURY TO PROPERTY. **WARNING:**

DSC recommends that the entire system be completely tested on a regular basis. However, despite frequent testing, and due to, but not limited to, criminal tampering or electrical disruption, it is possible for this SOFTWARE PRODUCT to fail to perform as expected.

1134  
 DSC, Toronto, Canada  
 2011  
 1134-CPD-002

EN54-5/A1 (2002)  
 EN54-7/A2 (2006)  
 Point type smoke and  
 heat detector

