

Xerox® WorkCentre® 7500 Series

Quick Email Guide

 
 


- 1. Touch Screen:** Provides access to printer information and functions.
- 2. Services Home:** Press to access the main services, such as copy, scan, and fax.
- 3. Services:** Press to access Services Home or the last used screen.
- 4. Job Status:** Press to view the list of active and completed jobs.
- 5. Machine Status:** Press to view supplies status, printer information, and so on.
- 6. Log In/Out:** Press to access password-protected features, then enter the user name and password using the touch screen keyboard. Press again to log out.
- 7. Help:** Press for information about the current selection or service.
- 8. Language:** Press to change the touch screen language and keyboard settings.
- 9. Energy Saver:** When printer is in low power mode, press to enter normal mode. Press while the printer is in normal mode to enter low power mode.

- 10. Start:** Press to start a copy, scan, or fax job.
- 11. Stop:** Press to pause a print, copy, scan, or fax job. On the touch screen, touch **Resume** to continue or **Delete** to cancel the job.
- 12. Clear All:** Press once to clear current job settings. Press twice and touch confirm to reset all job settings to default.
- 13. Interrupt Printing:** Press to hold the current job to allow a priority job to process. Press again to finish the interrupted job.
- 14. Alphanumeric Keys:** Press to enter alphanumeric information.
- 15. C:** Press to delete numeric values or the last digit entered using the alphanumeric keys.
- 16. Dial Pause:** Press to insert a pause in a fax number.

Basic Emailing

- Place the originals face up in the document feeder, or face down on the glass.
- Press **Services Home** on the control panel, then touch **E-mail** on the touch screen.
- Specify the recipient using one of these methods:
 - Touch **New Recipient**, then enter the complete email address using the touch screen keyboard.
 - Touch **Address Book**, type the desired recipient, then touch **Search**. Touch **Add**, then touch **Close**.
- Touch **Subject** to change the subject line as desired.
- Confirm or change Email tab options such as Output Color and Original Type. Also touch other tabs for more options.
- Press the green **Start** button.

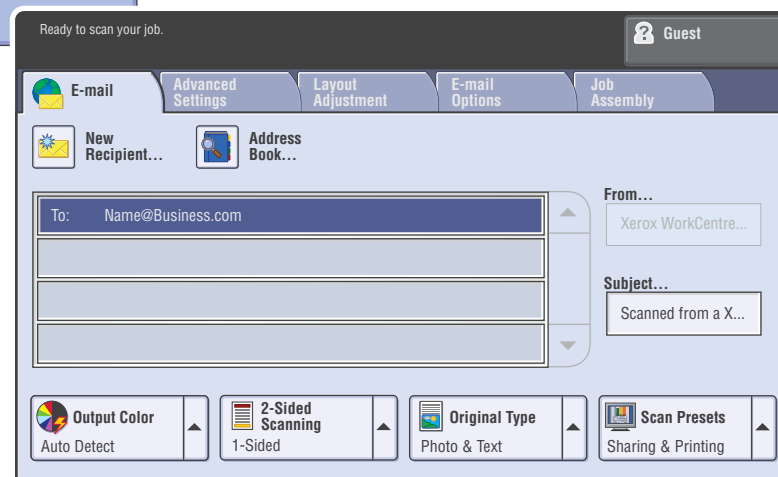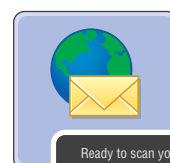

Email and Email Options Tabs

Email

- Output Color:** Select Auto Detect, Black & White (100% black and 100% white only), Grayscale, or Color.
- 2-Sided Scanning:** Select 1-Sided, 2-Sided, or 2-Sided, rotate Side 2.
- Original Type:** Select Photo & Text, Photo, Text, Map, or Newspaper/Magazine.
- Scan Presets:** Select Sharing & Printing, Archival – Small file Size, OCR, High Quality Printing, or Simple Scan. Touch **View Details** for descriptions of Scan Presets.

Email Options

- File Name:** Change the file name of the scan.
- File Format:** Select PDF, PDF/A, XPS, Multi-Page TIFF, TIFF (1 File per Page), or JPEG (1 File per Page). PDF, PDF/A, and XPS Options are Image Only or Searchable, which works with optical character recognition (OCR).
- Message:** Add a message to the email.
- Reply To:** Change the Reply To address of the email.

Other Tab Options

Advanced Settings

- Image Options
- Image Enhancement
- Resolution
- Quality/File Size

Layout Adjustment

- Original Orientation
- Original Size
- Edge Erase

Job Assembly

- Build Job

