

RasterLink Pro5 SG



Software RIP

RasterLinkPro5 SG

Reference Guide

For JV series
For CJV series
For UJV-160

This guide explains about features of RasterLinkPro5 SG for the color Ink-jet printer “JV series”.

The kinds of manuals and how to use them

This product comes with following manuals.

Installation Guide


This manual explains how to install and set up RasterLinkPro5 SG/RasterLink Pro5 IP/RasterLinkPro5 TA.

Network Connection Guide

This manual explains how to set computer to connect to RasterLinkPro5 via network. (This is provided in PDF file in the manual CD.)

Reference Guide

There are two kinds of reference guides. One is for common settings to each printer and the other is for special settings to each printer. They explain necessary setting items of the functions and operation in order to use RasterLinkPro5 SG/RasterLinkPro5 IP/RasterLinkPro5 TA. Read the proper reference guide for your printer. (This is provided in PDF file in the manual CD.)



you are now
reading this
manual.

Firmware Update Operation Manual

This manual explains how to use the update software for MIMAKI printer. (This is provided in PDF file in the manual CD.)

Notice

- It is strictly prohibited to write or copy a part or whole of this document without our approval.
- The contents of this document may be subject to change without notice.
- Due to improvement or change of this software, the description of this document could be partially different in specification, for which your understanding is requested.
- It is strictly prohibited to copy this software to other disk (excluding the case for making backup) or to load on the memory for the purpose other than executing it.
- With the exception of what is provided for in the warranty provisions of MIMAKI ENGINEERING CO., LTD., we do not assume any liability against the damages (including but not limited to the loss of profit, indirect damage, special damage or other monetary damages) arisen out of the use or failure to use of this product. The same shall also apply to the case even if MIMAKI ENGINEERING CO., LTD. had been notified of the possibility of arising damages in advance. As an example, we shall not be liable for any loss of the media (works) made using this product or indirect damages caused by the product made using this media.

Adobe, the Adobe logo, Photoshop, Illustrator and PostScript are trademarks of Adobe System Incorporated. Apple, Macintosh, Power Macintosh, Mac OS and Mac OSX are registered trademarks of Apple, Inc. Microsoft Windows, Windows XP, Windows Vista, and Windows 7 are trademarks of Microsoft Corporation and other countries.

The color collection described in this manual is based on DIC Color Guide data. DIC and DIC Color Guide are registered trademarks of Dainippon Ink and Chemicals, Incorporated.

PC MACLAN is a registered trademark of Miramar Systems, Inc.

All trademarks of Corel used in this document are trademarks or registered trademarks of the Corel Corporation and its related companies in Canada, the United States and/or other countries.

All brand names and product names are trademarks or registered trademarks of their respective companies.

About this Instruction

This manual explains how to operate RasterLinkPro5 SG for printing ink jet printer “JV Series”.

Notations

Menu items are enclosed in quotation marks like “Full Color”.

Buttons in dialog box are framed like .

Symbol



indicates a caution you should pay attention.



Describes a useful procedure.



Shows the number of the page that has related contents.

About Terms

Job: A “Job” means a printing file that is handled by RasterLinkPro5 SG. Once data in any format from application software such as Adobe Illustrator is spooled in RasterLinkPro5 SG, it is registered in RasterLinkPro5 SG and becomes a job.

Scan: “Scan” on the RasterLinkPro5 SG means the head moving direction (Y direction) of printer.

Feed: “Feed” on the RasterLinkPro5 SG means the media moving direction (X direction) of printer.

FineCut: This software is produced by MIMAKI ENGINEERING. It is a plug-in of Adobe Illustrator for generating cut data.

SimpleStudio: This software is produced by MIMAKI ENGINEERING. It allows you to create print data and cut data easily.

Table of Contents

The kinds of manuals and how to use them.....	2
Notice	3
About this Instruction.....	4
Notations	4
Symbol	4
About Terms	4
Editing the Job	11
Editing the Image	11
“Image Edit” Window.....	11
Thumbnail List.....	12
Shuffle multiple jobs.....	12
Layout Preview.....	13
Red line displayed on the preview when using CJV30	14
To Print in Scale (Scale).....	15
To Print at a Specified Ratio.....	15
To Print an Image with a Specific Size	16
To Print at Different Ratio in Scan and Feed directions	16
Rotating Print Data (Rotation)	17
Printing a Mirror Image of the Print Data (Mirror).....	18
To Move an Image to Any Part of Media (Position).....	19
Moving an Image by Designating Numeric Values	19
Moving an Image by the Mouse.....	19
Moving an Image on the Keyboard	20
Copying Print Data (Copy)	21
Specify the number of copies (CJV30).....	22
Setting Interval	23
Space	23
Pitch.....	23
Trimmed printing (Trimming)	24
Print Cut Line (Print Cut Line)	25
Printing Register Marks.....	26
Detect Mark.....	27
Arrange the images (when there are multiple images)	28
Arrange in the scan direction (nest).....	28
Arrange in the feed direction (sequential).....	28

Arrange the image (when there is one image).....	29
Arrange in the Center	29
Double sided printing (JV5-320S/JV33-260/JV34-260).....	30
Paneling printing (paneling).....	32
Copy print images for cutting later (Sticker Print)	34
Print Information Label Printing	38
Tiling Edit.....	39
Flow of the Tiled Printing	40
Tiling Setup Window	41
Tiling Preview	42
Layout Setting Window	43
Layout Preview	43
Editing Images before Setting Tiles	44
Setting the Work	45
Setting Work Size	45
Moving the Work.....	46
Dividing the Tiles	47
Dividing the Tiles at Even Interval	47
Designating the Tile Intervals individually.....	49
Adjusting the Pitch of the Tile	51
Fine adjustment to the location of the dividing line using a keyboard.....	52
Setting the Options of the Tiles.....	55
Setting the Overlap of Tiles	55
Print mark on the overlap (Corner Mark)	57
Printing the Parting Line of the Images (Print Parting Line).....	59
Print the tile number on each tile (Print Tile Number).....	60
Printing Cut Line of the Tile (Print Cut Line)	61
Setting the Printing Order of Tiles.....	62
Printing the tiles sequentially	62
Designating the Tiles to be Printed Freely	63
Laying out the Tiles.....	65
Reversing the even-numbered column.....	65
Arranging the Tiles to the position of your choice	66
Arranging in the Center of the Media.....	67
Moving the Tiles to the position of your choice.....	69
Ending the Tiling Setting.....	70
Printing the Tiles	71
Twin roll printing (using JV3-250SP)	73
Layout Preview	73

Print multiple jobs at one time	74
Grouping	74
Add grouped jobs to jobs being edited.....	76
Clear grouping.....	78
Ungrouping in the Job List	78
Ungrouping on the edit screen.....	79
Editing Multiple Jobs	79
Color Edit	80
Setting Color Matching	80
Editing Color Adjustment.....	82
Preparing a Color Adjustment Set.....	83
Deletes Color Adjustment Sets	84
Updating Color Adjustment Sets	84
Adjusting Ink Density.....	85
Adjusting All Ink Densities.....	85
Adjusting the Ink Densities for Illustration Part and Image Part.....	86
To Adjust Color in Detail (Ink Curve)	87
Version 1.0 and 2.0 device profiles	87
Version 3.0 device profile.....	88
Adjusting Ink Curves	89
Set an Ink Curve by Keyboard	92
K-CMY Mixing Ratio.....	95
Color Replacement	96
Color Replacement method	96
Color Replacement of spot color names.....	96
Color Replacement of CMYK.....	97
Color Replacement of gradations	97
Replace any one color of CMYK with multiple inks.....	97
Combination with Auto Special Color Composition	98
Auto Special Color Composition: Special Color Print Area is "Valid Pixel".....	98
Auto Special Color Composition: Special Color Print Area is "Whole Image" .	98
Auto Special Color Composition: Special Color Ink Density is 0%.....	98
Method of creating Color Replacement images	99
Conditions for Images where Color Replacement is Possible	99
Creating spot colors	99
Color Replacement screen.....	102
Spot Color	102
Gradation	104
Mono Color	105
Create a Color Replacement set.....	106
Update a Color Replacement Set	107

Select a Color Replacement set	108
Delete Color Replacement set.....	108
Replacing spot colors and CMYK colors	109
Specify the original color for replacement.....	109
Unselect the original color for replacement	109
Create ink information after replacement.....	110
Delete ink information after replacement	114
Switch displays	115
Replacement information list	115
Preview	116
Create the swatch library	116
Replacing gradations	117
Restrictions on gradations for which Color Replacement is possible	117
Gradation replacement settings.....	119
Mono Color Replacement	120
Acquire the color from original document (Scan color).....	121
Outline of color acquisition.....	121
Color acquisition	122
Color Collection	125
Printing by Approximating DIC Color Guide	125
Special Color adjustment	130
Emphasize highlights with special color	130
Automatically create a special color layer (Auto Special Color Composition - JV3-SP series/JV33/CJV30/UJV-160/JV400) ...	133
Example of "Auto Special Color Composition"	135
Example of "Composite Order"	135
Specify and create a special color block (Manual creation - JV3-SP Series/JV33/CJV30/UJV-160/JV400)	136
Editing Ink Limit	139
Creating a special color adjustment set.....	139
Deleting a special color adjustment set	140
Updating a special color adjustment set.....	140
Adjust the ink curve	141
Special color image correction function	142
Editing Print Condition.....	144
Device Profile Refined Display	147
[Print Mode] sub menu.....	148
[Profile Info] sub menu.....	151
[Device Adjustment] sub menu	152
[Calibration] sub menu.....	155

Editing the Cutting Conditions (using CJV30).....	156
Cut Setup Submenu.....	156
Multipage jobs	158
Main Window.....	158
“Job Editor”.....	158
Edit jobs (Image Edit).....	159
Decide the print pages	159
Position	159
Trimming	160
Alignment.....	160
Copy.....	161
Color separation Print (JV4 series only).....	162
Application separation spool method	162
Edit color separation jobs	165
Image Edit.....	165
Color Edit	166
Print Condition.....	167
[Print Mode].....	167
[Separation Setup] (RIP separation only)	168
Artwork Mode “High Quality” setting	169
Plotting mode for each level of plotting quality.....	169
About Condition Management.....	170
[Hot Folder] Sub menu	172
[Image Edit] Sub menu.....	173
[Color Edit] Sub menu	174
[Print Condition] Sub menu	175
[Cut Condition] Sub menu (CJV30 only)	176
Displaying the Condition Management Window.....	177
Creating a New Condition Set.....	177
Changing Setting Values of Condition Set	178
Applying Conditions to the Job.....	180
[Hot Folder] Sub menu	182
Preparing a Hot Folder and Printer driver	182
Automatic PC MACLAN setting	184
Deleting a Hot folder and Printer driver.....	185
Canceling PC MACLAN settings.....	186

Printer Status Display Function	187
When the Output Port is IEEE1394 or USB 2.0.....	187
“General” information.....	187
“Media” Information.....	189
“Media” information (With the JV3-SP Twin Roll)	191
“Ink” information (JV3 series/JV22/JV5/JV33/CJV30/JV400).....	192
“Ink” information (JV4).....	193
“Heater” information (JV3 series/JV5/CJV30).....	194
“Version” information.....	194
When the Output Port is without IEEE1394 or USB 2.0	195
“Media” information.....	195
“Ink” information.....	196
 Appendix	 197
The color acquisition function and supported scanners.....	197
Supported scanners.....	197
Scanner driver settings	198

Editing the Job

This chapter explains how to edit the Job.

To edit the Job, open the “Job Editor”. For opening method of the “Job Editor”, refer to Common features for every printer, Reference Guide.

Editing the Image

The size of the image, its output position, etc. will be designated.

“Image Edit” Window

The screenshot shows the 'Image Edit' window in the Mimaki JV3-SP Job Editor. The window is divided into several sections: 'Basic', 'Scale', 'Rotation', 'Position', 'Copy', and 'Image Operation'. The 'Basic' section includes a 'Valid' checkbox and 'Scan' and 'Feed' settings for both 'Input' and 'Output'. The 'Scale' section has 'Scan' and 'Feed' settings in percentage and inches, with a 'Keep Ratio' checkbox. The 'Rotation' section has a dropdown set to 'OFF' and a 'Mirror' section with a 'Reverse' checkbox. The 'Position' section has 'Scan' and 'Feed' settings in inches. The 'Copy' section has a 'Copy(s)' field set to '1' and an 'Interval' section with 'Space' and 'Pitch' options, each with 'Scan' and 'Feed' settings. The 'Image Operation' section has a 'Trimming' preview area. A central preview window shows the image being edited on a grid. At the bottom, there are buttons for 'Fit to Media Width', 'Zoom Out', and 'Zoom In'. A status bar at the bottom left shows the time and media width: '[13:33:51] The media width is 23 inch (Manual Input)'. A 'Condition Management' section at the bottom right has 'OK' and 'Cancel' buttons.

[Image Size]
Indicates the image size of the job and the output size of the image that has been edited.

[Media Scan]
Indicates the media scan.

[Feed]
Displays the feed length when the media is leaf paper. Displays the Roll Media when the media is roll paper.

[Detect Media Size]
Reads the media size from the printer.

[Step of the cursor key]
Designates the amount of movement of the image when it is moved using the keyboard. (P.20)

[Thumbnail List]
Previews the original image of the job. (P.12)

[Setting Screen]
The size, position, etc. of the job are set. The items that can be set are different depending on the type of the device.

[Layout Preview]
Previews the image to be printed on the media. (P.13)

Thumbnail List

This function lists the thumbnail images of the jobs that can be edited.

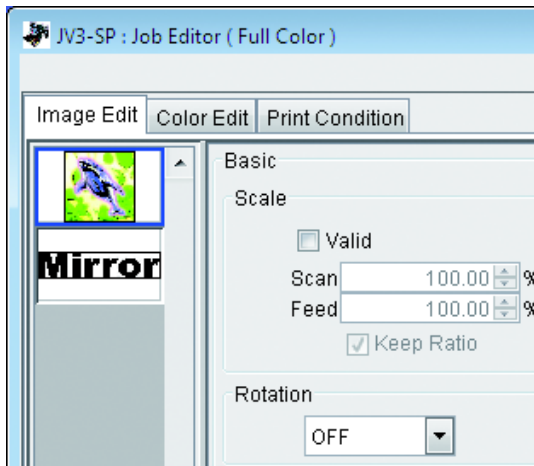
This function does not update the thumbnail image in the file preview area even if you edit the image.

Selection among jobs are changeable by clicking an image.

Two or more jobs selectable by clicking each of them while pressing the

Ctrl key.

Clicking outside the thumbnails deselects all jobs.



Shuffle multiple jobs

To change the order, select the thumbnail of the job to change, and reposition it with drag and drop.



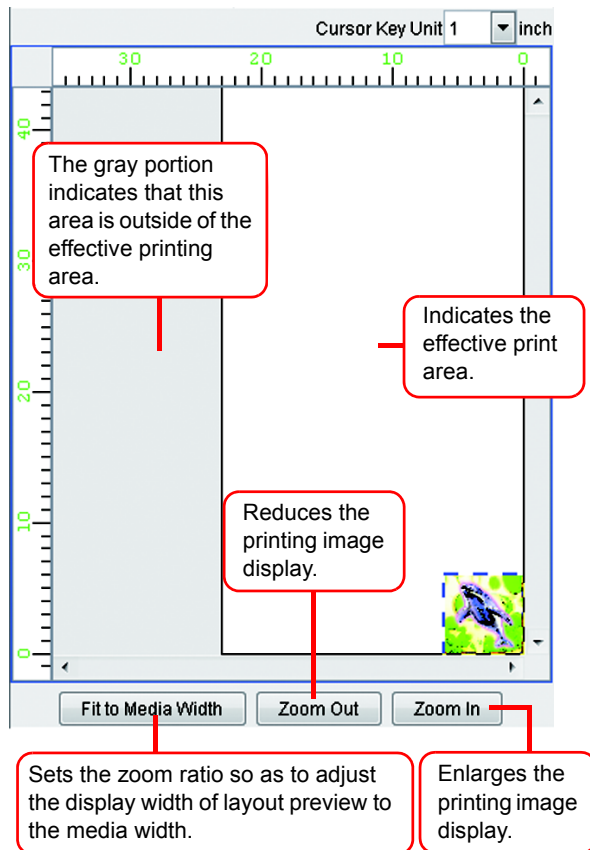
Layout Preview

Display the result of an image.

Job is selectable by clicking it.

Two or more jobs selectable by clicking each of them while pressing the **Ctrl** key.

Clicking where there are no images deselects all jobs.




Red line displayed on the preview when using CJV30

For print&cut job and cut job, Warning Line will be placed horizontally at the specified location of feeding direction from the origin of the printer.

If the cut location is above the Warning Line, previously printed roll media may touch the floor.

The location of the Warning Line can be specified from the “media” information screen.

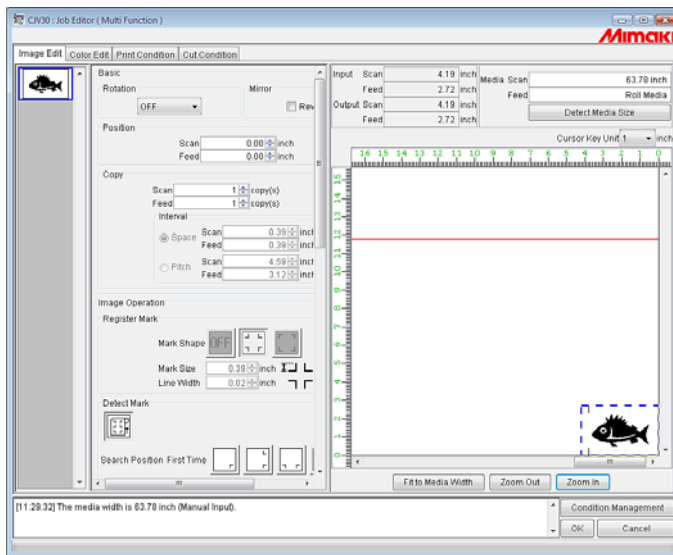(☞ P.189)



To Print in Scale (Scale)

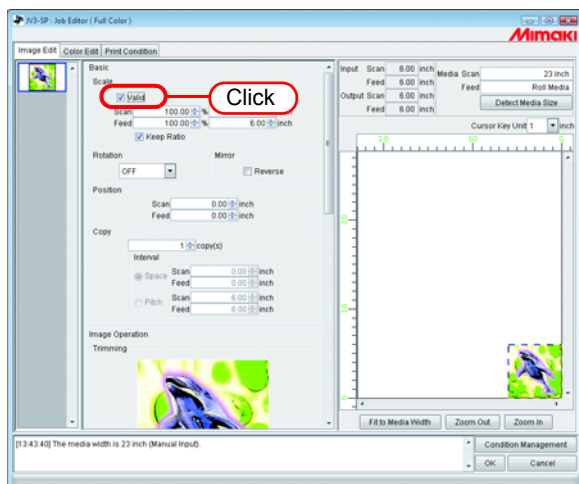
NOTE!

“Scale” is not displayed for jobs with all of the following conditions.

- Jobs of a multifunctional output
- Jobs of a RasterLink output from FineCut or SimpleStudio
- Jobs with register mark

This function enables you to enlarge or reduce the image.

When you have not checked “Valid”, the image is printed with the size created in application software.




To Print at a Specified Ratio

Enter the ratio both in “Scan” and “Feed” directions.



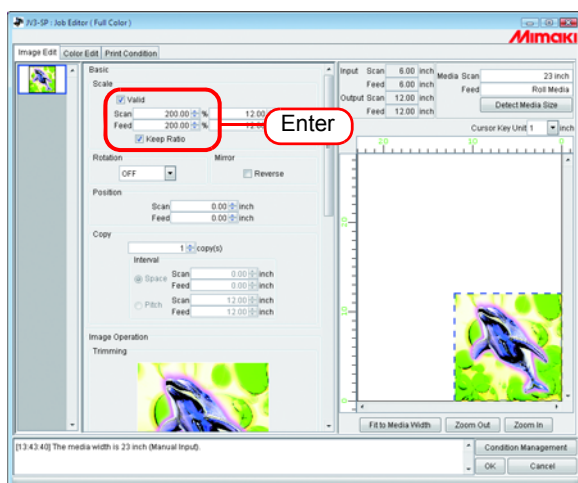- If you right-click on the value entry box, you can set the amount of increase or decrease of the up and down arrow buttons. You may also increase or decrease the input value using \uparrow and \downarrow keys on the keyboard.
- By checking “Keep Ratio”, and entering one value or the other, it controls the other value to be automatically rectified with the same ratio.
- When you set it to 100%, the image is printed with the size of the image that you prepared by application software.




To Print an Image with a Specific Size

Enter the image size.



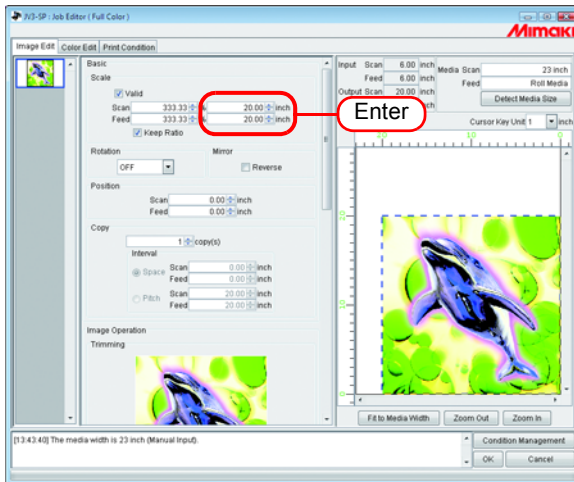
- By checking “Keep Ratio”, and entering one value or the other, it controls the other value to be automatically rectified with the same ratio.
- The unit of size changeable by optional setting. (☞ Reference Guide Common features for every printer P.98)



To Print at Different Ratio in Scan and Feed directions

Deselect “Keep Ratio”.

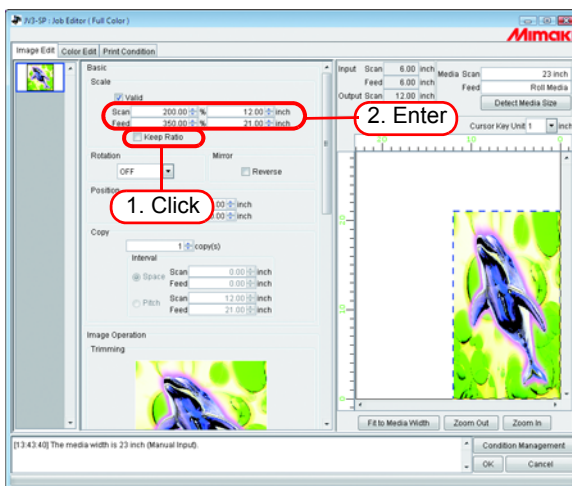
Set scale values in scan and feed directions, respectively by ratio or by value.



Rotating Print Data (Rotation)

Set the rotation angle.

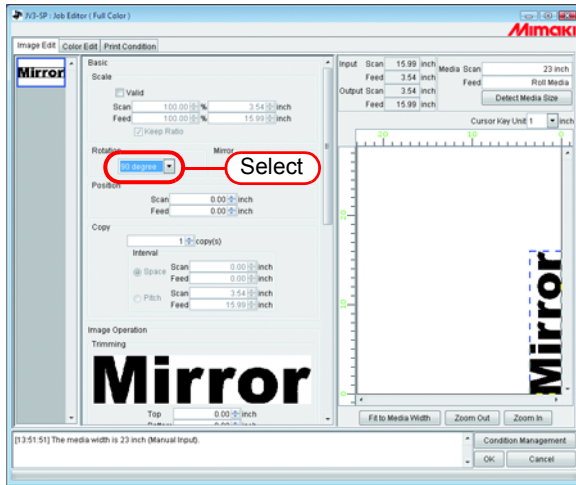
Select Rotation Angle.



The image is also able to rotate by the following procedure.

Select a job to be subjected to rotation, and right-click in the Layout preview area.

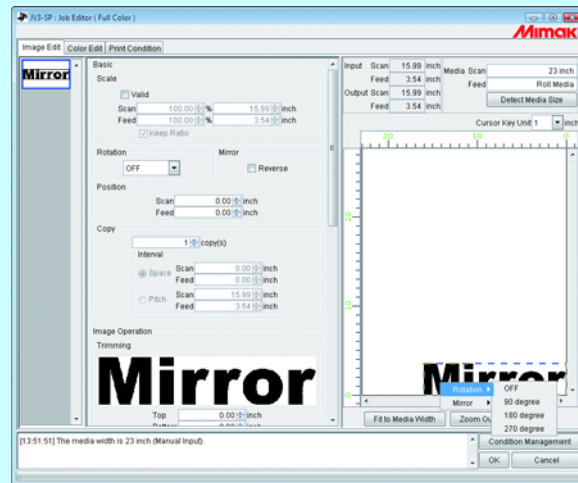Select Rotation angle from the pop-up menu.




Printing a Mirror Image of the Print Data (Mirror)

Print mirror images.

The created image is mirrored only in scan direction.

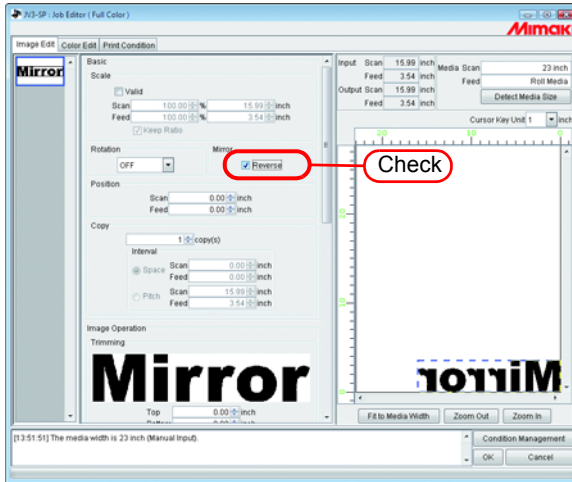
Check “Reverse”.



Mirror processing also able to by the following procedure.

Select a job to be subjected to be mirrored, and right-click in the Layout preview area.

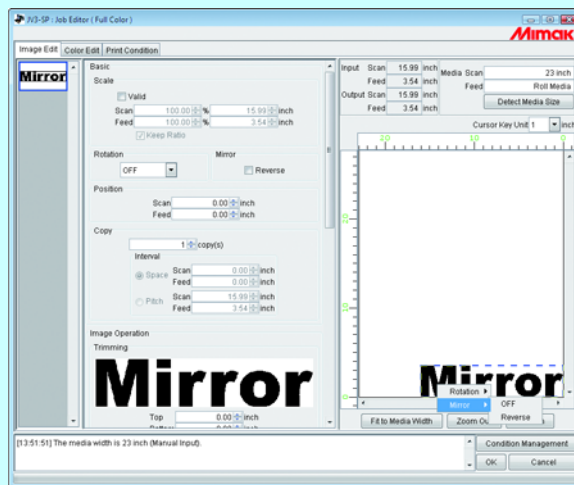Select “Reverse” from the pop-up menu.



To Move an Image to Any Part of Media (Position)


The image can be moved to any part of media and print it.

NOTE!

- If a part of the image is projected from the effective drawing, it cannot be printed.
- When the image is completely projected from the effective drawing, the setting cannot be saved.

Moving an Image by Designating Numeric Values

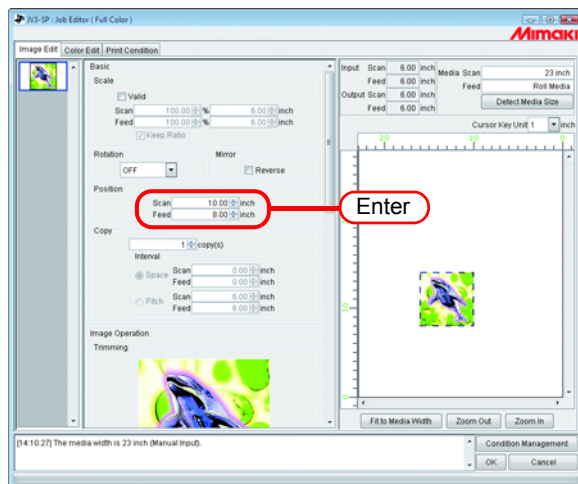Enter the moving amount in “Scan” or “Feed” moves.




Moving an Image by the Mouse

The image is able to drag in the layout preview area and locate it in any desired position.

Click an image in the layout preview to select a job.

The selected image is surrounded by a blue dotted line.

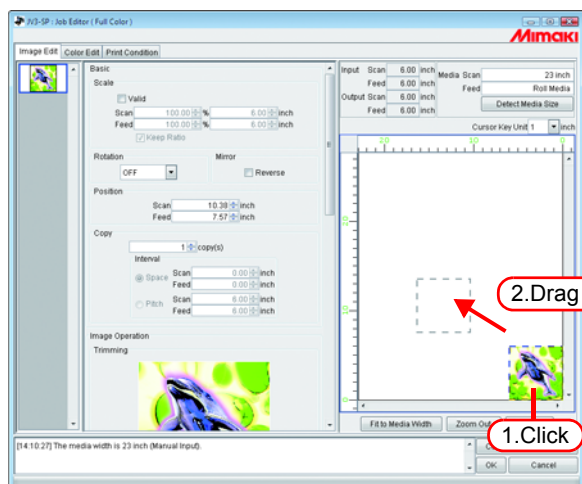
Drag the image to the target position



Moving an Image on the Keyboard

The image can move by pressing an arrow key on the keyboard.

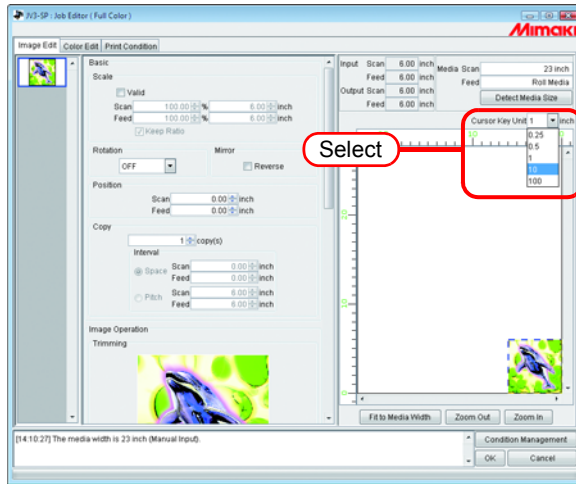- 1 At “Cursor Key Unit”, select the value of a step of the cursor moved by pressing an arrow key on the keyboard.




- 2 Click an image in the layout preview to select a job.

The layout preview is surrounded by a blue rectangle.

Layout previews can also be selected by repeatedly pressing the Tab key on the keyboard.

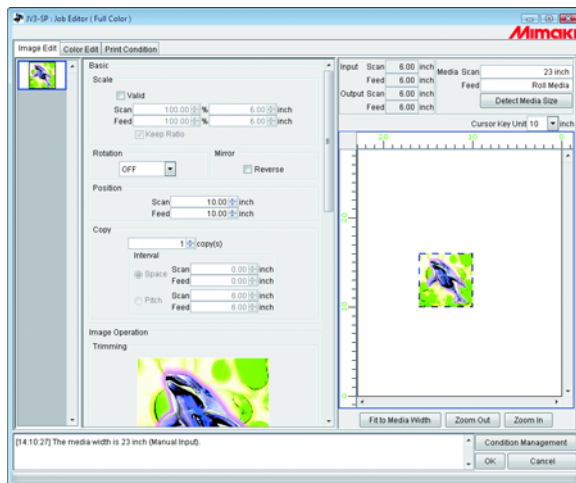With a layout preview selected, press the arrow keys on the keyboard to move the image.



Copying Print Data (Copy)

Print the same image two or more times.

Ordinarily, print data is copied in feed direction.

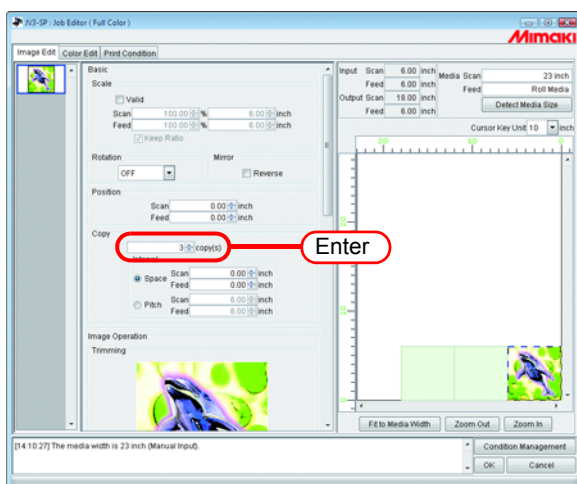
When there is a space that permits printing an image in the scan direction, the image is copied (subjected to nesting) in the scan direction.

By setting value at Interval is enabled, margins are set between images.


NOTE!

When multiple jobs are edited at the same time or when “Paneling” is set, the copy setting cannot be performed.

Enter Copy count.



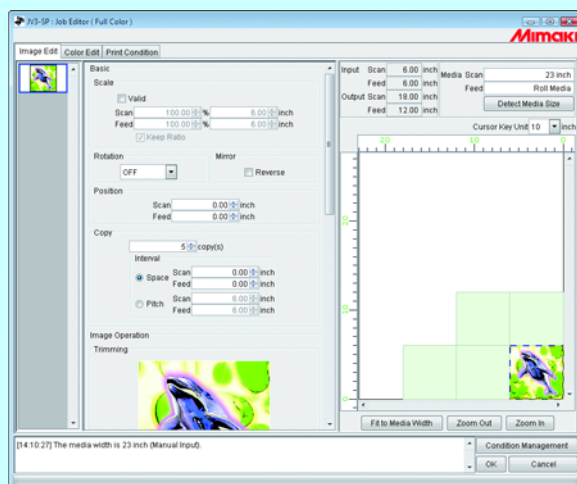The copied images are automatically nested.




NOTE!

The number of nested sheets is determined by the current position setting and valid print width.

Specify the number of copies (CJV30)

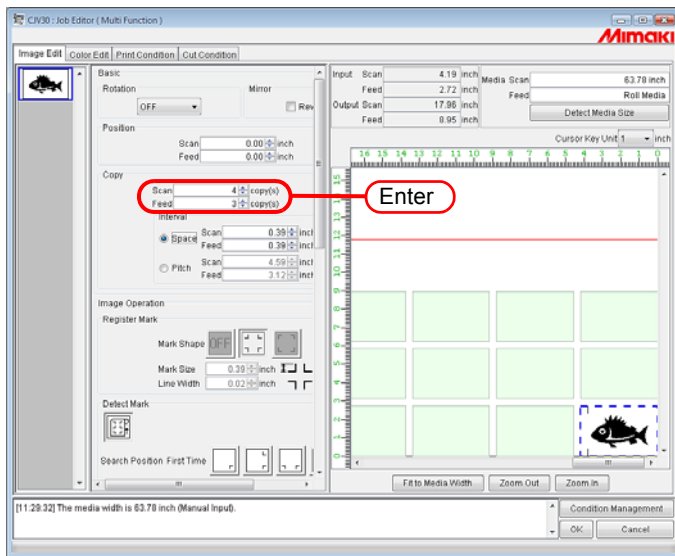For jobs output with RasterLink from FineCut or SimpleStudio, specify the number of copies with the width and number of jobs to send.





Setting Interval

When copies are set and printed, it is difficult to determinate the boundary between consecutive images.

Therefore, set the intervals so that the dividing line can be checked.

Space

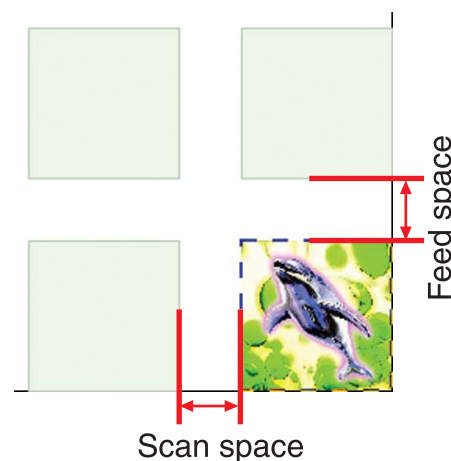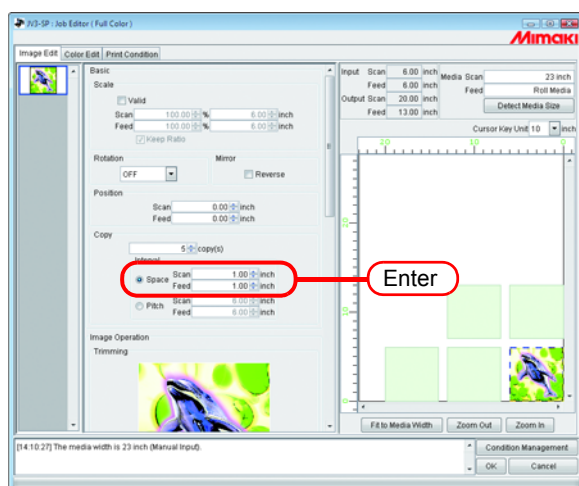Select “Space” and enter the amount of spaces both in scan and feed direction.





NOTE!

Depends on the image, spaces may be added to outside of the images during RIP process.

In that case, the spaces will be inserted even if setting the margin to “0”.

Pitch

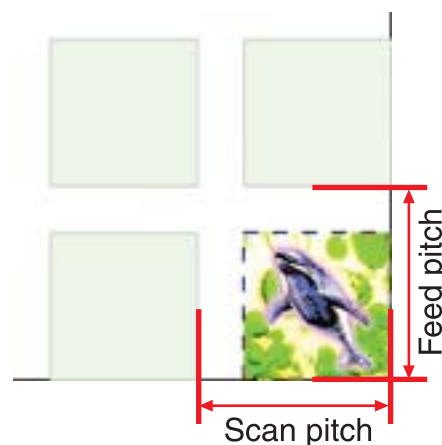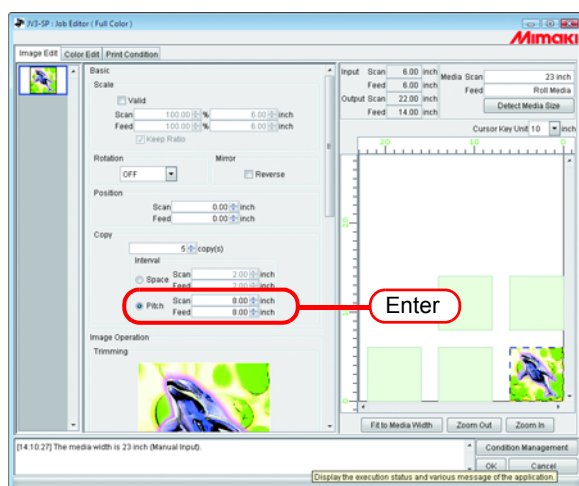Select “Pitch” and enter the amount of pitches both in scan and feed direction.



Trimmed printing (Trimming)

NOTE!

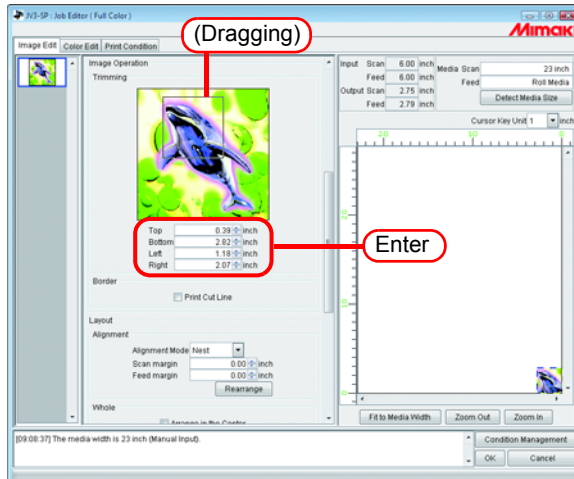
“Trimming” is not displayed for jobs with all of the following conditions.

- Jobs of a multifunctional output
- Jobs of a RasterLink output from FineCut or SimpleStudio
- Jobs with register mark or with function set to "Cut"

Adjusts the scope of printing of the image.

Enter the amount of trimming to “Top”, “Bottom”, “Left”, and “Right” columns.

You may also set the range of the trimming by dragging inside the displayed image.



You may disable the trimming by entering “0” to each trimming amount or by clicking the image in the trimming area.

NOTE!

Scale and rotation are applied to images after trimming. Therefore, even if the scale and rotation settings are changed, the trimming position does not change. Furthermore, the trimming value is shown at the original size before scale is applied.

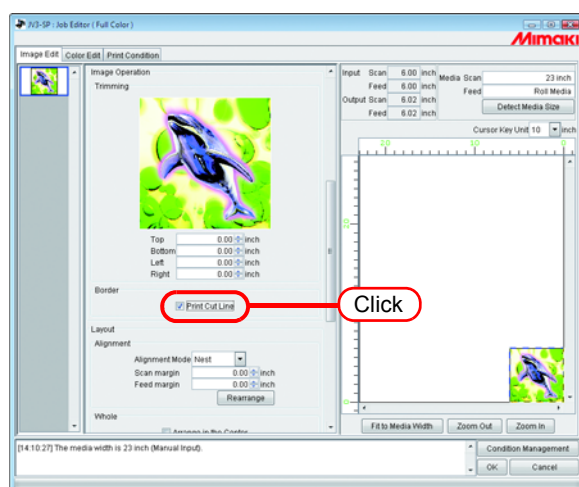
Print Cut Line (Print Cut Line)

Prints the cut lines around the image.

NOTE!

- When “Paneling” is set, the “Print Cut Line” setting is invalid.
- If “Paneling” is set with the “Print Cut Line” check box checked, the check on the “Print Cut Line” check box is cleared.
- “Print Cut Line” is not displayed for jobs with all of the following conditions.
 - * Jobs of a multifunctional output
 - * Jobs of a RasterLink output from FineCut or SimpleStudio
 - * Jobs with register mark
- If “Mark Shape” of “Register Mark” is set to other than “OFF” with “Print Cut Line” selected, “Print Cut Line” will be unchecked.

Check “Print Cut Line”.



If you check “Print Cut Line”, the output size including cut lines is displayed.

Printing Register Marks

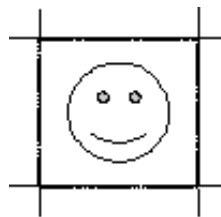
- NOTE!**
- When “Paneling” or “Add Label” is set, the “Register Mark” setting is invalid. If “Paneling” or “Add Label” is set with the “Register Mark” selected, the “Register Mark” will be set to “OFF”.
 - If “Print Cut Line” is selected with the “Mark Shape” of “Register Mark” set to other than “OFF”, “Mark Shape” of “Register Mark” will be set to “OFF”.

Prints register marks for cutting around the images.


The register marks are used by a cutting plotter, for example, for cutting images printed using this system. That is, it is by reading the register marks that the cutting plotter can determine the exact position and size of the images.

The printing specifications for the register marks placed around an image are as follows:


- Line width : 0.3 to 1.0 mm
- Register mark length : 4.0 to 40.0 mm



Bleed mark

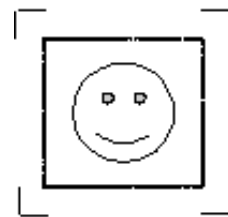


Trim mark

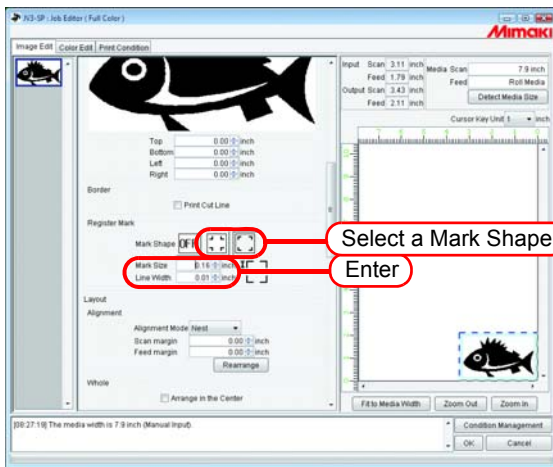

- NOTE!**
- The register marks cannot be edited for print&cut data, print data, and cut data (multifunctional job) created with FineCut or SimpleStudio.

Detect Mark

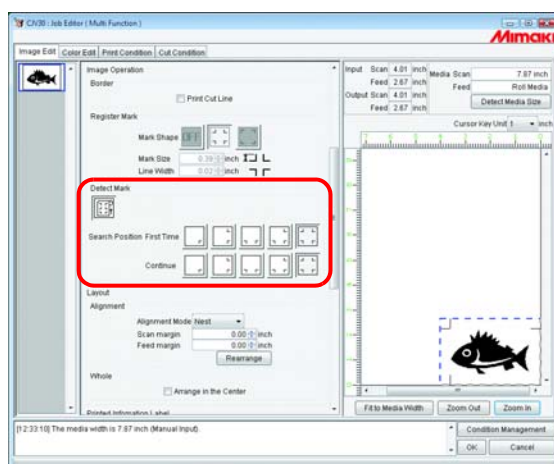Detect Mark will only be displayed when register marks are set on print&cut data and cut data (multifunctional job) using FineCut or SimpleStudio.



Specifies the mark detection mode.

Search Position : Selects the mark pattern to read.

The larger the number of read marks, the higher the accuracy of the cutting position. Different detection patterns can be set for the first and subsequent images to cut.

Arrange the images (when there are multiple images)



- Arrangement and margin settings apply to all jobs.
- When “Job Editor” is opened, the previous settings are applied.
- The order in which thumbnail images are arranged can be set. (☞ P.12)

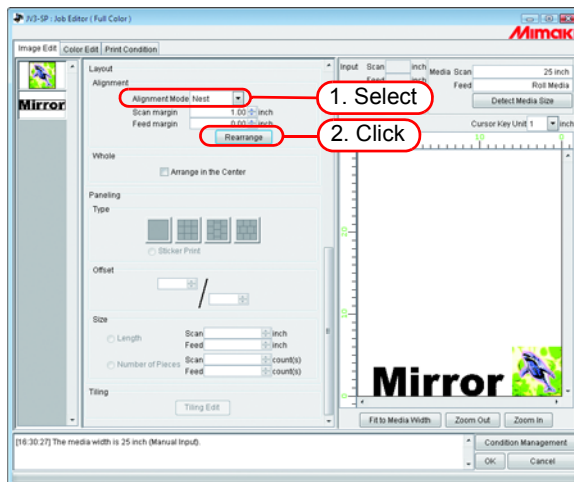
Arrange in the scan direction (nest)

Select “Nest”.

If necessary, enter the amount of margin for scan direction and feed direction.

In the example at left, the scan direction margin is set to 1 inch.

Click **Rearrange**.




Arrange in the feed direction (sequential)

Select “Sequential”.

If necessary, enter the amount of margin for feed direction.

In the example at left, the feed direction margin is set to 3 inch.

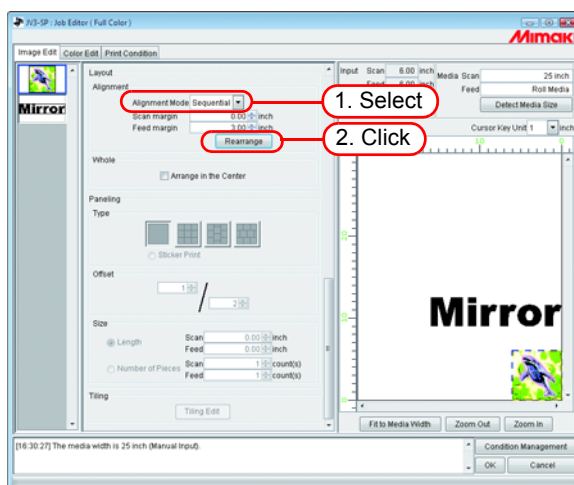Click **Rearrange**.



Arrange the image (when there is one image)

Clicking **Rearrange** positions the image at the origin, irrespective of the arrangement method.

Jobs with the number of copies set cannot be rearranged.


Arrange in the Center

Prints the image arranged in the center of the media widthwise at all times.


Click “Arrange in the Center”.

NOTE!

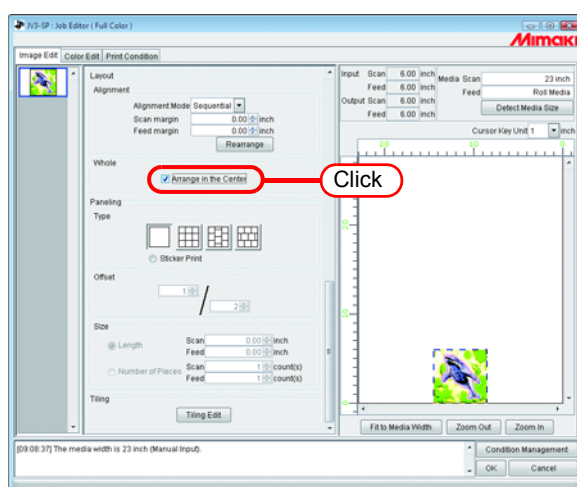When Arrange in the Center is selected, movement in the scan direction is not possible.



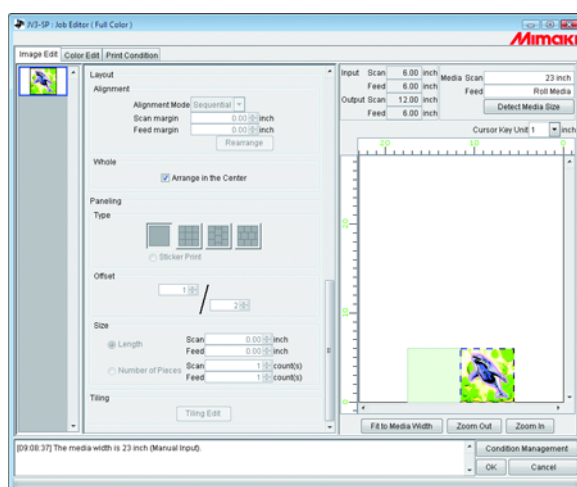- Images are arranged in the center for multiple jobs, copying and paneling.
- When Arrange in the Center is canceled, the scan direction position returns to the original position.




Double sided printing (JV5-320S/JV33-260/JV34-260)

Set for printing on both sides of media.

NOTE!

- The following jobs cannot print on both sides.
Arranged, Copy, Tiling, Paneling, Multi page
- It automatically performs “Arrange in the Center”.
- When you print on both sides, uncheck the box of “Printed Information Label” - “Add Label”. If printed information label is added at printing on the front side, the printed position may be misaligned to the feeding direction by the amount of the printed information label at printing on the back side.

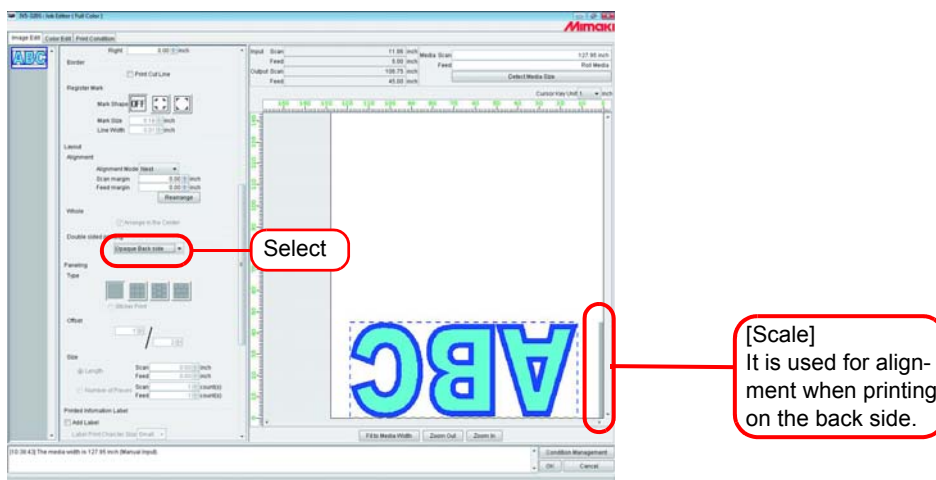To print on both sides, set the printer used. For details, see the operation manual of the printer.



NOTE!

- If an image covers the scale, an error message appears after clicking and the setting is not completed.

OFF:It does not print on both sides.

Front side:Select it for printing on the front side when printing on both sides.
When “Front side” is set, “Single (Front side)” appears on “Group” of “Job List”.



- A scale (30mm wide) is automatically printed on the left edge (the head side) of the media. The scale is used for alignment when printing on the back side. (On the preview screen, a gray line on the right edge of the media indicates the scale.)

Translucent Back side:Select it for printing on the back side of translucent media.

To print the back fitting with the front printed image, it automatically rotates or mirrors the image 180 degrees. (The setting of 180 degrees rotation or mirror cannot be changed)

If you select “Translucent Back side”, select a device profile for translucent back side printing. “Translucent Back side” is added to the media name of the device profile.

When “Translucent Back side” is set, “Single (Translucent Back side)” appears on “Group” of “Job List”.



Opaque Back side:Select it for printing on the back side of opaque media.

It automatically rotates the image 180 degrees. (Rotation setting can be changed)

When “Opaque Back side” is set, “Single (Opaque Back side)” appears on “Group” of “Job List”.




Paneling printing (paneling)


Prints images arranged in four types of pattern.

NOTE!

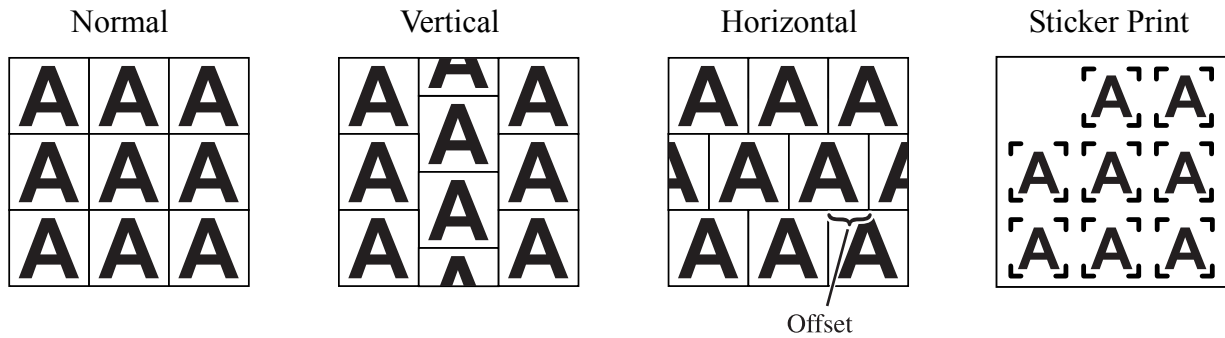
- “Paneling” cannot be set when editing multiple jobs at the same time, and when multipage jobs, color separation jobs, and “Copy” is set.
- When “Paneling” is set, “Immediate Print” is not possible.
- “Paneling” is not displayed for jobs with all of the following conditions.
 - * Jobs of a multifunctional output
 - * Jobs of a RasterLink output from FineCut or SimpleStudio
 - * Jobs with register mark or with function set to “Print&Cut” or “Cut”



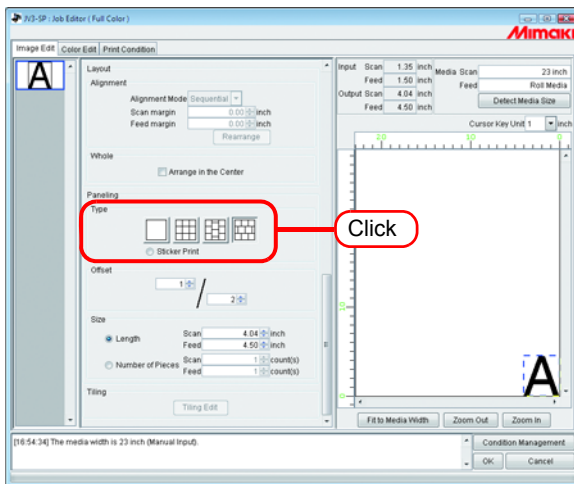- 1 Select the type of paneling.
The paneling function is enabled when any type is selected.



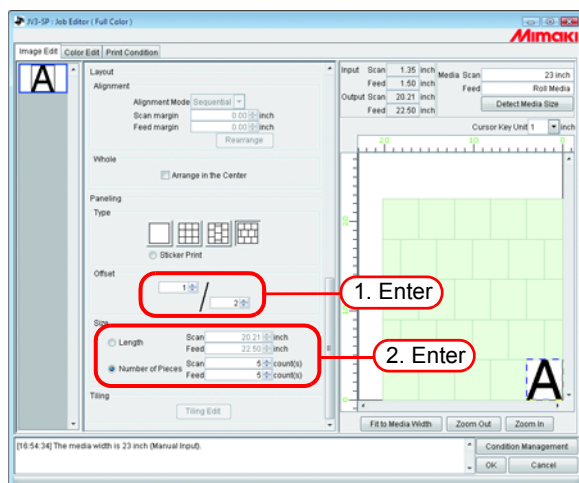2 Specify the amount of “Offset” for arranging the image.



The offset is the amount by which the image is shifted.

NOTE! Offset is enabled when the panelling type is “Vertical” or “Horizontal”.

Specify the repeating length of the image.

- Length
Prints the image repeatedly at the length intervals specified for scan direction and feed direction.
- Number of Pieces
Prints the image repeatedly to the number specified for scan direction and feed direction.

Copy print images for cutting later (Sticker Print)

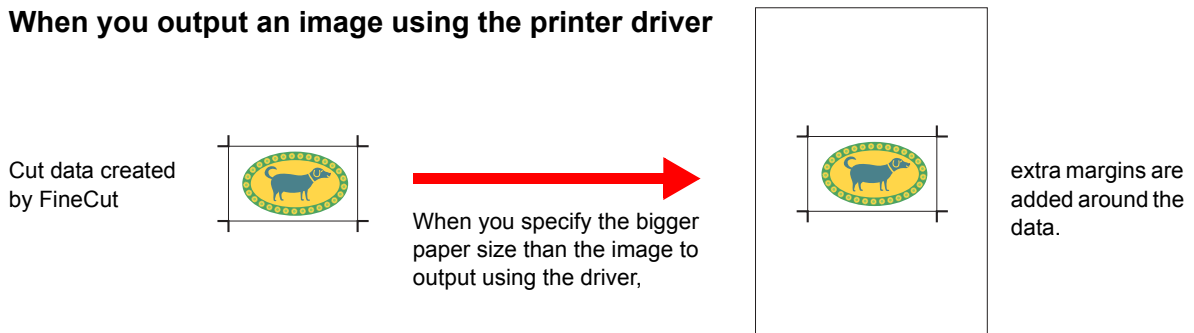
Copy print images for cutting created with FineCut.

With FineCut, it is possible to add register marks around the edge of images for cutting around the borders. When these images are read by RasterLinkPro5 SG, if a printer driver is used, white space may be added outside the register marks. This happens especially when paper larger than the image is set for printing in the printer driver. In this case, if a Interval is set for the copy, since an extra margin is added to the white space around the images, the margin appears bigger than the margin set when the image is printed.


With this function, the margin added outside the register marks is removed, then the specified margin is added between the images for copying to avoid this problem.

Also when cutting the images with a cutting plotter, it is necessary to specify whether the cutting plotter will read the right or left register mark first. The Reference Line indicate which of the right or left register marks to specify in the cutting plotter.

When you output an image using the printer driver



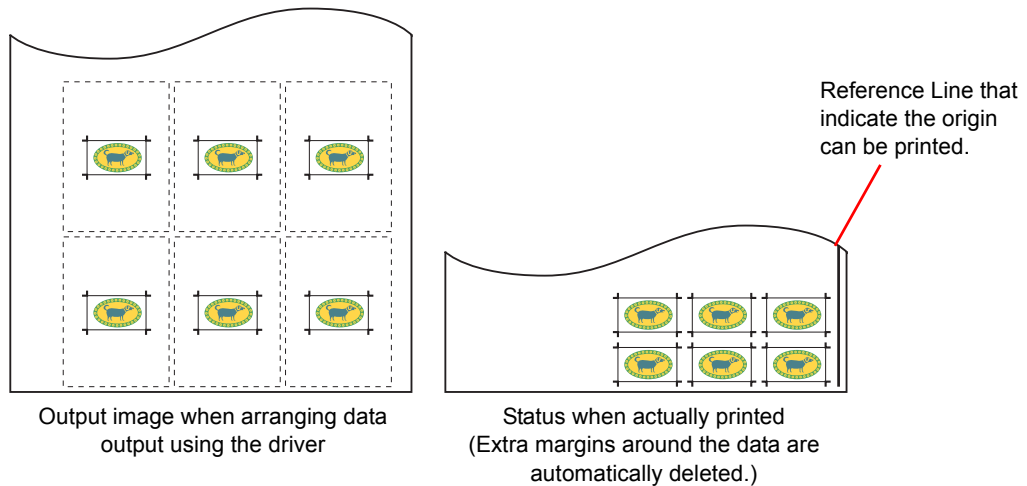
Difference between output image in the preview screen and actually printed image



1 Select "Sticker Print".


The Sticker Print settings are shown.

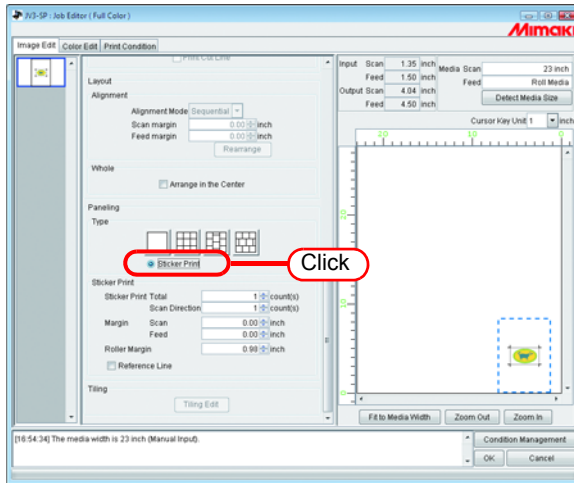NOTE ! When Sticker Print is selected, movement in the scan direction is not possible.



2 Specify the total number of images to copy, and the number of images to print in the scan direction.

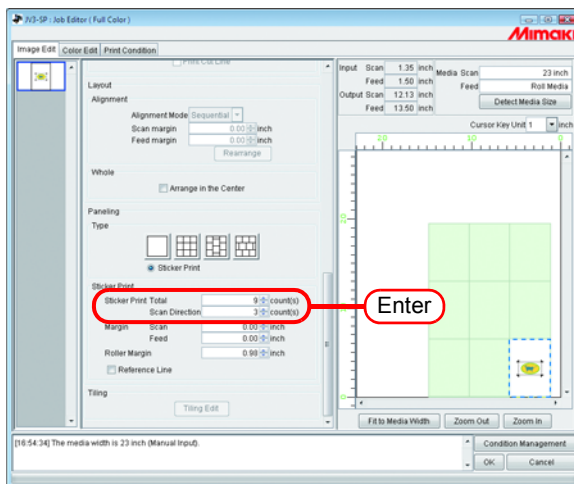- Total
Repeatedly prints the specified number of images.
- Scan Direction
Repeatedly prints the number of images specified in the scan direction.




Specify below:
Total : 9
Scan Direction : 3

NOTE ! The output size and the layout preview are displayed based on the state with blank.

- 3** Specify the amount of margin for the scan direction and feed direction.
Set the right margin value in “Roller Margin” For the margin value, see the cutting plotter’s manual.

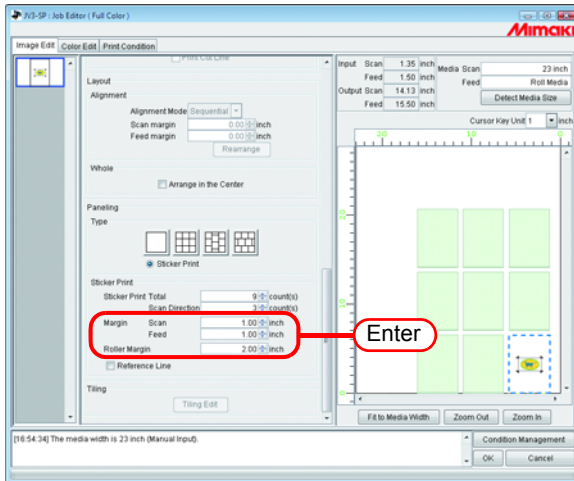NOTE! Set the space between register marks wider than the length of a register mark. If the gap is too narrow, errors may occur when the cutting plotter reads the register marks.



Specify below:
Margin(Scan) : 1inch
Margin (Feed) : 1inch
Roller Margin : 2inch

- 4** To print register marks that indicate the origin, check “Reference Line”.

NOTE! Check “Reference Line” when using a cutting plotter after printing.

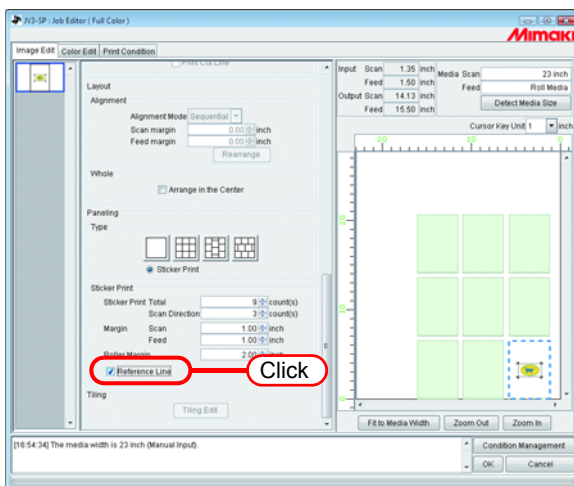
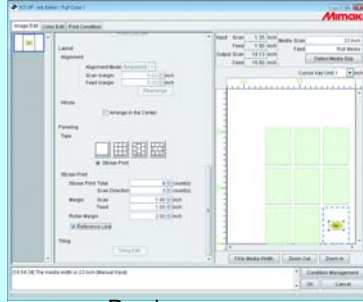


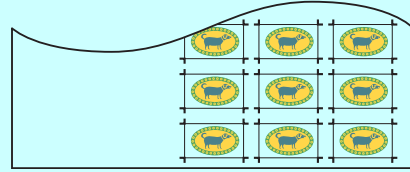


Image arrangement in preview screen and when actually printed

For sticker print, the image arrangement in the preview screen on the job editor differs from that is when actually printed. When printing, extra margins on the job editor are automatically deleted.



Preview screen



When printing

Print Information Label Printing

Print information label will be added at top left of a job when printing.

NOTE!

- If “Paneling” is set, print information label cannot be set.
If “Paneling” is set while “Add label” is checked, check on “Add label” will be cancelled.
- If the length in the scan direction is 1 inch (25.4 mm) or less, print information label cannot be added to the printout. If the length in the scan direction is short, print information label may not be printed completely.

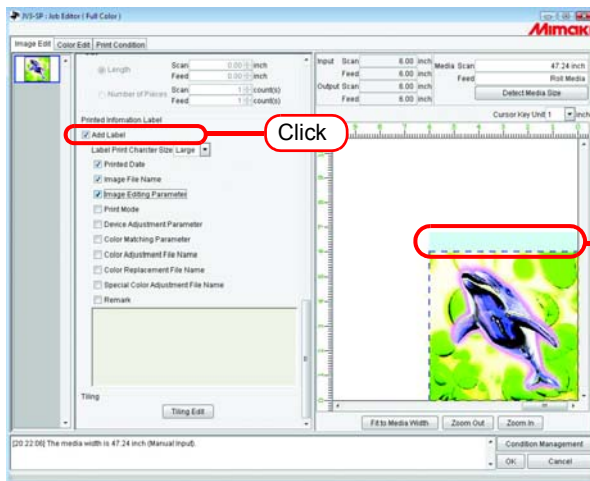
Check “Add label”.

Check items to be printed as label.

Up to 64 arbitrary characters can be entered in the “Remark”



When “Add label” is checked, output size will include print information label.




Rectangle of print information label is displayed.

Tiling Edit


RasterLinkPro5 SG can print a larger image than the media that is set in printer by taking it apart. To make the whole image, put together tiles manually.

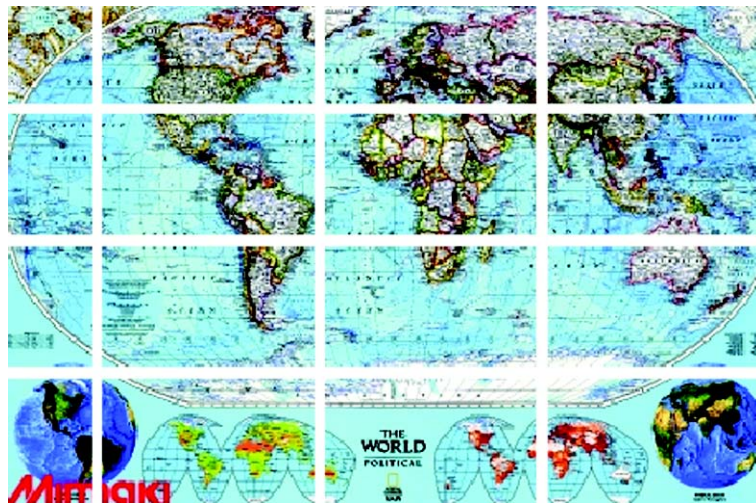Besides many kinds of settings are executed so that the tiles can be put together easily.



Flow of the Tiled Printing

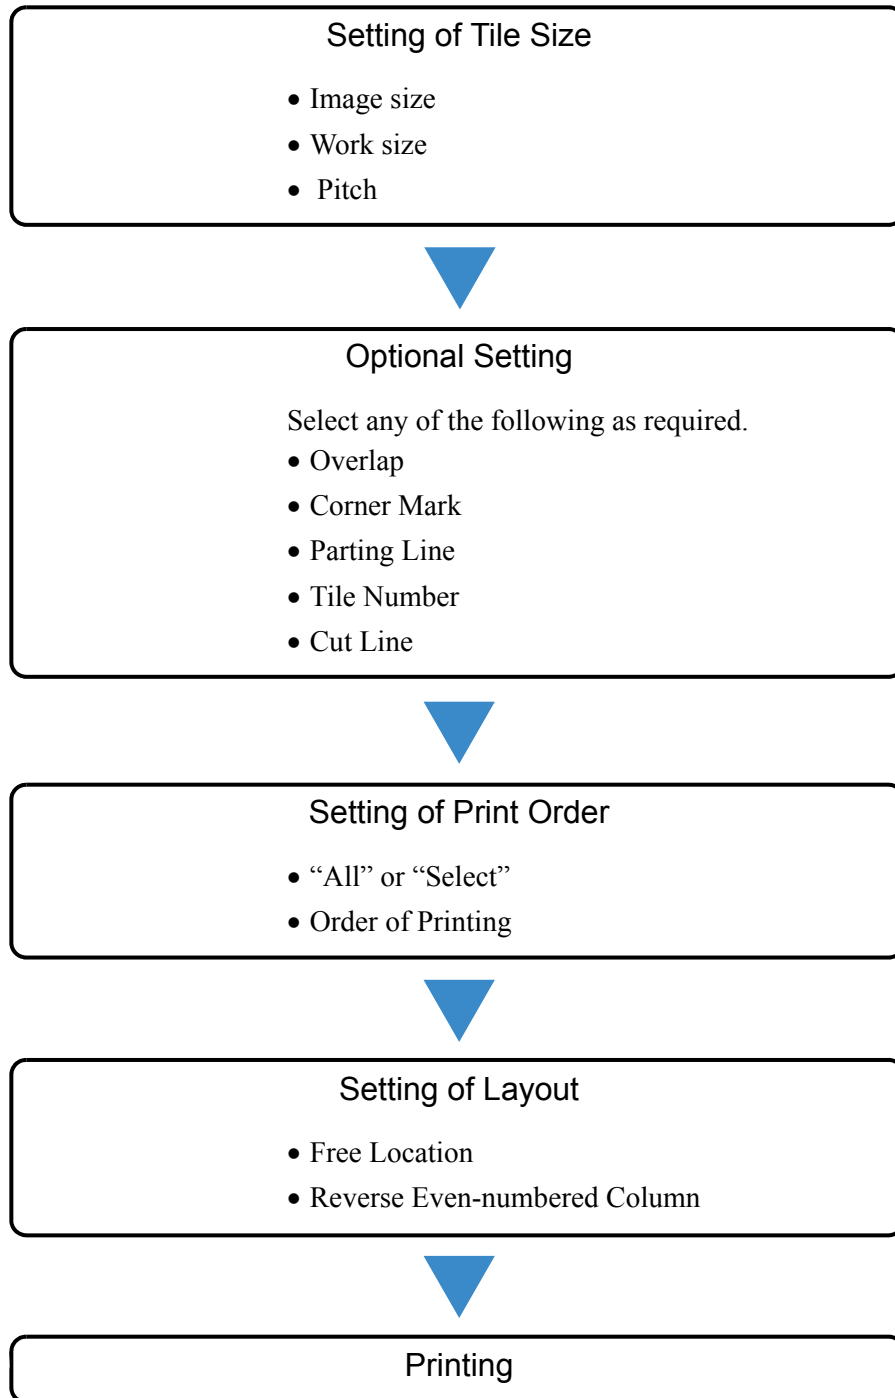The procedures of tiling are as follows:



Tiling Setup Window

The screenshot shows the 'Mimaki Printer: Job Editor (Full Color)' window with the 'Tiling Edit' tab selected. The interface includes a 'Tiling Setup' panel on the left and a 'Tiling Preview' window on the right. The 'Tiling Setup' panel contains sections for 'Work', 'Pitch', 'Individual Designation', 'Overlap', 'Corner Mark', 'Option', and 'Print Order'. The 'Tiling Preview' window shows a map image being tiled, with a scale bar and a 'Detect Media Size' button. Callouts provide detailed instructions for each part of the interface.

Callouts:

- Indicates the approximate length of output when the output is made under the current set values.
- Displays the approximate spaces to be inserted between the tiles in the feed direction.
- Indicates the width of the media detected automatically or entered manually.
- Reads the media size from the printer.
- Set the transfer unit to fine adjust the dividing line using arrow keys of the keyboard. (P.52)
- Tiling Preview. (P.42)
- Return to Image Edit window.
- Clear all the settings of tiling. Clear layout setting, too.
- Set the printing order of tiles. (P.62)
- Set the printing options of tiles. (P.59)
- Print the mark and line where to put together. (P.57)
- Set the Overlap. (P.55)
- Set the Pitch of the tile. (P.47)
- Set the size and position of the work. (P.45)
- Dragging with the mouse can change the size of each tile. (P.49)
- On the tiling preview window, set the tiles to be printed and the order of their output. (P.62)

Tiling Preview

The image shows a software interface for tiling a world map. The map is displayed in a grid format, with a pitch value of 30 indicated on the left. The map is divided into four quadrants by a central vertical and horizontal line. The interface includes a top toolbar with various icons, a left sidebar with a pitch control, and a bottom toolbar with a work frame control. The map itself is a world map with a grid overlay, and the text 'Mitsuki' is visible in the bottom left corner of the map area.

Pitch
The currently selected Pitch is indicated with its value framed.

Dividing mark
Dividing mark can be moved with the mouse.
▽ mark indicates the currently selected dividing lines.

Display the border of work.

The dividing line to indicate the position where the image is divided.

Work frame
By dragging within the work, the position of the work may be moved.

Layout Setting Window

Arranges the tiles freely. (☞ P.65)

The tiles on the even numbered lines are printed being rotated 180 degrees.

Layout Preview window

Sets the arranging method of the tiles and the space between the tiles. (☞ P.66)

Arranges the entire tiles to the center of the media. (☞ P.67)

Arrange each tile to any position of the media. (☞ P.69)

Sets the display magnification of the printed image so that the indicated width of the layout preview becomes equal to the media width.

Downsizes the printed image.

Enlarges the printed image.

Layout Preview

When the Cut Line is set, it is indicated with black dash line around the tile.

When the Corner Mark or Tile Number is set, it is indicated with light blue frame.

When the Parting Line is set, it is indicated with black dotted line on the boarder between the tile and Overlap.

The number of printing order is indicated on each tile of preview image. This is actually not printed.

Media cut position
When "Cut Media after Print" in "Print Condition" (☞ P.150) is selected, the media is cut after each tile is printed. This is not shown in the layout preview.

Leading Margin (☞ P.149)

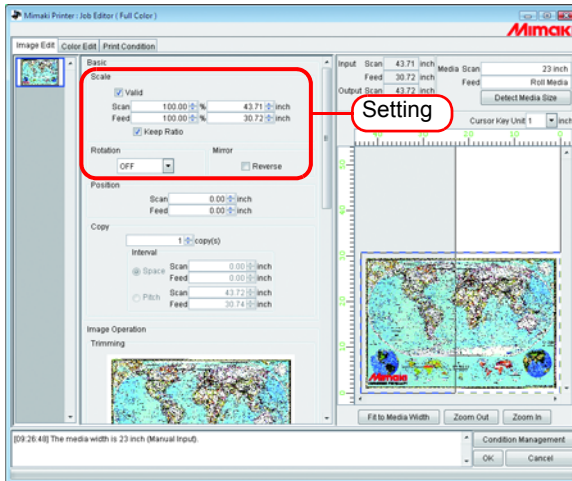
Trailing Margin (☞ P.149)

Editing Images before Setting Tiles

Before setting tiles, change the image size and set Rotation and Mirror.

If the editing of image is not required, proceed to Step 3.

- 1 Open the “Job Editor”.
- 2 Perform various settings:
Set “Scale”, “Rotation” and “Mirror.”




- 3 When the settings of the image to be tiled is completed, click .

NOTE!

- Tiling cannot be set when editing multiple jobs at the same time, and when multipage jobs, color separation jobs, “Copy”, “Trimming”, and “Paneling” is set.
- “Tiling” is not displayed for jobs with all of the following conditions.
 - * Jobs of a multifunctional output
 - * Jobs of a RasterLink output from FineCut or SimpleStudio
 - * Jobs with register mark or with function set to “Print&Cut” or “Cut”

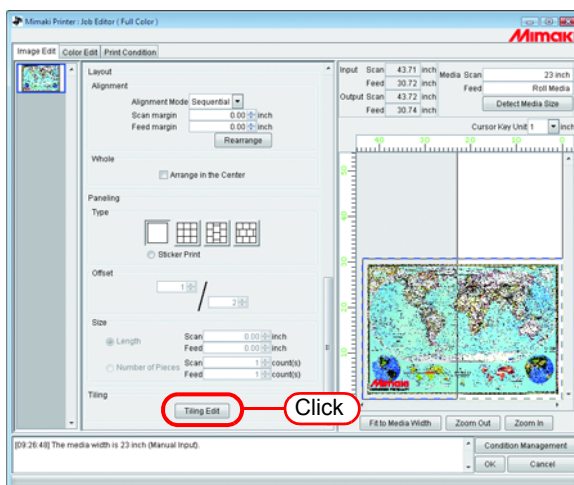If to change “Scale”, “Rotation” and “Mirror” setting, click in the Tiling Edit Tab.



Setting the Work

Set which portion of the image is printed.

Setting Work Size


The working area of tiling is called “Work”.

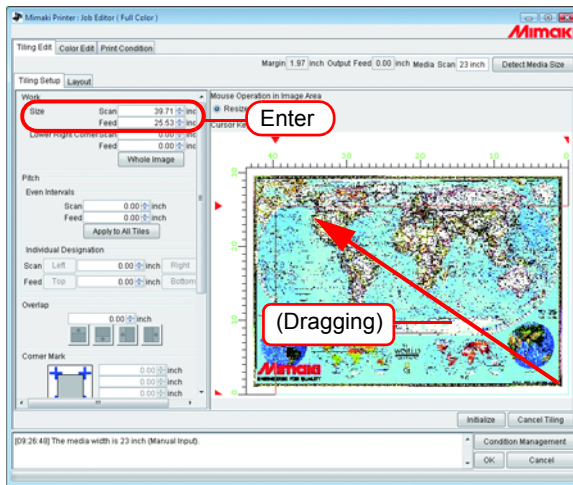
If the Work is not set, the setting of the tiling cannot be performed.

Enter the “Size” (Scan and Feed) of the Work.


The Work is shown with red rectangle on the tiling preview.



- The work size can be set also by dragging from lower right of tiling preview area.
-  mark indicates the boarder of the Work. By dragging the four corners, you may change the size of the Work.



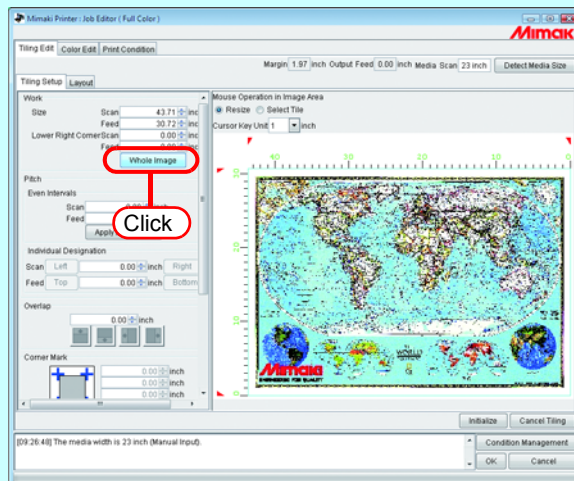If you click **Whole Image**, the Work is set to the whole image.




Moving the Work

Move the work to the area you want to print.

Enter the “Lower Right Corner” (Scan, Feed).



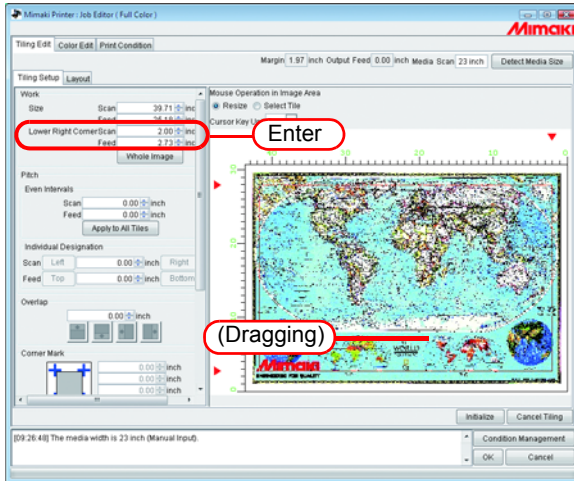The frame can be also moved by dragging inside the frame.



Dividing the Tiles

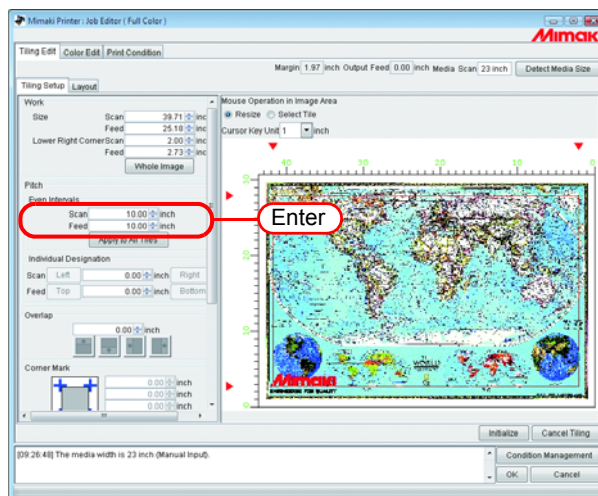
NOTE!

- The minimum size of a tile is 1 inch (25.4mm). If you enter a value smaller than this, it is automatically changed to 1 inch.
- The maximum number of tiles that can be printed is 100.
- The maximum number of divided tiles is scan direction 30 and feed direction 30. Tiles cannot be divided to exceed these numbers.

Dividing the Tiles at Even Interval

If you want to make fine adjustment, after setting the basic Pitch use “Even Intervals” for setting.

- 1 Enter the basic values of the Pitch to “Scan” and “Feed” of “Even Intervals”.




- 2 Click **Apply to All Tiles**.


The division line is displayed on the tiling preview screen.



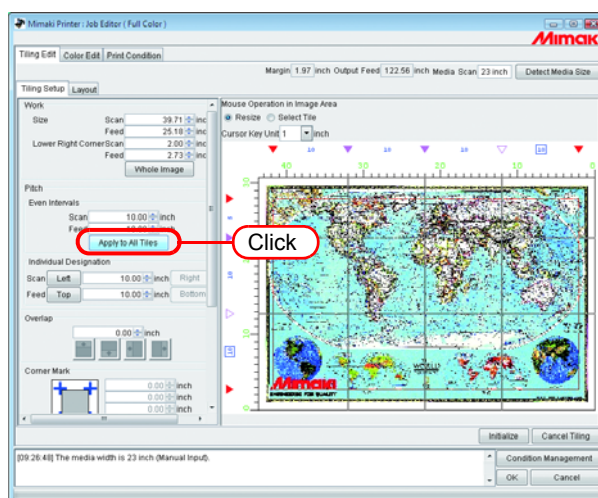If you enter 0 to “Scan” and “Feed” and then click **Apply to All Tiles**, they will become the maximum value that can be entered (media size or work size, whichever is smaller).



NOTE!

- When the division is made with Even Intervals, the dividing interval of the extreme upper left tile could become less than 1 inch. In this case, even if you click , an error message is shown and the setting cannot be completed.
- When the tile in question is not clear on the tiling preview, click , , , of “Individual Designation” to indicate the Pitch and confirm. Then, perform the adjustment using “Adjusting the Pitch of the Tile” ( P.51) as a reference.

Designating the Tile Intervals individually

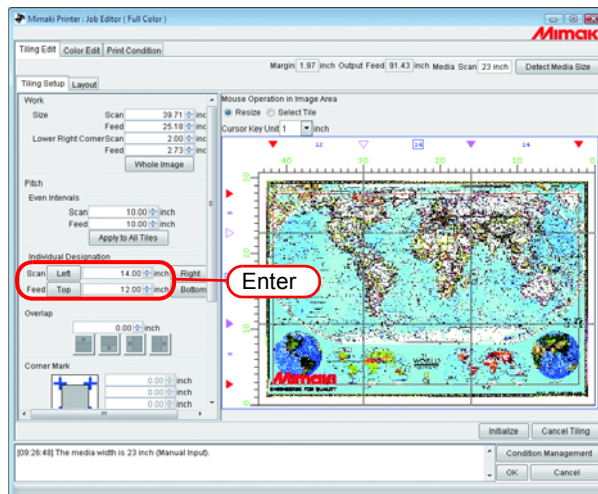
When you want to enter the Pitch directly, set with Individual Designation.

1 Enter the values to “Scan” and “Feed” of “Individual Designation”.

The division intervals of the right end and bottom end are set and the division lines are shown on the tiling preview.



- The initial value of the remaining dividing interval, after the value is entered, will become the size of the media.
- If “Feed” is not entered and “Scan” is entered, the maximum value that can be entered (media size or work size, whichever is smaller) will be automatically entered as the initial value for “Feed”.
- If “Scan” is not entered and “Feed” is entered, the maximum value that can be entered (media size or work size, whichever is smaller) will be automatically entered as the initial value for “Scan”.



2 Click (setting of the scan direction) or (setting of the feed direction), and enter the next Pitch.

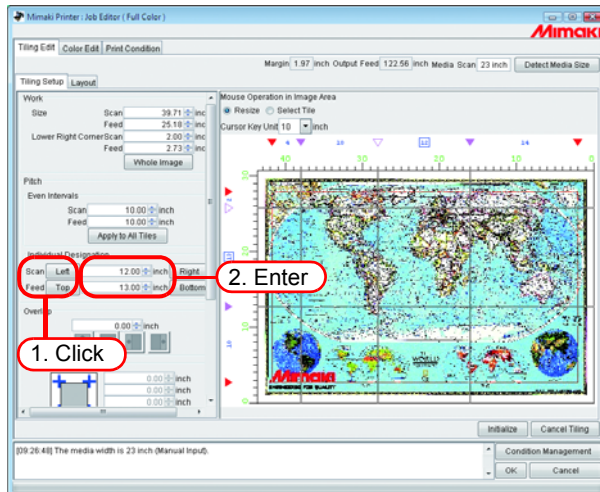
The division line is displayed on the tiling preview.



In the case of “Individual Designation”, the respective tile interval can be entered continuously.

If you enter “Scan” to the dividing interval of the extreme right and press **ENTER** key, the focus moves to **Left** button. If you press **ENTER** key again, the focus moves to numerical figure entering area. Enter the neighboring division interval.


The same applies to “Feed”.



Adjusting the Pitch of the Tile

Adjust the Pitch. When the adjustment is not required, proceed to “Setting the Options of Tiles (☞ P.55)”.

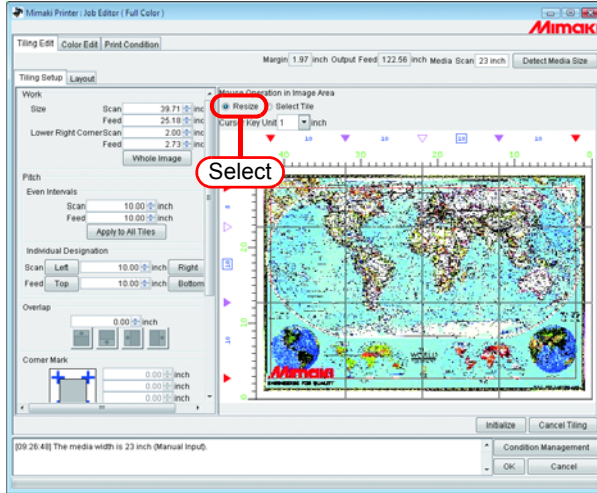
- 1 Select “Resize” of “Mouse Operation in Image Area”.



- 2 Click the division mark ▼ you want to adjust and drag it. When the division mark is clicked for selection, it is reversed to white. Adjustment can also be made by entering figures to “Scan” and “Feed” of “Individual Designation”.



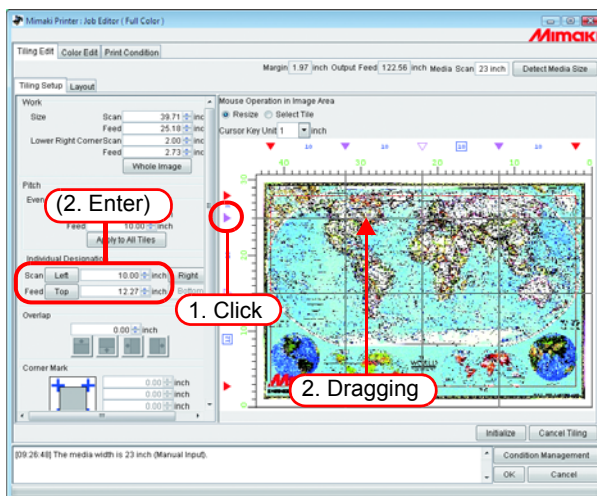- The minimum value for a tile is 1 inch. Even if the figure less than the minimum value is entered, it will automatically be changed to 1 inch.
- The maximum value that can be adjusted is either media size or work size, whichever is smaller. If the figure exceeding the maximum value is entered, it will automatically be changed to the maximum value.
- The division line other than that is to be changed will move together keeping the original Pitch.



Fine adjustment to the location of the dividing line using a keyboard

The location of the dividing line is adjusted to some extent by using a mouse.

Fine adjustment is available by using a keyboard.

Use following keys.

- **Tab** key : Select each setting item of the tiling window.
When the tiling preview area is selected, the area is framed in a blue rectangle.

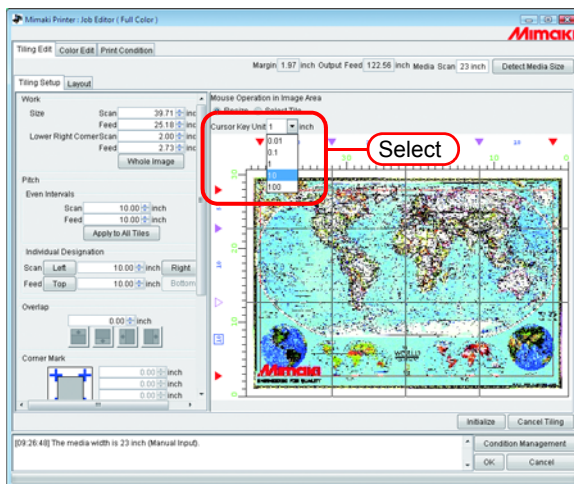
Move dividing lines in feed direction.

- **Q** key : Select dividing lines above the currently selected line.
- **A** key : Select dividing lines beneath the currently selected line.
- **↑** key : Move the selected dividing line upward.
- **↓** key : Move the selected dividing line downward.


To move dividing lines in scan direction

- **Z** key : Select dividing lines on the left hand side of the currently selected line.
- **X** key : Select dividing lines on the right hand side of the currently selected line.
- **←** key : Move the selected dividing line leftward.
- **→** key : Move the selected dividing line rightward.


1 Select “Cursor key unit”.



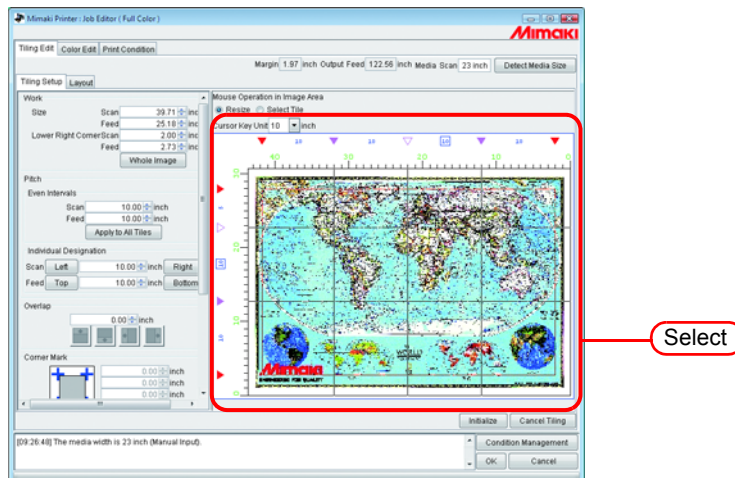
- 2** Push key a few times and select the tiling preview area.
Clicking the tiling area by a mouse is also available.
Tiling preview area is framed in a blue rectangle.



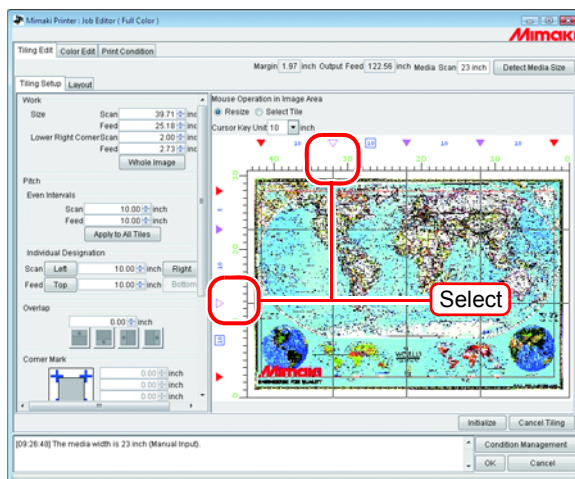- 3** Select the dividing line that you want to move by pushing alphabet keys key, key, key, key.
The dividing mark of the selected line changes into an open triangle.



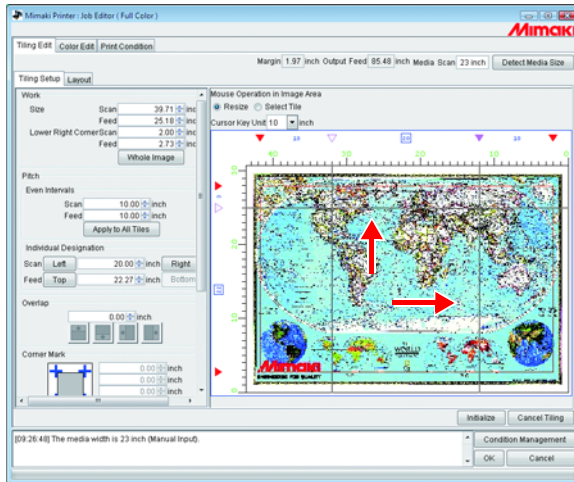- 4 Move the dividing line by pushing an arrow keys \uparrow key, \downarrow key, \leftarrow key, \rightarrow key. The line moves the size has been set by “Cursor key unit” per push. The line keeps moving by keeping pushing the key.



Setting the Options of the Tiles

The effective functions when tiles are pasted together can be set using Option.

When this option is not specifically required, you may proceed to “Setting the Printing Order of Tiles (☞ P.62)”.

Setting the Overlap of Tiles

Set the overlap length and position on tile.

Print an image on the part of overlapping.

The overlap can be set in any direction such as top or bottom, and right or left.

However, the Overlap cannot be printed to the tiles at the corners and at the end.

The Overlap is not displayed on “Tiling preview” window.

The “Layout Preview” shows an image of the overlap part.

Tile at the Corner



As the position of the tile is at the right-bottom corner, the Overlap is not set to the right and bottom.

Tile in the Bottom End



As the position of the tile is in the bottom end, the Overlap is not set to the bottom.

Tile in the Center



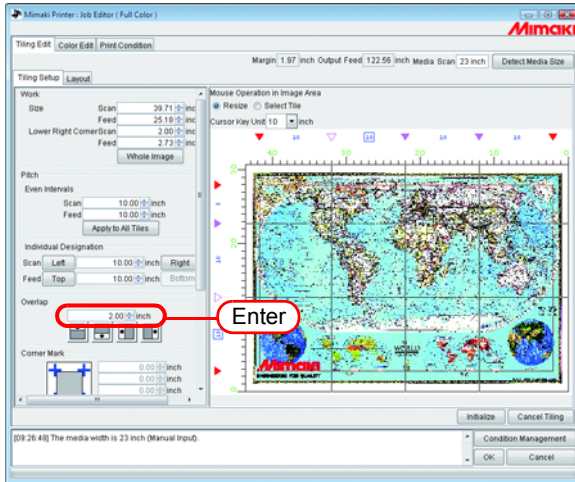
As the position of the tile is in the center, the Overlap is set to all sides.

NOTE!

- The maximum value of the Overlap is 3.94inch (100mm), and the minimum value is 0.2inch (5mm).
- When the total of Pitch and Overlap exceeds the media size, Pitch and Overlap will be adjusted automatically so that the image be contained in the media size. In this case, even if Cut Line and Corner Mark are set, they might be printed only partially.

1 Enter the length of the Overlap.

When the length of the Overlap is entered, the items to set the position of the Overlap will be activated.




2 Select the setting position of the Overlap.

If you click again, the selection is cleared.

NOTE!

When there exist tiles that are smaller than the length of the Overlap, even if you click , an error message is shown and the setting cannot be completed.

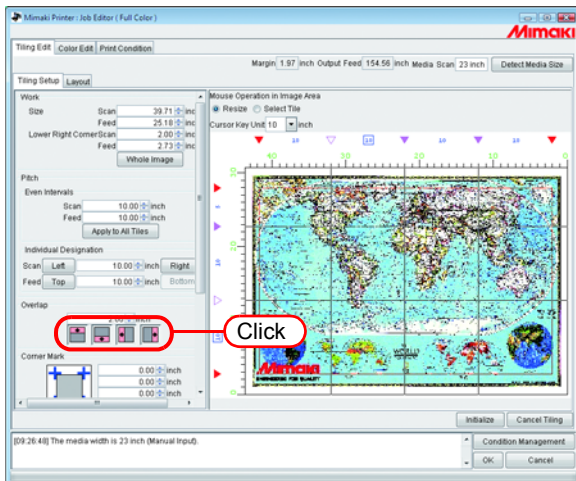Confirm the Pitch of the Top and the Left. Make the size of the Overlap smaller than the size of the tile or adjust the pitch of the tiles.




Print mark on the overlap (Corner Mark)

Print marks to make tiles easier to put together.

When the overlaps are not set, it is not allowed to attach the corner mark. Return to “Setting the Overlap of Tiles (☞ P.55)” and set the Overlap.


The corner marks will not be displayed on the “Tiling Preview” window.

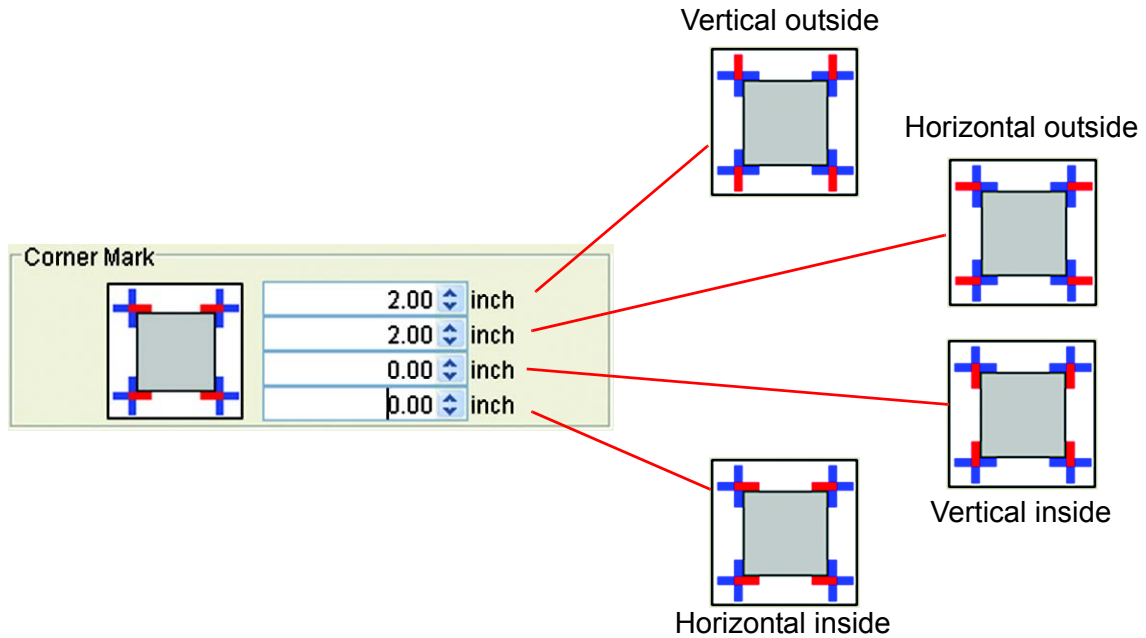They are indicated on the “Layout Preview” with light blue frame.



Enter the length of the Corner Mark into the entering boxes.

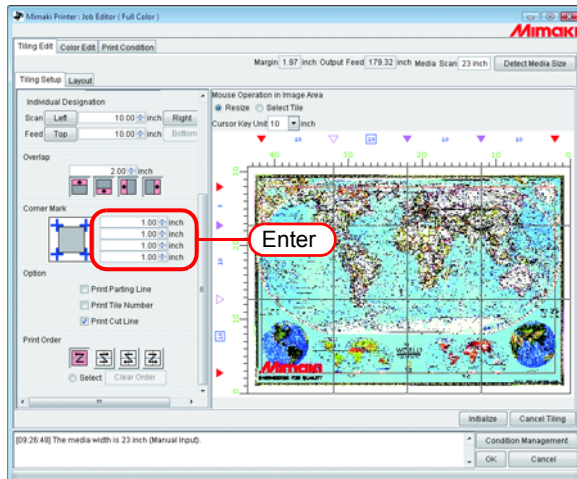The maximum value is 3.94inch (100mm).





If you place the cursor on the numerical figure-entering box, the corresponding mark portion turns red. It is not displayed on the "Tiling Preview".



When the corner marks are set to all 4 corners

Printing the Parting Line of the Images (Print Parting Line)

Along the border of the tiles and the Overlap, white and black lines with 0.004inch (0.1mm) width and with 1.9inch (50 mm) length will be drawn alternately.

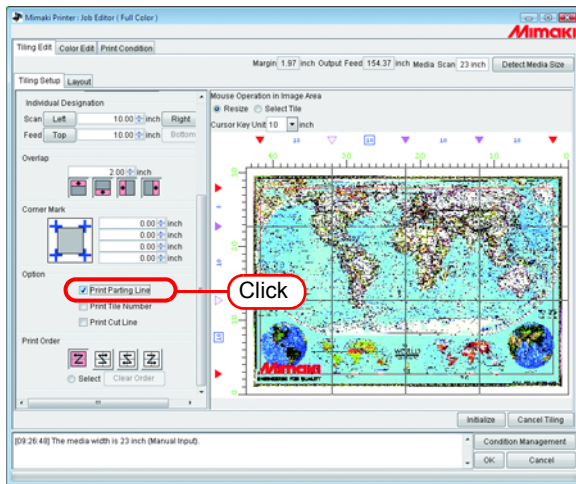
The Parting Line is not displayed on the “Tiling Preview” window.

The “Layout Preview” is shown with a black dotted line.

NOTE! When the Overlap is not set, it is not allowed to enter the Parting Line.



Check the “Print Parting Line”.



Print the tile number on each tile (Print Tile Number)

In order to indicate where the tile drawn corresponds in the image, the tile number is printed at the bottom left of each tile. (when the Overlap exists, outside of the Overlap)

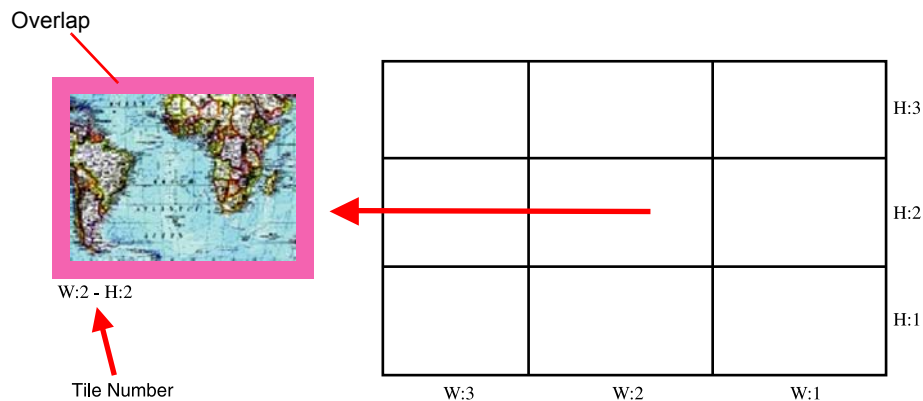
When reversing the even-number lines is set, the position of the tile number is also reversed.

“Tile number” will not be displayed on the “Tiling Preview” window.


On the “Layout Preview”, it is displayed with light blue frame.

The size of the tile number is 0.6inch (15mm) high, and the width is 2.7inch (67.5mm) max.

NOTE! The “Tile Number” is different from the figures indicated on Tiling Preview when “Print Order” is activated.



Check the “Print Tile Number”.

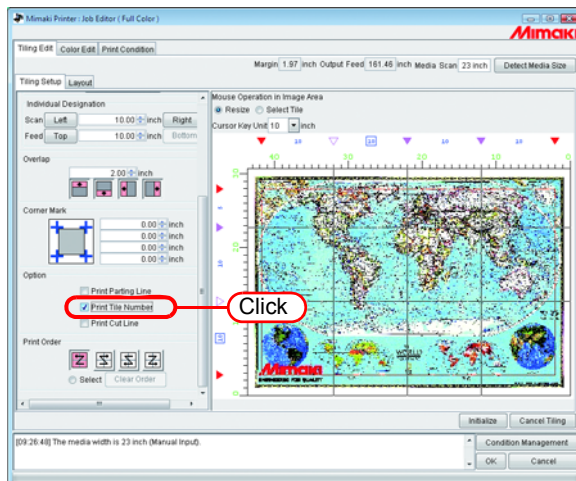

Printing Cut Line of the Tile (Print Cut Line)

Print the 3.9inch (100mm) interval black dashed lines that are used as reference when the printed media is cut into individual tiles.

The cut lines are printed around the tiles including the Overlap.

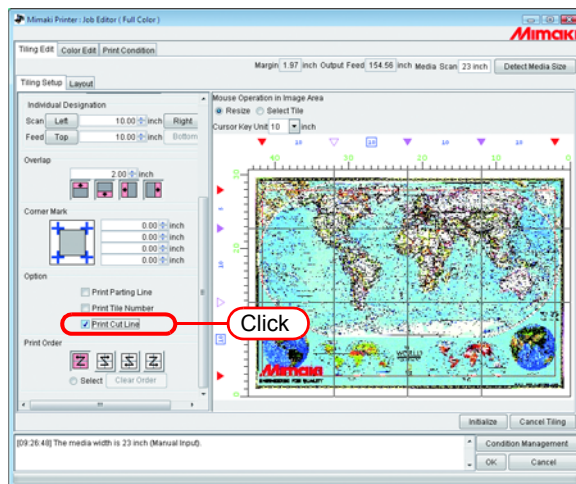
“Print Cut Line” is not displayed on the “Tiling Preview” window.

The “Layout Preview” is shown with a black dotted line.

When the “Print Cut Line” of Job Editing is checked, a check mark has already been placed in it.



Check the “Print Cut Line”.



Setting the Printing Order of Tiles

Printing the tiles sequentially

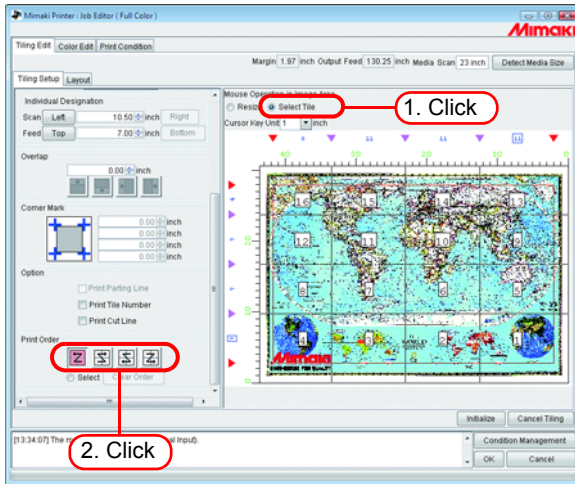
Designate the order of printing tiles.

When you want to decide the order of printing freely, or when you want to print the designated tile only, refer to “Designating the Tiles to be Printed Freely (P.63)”.

Click “Select Tile”.

The order number of printing of tiles is indicated on the “Tiling Preview”.

Select any one of the following printing orders and click it.



: Printing is made sequentially starting from No.1 to No. 16 at the left example.



: Printing is made sequentially starting from No.4 to No.13 at the left example.



: Printing is made sequentially starting from No.13 to No. 4 at the left example.



: Printing is made sequentially starting from No.16 to No. 1 at the left example.

Designating the Tiles to be Printed Freely

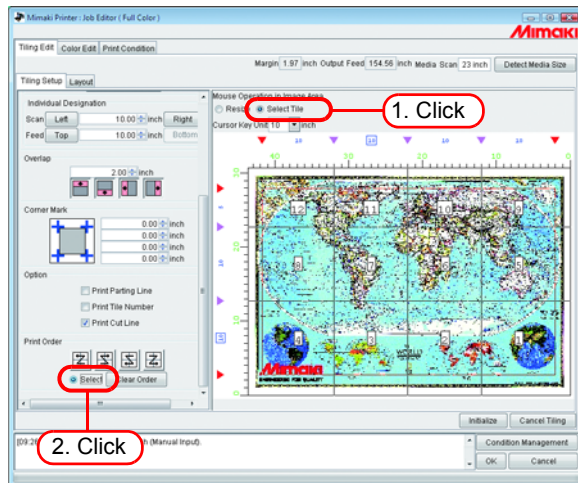
Set this when you want to decide the order of printing tiles freely, or when you want to print only the designated tiles.

1 Click “Select Tile”.

The order number of printing of tiles is indicated on the “Tiling Preview”.


Select “Select” of “Print Order”.

button becomes active.




2 Click .

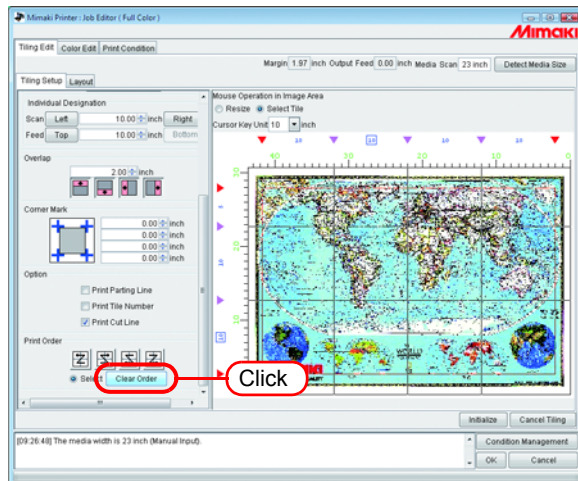The order number of printing are disappear in “Tiling Preview”.



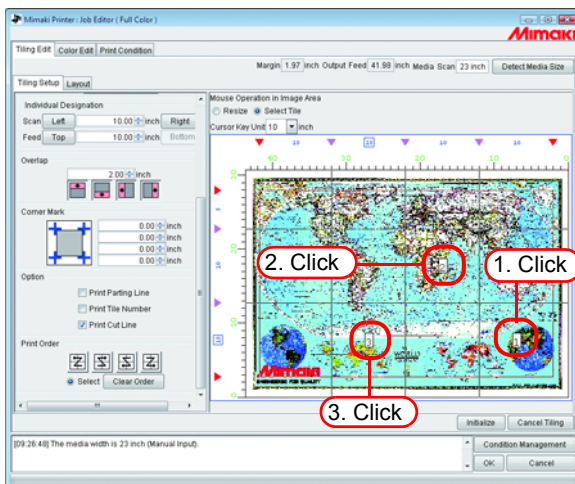3 On the “Tiling Preview”, click the tiles you want to print one by one.



When mistakes of printing order has made, click and try again.

NOTE!

If the tiles to be printed are not designated after clicking , the setting will not be completed even if you click . Designate the tiles to be printed.

Laying out the Tiles

In the default state, the preset margin (“Leading Margin” + “Trailing Margin” in “Print Condition”) and the printer automatic feed amount interval are set between the tiles, and the tiles are arranged in the feed direction in the specified tile order.

NOTE!

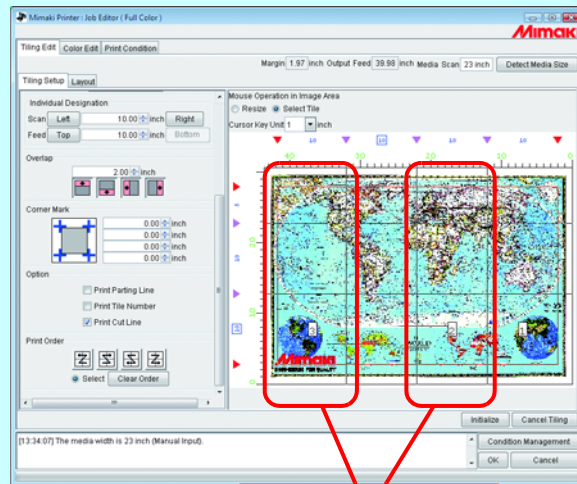
Before and after printing, the printer inserts automatic feed. Since the amount of automatic feed differs according to the printer and print settings (resolution, pass, and with JV4, the Front and Rear setting of the head), the “Margin” value is not an accurate value.

Reversing the even-numbered column

If there appears the difference in colors between the right and left side of each tiles when you print, the “Reverse Even-numbered Column” function is effective.

NOTE!


Tiles of the even-numbered columns mean the tiles of the columns on the Tiling Preview located at even-numbered from the right end.



Even-numbered Column

Click “Reverse Even-numbered Column”.

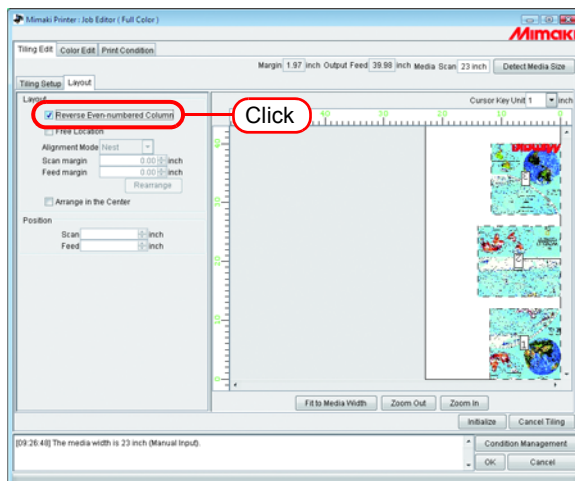You may confirm the reversed tiles on the “Layout Preview”.



Arranging the Tiles to the position of your choice

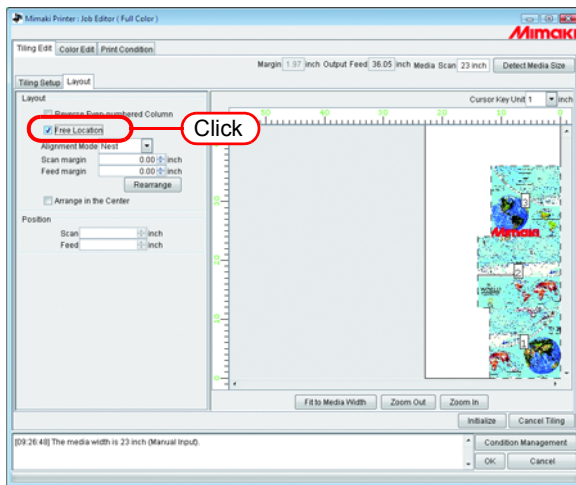
The arrangement method of tiles and the margins may be set freely at your choice.

NOTE!

For tile layout, there are “Fixed Arrangement” and “Free Location”.

- With “Fixed Arrangement”, RIP and printing is performed for each tile.
- In the case of “Free Location”, the printing will be started after completion of RIP of all tiles.
- When the “Free Location” is selected, the time before starting the printing becomes longer. Also the disk has to have enough capacity as the Ripped data are made for all tiles designated to be output.


1 Click “Free Location”.



2 Select “Alignment Mode”.

Enter the “Scan margin” and “Feed margin” as required.

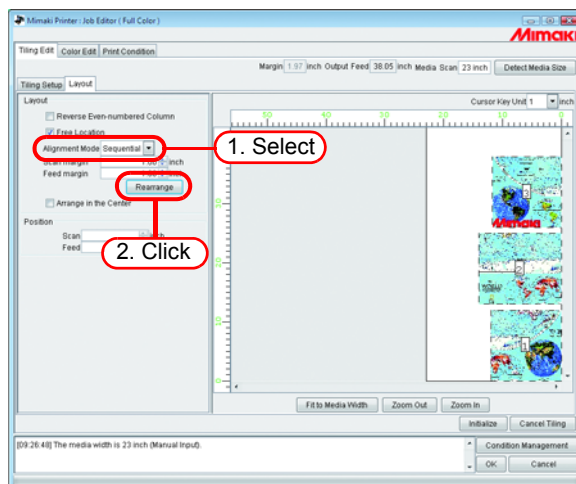Click **Rearrange**.




Arranging in the Center of the Media

You may arrange the tiles in the center of the media.


When the “Arrange in the Center” of “Image Edit” is checked, a check mark has already been placed in it. “Arrange in the Center”, is common to “Tiling” and “Image Edit” and the same setting is applied.

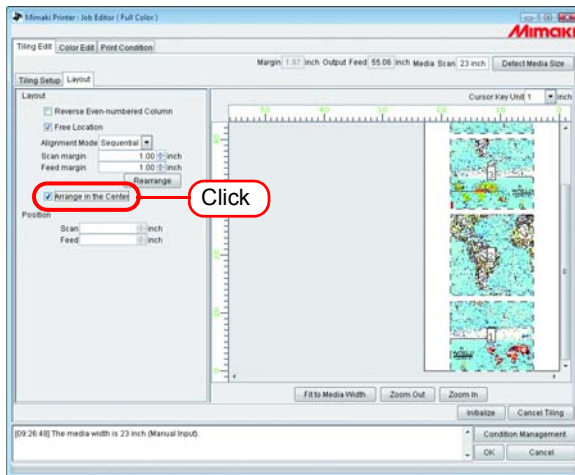Click “Arrange in the Center”.






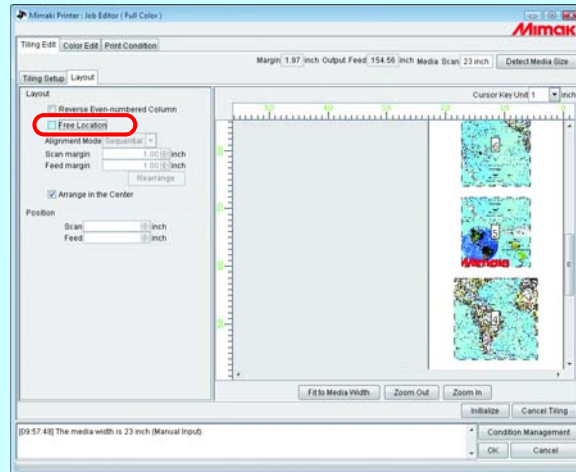- When “Arrange in the Center” is canceled, the scan direction position returns to the original position.
- Fixed Arrangement:
(When “Free Location” is not checked)
The arrangement is made aligning the center of each tile to the center of the media.



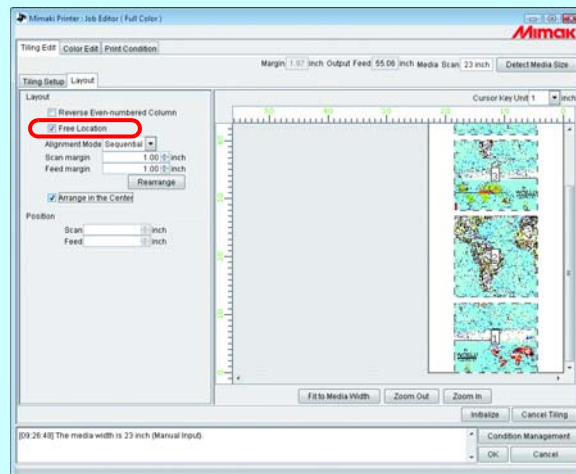
- Free Location:
(When “Free Location” is checked)
The arrangement is made aligning the center of all tiles designated to be output to the center of the media.




Moving the Tiles to the position of your choice

When the “Free Location” is checked, each tile may be moved freely to any position.

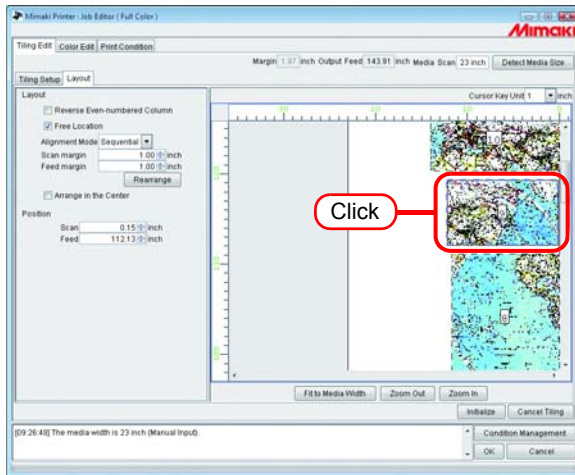- 1 On the “Layout Preview”, click the tile you want to move.
The clicked tile is surrounded by the blue dotted lines and the “Position” figure entering boxes will be activated.



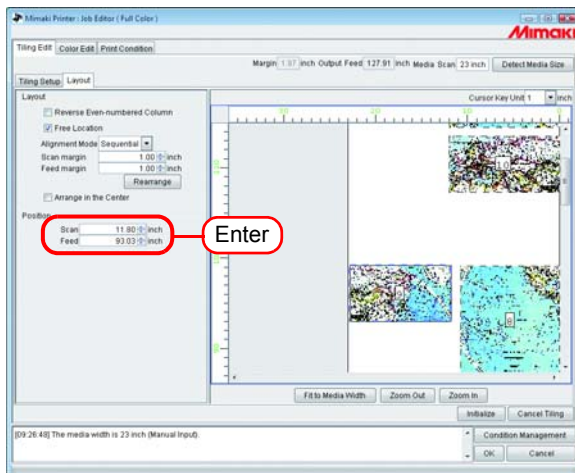- 2 To the “Scan” and “Feed” of the “Position”, enter the moving amount.
The tile will move accordingly.




NOTE!

- When the tiles are overlapping one another, even if you click , the setting cannot be completed.
- When even one tile is completely outside of the printing area, even if you click , the setting cannot be completed. You have to relocate such tile or if that tile is not necessary, select again the tiles to be printed.



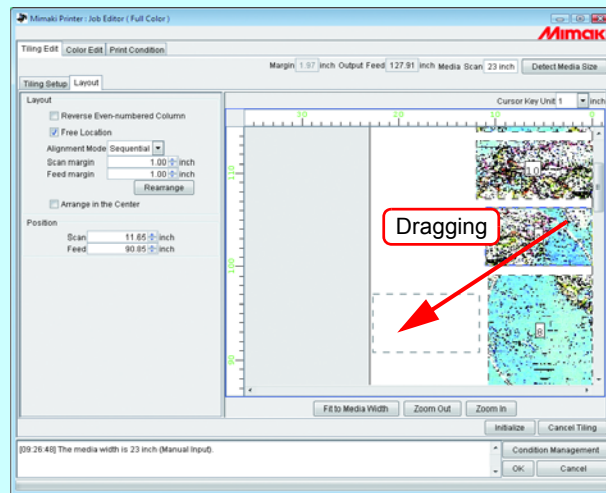
- Using the dragging, you may move the tiles.
- With arrow keys , , and , you may also move the tile with the amount of movement designated by the “Cursor Key Unit”.



Ending the Tiling Setting

When the setting of the tiles is completed, save the setting.

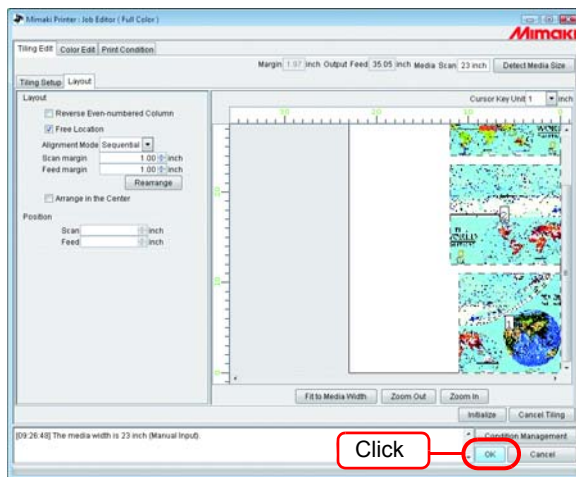Click .



NOTE!

- If you click and then click without setting anything, the setting will not be completed. Perform the Tiling Setup.
- If you click and then , the tiling function is invalidated. (The setting parameters remain).

Printing the Tiles


 

To print tiles, you may select, as in the case of normal printing, “Immediate print”, “RIP and Print”, “RIP only” or “Print only” (when there are Ripped Data).




For the procedures for printing, refer to Reference Guide, Common Features for Every Printer “Printing”.

Set the following items as required:

NOTE!

When the “Free Location” is set, the “Immediate print” cannot be performed.

Ripped Data		Explanation
Not Exist	Wish to keep	<p>If the Ripped Data are kept, the printing time when you reprint them can be shortened.</p> <p>However, as the big amount of hard disk space is used, the free capacity could become insufficient.</p> <p>For printing, select “RIP and Print”.</p> <p>Or, alternatively, check “Create Ripped Data during Immediate Print” in the “Option Setting” (“Reference Guide, Common Features for Every Printer”  P.98) and perform “Immediate Print”.</p> <p>Reprinting can be done with “Print Only”.</p>
	Not required	<p>When reprinting is not required, the Ripped Data is not needed.</p> <p>In the “Option Setting” (“Reference Guide, Common Features for Every Printer”  P.98), clear the check of “Create Ripped Data during Immediate Print” and perform the “Immediate Print”.</p> <p>Or, alternatively, check “Delete job after print” in the “Option Setting” (“Reference Guide, Common Features for Every Printer”  P.98) and select “Delete Only Ripped Data”. And then perform “RIP and Print”.</p>

 Ripped Data	Change in set value	Explanation
	Printing tiles	
Exist	No change	There exists Ripped Data of all tiles. Printing is performed with “Print only”.
	Print all tiles	
	No change	Designate the tiles to be printed. (“Designating the Tiles to be Printed Freely”  P.63) Printing is performed with “Print Only”.
	Print specified tiles	
To be changed	<p>When the tile settings are changed, at the time you click <input type="button" value="OK"/> on the “Job Editor”, delete the Ripped Data. If you execute “Immediate Print” or “RIP and Print”, RIP is performed again.</p> <p>However, the following changes in the setting, the Ripped Data will not be deleted.</p> <ul style="list-style-type: none"> - Printing Tile Designation - “Free Location” ON/OFF - The printing position of each tile when the “Free Location” is ON. - “Arrange in the Center” ON/OFF <p>In the case all tiles are to be RIP performed again, perform “Delete Ripped Data” and then “Immediate Print” or “RIP and Print”.</p>	
Partially Exist		<p>If you perform RIP with selecting the tiles to be printed or the processing is canceled during the printing, the “Ripped Data” column will show “Partially Exist”.</p> <p>In order to research which tiles are RIP-performed, display the “Job Properties” of the Job. (“Reference Guide, Common Features for Every Printer”  P.97) , and then click the [Results] tab to confirm.</p> <p>When all the Ripped Data are ready (there is no change), you may print with the “Print Only”.</p> <p>When you print the tiles that are not RIP-performed at the same time, select “RIP and Print”.</p> <p>If there is no change in the RIP-performed tile, the RIP will not be repeated. When there exists any change, when you check [OK] of the “Job Editor”, the Ripped Data is deleted. However, depending on the nature of the change, the Ripped Data is not deleted. Refer to ( Ripped Data, “Exist”, “To be changed”).</p>

Twin roll printing (using JV3-250SP)

With JV3-250SP, it is possible to set two rolls of media at the same time for printing. This is called “Twin roll printing”.

The area corresponding to the left and right rolls is one printing area.

This is enabled when two rolls are set in the printer.

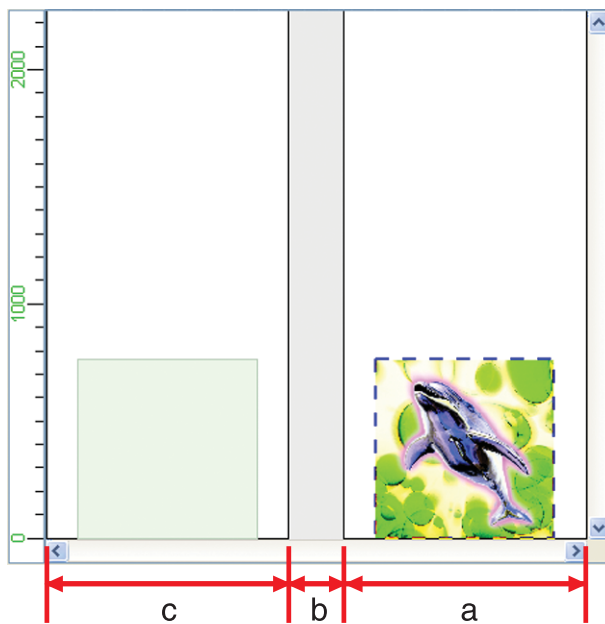
NOTE! Twin rolls cannot be set when the printer status cannot be acquired.

Layout Preview

In the “Layout Preview”, the two rolls are each shown as valid printing area.

The area between the media is not valid printing area.

NOTE! If an image is arranged to straddle the media, the “Job Editor” displays an error message when finishing, and the settings cannot be saved. Arrange images to fit completely on the roll.



a	Right roll (valid printing area)
b	Outside valid printing area
c	Left roll (valid printing area)

Print multiple jobs at one time

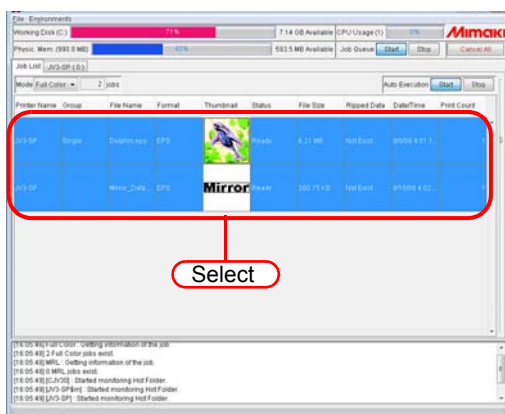
By grouping jobs, multiple print data can be printed at one time.

Grouping

NOTE!

- When grouping jobs with different print conditions, the print conditions of the other jobs adopt those of the first job.
- Depending on the images, white space may be introduced between them even if they are arranged without spacing.
- Jobs with tiling, paneling, jobs with two copies or more set, multipage jobs, and application separation and RIP separation jobs cannot be grouped.
- Jobs with a status other than “Ready”, “Cancel”, and “Error” cannot be grouped.
- Jobs with a different “Printer Name” cannot be grouped.
- Jobs of a multifunctional output for which “Function” is “Cut” or “Print&Cut” cannot be grouped.

1 Select jobs to group from the Job List.




- Clicking a job with the key pressed selects only the clicked job.
- Clicking a job with the key pressed selects all jobs from the job selected first to the next job clicked.
- When selecting jobs, jobs that belong to other groups can also be selected. In this case, all the jobs in that group become grouped.

2 Hold down the Shift key and double click the selected job to open the “Job Editor”.


Refer to “Reference Guide - Common features for every printer” (☞ P.74) for how to open the “Job Editor”.

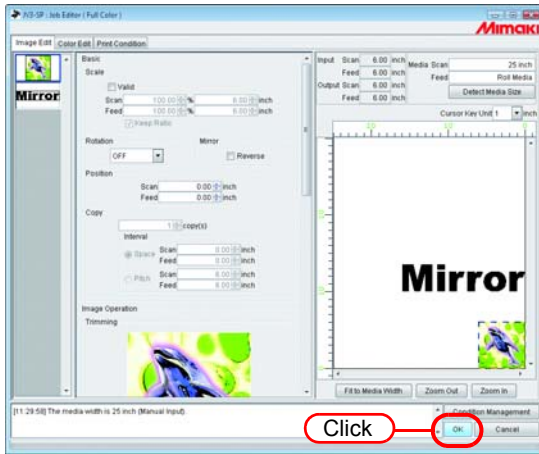Edit the jobs and click OK .




NOTE !

- When images overlap, they are printed superimposed, with the image displayed at the top of the thumbnail list first.
- The overlapping parts of the images are printed with priority given to the valid pixels of the topmost image.

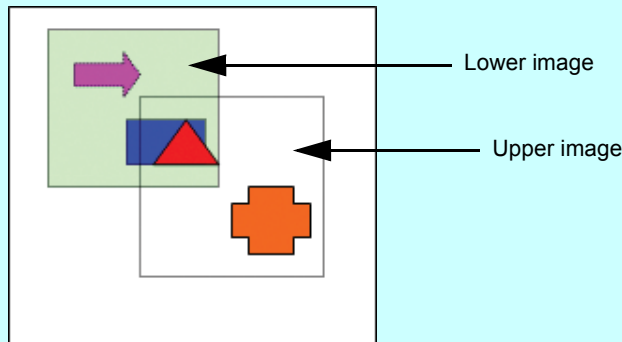

Example of overlapping printing

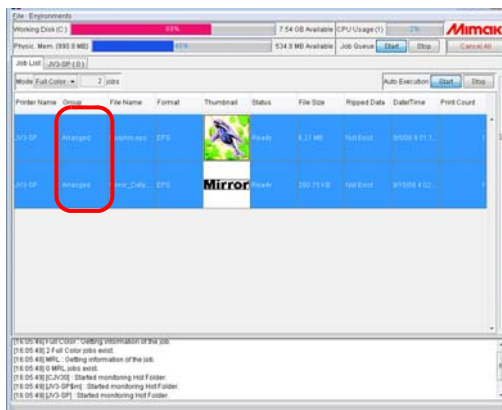3 They are shown in the “Group” field of the “Job List” as “Arranged”.



When a grouped job is opened in the “Job Editor”, all grouped jobs appear in the “Job Editor”.

Add grouped jobs to jobs being edited

Grouped jobs can be added to jobs being edited in “Job Editor”.

Add jobs to the job list in “Job Editor”.

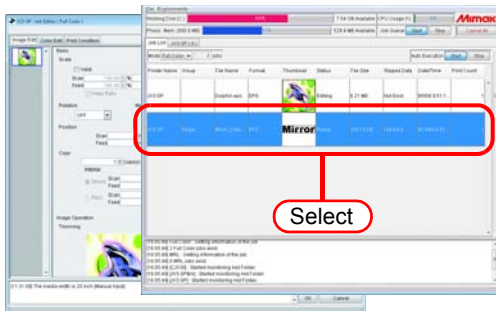
NOTE!

- Jobs being edited with tiling, paneling, jobs with two copies or more set, multipage jobs being edited; application separation and RIP separation jobs; and jobs being edited with a different “Printer name” cannot be added.
- Jobs with tiling, paneling, jobs with two copies or more set, and multipage jobs cannot be added.
- Jobs with a status other than “Ready”, “Cancel”, and “Error” cannot be added.

1 Select a job to add with the “Job Editor” open, and double click it.

Jobs can also be added with the following method.


- Right click it and select “Edit”.
- Hold down the key and press the key.




Already grouped jobs can also be added. In this case, all the jobs in that group are added.

2 The jobs are added in “Job Editor”.

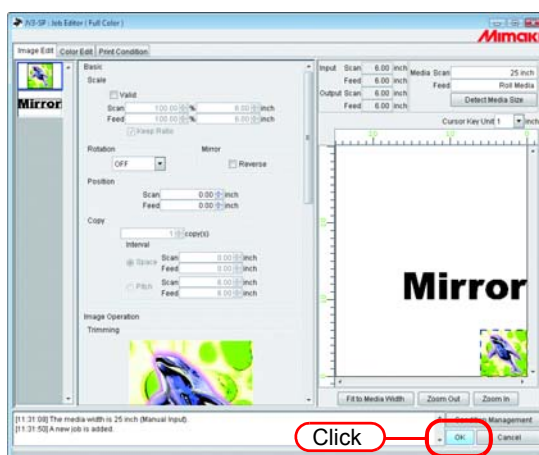Edit the jobs and click .



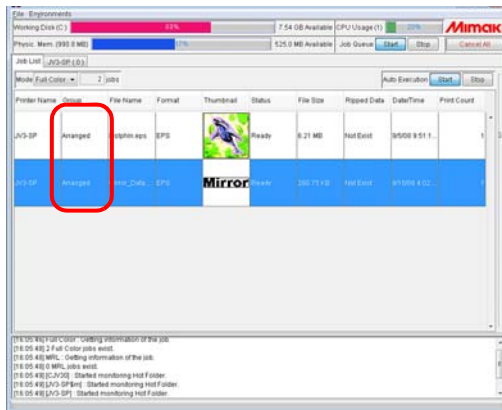3 They are shown in the “Group” field of the Job List as “Arranged”.



When a grouped job is opened in the “Job Editor”, all grouped jobs appear in the “Job Editor”.

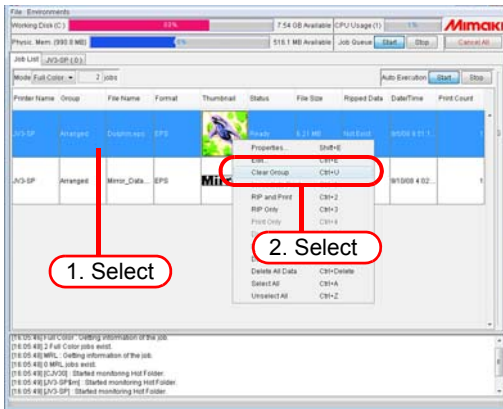
Clear grouping

There are two methods for ungrouping grouped jobs.


NOTE! Jobs with a status other than “Ready”, “Cancel”, and “Error” cannot be ungrouped.

Ungrouping in the Job List

- 1 Select one grouped job.
Right click it and select “Clear Group”.
Or hold down the **Ctrl** key and press the **E** key.



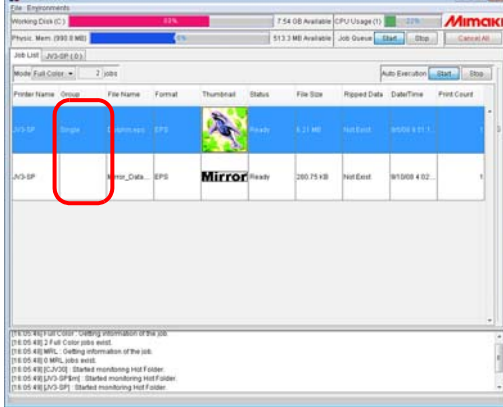
- 2 They are shown in the “Group” field of the Job List as “Single”.



Ungrouping on the edit screen


When editing multiple jobs, you can clear the grouped status from the “Job Editor”.

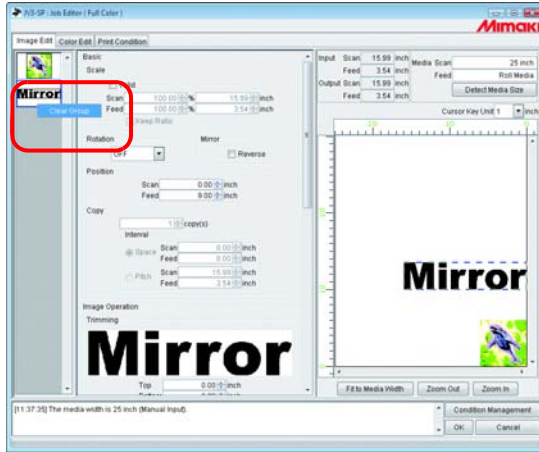Right click on the thumbnail of a job to ungroup to display a pop-up menu.
Select “Clear Group”.



Editing Multiple Jobs

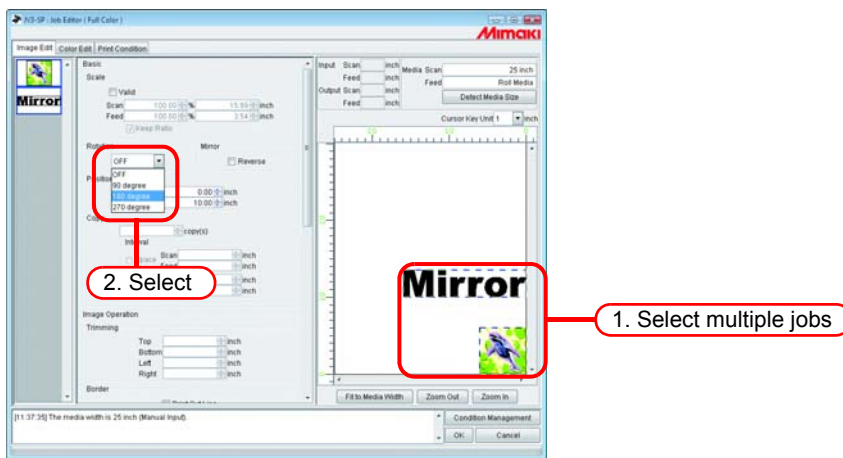In the “Job Editor”, it is possible to specify Scale, Rotation, Mirror, Position, and Cut Line printing for multiple arranged jobs at the same time.




Color Edit

Make setting for Color matching, etc. by “Color Edit” in the “Job Editor” window.
Select a job to be subjected to Color Edit from the list of thumbnails at left.

NOTE!

Perform color editing for a single job at a time. When you are editing two or more jobs, select a job to be subjected to “Color Edit” from the thumbnail list and perform setting.

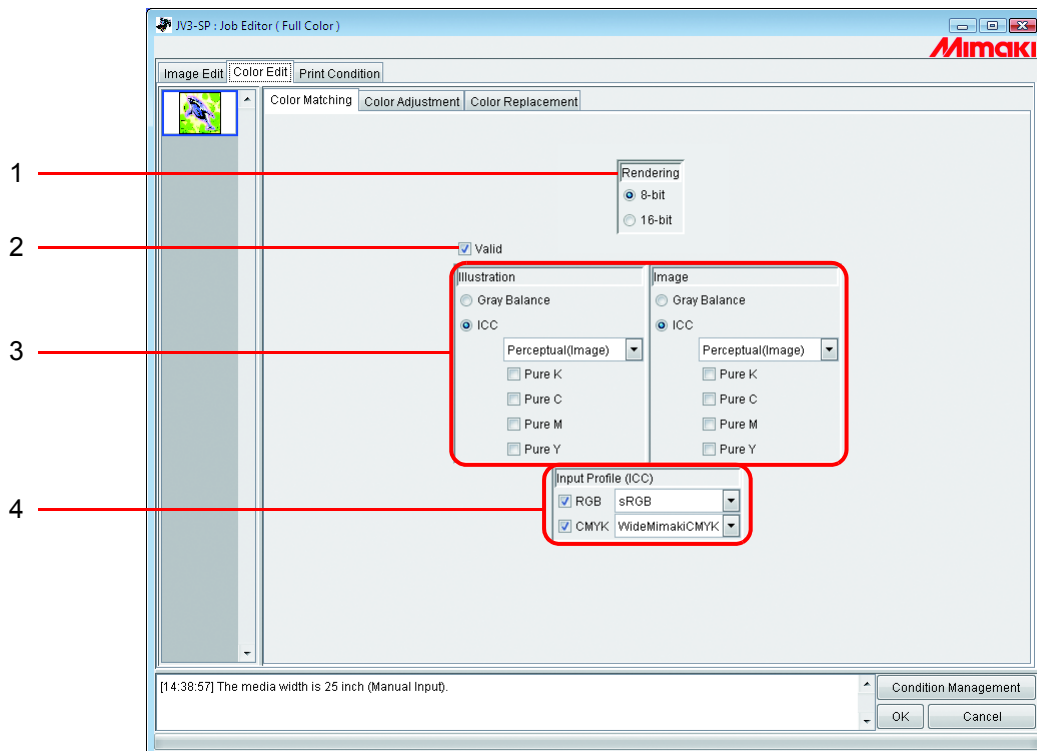Setting Color Matching



1. Rendering

If a version 3.0 device profile is selected in the Print Conditions window, the Rendering screen is displayed.

8 bit Applies the same print quality as before.

16 bit Prints with smoother gradation.

If a version 2.0 device profile is selected, the Rendering screen is not displayed.

8-bit print mode applies as before.

2. Valid

Makes the Color matching function active.

Performs printing according to the conditions you have set on the “Color Matching” menu.

3. Illustration/Image

Set Color matching for each of the illustration part and image part in one file separately.

Gray balance:	Available with CMYK data. The colors designated by data are mixed in such a way that no other color is mixed. Gray balance is inferior to ICM in the accuracy of color matching. If a Version 3.0 device profile generated by converting a Version 2.0 device profile is selected on the [Print Condition] screen, you cannot select gray balance.
ICM:	Color matching is processed with ICC Profile. Usually, select this option.
Perceptual:	Suitable to print images (photos). Color matching is performed so that the brightness of the whole image will be highly near to that of the input image.
Colorimetric:	Suitable to illustrations. Color matching is performed so that printing will be achieved in as deep color as possible.
Relative:	Color matching is performed so that the print colors relative to white will approximate to those of the input image. When the color of the media is different from the white that works as a reference for the colors of the input image, the print colors vary with the media. For example, if yellowish media is used for printing, the whole print is slightly yellowish compared with the input image.
Absolute:	Color matching is performed so that the print colors will approximate to those of the input image without being affected by the media color. When the color of the media is different from the white of the input image, an effort is made so that the color of the media will be near to the white of the input image. Therefore, there may be a case where ink is ejected even without any image to be printed.
Pure K, Pure C, Pure M, Pure Y:	For data prepared in primary colors, that is, cyan, magenta, yellow, and/or black, printing is carried out without color matching, thus preventing any other ink from being mixed.

4. Input Profile (ICM)

Select an Input Profile for RGB data and CMYK data individually.

The profile is Gray balance mode when the check box is unchecked.

NOTE !

In case the input image has the specific profile such as scanner, specify the profile as the input profile to improve the color repeatability.
The profile is needed to be registered on the Profile Manager.

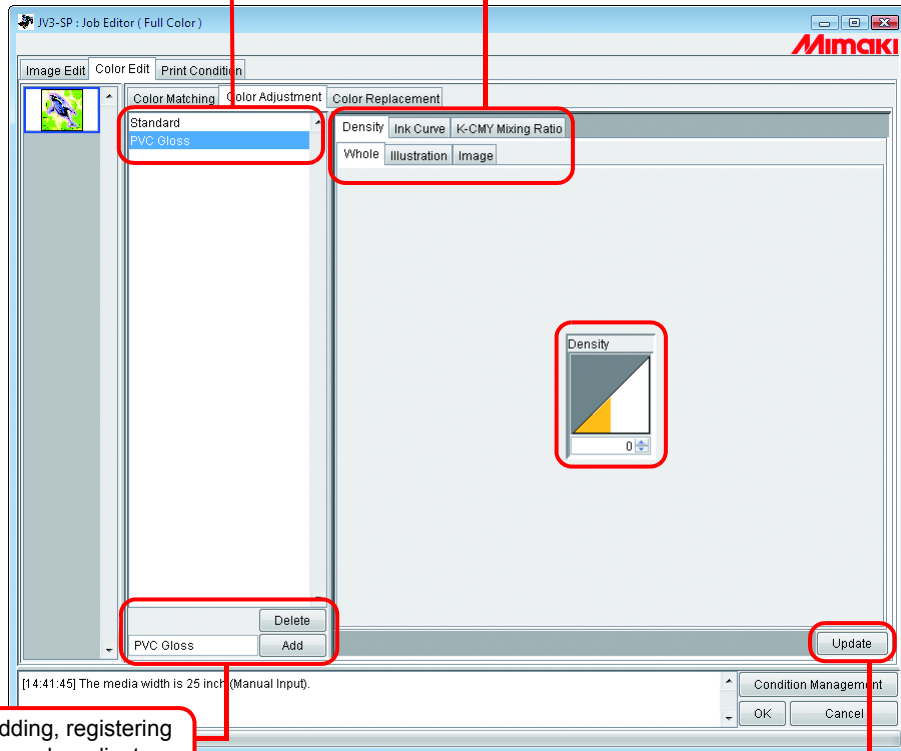
Editing Color Adjustment

Adjust the color of an image. Register a color adjustment set.

Register color adjustment set for each Device Profile in “Color Adjustment” page.

List of file names of color adjustments. When you select “Standard”, editing of color adjustment is not allowed. When you perform Color Edit, prepare a color adjustment set newly. (P.83)

Click the tab for the adjustment to be made.
Density (P.85)
Ink curve (P.89)
K-CMY Mixing Ratio (P.95)



Used for adding, registering and deleting color adjustment set names for settings. (P.83)

Applies the selected color adjustment set to the settings.

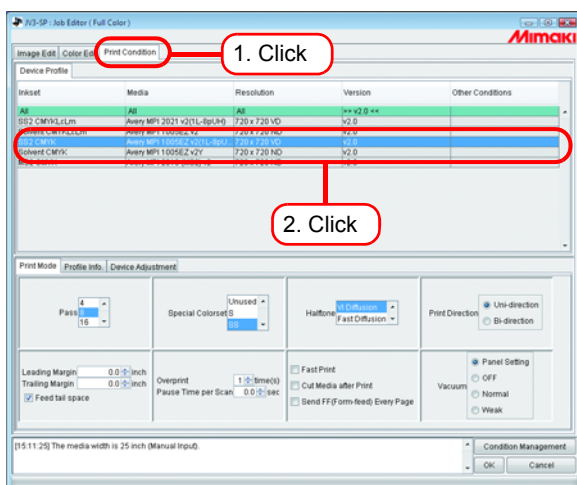
Preparing a Color Adjustment Set

Make a Color Adjustment Set for each Device Profile.

- 1 Click [Print Condition] page.
Click the Device Profile for which you would like to prepare a color adjustment set.

NOTE!

Make color adjustment set for each Device Profile.
To Print by Using Color Adjustment Set, select the Device Profile that specified with the Color Adjustment Set is Prepared.




- 2 Click [Color Edit] page.
Click [Color Adjustment] page.
Enter the Color Adjustment Set name.

NOTE!

The following characters cannot be entered.
\\ : * ? " < > |

Click .

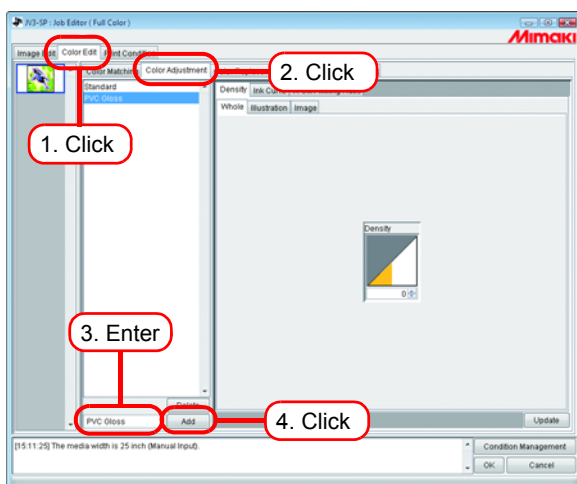When there is already the same name, a confirmation message for overwrite is displayed.





- When making new Color Adjustment Set, select “Standard” before click .
- When registering anew by editing registered color adjustment set, select and rename them to click .

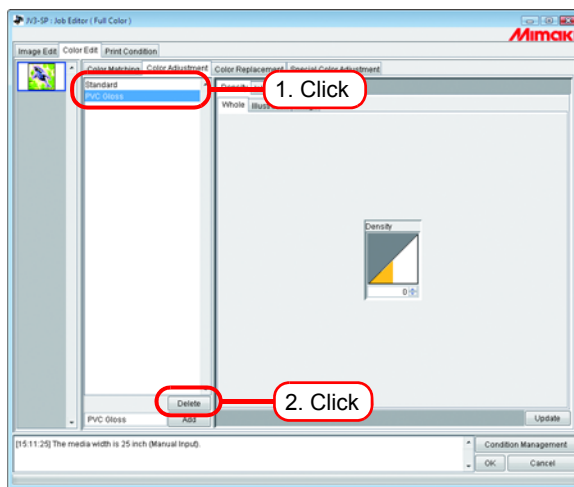
Deletes Color Adjustment Sets

Click a Color Adjustment Set to set.

Click to delete the selected color adjustment set.


NOTE!

The “Standard” set can not delete.



Updating Color Adjustment Sets

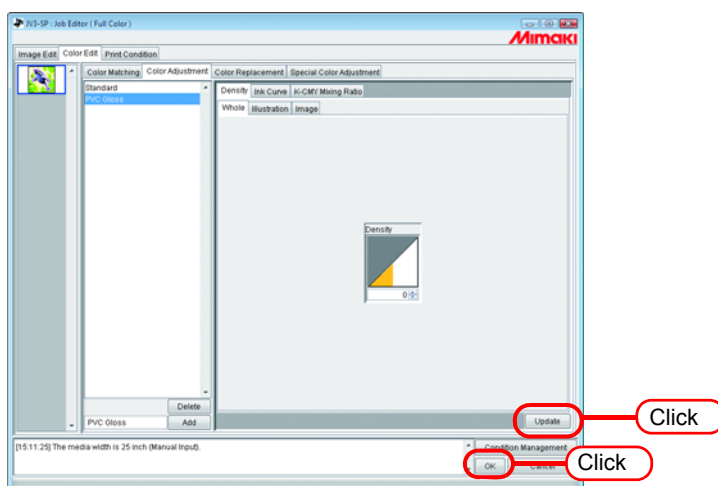
To update the color adjustment information, click or , and exit the “Job Editor”.




Adjusting Ink Density

Adjusting All Ink Densities

Adjust the maximum amount of each ink.

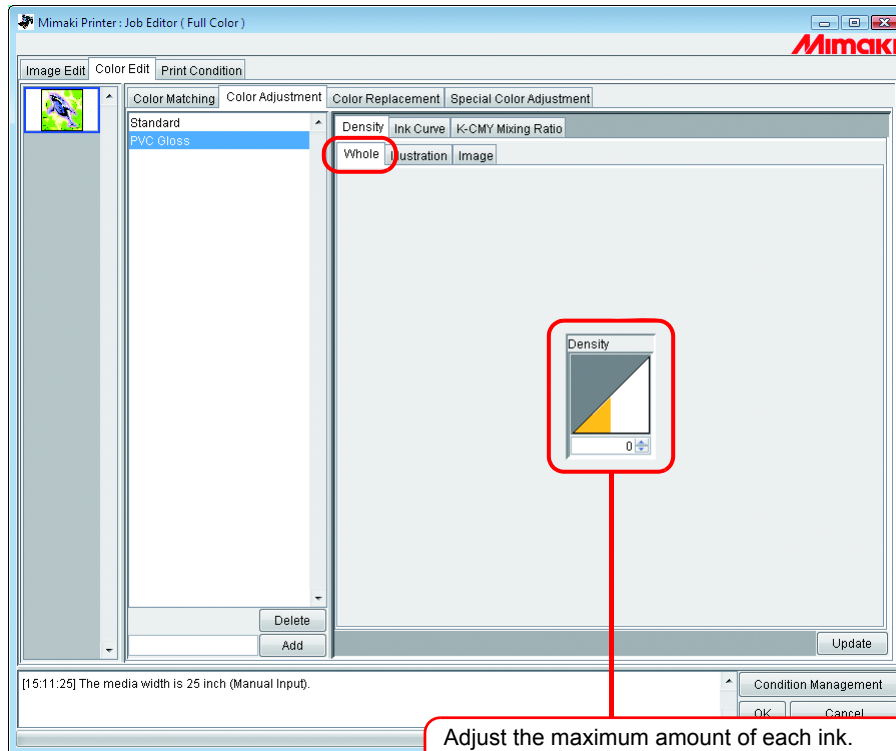When click , the value changes every five. Also enter any value in a box. The value can be set in a range from minus 50 percent to 50 percent.



Adjust the maximum amount of each ink.
This setting is reflected on both illustration and image.
Printing with exceeding ink limit of each color is possible by setting the whole density to plus.

Adjusting the Ink Densities for Illustration Part and Image Part

Adjust the ink amount for each of the illustration part and image part in one file.

Adjust contrast of an image.
Contrast becomes higher with larger value and lower with smaller value.

Black ink density settings Adjust the amount of black ink used.

- 1 to +50 Reduces the amount of cyan, magenta, and yellow, and increases the amount of black ink. For more detailed settings, use K-CMY adjustment.
- 0 The function is disabled, and K-CMY adjustment is enabled.
- 50 to -1 Reduces the amount of black ink used.

When a value other than 0% is specified, the K-CMY mixing ratio setting is disabled.

Adjust the amount of ink in Highlight, Middle, or Shadow. To set in detail, adjust ink curve. (P.87)

To Adjust Color in Detail (Ink Curve)

If output is not obtained in your desired colors even by changing ink densities, adjust the ink curve of each kind of ink.

The method of adjusting ink curves differs according to the version of the device profile.

Version 1.0 and 2.0 device profiles

Ink Limit : Adjust ink density to all the colors.

Gray Balance : Adjust ink density using only four colors of Black, Cyan, Magenta, and Yellow.

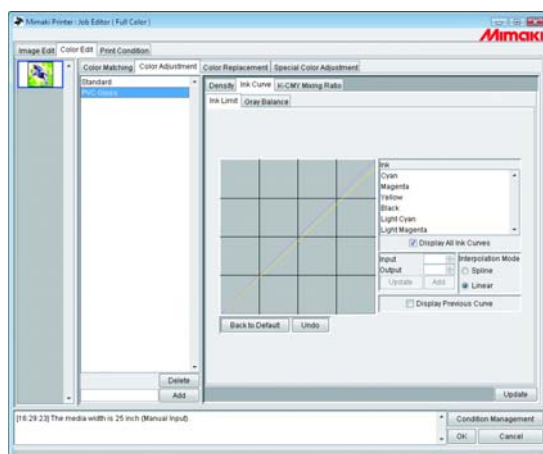
Gray Balance is only available in Version 2.0.

NOTE!


“Gray balance” is valid only when you have selected gray balance on the “Color matching” menu (P.80).

The setting of Ink curve is reflected over the whole area without distinction between the image part and illustration part.

“Ink Limit” Curve



“Gray Balance” Curve

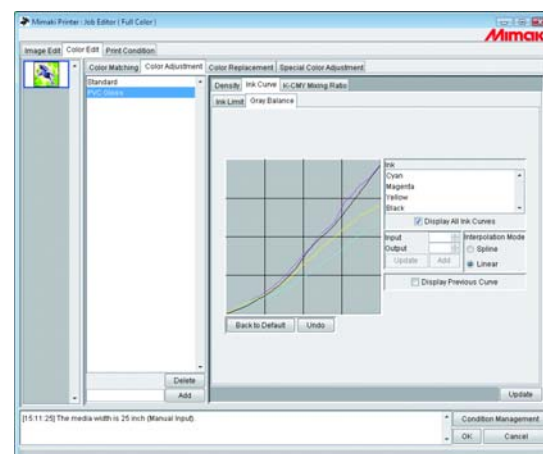


Refer to “Adjusting Ink Curves” (P.89) for how to adjust ink curves.


Version 3.0 device profile

- Ink limit: Sets the maximum density of the ink.
Linearization: Adjusts the density of ink in all areas.

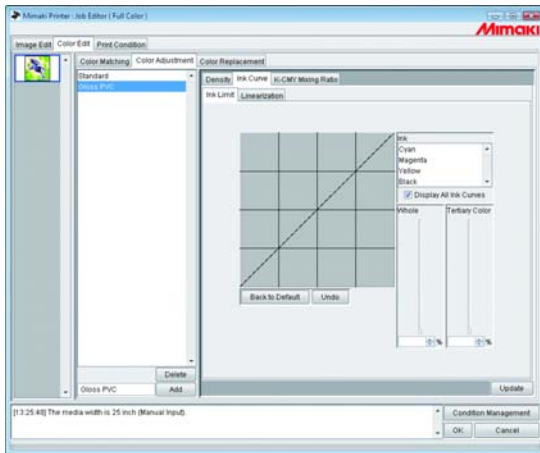“Ink Limit” Curve



“Linearization” Curve

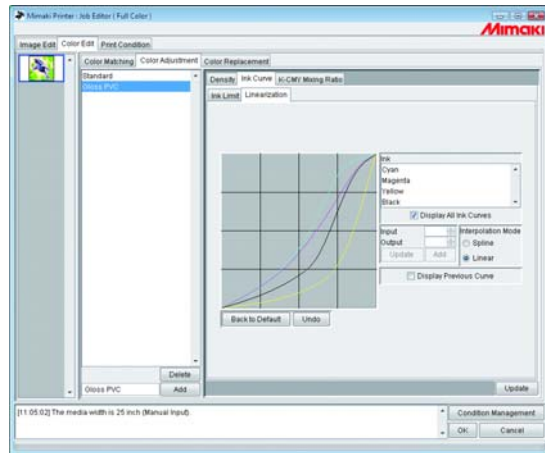

Adjust the “Ink Limit” curve using the slider.

“Whole” adjusts the density for all ink colors.

“Tertiary Color” adjusts the density of each ink color when 3 or more colors are mixed.

The density of “Whole” is the upper limit value for Tertiary Color.

When the upper limit value for Ink Limit of “Whole” is changed, the upper limit value for Ink Limit of “Tertiary Color” also changes.

Refer to “Adjusting Ink Curves” (📖 P.89) for how to adjust linearization curve.

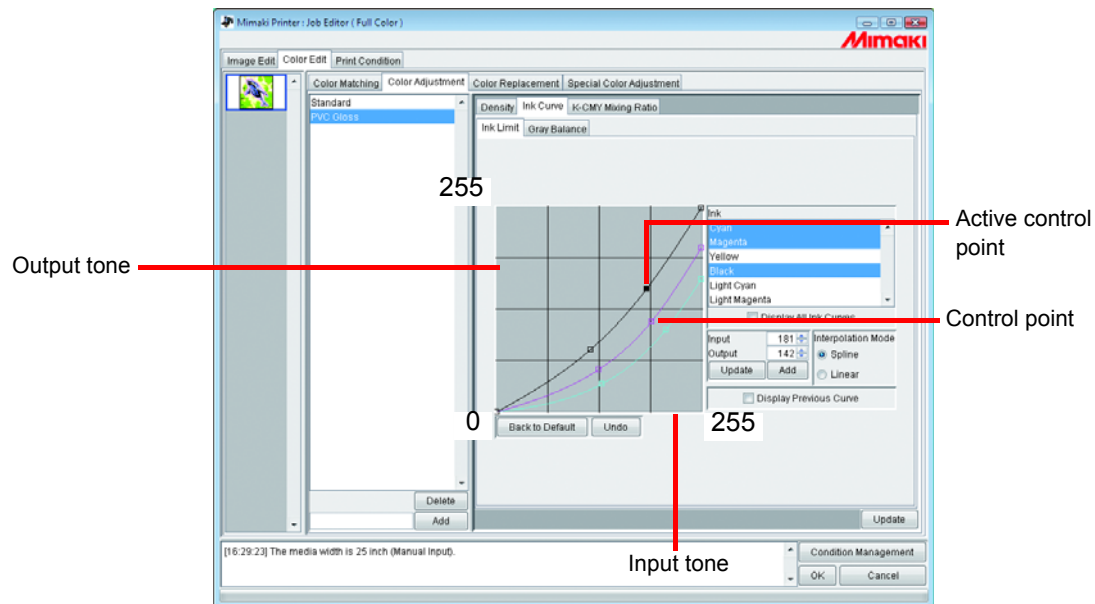
Adjusting Ink Curves

Display the ink curve of ink selected from the “Ink” list.


The horizontal-axis indicates the ink density before adjustment (input tone) and the vertical-axis indicates the ink density after adjustment (output tone). Both axes indicate in a range from 0 to 255.

The output tone is set to 0 if below 0 and to 255 if over 255.




Click an adjusting point to make a control point. Up to 30 points can be added. A selected control point changes from a white rectangle into an ink color one.



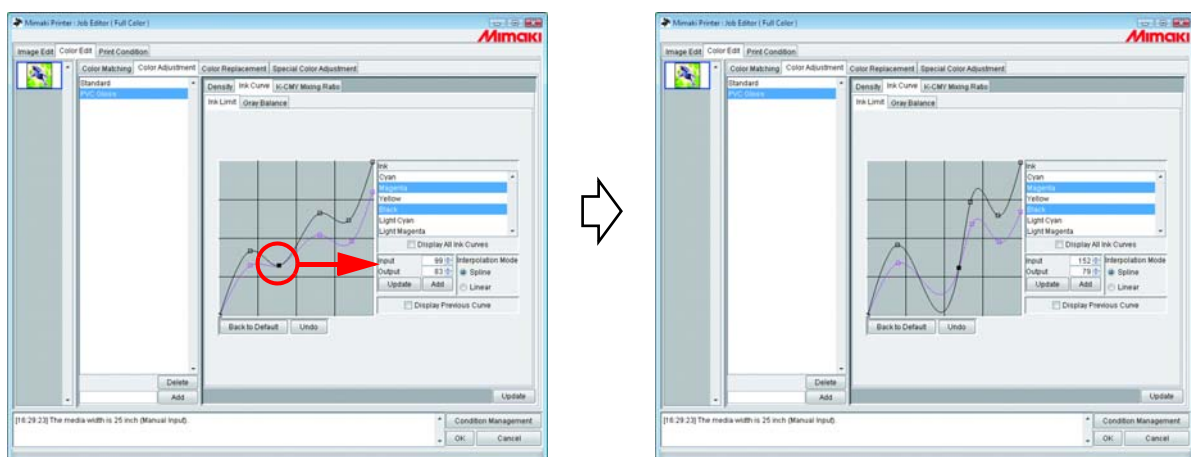When changing several ink curves at a time, drag a point where the ink curves of several colors are intersecting or adjoining each other. Or push Arrow key to move that control point.



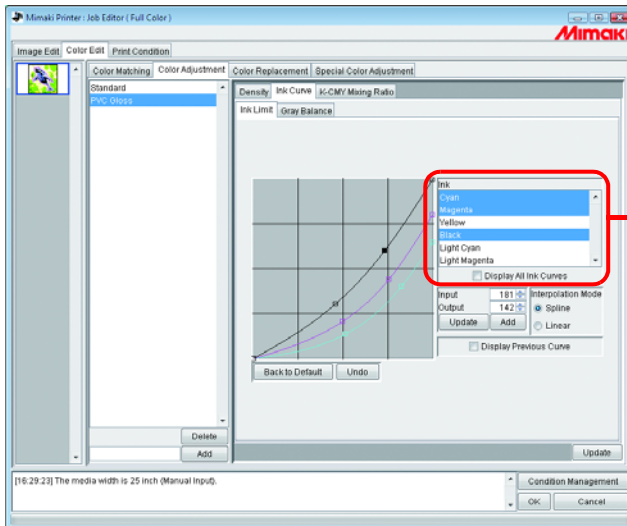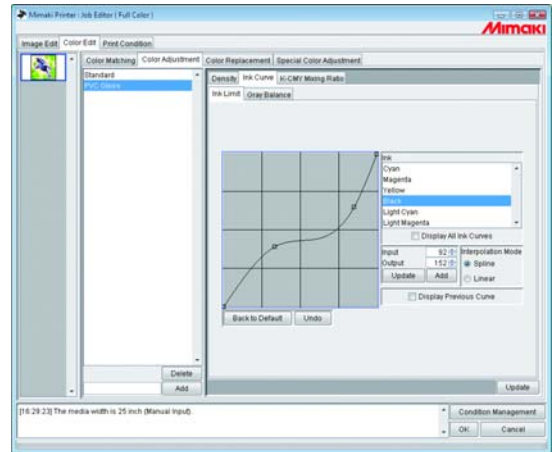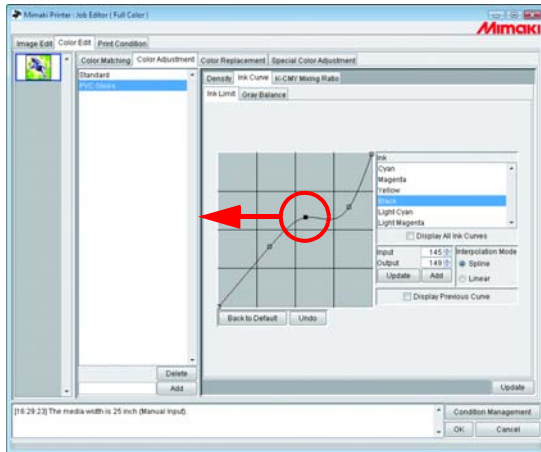To delete a control point, drag the point to outside the adjacent one. Or push **Delete** key or **Back Space** key.



Select ink list:
 Display the inks selected from the ink set in the "Print Condition" window.
 To select more than one ink, click ink names while pressing the **Ctrl** key.
 To deselect, click the ink name again.

Display All Ink Curves:
 Display all ink curves.
 When unchecked, only the ink curve selected from the "Ink" list is displayed.

Interpolation Method:
 Select Spline or Linear.
 When click an ink name on the "Ink" list, display the current Interpolation Mode.
 When select several inks and their Interpolation Mode are different, display the Interpolation Mode of the first ink on the ink list that has been selected.

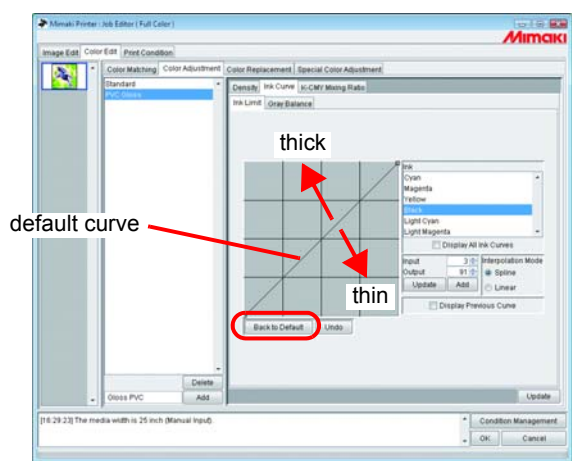
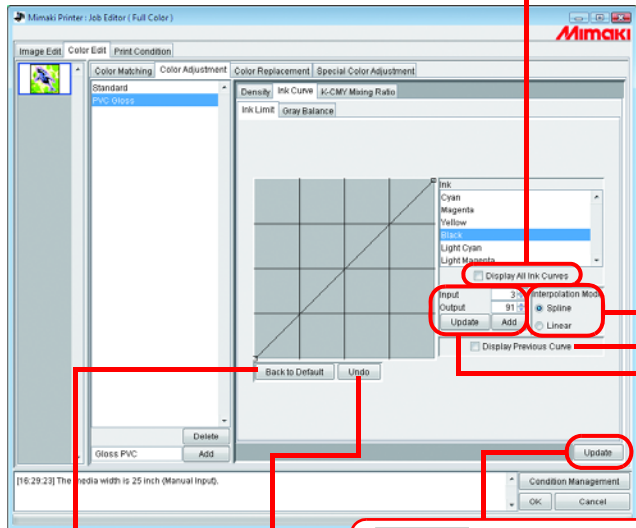
Display Previous Curve:
 Display the previous ink curve with a broken line.
 If is clicked, the previous ink curve is disappear.

Enter the value of input tone and output tone to adjust control point. When add the control point, enter the value, and click .
 When altering the control point position, first select the control point, and then input the value. For update the control point position, click after inputting the value.
 Note that the changed control point can not be set across the adjacent one.

button:
 Register the updated ink curve.

button:
 Restore the ink curve selected before button executed.

button:
 Read in default ink limit value of the ink selected on "Ink" list.
 When setting a smaller value than the limit, the color becomes thin and a larger value, the ink becomes thick therefore hard to dry.



Set an Ink Curve by Keyboard

Adjustment of an ink curve is available either by keyboards or mouse.

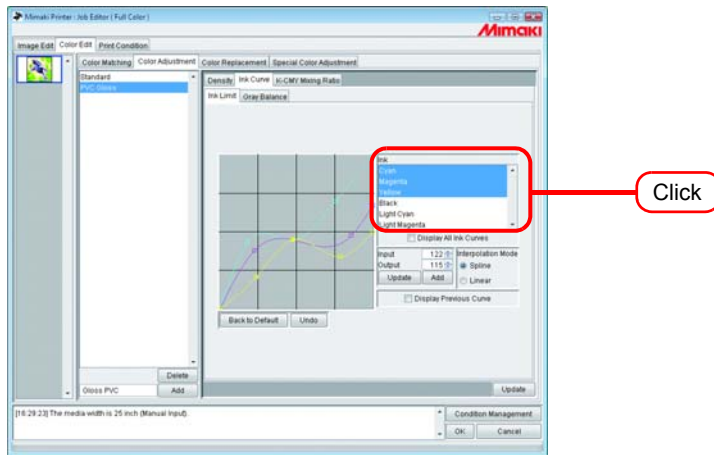
Use the following keys.

- **[Z]** key: Select control points to the left way.
- **[X]** key: Select control points to the right way.
- **[Delete]** key / **[Back Space]** key: Delete control points.
- **[←], [→], [↑], [↓]** Key: Move control points in the direction of Arrow key.

When adjust control points where several ink curves are intersecting or adjoining at a time, adjusting by keyboard is more convenient.


In this section, explains how to adjust several ink curves.

- 1 Select the adjustment ink On “Ink” list.



- 2 Click the ink curve area with the mouse.

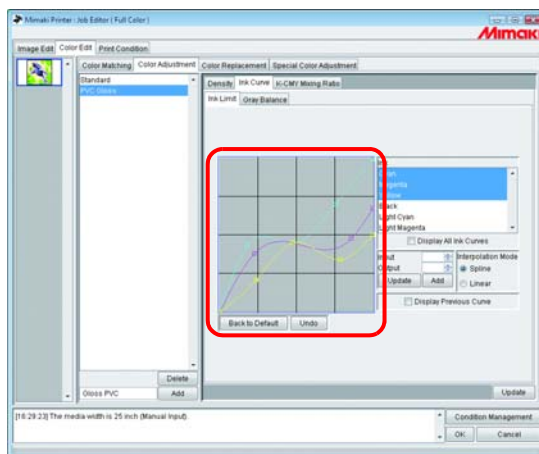The ink curve area being surrounded by blue frame, the ink curve area is selected.




3 Select control points by Z or X key.

NOTE!

When the control points can not be selected even by pushing keys, check the following.

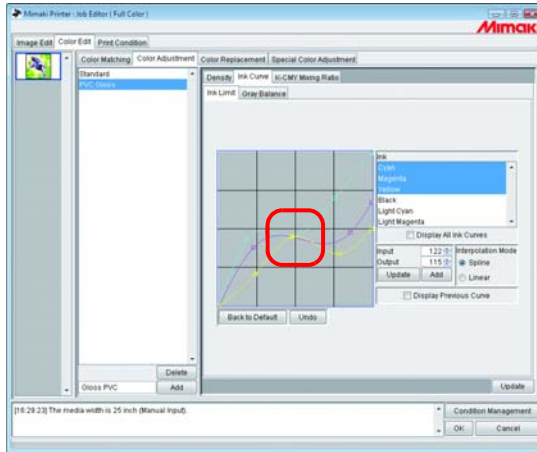
- Is the ink curve area selected?



4 Adjust a control point by Arrow key.


Click .

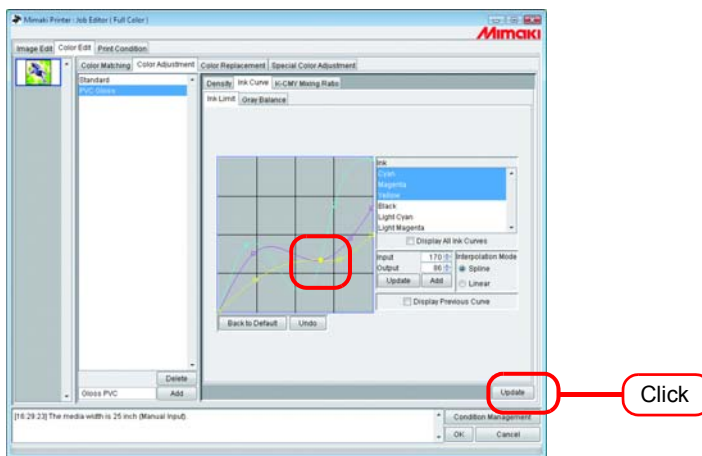Update the ink curve.



5 Click .

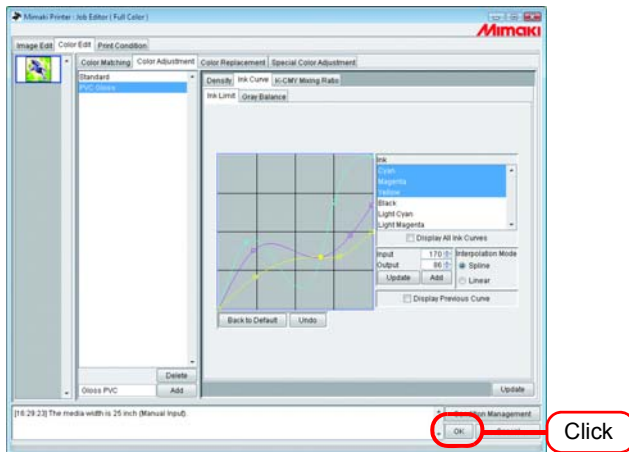The color adjustment set is updated, and the “Job Editor” is closed.




K-CMY Mixing Ratio

Replaces parts expressed as black with cyan, magenta, and yellow (mixed black) with single color black.

Adjustment is possible for each illustration and image.

It is effective in the following cases.

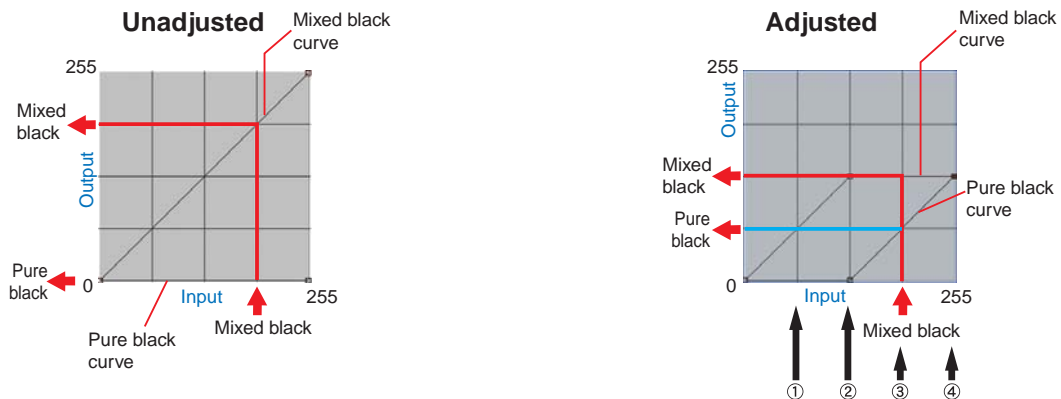- 1) For reducing the ink density in RGB images
- 2) For printing RGB images with sharp black



The adjustment method is the same as for ink curve.

Example:

Value of adjusted curve

	Input color				Mixed black		Single color black		Output color				Explanation
	A		B		Input	Output	Input	Output	C	M	Y	K	
	C	M	Y	K									
(1)	64	85	64	5	64	64	64	0	64	85	64	5	No change
(2)	128	150	160	5	128	128	128	0	128	150	160	5	No change
(3)	200	192	200	5	192	128	192	64	136	128	136	69	A part of CMY changes into K.
(4)	255	255	255	5	255	128	255	128	128	128	128	133	A part of CMY changes into K.

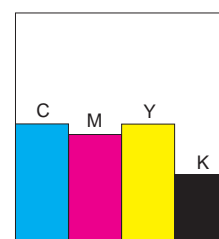
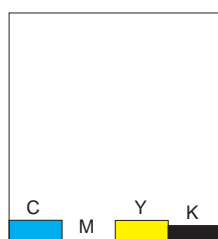
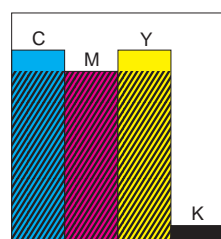
Calculation of (3)

$$C \quad 200 - 192 + 128 = 136$$

$$M \quad 192 - 192 + 128 = 128$$


$$Y \quad 200 - 192 + 128 = 136$$

$$K \quad 5 + 64 = 69$$



Color Replacement

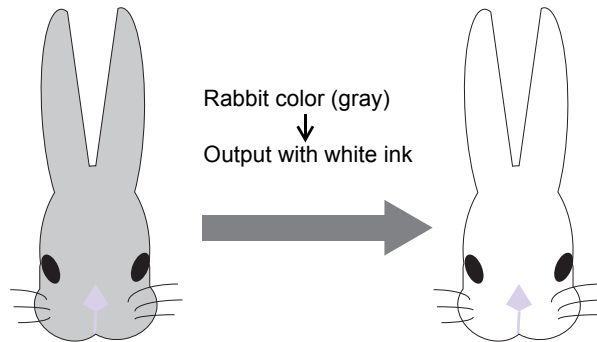This section explains the function (Color Replacement) for setting the ink color and ink density used for a specific color in the original image.




Color Replacement method

There are four methods for Color Replacement.

Color Replacement of spot color names

In Adobe Illustrator and the like, special colors called “spot color” or “special colors” can be created.

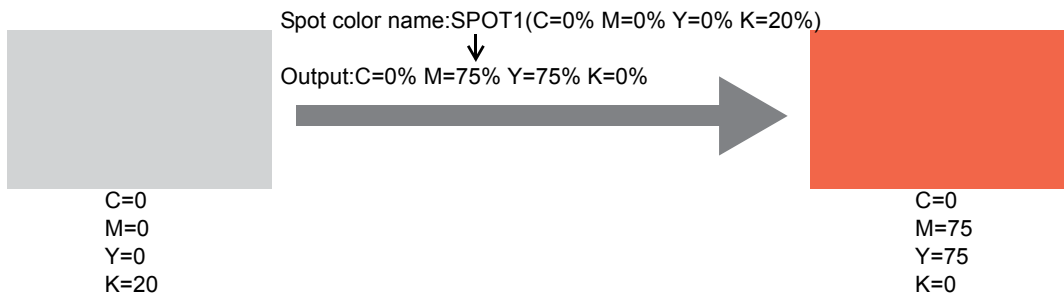
Spot colors must be named. In RasterLinkPro5 SG, an ink color and density is specified for these names.



Color Replacement of CMYK

It is possible to replace the CMYK colors of vector objects with other ink colors.

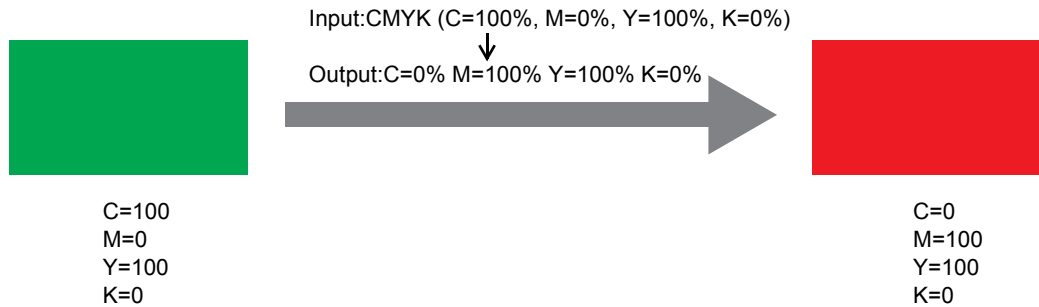
When the same color is being used for a different vector object in the image, that color will also be changed.



Color Replacement of gradations

Specify the ink color and density of gradations.

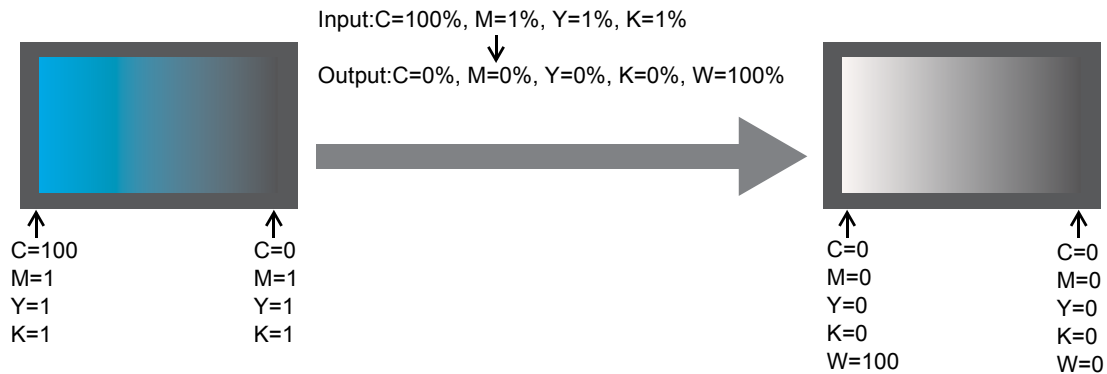For example, replace color from a cyan gradation to a white gradation, with specified density.



Replace any one color of CMYK with multiple inks


Print an image in CMYK color mode with specified inks for any one color of CMYK.

Multiple inks can be selected. However, light ink cannot be specified.

In this mode color replacement of Raster images is also possible.

This is used when printing the entire image with only specific inks.

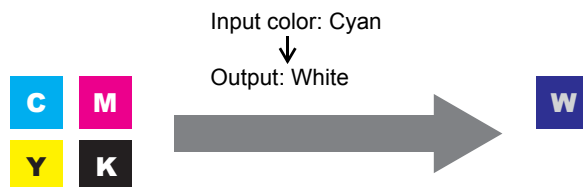For example, this is convenient when printing monotone images with white ink.



Combination with Auto Special Color Composition

Color Replacement and Auto Special Color Composition can be specified at the same time.

Auto Special Color Composition: Special Color Print Area is “Valid Pixel”

When specifying Special Color for Color Replacement, the density of Color Replacement has a priority.

e.g.)

Color Replacement	: Spot color = Special Color 20%	} Print is performed with Spot color = Special Color 20%.
Auto Special Color Composition	: Special color ink density = 50%	

Auto Special Color Composition: Special Color Print Area is “Whole Image”

When specifying Special Color for Color Replacement, the density of Auto Special Color Composition is added to Special color ink density of Color Replacement.

e.g.)

Color Replacement	: Spot color = Special Color 20%	} Print is performed with Spot color = Special Color 70%.
Auto Special Color Composition	: Special color ink density = 50%	

Auto Special Color Composition: Special Color Ink Density is 0%

Special color is not generated by Auto Special Color Composition. The special color that Color Replacement is performed to will white Layer Print for JV3-SP series.

NOTE!

On the “Special Color Adjust” menu, when the special color ink limit curve is adjusted on the “Ink Limit” menu, the value specified for special color density may not be achieved. (☞ P.141)

Method of creating Color Replacement images

Conditions for Images where Color Replacement is Possible

There are some conditions for images to replace the color.

Only CMYK color mode images are supported.


	Image format	Convertible part
Color Replacement of spot colors	EPS, PS, PDF	Vector objects only
Color Replacement of CMYK colors	EPS, PS, PDF	Vector objects only
Color Replacement of gradations	EPS, PS, PDF	Vector objects only
Replacement of one of CMYK color with multiple inks	EPS, PS, PDF, TIFF	Vector and Raster


Creating spot colors


The following explains how to create and use spot colors in Adobe Illustrator 10.

For details, refer to the Adobe Illustrator manual.

- 1 Open the image to edit in Adobe Illustrator.
If the swatches window is not open, select [Window] - [Show Swatches] to display the swatches window.

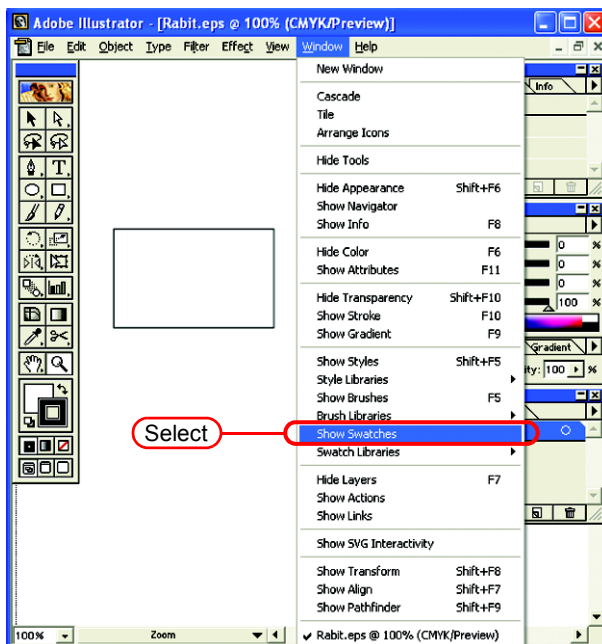


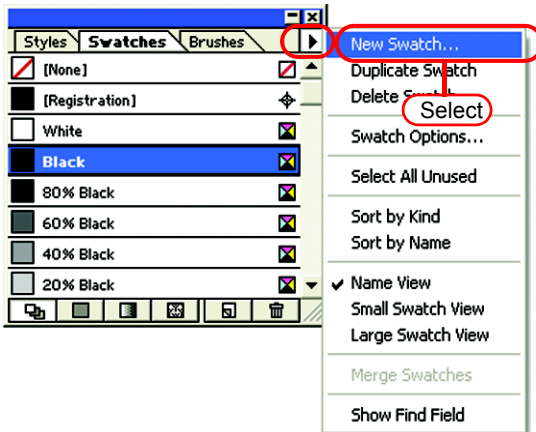- 2 Click the  and select “New Swatch” from the menu.
A new swatch window appears.




- 3 Enter a name in “Swatch Name”.
In “Color Type”, select “Spot Color”.
In Adobe Illustrator CS, select “Special”.

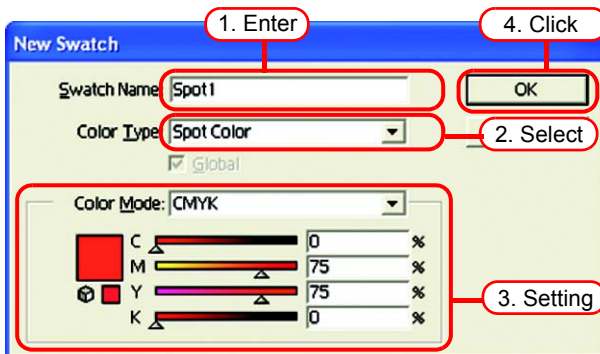In “Color Mode”, select “CMYK” and specify the display color.
Click .




4 A new swatch is created.

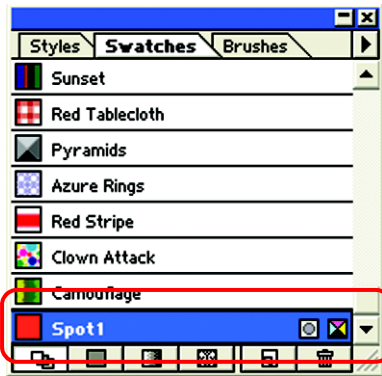To use it, select the created swatch in the Swatches window.



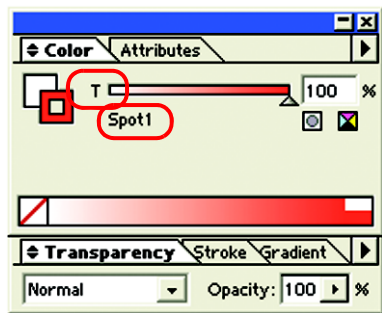In the Color window, the swatch is displayed with [Swatch Name] and [T].




Color Replacement screen

There are three types of Color Replacement screen, “Spot Color”, “Gradation” and “Mono Color”.

Spot Color

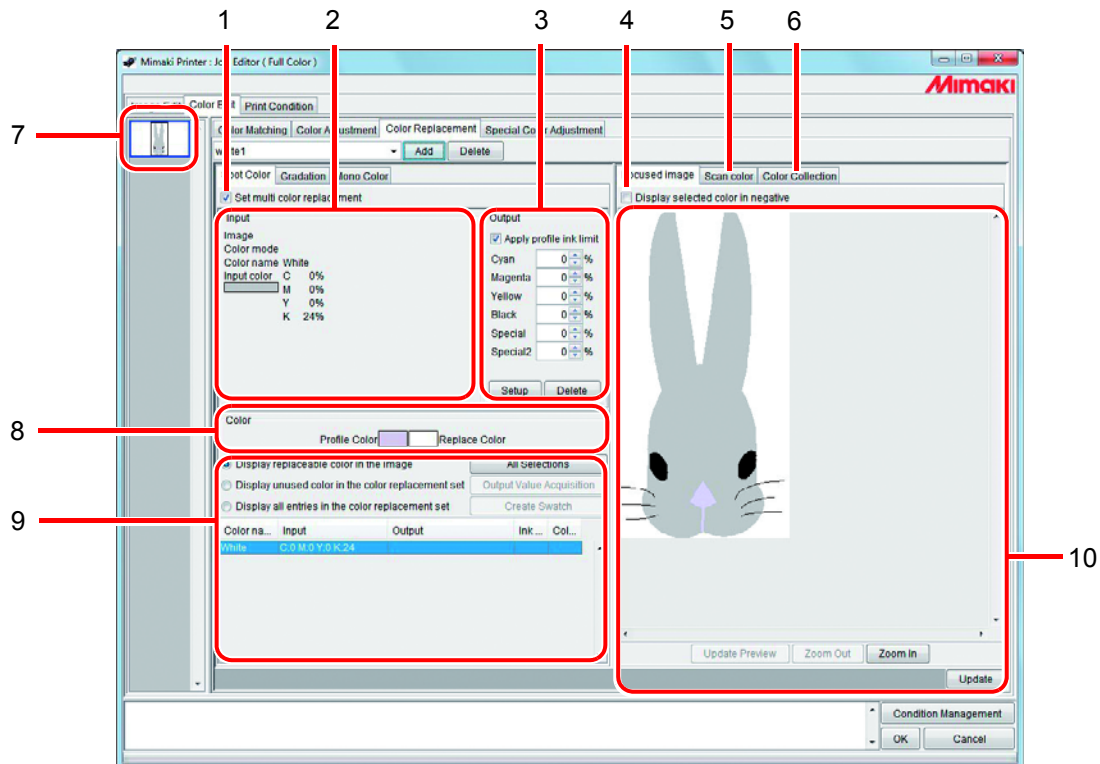Sets color replacement of spot colors and CMYK colors.



1. Set multi color replacement

Allows multi Color Replacement. It is possible to perform Color Replacement of spot colors and gradations.

2. Input information

When the cursor is placed on the preview screen, the color information at the cursor position appears.

Alternatively, the information selected from the Color Replacement information list is displayed.

3. Output information

Set the density after replacement for the colors currently shown in “Input” information. In addition, when [Apply profile ink limit] is checked, print is performed by changing the setting value to the lower one automatically to reduce ink overflow at printing. When you uncheck the checkbox, print is performed as the specified component value, however, printing defect such as blur due to ink overflow tends to occur. Use the device with [Apply profile ink limit] checked as much as possible.

4. Display selected color in negative

When this is checked, colors that are currently editable appear flashing in the preview.

5. Scan color

Scan some of the colors of an original document such as a comprehensive layout, and bring the colors closer.

6. Color Collection

Color Collection shows DIC color information.

7. Thumbnail

Jobs for editing appear as thumbnail images. When editing multiple jobs at the same time, or multiple jobs, selecting an image in the thumbnail list displays it in the preview screen. The replacement information list also displays the information of the selected image.

8. Color

Color shows a profile color (before color replacement) displayed in the current input information and its replacement color (to be generated after color replacement.)

9. Replacement information list

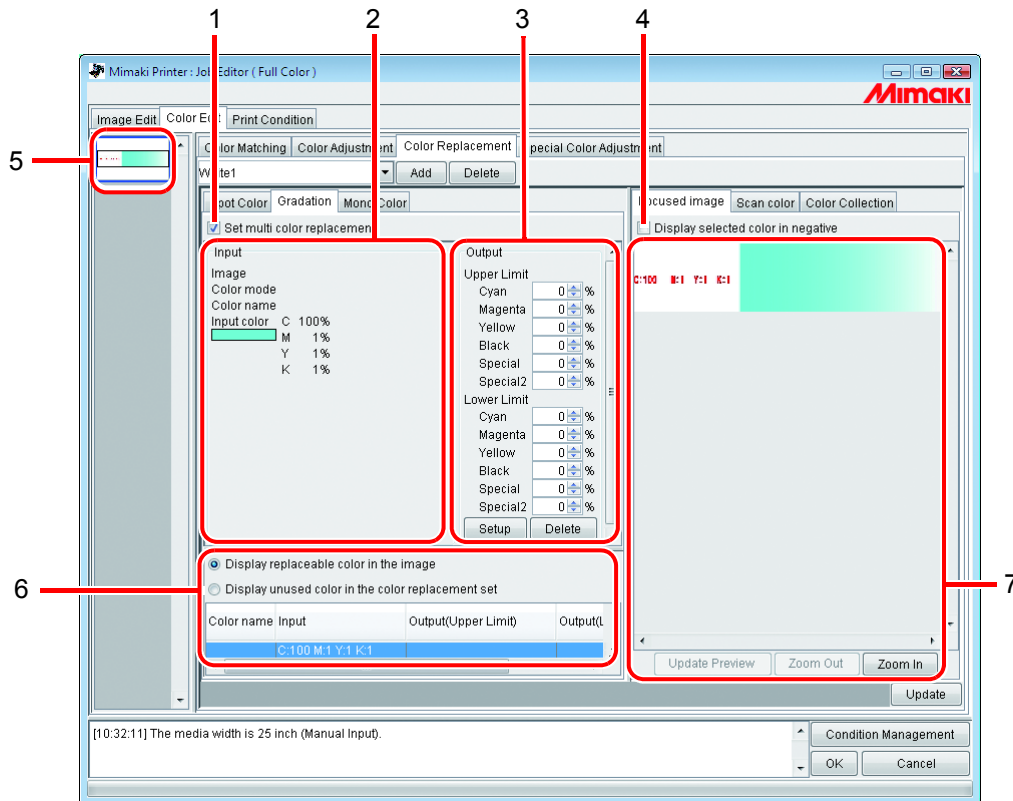
Shows ink information for an input color before replacement and its output color after replacement. Use the set of radio buttons above the list to select information to be displayed. Obtains ink information after replacement (output) from the color collection.

10. Preview screen

Shows a preview of the image. When the cursor is rolled over the preview, the pixel information appears in “Input” information. Clicking the pixel allows the color of the pixel to be edited.

Gradation

Sets Color Replacement of the gradation.



1. Set multi color replacement

Allows multi Color Replacement. It is possible to perform Color Replacement of spot colors and gradations.

2. Input information

When the cursor is placed on the preview screen, the color information at the cursor position appears.

Alternatively, the information selected from the Color Replacement information list is displayed.

3. Output information

Set the density after replacement for the colors currently shown in “Input” information.

The darkest part and lightest part of a gradation respectively can be specified.

4. Display selected color in negative

When this is checked, the areas where the densities of the colors that are currently editable are maximum appear flashing in the preview.

5. Thumbnail

Jobs for editing appear as thumbnail images. When editing multiple jobs at the same time, or multipage jobs, selecting an image in the thumbnail list displays it in the preview screen. The replacement information list also displays the information of the selected image.

6. Replacement information list

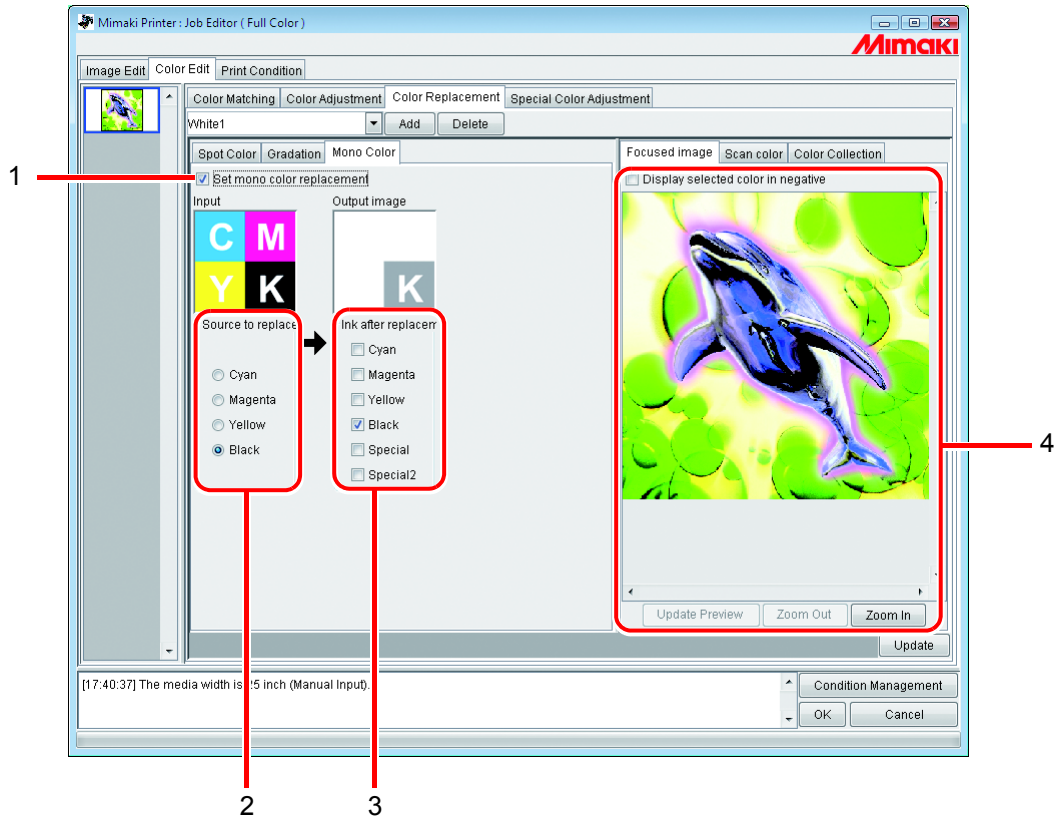
Shows the ink information for the color before replacement and after replacement. The information to display is selected with the radio buttons at the top of the list.

7. Preview screen

Shows a preview of the image. When the cursor is rolled over the preview, the pixel information appears in “Input” information.

Mono Color

Sets Color Replacement of a single color.



1. Set mono color replacement

Allows Mono Color Replacement.

When this is checked, any one color of the input CMYK is allocated to the specified ink.

Light ink cannot be specified.

2. Source to replacement

Specifies the color in the image to replace.


3. Ink after replacement

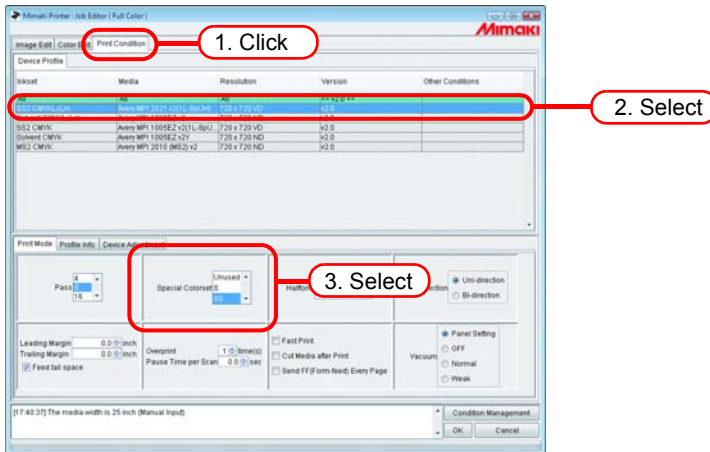
Specifies the color of the ink to use after replacement.

4. Preview screen

Shows a preview of the image.


Create a Color Replacement set

- 1 Click the [Print Condition] menu.
Select a Device Profile for which to create a Color Replacement set.
If the model selected has a special color slot, select “Special Colorset”.
Refer to  P.149 for “Special Colorset”.



Color Replacement set are created for each combination of Device Profile and Special Colorset.

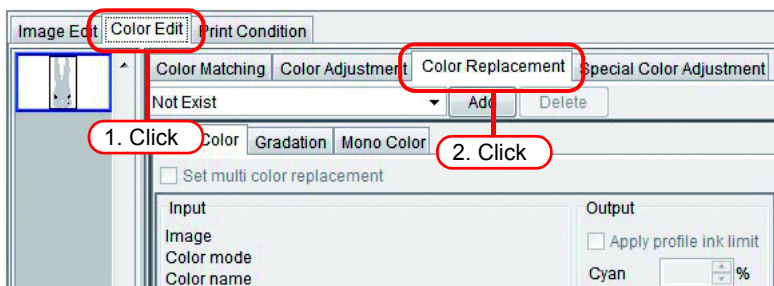
- 2 Click the [Color Edit] menu.
Click the [Color Replacement] menu.




3 Enter a name in the Color Replacement set name field.

(NOTE!) The following characters cannot be entered.
 \ / : * ? " < > |

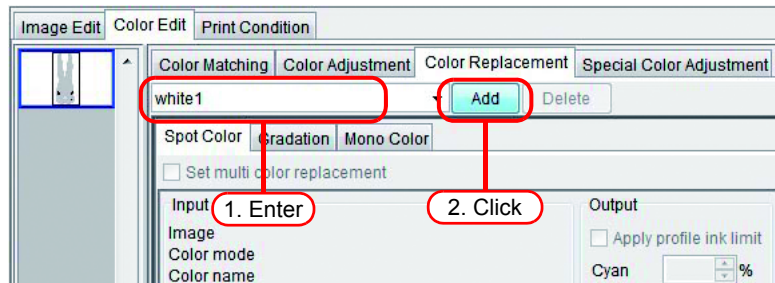Click .




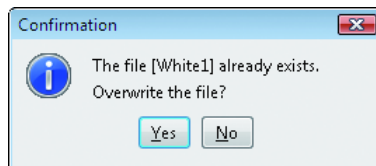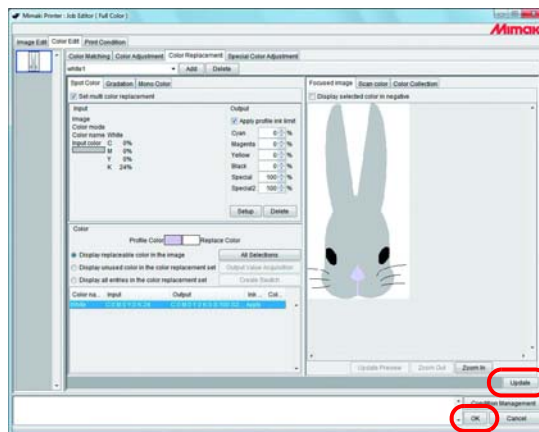If a Color Replacement set with the same name already exists, an overwrite confirmation message is displayed.




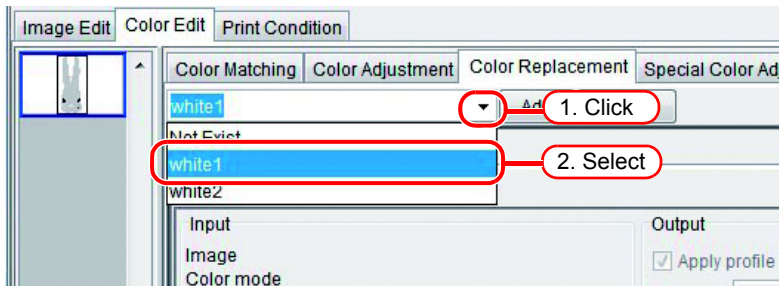
Update a Color Replacement Set

To update the Replacement information, click or , and finish the “Job Editor”.



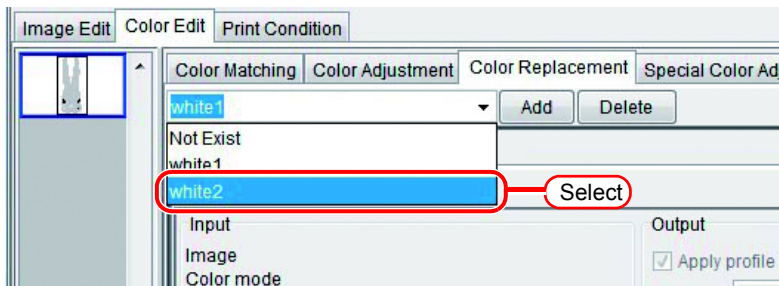
Select a Color Replacement set


Click  in the Color Replacement set name input box at the top of the [Color Replacement] menu, and display and select from the list.




Delete Color Replacement set


- 1 Open the “Job Editor” and open the [Color Replacement] menu. Select a Color Replacement set to delete.



- 2 Click  .

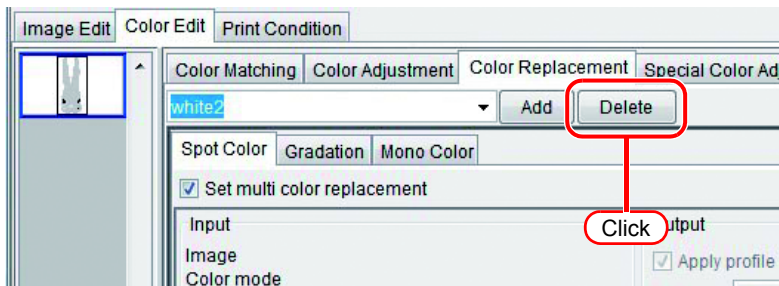

- 3 The set is deleted.

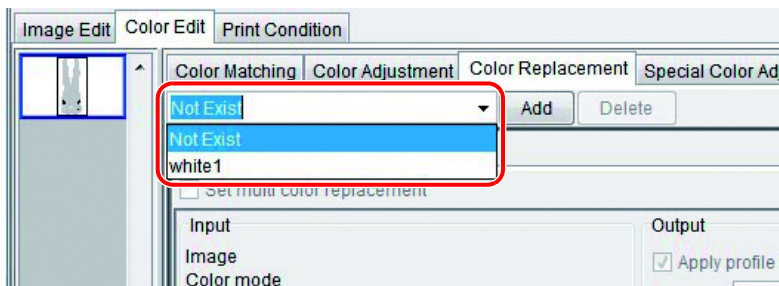

Replacing spot colors and CMYK colors

This section explains the spot colors and CMYK colors replacement method.

NOTE!

- When replacing CMYK colors, if the same color is being used for a different vector object, that color will also be changed.
- Replacement of colors where Adobe Illustrator filter effects such as drop shadows, transparency, and gradations are applied may not be performed correctly.
- RasterLink data output from FineCut or SimpleStudio may have the following spot colors added.

Do not specify color replacement for these spot colors.

“MPC_FRAME_DATA”, “Mimaki Register Mark”, and “Around Mimaki Register Mark”

Specify the original color for replacement

There are two methods to specify this.

When the original color for replacement is specified, the replacement information setting screen can be edited.

To replace multiple colors, check “Set multi color replacement”.

- (1) Select from the Replacement information list

Select the color name from the list for replacement.

Spot colors and registered CMYK colors are displayed.

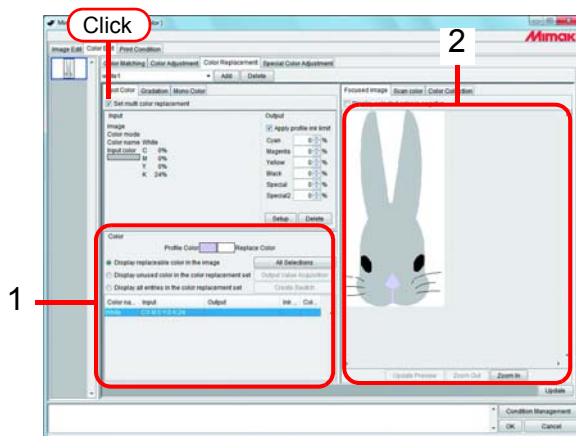
- (2) Select from the Preview screen

Place the cursor over the Preview screen, and click the location for Color Replacement.

Since CMYK colors are not initially displayed in the Replacement information list, select this method.

NOTE!

When a original color is specified, until it is unselected, the color information specified by the cursor on the preview cannot be displayed on the input screen.



Unselect the original color for replacement

There are two methods for unselecting the color.

- (1) When the Replacement information list is selected, press the key.

- (2) Place the cursor over the preview, and right click.

Create ink information after replacement

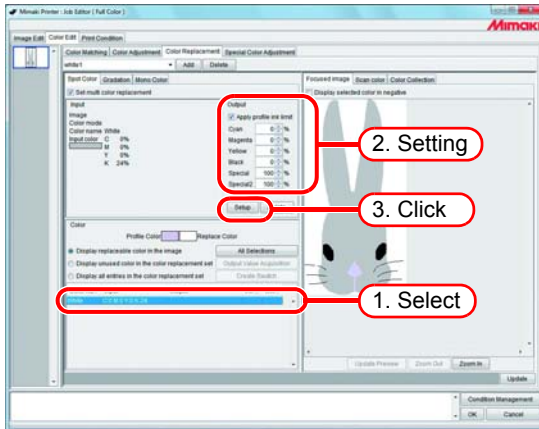
There are two ways to create ink information after replacement: entering an ink density manually, and retrieving it from a color collection.

Entering Ink Density Manually


- 1 Select the original color to replacement.

In the “Output” information screen, enter the ink density for the color of the ink to use.

Click .



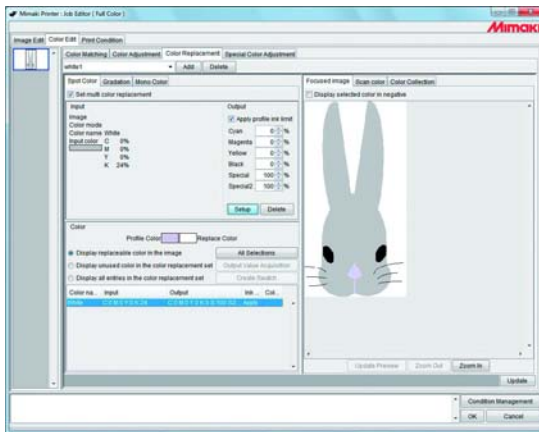- 2 The Color Replacement information is set.




NOTE!

The color reproducibility for DIC colors (output values) in a color collection varies, depending on the currently selected device profile as follows:


- For version 3.0 device profiles containing highly accurate color replacement information:
Colors closer to DIC colors can be reproduced.
- For other device profiles:
Accurate colors may not be reproduced.

Retrieving from a color collection1

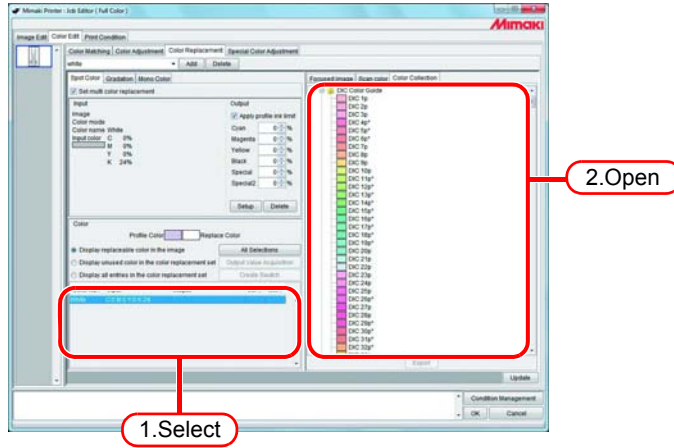- 1 Select a color to be replaced.
On the Color Collection screen, open a color collection folder for color replacement.



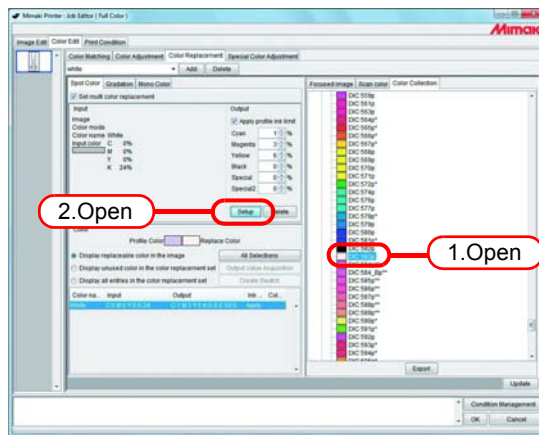- 2 Select a color patch.
Click .
The color replacement information is set.




Obtain ink information from color collection2

If the original color to be replaced is a DIC spot color registered in a color collection, the appropriate output value can be automatically retrieved from the color collection without needing to set an individual output value.

1 Click **All Selections**.

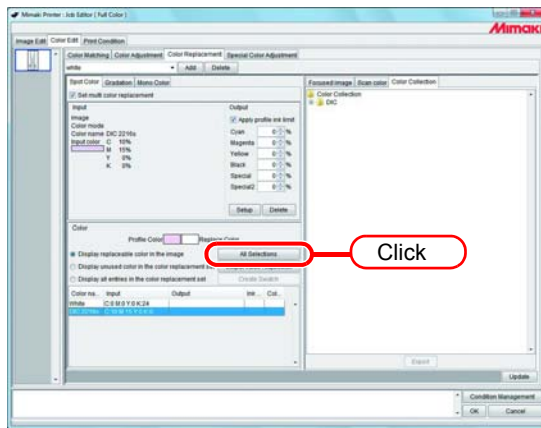
You can select an individual color to be replaced from the list.



2 Click **Output Value Acquisition**.

If the original color to be replaced is a DIC color, and its replacement color is beyond the color reproducibility of the printer, the color difference between the original color and its replacement color is shown.

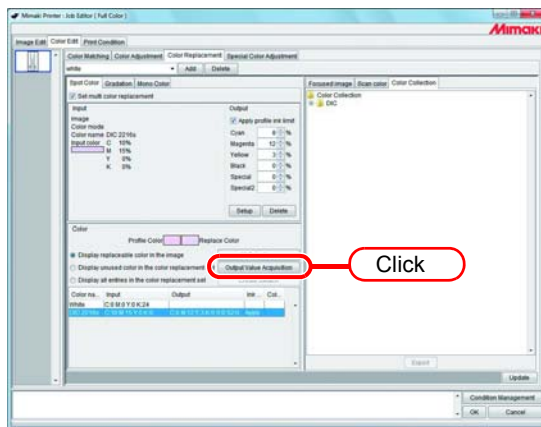-> This indicates that the DIC color cannot be reproduced.



The color replacement information is set.

Retrieving from a color collection3

Colors other than DIC colors in an image can also be retrieved from a color collection and registered into the current color replacement definition file.

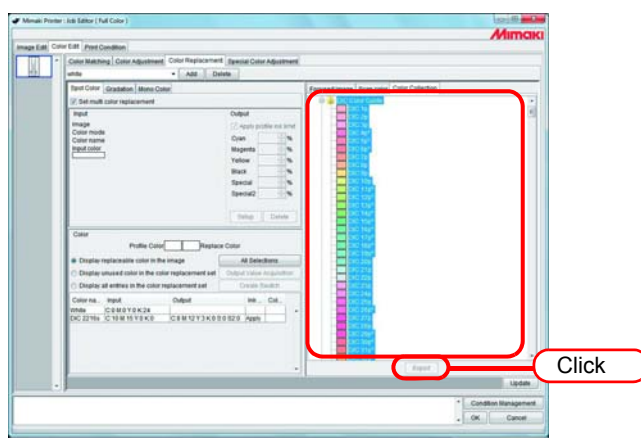
This eliminates the need for setting individual color replacement values by using the color replacement definition file if DIC colors in the image match spot colors registered in the file.

1 On the Color Collection screen, open a color collection folder for color replacement.


Select a color patch.

Press the key + key on your keyboard. (You can select more than one patch, pressing the key.)

Click .



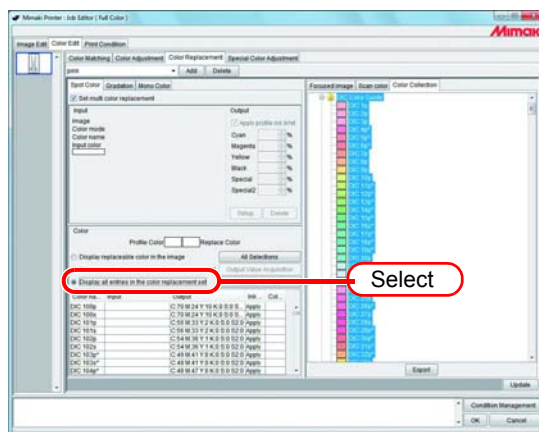2 Select “Display unused color in the color replacement set”.
The output values for the spot colors not in the image are set.



NOTE!

Following are cautions when using spot colors with changed density in an image.

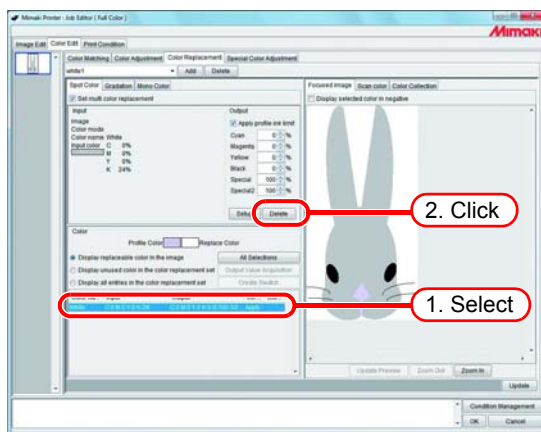
- RasterLinkPro5 sets ink density with respect to a spot color density of 100%. The ink density is calculated automatically based on the spot color density.
Example:
If a special color called Spot (display color given by C=100, M=0, Y=0, K=0) is printed at 100% density in one area and at 50% in another in Illustrator, and the ink density for Spot is set to C=0, M=80, Y=20, K=0 in RasterLinkPro5, the ink density for Spot in the area printed at 100% becomes C=0, M=80, Y=20, K=0 and the ink density for Spot in the area printed at 50% becomes C=0, M=40, Y=10, K=0.
- The color for a spot color displayed in the Color Replacement information list may be different from the display color specified in Illustrator.
This is because the input color of the spot color displayed in the Color Replacement information list displays the colors matched to the density of the spot color detected first on the image in RasterLinkPro5.
Example:
If a special color called Spot (display color given by C=100, M=0, Y=0, K=0) is printed at 100% in one area and at 50% in another in Illustrator, and RasterLinkPro5 detects first the area where Spot is printed at 50%, the display color for Spot in the Color Replacement information list is set to C=50, M=0, Y=0, K=0.
- Rolling the cursor over a spot color on the preview screen displays the display color that matches the spot color density under the cursor in “Input”. However, if the mouse is clicked, the information displayed in “Input” becomes the content of the Color Replacement information list independently of the density of the spot color at the clicked point.

Delete ink information after replacement

Select the replacement information to detect the ink information after replacement.

Click on the “Output” information screen.

The Color Replacement information is deleted.




Switch displays

Replacement information list

The Replacement information list can be changed as follows.


Display replaceable color in the image

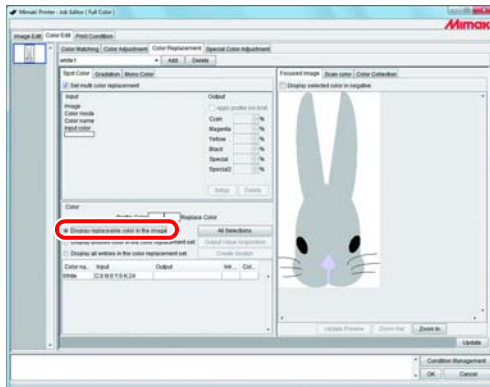Display the color replacement definition whose color replacement can be specified in the color replacement set.




Display unused color in the color replacement set

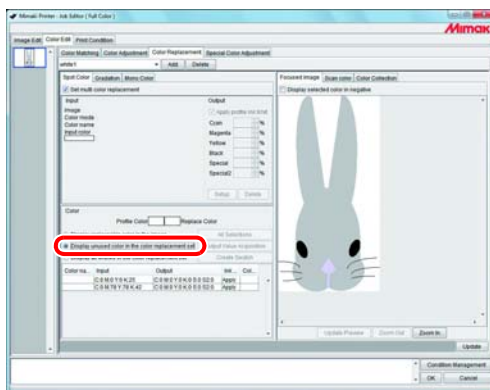Display the color replacement definition whose color replacement cannot be specified in the color replacement set.



Display all definitions in the color replacement set

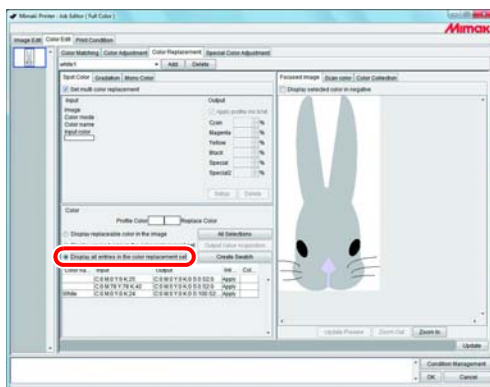Display all color replacement definition information in the color replacement set.




Preview

When [Display selected color in negative] is checked, colors that are currently editable appear flashing in the preview.

NOTE!

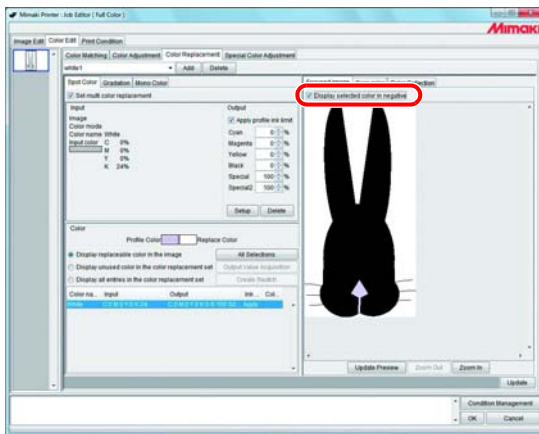
- When [Display selected color in negative] is checked, even when colors for editing are changed, colors that were previously selected appear flashing. To change the locations that appear flashing for reselected colors, click **Update Preview**. Alternatively, check [Display selected color in negative] again.
- When gradation replacement is displayed in negative, only high density parts appear in negative.



Create the swatch library

When you click the **Create Swatch** button, you can create a swatch library using contents registered in the [Color replacement set].

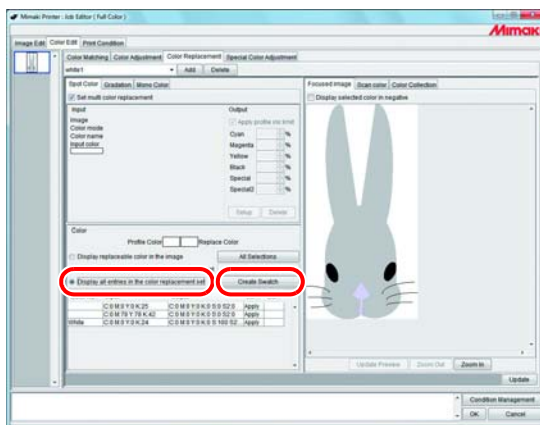For the creation method, refer to Reference guide - Common features for every printer “Create the swatch library”. (👉 P.112)



Replacing gradations

Restrictions on gradations for which Color Replacement is possible

The following restrictions apply to gradations for which Color Replacement is possible.

- Only vector objects created with Illustrator
- Color Replacement cannot be performed for vector objects created with Illustrator that are treated as follows
 - * Objects with “split, extention” applied
 - * Rasterized objects
- Color Replacement cannot be performed for gradations created with Photoshop and for Rasterized gradations.

The colors of gradations that can be specified are as follows.

The combination of maximum density and minimum density of gradations are as follows.

Maximum density (%)

C	M	Y	K
100	1	1	1
1	100	1	1
1	1	100	1
1	1	1	100

Minimum density (%)

C	M	Y	K
0	1	1	1
1	0	1	1
1	1	0	1
1	1	1	0



NOTE!

- If a midpoint is introduced between the maximum density and minimum density of a gradation by “Gradation slider” and the color is changed, color replacement cannot be performed.
- Color Replacement of gradations that include a lot of clipping paths may not be performed correctly.
- Color Replacement of gradations that use Illustrator filter effects such as Drop Shadows and Transparency may not be performed correctly.
- Illustrations with the same colors as those included in the gradation are also replaced.

Example:

Maximum density C = 100, M = 1, Y = 1, K = 1

Minimum density C = 0, M = 1, Y = 1, K = 1

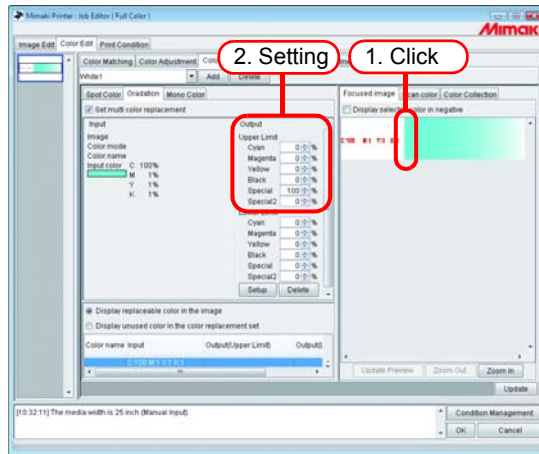
If a C = 50, M = 1, Y = 1, K = 1 illustration is included in the data, it will be color replaced.

- Even if the setting of replacing gradations seems can be performed on the “Gradation” screen, the replacement will not be performed depending on the data. Check if the replacement will be performed or not, by reduced print in advance without fail.
- When the Illustrator setting “Compatible Gradient and Gradient Mesh Printing” is checked, gradation replacement cannot be set.


Gradation replacement settings

The settings for Color Replacement of gradations are similar to those for spot colors.


- 1 Click the maximum density part of the gradation on the preview screen.
The selected color in the Replacement information list is displayed in negative.
Specify the maximum density area of the ink density after replacement.



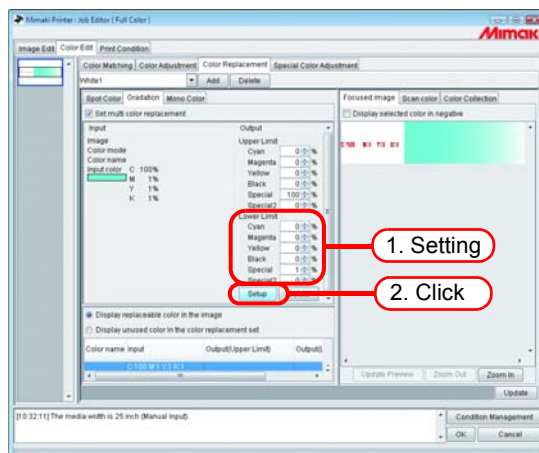- 2 Next, specify the minimum density area of the ink density after replacement.
Click .



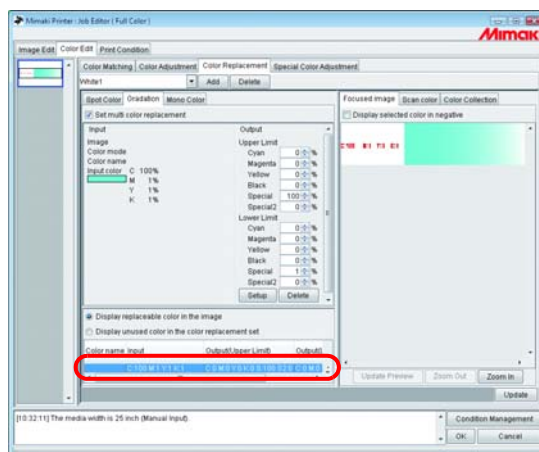- 3 The Color Replacement information is set.




Mono Color Replacement

Open the “Job Editor” and display the [Color Edit] - [Color Replacement] - [Mono Color] menu.

Check “Set mono color replacement”.

From “Source to replacement”, select a color to replace.

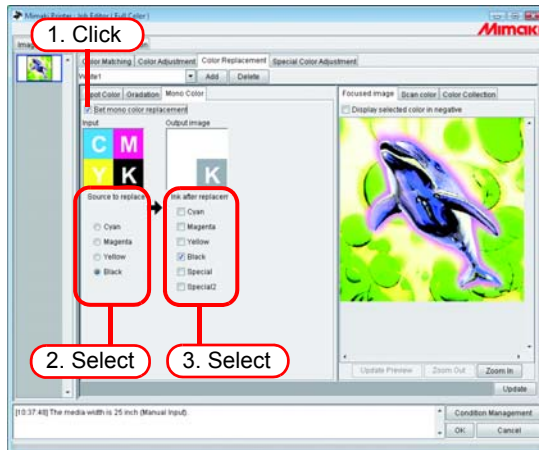From “Ink after replacement”, select ink colors to use for output.



Acquire the color from original document (Scan color)

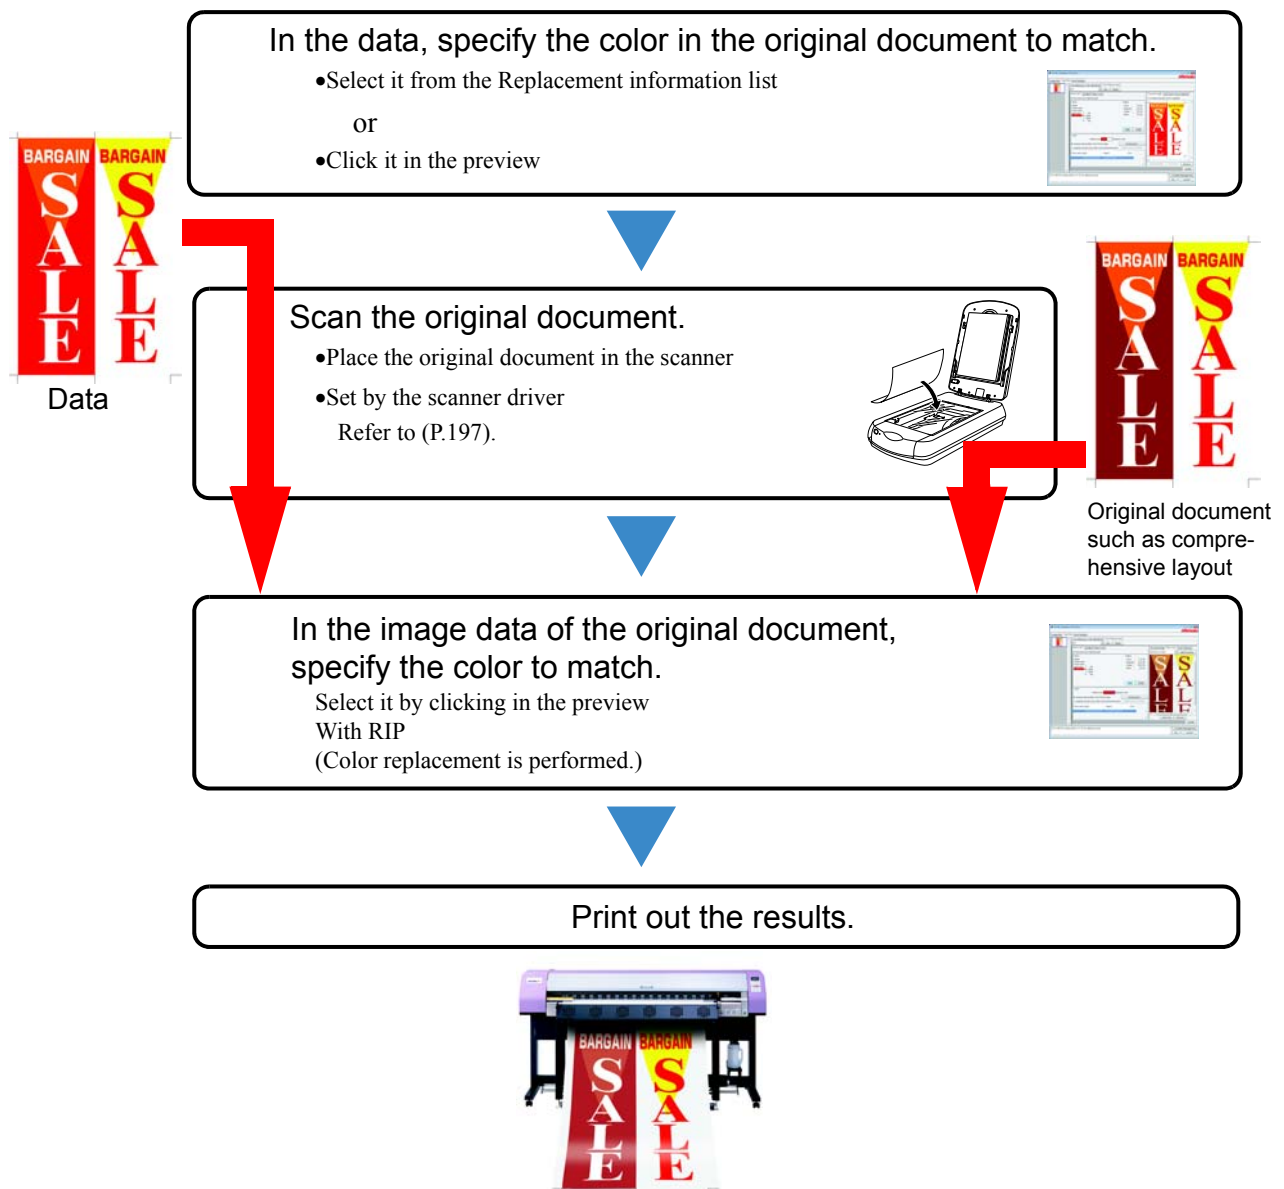
The scanner can be used for specifying the color after Color Replacement. For the types of scanner that can be used, refer to “The color acquisition function and supported scanners” (P.197).

NOTE!

- With this function, color matching with the color read by the scanner is not guaranteed. Be sure to check the colors with a small sample.
- Depending on the original document, the scanner may not be able to scan the colors correctly.
- The range of colors that can be brought closer differs according to the print conditions (Device Profile).
- Color Replacement with a spot colors and CMYK colors only is possible.

Outline of color acquisition

The procedure for color acquisition is as follows.



Color acquisition

Color acquisition operates as one function of Spot Color Replacement. With Spot Color Replacement, a value for ink density after the source to replacement is replaced is specified, but with this function, instead of the ink density setting after replacement, the color information scanned with the scanner is set.

- 1 Click the [Spot Color] menu.
Select the color to be replace.

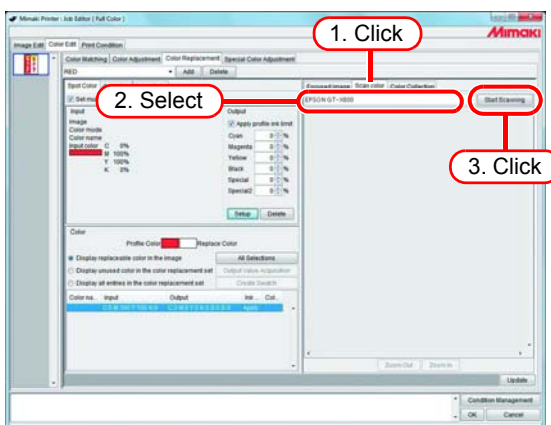
1. Select from the Replacement information list
Select the color name or CMYK value from the list for Color Replacement.
2. Select from the Preview screen
Place the cursor over the Preview screen, and click the location for Color Replacement.



- 2 Click the [Scan color] menu.
Select the type of scanner to use.

Check that the scanner is turned on, and click **Start scanning**.

The scanner driver screen (TWAIN screen) appears.




3 Place the original document in the scanner and scan it.

Set the scanner driver according to “Scanner driver settings” (P.198), and scan the original document.

NOTE!

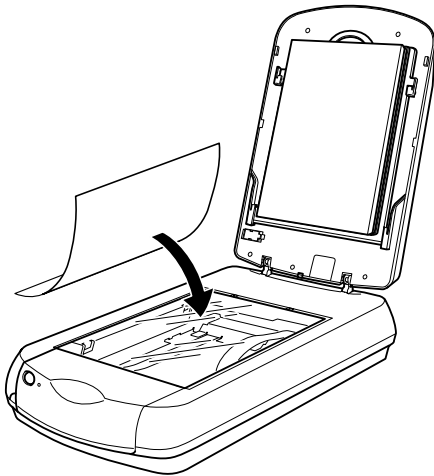- When scanning the image data, it is necessary to use the settings for color acquisition set in the scanner driver screen (TWAIN screen). The settings differ according to the type of scanner. For details, refer to “The color acquisition function and supported scanners” (P.197).
- Refer to the manual packaged with the scanner for how to operate the scanner.




4 The scanned image data appears in the preview.

Use **Zoom In** and **Zoom Out** to display the color area to acquire, and click the color.


The value where clicked is set as the ink density after replacement.



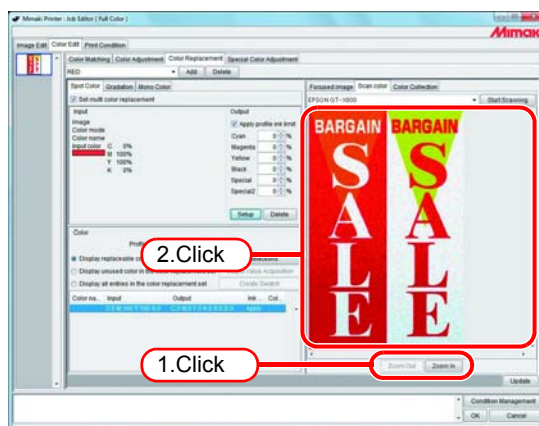Click a part that the color is uniform.



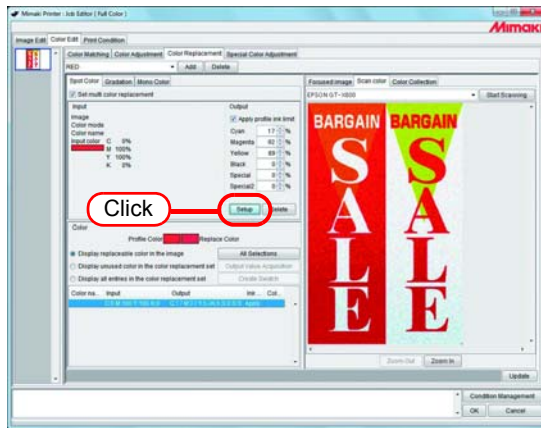5 Click **Setup** to set the color acquisition information.



Color Collection

Printing by Approximating DIC Color Guide

This chapter describes how to create data in Adobe Illustrator and how to configure the RasterLinkPro5 for the situation where you are printing using the RasterLinkPro5 approximating the DIC color guide.

Configuration Procedure

1. Create spot color data in Illustrator

In Adobe Illustrator, create data by specifying DIC color guide in the swatch library



2. Configure the RasterLinkPro5

Configure the RasterLinkPro5 to perform color replacement on the DIC color guide spot color created using Adobe Illustrator

Create spot color data in Adobe Illustrator

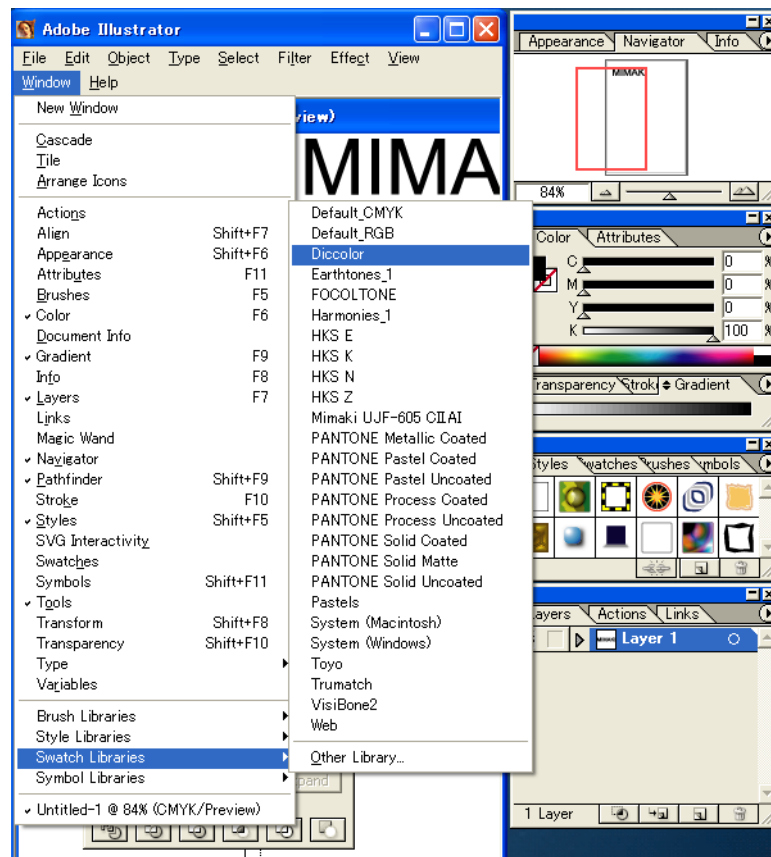
NOTE!

Although this manual describes the procedure for Adobe Illustrator 10, the configuration method is the same as Illustrator 8, 9, CS, CS2, CS3, CS4, and CS5.


- 1 Open the data that specifies the spot color in Adobe Illustrator.
Select [Window] - [Swatch Libraries] - [Diccolor] from the menu to display a list of the DIC color guide swatch library.



- For Adobe Illustrator CS2, select [Window] - [Swatch Libraries] - [Diccolor Guide] from the menu.
- For Adobe Illustrator CS3 to CS5, select [Window] - [Swatch Libraries] - [Color Books] - [Diccolor Guide] from the menu.



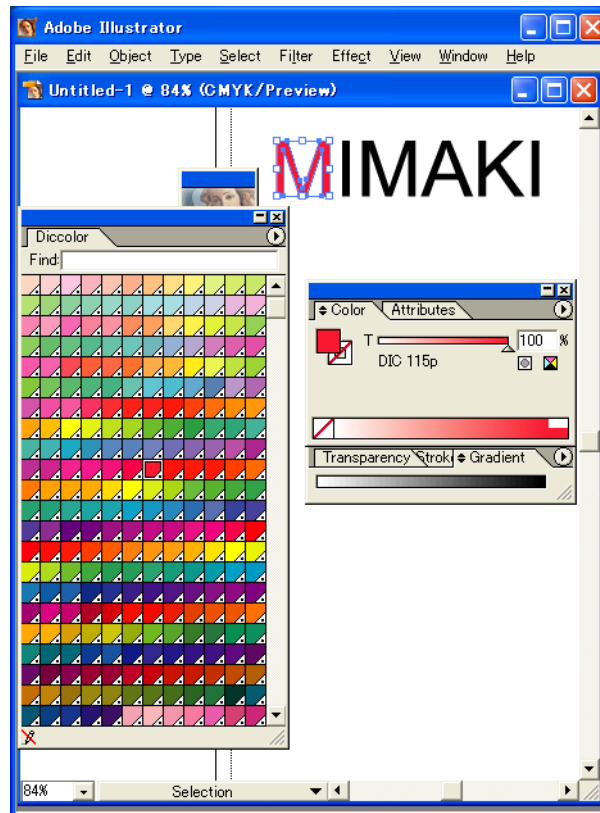- 2 Select the artwork you want to set to the DIC color, and select any color from the DIC color guide swatch library list.




- 3 Save the data as printer driver output or as EPS, then copy the data to the hot folder.

Configuring the RasterLinkPro5


Use the RasterLinkPro5 to perform color replacement and print a data created in Adobe Illustrator that specifies a DIC color guide spot color.

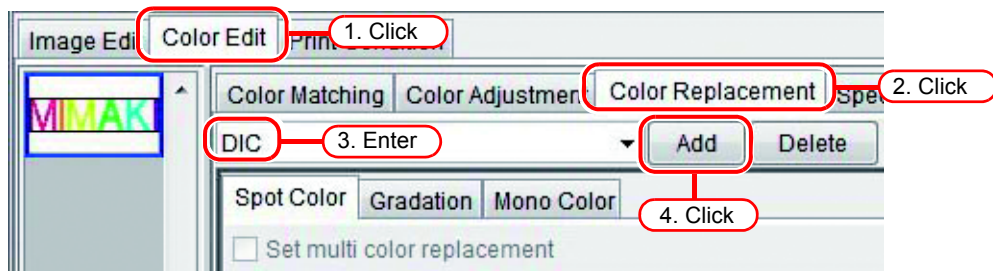- 1 Spool the data to the RasterLinkPro5 and open Job Editor.
- 2 Open the "Color Replacement" tab in the "Color Edit" tab and create a color replacement set.




3 Specify the color replacement information.

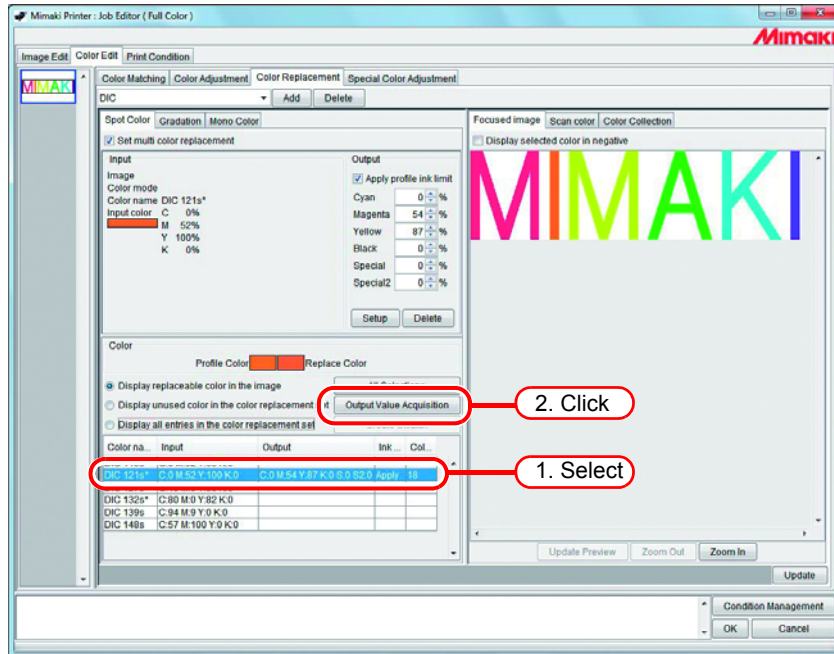
- To perform color replacement on a selected color name (P.112 Obtain ink information from color collection2)
Select the color name for color replacement, and click the **Output Value Acquisition** button.



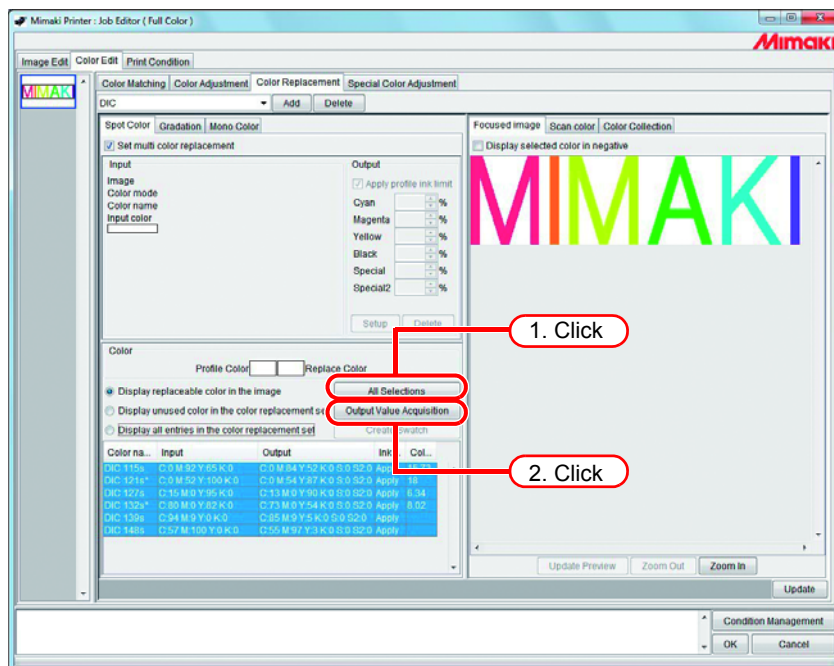- To perform color replacement on all color names (P.112 Obtain ink information from color collection2)
Click the **All Selections** button and then click the **Output Value Acquisition** button.



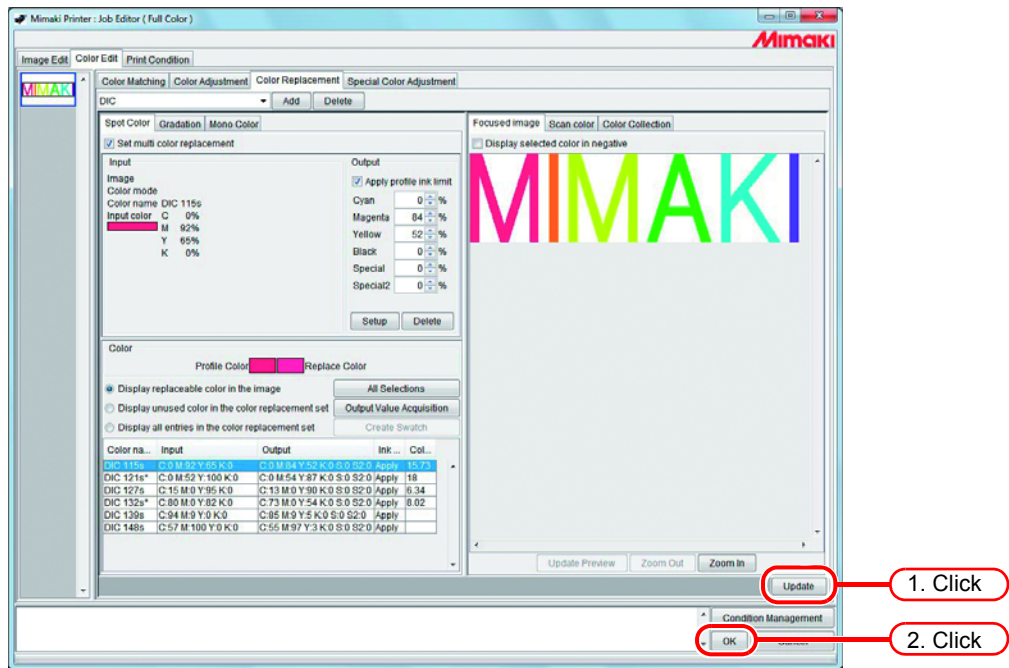4 Click the **Update** and **OK** buttons to save the job settings.




5 Execute the printing.



The RasterLinkPro5 has 4 color collections that support the Adobe Illustrator DIC color guide. You can check the details of the color collections by selecting [Color Edit] - [Color Replacement] - [Color Collection].

Adobe Illustrator version	DIC Color Guide name	Color Collection name
8 - CS	DIC Color Guide	DIC 1p - DIC 654p*
	DIC Color Guide PART2	DIC 2001p - DIC 2638p
CS2 - CS5	DIC Color Guide CS2	DIC 1s - DIC 654s*
	DIC Color Guide PART2 CS2	DIC 2001s - DIC 2638s

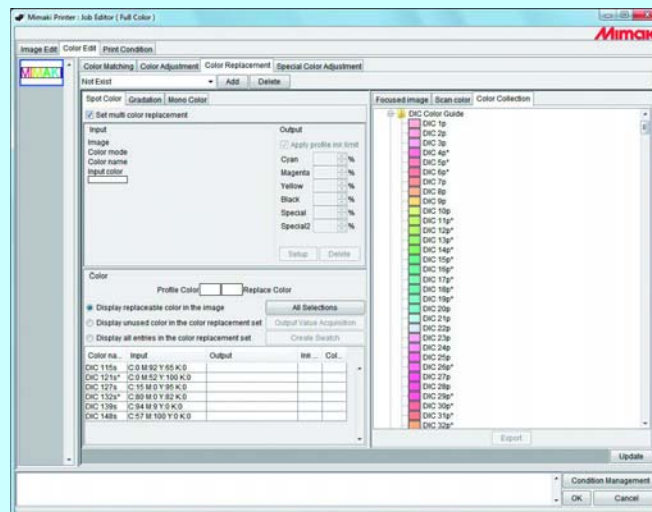


Special Color adjustment

To perform special color adjustment, [Print Condition] - [Print Mode] - [Special Colorset] must be selected.


Emphasize highlights with special color

Image highlights can be emphasized with special color. This is effective for making highlights stand out when printing on transparent film.

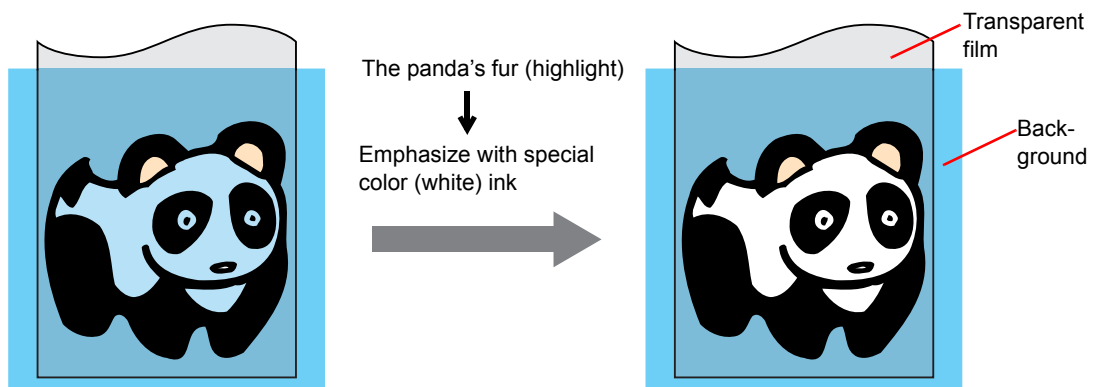
Adjustment is possible for both CMYK images and RGB images.



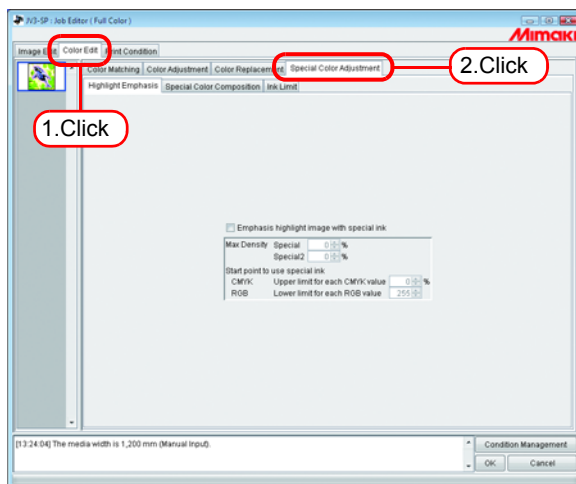- 1 Click the “Color Edit” menu.
Click the “Special Color Adjustment” menu.




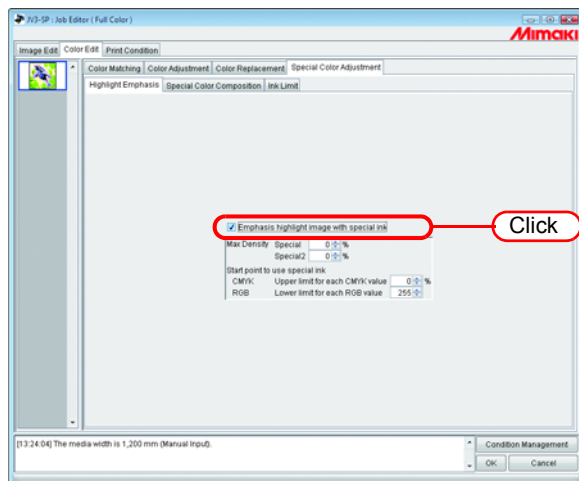2 Check “Emphasis highlight image with special ink”.




3 Specify a maximum print density of special ink between 0 and 100% for printing the highlight.

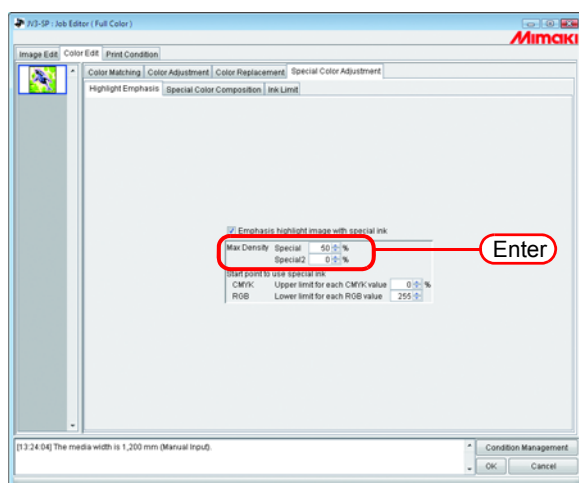For maximum density, only the number of special color inks selected in the special colorset can be specified.



The maximum density specified here is the density of the location with the least amount of ink in the highlight area (i.e. pure white). The density of special color ink is calculated and adjusted automatically according to the amount of ink of the highlight area.

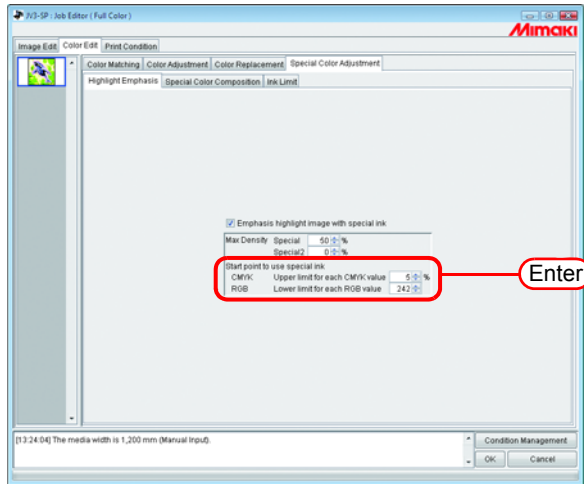
- 4** Specify the point of the highlight area to start printing with special color ink.
- For CMYK images, specify a range of 0 to 20% for each color as the upper limit. Highlight areas lower than this value will be printed with special color ink.
- For RGB images, specify a range of 204 to 255 for each color as the lower limit. Highlight areas higher than this value will be printed with special color ink.



Automatically create a special color layer (Auto Special Color Composition - JV3-SP series/JV33/CJV30/ UJV-160/JV400)

Print a “color image” overlapping a “single color special ink image (special color layer), automatically created based on the color image”.

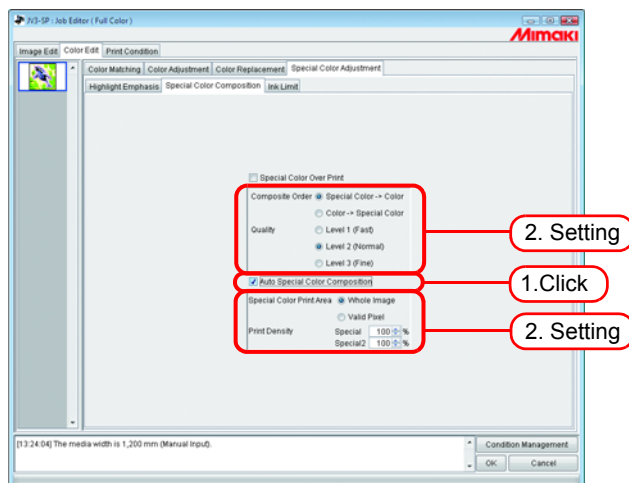Using this function, an image can be white layer print.



“Composite Order”

“Special Color -> Color”:

Outputs the special color layer first, then the color layer on top of it.

“Color -> Special Color”:

Outputs the color layer first, then the special color layer on top of it.

“Quality” (JV3-SP series/JV33/CJV30/JV400)

Select the print quality.

“Level1” increases the printing speed, but compared with “Level3”, print quality is lower.

“Level3” raises the print quality, but compared with “Level1”, printing speed is lower.

Level	Printing speed	Print quality
1	High	Low
2	Normal	Normal
3	Low	High

“Color for Over Print” (JV33/CJV30)

Specify special color inks used for Color for Over Print.

The colors that are not specified as special color inks are printed using the color inks.

The number of special color inks selected in the special colorset can be specified.

NOTE!

The same setting is used for all the grouped jobs of “Composite Order”, “Quality”, and “Color for Over Print”.

“Special Color Print Area”

“Whole Image”:

Outputs a special color layer of the same size and shape surrounded by a dotted line in the layout preview.

“Valid Pixel”:

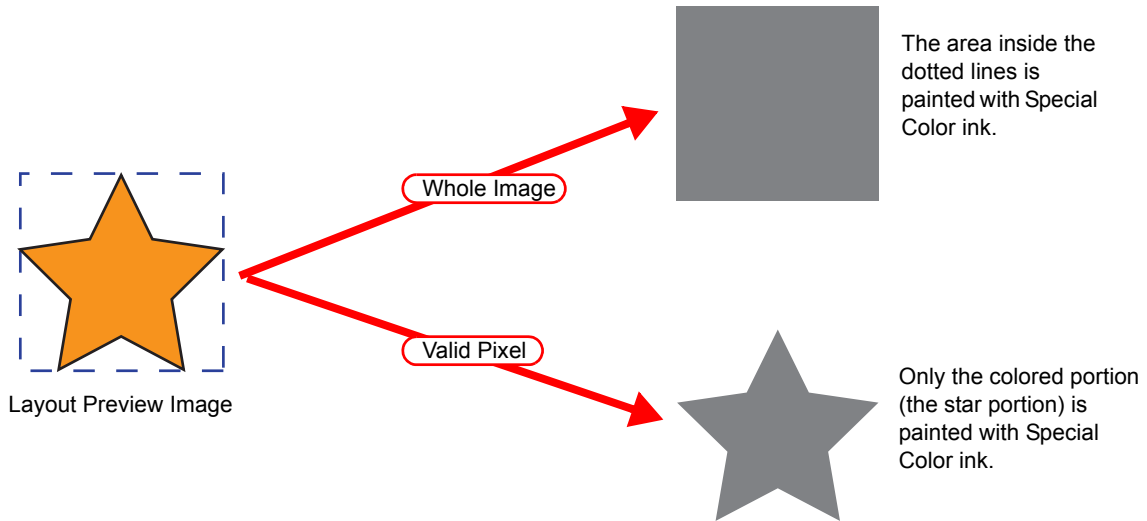
Outputs a special color layer with only the colored parts of the image.

“Print Density”

Specify a density of special ink between 0 and 100% for outputting the special color layer. For print density, the number of special color inks selected in the special colorset can be specified.

Example of “Auto Special Color Composition”

On the “Layout Preview”, set the image as shown below:



NOTE!

When specifying “Valid Pixel” and the image has a blank part (highlighted part without color), the special color will not be printed on that blank part. In this case, also use the “Emphasize highlights with special color” function (☞ P.130) at the same time.

Example of “Composite Order”

The image as shown below on the “Layout Preview” will be output as follows:

“Special Color Print Area” Whole Image

“Composite Order” Special Color -> Color



Layout Preview Image



[1]
The square area shown with the dotted line in the “Layout Preview” is fully printed with special color ink.

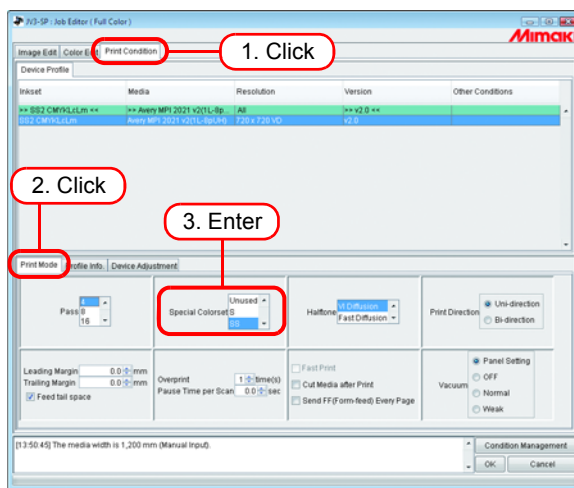


[2]
The Color Layer is output overlapping the special color Layer.

Specify and create a special color block (Manual creation - JV3-SP Series/JV33/CJV30/UJV-160/JV400)

Print a “color image” overlapping a “special color ink image (special color block)”. With this function, white layer printing is possible in any position you specify.


- 1 Group a color image and a special color ink image (☞ P.74).
- 2 Click the “Print Condition” menu.
Click the “Print Mode” menu.
Select a special color set.




- 3 Set the color replacement for the special color ink in the special color ink image (☞ P.96).

NOTE!

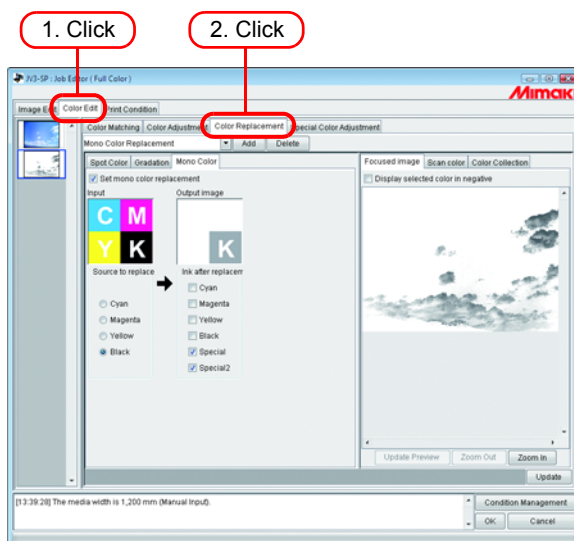Using image editing software such as Adobe Photoshop, create an image in gray scale mode with black /white reversed. You can replace single colors with a special color using the RIP single color replacement function.



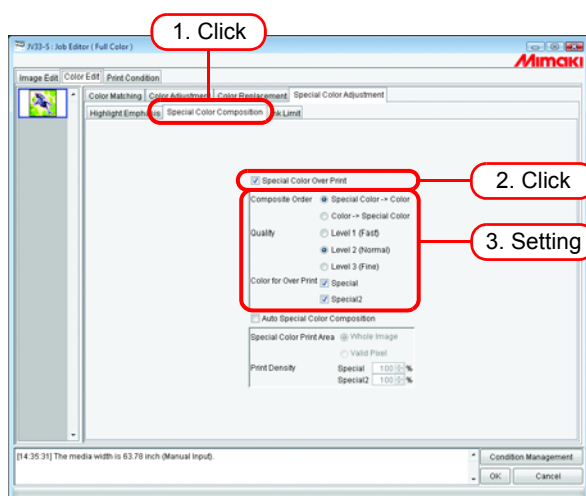- 4** Click “Special Color Composition” menu.
Specify “Special Color Over Print”.
Set “Composition Order”, “Quality” and “Color for Over Print”(JV33/CJV30).



[Composite Order]

Special Color -> Color: Outputs the special color block first, then the color block on top of it.
Color -> Special Color: Outputs the color block first, then the special color block on top of it.

[Quality] (JV3-SP Series/JV33/CJV30/JV400)

“Level 1” increases the printing speed, but compared with “Level 3”, print quality is lower. “Level 3” increases the print quality, but compared with “Level 1”, printing speed is lower.

Level	Printing speed	Print quality
1	High	Low
2	Normal	Normal
3	Low	High

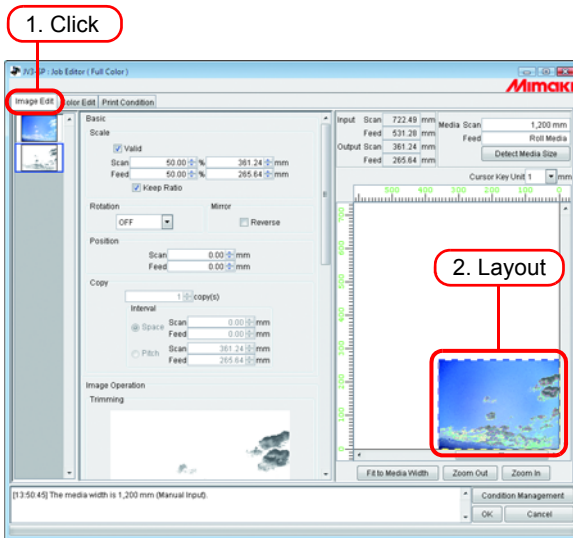
[Color for Over Print] (JV33/CJV30)

Specify special color inks used for Color for Over Print.


The colors that are not specified as special color inks are printed using the color inks.

The number of special color inks selected in the special colorset can be specified.

- 5** Click “Image Edit” menu.
Make a layout with a color image and a special color ink image overlapping.



- 6** Click .

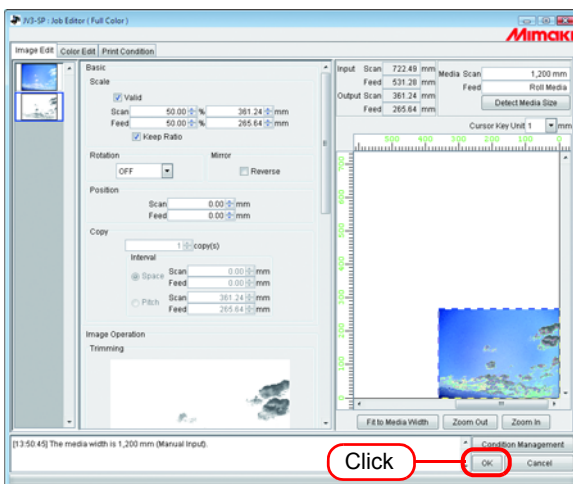

Editing Ink Limit

You can edit the amount of special colors. The specified values can be registered as a special color adjustment set.

Creating a special color adjustment set

Create a special color adjustment set for each special color set.

- 1 Click the [Color Edit] menu.
Click the [Special Color Adjustment] menu.
Click the [Ink Limit] menu.
Enter a name for the special color adjustment set.


NOTE!

Important The following single byte characters cannot be used for special color adjustment set names.

\ / : ? " < > |

Click .

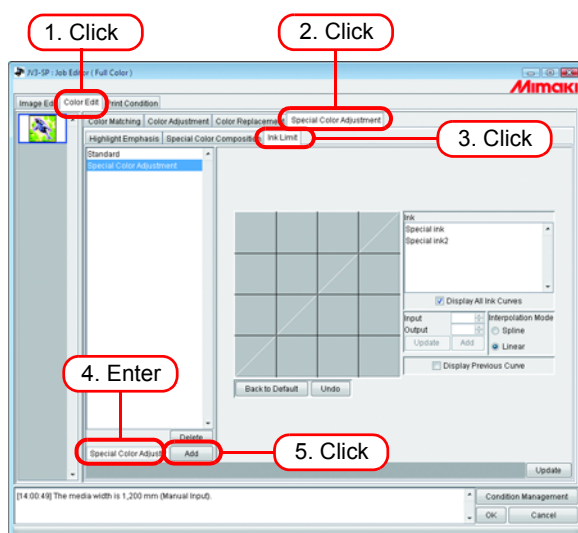If a special color adjustment set with the same name already exists, an overwrite confirmation message is displayed.




- To create a new special color adjustment set, select “Standard”. Then enter a set name, and click .
- To copy a previously registered special color adjustment set, select the set to edit and after changing the set name, click .

Deleting a special color adjustment set


Click a registered special color adjustment set.

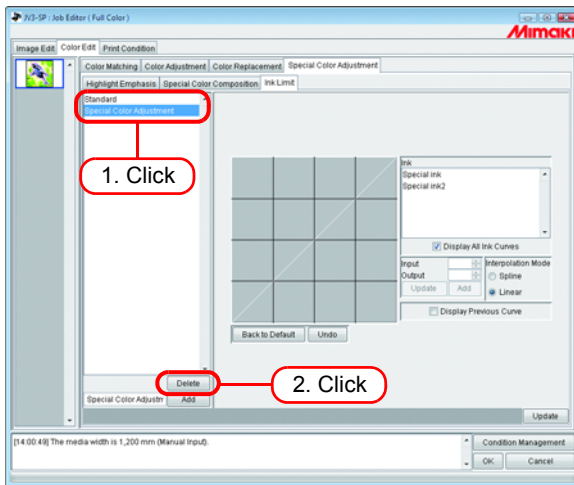Clicking deletes the selected color adjustment set.



Updating a special color adjustment set

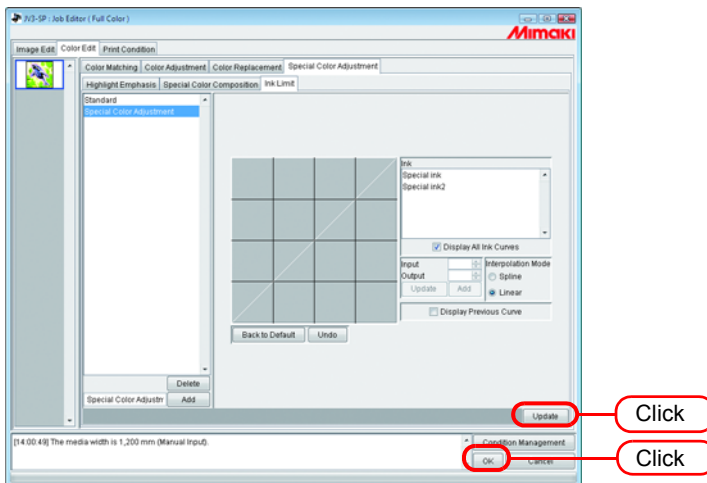To update the special color adjustment set that is set, click or , and finish the Job Editor.



NOTE!

When a special color adjustment set is updated, the changes are also applied to other jobs that use the same special color adjustment set. If the changes are applied to a different job with already RIPped data, if "Print only" is performed the print results may differ. Either perform RIP again, or update the special color adjustment set or create a new one.

Adjust the ink curve

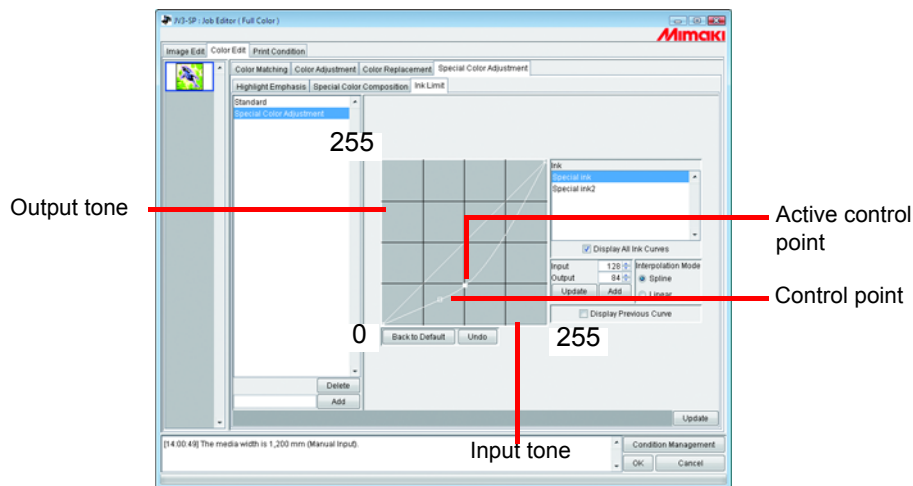
Display the special color ink curve selected in “Special Colorset”. The horizontal axis shows the ink density before adjustment (input tone), and the vertical axis shows the ink density (output tone) after adjustment. Both vertical and horizontal axes display a range from 0 to 255. If the output tone is less than 0, it is set to 0. Furthermore, if it is more than 255, it is set to 255. Click a point to adjust on the ink curve to make a control point. You can add up to 30 points. Selected control points change from outline rectangles to solid rectangles.




The operation for setting the ink curve is the same as that for CMYK ink. (👉 P.89)

NOTE!

Ink curves for special colors are applied to Color Replacement only. They are not applied to Auto Special Color Composition, Automatic Clear Composition, and Emphasis highlight with special ink.



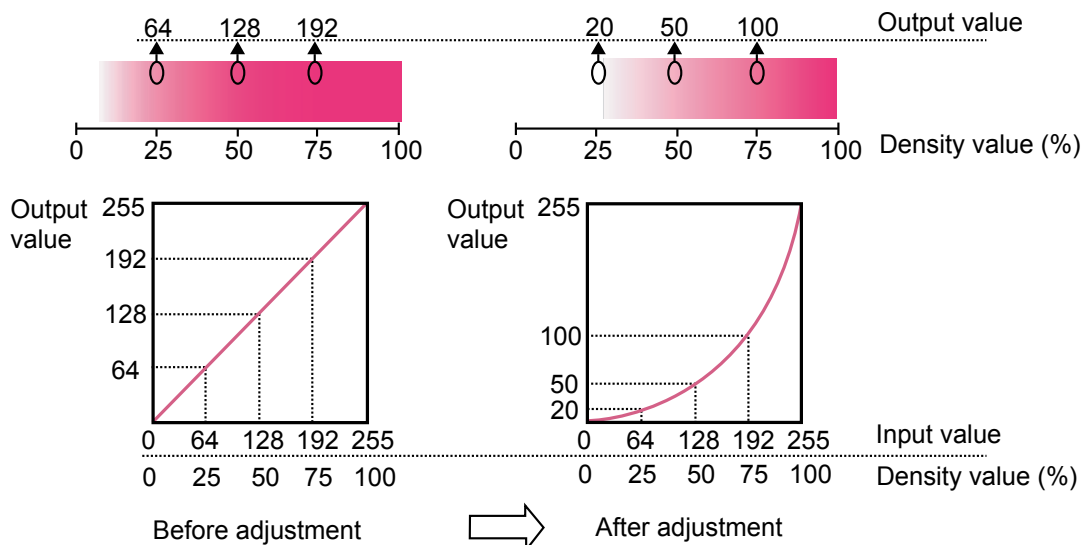
An example of ink curve application when using special colors on the “Gradation” menu in the “Color Replacement” menu.



Special color image correction function

When you wish to solve the following problems, set the special color image correction function.

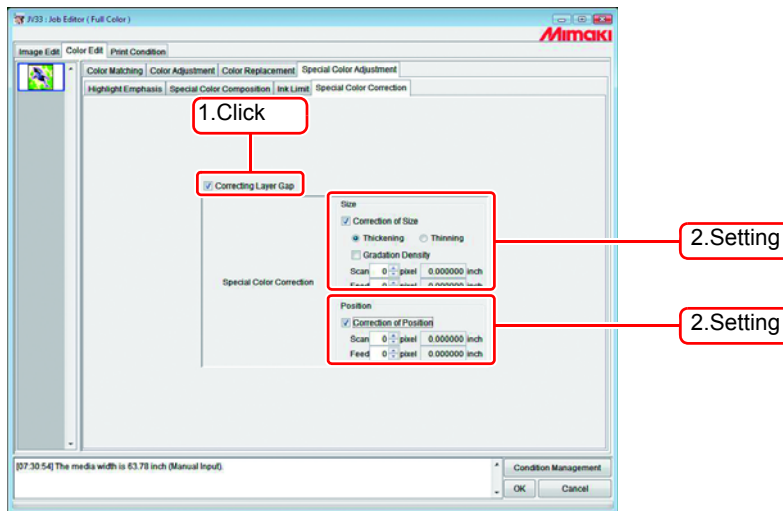- When you print special color images (white) and color images by overlapping them, they may be misaligned in some cases, and when you wish to correct this
- When you wish to print the white ink image a little smaller because white ink printed on the base is printed outside the color image



[Correction of size.]

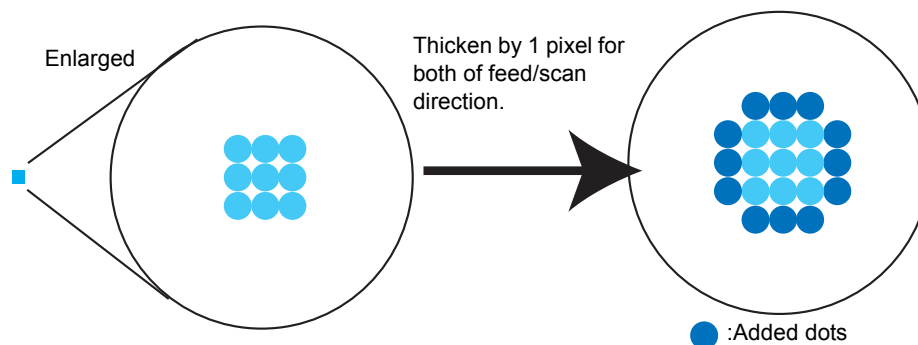
Correct the size of the special color image.

Thickening : Thicken the special color image by the specified pixels (for feed/scan direction).

Thinning : Thin the special color image by the specified pixels (for feed/scan direction).

Gradation Density : This becomes enable when [Thickening] is selected. The ink density of thickened part changes outwards in gradation.


Ex.: When you set the special color image to thicken by 2 pixels for both of feed/scan direction



[Correction of position.]

Move the special color image position by the specified pixels of feed/scan direction.

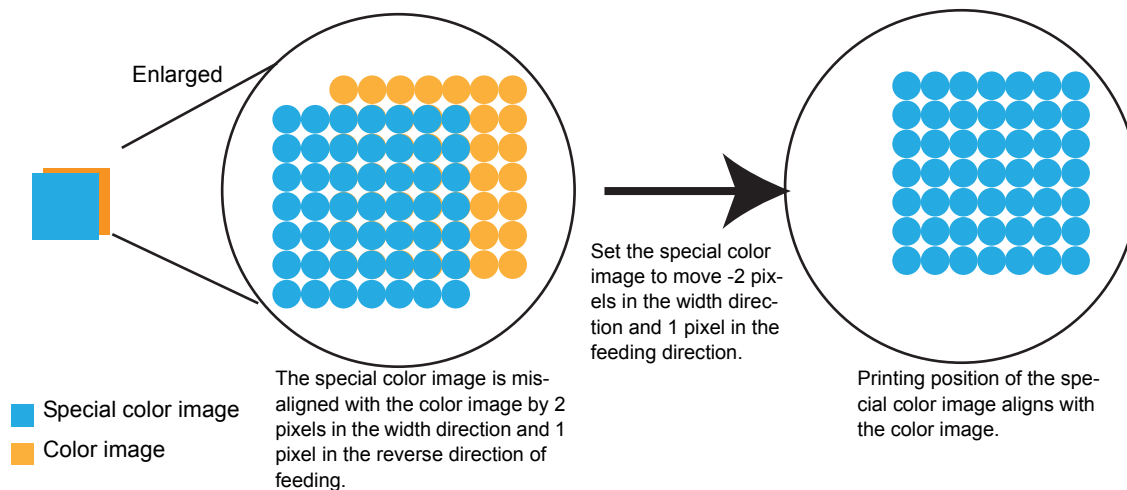Ex.: When color image and special color image are misaligned as below:

**NOTE!**

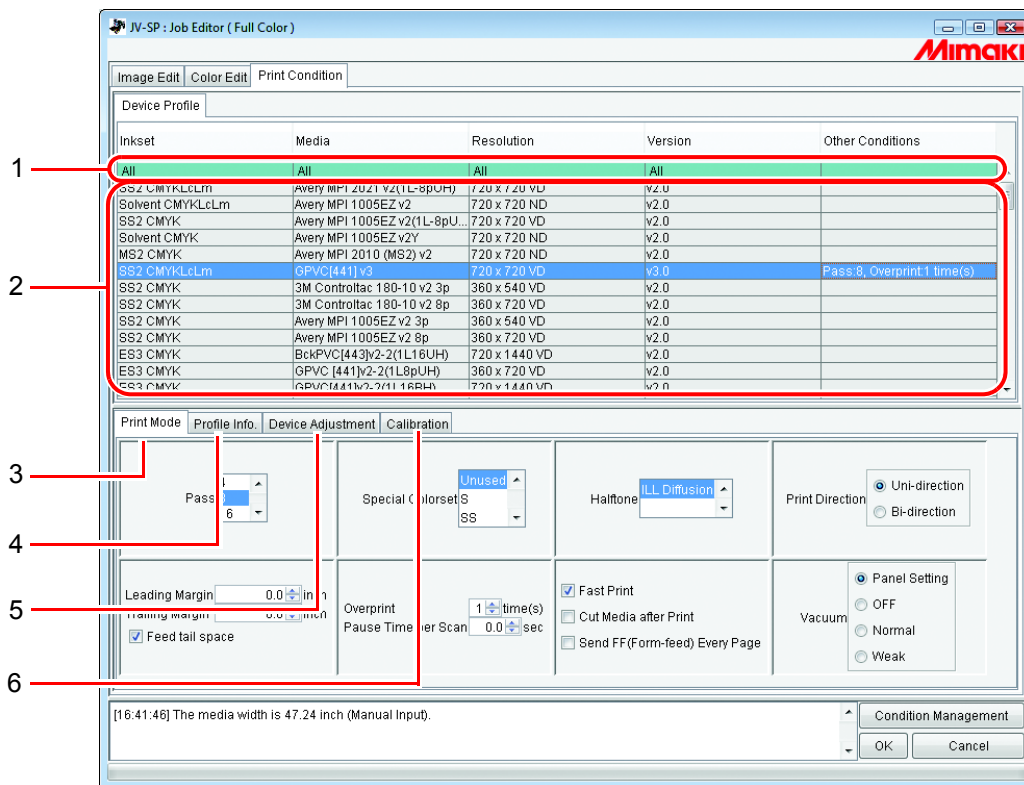
- When you set the followings in the image editing screen, special color correction cannot be performed:
Copy, cut line printing, register mark printing, double-sides printing and paneling
- Special color correction cannot be performed in the following jobs:
Has several pages, RIP split image and application split image job
Though you performed imposition on several jobs, the overlap printing is set to OFF.
- The value of the special color correction is not reflected on the preview of the image editing screen.
- When you print on both sides, uncheck the box of “Printed Information Label” - “Add Label”. If printed information label is added at printing on the front side, the printed position may be misaligned to the feeding direction by the amount of the printed information label at printing on the back side.

Editing Print Condition

Set the print conditions.

NOTE !

If multiple jobs are set to Group, all the jobs become same print condition. When you print using the printing condition set by the RasterLinkPro5 SG, be sure to set the “Priority Order” of the printer main body to “HOST”. If you set it to “PANEL”, the printing condition set by the RasterLinkPro5 SG is ignored, and printing will be performed using the printing condition set at the printer side. (For the details of setting method of “Priority Order”, refer to the operation manual of the printer.)



1. Refining the device profile

Displays the refined device profile. (P.147)

2. Device Profile list

Indicates profiles for optimum printing.
Click and select the profile to be used.

NOTE !

Select the device profile depending on the ink set of the printer main body. For example, when you fill up six-color ink in the printer main body, even if you select the seven- or eight-color device profile at the RasterLinkPro5 SG side, you cannot print properly.

NOTE!

- The available resolution depends on the Device Profile that is pre-installed.
In case the corresponded Device Profile is not exist, install the appropriate profile. (The corresponded profile may not be preinstalled.)
- Device profiles contain the recommended print condition settings (number of passes/number of overprints/print direction/whether fast printing). If conditions other than these are used, a suitable print quality cannot be obtained.

Device profiles are created with the optimal conditions for each media, so use the device profile for the media you are using. If the media and device profile do not match, a suitable print quality may not be able to be obtained.

Use the following procedure to set the recommended values of the device profile as the print conditions.


When the profile version is V3:

Select the profile to automatically set the recommended values.

When the profile version is V2:

Select the profile to set the initial values. These values are not the recommended values of the profile. For a profile with the recommended values included in the media name, follow the instructions below to set the recommended values as the print conditions.

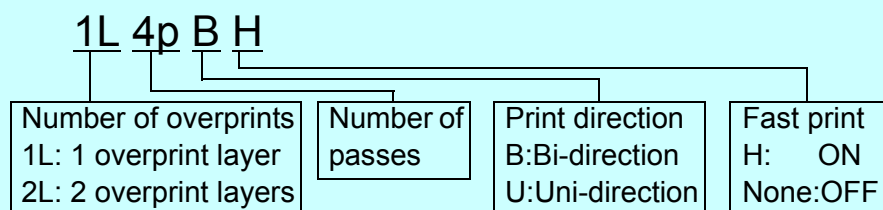Example 1: If the media name is “UV-PET v2(1L4pBH)”, the values in parentheses are the recommended values.



* If a hyphen (-) is inserted between the number of overprint layers and number of passes, the values are basically the same as the above.

Example 2: If the media name is “PVC Gloss(1Layer)”, the value in parentheses indicates the number of overprint layers.

1Layer: 1 overprint layer
2Layer: 2 overprint layers

In the case of a profile that does not include the recommended values in the media name, perform a test print with the initial values, and change the print condition settings if you determine the print quality to be poor.

3. [Print Mode] sub menu

Set the various print mode. (☞ P.148)

4. [UV mode] sub menu [Profile Info] sub menu

Displays the information of a Device Profile. (☞ P.151)

5. [Device Adjustment] sub menu

Set the Feed Correction and Heater Temperature value. (☞ P.152)

6. [Calibration] sub menu (☞ P.155)

The Calibration submenu appears if the currently selected device profile is of version 3.0 and it contains calibration and/or equalization information.

Specify whether calibration and/or equalization information are to be applied or not for a RIP process.

Calibration (Info):Adjusts the colors of the current printer to match those in its specific state such as its initial state (and information for calibration).

Equalization (Info): Adjusts the colors of the current printer to match those of a target printer (and information for equalization).

NOTE!

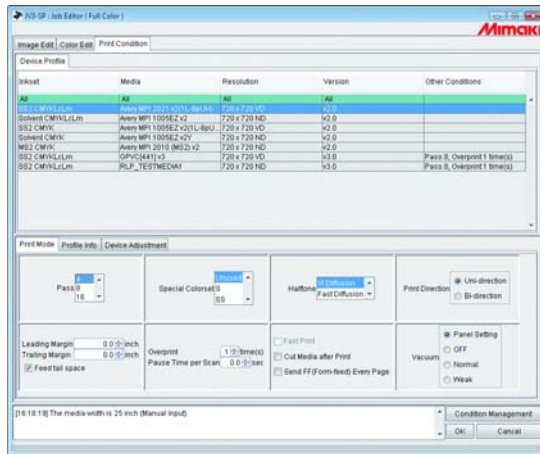
To use these features, a version 3.0 device profile needs to be created with the Mimaki-supplied profile creation software called "MimakiProfileMaster II", and it needs to contain calibration and/or equalization information.

The Mimaki-supplied version 3.0 device profile does not contain calibration or equalization information.


Device Profile Refined Display

Displays the information included in the profile such as inkset, media, resolution, version to display refined profiles that meet the specified conditions.

Specify the conditions for refining your search in the first, green row of the list.




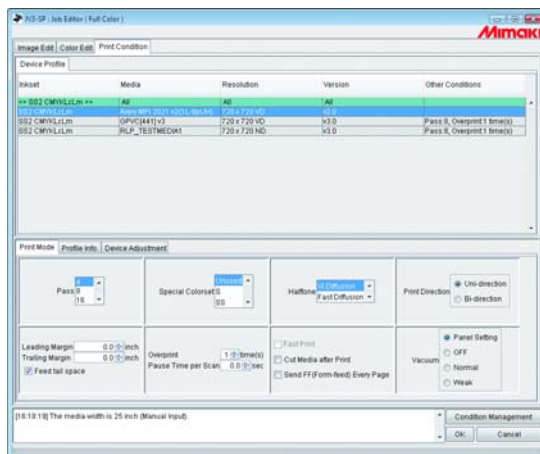When Inkset refines the SS2 CMYKLcLm profile



[Print Mode] sub menu

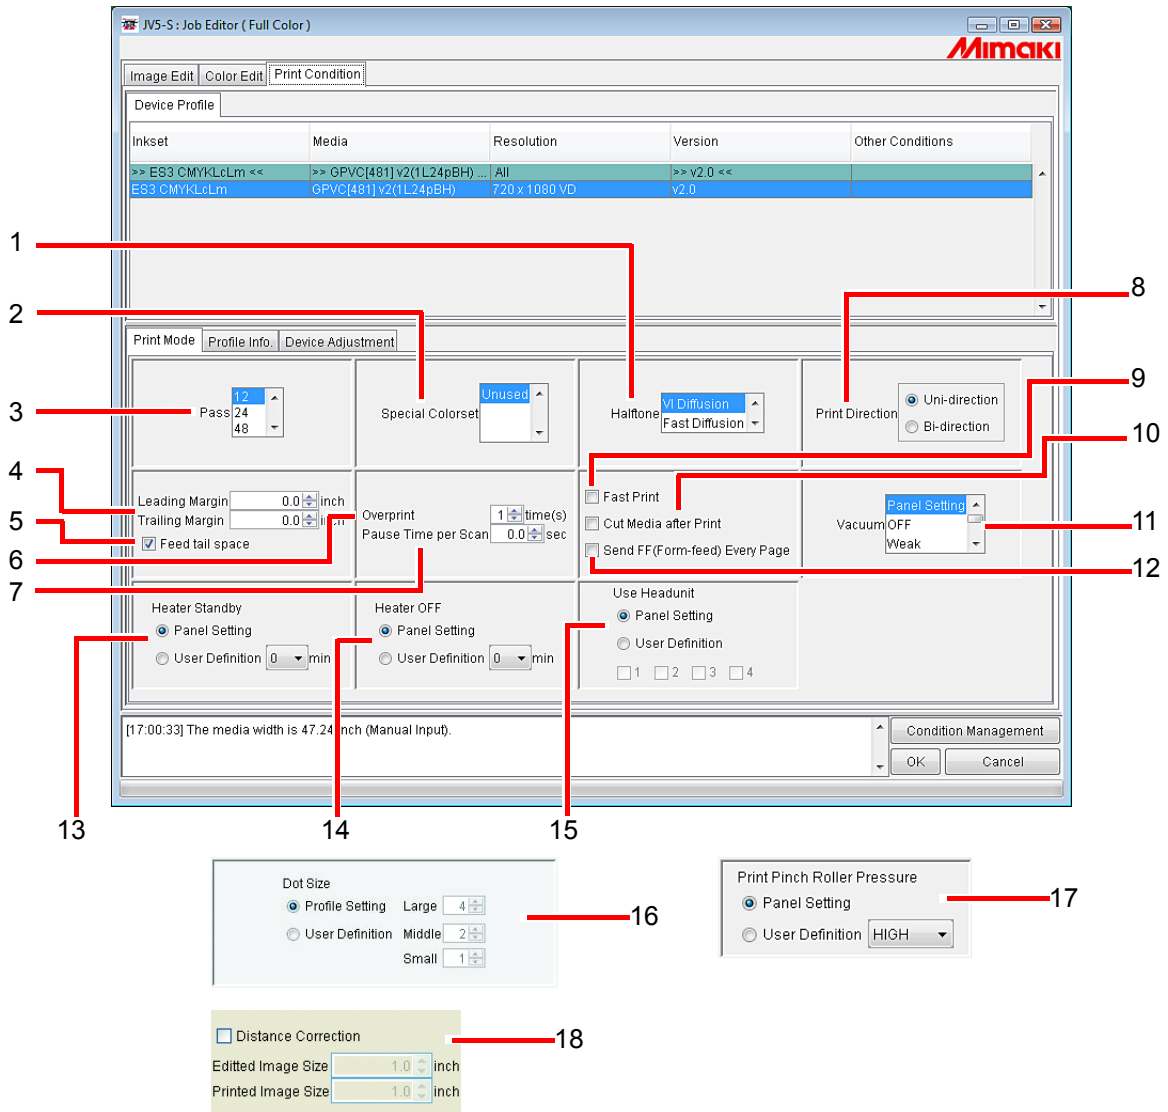Set the various print mode.



1. Halftone

Specify the Halftone method.

Vi Diffusion Good for solid color images.

Fast Diffusion Select for small characters where sharpness is required. Not good for solid color images since it results in banding.

ILL Diffusion Select for version 3 device profile. Excellent at reproducing pale colors, so that suitable for images with many gradations.

2. Special Colorset

Selects the special ink to use after replacement.

The following items can be selected.

S:..... Use one special color.

SS:..... Use two special colors.

SSi:..... Use one special color and one silver.

W:..... Use one white color.

WS:..... Use one white color and special color.

Unused:..... Do not use colors other than those used in the profile.

NOTE!

When select a profile that supports LL dot, white ink cannot be used.

To confirm whether profile supports LL dot, check the "Media" name.

When you use the printer in the condition below, do not select the special color set.

If you select it, the functions of color replacement, special color adjustment and the color chart of the special color are not operated normally.

Condition: JV33 six-color model, CJV30 six-color model

3. Pass

Specifies how many passes to use when printing one band.

More passes result in better printing, but take longer.

When a Version 3 device profile is selected, this is initialized to the recommended value of the profile.

4. Leading Margin and Trailing Margin

Sets the margin before starting printing and after finishing printing.

NOTE!

- When printing, in addition to the margin set here, printer automatically add some margin.
- In the case of a print&cut job, margins are not added to the results of print&cut even if you enter settings for "Trailing Margin".
(In the case of CJV30)

5. Feed tail space

If there is white space at the bottom edge of the image (top of the original image), sets whether or not to feed the white part.

6. Overprint

Set to strengthen coloring.

When using an Device Profile for overprinting (for two layers), enter "2" for overprinting.

When a Version 3 device profile is selected, this is initialized to the recommended value of the profile.

7. Pause Time per Scan

Sets the time to pause for each scan of the head.

Use the drying status of the ink as a guide to the setting.

8. Print Direction

Uni-direction..... Prints discharging ink when the head moves from right to left. It results in better printing than "Bi-direction", but takes longer.

Bi-direction..... Prints discharging ink when the head moves left and right. Quality is not as good as with "Uni-direction", but is faster.

9. Fast Print

Allows fast printing to reduce printing time.

However, quality is not as good as with normal printing.



When you select the SSi special color set, high speed printing is set to OFF fixed automatically.

10. Cut Media after Print

After printing finishes, the media is cut and removed from the roll.



In the case of a print&cut job, the media is not cut from the roll after printing even if you select “Cut Media after Print.” (In the case of CJV30)

11. Vacuum (JV3-SP/JV5/JV33/JV400)

Sets the absorbability of the media.

If the media attaches easily to the printer, set it to “Weak”.

12. Send FF (Form-feed) Every Page

Sets whether or not to send a form feed for every page output when printing multipages or color separations.

If a form feed is output, a margin is added between the next page.



In the Immediate Print mode, a form feed is sent for every page irrespective of this setting.

13. Heater Standby (JV5/JV33)

Specifies the heater standby status after completing printing.

14. Heater OFF (JV5/JV33)

Specifies the heater off status after completing printing.

15. Use Headunit (JV5 only)

Selects the headunit to use for printing.

Usable headunits are limited to adjacent head units.

16. Dot Size (UJV-160 only)

Specify dot size according to the dot gain of media.

When ND profile is selected, only Large dot can be specified.

Profile setting Print using the dot size when profile was created.

User definition Specify dot size (number of shots) from Large, Middle, and Small. Each dot need to be Large \cong Middle \cong Small.

17. Print Pinch Roller Pressure (CJV30 only)

Specify the pinch-roller pressure for printing.


18. Distance correction (UJV-160 only)

Printed after print size, moving value, and copy blank of the feed direction are automatically corrected based on data value and measured value.

Edited Image Size Specify feed direction size for created data.


Printed Image Size Specify data size of measured value of print without using distance correction.



When data value and measured value are saved in the Condition Management, there will be no need to enter data value and measured value each time. ( P.170 “About Condition Management”)

[Profile Info] sub menu

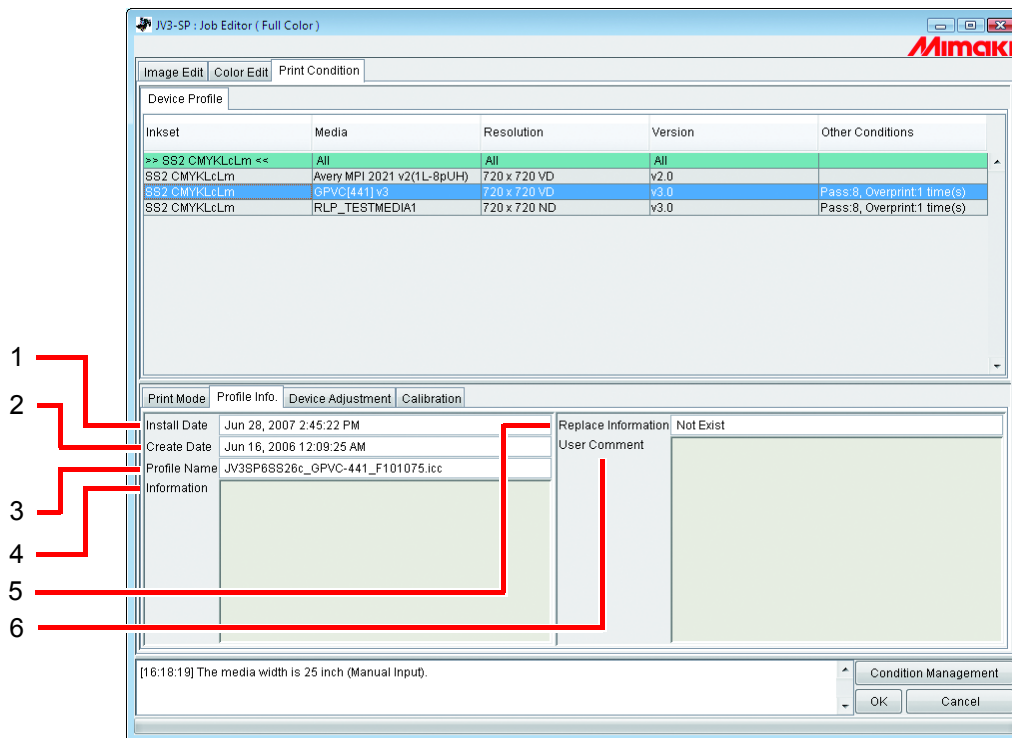Displays the information of a Device Profile.



1. Install Date

Displays the installation date of the selected profile.

2. Create Date

Displays the creation date of the selected profile.

3. Profile Name

Displays the file name of the selected profile.

4. Information

Displays the information of the selected profile.

5. Replace Information

Shows whether the device profile contains highly accurate color replacement information or not.

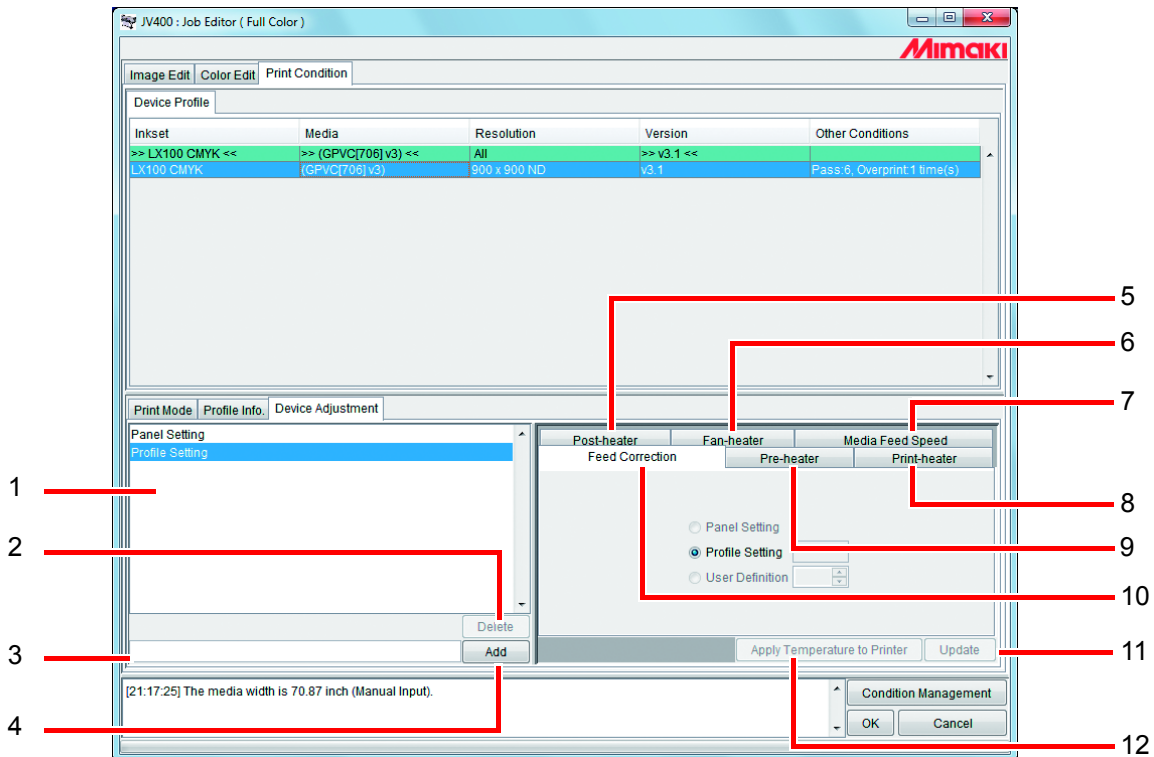
6. User Comment

Comments are writable to selected profiles.

When you select a profile, this User comment column displays the comment that you wrote on the profile.

[Device Adjustment] sub menu

Sets the Feed Correction and Heater Temperature value.



1. Device adjustment set list

Displays the device adjustment sets registered.

Device adjustment sets are values set and registered in the [Device Adjustment] sub menu, registered as files with a name added.

2.

Deletes registered device adjustment set.

NOTE! "Profile Setting" and "Panel Setting" cannot be deleted.

3. Device adjustment set name input box

Enter registered device adjustment set names.

It is convenient to input names that indicate the media name and feed correction value.

NOTE! The following single byte characters cannot be used for device adjustment set names.
\\ : * ? " < > |

4.

Adds a device adjustment set.

5. Post-heater (JV5/JV3/CJV30/JV400)

Sets the post-heater temperature.

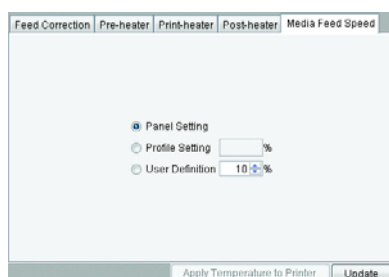
The setting items and method are the same as for pre-heater.

6. Fan-heater (JV400)

Sets the fan-heater temperature.

The setting items and method are the same as for pre-heater.

7. Media Feed Speed (JV5/JV33/CJV30/JV400)



If the default Media Feed Speed does not feed correctly, set a value for Media Feed Speed.

Panel Setting: Gives priority to the value set in the printer control panel.

Profile Setting: Gives priority to the value registered in the selected Device Profile.



Some Device Profiles do not have Media Feed Speed registered.
In this case, "Profile Setting" value is not shown.

User Definition: The printer follows the value entered in the box.

A value between 10% and 200% can be set at intervals of 10%.

8. Feed Correction

The JV series and DS series print by feeding the media to the front. When the quality of plotted images is poor with banding and so on, correct feeding of the media.

Set which of the following feed correction values to prioritize.

Panel Setting: Gives priority to the value set in the printer control panel.

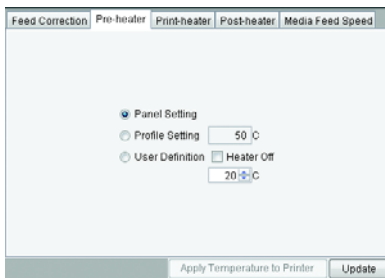
Profile Setting: Gives priority to the value registered in the selected Profile.



Some Device Profiles do not have feed correction registered. In this case,
"Profile Setting" value is not shown.

User Definition: The printer follows the value entered in the box.

9. Pre-heater (JV3-S/JV5/JV3-SP/JV33/CJV30/JV400)



Sets the pre-heater temperature.

Panel Setting: Gives priority to the value set in the printer control panel.

Profile Setting: Gives priority to the value registered in the selected Device Profile.

NOTE! Some Device Profiles do not have heater temperature registered.
In this case, "Profile Setting" value is not shown.

User Definition: The printer follows the value entered in the box.

Heater Off: When this is checked, the heater is not used.

10. Print-heater (JV3-S/JV5/JV3-SP/JV33/CJV30/JV400)

Sets the print heater temperature.

The setting items and method are the same as for pre-heater.

12. Update

Applies the settings to the Device adjustment set.

11. Apply Temperature to Printer (JV3-S/JV5/JV3-SP/JV33/CJV30/JV400)

Sends the temperature setting information to the printer.

By performing the temperature settings before printing, the time required for heater temperature adjustment immediately before printing can be reduced.

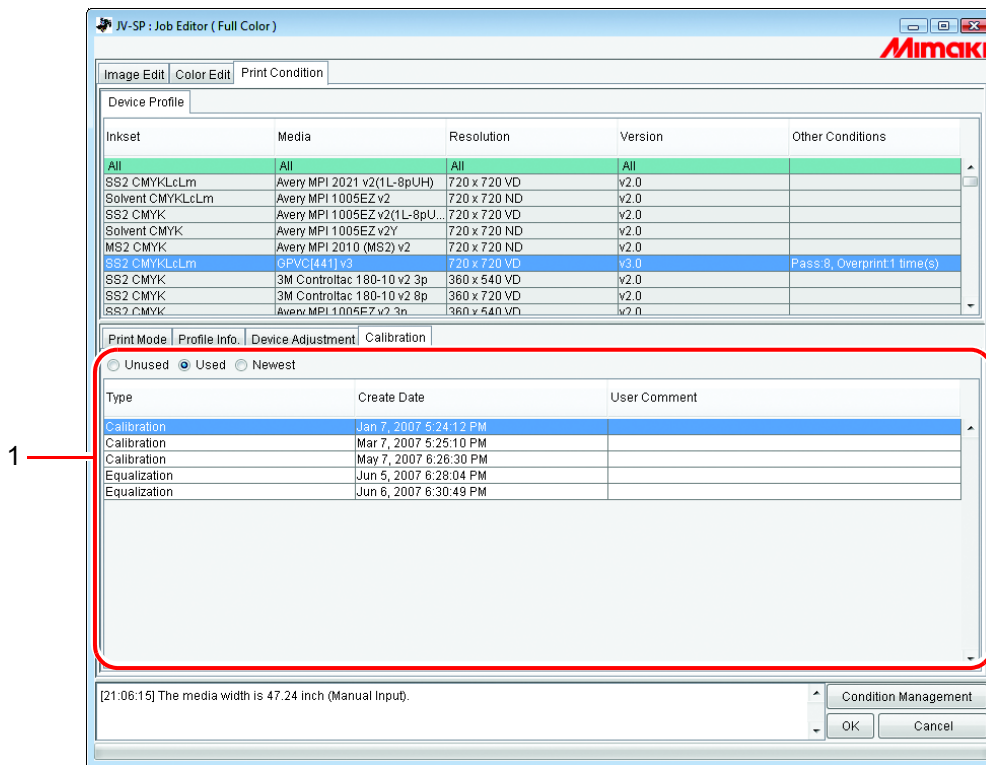
[Calibration] sub menu

Specifies whether calibration and/or equalization are to be used.



[Calibration] sub menu is displayed when selecting version 3.0 device profiles which calibration information is included.

To add calibration information to the device profiles, use the Mimaki profile creation software called "MimakiProfileMaster II".



1. Calibration

Used Performs RIP using calibration or equalization information selected from the list.

Unused Not uses calibration and/or equalization information.

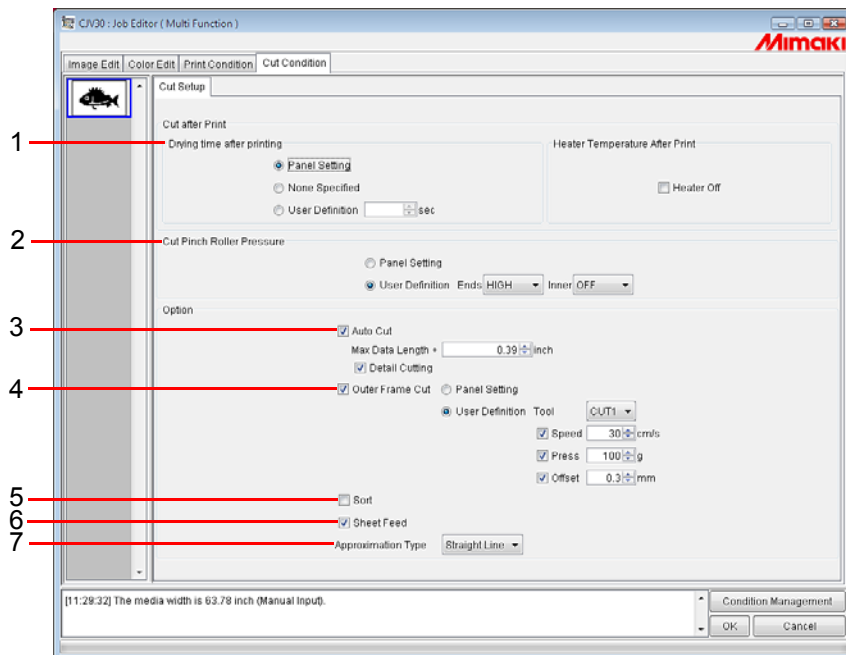
Newest Always performs RIP using the most recently created calibration and/or equalization information.

This is useful if calibration information is routinely added, because it eliminates the need to select calibration.

Editing the Cutting Conditions (using CJV30)

Set the conditions for using the CJV30 cutter.

Cut Setup Submenu



1. Cut after Print

Specifies the operations from the completion of printing to the start of cutting.

Drying time after printing : Specifies the time to wait before starting to cut.



If the heater temperature is high, cutting accuracy may be reduced in some media due to skew, for example. In this case, set “Heater Off”.

Heater Temperature After Print : Sets the pre-heater, print-heater, and post-heater to “OFF” for cutting.

2. Cut Pinch Roller Pressure

Specify the pinch-roller pressure for cutting.

3. Auto Cut

Cut off the media automatically after cutting.

Max Data Length + : Specifies the length from the end of the data to the cut position.

In the case of a print&cut job, cutting is performed at the position from the data end of larger data of either print data or cut data.

Detail Cutting : If this checkbox is selected, data is cut for each line.

4. Outer Frame Cut

Specifies cutting of the outer frame of images as rectangles.

Tool : Selects the cutter. Selecting HALF cuts the outer frame with dotted lines.

Speed : Specifies the cutting speed.

Press : Specifies the pressure of the cutter blade.

Offset : Adjusts the center of the cutter blade.

5. Sort

Specifies sorting of the cutting order to shorten the cutting time.

6. Sheet Feed

Specifies feeding of the media for checking whether images can be cut entirely or not, when using leaf media.

7. Approximation Type

Selects the approximation type to use for cutting curved lines.

Straight Line : Curved lines are approximated using small segments of straight lines. The cutting speed is high but cut quality is low.

Arc : Curved lines are approximated using small arcs. The cut quality is high but cutting speed is low.

Multipage jobs


Files with multiple images in one file are called “multipage” images.

In RasterLinkPro5 SG, all pages of multipage images can be print at the same time.

NOTE! Multipage images where the image sizes are different are not supported.


Main Window


Only images on the first page are shown in the “Thumbnails”.

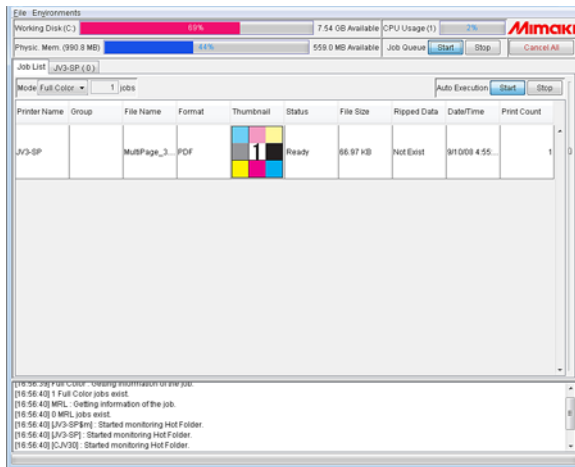

“Job Editor”

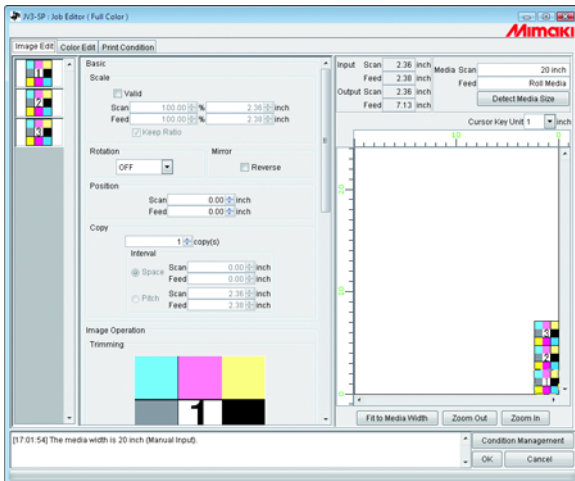All pages are shown in the “Job Editor”.



 All settings in the “Job Editor” are common to all pages.

Edit jobs (Image Edit)

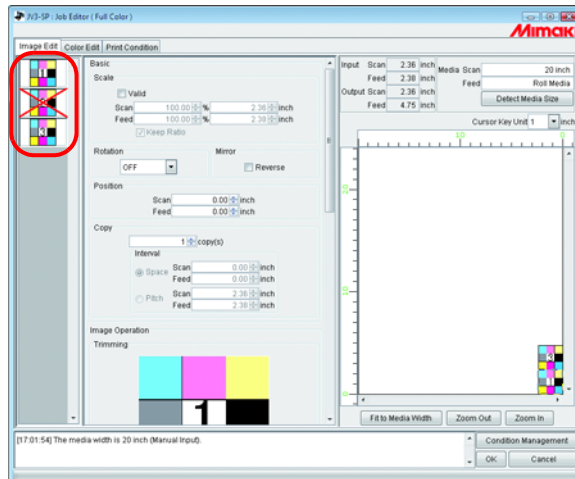
Decide the print pages

All pages of jobs for editing appear as thumbnail images.

Pages to print can be selected.

Click images in the Thumbnail List that will not be printed.

A cross mark is placed over the thumbnail, and it is removed from the preview image.



- Images marked with a cross (images not shown in the preview) are not printed.
- To print images that are set so as not to be printed, click thumbnails marked with a cross.

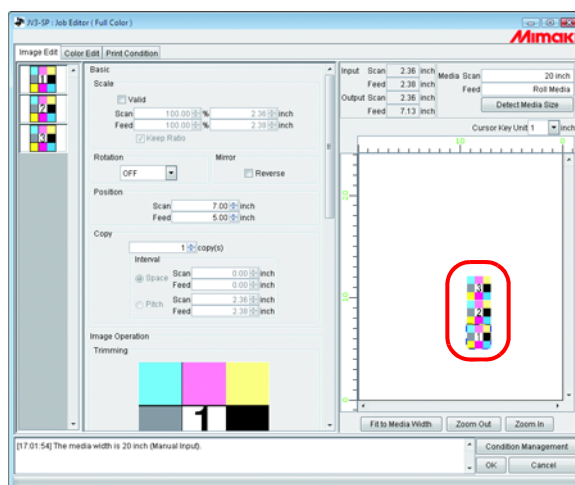
NOTE !

All pages cannot be marked with a cross.

Position

All pages can be moved as one object.

Drag and drop with the cursor, or enter values for Scan and Feed.




Each page cannot be arranged separately.

Trimming

Trims all pages.

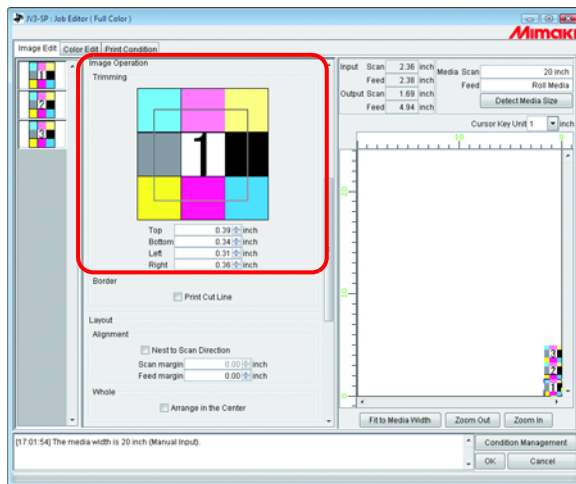
The Trimming preview shows the first page of jobs for print.



Alignment

Specifies the pitch of each page.

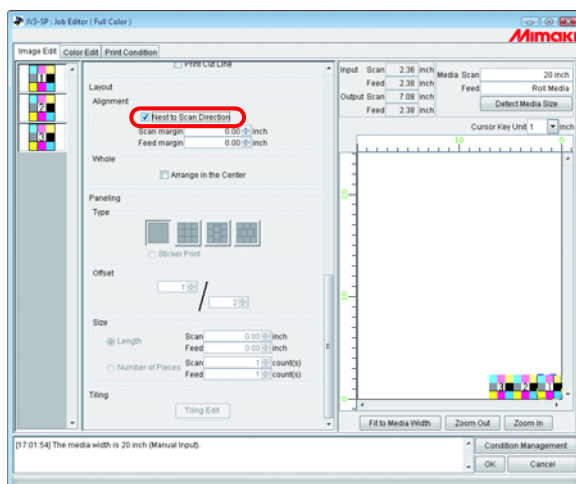
When “Nest to Scan Direction” is checked, the pages are arranged horizontally.



Copy

Copies each page.

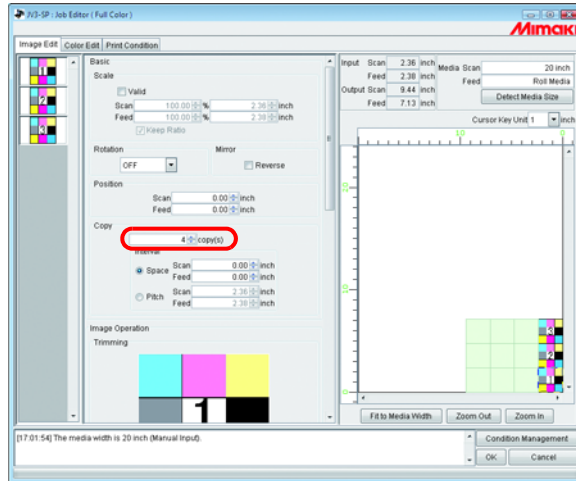NOTE ! “Nest to Scan Direction” and “Copy” cannot be specified at the same time.



NOTE ! With multipages, the following settings are not possible.

- Paneling
- Tiling

Color separation Print (JV4 series only)

Process colors (cyan, magenta, yellow, black, special colors) are printed with black ink.

There are the following two methods for separation print.

Select one according to the data format output by the application software.

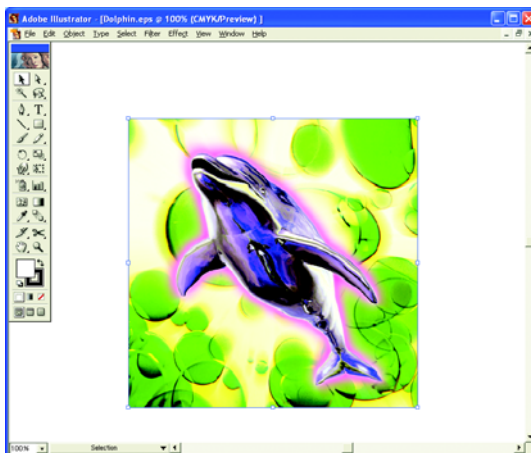
Application Separation: Used when the application software separates the image into process colors (cyan, magenta, yellow, black, special colors) for printing.

RIP Separation: Separates full color images output from the application software into the process colors cyan, magenta, yellow, and black in RasterLinkPro5.


Application separation spool method

The following explains how to spool application separation images from Adobe Illustrator as an example.

- 1 Start up Adobe Illustrator, and display the file to spool.



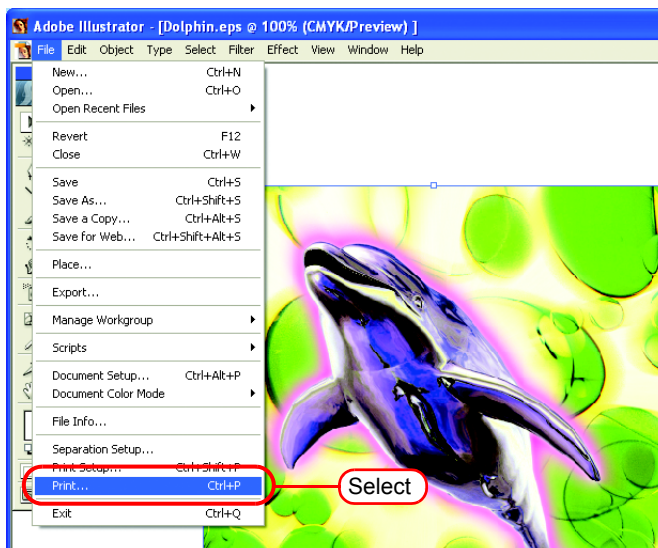
- 2 Select [Print].
[File] - [Print] menu
The "Print" dialog appears.



3 In “Name”, select “JV4\$A”.

Click **Separation Setup**.

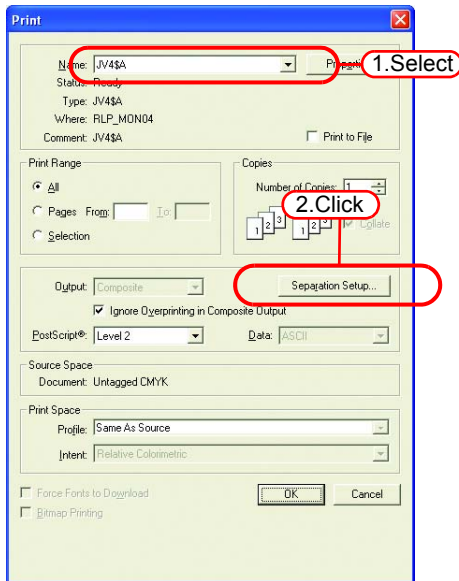“Separation on JV4\$A” dialog appears.




There are printers for application separation other than “JV4\$A” created by Condition Management.

4 Click **Open PPD**, and select “MKRL5EN.PPD”.




With Mac OS X, select “MKRL5xEN.ppd”.

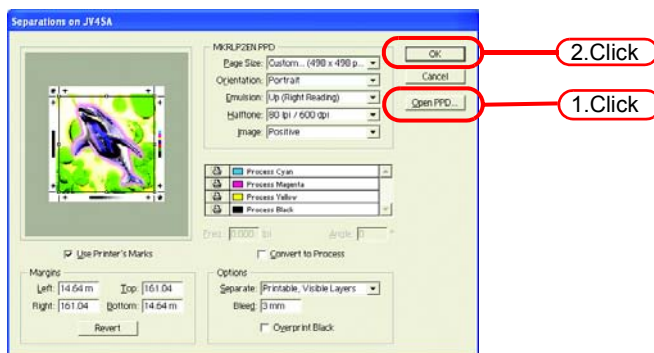
Make the various settings, and click **OK**.



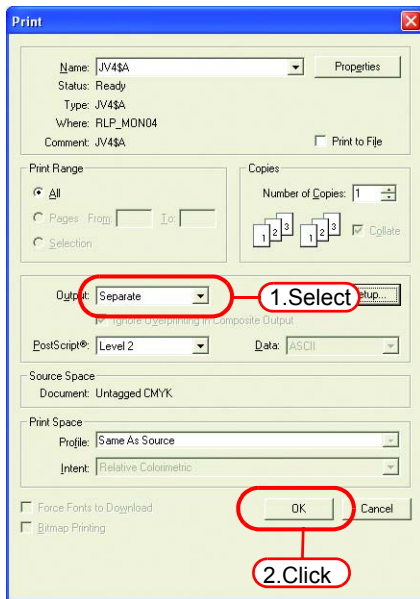- 5 In “Output”, select “Separate”.
Click in the “Print” dialog to spool the separation image data.



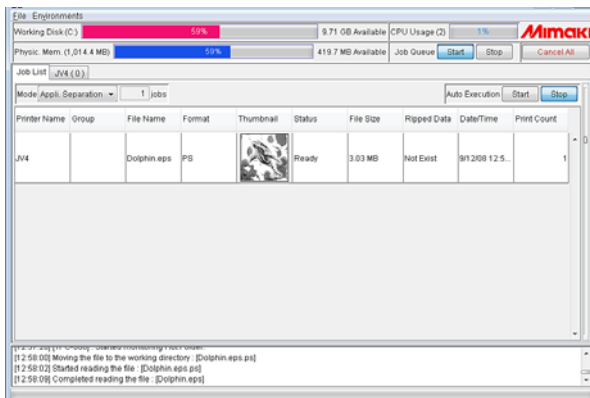- 6 Spooled files appear in the “Job List” screen.



Images spooled via the printer driver take the file format “ps” irrespective of the format of the source image.

Edit color separation jobs

Similarly to full color jobs, Image Edit, Color Edit, and Print Condition settings are possible for image color separation jobs.

The items that can be set differ from full color jobs.

Also, the items that can be set differ from Application separations and RIP separations.

Refer to “Common features for every printer” (☞ P.74) for how to open the “Job Editor” window.

Image Edit

In Image Edit, the Scale, Rotation, Mirror, Position, Copy, Negative/Positive, Trimming, Alignment (Nest), and Arrange in the Center functions can be set.

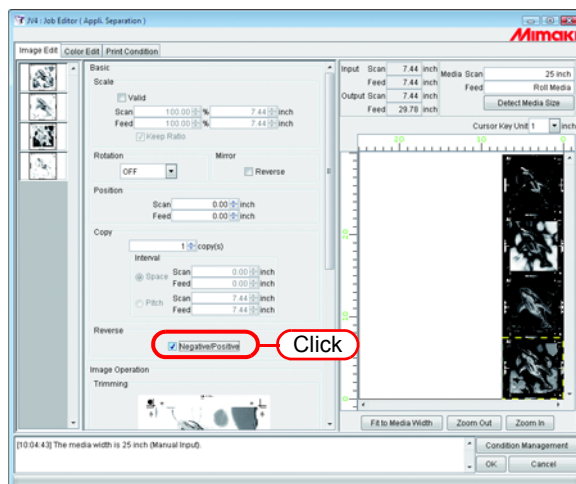
The Image Edit settings are applied to all layers for printing.

Each Image Edit function except “Negative/Positive” are the same as the “multipage” settings.

Refer to ☞ P.158 for the setting method.

Click “Negative/Positive”.


Black and white in the image are reversed.



Color Edit

Create Color adjustment sets and edit ink curves.

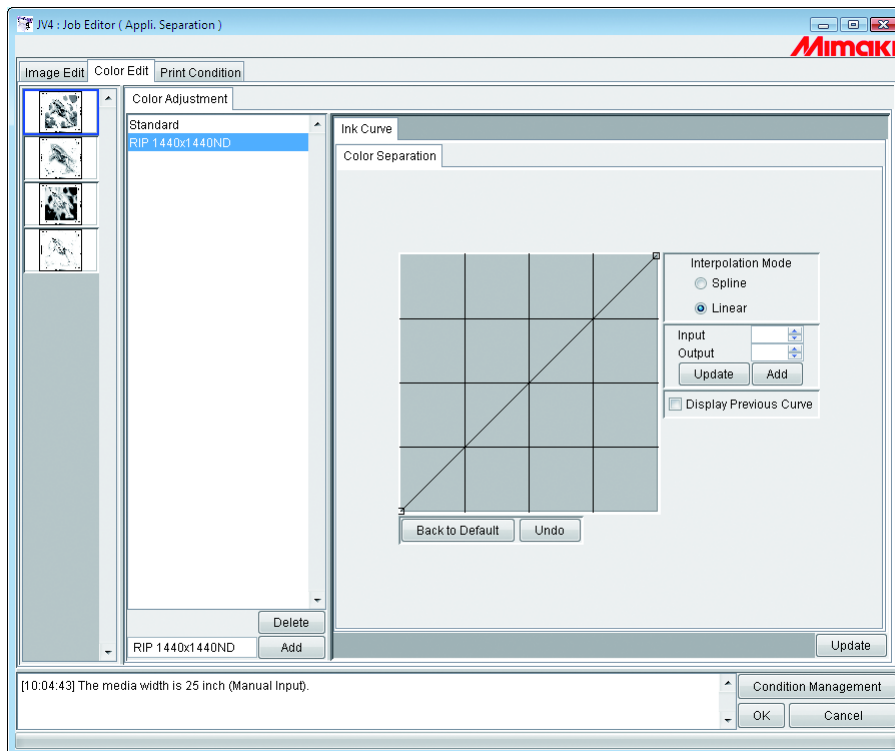The adjustment method is the same as for full color ink curve.



NOTE!

In the case of using application separation, do not adjust the tone using an ink curve of RasterLinkPro5 series. Perform tone adjustment with the Adobe Illustrator.

Print Condition

The items that can be set differ from Application separation and RIP separation.

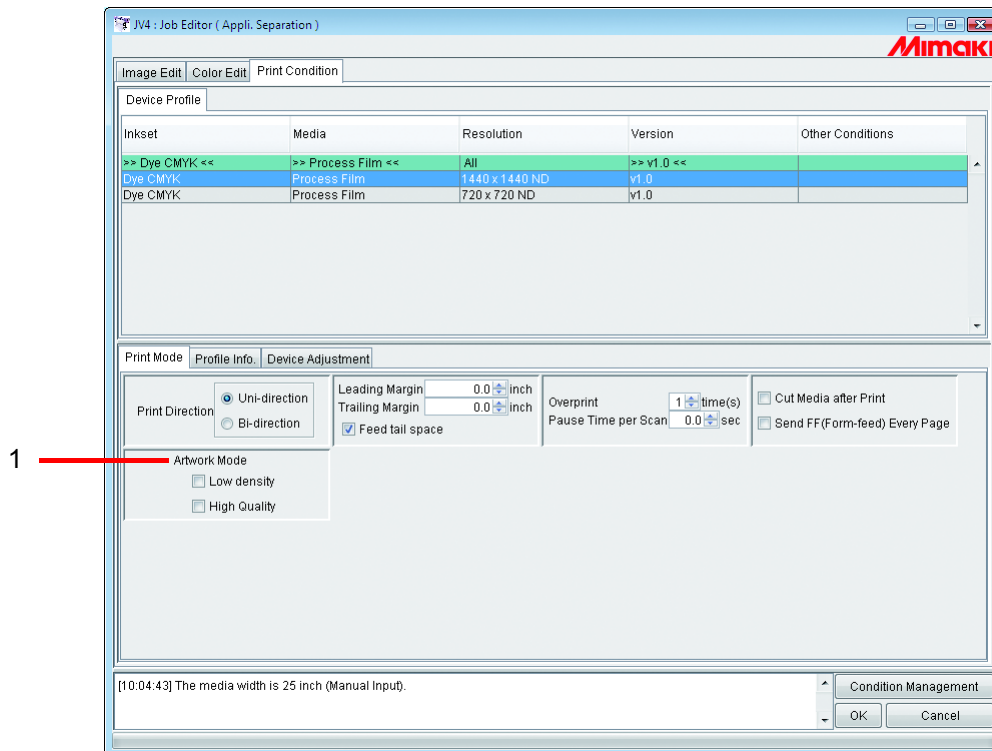
Separation print settings are set with the following setting conditions.

- Resolution of Device Profile
- “High Quality” of Artwork Mode setting
- Artwork Mode setting of the Printer

For details, refer to  P.169 Artwork Mode “High Quality” setting.

Refer to the printer manual for printer artwork mode settings.

[Print Mode]




1. Artwork mode

Perform separation print settings.

Low densityEnables the printer function [Artwork Mode] plotting density [Low Density].

High QualityEnables the printer function [Artwork Mode] plotting quality [QUALITY].

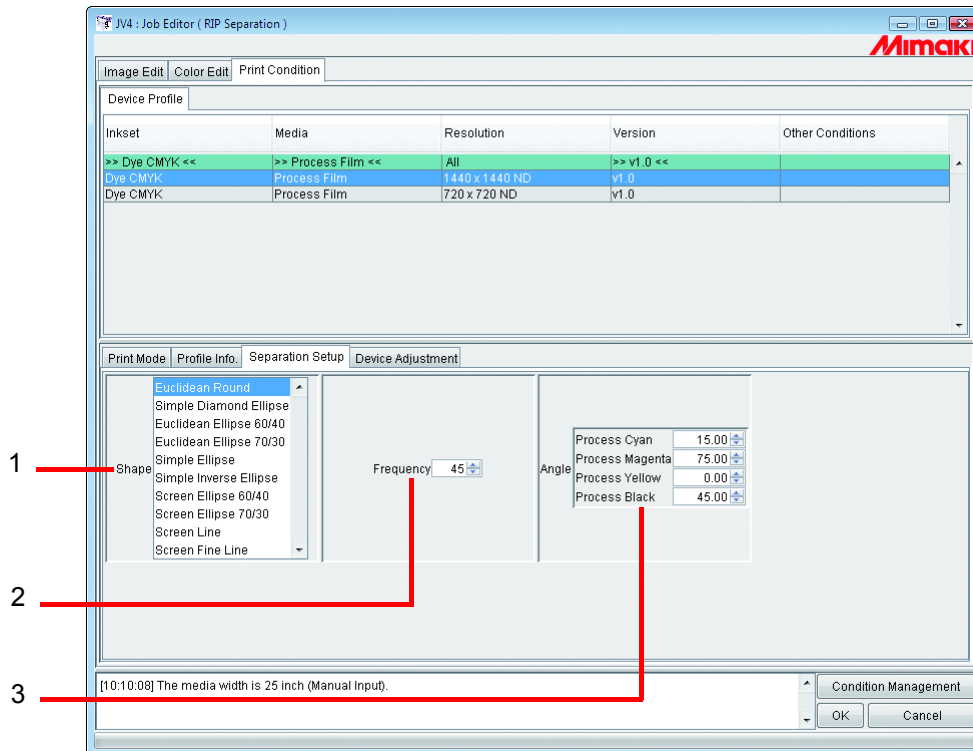[Separation Setup] (RIP separation only)



1. Shape

Select the shape of the AM Screening.

2. Frequency

Enter a frequency.

The input value is 16 to 150 line/inch.

Adjust frequency Line according to the media and printer.

3. Angle

Enter an angle for each color plate.

The input value is 0 to 360 degrees.

Artwork Mode “High Quality” setting

The plotting quality of separation print is determined by the RasterLinkPro5 SG “High Quality” setting and the printer Artwork Mode plotting quality.

NOTE!

- Set the priority function set in the printer to “Host”.
- Refer to the table below for the number of passes when printing.

Refer to the printer manual for printer Artwork Mode and priority function settings.

Raster LinkPro5 SG settings	printer settings						
	OFF	STANDARD1	STANDARD2	STANDARD3	QUALITY1	QUALITY2	QUALITY3
<input type="checkbox"/> High Quality	STANDARD1	STANDARD1	STANDARD2	STANDARD3	STANDARD1	STANDARD1	STANDARD1
<input checked="" type="checkbox"/> High Quality	QUALITY1	QUALITY1	QUALITY1	QUALITY1	QUALITY1	QUALITY2	QUALITY3

Plotting mode for each level of plotting quality

The plotting mode is determined by the combination of data resolution and plotting quality.

Data resolution (dpi)	Plotting quality	Plotting mode	
		Number of passes	Print resolution (dpi)
720 x 720	STANDARD1	4 pass	1440 x 720 ^{*1}
	STANDARD2	4 pass	720 x 720
	STANDARD3	4 pass	720 x 720
	QUALITY1	8 pass	1440 x 720 ^{*1}
	QUALITY2	8 pass	720 x 720
	QUALITY3	8 pass	720 x 720
1440 x 1440	STANDARD1	16pass	1440 x 1440
	STANDARD2	16pass	1440 x 1440
	STANDARD3	16pass	1440 x 1440
	QUALITY1	32pass	1440 x 1440
	QUALITY2	32pass	1440 x 1440
	QUALITY3	32pass	1440 x 1440

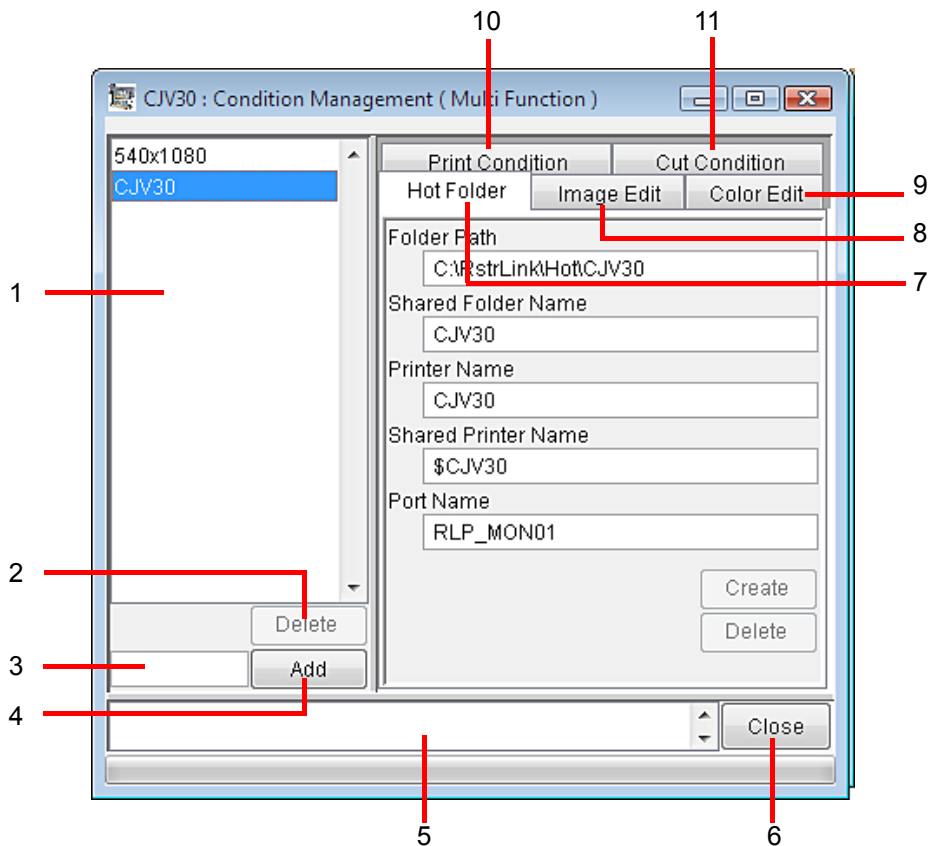
*1: Automatically extended by the printer to 1,440 x 720 dpi for printing.

About Condition Management

This function manages various conditions (Print Condition, Image Edit, etc.) necessary for execution of a job as one “Condition set”.

The Condition Management functions are as follows:

- 1) Condition set applicable to a job during its editing.
- 2) A Hot Folder and Printer driver is able to be prepared for each Condition set. The initial values of the job that has been spooled by the Hot Folder or the Printer Driver work as the setting values of the Condition set.



1. Condition List

Indicates the list of Condition set.

2.

Deletes selected condition set. Condition set created by default cannot be deleted.

3. Condition name input box

When you register a new Condition set, input a new Condition set name.

(NOTE!) The following characters cannot be entered.
\\ : * ? " < > | ! ,

4.

Registers a Condition set newly.

5. Information display

Indicates the operation status of Condition Management.

6.

Close Condition Management window.

7. [Hot Folder] Sub menu

Prepares a hot folder and Printer Driver. (☞ P.172, P.182)

8. [Image Edit] Sub menu

Sets conditions for image editing. (☞ P.173)

9. [Color Edit] Sub menu

Sets conditions for color editing. (☞ P.174)

10. [Print Condition] Sub menu

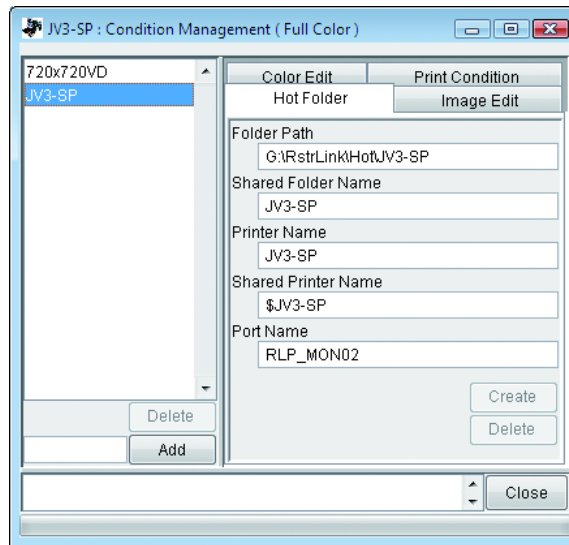
Sets print conditions. (☞ P.175)

11. [Cut Condition] Sub menu


Sets cut conditions. (☞ P.176)

[Hot Folder] Sub menu

Hot Folders or Printer Drivers are able to add or delete. See [P.182](#) for how to add or delete a Hot Folder or Printer driver.



[Image Edit] Sub menu

Parameters for Image Editing settable. See  P.178 for how to set parameters.

The parameters that can be set are as follows:

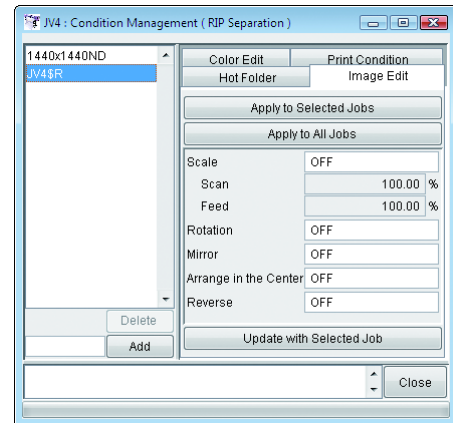
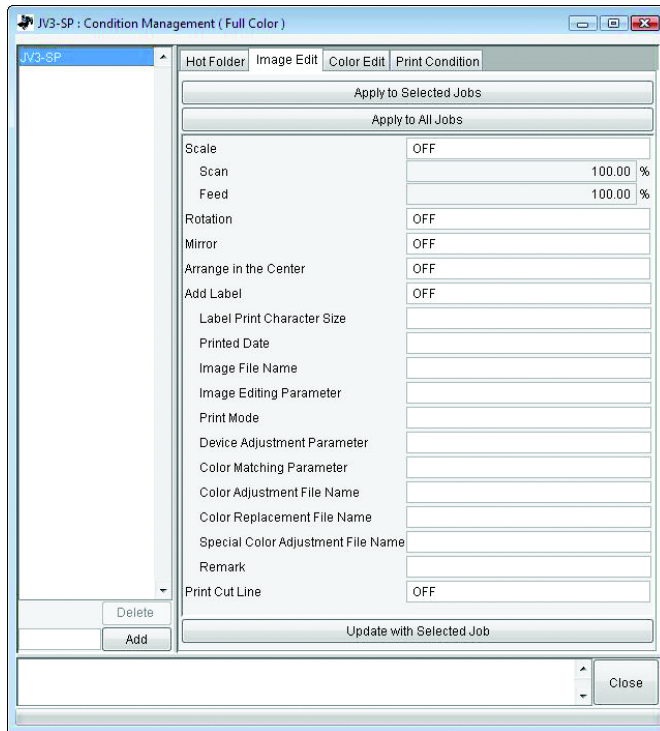
Print job: Scale, Rotation, Mirror, Arrange in the Center, Print Cut Line (full color only), Reverse (separation only), Print information label

Print&Cut job (with register marks): Rotation, Mirror, Arrange in the Center, Print information label

Print&Cut job (without register marks): Scale, Rotation, Mirror, Arrange in the Center, Print Cut Line, Print information label

Cut job (with register marks): Rotation, Mirror, Arrange in the Center

Cut job (without register marks): Scale, Rotation, Mirror, Arrange in the Center




Color Separation

NOTE!

The jobs for which “Tiling” or “Paneling” is set, the condition may not apply.

[Color Edit] Sub menu

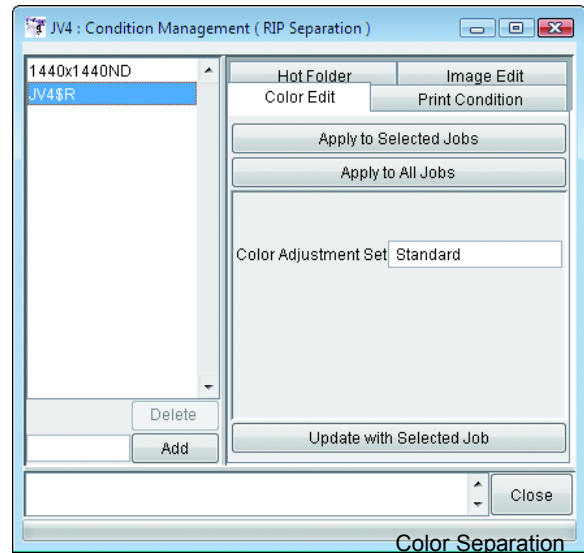
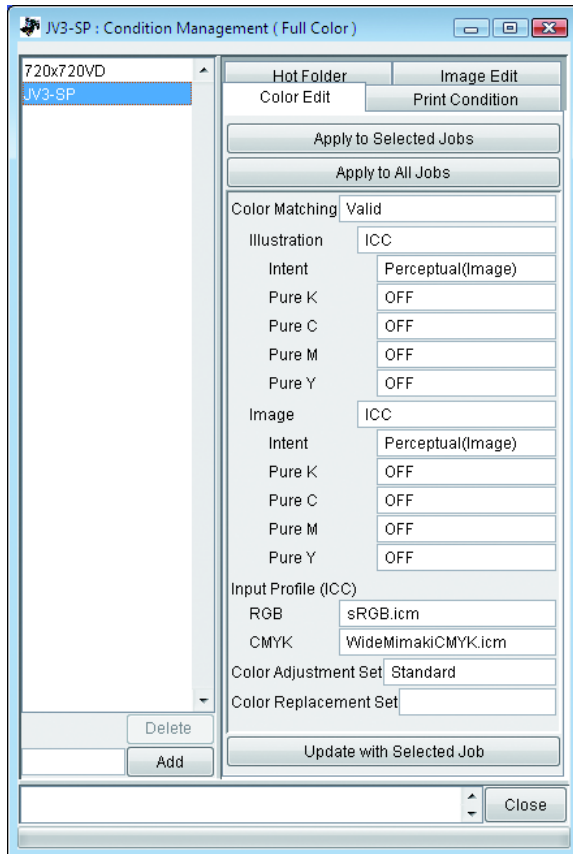
Parameters for Color Editing settable. See  P.178 for how to set parameters.

The parameters that can be set are as follows.


All parameters for Color matching (full color only), Color Adjustment set, Color Replacement set (full color only), Special Color Adjustment

NOTE!

The Color Edit menu does not appear for a cut job.





[Print Condition] Sub menu

Parameters for Print Condition settable. See  P.178 for how to set parameters.

The parameters that can be set are as follows:

Device Profile, Print Mode (artwork mode : Color Separation only), Device Adjustment set, and Separation setup (RIP separation only)

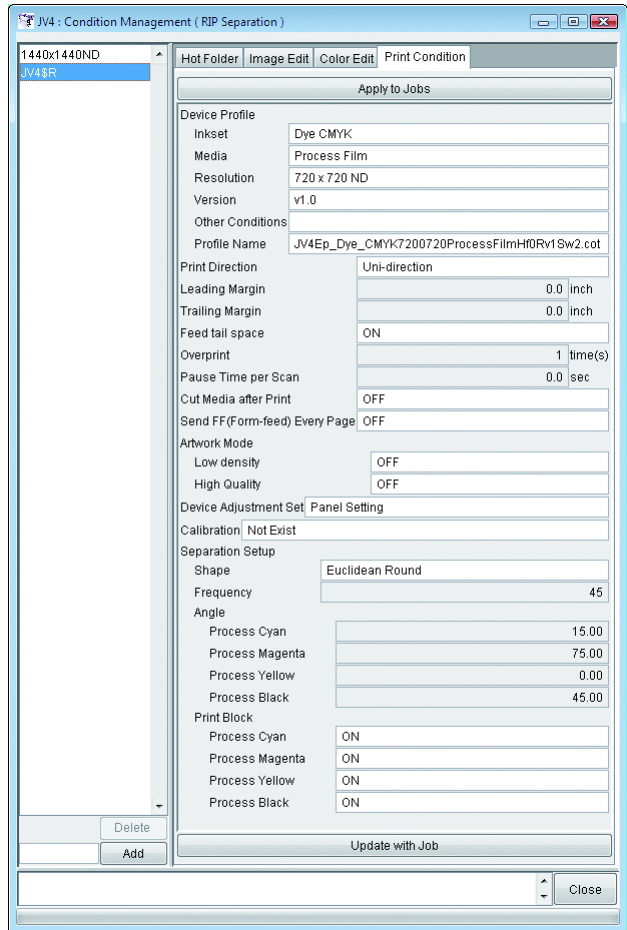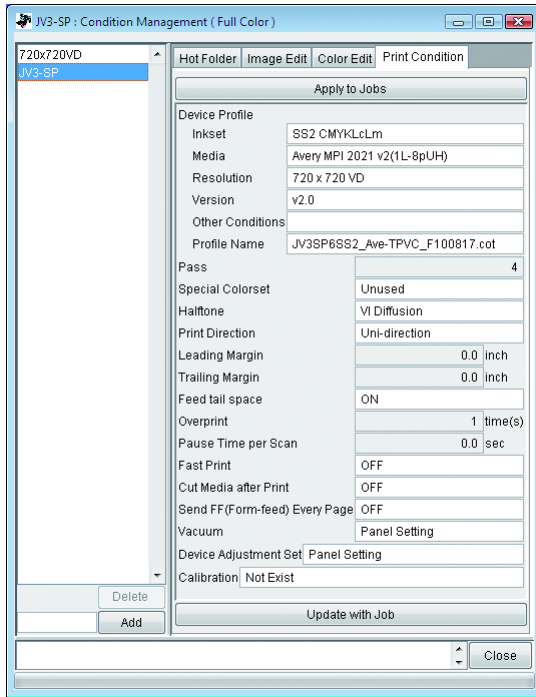NOTE! The Print Condition menu does not appear for a cut job.



Color Separation

[Cut Condition] Sub menu (CJV30 only)

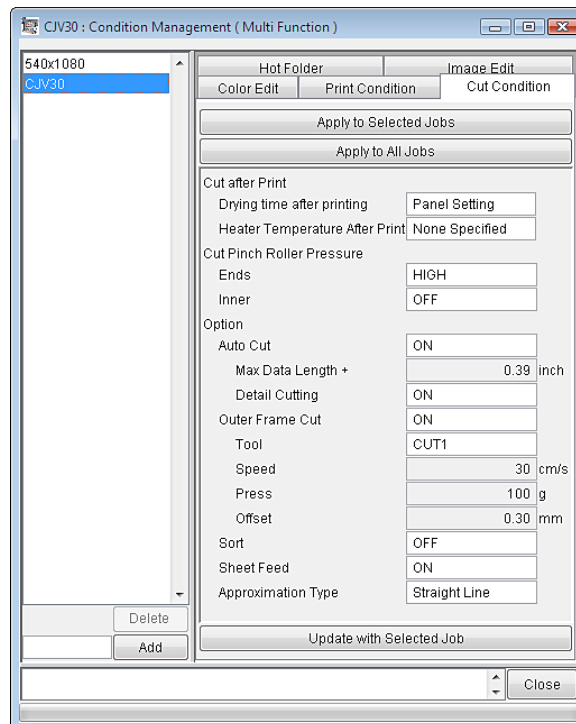
Parameters for Print Area settable. See  P.178 for how to set parameters.

The parameters that can be set are as follows:

Drying time after printing, Heater Temperature After Print, Cut Pinch Roller Pressure, Auto Cut, Max Data Length +, Detail Cutting, Outer Frame Cut, Sort, Sheet Feed, Approximation Type


NOTE!

The Cut Condition menu does not appear for a print job.



Displaying the Condition Management Window

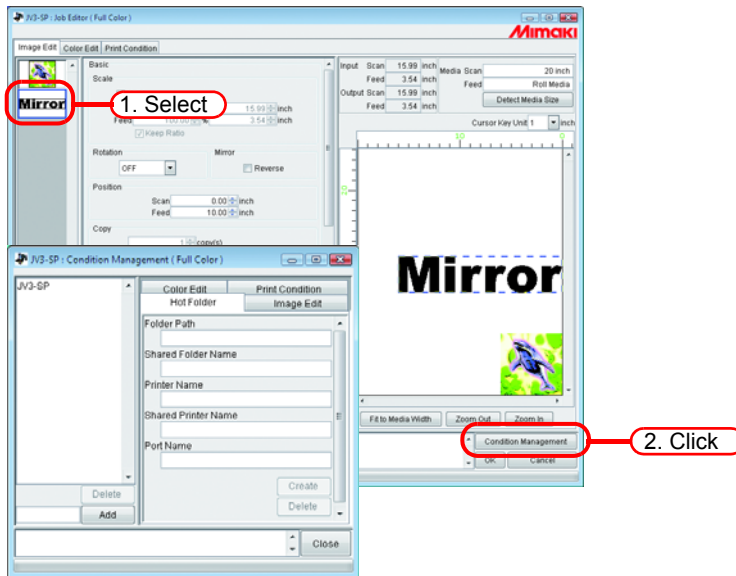Select one job for which Condition is to be set, and click **Condition Management**.
Open the “Condition Management” window.




Creating a New Condition Set


Enter the Condition set name.

NOTE! The following characters cannot be entered.
 \ / : * ? " < > | ! ,

Click **Add**.

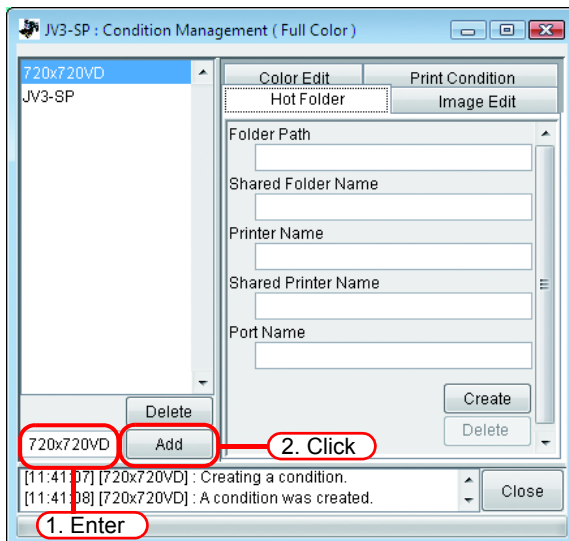Add a new condition set at the list.



 When you edit the registered condition set and register it under the different set name, select the set to edit and click **Add** after changing the set name.

Changing Setting Values of Condition Set

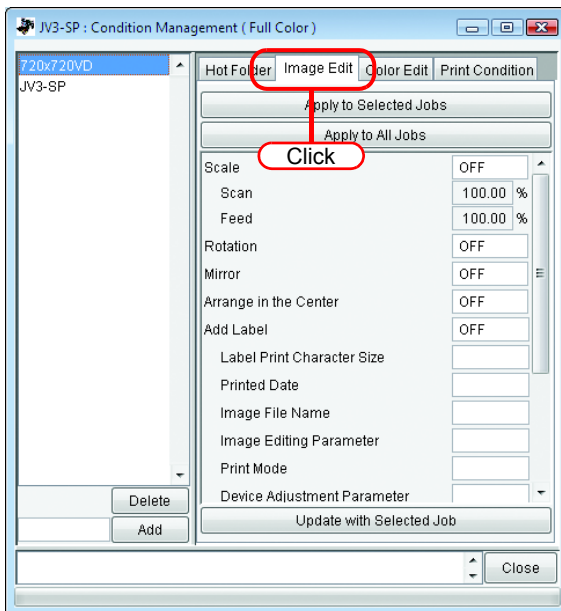
Setting values of various conditions (Image Edit, Color Edit and Print Condition) changeable. Values are acquired from the job that is currently edited in “Job Editor”.

The settings of Image Edit are changed independently, and Color Edit and Print Condition are changed as a set.


- 1 Open the “Condition Management” window.
Open the sub menu of conditions to be changed.
Open [Image Edit] here.
“Job Editor” also displays [Image Edit].




The menu of “Job Editor” is switched to meet the menu shown in “Condition Management”.



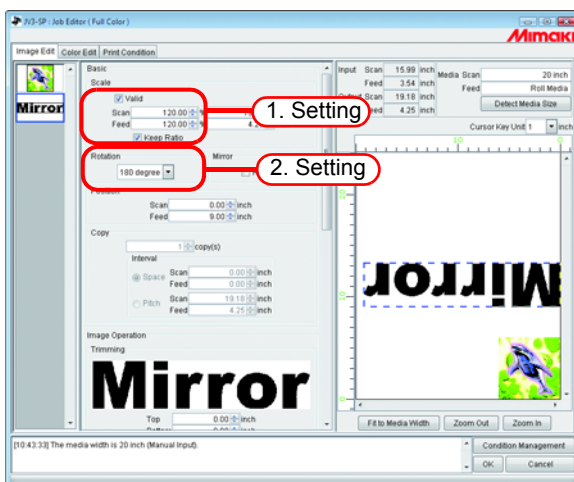- 2 In “Job Editor”, perform setting of parameters.
The example shows a case where parameters are set as follows:
Scale: 120%
Rotation: 180 degree



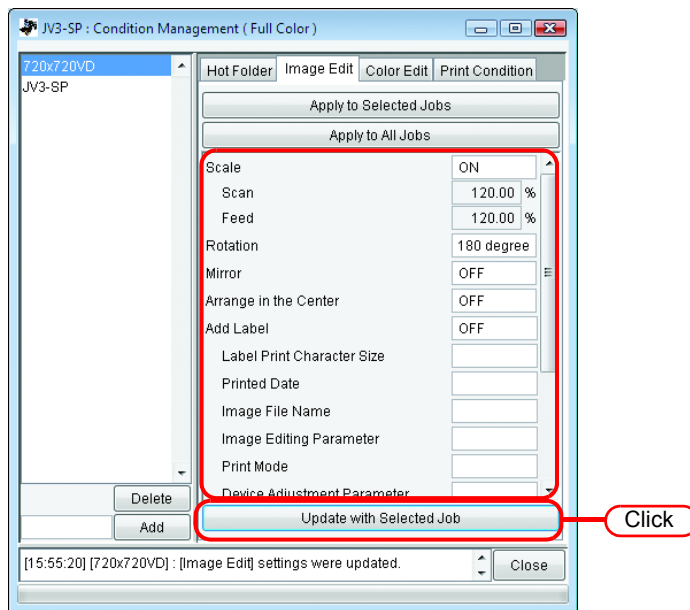- 3** Click **Update with Selected Job** in the Condition Management window.
The parameters that you have set in “Job Editor” are acquired and indicated.



Applying Conditions to the Job

Apply the conditions that you have set in Condition Management to the job.

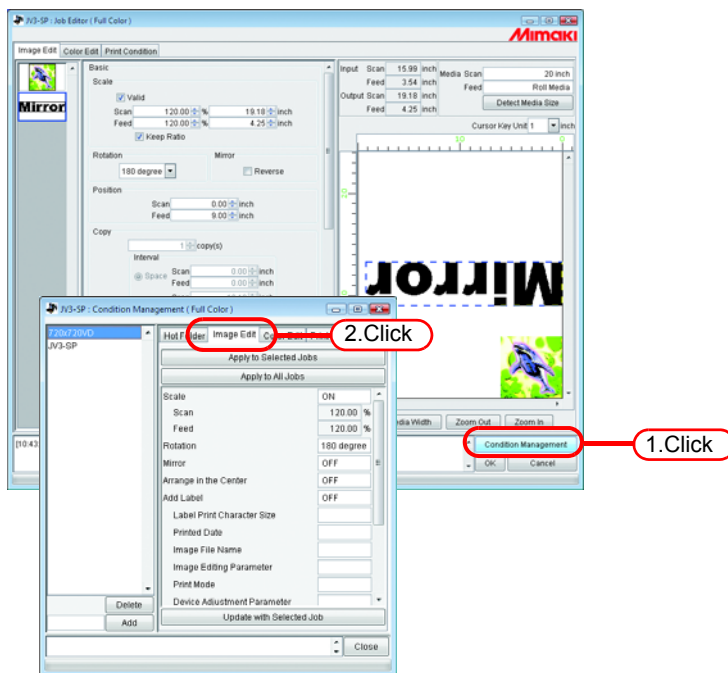
The settings of Image Edit are changed independently, and Color Edit and Print Condition are changed as a set.

The Image Edit conditions are applied to one or more jobs selected in the “Image Edit” Thumbnail List, or to all jobs.

The conditions of Color Edit are applied to only the job selected in the Thumbnail list of “Color Edit” or to all jobs.


The conditions of Print Condition is applied to all the grouped jobs.

- 1 Open “Condition Management” window.
Open the sub menu of conditions to be changed.
Open [Image Edit] here.
“Job Editor” also displays [Image Edit].




The menu of “Job Editor” is switched to meet the menu shown in “Condition Management”.

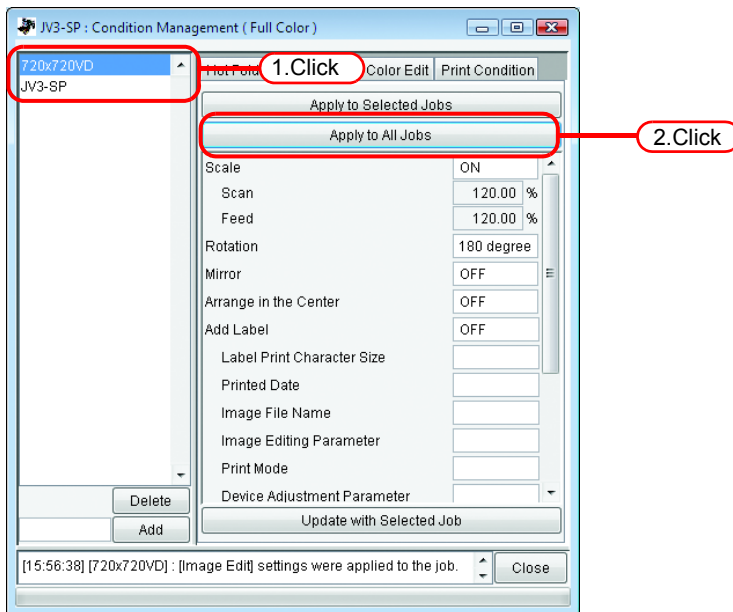- 2 Select a menu for which conditions are to be applied.
Click apply button.
Click **Apply to All Jobs** here.



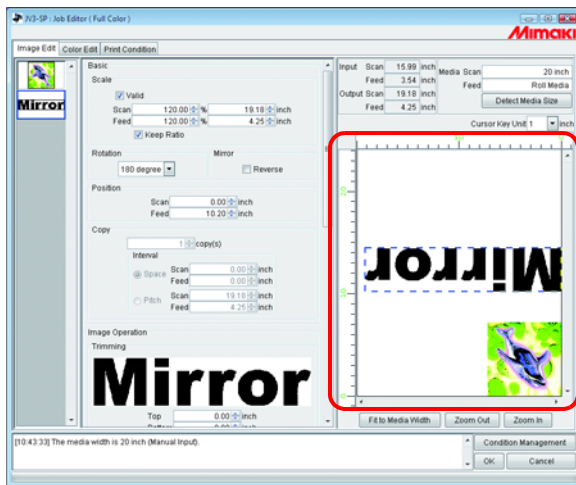- 3 The conditions are applied to all the jobs in “Job Editor”.



[Hot Folder] Sub menu

You can prepare Hot Folders and Printer driver.

Prepare one Hot Folder and Printer driver for one Condition set.

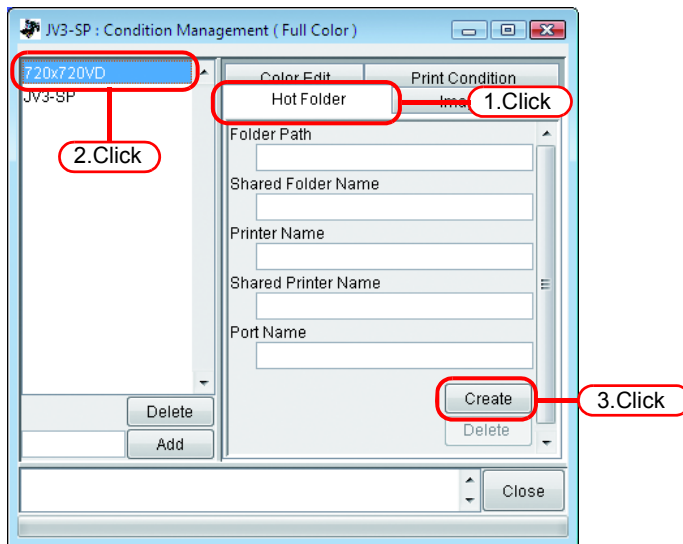
The various conditions of the job that you have spooled using the prepared Hot Folder or Printer driver reflect the conditions that have been set in “Condition Management”.

Preparing a Hot Folder and Printer driver

- 1 Open the “Condition management” window and click “Hot Folder” tab.
Select the Condition set where a Hot Folder is to be prepared.
Click .

NOTE!

- Do not close RasterLinkPro5 SG forcibly during preparation of a Hot Folder or Printer driver.
- When you access to Hot Folder and shared printer from the Windows Me or earlier, make the condition set name up to 11 one-byte characters.



NOTE!

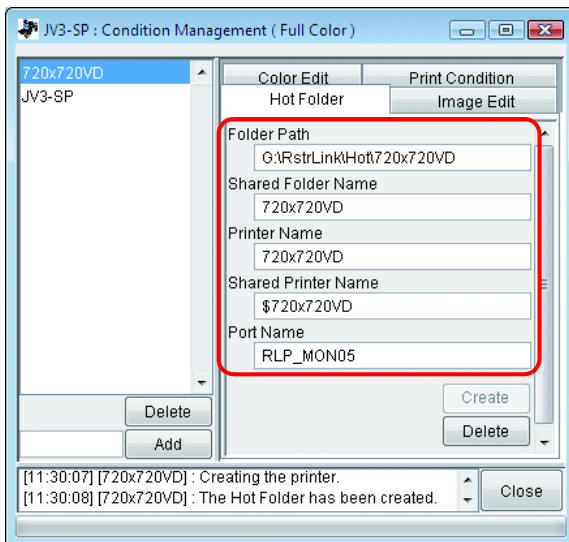
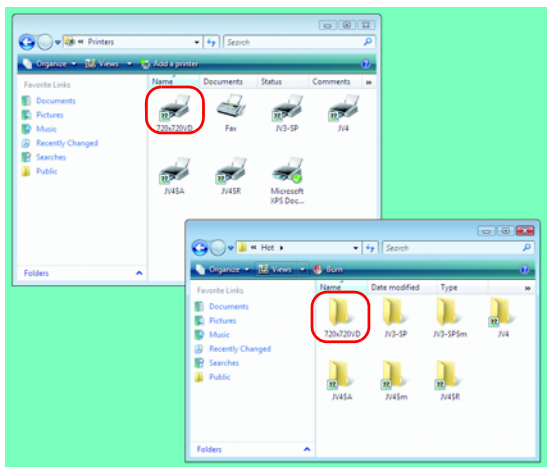
If PC MACLAN is installed on the RasterLinkPro5 SG PC, the [PC MACLAN file server warning] screen may appear while creating the Hot Folder. Click to stop the PC MACLAN file server. The PC is not shut down.



2 A Hot Folder and Printer driver are prepared.
Information of the Hot Folder and Printer driver is displayed.

(NOTE!)

- Never perform any of the following operations with a Hot Folder that has been prepared in RasterLinkPro5 SG. Otherwise, it will become impossible to uninstall. Change of the folder name, change of the shared name, cancellation of sharing, deletion of the Hot Folder
- Never perform any of the following operations with a Printer driver that has been prepared in RasterLinkPro5 SG. Otherwise, it will become impossible to uninstall. Change of the name, change of the shared name, cancellation of sharing, deletion of the Printer driver.



Automatic PC MACLAN setting

If PC MACLAN is installed on the RasterLinkPro5 SG PC, PC MACLAN is set automatically when the Hot Folder and Printer driver are created.

In this case, the following names are given automatically.

PC MACLAN file server

File server name: RasterLinkPro5 SG PC host name

Shared folder name: Condition set name

PC MACLAN print server

Spooler name: Condition set name_RasterLinkPro5 SG PC host name

NOTE!

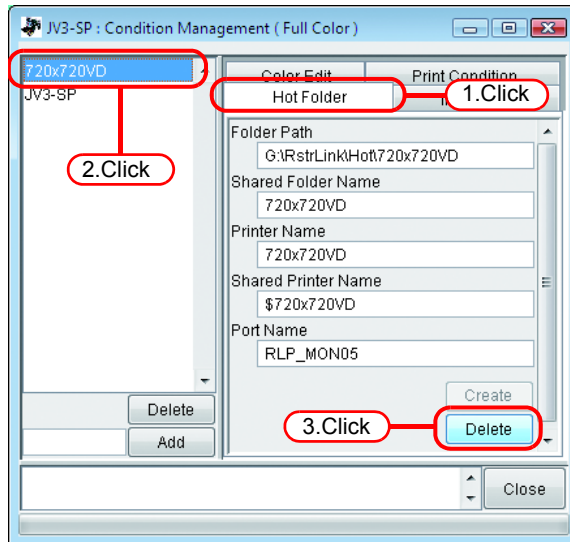
- The maximum length of the PC MACLAN print server spooler name allowed in the specification is 27 bytes.
If the Condition set name or host name is long, it is cut after the 28th byte. When outputting from the Printer driver from Macintosh, it is recommended not to use a long condition set name.
- When creating a Hot Folder and Printer driver, RasterLinkPro5 SG restarts PC MACLAN. In this case, since the connection with the Macintosh client is cut, problems occur such as files that cannot be deleted remaining in the Hot Folder and so on.
Therefore when creating a Hot Folder and Printer driver, unmount the Hot Folder mounted with Macintosh first.

Deleting a Hot folder and Printer driver

- 1 Open “Condition Management” window.
Click “Hot Folder” tab.
Select the Condition management set where a Hot Folder is to be deleted.
Click .

NOTE!

Do not close RasterLinkPro5 SG forcibly during deletion of a hot folder or printer driver.


NOTE!

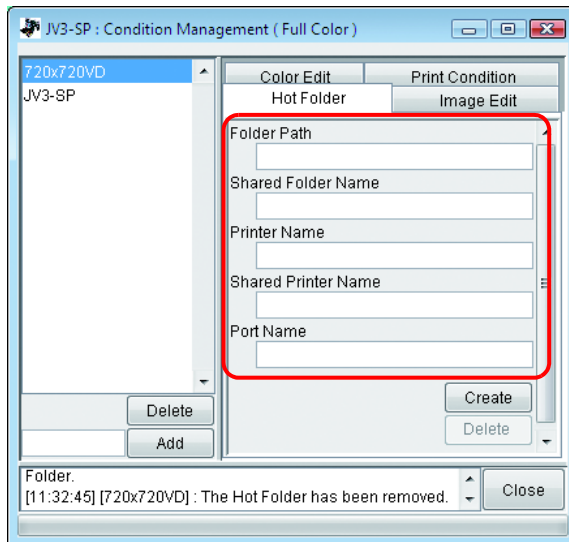
If PC MACLAN is installed on the RasterLinkPro5 SG PC, the [PC MACLAN file server warning] screen may appear while deleting the Hot Folder. Click to stop the PC MACLAN file server. The PC is not shut down.



2 A Hot Folder and Printer driver are deleted.

NOTE!

When you mount the Hot Folder of RasterLinkPro5 SG with AppleShare from Macintosh, you could, in some cases, not be able to delete Hot Folders. In this case, unmount the shared volume mounted by Macintosh, and then click .



Canceling PC MACLAN settings

If PC MACLAN is installed on the RasterLinkPro5 SG PC, PC MACLAN settings are automatically canceled when the Hot Folder and Printer driver are deleted.

NOTE!

- When deleting a Hot Folder and Printer driver, RasterLinkPro5 SG restarts PC MACLAN. In this case, since the connection with the Macintosh client is cut, problems occur such as files that cannot be deleted remaining in the Hot Folder and so on. Therefore when deleting a Hot Folder and Printer driver, unmount the Hot Folder mounted with Macintosh first.
- The PC MACLAN file server folder information is not removed automatically. Remove the folder information in accordance with the chapter on using the File Server in the PC MACLAN User's Guide.

Printer Status Display Function

On the “Printer Status”, various printer status are shown, and specify the own setting.

The contents displayed vary with the output port.

“Printer Status” is shown in the Execution Status Screen of each printer.

NOTE!

- Printer status is not updated automatically. If you want to check the latest status, click **Update to Current Status**.
- If you click **Update to Current Status** during printing, it takes time to update the status.

When the Output Port is IEEE1394 or USB 2.0

“General” information

Displays the present status of the printer.

JV3 Series/JV22/JV33/CJV30

General	Media	Ink	Heater	Version
Status	Local Idle			
Print Length	0.0 ft.			
Head Wiper Status	Usable			
Update to Current Status				

JV4/Tx series/DS series

General	Media	Ink	Version
Status	Remote Idle		
Print Length	0.0 ft.		
Head Wiper Status	Usable		
Head Height	78.7 mil		
Update to Current Status			

JV5

General	Media	Ink	Heater	Version
Status	Local Idle			
Print Length	0.0 ft.			
Head Wiper Status	Usable			
Print Gap	118.1 mil			
Update to Current Status				

1. Status

Displays the present status of the printer.

Status	Conditions
Not Ready	Initialization is active to start up the printer. Do not print at this status.
Cover Open	The front cover of the printer is raised. Close the front cover.
Local Idle	The printer is in local condition. The printing is not available. Set the printer remote mode for Printing.
Local Active	The printer is running for cleaning or test printing. The printing is not available. Set the printer remote mode for Printing.
Remote Idle	The printer is in remote condition. You may start printing.
Remote Active	Now printing.

2. Print Length

Indicates the actually printed length while printing.

3. Head Wiper Status

Shows whether or not the head wiper can be used.

4. Head Height (JV4 only)

Shows the current head height.

5. Print Gap (JV5 only)

Displays the current print gap.

“Media” Information

Indicates information on the media.

JV3 Series/JV22/JV33/JV5/JV4

CJV30

1. Media Size : Scan

Sets the width of the media.

Auto Detection:..... The value detected by the printer is used. The detected media width appears above the dimension line.

Manual Input:..... The value detected by the printer is not used, and the manually entered value is used as the media width. Use this setting when using RasterLinkPro5 SG without connecting to the printer.

When left and right margins are set, the width available for printing is as follows.

Width available for printing = Media Width - Left Margin - Right Margin

NOTE!

When the media width is zero, the layout preview cannot be displayed in the “Job Editor”. When the printer is not connected, enter a value for media width in the manual setting.

2. Media Size : Feed

Displays the media feed size when the media is leaf paper with auto detection.

Displays the roll paper when the media is roll paper or manual input.

3. Right Margin / 4. Left Margin

Sets the margin area (clipping area) at the left and right edges of the media. When the image is arranged in the margin area, that part is clipped and is not printed.

In the “Job Editor” layout preview, the margin area is shown colored gray.

This is effective when using sublimation transfer paper, for checking the layout pre-view screen when you do not want to use poor quality areas at the edges of the media.

This differs from the margin settings (dead space) of the printer itself. Bear in mind the dead space added by the printer.

5. Thickness (JV5/JV33)

Displays the thickness of the media.

6. Warning Line (CJV30 only)

Set the location to show Warning Lines from the origin of the printer.

7. Residual (JV5/JV33/CJV30)

Displays the media residual when [MEDIA RESIDUAL] of the printer operation panel is set to "ON".

“Media” information (With the JV3-SP Twin Roll)


When Twin Roll is set in the JV3-SP printer, if media width is set to “Auto Detection”, the width of each media is shown.

NOTE!

- With Twin Roll, left margin and right margin cannot be set.
- With “Manual Input”, the Twin Roll setting is disabled.

JV3-SP Twin Roll

General **Media** Ink Version

Media Width Auto Detection 

Manual Input 43.3 inch

Feed Roll Media

Right Margin 0.0 inch

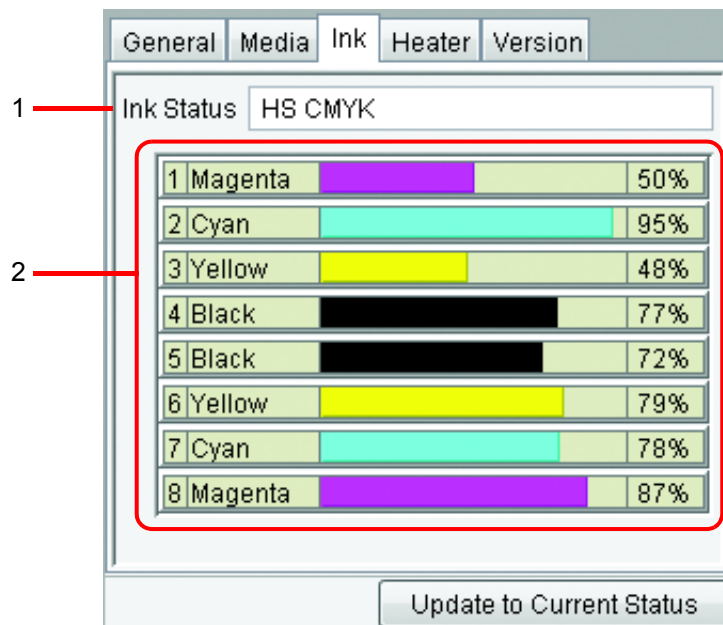
Left Margin 0.0 inch

Update to Current Status

“Ink” information (JV3 series/JV22/JV5/JV33/CJV30/JV400)

The ink information that has been set in the printer is displayed.

JV3 Series / JV22 / UJV-110 / JV5



NOTE!

If the ink cartridge is not inserted into the printer, ink information may not be displayed correctly. To display ink information, insert the ink cartridge into the printer correctly.

1. Ink Status

Display the ink set name.

2. Ink color and remaining level for each slot

Display the ink color in each slot, and the ink remaining.

“Ink” information (JV4)

Since ink can be set separately in the rear and front of the JV4 series, information for both rear and front appears.

When performing “RIP Only” when the printer is not connected, then “Printing Only” afterwards, set “Inkset Detection” to “Select”, and select the ink set loaded in the connected printer. Which head is used for printing is determined by the status of the rear/front ink set.

When the rear and front ink sets match

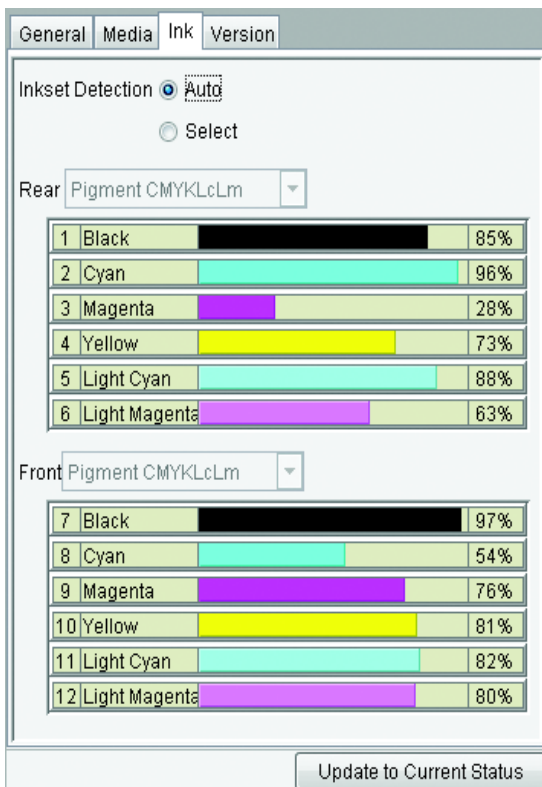
Follows the value set in the printer operation panel ([MAINTENANCE] - [USE HEAD]).

When the rear and front ink sets differ

The head on the side where the Device Profile and ink set match is used.


If they do not match, the value set in the printer operation panel ([MAINTENANCE] - [USE HEAD]) is used.

Inkset Detection: Auto



Shows the ink set name currently set in the printer, the ink color in each slot, and the ink remaining.

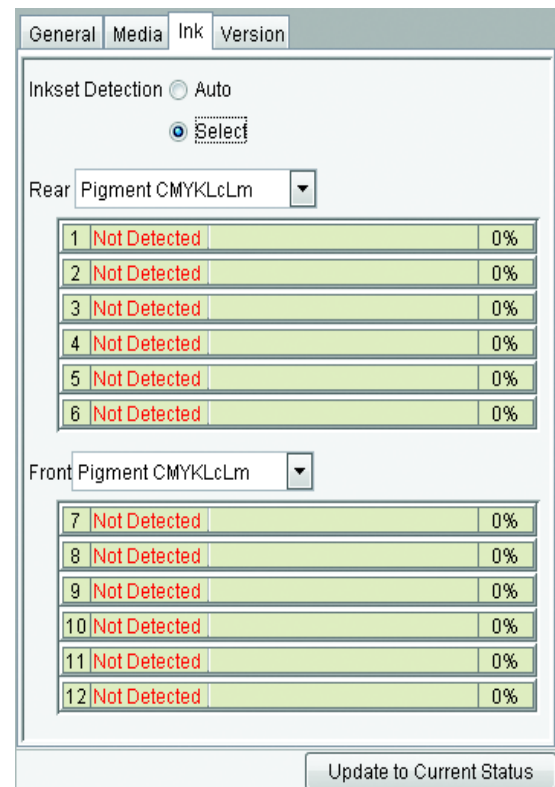Inkset Detection: Select



The rear or front ink set can be selected. When using a Device Profile that is not for an ink set loaded in the printer, select “Select”, and select the Device Profile for print and the same ink set.

NOTE!

If the ink cartridge is not inserted into the printer, ink information may not be displayed correctly. To display ink information, insert the ink cartridge into the printer correctly.

“Heater” information (JV3 series/JV5/CJV30)

Shows the information of the heater provided in the printer.

General	Media	Ink	Heater	Version
Pre-heater				
Heater Temp.		41 C		
Heater Status		Usable		
Print-heater				
Heater Temp.		40 C		
Heater Status		Usable		
Post-heater				
Heater Temp.		50 C		
Heater Status		Usable		
<input type="button" value="Update to Current Status"/>				

“Version” information

Shows the model information.

General	Media	Ink	Heater	Version
Model		JV3-75SP2		
Engine Version		7.30		
Command Name		MRL-II2		
Command Version		2.40		
<input type="button" value="Update to Current Status"/>				

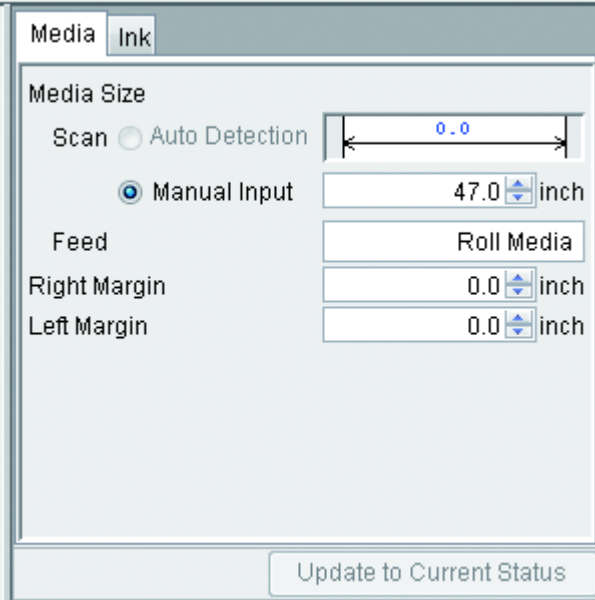
When the Output Port is without IEEE1394 or USB 2.0

Only setting is available. Printer information is not displayed.

“Media” information

The width of the media can be set only by “Manual Input”.

It is possible to set the “Left Margin” and the “Right Margin”.



The screenshot shows a configuration window titled "Media" with a sub-tab "Ink". The window contains the following settings:

Setting	Value
Media Size	0.0
Scan	<input type="radio"/> Auto Detection
	<input checked="" type="radio"/> Manual Input
Manual Input Value	47.0 inch
Feed	Roll Media
Right Margin	0.0 inch
Left Margin	0.0 inch

At the bottom of the window is a button labeled "Update to Current Status".

“Ink” information

This can only be set for JV4 series.

Only “Select” can be set for “Inkset Detection”.

Select the ink set loaded in the printer connected.

Media Ink

Inkset Detection Auto
 Select

Rear Pigment CMYKLcLm ▼

1	Not Detect	0%
2	Not Detect	0%
3	Not Detect	0%
4	Not Detect	0%
5	Not Detect	0%
6	Not Detect	0%

Front Pigment CMYKLcLm ▼

7	Not Detect	0%
8	Not Detect	0%
9	Not Detect	0%
10	Not Detect	0%
11	Not Detect	0%
12	Not Detect	0%

Update to Current Status

Appendix

The color acquisition function and supported scanners

In RasterLinkPro5 SG, it is possible to simulate and print original color that is scanned from document such as comprehensive layouts (color acquisition function).

This document explains the items to set in the scanner driver when using the color acquisition function. According to your scanner model, follow the scanner driver setup procedure on this manual.

Supported scanners

The following scanners are supported with the RasterLinkPro5 SG color acquisition function.

EPSON Perfection 4990 Photo

NOTE!

- Refer to the manual packaged with the scanner for how to operate the scanner and scanner driver.
- When using color acquisition function of RasterLinkPro5 SG use the setting value described in this manual.
It has an influence on the accuracy of the acquired color.
- When using a scanner for functions other than color acquisition function of RasterLinkPro5 SG, the default setting value of the scanner driver is changed.
When using a scanner for color acquisition function of RasterLinkPro5 SG, check the setting value.

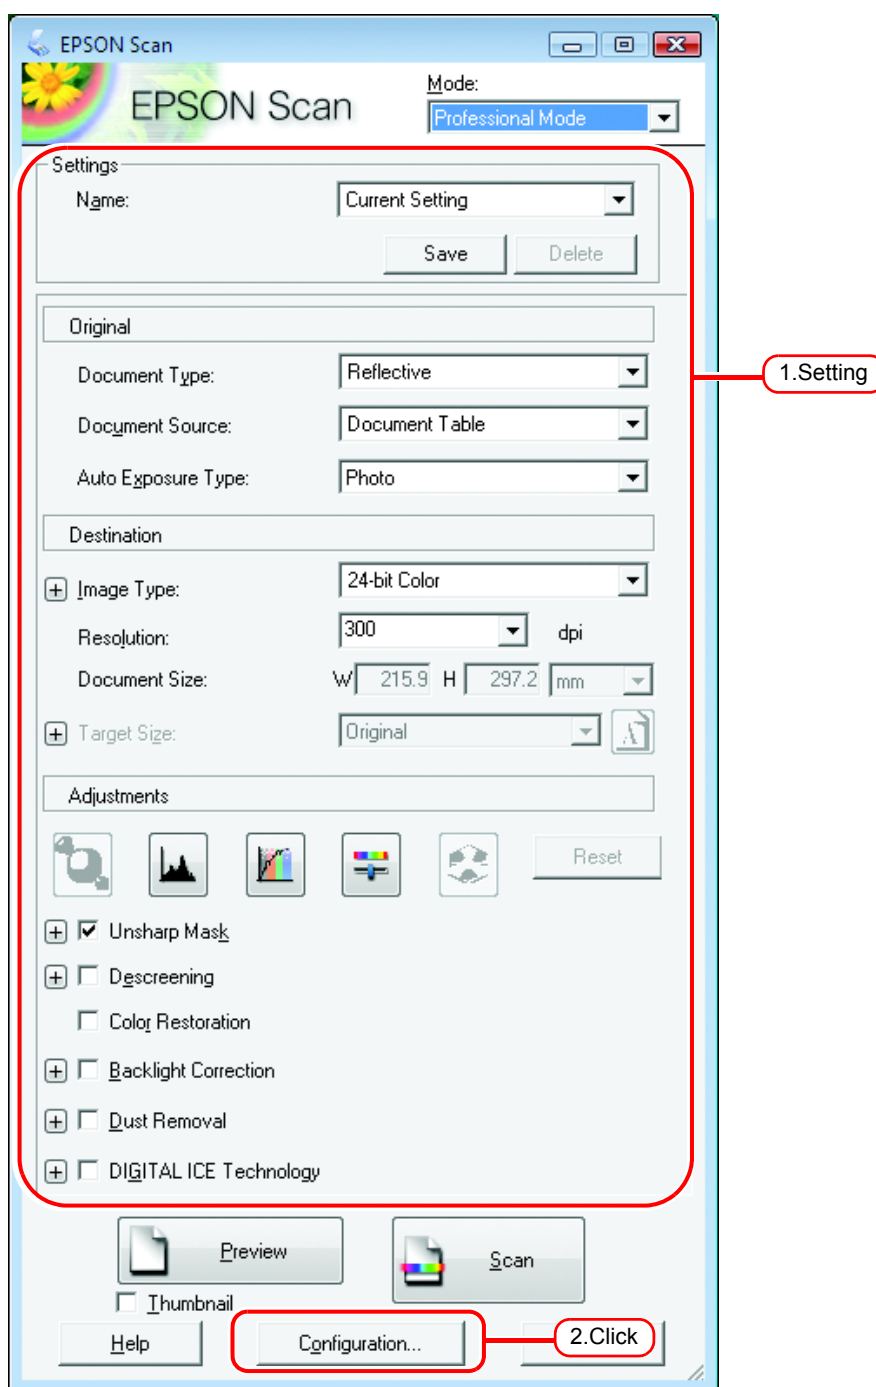
Scanner driver settings

In the RasterLinkPro5 SG color acquisition function, select the type of scanner, and click **Start scanning** . The scanner driver screen appears.


Scan the original document with the settings explained below.

With the EPSON Perfection 4990 Photo


- 1 Soon after the scanner starts, the scanner driver screen appears. Make the following settings and click **Configuration...** .



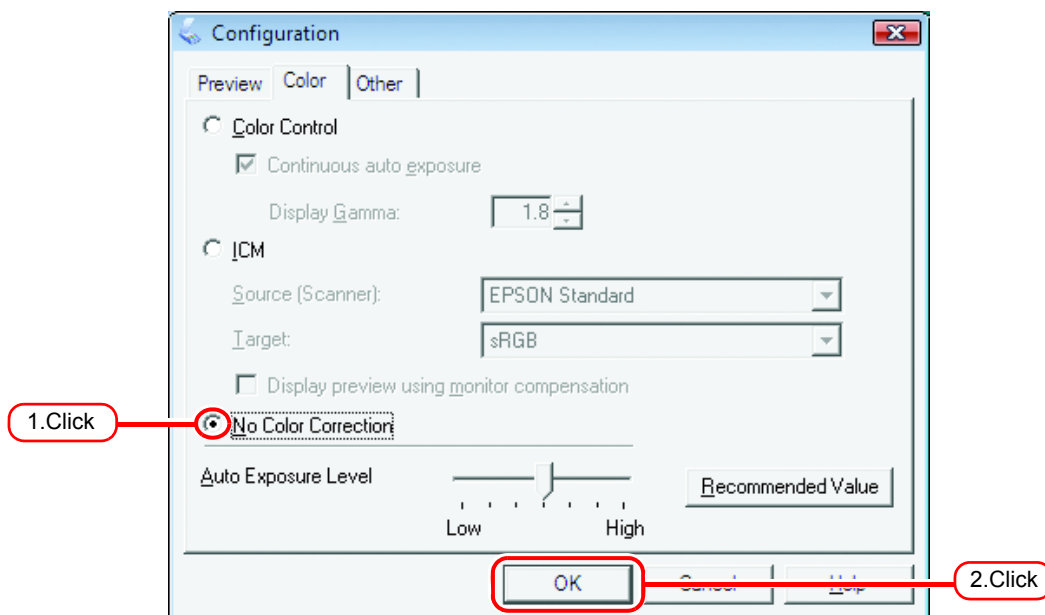
- 2 On the [Configuration] screen, select [No Color Correction] in the [Color] menu, and click .




- 3 Click .
The image is scanned

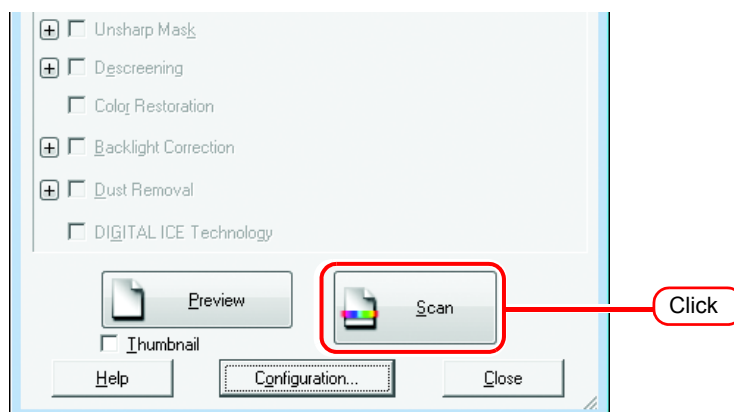

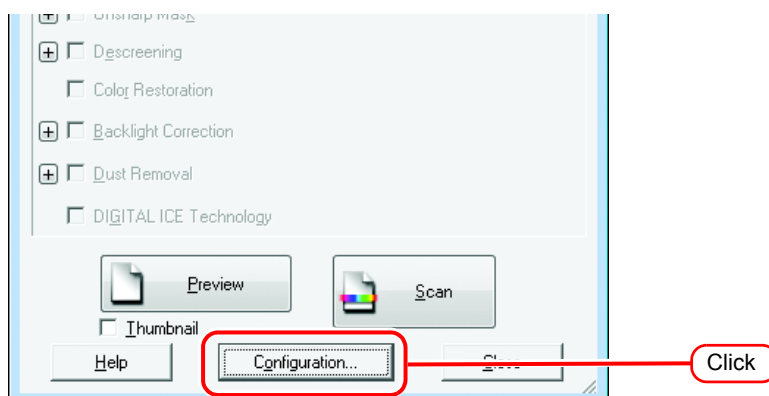
- 4 When the image is scanned, the scanner driver screen appears again. Click without changing the settings.



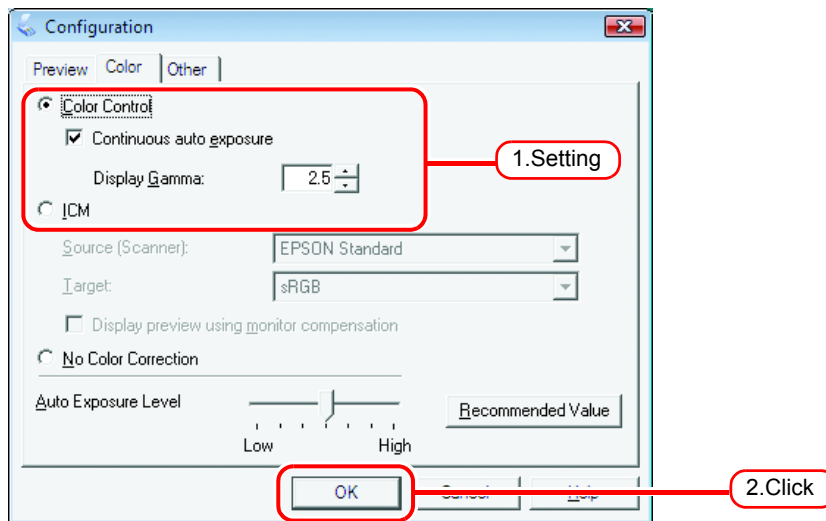- 5 On the [Configuration] screen, make the following settings in the [Color] menu, and click .



- 6 Click .
The image is scanned again.

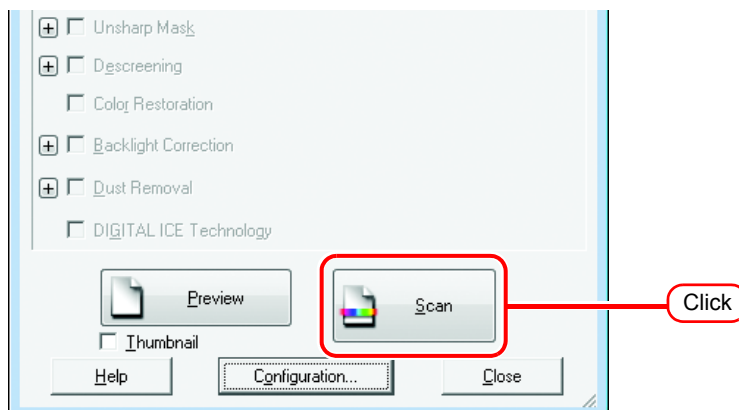

This completes the scanning operation.

Referring to “Acquire the color from original document (Scan color) (☞ P.121)”, carry out the procedure for the color acquisition function.

