



AccuLink™ Platinum 1050



One System.
Limitless Potential.
Complete Control.



Model AZON1050AC52ZA

12-5062-01

Congratulations!

Thank you for choosing the Platinum 1050 Smart Control. The intuitive interface and powerful features incorporated into this large color touch screen control represent the latest in climate control technology from the industry's leader in residential heating and air conditioning systems.

This guide will introduce you to many of the Platinum 1050's features and get you started using your Smart Control right away.

To enjoy the full benefit of your Platinum 1050 Smart Control, it should be connected to a Nexia™ Smart Home System account. Nexia is a cloud based platform that helps the smart products in your home work together in a single, convenient application. The XL1050 ships ready to serve as the central hub of an entire network of home automation devices. When connected to Nexia smart home system you can control your home's heating and cooling system and over 200 Z-Wave devices from a web enabled smart phone, PC or tablet.

For online user guide support, go to www.mynexia.com, scroll to the bottom of the page and select Help.

Features Include:

- Wi-Fi or Ethernet Connectivity
- Nexia™ climate service
- Built in Nexia Bridge
- Weather Forecast, Radar and Alerts
- Home Screen Widget Options
- Allergy Clean/Quick Clean Cycles
- Screen Lock & Guest Access Security
- Ten Year Registered Warranty
- User Setup Wizard
- Self Guided Scheduling
- One Touch Presets
- Runtime History
- System Alerts
- Screen Saver
- Clean Screen
- Color Themes



Nexia™ Benefits

The Platinum 1050 is designed to work in concert with Nexia smart home systems to provide the convenience and advantages of a Smart Home.

Voice Control

Control your Platinum 1050, lights and small appliances by voice command with Amazon Echo.

- Adjust the thermostat by saying, "Alexa, set the <thermostat name> to 68 degrees."
- Turn lights on or off with simple commands such as, "Alexa, turn on the front porch light."
- Set custom lighting settings such as, "Alexa, set the dining room light to 50 percent."
- Activate small appliances using a plug-in module such as, "Alexa, turn on the coffee pot."

Simplified Scheduling

Log into the Nexia smart home website. Simply point and click and your customized schedule is set straight away.

Runtime History

Keep track of your system by downloading the cooling and heating system runtime history from Nexia¹.

Nexia Diagnostics

With your approval, Nexia Diagnostics allows your local dealer to remotely monitor your home's heating and cooling system using real-time performance data, ensuring you receive the highest possible level of Customer Service from American Standard and your American Standard Dealer. Ask your dealer about Nexia Diagnostics.

Automations

By connecting additional devices to the Platinum 1050's built in bridge, you will unleash the full capabilities of Nexia smart home systems with automations. Automations allow your smart devices to operate automatically based on specific conditions or time of day. For example, with the addition of a compatible touchpad door lock you can automatically change your thermostat when entering or leaving home to reduce energy use. You can also add window and door sensors to automatically adjust the Platinum 1050's temperature setting whenever a door or window is left open to reduce energy use.

Contents

Navigation Overview	4
Home Screen	5
Menu Screen	6
Settings Screen	7
Home Screen Customization	8
Default	8
Default + Presets	9
Adding Widgets	10
User Setup Wizard	11
Display	12
Screen Layout	13
Scheduling	14
Network Setup	16
Nexia Registration	17
Weather Setup	19
Manual Scheduling	20
Changing the Schedule	21
Adding Periods	23
Deleting Periods	24
Screen Lock and Guest Access	25
Screen Lock and Guest Access	25
Nexia™ smart home system	26
Adding/Removing Z-Wave Devices (via 1050)	27
Adding Z-Wave Devices (via mobile app)	28
Advanced Z-Wave Settings	29
Other Features	30
Quiet Mode	30
Notices	
FCC & IC NOTICE	31

This product is compatible with Honeywell's Enviracom® 2.0 protocol. Enviracom® is a registered trademark of Honeywell.

Navigation Overview

All of the Platinum 1050 features may be accessed via the Home, Menu, and Settings screens

Home Screen



Menu Screen



Settings Screen



From Home Screen, Press: **MENU**

From Home Screen, Press: **MENU > SETTINGS**


FOR
MORE
DETAILS:

See Page 5

See Page 6

See Page 7

Home Screen

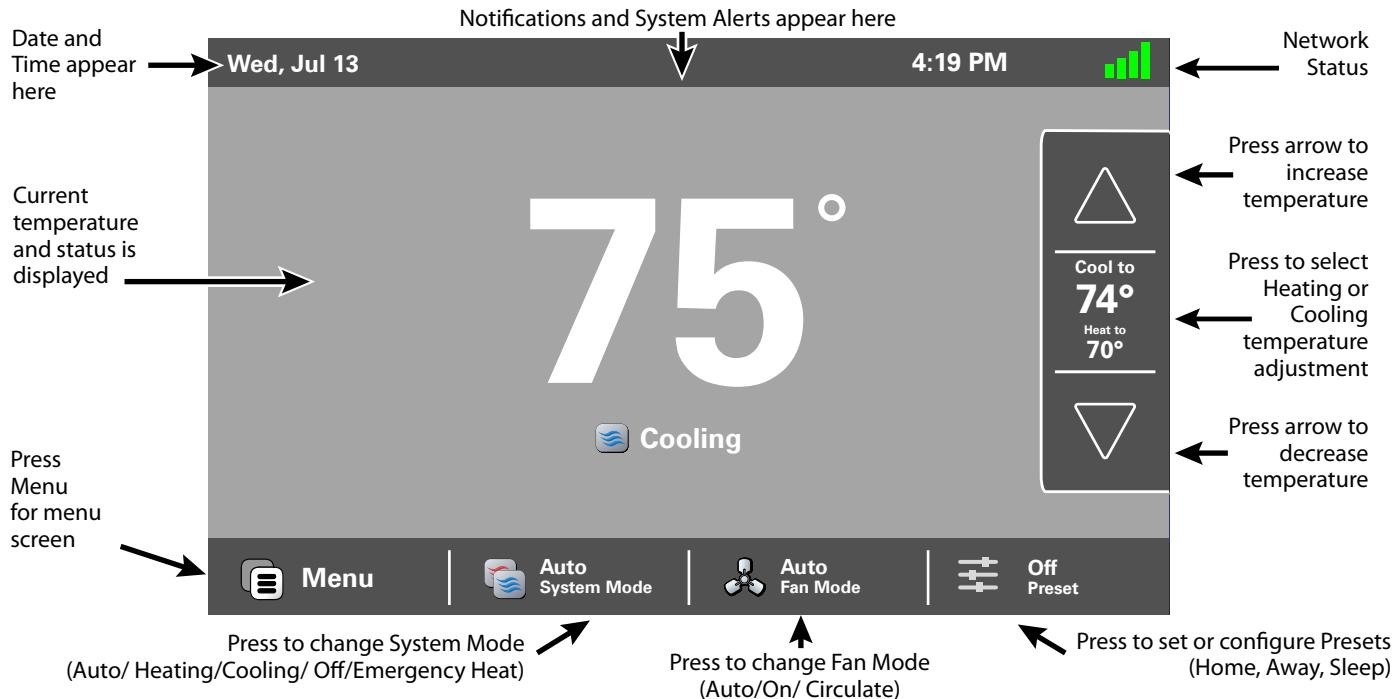

Menu Screen




Settings Screen

Press to set Temperature Sensor, features and calibration

Press to set up Display features, Screen Layout, Clean Screen and Screen Lock/Guest Access

Press to set up Date & Time. Date & Time auto update when connected/registered with Nexia

Software upgrades occur automatically when the control is connected to and registered with Nexia.

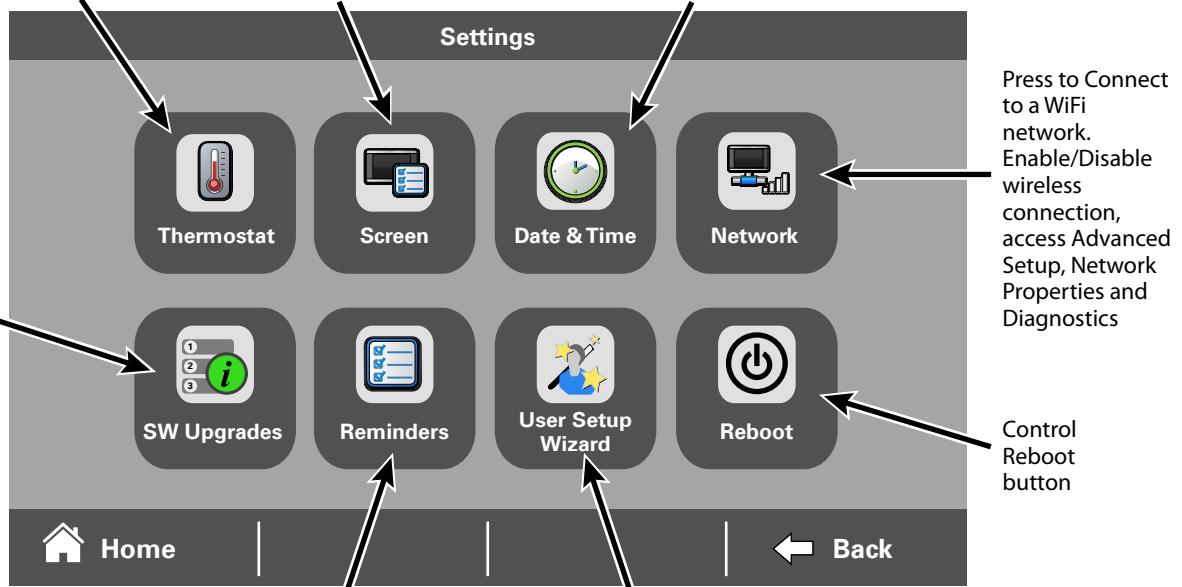

Press to Set up system and accessory maintenance reminders


Guided User Setup

Home Screen Customization

You may choose to use the Default home screen or customize the interface with the following features.

1

Default (Scheduling is **Disabled**)

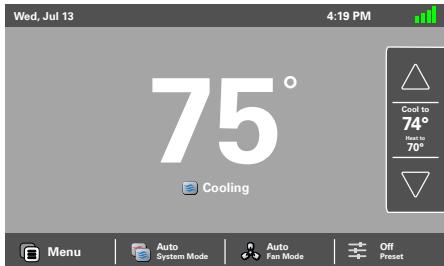

Out of the box the Platinum 1050's home screen is set up with a basic thermostat interface. Simply adjust the **HEAT TO** or **COOL TO** setting up or down and the setting remains at that temperature until you adjust it again. Scheduling is disabled.

Press the **SYSTEM** or **FAN MODE** button to select your preferred operation.

? **FOR
MORE
DETAILS:**

See Page 5

2

Default + Presets (Scheduling is **Disabled**)




In the Default configuration, you may also choose to set up 3 presets. Using presets permits changing the heating and cooling settings by pressing one button.

See Page 9

3

Add Optional Widgets (Scheduling may be **Enabled** or **Disabled**)

In example below, scheduling is **Enabled**

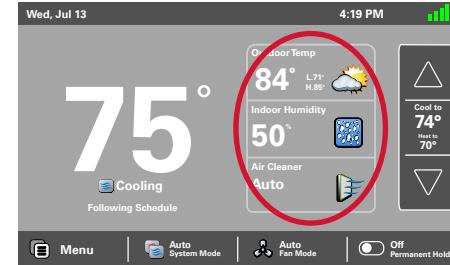

Users may choose to display up to 3 of 7 available widgets on the home screen.

In addition, you may customize a schedule to fit your needs using the convenient Scheduling Wizard which guides you through the process.

See Page 10

2

Default + Presets

1-Touch Presets provide predetermined Set Points for Home, Away and Sleep time periods.

Note: 1-Touch Presets requires Scheduling to be disabled. To disable Scheduling, go to **MENU>SCHEDULES** and select **DISABLE**.

When scheduling is disabled, heating and cooling set points are maintained indefinitely. When a temperature change is desired, the user must manually adjust the temperature to the new setting.

Configuring 1-Touch Preset

1. Press the **PRESET** button from the home screen (If a Preset is not selected it will display **OFF**).



To edit the parameters, press the **EDIT** button, and first, select **AWAY**.

3. To change the Cooling Set Point, press the blue **COOLING SET POINT** to activate the setting. The current System Mode indicator will display blue wavy lines.


Use the **UP** and **DOWN** Arrows to adjust the Set Point to the desired temperature.

4. To change the Heating Set Point, press the red **HEATING SET POINT** area to activate the setting. The current System Mode indicator will display red wavy lines.

Use the **UP** and **DOWN** Arrows to adjust the Set Point to the desired temperature.

5. Repeat the process for Home and Sleep settings.
6. When editing is complete, press **APPLY**.

7. Choose the desired preset and press **APPLY**. The preset temperature settings will be displayed on the Home Screen. The selected preset will display at bottom right:

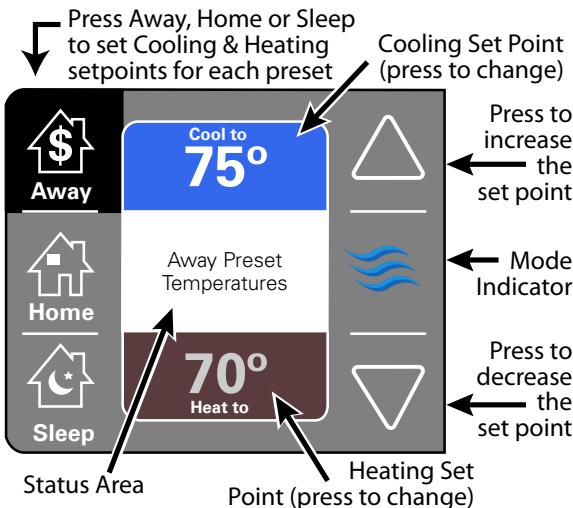


3

Adding Widgets

Optionally, up to 3 widgets may be chosen to appear on your home screen. They can be selected by navigating to **Menu > Settings > Screen > Screen Layout**

In multi-zone systems, you can scroll between zones by pressing the arrow keys

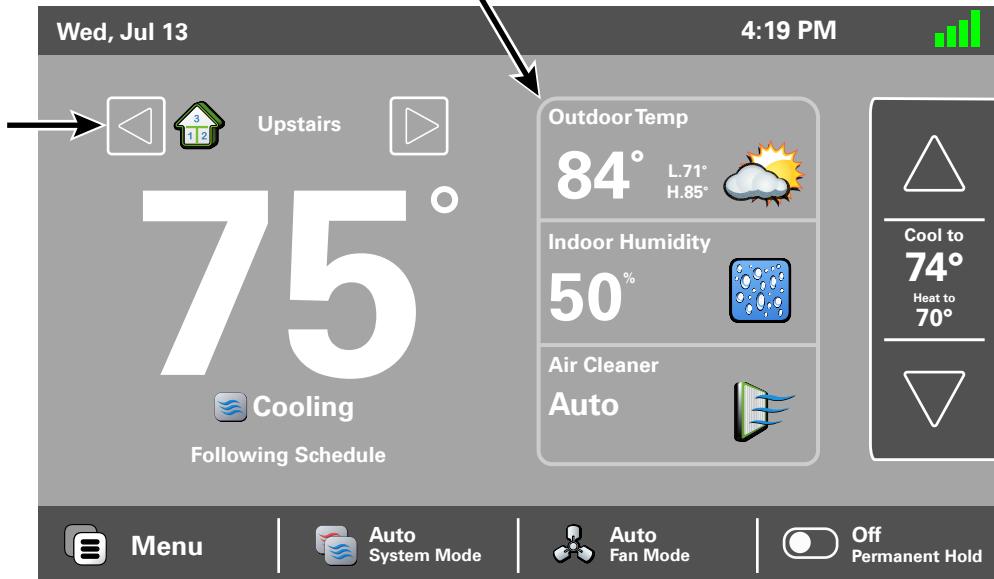

When scheduling is enabled, the Preset button is disabled and a Permanent Hold button is displayed. The system will follow the custom schedule you've created. You may override the schedule by adjusting the temperature settings with the up/down arrows at the right of the screen. At the next period change, the schedule will resume.

To maintain a temperature indefinitely, adjust the setpoint to the desired temperature and press the Permanent Hold button. It will then display **ON**, and the control will maintain that temperature setpoint until you manually change it. Press the Permanent Hold button again to turn Permanent Hold **OFF**. The Control resumes following the schedule.

User Setup Wizard

The User Setup Wizard guides you through the Platinum 1050's User configurable settings.

To complete the Setup Wizard and connect the Platinum 1050 to Nexia Smart Home Systems, you need the following:

- Internet service
- Your Wi-Fi network name and password
- An internet browser
- A valid email address

To access the User Setup Wizard, select **MENU > SETTINGS > USER SETUP WIZARD**.



The User Setup Wizard will guide you through the following screens:

1. Display
2. Screen Layout
3. Scheduling
4. (A) Guided Schedules **OR** (B) 1-Touch Presets
5. Network
6. Nexia
7. Weather

Note: You may skip any section of the Wizard by pressing Cancel. It is not possible to exit or go back to a completed section after starting the process.

After each step, the Wizard will show your progress. Press **Next** to begin the next section.




TIP Any settings can be changed at a later date either manually, or by running this Wizard again.

Begin User Wizard

From Home Screen, Press: **MENU > SETTINGS**




Select **User Setup Wizard** to begin.

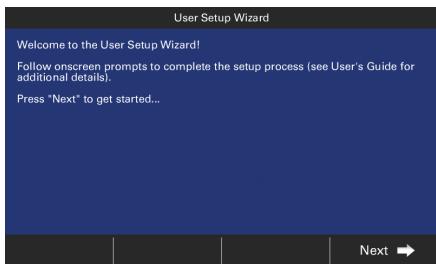


Press **NEXT** and set your preferred display brightness, backlight, screen saver and color theme settings.

1) Display

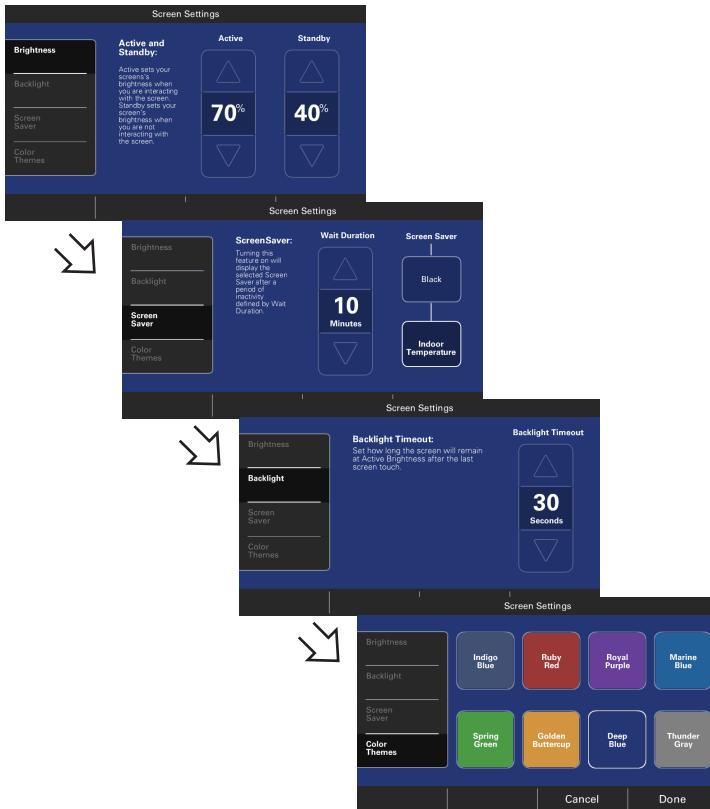

Press **NEXT**

2) Screen Layout

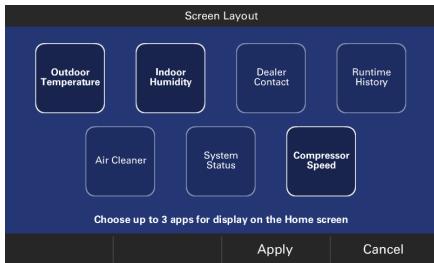

Select up to 3 apps (widgets) from the layout screen and press **Apply**. These widgets will be displayed on the home screen.

Screen Layout Options

- **Outdoor Temperature** – Displays outdoor temperature on home screen.¹ Press widget to display 5 day weather forecast, alerts and radar.
- **Indoor Humidity** – Displays indoor relative humidity on home screen.
- **Dealer Contact** – The servicing American Standard dealer's name will be displayed on the home screen widget.^{1,2} Press the dealer widget for contact information.
- **Runtime History** – Displays runtime history widget on home screen. Press the widget to display daily and monthly runtime history with average indoor and outdoor temperature^{1,3}.

- **Air Cleaner** – Displays air cleaner widget on home screen. Press the widget to display and select air cleaning options:
 - Auto** – operates whenever system fan is on
 - Quick Clean** – 3 hour air cleaner power cycle
 - Allergy Clean** – 24 hour air cleaner power cycle
- **System Status** – The system status widget is displayed on the home screen. Press the widget to display cooling or heating, accessory⁴ and zoning⁵ system status.
- **Compressor Speed** – Displays American Standard's AccuComfort™ variable speed compressor speed as a percent of maximum speed.

1 Requires internet service and registration with Nexia™ smart home system.

2 Requires the servicing American Standard dealers code to be entered in the control.

3 Requires weather service to be enabled or an outdoor temperature sensor installed.


4 Requires accessories to be installed.

5 Requires American Standard zoning system to be installed.



Press **NEXT**

3) Scheduling

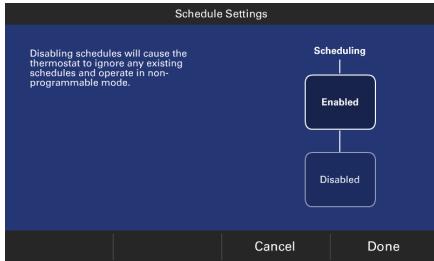

Scheduling Options in Wizard

- Enabled** – Guided Scheduling will begin. **See 4A: Guided Scheduling**
- Disabled** – 1-Touch Preset Options of Away, Home and Sleep can be set. **See 4B: 1-Touch Presets**




Press **NEXT**


4A) Guided Scheduling

(If Scheduling Enabled Chosen)


After pressing Scheduling **Enabled**, the welcome to Guided Scheduling screen is displayed.

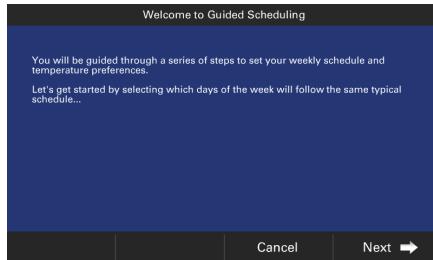

Guided Scheduling is a convenient way to quickly revise the default schedule and customize a schedule with your preferred settings for comfort or energy savings. Press **NEXT**.

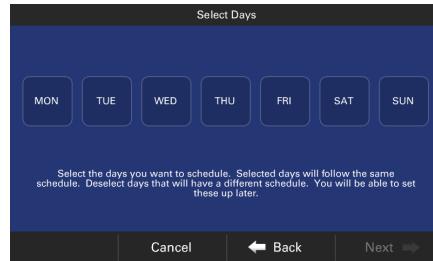

Select the days you want to schedule. Press **NEXT**.

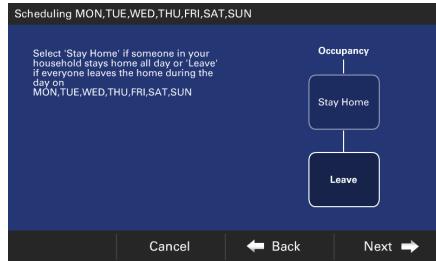

Select **STAY HOME** or **LEAVE**. Press **NEXT**. Stay Home will set up 2 periods per day, wake and sleep. Leave will set up four periods: Wake, Away, Home and Sleep. Each period's cooling and heating temperature setting was pre-programmed at the factory for comfort.

4B) 1-Touch Presets


(If Scheduling Disabled Chosen)

1-Touch Presets provide predetermined Heating and Cooling Set Points for Home, Away and Sleep time periods.

See page 9 for detailed instructions how to configure 1-Touch presets.



Adjust the time you would prefer the Wake Period to Start using the up and down arrows. Press **NEXT**.

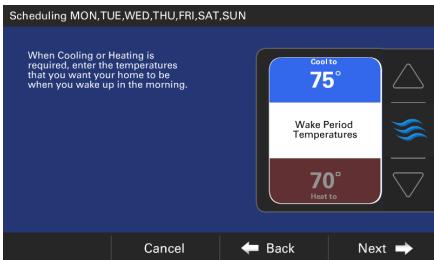

Adjust the cooling and heating system Wake Period Temperature setting by adjusting the **UP** and **DOWN** arrows. To change the cooling setting press the blue **Cool To** button. To change the heating setting press the red **Heat To** button. Press **NEXT** and follow the onscreen instructions to complete Guided Scheduling.



Press **NEXT**


5) Network Setup

There are three ways to connect the Platinum 1050 Control to a local network:

1. Wireless Wi-Fi connection




Select your network

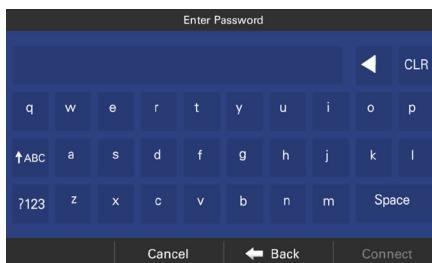

Enter your Password then press **CONNECT**.

2. Wireless Wi-Fi connection using WPS

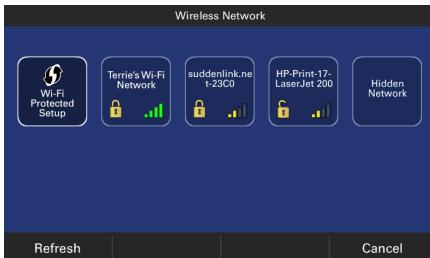

Press the WPS button on your router, then return to your Platinum 1050 Control and press the **WI-FI PROTECTED SETUP** button on the Wireless Network screen. Press **NEXT**.

3. Wireless Wi-Fi connection using a "hidden network."



Press "**Hidden Network**" which will be at the end of the list of available networks. If there are more than eight networks, you will need to scroll to the next page.




Enter your SSID, which is the name of the router, then press **NEXT**.



Next, select the security type for this network. If you select **None**, press **Connect**.

5) Network Setup (cont.)

If you select **WPA** or **WEP**, you will need to enter a password, then **CONNECT**.

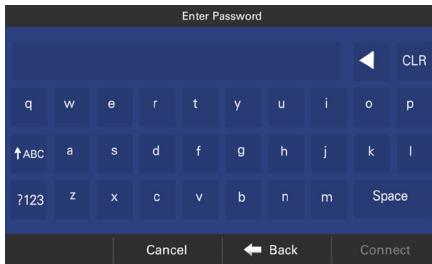

4. The Platinum 1050 also features an Ethernet jack and may be connected to a router using Ethernet cable. The control will recognize an Ethernet connection and the User Wizard will skip the Wireless setup screens and display the Nexia Registration screen next.




Press **NEXT**


6) Nexia Registration




To control your home climate system from your web enabled smartphone, tablet or computer go to www.mynexia.com and set up a Nexia account. If you already have an account, log in and select **ADD DEVICES**.

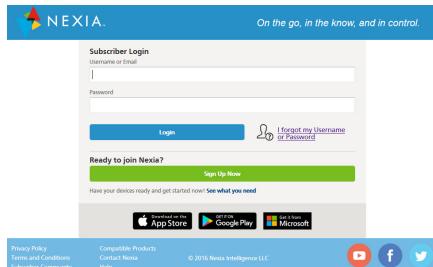


Select **SIGN UP NOW** to set up an account or log in to an existing account.

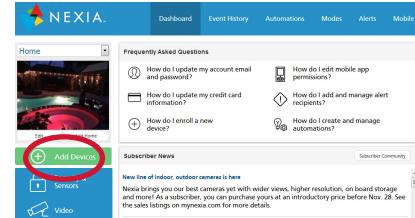

From the Nexia Dashboard select **ADD DEVICES**.

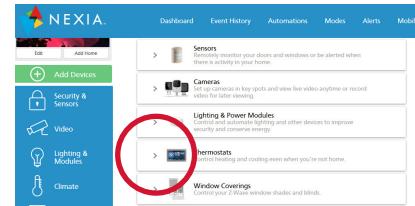

Select the **THEMOSTATS** drop down arrow.

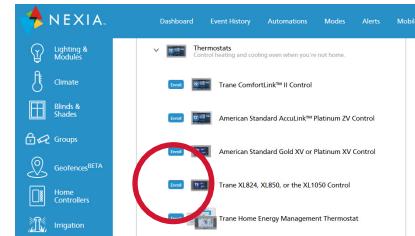


Select the **ENROLL** button for Platinum 824, 850 or 1050 Control.

6) Nexia Registration (cont.)




Press **CONTINUE**.

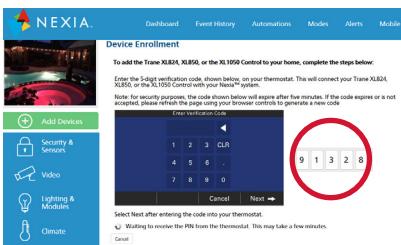


Nexia will generate a Pin Code. Record the Pin Code.




Return to the Platinum 1050 control and Press **NEXT**.

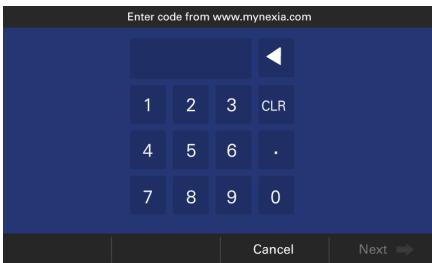

Enter the Pin Code and Press **NEXT**.

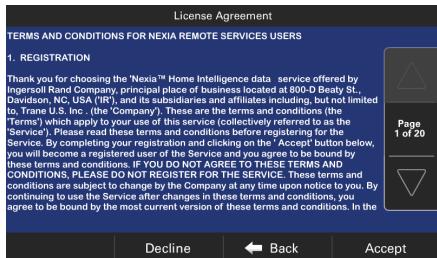

Read the License Agreement, then **ACCEPT** or **DECLINE**.

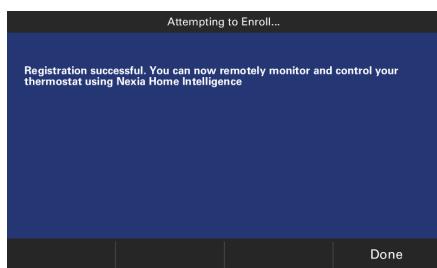

Registration successful. Press **DONE**.



Press **NEXT**


7) Weather Setup




To view your local weather press **LOCATION**.



To view the 5 day forecast press **FORECAST**.

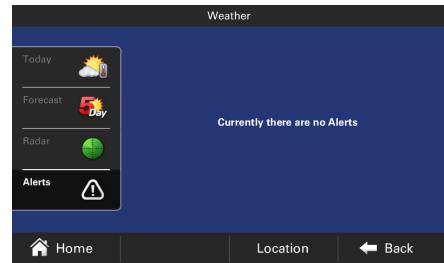

To view weather warnings press **ALERTS**

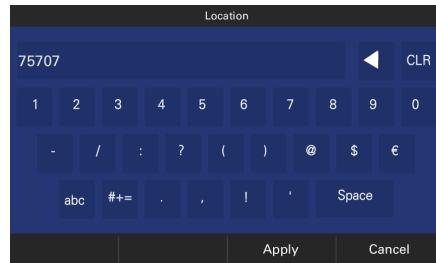

To change the Weather Zip Code Press **LOCATION**.

Use the backspace button to delete the current zip code. Enter the new zip code and press **APPLY**.



To view the weather map press **RADAR**.

Wizard
is
Complete!



Manual Scheduling

To Enable Scheduling, select the following:
MENU > SCHEDULES > ENABLE SCHEDULE.



After pressing **ENABLE SCHEDULE**, the factory default week-long schedule screen will be displayed. The schedule displayed is a 7 day schedule with up to 4 periods per day.


The four periods include: Wake, Away, Home and Sleep. Each period's cooling and heating temperature setting was pre-programmed at the factory for comfort.

The schedule can be changed in the following ways:

- Guided Scheduling – See the Guided Scheduling portion in the User Wizard. A series of screens will aid you in setting up a schedule.
- Manual Scheduling – To manually schedule, press anywhere on the Weekly Schedule screen to begin modifying the schedule. You may modify, add and delete periods. See the samples on the following pages.

Weekly Schedule																		
MON	6:00	6:00	6:00	6:00	6:00	6:00	6:00											
	Wake	75°	70°	Away	75°	70°	Home	75°	70°	Sleep	75°	70°						
TUE	6:00	6:00	6:00	6:00	6:00	6:00	6:00	6:00	6:00	Home	75°	70°	Sleep	75°	70°			
WED	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	Away	75°	70°	Home	75°	70°	Sleep	75°	70°
THU	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	Away	75°	70°	Home	75°	70°	Sleep	75°	70°
FRI	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	Away	75°	70°	Home	75°	70°	Sleep	75°	70°
SAT	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	Away	75°	70°	Home	75°	70°	Sleep	75°	70°
SUN	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	8:00	Away	75°	70°	Home	75°	70°	Sleep	75°	70°

Changing the Schedule

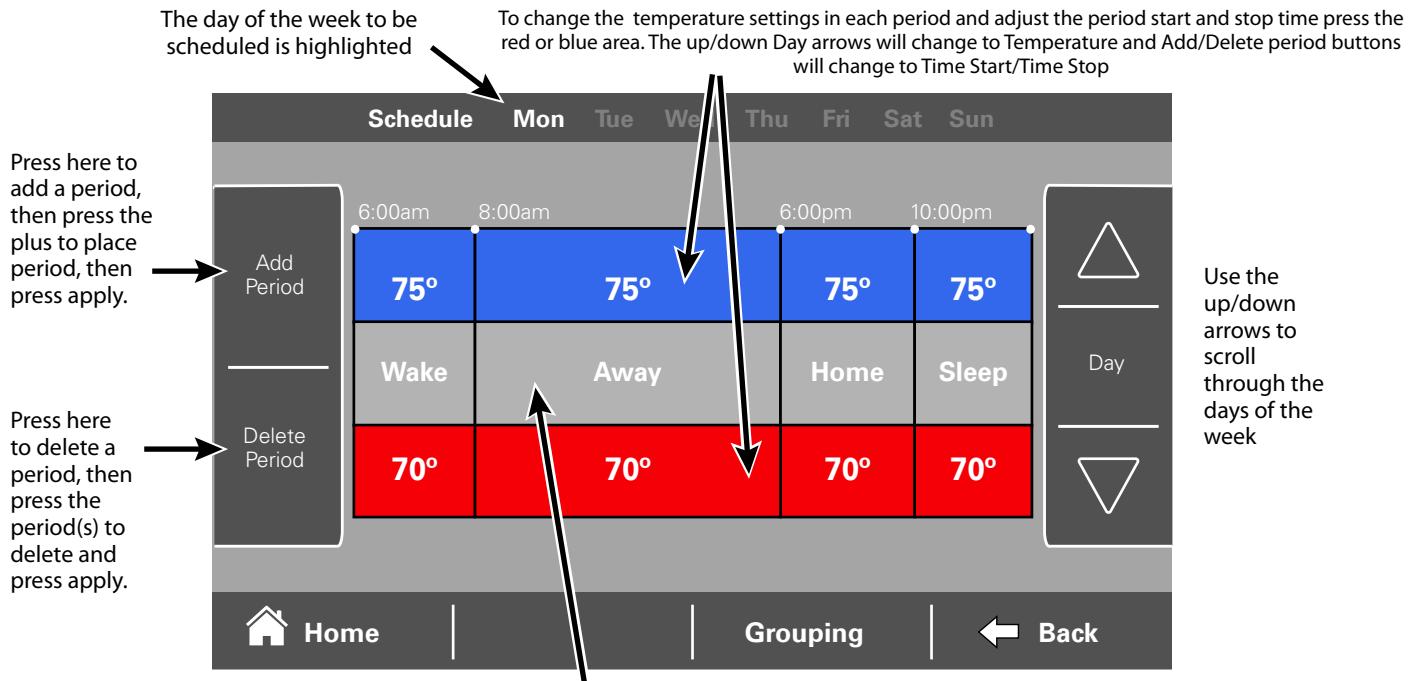

Changing the Schedule (cont.)

Changing Period Start or End Times


1. Press anywhere in the Period to make it active. Other Periods will dim and Start and End times for this Period will be in a black box on the left hand side of the screen.
2. Press **TIME START** or **TIME END** and adjust the time using the **UP** and **DOWN** arrows. Note: The Platinum 1050 uses intelligent technology and will not allow setting an illogical start or end time. Periods must be at least 30 minutes in duration.

Changing Period Set Points

1. Press the active Period's Cooling or Heating Temperature Set Point.
2. Adjust the Set Point using the **UP** or **DOWN** arrows.

Changing the Period Name

1. Press the **PERIOD NAME** (Wake, Away, etc.).
2. Select a predefined name or press **NEW** and select **NEXT**.
3. If selecting a new name, enter the name using the on-screen keyboard.
4. Press **NEXT**.

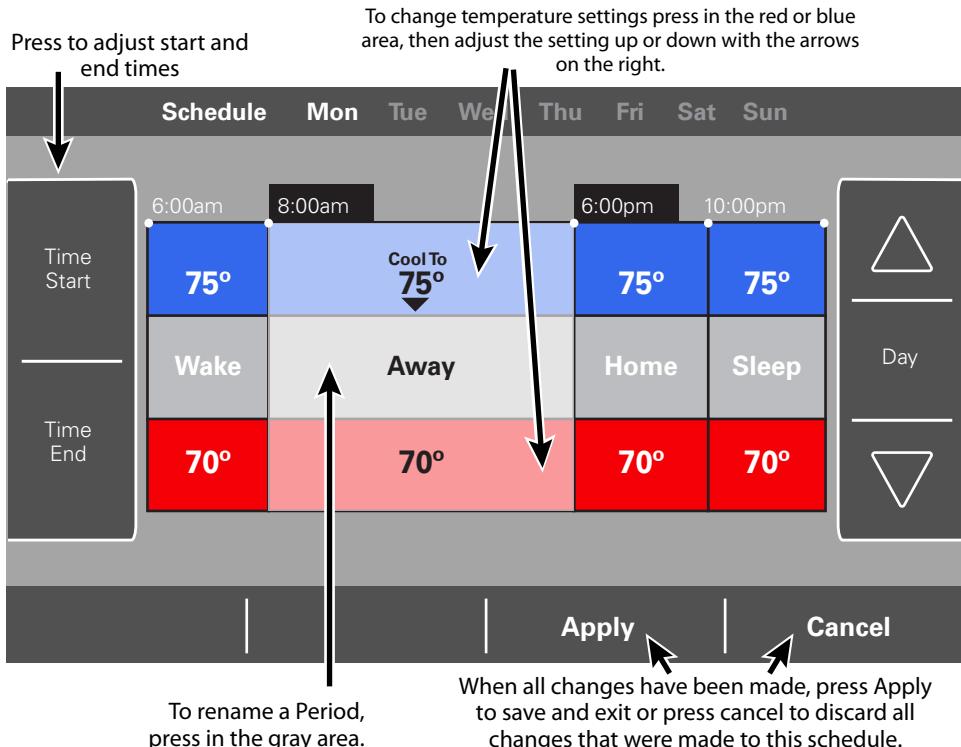

Adding Periods

The Platinum 1050 Smart Control is capable of adjusting the temperature settings throughout the day according to a user-programmable schedule.

Each day of the week can have its own unique schedule, and each day can have a maximum number of four periods.

Periods define the time of day when the target temperature is adjusted. Each day can have from one to four periods, and each day can have a different number of periods. The Scheduling Screen shows the start time for each Period highlighted across the top row.

Important: Scheduling must be enabled before a schedule can be defined. To verify that scheduling is enabled, navigate to **MENU>SCHEDULES** and verify scheduling is enabled. If enabled a Weekly Schedule will be displayed. If not, a message will indicate scheduling is disabled..

Adding Periods


1. Press **ADD PERIOD**, the Add Period Screen is displayed.
2. Press the green circle where you would like to insert a Period.

3. Choose a name for the new Period or select **New** to define a custom name and press **NEXT**.

4. If selecting a new name, enter the name using the on-screen keyboard.

5. Press **NEXT**.

Press one of the plus signs to insert a new period.

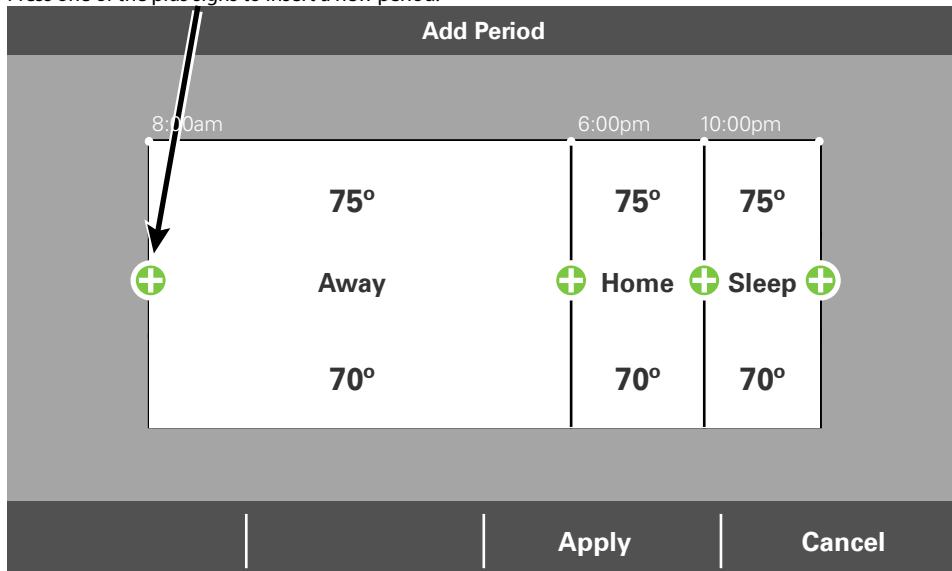


Deleting Periods

Deleting Periods

1. From the Schedule Screen press **DELETE PERIOD**, the Delete Periods Screen is displayed.
2. Press the **TRASH CAN** icon in the Period(s) you wish to delete.
3. Press **APPLY** to save your changes and return to the Schedule Screen. The changes should be reflected in the display.

Press one of the trash cans to delete a period.

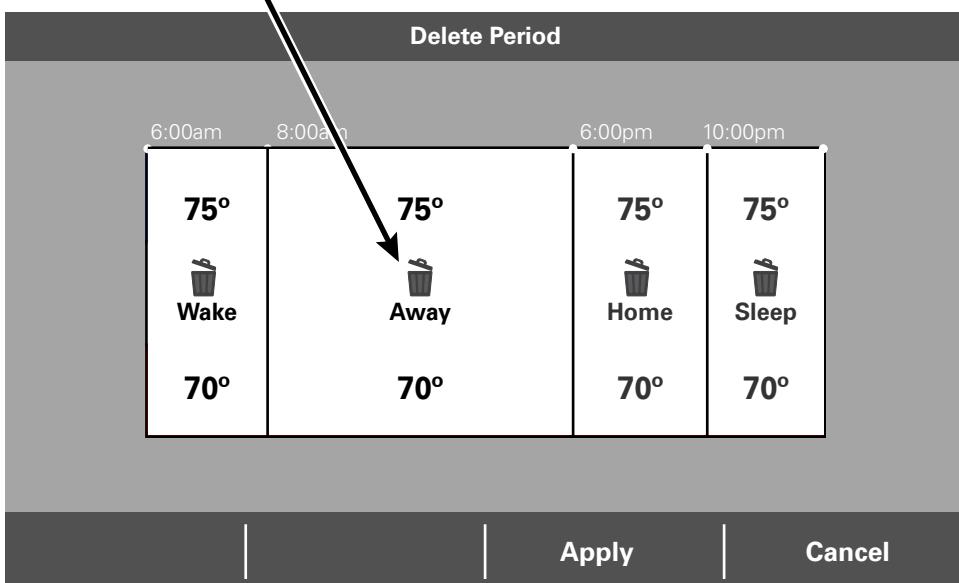

Screen Lock and Guest Access

The Platinum 1050 features several options to lock the screen so users cannot make unwanted changes.

Turning on Guest Access allows Users to make up to 5 degree changes to temperature settings. All other settings will remain locked.


Applying screen lock will cause the screen to lock after 1 minute of inactivity. Press and hold the Menu button for 5 seconds to temporarily unlock a locked screen.

Enabling Screen Lock and Guest Access

1. Press Menu>Settings>Screen>Screen Lock
2. Press On to enable Screen Lock.
3. To enable Guest Access press On.

Disabling Screen Lock and Guest Access

1. To disable Screen Lock or Guest Access temporarily unlock the feature and navigate to the Screen Lock and Guest Access feature screen.
2. Press Off to disable Guest Access or Screen Lock.

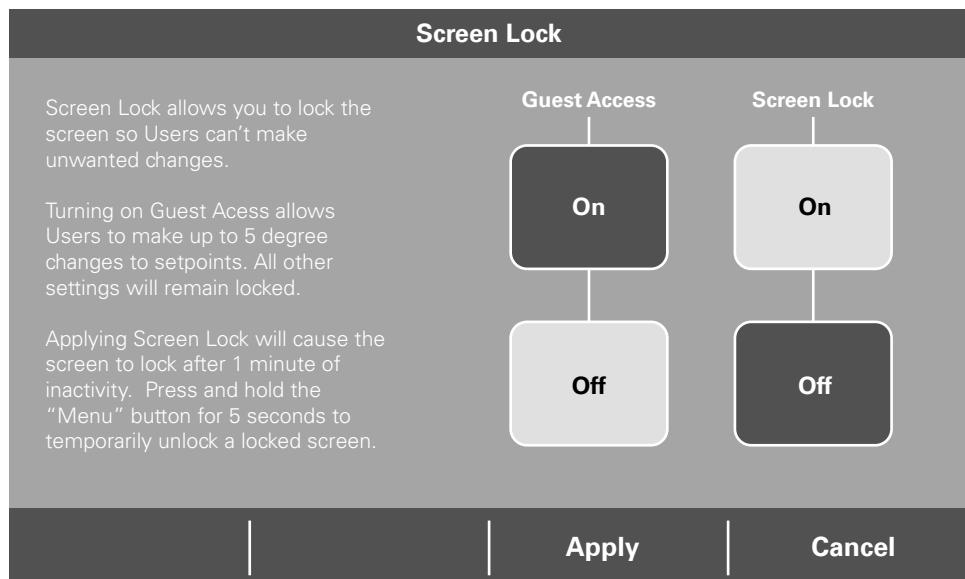

Nexia™ smart home system

When enrolled to a Nexia™ smart home account, the Platinum 1050 is a Z-Wave Plus security-enabled device that can serve as a central hub for an entire network of home automation devices, including all non-battery powered devices that will act as repeaters on your network. Your Platinum 1050 can also display local weather conditions, five-day forecasts and National Weather Service warnings and alerts. See the section on Adding Z-Wave Devices for more information on taking advantage of this functionality.

A basic Nexia™ smart home account subscription is included with the Platinum 1050 Control at no additional charge.

Note: Adding additional devices may add charges to your Nexia™ smart home account.

To create your Nexia™ smart home account go to www.mynexia.com.




Adding/Removing Z-Wave Devices (via 1050)

Your Platinum 1050 is designed to integrate seamlessly with a Nexia™ smart home system.

Adding Z-Wave Devices

1. From the **HOME** Screen, press **MENU** on the Platinum 1050 Control, then press **NEXIA**.
2. Press **ADD DEVICE** and follow the device manufacturer's instructions for setting the

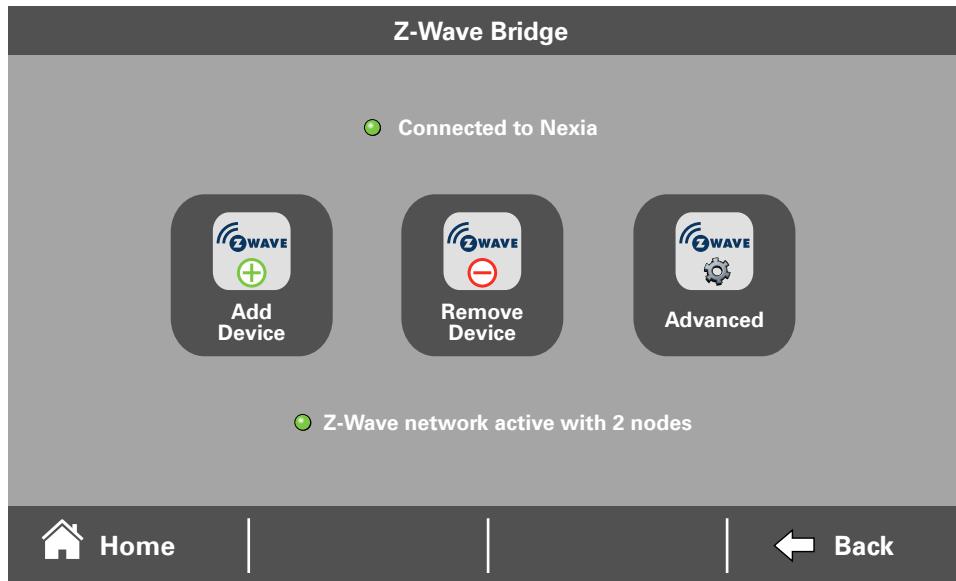

Z-Wave device into learn mode. You will have four minutes to set the device into learn mode after pressing the **ADD DEVICE** button.

Removing Z-Wave Devices

1. From the **HOME** Screen, press **MENU** on the Platinum 1050 Control, then press **NEXIA**.
2. Press **REMOVE DEVICE** and follow the manufacturer's instructions for setting the Z-Wave device into learn mode. You will have four minutes to set the device into learn mode after pressing the **REMOVE DEVICE** button.

Advanced Z-Wave Settings


Press **ADVANCED** for advanced Z-Wave functions including unregistering your bridge from Nexia or factory resetting your bridge. See the Advanced Z-Wave Settings section for more information.

Adding Z-Wave Devices (via mobile app)


Alternatively, your Platinum 1050 allows you to add Z-Wave devices using the **Nexia** app on your mobile device.

Adding Z-Wave Devices


1. Start the **Nexia** app.
2. Press the menu button in the top left corner.
3. At the bottom of this slide out menu, press *Connect New Device*.

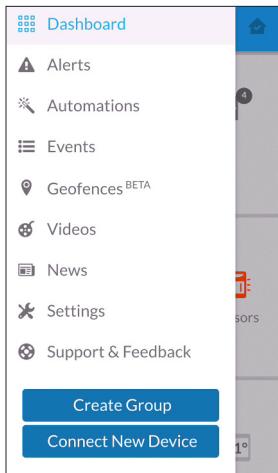

4. Select *Z-Wave Device*.

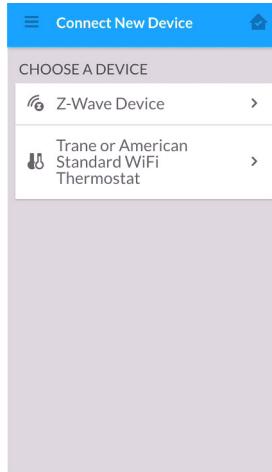

5. When prompted, prepare the device to be added to the Z-Wave network by following the device manufacturer's instructions to put device into add mode. You will have four minutes to complete this process.

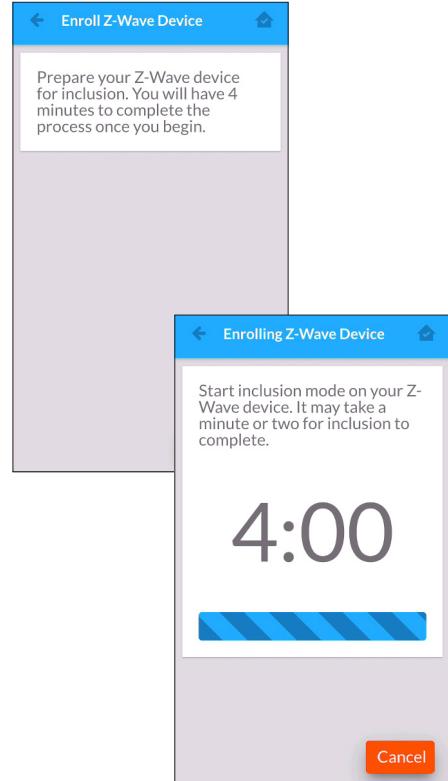

Advanced Z-Wave Settings

Nexia's **ADVANCED SETTINGS** screen contains three very powerful functions. Each of these functions is very specific and should be approached with a measure of caution. They cannot be "undone."

Learn

This function copies a new Z-Wave network to the bridge from another controller. In addition, it removes all current devices from the bridge.

Unregister


Removes the bridge from Nexia. All remote control features will be disabled.

Factory Reset

Resets all Z-Wave information and removes all devices from the bridge. If this bridge is the primary controller for your network, resetting it will result in all the devices in your network being removed. Following the reset, it will be necessary to remove and then add all of the devices back to your network.

Bridge Information

If this bridge is being used as a secondary or inclusion controller in the network, please reset this bridge only in the event that the primary controller is missing or otherwise inoperable.

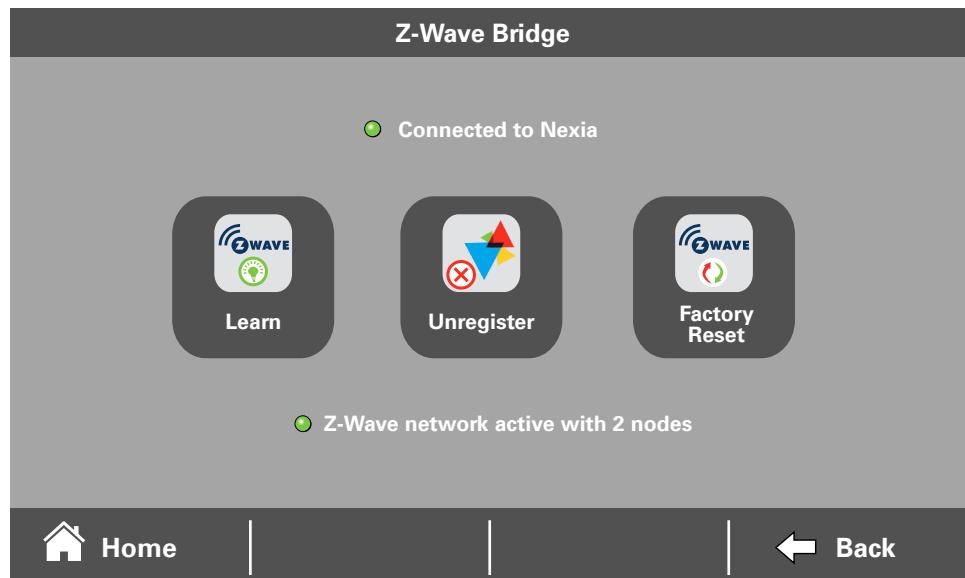

Advanced Z-Wave Settings

Association Group Information Table					
Group	Profile	Command Class and Command List	Group Name	Max Number of Devices	Trigger
1	General: Lifeline	Device Reset Locally Notification	Lifeline	5	Factory Reset

Terminology	
The following terms may be used interchangeably by other devices, manufacturers, and Nexia.	
ADD	Add, include, inclusion, enroll, connect
REMOVE	Remove, exclude, exclusion
COPY	Copy, learn, replicate, replication

Other Information	
• Basic Command Class:	This device ignores Basic Set/Get commands.



Other Features

Quiet Mode

Quiet Mode limits compressor operation (heating and cooling mode) to minimum speed from 10 p.m. to 9 a.m. This is to support local noise ordinances in the upper northwest and other regions.

Characteristics of Quiet Mode

- For use with American Standard's AccuComfort™ variable speed systems.
- During heating mode, indoor heat is allowed if the system cannot maintain space conditions while Quiet Mode is active
- Quiet Mode is only available for VSPD systems using a 1050 control
- Quiet Mode is disabled by default. To enable, from the home screen press **SYSTEM MODE**, then select **SYSTEM OPTIONS** and then **ENABLE**.
- When active, **Quiet** will be displayed below the indoor temperature on the Platinum 1050 home screen

Notices

FCC Notice

INFORMATION TO USER

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation. The antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

Reorient or relocate the receiving antenna

Increase the separation between the equipment and receiver

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

Consult the dealer or an experienced radio/TV technician for help

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC NOTICE

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

American Standard[®]
HEATING & AIR CONDITIONING



The manufacturer has a policy of continuous product and product data improvement and it reserves the right to change design and specifications without notice.

Representative-only illustrations included in this document.
January 2017 • 12-5062-01