


# DST Setting / Module : 3405

Firstly, make sure it is in the Timekeeping Mode.

<Timekeeping Mode Screen>

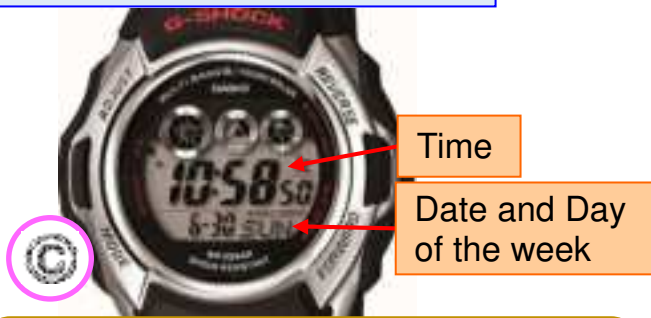

To return to the Timekeeping Mode, press **C** several times.

1.



In the Timekeeping Mode, hold down **A** until the city code starts to flash.

2.



Press **C** to display the DST setting screen.

<DST Setting Screen>



3.



Press (D) to switch between "ON", "OFF" or "AUTO".

4.



Press (A) to return to the Timekeeping Mode.

<Timekeeping Mode Screen>

