



kitvision.co.uk

All trademarks are acknowledged as the property of their respective owners.

Unless otherwise stated their use does not imply that the trademark owner is affiliated with Kitvision or endorses the products herein.

Products showing the 'Crossed Through' wheelie bin symbol must be recycled separately from household waste at the end of their useful life. Please DO NOT dispose of this appliance in normal household waste. Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

Please recycle this packaging responsibly.



JB. 6406-a-online / KVESCAPE5WC / REG02 / Made in China

© Kitvision is a trademark of Kondor Limited, 2019. Christchurch, Dorset, BH23 4FL, UK

kitvision.

escape

HD5W ACTION CAMERA

User Manual



Warning

You are advised to test the waterproof case empty by submerging it in water to ensure that it does not malfunction.

You must ensure there are no foreign objects around the rubber seal or connecting terminals on the waterproof case. It is easy for sand or dust to become stuck after opening the case which may result in the impairment of the waterproof performance.


Be extremely careful since it may result in malfunction. If foreign objects adhere to the inner side of the side door, wipe them off with a dry, lint-free cloth. If any liquid adheres to the camera or inner side of the side door, wipe off with a soft dry cloth. Do not open or close the side door near the water, when underwater, using wet hands, or when the camera is wet, as this may cause water leakage.

Box contents

- Kitvision Escape HD5 Action Camera
- 30 m waterproof case
- Bicycle mount
- Vented helmet straps
- Adhesive mount
- 2 x adhesive pads
- 90° mount adaptor
- Camera mount clip
- Tripod adaptor
- Camera accessories
- Micro USB cable
- Quick Start Guide
- Rechargeable battery

Functions

1. Shutter/Ok
2. Top Operation Indicator
3. Power/Mode
4. Micro SD Card Slot
5. Micro USB Input
6. Built-in Speaker
7. Built-in Microphone
8. Lens
9. Built-in LCD
10. Charging Indicator
11. Rear Operation Indicator
12. Up/Wi-Fi
13. Down/Mute microphone
14. Battery Cover

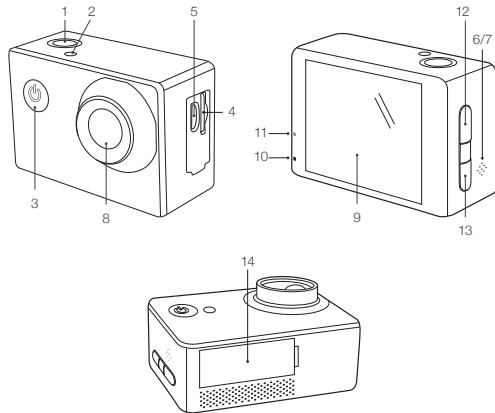

Instructions

Long Press Power/Mode (3) to turn **on/off** the camera.

Battery

The camera has a built-in rechargeable lithium-ion battery. Please fully charge the battery before use.

1. Connect the USB cable to the camera and the other end to a power source
2. Charging Indicator (10) is red whilst charging
3. The LCD (9) will display a battery icon which will be full when fully charged

Note: The camera body may be warm after extended use. This is normal.

Lift the Battery Cover (14) and pull the battery tab to remove the rechargeable battery.





Memory card

To be able to record video or capture photos using the camera, you must have your micro SD card inserted. (A Class 10 SD card is recommended for best performance).

1. Ensure the camera is turned off
2. Insert your memory card into the Micro SD Card Slot (4)
3. You may need to format your SD card when inserted into the camera; you can do this from the settings menu

Mode

Press the Power/Mode (3) to select mode.

	Video Mode	Record video clips
	Photo Mode	Take still photos
	Playback Mode	View photos and videos
	Settings Mode	Change settings

Video Mode

- The camera will start in Video Mode
- Press Shutter/Ok (1) to start/stop recording
- When recording, the LCD (9) will show a timer icon and will display how long it has been recording for

Note: The camera will stop recording and save automatically when the memory remaining or battery power is empty.

Audio

Using the camera with the waterproof case will record less audible sound. For best audio quality, use without the case, and make sure it does not get wet.

Photo Mode

1. Turn on the camera and press the Power/Mode Button (3) once to select Photo Mode
2. Press Shutter/Ok (1) to take a picture

Playback Mode

1. Turn on the camera and press the Power/Mode Button (3) until you have navigated to the Playback Mode
2. Press the Up (12) and Down (13) to select the item you want to view
3. If it is a video, press the Shutter/Ok (1) Button to play/stop the file, and hold the Up (12) and Down (13) Buttons for 1 second or more to fast forward and rewind

Note: To delete a file please access the camera through a PC, or a mobile device using the Wi-Fi app.

Settings

1. Press the Power/Mode Button (3) to navigate to the settings screen
2. Use Up (12) and Down (13) to navigate and the Shutter/Ok (1) to enter a sub-menu and select an option
3. Press Power/Mode (3) to exit

Advanced Video and Photo Modes

Motion Detection	Starts to record video when motion is detected
Cyclic Record	Records video segments in set intervals
Video Lapse	Captures multiple photos at set time intervals and creates a video
Capture Mode	Captures a photo after a set time interval

Advanced video and photo modes will allow more control over your Kitvision action camera. These modes can be selected from the settings mode:

1. Turn on the camera and press the Power/Mode Button (3) until you have navigated to the settings mode
2. Use the UP (12), DOWN (13) and Shutter/OK (1) Buttons to select your required advanced mode from the menu and select the required option
3. Exit the settings menu. Now when you use the photo or video mode, the selected advanced mode will be activated
4. To deactivate the advanced mode, repeat the process shown above, but change the setting back to the default option

Download the Wi-Fi App

Download 'GOPLUS CAM' from the Apple App Store™ or Google Play Store™.

Pairing

1. Press Up/Wi-Fi (12)
2. The Built-in LCD (9) will display the Wi-Fi connection details screen
3. Go to the settings of your mobile device, and select the Wi-Fi name that is displayed on the Built-in LCD (9), and input the Wi-Fi password displayed on the Built-in LCD (9)
4. Once connected, remain on the Wi-Fi connection details screen on the camera
5. Open the 'GOPLUS CAM' application and press the button on screen to connect to the camera

Connecting to a PC

There are two ways to do this:


- Inserting the micro SD into a card reader
- Connecting to a computer using the supplied micro USB cable

To use this option:

1. Connect the camera to a PC using a USB cable and the camera's Micro USB Input (5)
2. Turn the camera on
3. Use your computer's file explorer to locate and select the camera

Waterproof case

1. Open by lifting the front of the case catch upwards
2. Insert the camera correctly so that the case closes easily and provides a tight seal
3. Snap the top clip shut to ensure the case is waterproof
4. To operate the camera, use the waterproof case's external spring buttons

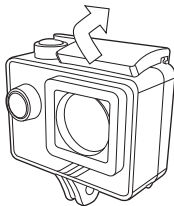

Specification

Display	2"
Lens	140° ultra wide-angle lens
Wi-Fi Frequency	2400 – 2500 MHz
Wi-Fi transmission power	10 dBm
Wi-Fi Enabled	Yes
Language options	[English] [German] [Italian] [Spanish] [Portuguese] [Dutch] [French] [Polish] [Danish] [Finnish] [Swedish] [Norwegian]
Video resolution	720p/30 fps WVGA 480p/30 fps

Photo resolution	12M/8M/5M/2M
Storage	Micro SD (Recommended Class 10 memory card between 4 GB and 32 GB)
Battery capacity	900 mAh
Recording time per charge	up to 60 minutes (actual recording time will vary dependent on settings)
Compatibility	Windows XP®/Vista/Windows 7®/ Windows 8/Windows 10/Mac OS™
Waterproof case	up to 30 m
Weight	59 g

Troubleshooting

No power	Remove the battery and SD card from the camera and wait for five minutes. Insert the battery only, and charge the camera for 1 hour. Then turn on the camera while still connected to the power source.
No SD card	Check that there is a compatible and formatted SD card in the camera.
SD card error	Save files you want to keep onto a PC and then format the SD card.
Camera won't turn on	Check the battery is firmly pushed into the battery compartment. Charge the camera using a mains power adaptor.
Blurry photos	You need to hold the camera still whilst pressing the photo mode button.

Care for your Escape HD5W Action Camera

Please DON'T:

- Get the camera wet, unless sealed in the included waterproof case
- Drop the camera as this will invalidate your warranty
- Open up the camera. There are no user serviceable parts inside
- Expose the camera to extreme temperatures or rapid changes of hot to cold or vice versa

Please DO:

- Clean the camera with a soft dry cloth and no detergents
- Clean the camera case after it has been in water (salt especially) with fresh tap water
- Use a soft dry cloth to wipe the surface then leave in a cool, ventilated place to dry

We hope you've now got all the information you need to get started, but if you're having problems with anything, please feel free to contact us at: **support@kitvision.co.uk** or visit **www.kitvision.co.uk**

'Hereby, Kondor Ltd declares that the radio equipment type, KVESCAPE5WC, is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<http://kondor.co.uk/product-documents.>'

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 18 of the FCC Rules.

US Responsible Party Information

Name: Stampede Presentation Products, Inc.

Address: Stampede HQ, 55 Woodridge Dr, Amherst NY, 14228

Telephone: 800-398-5652

Logistics@Stampedeglobal.com

IC

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause interference; and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempt de licence. L'exploitation est autorisée aux deux conditions suivantes : 1) l'appareil ne doit pas produire de brouillage ; 2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The use and operation of this Action Camera is beyond our control. Warranty of the Kitvision Action Camera is limited to defects caused by faulty manufacture or defects in materials only. No warranty whatsoever is given or implied for damage caused by the user under any circumstances.

This does not affect your statutory rights.

Please do not attempt to open this product. There are no user serviceable parts inside, in particular if your product has an embedded, non-replaceable battery, do not attempt to access or remove the battery as this may cause personal injury and will damage the product.

Making any attempt to open the product or carry out repair voids any and all warranties.

We sorry for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.