 





USER MANUAL

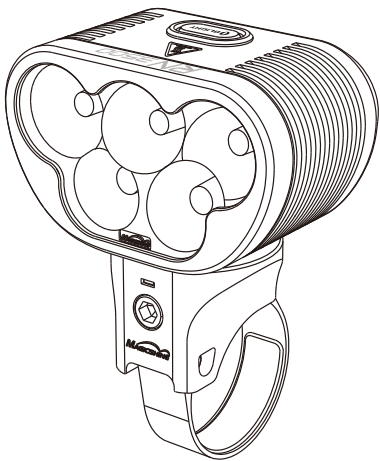

RN 3500
Bike Light

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

 IN THE BOX

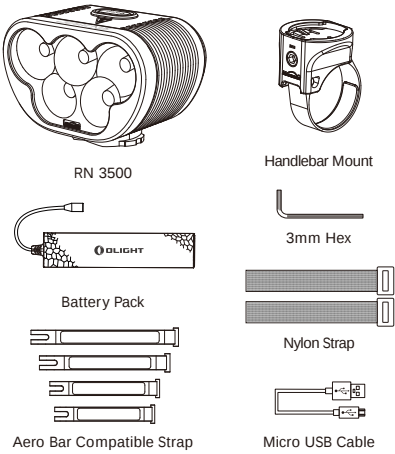

SPECIFICATIONS


MODE	BRIGHTNESS	ECO	LOW	MID	HIGH	FLASH
	 h:min	100	300	700	1400	/
	 h:min	75:00	20:00	08:00	04:30	15:30
	 h:min	200	600	1000	1800	/
	 h:min	19:48	08:30	04:30	02:30	09:30
	 h:min	350	900	1800	3500	0-1800
	 h:min	17:00	06:30	03:12	01:42	06:30




(L)2.36*(W)1.71*(H)1.63in 110g / 3.88oz
(L)60*(W)43.5*(H)41.5mm (Excluding battery pack)

*All performance measurements in accordance with ANSI/NEMA FL1-2009 Standard.
The tests are performed using the provided battery pack, and is measured indoors under a room temperature of 25 degrees celsius with windless conditions. The runtime may vary depending on the external temperature and ventilation conditions, these biases may affect the results of testing.
Note: The maximum output brightness will decrease as the battery voltage decreases.

 
HOW TO INSTALL

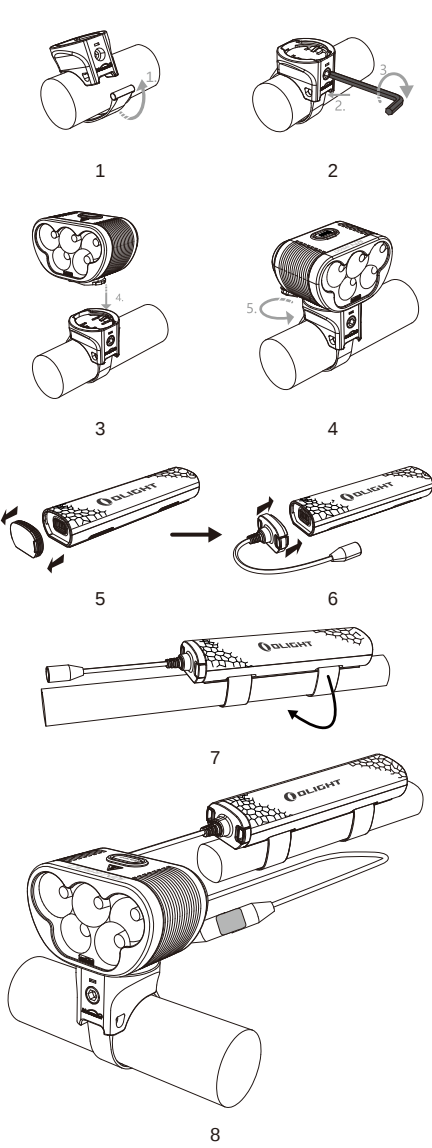

HOW TO RECHARGE


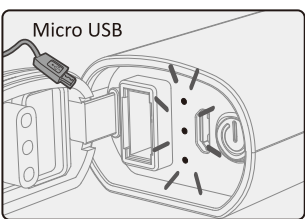 


 Standard Charging Time: Approx.9hrs (5V 2A)

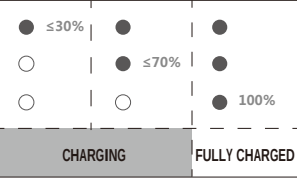

BATTERY INDICATOR

  When the device is powered on, the power button light will indicate the battery level.

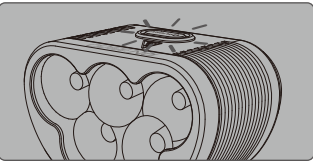

DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT cover the light head when the RN 3500 is on, or place the light head on the ground.

WARNING

- Keep out of reach of children.
- The light uses a lithium-ion battery pack. Certain restrictions may apply to this product when traveling especially when traveling by air. Always check with your carrier for specific restrictions prior to traveling with this product.

NOTICE

- Store the light at room temperature in a dry place. Avoid moisture, or extreme hot or cold.
- Store the light in the charged condition. Avoid “deep discharge”. Battery life will decrease if the light is stored in a fully discharged condition.
- Over time, the run time of the battery will diminish. Expect about 500 full charges, depending on care. After a full life, the battery will continue to charge but with a lower run time.
- When the run time is unsatisfactory, please recycle. Do not open the case of the light or incinerate.

CONTENTS

(EN) English	01
(CHS) 简体中文	01
(NED) Nederland	01
(DE) Deutsch	02
(JP) 日本語	02
(FR) Français	02
(IT) Italia	02

(EN) English

HOW TO OPERATE

Click to turn on and long press to turn off, click to change the brightness level and flash modes, and double click to switch modes. Mode memory function will save the last selected mode and brightness.

(CHS) 简体中文

如何操作

单击开机，长按关机，单击切换不同亮度或闪烁方式，双击切换不同模式。再次开机进入上次关机时的模式及亮度。

(NED) Nederland

HOE TE BEDIENEN

Klik om in te schakelen, druk lang om uit te schakelen, klik om het helderheidsniveau en de flits modi te veranderen en dubbelklik om tussen de modi te schakelen. De modus geheugenfunctie zal de laatst geselecteerde modus en helderheid opslaan.

(DE) Deutsch

BEDIENUNG

Kurzes Drücken, um die Taschenlampe einzuschalten. Gedrückt halten zum Ausschalten. Kurz Anklicken zum Umschalten der Helligkeitsstufe und Blitzmodi und Doppelklicken zum Umschalten der Modi. Die Modus-Speicherfunktion wird den zuletzt ausgewählten Modus und die Helligkeitsstufe speichern.

(JP) 日本語

使用方法

クリックでオンします。長押しでオフします、クリックして輝度のレベルとフラッシュモデルを変更し、ダブルクリックしてSWITCHモデルに切り替えます。モデルメモリ機能が最後のモデルと輝度の記録を残ります。

(FR) Français

COMMENT L'UTILISER

Pressez une fois pour un allumage, appuyez longuement pour une extinction, cliquez pour changer le niveau de luminosité et les modes de flash, et double-cliquez pour basculer d'un mode à l'autre. La fonction de mémoire de mode enregistre le dernier mode et la dernière luminosité sélectionnés.

(IT) Italia

FUNZIONAMENTO

Premere l'interruttore per accendere la torcia, tenere premendo l'interruttore per spegnerla, cliccare per modificare il livello di luminosità e le modalità flash e fare doppio clic per cambiare modalità. La funzione di memorizzazione della modalità salverà l'ultima modalità e luminosità selezionate.

WARRANTY

Within 30 days of purchase: Return to the original seller for repair or replacement.

Within 2 years of purchase: Return to Olight for repair or replacement.

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence, accidents, improper maintenance, or repair by anyone other than an authorized retailer or Olight itself.

USA Customer Support
cs@olightstore.com

Global Customer Support
customer-service@olightworld.com

Visit www.olightworld.com to see our complete product line of portable illumination tools.

OLIGHT
Dongguan Olight E-Commerce Technology Co., Ltd
4th Floor, Building 4, Kegu Industrial Park, No 6 Zhongnan Road, Changan Town, Dongguan City, Guangdong, China.
Made in China

