

# **TOYOTA**

## Getting Started with

- Bluetooth® Pairing
- Toyota Apps
- Connected Services
- Apple CarPlay®
- Android Auto<sup>™</sup>
- Amazon Alexa

### Bluetooth® Pairing1



Note: Do not attempt the Bluetooth® Pairing process while driving.

**STEP** 

Press  $[\mbox{MENU}]$  on the faceplate, then select " $\mbox{Setup}$ " on display screen.



Ensure Bluetooth is turned on for your device.



STEP Select "Device Name."

4



STEP "Connecting" displays while device is forming the connection to your multimedia system.



STEP Select "Bluetooth," then select "Add New Device" on display screen.



**STEP** Check the display on your smartphone.

5 Does the PIN XXXX match the PIN displayed? If it does, select "Pair."



**STEP** Enable Notifications (text message).

While pairing your device this message will display: "You may need to allow message access on your phone."

Note: You may also select "**Skip**" on display screen to skip enabling notifications. If skipped proceed to **STEP 9**.





A confirmation will appear once your phone has been paired and connected.

### Toyota Apps



TOVOTA

Our Toyota app is the starting point to activate your vehicle's available connected service trials. App download is available for iPhone® or Android™ smartphones.



The Entune  $^{\text{\tiny{TM}}}$  3.0 app is required to link the Toyota audio multimedia system with available services such as Amazon Alexa.

Toyota apps are available for download. App Store is a service mark of Apple Inc.





#### Connected Services<sup>2</sup>

#### Safety Connect<sup>3</sup>

- (SOS) EMERGENCY ASSISTANCE BUTTON
- AUTOMATIC COLLISION NOTIFICATION
- ROADSIDE ASSISTANCE
- STOLEN VEHICLE LOCATOR

 
Safety Connect is dependent upon an operative telematics device, a cellular connection and other factors outside of Toyota's control, which can limit the ability to reach the response center or receive emergency support or otherwise limit the functionality or availability of the system. Terms and conditions of subscription service agreement apply.

#### Remote Connect<sup>4</sup> (if equipped)

- START/STOP ENGINE
- VEHICLE STATUS ALERTS

- LOCK/UNLOCK VEHICLE DOORS
- VEHICLE FINDER

To enable Remote Connect you must authenticate and initialize your services via the audio multimedia system using an authorization code. An authorization code will be emailed to you during the connected services registration process.



Available on select MY18 and newer vehicles. (Remote Start/Stop is not available on vehicles equipped with Manual Transmission.)

STEP

Press [APPS] on the faceplate, then select "Communications" on display screen.



STEP Select "Authorization" icon.




STEP Enter the 6 character authorization
3 code you received via email to enable remote services.

For additional information, please visit: www.Toyota.com/connected-services

#### **Remote Connect (continued)**



 


#### Service Connect<sup>5</sup> (if equipped)

- VEHICLE HEALTH REPORT
- VEHICLE MAINTENANCE ALERT NOTIFICATION


Available on select MY18 and newer vehicles.

 After registering and opting into Service Connect, you will be greeted with a notification of the following language "Would you like to start Toyota Service Connect Activation?"





#### Destination Assist<sup>6</sup> (if equipped)

 

Destination Assist provides drivers 24—hour access to a live agent who can provide directions through the vehicle's factory—installed navigation system to an address or point of interest.

#### Wi-Fi Connect7

#### Multiple mobile devices

- Connect up to 5 Wi-Fi enabled devices
- Passengers can use smartphones, laptops and tablets

#### Infotainment

- Browse the internet
- · Send and receive email
- Stay connected on social media
- Access favorite apps
- Stream movies



#### **Getting Started with Connected Services**



Go to the App Store® (iPhone) or Google Play™ Store (Android) and search "Toyota," then download and open the app.

TOYOTA







STEP If you don't have a Toyota Owner's account, tap Register to create one. Proceed to Step 2.





STEP If you already have a Toyota Owner's account but have not linked your NEW vehicle, tap Sign In and utilize your Toyota Owner's credentials to sign in. Proceed to Step 4.



Input your personal identification information, then tap Sign Up. Note: You can also sign in with select social network credentials.



Retrieve the activation code from your email, then enter it and tap Verify Account.

Note: If you don't receive the email with vour account activation code or its been more than 48 hours since you received it, tap Request New Code.

#### Where to find your VIN?



Where else could I find my VIN?

- Vehicle Registration
- Vehicle Insurance Card

**STEP** Link your vehicle to your account by (a) scanning the vehicle identification number (VIN) with your device's camera or (b) manually entering in the

VIN, then tapping Add Vehicle.





Confirm your preferred servicing dealer, review Terms of Use & Privacy Notice, then tap Continue.

### **Connected Services (continued)**

### **Getting Started with Connected Services (continued)**



STEP Review your available Connected
Services trials, then tap Continue.
Note: Selecting No Thanks will wave all trials and disable your vehicle's telematics communication device.



Review the Connected Services Data
 Handling Requirements consent, then tap, Agree and Continue if you accept. Note: Selecting No Thanks will cancel all trials and disable your vehicle's telematics communication device.



Review the Service Connect
Communication consent, then tap
Agree and Continue if you accept.
Note: You can also waive Service Connect
Communication by tapping No Thanks.



Review the Auto Insurance Designed for You consent, then tap Agree and Continue if you accept.

Note: You can also waive Auto Insurance Designed for You by tapping No Thanks.



To complete the setup process, tap Finish Setup. If you have another vehicle to add to your garage, tap Add New and repeat Steps 4–10.



You're now ready to experience the benefits of "Toyota" in your customizable personal dashboard.

For additional information, please visit: www.Toyota.com/connected-services



### Apple CarPlay® (If equipped)

#### Setup of Apple CarPlay®



Ensure Siri® is enabled on your phone.



**STEP** 

Plug a compatible iPhone® into the USB media port using an Apple® approved cable.



Select Always Enable to use CarPlay®

each time the vehicle is operated.



Select Allow to use CarPlay® while the phone is locked.



Apple CarPlay® is now ready to operate.

#### Requirements:

 
Bluetooth® functions will be inoperable while CarPlay® is in use. Wireless CarPlay® is not supported. Features may vary by vehicle model and phone.

To learn more about how your iPhone® works with CarPlay® visit: https://support.apple.com/en-us/HT205634 To view a full list of CarPlay® supported apps visit: https://www.apple.com/ios/carplay/

### Siri® through CarPlay®



Push and hold the voice command talk switch for 2-3 second to activate.



Once Siri® is activated you can ask to: make calls, send and receive text messages, listen to music and more.

#### Android Auto<sup>™</sup> (If equipped)

#### Setup of Android Auto"



STEP Download the **Android Auto**™ app from the Google Play™ Store.



Ensure Android Auto™ is enabled on

the phone.



 
STEP Plug a compatible Android™ smartphone into the USB media port using an Android approved cable.



Android Auto™ is now ready to operate.



Open Android Auto™ app and tap get started.



In the Projection Settings screen select

Android Auto<sup>™</sup> to on.



Press menu button and them select

the Android Auto™ icon.

#### Requirements:

Bluetooth® functions will be inoperable while Android Auto™ is in use. Wireless Android Auto™ is not supported. Features may vary by vehicle model and phone.

To learn more about how to use Android Auto™ visit: https://www.android.com/auto

### Google Assistant through Android Auto™



Push and hold the voice command talk switch for 2-3 second to activate.



Once Google Assistant is activated you can ask to: make calls, send and receive text messages, listen to music and more.

### Amazon Alexa (If equipped)

### Toyota + Alexa Setup





Entune® 3.0 and Toyota+Alexa

App Store

apps are are available to download at your app store.



STEP Once Toyota+Alexa has successfully installed, open the app to complete the setup. Tap Get started.







Depending on your phone and STEP application settings, Toyota+Alexa may automatically sign you in. Otherwise, Sign In or Create a new Amazon account.





STEP Tap Allow for Toyota+Alexa to access Alexa Voice Services and Alexa Account Connection. Allow permissions.







STEP Depending on your phone and application settings, Toyota+Alexa may automatically sign you in. Otherwise. Sign In or Create a new Amazon account.





STEP Tap **Allow** for Toyota+Alexa to access Alexa Voice Services and Alexa Account Connection. Tap Enable Permissions.



To use the Toyota+Alexa app, your mobile device must be paired to the vehicle via Bluetooth®.



To launch Toyota+Alexa, press Apps and select Toyota+Alexa. Toyota+Alexa is now ready. Just say "Alexa" and wait for the tone, then speak your command.

Note: Ensure the Toyota + Alexa app is open on the paired phone.

Several factors may affect smartphone and/or system performance including:

- 1. Smartphone operating system software version
- 2. Smartphone battery power level
- 3. Poor cellular reception to the smartphone
- 4. Multiple applications running on a smartphone at the same time
- 5. Charge/media cable quality
- 6. Smartphone operating system updates may also affect Toyota app functionality

#### **Privacy & Protection**

To learn about Toyota's Connected Services data collection, use, sharing and retention, visit: www.Toyota.com/privacyvts.

- <sup>1</sup> Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. Phone performance depends on software, coverage and carrier.
- carrier.

  <sup>2</sup> Visit Toyota.com/connected—services or see your local Toyota Dealer for additional details.
- <sup>3</sup> Safety Connect depends on an operative telematics device, a cellular connection, navigation map data and GPS signal strength and other factors outside of Toyota's control, all of which can limit system functionality or availability, including access to response center and emergency support. Stolen vehicle police report required to use Stolen Vehicle Locator. Registration required. Service subject to change at any time without notice. Terms and conditions of subscription service agreement apply. Service may vary by vehicle and region. See usage precautions and service limitations in Owner's Manual.
- <sup>4</sup> Use only if aware of circumstances surrounding vehicle and it is legal and safe to do so (e.g., do not remotely start engine if vehicle is in an enclosed space or vehicle is occupied by a child). Remote Connect depends on an operative telematics device, a cellular connection, GPS signal strength and other factors outside of Toyota's control, which can limit system functionality and availability. Service may vary by vehicle and region. Registration and app download required. Terms and conditions of subscription service agreement apply. Data charges may apply. Remote start/stop not available on manual transmission—equipped vehicles. Services subject to change at any time without notice. See usage precautions and service limitations in Owner's Manual.
- Information provided is based on the last time data was collected from the vehicle and may not be up to date. Service Connect depends on an operative telematics device, a cellular connection, navigation map data, GPS signal strength and other factors outside of [Toyota's] [Lexus'] control, which can limit functionality or availability. Service may vary by vehicle and region. Registration required. Service subject to change at any time without notice. Terms and conditions of subscription service agreement apply. See usage precautions and service limitations in Owner's Manual.
- 6 Destination Assist depends on an operative telematics device, a cellular connection, navigation map data and GPS signal strength and other factors outside of Toyota's control, which can limit system ability functionality or availability. Use common sense when relying on this information. Service may vary by vehicle and region. Registration required. Services subject to change at any time without notice. Terms and conditions of subscription services agreement apply. See Owner's Manual and Toyota.com/connected—services for additional limitations and details.
- <sup>7</sup> Wi-Fi Connect is available on select 2018 and newer Toyota vehicles. Visit Toyota.com/connectedservices for vehicle availability.