

99944200545 Trimmer Attachment

FOR MODELS: SRM-2100SB, 2400SB, 210SB, 211SB, 225SB, 260SB, 261SB, PAS-2100, 2400, 2601, 210, 211, 225, 225VP, 225VPB, 230, 231, 260, 261, 265, 266, 280

Operator's Manual

WARNING



Users of this equipment risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. ECHO provides an operator's manual. It must be read and understood for proper and safe operation. Failure to do so could result in serious injury.

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.

TABLE OF CONTENTS

Table of Contents	. 2
Introduction	. 3
The Operator's Manual	. 3
The Safety Manual	. 3
Servicing Information	. 3
Parts/Serial Number	. 3
Service	. 3
Echo Consumer Product Support	. 3
Product Registration	. 3
Additional or Replacement Manuals	. 4
Safety	. 4
Manual Safety Symbols and Important Information	. 4
International Symbols	
Personal Condition and Safety Equipment	. 5
Equipment	. 8
Description	10
Contents	11
Assembly	
Power Head Shaft/Lower Shaft Assembly	
Plastic Shield Installation	
Nylon Line Head Installation	
To Advance Trimmer Line	13
Remove Nylon Line Head	14
Operation	15
Maintenance	16
Skill Levels	16
Maintenance Intervals	16
Lubrication	16
Nylon Line Replacement	17
Storage	19
Storage Hook Installation	19
	20
Warranty Statements	21
	23
Product Registration	
Notes	25



INTRODUCTION

Welcome to the ECHO family. This ECHO product was designed and manufactured to provide long life and on-the-job dependability. Read and understand this manual and the SAFETY MANUAL. You will find both easy to use and full of helpful operating tips and SAFETY messages.

The Operator's Manual

Keep it in a safe place for future reference. Contains specifications and information for safety, operation, maintenance, storage and assembly specific to this product.

The Safety Manual


Keep it in a safe place for future reference. Explains possible hazards and the measures you should take to insure safe operation.

SERVICING INFORMATION

Parts/Serial Number

Genuine ECHO Parts and ECHO REPOWER[™] Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts **always** have the Model Number and Serial Number of the unit with you. You can find these numbers on the engine housing. For future reference, write them in the space provided below.

Model No. _____ SN. _____

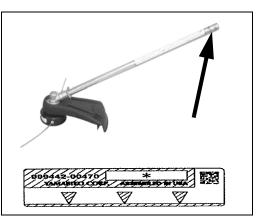

Service

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site. When presenting your unit for Warranty service/repairs, proof of purchase is required.

Echo Consumer Product Support

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:00 am to 5:00 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

Product Registration

To ensure trouble free warranty coverage it is important that you register your ECHO equipment on-line at <u>www.echo-usa.com</u> or by filling out the product registration sheet included in this manual. Registering your product confirms your warranty coverage and provides a direct link between you and ECHO if we find it necessary to contact you.



Additional or Replacement Manuals

Replacement Operator, Safety Manuals, and Parts Catalogs are available from your ECHO dealer or at www.echo-usa.com or by contacting ECHO Inc., 400 Oakwood Road, Lake Zurich, IL 60047 (800-673-1558). Always check the ECHO Web Site for updated information.



For more information scan this QR code.

Safety Videos are available from your Echo dealer. A \$5.00 shipping charge will be required for each video.

SAFETY

WARNING

Refer to your Pro Attachment Series or Split Boom Operator's Manual for correct engine fueling, starting and stopping instructions.

Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

The safety alert symbol accompanied by the word "DANGER" calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

The safety alert symbol accompanied by the word "WARNING" calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.

The safety alert symbol accompanied by the word "CAUTION" calls attention to an act or condition which may lead to minor or moderate personal injury if not avoided.

NOTICE

The enclosed message provides information necessary for the protection of the unit.

Note: This enclosed message provides tips for use, care and maintenance of the unit.



CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.



International Symbols

Symbol	Description	Symbol	Description	Symbol	Description	Symbol	Description
(Warning, See Operator's Manual		Safety/Alert	R	DO NOT USE BLADES - Line Head Only		Thrown objects
	Wear eye, ear and head protection	Ø	Finger Severing	*	Plan retreat pathfromfalling objects		Hot Surface
	Wear hand and foot protection		Rotating Cutting Attachment			Keep bystar	KICKOUT. Iders at least 15 0 feet) away.
	Wear Face Shield	<u>L</u>	Wear slip resistant foot wear			Beware Th Wear Ey	rown Objects e Protection
	Keep feet away from blade	X1 15 M-50 FT	Do not operate closer than 15 M (50 ft.) from electrical hazards. Keep bystanders at least15meters (50 feet) away	6		Keep bystan away 1	ders and helpers 5 m (50 ft.).

Personal Condition and Safety Equipment

WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

Physical Condition

Your judgment and physical dexterity may not be good:

- If you are tired or sick.
- If you are taking medication.
- If you have taken alcohol or drugs.

Operate unit only if you are physically and mentally well.

Eye Protection

WARNING

- Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield may be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.



SAFETY

Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

Hearing/Ear Protection

ECHO recommends wearing hearing protection whenever unit is used.

Breathing Protection

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

Proper Clothing

Wear snug-fitting, durable clothing:

- Pants should have long legs, shirts should have long sleeves.
- DO NOT WEAR SHORTS.
- DO NOT WEAR TIES, SCARVES, JEWELRY, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.

Wear sturdy work shoes with nonskid rubber soles:

- DO NOT WEAR OPEN TOED SHOES.
- DO NOT OPERATE UNIT BAREFOOTED.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

WARNING

The components of this machine generate an electromagnetic field during operation, which may interfere with some pacemakers. To reduce the risk of serious or fatal injury, persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

Extended Operation / Extreme Conditions

ACAUTION

Prolonged exposure to cold and/or vibration may result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions may result in painful wrist/hand/arm injuries.



It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.

Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.


To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.
- Do exercise to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

A DANGER

All over head electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death may result.

///=++//

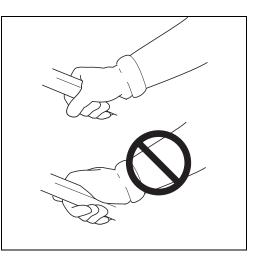





Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

Read the Manuals

• Provide all users of this equipment with the Operator's Manual and Safety Manual for instructions on Safe Operation.

Clear the Work Area

• Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.

Keep a Firm Grip

• Always hold throttle handle and support handle with thumbs and fingers tightly encircling the handles.

Keep a Solid Stance

Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not
work in odd positions or on ladders. Do not over reach.

Avoid Hot Surfaces

• During operation, the drive shaft housing and attachment bearing housing may become very hot, too hot to touch. Avoid contact during and immediately after operation.



Equipment

WARNING

Use this attachment with ECHO approved models only. Serious injury may result from the use of this attachment combined with a non approved ECHO product.

- Check unit for loose/missing nuts, bolts, and screws. Tighten and/or replace as needed.
- Inspect shield for damage and ensure that the cut-off knife is securely in place. Replace if either is damaged or missing.
- Check that the cutting attachment is firmly attached and in safe operating condition.

Note: ECHO, INC. will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO.

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- ALWAYS stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.
- DO NOT start or operate unit unless all guards and protective covers are properly assembled to unit.




• NEVER reach into any opening while the engine is running. Moving parts may not be visible through openings.



SAFETY

DESCRIPTION

Locate the safety decal(s) on your unit. Make sure the decal(s) is legible and that you understand and follow the instructions on it. If a decal cannot be read, a new one can be ordered from your ECHO dealer. See PARTS ORDERING instructions for specific information.

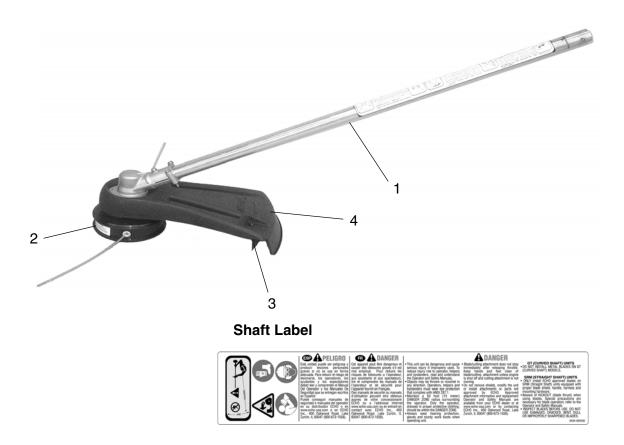

- 1. DRIVE SHAFT ASSEMBLY Contains a specially designed liner and the flexible drive shaft.
- 2. **NYLON CUTTING ATTACHMENT** Contains replaceable nylon trimming line that advances when the trimmer head is tapped against the ground while the head is turning at normal operating speed.
- 3. **CUT-OFF KNIFE** Automatically trims line to the correct length: 5 in. after head is tapped on the ground. If trimmer is operated without a cut-off knife the line will become too long, the engine will overheat, and engine damage may occur.
- PLASTIC DEBRIS SHIELD ASSEMBLY Shield assembly includes the Cut-Off Knife. Helps protect the operator by deflecting debris produced during the trimming operation. This shield must be replaced with the steel shield for blade use.



CONTENTS

The ECHO product you purchased has been factory pre-assembled for your convenience.

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- _____ PAS Hi Torque Trimmer Attachment
- _____ Operator's Manual
- ____ Warranty Card
- ____ Storage Hook Assembly





ASSEMBLY

 
Power Head Shaft/Lower Shaft Assembly

WARNING

Do not perform maintenance or assembly procedures with engine running.

Parts Required: PAS or SRM-SB Power Head w/Shaft & Coupling

- 1. Set Power Head/Shaft Assembly on a level surface.
- 2. Pull locator pin (A) out, and turn counter-clockwise 1/4 turn to lock-out position.
- 3. Remove vinyl cap from attachment drive shaft.
- 4. Remove cardboard spacer, if necessary.
- 5. Carefully fit attachment drive shaft assembly into coupler (B) to decal assembly line (C), making sure that the inner lower drive shaft engages the square upper drive shaft socket.
- Note: Earlier model Power Heads may have shorter couplings. Short couplings fit flush to decal point (E). New couplings are 4-3/4 in. long, and fit flush to line (C).



- Rotate locator pin (A) 1/4 turn clockwise to engage lower shaft hole. Insure locator pin is fully engaged by twisting lower drive shaft. Locator pin should snap flush in coupler. Full engagement will prevent further shaft rotation.
- 7. Secure lower shaft assembly to coupler by tightening clamping knob (D).


Plastic Shield Installation

(For Nylon Line Operation)

Parts Required: Plastic Debris Shield, Shield Plate, three (3) 5 x 16 mm screws.


WARNING

The plastic shield is for use with the Nylon Line Head only. Install Metal Shield when using plastic or metal blades, or serious injury may result.

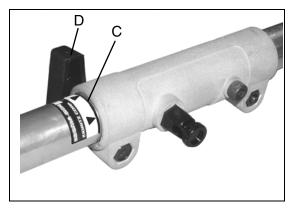



For more information scan this QR code.

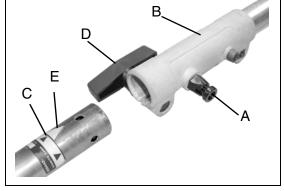



ASSEMBLY

- 1. Place the shield on the bottom of the bearing housing flange.
- 2. Place shield plate on shield, align holes. Install three (3) screws from bottom through plate and shield into gear case.



Nylon Line Head Installation

 
(Use with Plastic Shield)

Parts Required: Nylon Line Head.

ACAUTION

Wear Gloves or personal injury may result:


- Cutoff knife is sharp.
- Gearcase and surrounding area may be hot.
- 1. Align locking hole in upper plate with notch in edge of gear housing and insert head locking tool (C).
- 2. Remove vinyl protector from PTO shaft.
- 3. Be sure upper adaptor plate remains on PTO shaft (B).
- 4. Thread line head onto shaft by turning it counter clockwise until head is tight against upper plate (D).
- 5. Remove head locking tool (C).



To Advance Trimmer Line

See Maintenance Section for nylon line replacement.

Note: To advance trimmer line, tap trimmer head against the ground while the head is turning at normal operating speed.

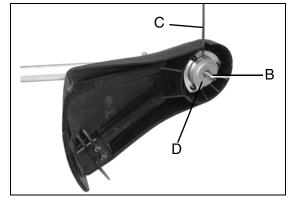






Remove Nylon Line Head

Note: Do not disassemble nylon line head.

- 1. Align locking hole in upper plate with notch in edge of gear housing and insert head locking tool (C).
- 2. Remove line head by turning it clockwise until head is completely off of shaft.
- 3. Remove head locking tool (C).

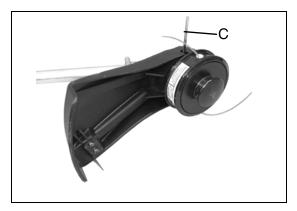



OPERATION

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow unit to cool before performing service.

Note: Refer to the Grass Trimmer / Brush Cutter Safety Manual for proper and safe trimming techniques.



MAINTENANCE

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow unit to cool before performing service. Wear gloves to protect hands from sharp edges and hot surfaces.

Your ECHO unit is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, you may want to take your unit to an ECHO Service Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the ECHO Dealer do it, each maintenance task has been graded. If the task is not listed, see your ECHO Dealer for repairs.

Skill Levels

Level 1 = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

ECHO offers **REPOWER™** Maintenance Kits and Parts to make your maintenance job easier.

Maintenance Intervals

Component/System	Maintenance Procedure	Skill Level	Interval
Drive Shaft	Grease	1	Every 25 hours of use [1]
Gear Housing	Grease	1	Every 50 hours of use [1]
Screws/Nuts/Bolts	Inspect/Tighten/Replace	1	Before Each Use

IMPORTANT - Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

(1) Apply POWER BLENDX[™] grease.

Lubrication

Level 1.

PartsPOWER BLENDX™ 8 oz. or Lithium BaseRequired:Grease.






MAINTENANCE


Gear Housing

- 1. Clean all loose debris from gear case.
- 2. Remove plug (A) and check level of grease. Grease should fill gear case to bottom of grease plug hole.
- Add grease if necessary using manual grease gun or squeeze-type tube. Do not use high pressure grease gun. DO NOT over-fill.
- 4. Install plug (A).

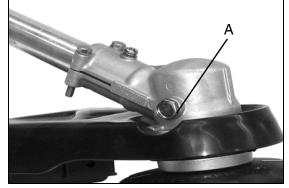

Drive Shaft (Lower)

- 1. Loosen screws (B) and remove center locating screw (C). Pull gear case and shield from drive shaft housing.
- 2. Pull flexible cable from the drive shaft housing, wipe clean and re-coat with a thin coating [15 ml (1/2 oz.)] of grease.
- 3. Slide the flexible cable back in the drive housing. DO NOT get dirt on the flex cable.
- 4. Install the gear housing and shield assembly.

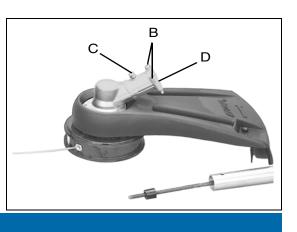

NOTICE


Flat edge of washers (D) must be against drive shaft.

Nylon Line Replacement

ACAUTION

Wear Gloves or personal injury may result:

- Cutoff knife is sharp.
- Gearcase and surrounding area may be hot.
- Do not push spool in. Hold drum (A) and turn spool (B) clockwise until peg clicks and disappears from hole. Pull spool out of drum.

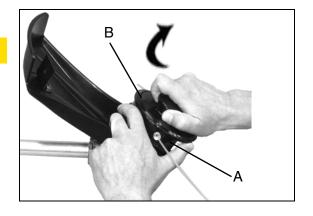





MAINTENANCE

99944200545


 Use one piece of new nylon line (C) 6 m (20 ft.) long and thread through the molded loop (D) on the spool. Pull line tight and adjust so one end is 15 cm (6 in.) longer than the other.

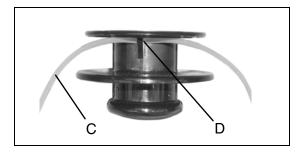


 Hold the spool, opening toward you. Place index finger between the two strands and wind line, tightly and evenly, in direction of arrow (E).

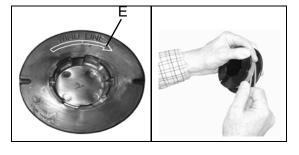

 4. Place ends of line (C) into notches (F) in spool, leaving 6 in. protruding.



- 6. Align grooves in spool with pegs (I), and push spool (B), into drum.
- 7. Hold spool and drum securely with one hand, and pull each line to disengage from notches.
- 8. Hold drum (A) and turn spool (B) counter clockwise until peg clicks into hole.
- 9. Trim lines to 8 in. length.

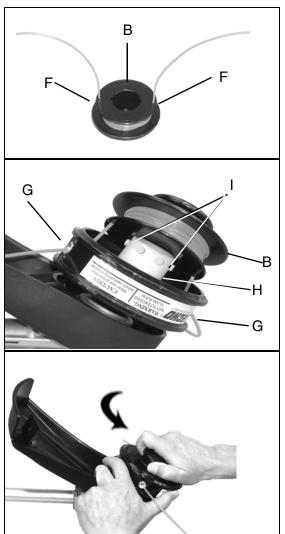




STORAGE

Storage Hook Installation

- 1. Insert small end of hook into locating hole on attachment shaft.
- 2. Slide plastic cap onto end of attachment shaft.

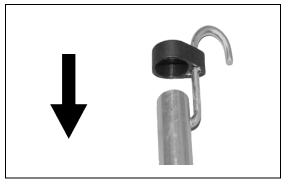



SPECIFICATIONS

MODEL	99944200545
Shaft Length	864 mm (34.02 in.)
Attachment Width	176 mm (6.93 in.)
Attachment Height	245 mm (9.65 in.)
Weight (dry) w/line head	1.57 kg (3.43 lb.)
Drive Shaft	6.35 mm (1/4") Flex Shaft
Direction of Rotation	Counter clockwise viewed from the top
Gear Case Ratio	2.07:1
Cutter Head	Nylon line head with .095 in. Cross Fire™ Line
Line Capacity	6 m (20 ft.)



WARRANTY STATEMENTS

ECHO LIMITED WARRANTY STATEMENT FOR PRODUCT SOLD IN USA AND CANADA BEGINNING 01/01/2010

ECHO'S RESPONSIBILITY

ECHO Incorporated's Limited Warranty, provides to the <u>original</u> purchaser that this ECHO product is free from <u>defects in material and workmanship</u>. Under normal use and maintenance from date of purchase, ECHO agrees to repair or replace at ECHO's discretion, any defective product free of charge at any authorized ECHO servicing dealer within listed below application time periods, limitations and exclusions. **THIS LIMITED WARRANTY IS ONLY APPLICABLE TO ECHO PRODUCTS SOLD BY AUTHORIZED ECHO DEALERS. IT IS EXTENDED TO THE ORIGINAL PURCHASER ONLY, AND IS NOT TRANSFERABLE TO SUBSEQUENT OWNERS EXCEPT FOR EMISSION RELATED PARTS.** Repair parts and accessories replaced under this warranty are warranted only for the balance of the original unit or accessory warranty period. Any damage caused by improper installation or improper maintenance is not covered by this warranty. All parts or products replaced under warranty become the property of ECHO, Inc. This warranty is separate from the Emission control warranty statement supplied with your new product. Please consult the Emission Control Warranty Statement for details regarding emission related parts. For a list of Authorized ECHO Dealers refer to <u>WWW.ECHO-USA.COM</u> or call **1-800-432-ECHO**.

OWNER'S RESPONSIBILITY

To ensure trouble free warranty coverage it is important that you register your ECHO equipment on-line at <u>WWW.ECHO-USA.COM</u> or by filling out the warranty registration card supplied with your unit. Registering your product confirms your warranty coverage and provides a direct link if we find it necessary to contact you.

The owner shall demonstrate <u>reasonable care and use</u>, and follow preventative maintenance, storage, fuel and oil usage as prescribed in the operator's manual. Should a product difficulty occur, you must, at your expense, deliver or ship your ECHO unit to an authorized ECHO servicing dealer for warranty repairs (within the applicable warranty period), and arrange for pick-up or return of your unit after the repairs have been made. For your nearest authorized ECHO servicing dealer, call ECHO's Dealer Referral Center, at 1-800-432-ECHO or you can locate an ECHO servicing dealer at <u>WWW.ECHO-USA.COM</u>. Should you require assistance or have questions concerning ECHO's Warranty Statement, you can contact our Consumer Product Support Department at 1-800-673-1558 or contact us through the web at <u>WWW.ECHO-USA.COM</u>.

PRODUCT WARRANTY PERIOD

HOMEOWNER APPLICATION

• 5 YEAR WARRANTY - All units for homeowner, or non-income producing use will be covered by this limited warranty for five (5) years from date of purchase.

EXCEPTIONS:

- For two-stroke engine powered products, the electronic ignition module, flexible drive cables, SRM solid drive shafts, and TC tines are warranted for the life* of the product on parts only.
- Cutting attachments such as, but not limited to, bars, chains, sprockets, blades, and nylon trimmer heads for homeowner or nonincome producing use will be covered for failures due to defects in material or workmanship for a period of 60 days from original product purchase date. Any misuse from contact with concrete, rocks, or other structures is not covered by this warranty.
- ECHO's Rapid Loader String Head carries a lifetime warranty on the line locking system, parts only; no labor. Refer to your operator's
 manual for string head installation and maintenance instructions.
- All SB-Series and PRO ATTACHMENT SERIES Split Shaft attachments carry the same warranty duration as the units they are designed to fit.

COMMERCIAL APPLICATION

- 1 YEAR WARRANTY All Chain Saws, QuikVent Saws, and Cut-Off Saws for commercial, institutional, agricultural, industrial, or income producing use will be covered by this limited warranty for one (1) year from the date of purchase.
- 2 YEAR WARRANTY All other units for commercial, institutional, agricultural, industrial, or income producing use will be covered by this limited warranty for two (2) years from the date of purchase.

EXCEPTIONS:

- For two-stroke engine powered products, the electronic ignition module, flexible drive cables, SRM solid drive shafts and TC tines, are warranted for the life* of the product on parts only.
- Cutting attachments such as, but not limited to, bars, chains, sprockets, blades, and nylon trimmer heads for commercial, institutional, agricultural, industrial, rental, or income producing will be covered for failures due to defects in material or workmanship for a period of **30 days** from original product purchase date. Any misuse from contact with concrete, rocks, or other structures is not covered by this warranty.
- ECHO's Rapid Loader String Head carries a lifetime warranty on the line locking system, parts only; no labor. Refer to your operator's
 manual for string head installation and maintenance instructions.
- All SB-Series and PRO ATTACHMENT SERIES Split Shaft attachments carry the same warranty duration as the units they are designed to fit.

RENTAL APPLICATION - 90 DAYS WARRANTY

- Units for rental use will be covered against defects in material and workmanship for a period of 90 days from the date of purchase.
- * ECHO's liability under the "Lifetime" coverage is limited to furnishing parts specified under the PRODUCT WARRANTY PERIOD section of this warranty statement for "Life" free of charge for a period of ten (10) years after the date of the complete unit's final production.

///EFHD

ECHO does not offer an over the counter exchange program. Any ECHO product re-built other than by ECHO or sold through an unauthorized dealer, or an unauthorized outlet store, is sold without ECHO's limited warranty coverage. The ECHO Limited Warranty coverage is extended to the <u>original purchaser only</u>, and is not transferable except for emission related parts. Repair parts and accessories replaced under this warranty are warranted only for the balance of the original unit or accessory warranty period. Any damage caused by improper installation or improper maintenance is not covered by this warranty. All parts or products replaced under warranty become the property of ECHO.

PURCHASED REPAIR PARTS, SHORT BLOCKS AND ACCESSORIES

- 90-day homeowner, or non-income producing warranty
- · 30-day commercial, institutional, agricultural, industrial, income producing, or rental application warranty

ATTENTION TWO-STROKE ENGINE POWER PRODUCT OWNERS

This ECHO two-stroke engine power product is a quality-engineered unit which has been manufactured to exact tolerances to provide superior performance. To help ensure the performance of the unit, it is <u>required</u> to use two-stroke oil which meets the ISO-L-EGD Standard per ISO/CD 13738 and JASO M345FD Standards. <u>ECHO Power Blend™ Two-Stroke Oil</u> is a premium two-stroke oil specifically formulated to meet ISO-L-EGD (ISO/CD 13738) and JASO M345FD Standards. The use of two-stroke oils designed for other applications, such as for outboard motors or lawnmowers can result in severe engine damage, and will void your two-stroke engine limited warranty.

THIS WARRANTY DOES NOT COVER DAMAGE CAUSED BY:

- Lack of lubrication or engine failure, due to the use of two-stroke oils <u>that do not meet the ISO-L-EGD (ISO/CD 13738) and JASO M345FD</u> <u>Standards</u>. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD compliant and JASO M345<u>FD</u> registered oil, will void the two-stroke engine limited warranty. <u>ECHO Power Blend™ Two-Stroke Oil</u> meets the ISO-L-EGD and JASO M345<u>FD</u> Standard. Emission related parts are covered for 5 years homeowner use or 2 years commercial use regardless of two-stroke oil used, per the statement listed in the EPA or California Emission Defect Warranty Explanation.
- Damage caused by use of gasohol, containing methanol (wood alcohol), or gasoline containing less than 89 octane. Only use gasoline which contains 89 octane or higher. Gasohol which contains a maximum 10% ethanol (grain alcohol) or 15% MTBE (methyl/tertiary/butyl/ether) is also approved. The prescribed mixing ratio of gasoline to oil is listed on the ECHO oil label and covered in your operator's manual.
 Engine damage caused by use of ether or any starting fluids.
- Damage caused by tampering with engine speed governor or emission components, or running engines above specified and recommended
 engine speeds as listed in your operator's manual.
- Operation of the unit with improperly maintained/removed cutting shield or removed/damaged air filter.
- Damage caused by dirt, pressure or steam cleaning the unit, salt water, corrosion, rust, varnish, abrasives, and moisture.
- Defects, malfunctions or failures resulting from abuse, misuse, neglect, modifications, alterations, normal wear, improper servicing, or use of unauthorized attachments.
- Incorrect storage procedures, stale fuel, including failure to provide or perform required maintenance services as prescribed in the operator's manual. Preventative maintenance as outlined in the operators manual is the <u>customer's responsibility</u>.
- Failures due to improper set-up, pre-delivery service or repair service by anyone other than authorized ECHO servicing dealer during the warranty period.
- · Certain parts and other items are not warranted, including but not limited to: lubricants, starter cords, and engine tune-ups.
- Use of spark plugs other than those meeting performance and durability requirements of the OEM spark plug listed in the Operator's Manuals.
- Overheating or carbon scoring failures due to restricted, clogged exhaust port or combustion chamber, including damage to spark arrester screen.
- · Adjustments after the first (30) thirty days and beyond, such as carburetor adjustment and throttle cable adjustment.
- Damage to gears or gear cases caused by contaminated grease or oil, use of incorrect type or viscosity of lubricants, and/or failure to comply with recommended grease or oil change intervals.
- Damage caused by loading SHRED 'N' VAC[®] beyond recommended capacity.
- Damage caused by pump or sprayer running dry, pumping or spraying caustic or flammable materials, or lack of or broken strainers.
- Additional damage to parts or components due to continued use after operational problem or failure occurs. Should operational problem or failure occur, the product should not be used, but delivered <u>as is</u> to an authorized ECHO servicing dealer.

It is a dealer's and/or customer's responsibility to complete and return the warranty registration card supplied with your ECHO product or by visiting <u>WWW.ECHO-USA.COM</u>. Your receipt of purchase including date, model and serial number must be maintained and presented to an authorized ECHO servicing dealer for warranty service. <u>Proof of purchase rests solely with the customer</u>. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so you may also have other specific legal rights which vary from state to state. This limited warranty is given by ECHO Incorporated, 400 Oakwood Rd., Lake Zurich, IL 60047.

DISCLAIMER OF IMPLIED WARRANTIES

This limited warranty is in lieu of all other expressed or implied warranties, including any warranty of FITNESS FOR A PARTICULAR PURPOSE OR USE and any implied warranty of **MERCHANTABILITY** otherwise applicable to this product. ECHO and its affiliated companies shall not be liable for any special incidental or consequential damage, including lost profits. There are no warranties extended other than as provided herein. This limited warranty may be modified only by ECHO.

99922201032 11/18/2011



NOTES



PRODUCT REGISTRATION

Thank you for choosing ECHO Power Equipment

Please go to <u>http://www.echo-usa.com/Warranty/Register-Your-ECHO</u> to register your new product on-line. It's *FAST* and *EASY*! NOTE: your information will never be sold or misused by ECHO, Inc. Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

ECHO Inc., Product Registration, PO Box 1139, Lake Zurich IL 60047.

ONLINE OPTION: Register online and same a stamp! You will be admined of product updates and/or be sent new ECHIO product information and special offers. Simply go to: www.achio-usa.com	save a stamp! You w be sent new ECHO ers. Semply go to: m	OPCION POR INTERNET: Floqueness abore una antampalial. La atentarian sobi produndi: yoo se la arentama informacón s quictos ECHO y las ofenas especiales, www.echo-usa.co	en la pagina web y o actualizaciones dei obre los nuevos pro- Semplemente visite: m	OPTION EN LIGHE : Emergistrer en ligne et algergner an tandont Vous serez informé aurais nouveaux produits ECHO et les misses a jour de produit ental que les otres spéciales. Simplement visitez le, www.scho-usa.com	opergner un coluits ECHO mis spéciales. Acom
ease Print : Por Fevor Enscriba Con Letra Da Molde - En Lettre Carré S.V.P.	etra De Molde - E	In Lettre Carrel S.V.P.		Confidential: Information provided will not be shared or sold	It be shared or sold
PurchaseCs Name : Nombre del Cottystador : Nom de l'achedeur	ador : Nom de Pad	hedreux*	Primary use of tool: Usage primario de tart Usage primorpal :	Primary use of tool: Professional Homeowner Rental Equip. Uso primatio de ta herramienta Professionnal Residential Location Location Location Co.ver.usia homeowa Residential Incention and exercial offere	C Rental Equip. de casa C Alquiter scation
Addrese 2 Direction 2 Adresse			by e-mail? Yes ¿Desea ustad recibir in tronico sobre el produc	by entrance in processing the control product manufacture and special over by entrance of the control of the control of the control of the control effect (Deservation software) in products (SE-HO) = "H + SE = Ho) Control software processor is chored transmerical proformation sur lear control as	no aprove one o
City 2 Cuidad 2 Ville	State : Estado.	Zip Gode : Codgo Postel / Code Postel	ECHO et les offres Did you visit the EC	ECHO et les offres spéciales par countier électricique ? Out Did you visit the ECHO website before purchasing your product?	Oui 🗖 Non Jet?
E-Mail Address / Dirección De Correo Etechonico : Courrier Electrosigue	Electrónico - Couri	nier Electronique	Visito usted la pagir Si 0 No Avez-vous visitó le 1 Otal 0 Non	Visito usted la pagina web ECHO antes de comprar su producto? St. To No Mezi-vous visito la site d'ECHO avant de procurer votre produit? Oui D Non	ut?
Phone Number : Número De Teléfone : : Téléphone		Daile of Porchailer Feicha de la Corrora ? Daile de Porchet	What factor(s) most Performance Reliability	Influenced your purchase?	
Where Purchased : Nombre del Almacia storde lue Conjuente : Lleu d'achat	a storide file Comp	nado : Likou it'achar	2.Oué factor(es) infl funcionamiento Confisibilidad	s en su comp roca Arlenor	
Model Number - Numera del Modelo No. de modele Serial Number	o. die modikie Sers	Nomero de Serie - No. de jubre	Quel facteur (facteur Performance	s) vous a influence le Prix:	
pidento your purchase enables us lo contact ensity of the event of loss. To incontact au or to a sense de serring of service all an encoded	you in the unitarity even right not permits attain on del producto y verti-	Registered your purchase enables us to contact you in the unitarily event of a service update or product neal and vertices your environment of the event of bass. If in systems us compare not permote ealing on contacted the product neal and vertices your common or permo de temps de permote of a responsed on products y vertication in programment are team de relation and the programment of teams of the permotect of the product of the programment of the programment of teams of teams of the formation of the period of the period of the programment of the period of the peri	ECHO INC., 400 Oakwood Rd., Lake Zurich	Artil/Familte Manque Garantie Garantie Echo INC., 400 Oakwood Rd., Lake Zurich, IL 60047	



NOTES









ECHO, INCORPORATED 400 Oakwood Road Lake Zurich, IL 60047 www.echo-usa.com

S08900004611 - S08900027800