



This message about...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

...can save a life!

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

- ALWAYS UNPLUG IT IMMEDIATELY AFTER USING.**
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in, or drop into water or other liquids.
- If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

- This appliance should never be left unattended when plugged in.**
- This appliance should not be used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!
Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.



WHY DO YOU NEED A GFCI?
Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...**even if the switch is off.** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean.

When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair Service Representative only. No repairs should be attempted by the consumer.

STORAGE – Important
When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.


OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110 to 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT 1875 WATT OPERATING GUIDE

Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.**

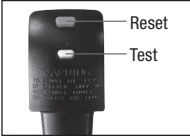

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE APPLIANCE

This appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

- Plug in the appliance and press test button on plug.
- The appliance will stop working. There will be an audible click and reset button will pop out. This indicates the ALCI is functioning properly.
- To reset ALCI, unit should be unplugged. Then push reset button in and reinsert plug into outlet.

- If ALCI is not functioning properly, return appliance to nearest service center.**
- It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.

6. Be sure to repeat test every time you use the unit to confirm ALCI is operational.
Should the appliance go off and the reset button pop up during use, this could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Reinsert plug into outlet.

The appliance should then function normally. If not, return to an authorized Conair Service Center for evaluation and repair.

LIMITED FOUR-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 48 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 48 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 48-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

SUPER STYLING GUIDE
Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

DRYING BASICS


- Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-dry hair to remove excess moisture. Using the dryer along with your styling brush, start at a lower setting and direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp. Clouds of negatively charged ions will help to reduce static electricity, control frizzy flyaways and contribute to your hair's shine.
- Keep dryer's air intake vents unobstructed and free from hair while drying.
- To avoid over-drying, do not concentrate heat on any one section for an extended length of time. Keep dryer moving as you style. For pinpoint airflow, use the snap-on concentrator attachment.
- For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
- When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cold shot feature to quickly close hair shaft and lock in style.

BODY & VOLUME
To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

STRAIGHTENING
Work with hair in sections when creating a super-straight look. Using a large round brush (approximately 2" diameter), hold hair taut in each section and bend ends slightly under as you dry.

MAKING WAVES
Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

GETTING TO KNOW YOUR DRYER

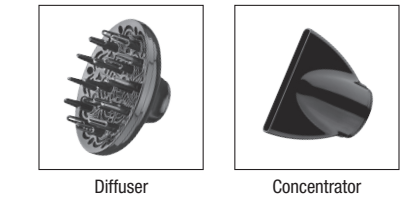

INFINITI**PRO**
BY CONAIR

1875 WATT LIGHTWEIGHT STYLER



INSTRUCTION & STYLING GUIDE 584 MODELS

The Infiniti PRO by Conair® 1875 Lightweight Styler is very effective, even at lower temperatures, and helps create healthier-looking, shiny, more manageable hair with maximum styling control.

CERAMIC TECHNOLOGY is full spectrum infrared heat that works on hair molecules to dry them inside and out. This fast and easy drying process minimizes heat damage and makes hair less frizzy and more manageable.

POWERFUL, LIGHTWEIGHT AC MOTOR delivers fast airflow for styling ease and provides up to 3x longer life.*

THE IONIZING FUNCTION generates a cloud of negative ions that can:

- help reduce frizz by up to 75%**
- neutralize the generally positive charge on flyaway, frizzy hair
- eliminate static electricity
- contribute to shine

*When compared to other DC motor hair dryer models.

**When compared to hair dryers with natural ion generation.

select your setting	
speed/temp.	hair type
low/cool	delicate, thin, or easy-to-style hair
low/warm	average to thick or treated hair
high/hot	thick, coarse or hard-to-style hair
cold shot	sets style in place for all hair types

