


ASSEMBLY INSTRUCTION

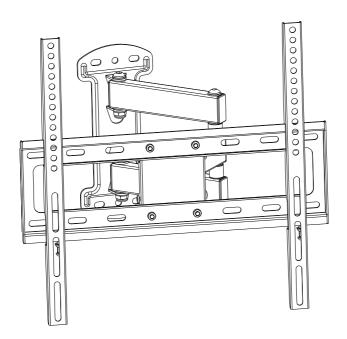

MODEL:MI-4471

- Please read this instruction carefully before assembly.
- Fits for 26-55in plasma and LCD TV.
- Weight Capacity:30KG(66LBS).

Safety Warning:

Never let children climb on product or play with product. Do not sit or stand on product.


Do not fasten a TV that is heavier than the recommended load rating to the mount.

Using suitable concrete wall or wood stud wall.

Improper installation may cause property damage and/or personal injury, so the installation must be done by two qualified contractors. The manufacture is not liable for damage or injury caused by incorrect mounting, assembly or use.

Improper handling can result in cuts and lacerations. Pictures for reference only, subject to our available products. Keep this instruction for future reference.

Part list:

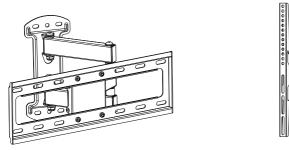

A-Wall plate unit 1pc

B-Bracket 2pcs

Hardware list:


√11111111111]	<u> </u>			
aLag bot 4PCS	banchor 4PCS	cM8 washer 4PCS	d5mm Allen key 1PC	eM8 spacer 4PCS
				_
(2)			*********** [}	
fM8 spacer 8PCS	9-M6 washer 4PCS	h-M5x25 bolt 4PCS	i-M6x25 bolt 4PCS	j-M8x25 bolt 4PCS

Step 1: Pls remove the plaster board on the surface of concrete wall when assembling mount on the concrete wall. Hold wall plate unit(A) against wall at desired position on concrete wall, then using a pencil mark 4 hole locations. Then drill holes according pencil marks using 2/5" or 10mm size drill bit to a depth of 2.36"/60mm. Then you will need to use wall anchors(b). Insert wall anchors (b) into holes, you may need to use hammer to lightly tap wall anchors into wall. Then fix wall plate unit(A) to the wall with screws (a). (Figure 1)


Note: The concrete wall minimum thickness no less than 5.5 inches, and surface covering can't more than 3/8 inches.

If you mount TV mount into wood studs, pre-drill the mark 2 holes using 4mm drill bit to a depth of 2.36"/60mm,fix wall plate unit(A) to the wall with screws(a). (Figure 2)

Note: The wood stud min size is 2X4 inches, and surface covering can't more than 5/8 inches. Drill hole on the wooden pillars middle line.

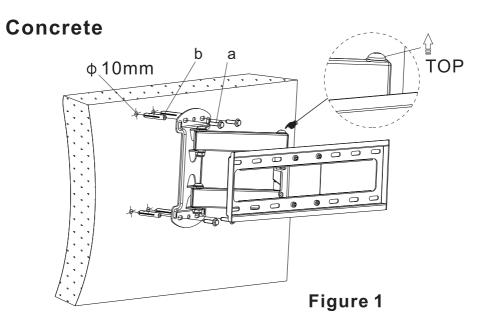

Wood Double Stud

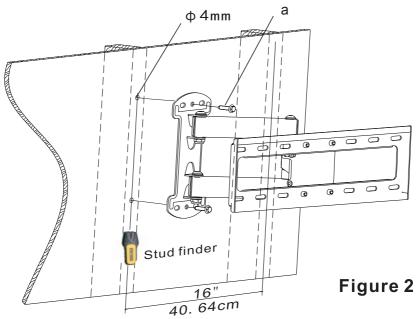

Step 2: Attach Brackets to the back of TV, choose corresponding bolt, washer and spacer to fix the holes of TV rear.



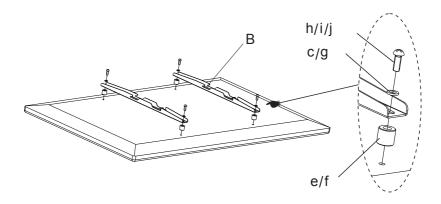


Figure 3

Step 3: Hang pre-assembled TV unit on the wall plate and then lock the safety screws.

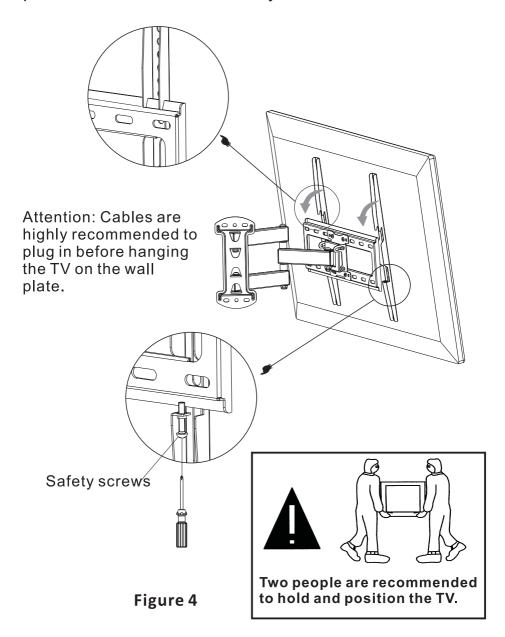

Step 4: You may need loosen the bolts with Allen key(d) to adjust TV to your desired angle please remember to fasten the bolts tightly after adjustment.

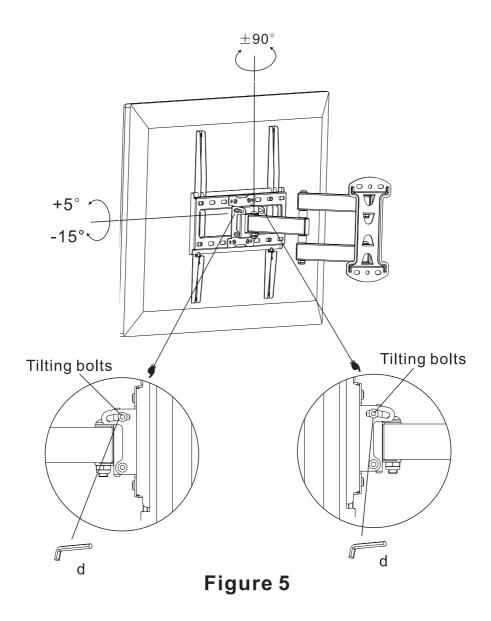

PAY EXTRA CARE AND ATTENTION WHEN YOU FASTEN TWO TV MOUNTS TO THE BACK PANEL OF TV IN STEP2. MAKE SURE THE APPROPRIATE MOUNT HARDWARE IS BEING USED PROPERLY.

- Select correct Mounting Hardware according to the screw hole size of your TV, discard any remaining screws or spacers.
- 2. Carefully lay your TV on its face on a non-abrasive surface, making sure to lay padding underneath it so as not to damage the screen.
- 3. Place left TV mount and right mount in the appropriate position, making sure CENTERED on the back of the TV and LEVEL with on another.
- 4. This product only install on the perpendicular wall, not install on the ceiling.