

**VS**  
SASSOON

INSTRUCTION  
BOOKLET

**TOTAL PROTECTION**  
CERAMIC HEATED ROLLERS

VS3133A



## ABOUT YOUR STYLER

### CONGRATULATIONS!

VS Sassoon's Total Protection Rollers are designed to make rolling hair easy. The set features 12 large soft touch, thermoceramic rollers creating dramatic volume and glamorous loose curls. The dual source heating system, quickly forms the curl to give beautiful, long lasting results, with specially contoured clips for a flawless finish.



1. 12 large, soft touch thermo-ceramic rollers
2. 12 specially contoured clips
3. High temperature performance
4. Ultra-fast heat up
5. Heat ready indicator
6. On/off switch
7. On indicator
8. 1.85m cord

#### CERAMIC HEATER

A truly professional ceramic heater that delivers superior fast and constant heat. This will ensure salon professional results.

#### THERMO-CERAMIC ROLLERS

12 large rollers create dramatic volume and glamorous loose curls.

#### FLOCKED COATING

Gentle on the hair for total protection.

#### DUAL SOURCE HEATING SYSTEM

12 specially contoured clips and rollers both heat up for long lasting volume, curls and waves.

#### CERAMIC TECHNOLOGY

For even heat distribution and smooth and shiny results.

## FIRST USE

- Remove all packaging and point of sale labels before use.
- Remove plastic cover from plug before use (used to protect it from damage during transportation)

## OPERATING INSTRUCTIONS

1. Place the hairsetter on a firm, flat surface. With lid closed and all rollers in place, plug into a suitable power outlet. Your hairsetter is designed with a cord keeper system for no fuss storage. Gently pull the power cord out from the base, ensuring that the power cord is pulled all the way out until you see the red marker. With lid closed and all rollers in place, plug into a suitable power outlet.
2. Once plugged in, turn the unit on by sliding the on/off switch to the on position. The on/off indicator light will turn red and the rollers will begin heating up.
3. Allow rollers to heat with the lid closed, as this will provide the fastest, most efficient heat up. The rollers will be heated and ready to use within 2 minutes. Once the rollers are heated, and the red dot on the centre roller has turned white, you can begin styling your hair. Refer to 'How to Curl and Style Your Hair' for further information.
5. When using the rollers, your hair should be clean and dry, or slightly damp - never wet.

**IMPORTANT:** When rollers are initially heating up, it is suggested to have the lid closed, as this provides the fastest, most efficient heat-up. When removing rollers to place in the hair, the lid must always be open. Leaving the lid closed when rollers are missing will cause the lid to melt. Take extra caution when heating up the appliance when rollers are missing.

## STYLE TIPS

### CURLS & WAVES

// To create defined curls and soft waves, place the roller underneath a section of hair no wider than the roller and roll up towards the scalp and secure with a heated clip. Continue throughout the hair until all sections have been styled. For long, lasting defined curls, the rollers should be left in the hair for a longer period of time before removing or until the rollers and clips have completely cooled. For softer, glamorous waves the rollers should be left in the hair for a shorter period of time.

### MOVEMENT & BODY

// To create movement and body through the length of the hair, we suggest rolling the rollers into the hair at a slight angle, away from your face. Stop two thirds up the hair section and use the heated clips to secure the rollers. For softer, glamorous waves the rollers should be left in the hair for a shorter period of time. Once the rollers and clips have cooled, remove them from the hair and comb through with your fingers for a natural undone look.

### VOLUME

// To create dramatic volume at the root, take a 1.5inch wide section of hair from the forehead to the back of the head. Separate into three sections. Place a roller behind each section and roll the hair down towards the scalp and secure with a heated clip. Continue placing rollers horizontally throughout the rest of the hair, close to the scalp, this will ensure maximum root volume. Leave the rollers and clips to cool, the longer the rollers are left in the hair, the more dramatic the root volume. Once the rollers have been in the hair a sufficient time, gently remove and style your hair as you would normally.

**LOVE YOUR STYLE™**  
vssassoon.com.au

## WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with a guarantee that cannot be excluded under the Consumer Guarantee Act 1993.

### Limited Three Year Warranty

Conair Australia Pty Ltd. will repair or replace (at our option) your appliance free of charge for thirty six months from the date of purchase if the appliance is defective in workmanship or materials. This warranty is an additional benefit and does not affect your legal rights. To obtain service under this warranty, please read the Warranty Leaflet included or contact Conair Customer Service at [aus\\_info@conair.com](mailto:aus_info@conair.com).

**To make a warranty claim you must retain your proof of purchase.**



Vidal Sassoon and related logos are trademarks of The Procter & Gamble Company used under license by Conair

©2015 Conair Australia Pty Ltd  
Suite 101, 18 Rodborough Rd  
Frenchs Forest NSW, 2086  
Australia

**CUSTOMER SERVICE:**  
Australia: 1800 650 263  
New Zealand: 0800 266 247

**CONTACT US:**  
For advice, tips on your new VS product  
E-mail us on: [aus\\_info@conair.com](mailto:aus_info@conair.com)  
**[vssassoon.com.au](http://vssassoon.com.au)**  
VS3133A

## HOW TO USE YOUR HOT ROLLERS

- The rollers can be used on damp or dry hair.
  - Place the appliance on a level, heatproof surface. Do not open the lid at this time.
  - Turn the appliance on by switching the 'I/O' button on the back of the unit to the 'I' position.
  - One roller has a 'heat ready dot' on top. The ready dot will turn from red to white, indicating optimum temperature has been reached and the rollers are ready to use. Open the lid for both the rollers and the clips and begin to style the hair.
  - Comb the hair thoroughly and select a roller.
  - Take a section of hair the width of the roller and wind the end of the hair around the roller, holding the hair taut. Keep the roller at right angles to the scalp, to ensure even curls.
  - Secure the roller with one of the heated clips provided.
  - Continue until all sections of hair have been styled.
  - Turn the appliance off by switching the 'I/O' button on the back of the unit to the 'O' position.
  - To remove the rollers from the hair, gently hold the roller in one hand and remove the clip with the other. Slowly unroll the roller, being careful not to pull on it as you unwind. Once the hair is loose of the roller, let it bounce back up.
  - Let the hair cool so that the curl can set for long-lasting results. Once the hair has cooled style the hair as desired.
  - Replace all the clips and rollers back in the unit and close both lids.
  - Allow the appliance to cool down completely before storing away.
- IMPORTANT!**
- Please note the Total Protection Ceramic Heated Rollers have been specifically designed to reach high temperatures in order to produce fast and perfect curl formation.
  - When applying the rollers to long or thick hair, the rollers can be used instantly once the heat ready dot has turned white.
  - When applying the rollers to short or fine hair, allow the rollers to heat up until the heat ready dot turns white. Once the heat ready dot has turned white, turn off the unit and open the lid. Allow the rollers to cool until they feel comfortable when applying into the hair.
  - Always take extra care to avoid the ceramic rollers coming into direct contact with the scalp.

## HELPFUL TIPS

- The tightness and hold of the curl is determined by the length of time the roller is left in the hair. After several times of using the appliance, the length of time the rollers should be left in the hair to achieve the desired style will be established.
- For long, lasting defined curls, the rollers should be left in the hair for a longer period of time before removing or until the rollers and clips have completely cooled.
- For softer, glamorous waves the rollers should be left in the hair for a shorter period of time.
- In all cases we suggest to leave the rollers in the hair for at least 10 minutes.
- After all the rollers have been removed use your fingers to 'comb' through the curls.
- Spray with a soft-holding hairspray. A heavier spray weighs down the hair and may cause the curls to drop quicker.

### WARNING!

- Do not open either lid until the rollers are fully heated (i.e. heat ready dot has turned white) and ready for use.
- Take care to avoid contact between the hot rollers and the face, neck, eyes or ears.
- Please do not touch the hot metal parts of the appliance during use.

### CAUTION

Heated bars: To avoid heat contact, remove the heated clips from the top bar first. When replacing the clips on to the heated bars, start with the bottom bar first.

## IMPORTANT SAFETY INSTRUCTIONS

The following safety precautions should always be followed when using electrical appliances, especially when children are present in your household. Please read these instructions carefully and keep for future reference.

### DANGER

- **WARNING:** Do not use this appliance in or near bathtubs, showers, basins or other vessels containing water. Keep the appliance dry.
- When this appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- If this appliance falls into water, unplug it immediately- DO NOT reach into the water.



### WARNING: Before and During Use

- Before using, always ensure that the voltage marked on the appliance is the same as your local power voltage.
- If the appliance is designed to be connected to a detachable power supply (otherwise known as a charger or adaptor), the appliance must only be used with the power supply it was sold with.
- Do not operate this appliance or disconnect from the power supply with wet hands.
- Never use this appliance at the same time as styling products such as aerosols (spray).
- Be very careful when handling this appliance as parts of it may get extremely hot.
- Do not place the appliance on any heat sensitive surface or near flammable materials or objects.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not cover this appliance with anything when it is switched on or hot.
- To avoid electric shock, do not drop or insert any object into an opening in this appliance.

### WARNINGS: for Storage and Maintenance

- Always unplug the appliance immediately after use and before cleaning or maintenance.
- Do not leave the appliance unattended when plugged in or switched on.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.
- Do not store or place this appliance in a location where it can fall or be pulled into a bath or sink.
- Do not wrap the supply cord around this appliance when storing as over time this may cause damage to the cord.
- If the supply cord is damaged it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- If this appliance is serviced by an unqualified person this could result in an extremely hazardous situation for the user. Contact Conair Customer service if you have any issues operating your styler.

## CAUTION

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use and as described in this manual. This appliance is not intended for commercial use.
- Do not use any attachments other than those supplied by Conair Australia Pty Ltd.
- For additional protection, the installation of a residual current device (RCD) with a rated operating current not exceeding 30mA is advisable in the electrical current circuit supplying the bathroom. Ask your installer for advice.