

## SIMATIC

### Statement List (STL) for S7-300 and S7-400 Programming

Function Manual

Preface	
Bit Logic Instructions	1
Comparison Instructions	2
Conversion Instructions	3
Counter Instructions	4
Data Block Instructions	5
Logic Control Instructions	6
Integer Math Instructions	7
Floating-Point Math Instructions	8
Load and Transfer Instructions	9
Program Control Instructions	10
Shift and Rotate Instructions	11
Timer Instructions	12
Word Logic Instructions	13
Accumulator Instructions	14
Overview of All STL Instructions	A
Programming Examples	B
Parameter Transfer	C

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

#### **DANGER**

indicates that death or severe personal injury **will** result if proper precautions are not taken.

#### **WARNING**

indicates that death or severe personal injury **may** result if proper precautions are not taken.

#### **CAUTION**

indicates that minor personal injury can result if proper precautions are not taken.

#### **NOTICE**

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

#### **WARNING**

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

## Purpose

This manual is your guide to creating user programs in the Statement List programming language STL.

The manual also includes a reference section that describes the syntax and functions of the language elements of STL.

## Basic Knowledge Required

The manual is intended for S7 programmers, operators, and maintenance/service personnel.

In order to understand this manual, general knowledge of automation technology is required.

In addition to, computer literacy and the knowledge of other working equipment similar to the PC (e.g. programming devices) under the operating systems MS Windows XP, MS Windows Server 2003 or MS Windows 7 are required.

## Scope of the Manual

This manual is valid for release 5.6 of the STEP 7 programming software package.

## Compliance with Standards

STL corresponds to the "Instruction List" language defined in the International Electrotechnical Commission's standard IEC 1131-3, although there are substantial differences with regard to the operations. For further details, refer to the table of standards in the STEP 7 file NORM\_TBL.RTF.

## Online Help

The manual is complemented by an online help which is integrated in the software. This online help is intended to provide you with detailed support when using the software.

The help system is integrated in the software via a number of interfaces:

- The context-sensitive help offers information on the current context, for example, an open dialog box or an active window. You can open the context-sensitive help via the menu command Help > Context-Sensitive Help, by pressing F1 or by using the question mark symbol in the toolbar.
- You can call the general Help on STEP 7 using the menu command Help > Contents or the "Help on STEP 7" button in the context-sensitive help window.
- You can call the glossary for all STEP 7 applications via the "Glossary" button.

This manual is an extract from the "Help on Statement List". As the manual and the online help share an identical structure, it is easy to switch between the manual and the online help.

## Further Support

If you have any technical questions, please get in touch with your Siemens representative or responsible agent.

You will find your contact person at:

<http://www.siemens.com/automation/partner>

You will find a guide to the technical documentation offered for the individual SIMATIC Products and

Systems at:

<http://www.siemens.com/simatic-tech-doku-portal>

The online catalog and order system is found under:

<http://mall.automation.siemens.com/>

## Training Centers

Siemens offers a number of training courses to familiarize you with the SIMATIC S7 automation system. Please contact your regional training center or our central training center in D 90026 Nuremberg, Germany for details:

Internet: <http://sitrain.automation.siemens.com/sitrainworld/>

## Technical Support

You can reach the Technical Support for all Industry Automation and Drive Technology products

- Via the Web formula for the Support Request  
<http://www.siemens.com/automation/support-request>

Additional information about our Technical Support can be found on the Internet pages

<http://www.siemens.com/automation/service>

## Service & Support on the Internet

In addition to our documentation, we offer our Know-how online on the internet at:

<http://www.siemens.com/automation/service&support>

where you will find the following:

- The newsletter, which constantly provides you with up-to-date information on your products.
- The right documents via our Search function in Service & Support.
- A forum, where users and experts from all over the world exchange their experiences.
- Your local representative for Industry Automation and Drive Technology.
- Information on field service, repairs, spare parts and consulting.

**Security Information:**

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement - and continuously maintain - a holistic, state-of-the-art industrial security concept. Siemens' products and solutions only form one element of such a concept.

Customer is responsible to prevent unauthorized access to its plants, systems, machines and networks. Systems, machines and components should only be connected to the enterprise network or the internet if and to the extent necessary and with appropriate security measures (e.g. use of firewalls and network segmentation) in place.

Additionally, Siemens' guidance on appropriate security measures should be taken into account. For more information about industrial security, please visit

<http://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends to apply product updates as soon as available and to always use the latest product versions. Use of product versions that are no longer supported, and failure to apply latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

<http://www.siemens.com/industrialsecurity>.



# Table of Contents

Preface.....	3
Table of Contents .....	7
<b>1 Bit Logic Instructions.....</b>	<b>13</b>
1.1 Overview of Bit Logic Instructions.....	13
1.2 A And .....	15
1.3 AN And Not .....	16
1.4 O Or .....	17
1.5 ON Or Not .....	18
1.6 X Exclusive Or.....	19
1.7 XN Exclusive Or Not .....	20
1.8 O And before Or.....	21
1.9 A( And with Nesting Open.....	22
1.10 AN( And Not with Nesting Open .....	23
1.11 O( Or with Nesting Open.....	23
1.12 ON( Or Not with Nesting Open .....	24
1.13 X( Exclusive Or with Nesting Open.....	24
1.14 XN( Exclusive Or Not with Nesting Open .....	25
1.15 ) Nesting Closed.....	25
1.16 = Assign .....	27
1.17 R Reset .....	28
1.18 S Set .....	29
1.19 NOT Negate RLO .....	30
1.20 SET Set RLO (=1).....	30
1.21 CLR Clear RLO (=0) .....	32
1.22 SAVE Save RLO in BR Register.....	33
1.23 FN Edge Negative.....	34
1.24 FP Edge Positive .....	36
<b>2 Comparison Instructions.....</b>	<b>39</b>
2.1 Overview of Comparison Instructions .....	39
2.2 ? I Compare Integer (16-Bit) .....	40
2.3 ? D Compare Double Integer (32-Bit) .....	41
2.4 ? R Compare Floating-Point Number (32-Bit).....	42
<b>3 Conversion Instructions.....</b>	<b>43</b>
3.1 Overview of Conversion Instructions .....	43
3.2 BTI BCD to Integer (16-Bit).....	44
3.3 ITB Integer (16-Bit) to BCD.....	45
3.4 BTD BCD to Integer (32-Bit) .....	46
3.5 ITD Integer (16 Bit) to Double Integer (32-Bit).....	47
3.6 DTB Double Integer (32-Bit) to BCD.....	48
3.7 DTR Double Integer (32-Bit) to Floating-Point (32-Bit IEEE 754).....	49
3.8 INVI Ones Complement Integer (16-Bit).....	50
3.9 INVD Ones Complement Double Integer (32-Bit).....	51

3.10	NEGI	Twos Complement Integer (16-Bit)	52
3.11	NEGD	Twos Complement Double Integer (32-Bit)	53
3.12	NEGR	Negate Floating-Point Number (32-Bit, IEEE 754)	54
3.13	CAW	Change Byte Sequence in ACCU 1-L (16-Bit)	55
3.14	CAD	Change Byte Sequence in ACCU 1 (32-Bit)	56
3.15	RND	Round	57
3.16	TRUNC	Truncate	58
3.17	RND+	Round to Upper Double Integer	59
3.18	RND-	Round to Lower Double Integer	60
<b>4</b>	<b>Counter Instructions</b>		<b>61</b>
4.1	Overview of Counter Instructions		61
4.2	FR	Enable Counter (Free)	62
4.3	L	Load Current Counter Value into ACCU 1	63
4.4	LC	Load Current Counter Value into ACCU 1 as BCD	64
4.5	R	Reset Counter	66
4.6	S	Set Counter Preset Value	67
4.7	CU	Counter Up	68
4.8	CD	Counter Down	69
<b>5</b>	<b>Data Block Instructions</b>		<b>71</b>
5.1	Overview of Data Block Instructions		71
5.2	OPN	Open a Data Block	72
5.3	CDB	Exchange Shared DB and Instance DB	73
5.4	L DBLG	Load Length of Shared DB in ACCU 1	73
5.5	L DBNO	Load Number of Shared DB in ACCU 1	74
5.6	L DILG	Load Length of Instance DB in ACCU 1	74
5.7	L DINO	Load Number of Instance DB in ACCU 1	75
<b>6</b>	<b>Logic Control Instructions</b>		<b>77</b>
6.1	Overview of Logic Control Instructions		77
6.2	JU	Jump Unconditional	79
6.3	JL	Jump to Labels	80
6.4	JC	Jump if RLO = 1	82
6.5	JCN	Jump if RLO = 0	83
6.6	JCB	Jump if RLO = 1 with BR	84
6.7	JNB	Jump if RLO = 0 with BR	85
6.8	JB	Jump if BR = 1	86
6.9	JNBI	Jump if BR = 0	87
6.10	JO	Jump if OV = 1	88
6.11	JOS	Jump if OS = 1	89
6.12	JZ	Jump if Zero	91
6.13	JN	Jump if Not Zero	92
6.14	JP	Jump if Plus	93
6.15	JM	Jump if Minus	94
6.16	JPZ	Jump if Plus or Zero	95
6.17	JMZ	Jump if Minus or Zero	96
6.18	JUO	Jump if Unordered	97
6.19	LOOP	Loop	99



<b>7</b>	<b>Integer Math Instructions</b> .....	<b>101</b>
7.1	Overview of Integer Math Instructions .....	101
7.2	Evaluating the Bits of the Status Word with Integer Math Instructions .....	102
7.3	+I Add ACCU 1 and ACCU 2 as Integer (16-Bit) .....	103
7.4	-I Subtract ACCU 1 from ACCU 2 as Integer (16-Bit).....	104
7.5	*I Multiply ACCU 1 and ACCU 2 as Integer (16-Bit).....	105
7.6	/I Divide ACCU 2 by ACCU 1 as Integer (16-Bit).....	106
7.7	+ Add Integer Constant (16, 32-Bit).....	108
7.8	+D Add ACCU 1 and ACCU 2 as Double Integer (32-Bit).....	110
7.9	-D Subtract ACCU 1 from ACCU 2 as Double Integer (32-Bit).....	111
7.10	*D Multiply ACCU 1 and ACCU 2 as Double Integer (32-Bit).....	112
7.11	/D Divide ACCU 2 by ACCU 1 as Double Integer (32-Bit).....	113
7.12	MOD Division Remainder Double Integer (32-Bit).....	115
<b>8</b>	<b>Floating-Point Math Instructions</b> .....	<b>117</b>
8.1	Overview of Floating-Point Math Instructions .....	117
8.2	Evaluating the Bits of the Status Word with Floating-Point Math Instructions .....	118
8.3	Floating-Point Math Instructions: Basic .....	119
8.3.1	+R Add ACCU 1 and ACCU 2 as a Floating-Point Number (32-Bit IEEE 754) .....	119
8.3.2	-R Subtract ACCU 1 from ACCU 2 as a Floating-Point Number (32-Bit IEEE 754).....	121
8.3.3	*R Multiply ACCU 1 and ACCU 2 as Floating-Point Numbers (32-Bit IEEE 754).....	123
8.3.4	/R Divide ACCU 2 by ACCU 1 as a Floating-Point Number (32-Bit IEEE 754).....	125
8.3.5	ABS Absolute Value of a Floating-Point Number (32-Bit IEEE 754) .....	127
8.4	Floating-Point Math Instructions: Extended .....	128
8.4.1	SQR Generate the Square of a Floating-Point Number (32-Bit) .....	128
8.4.2	SQRT Generate the Square Root of a Floating-Point Number (32-Bit).....	129
8.4.3	EXP Generate the Exponential Value of a Floating-Point Number (32-Bit) .....	130
8.4.4	LN Generate the Natural Logarithm of a Floating-Point Number (32-Bit).....	131
8.4.5	SIN Generate the Sine of Angles as Floating-Point Numbers (32-Bit).....	132
8.4.6	COS Generate the Cosine of Angles as Floating-Point Numbers (32-Bit) .....	133
8.4.7	TAN Generate the Tangent of Angles as Floating-Point Numbers (32-Bit).....	134
8.4.8	ASIN Generate the Arc Sine of a Floating-Point Number (32-Bit).....	135
8.4.9	ACOS Generate the Arc Cosine of a Floating-Point Number (32-Bit).....	136
8.4.10	ATAN Generate the Arc Tangent of a Floating-Point Number (32-Bit).....	137
<b>9</b>	<b>Load and Transfer Instructions</b> .....	<b>139</b>
9.1	Overview of Load and Transfer Instructions .....	139
9.2	L Load .....	140
9.3	L STW Load Status Word into ACCU 1 .....	142
9.4	LAR1 Load Address Register 1 from ACCU 1.....	143
9.5	LAR1 <D> Load Address Register 1 with Double Integer (32-Bit Pointer).....	144
9.6	LAR1 AR2 Load Address Register 1 from Address Register 2 .....	145
9.7	LAR2 Load Address Register 2 from ACCU 1.....	145
9.8	LAR2 <D> Load Address Register 2 with Double Integer (32-Bit Pointer).....	146
9.9	T Transfer.....	147
9.10	T STW Transfer ACCU 1 into Status Word .....	148
9.11	CAR Exchange Address Register 1 with Address Register 2 .....	149
9.12	TAR1 Transfer Address Register 1 to ACCU 1 .....	149

9.13	TAR1 <D> Transfer Address Register 1 to Destination (32-Bit Pointer) .....	150
9.14	TAR1 AR2 Transfer Address Register 1 to Address Register 2 .....	151
9.15	TAR2 Transfer Address Register 2 to ACCU 1 .....	151
9.16	TAR2 <D> Transfer Address Register 2 to Destination (32-Bit Pointer) .....	152
<b>10</b>	<b>Program Control Instructions .....</b>	<b>153</b>
10.1	Overview of Program Control Instructions .....	153
10.2	BE Block End .....	154
10.3	BEC Block End Conditional .....	155
10.4	BEU Block End Unconditional .....	156
10.5	CALL Block Call .....	157
10.6	Call FB .....	160
10.7	Call FC .....	162
10.8	Call SFB .....	164
10.9	Call SFC .....	166
10.10	Call Multiple Instance .....	167
10.11	Call Block from a Library .....	167
10.12	CC Conditional Call .....	168
10.13	UC Unconditional Call .....	169
10.14	MCR (Master Control Relay) .....	170
10.15	Important Notes on Using MCR Functions .....	172
10.16	MCR( Save RLO in MCR Stack, Begin MCR .....	173
10.17	)MCR End MCR .....	175
10.18	MCRA Activate MCR Area .....	176
10.19	MCRD Deactivate MCR Area .....	177
<b>11</b>	<b>Shift and Rotate Instructions .....</b>	<b>179</b>
11.1	Shift Instructions .....	179
11.1.1	Overview of Shift Instructions .....	179
11.1.2	SSI Shift Sign Integer (16-Bit) .....	180
11.1.3	SSD Shift Sign Double Integer (32-Bit) .....	182
11.1.4	SLW Shift Left Word (16-Bit) .....	184
11.1.5	SRW Shift Right Word (16-Bit) .....	186
11.1.6	SLD Shift Left Double Word (32-Bit) .....	188
11.1.7	SRD Shift Right Double Word (32-Bit) .....	190
11.2	Rotate Instructions .....	192
11.2.1	Overview of Rotate Instructions .....	192
11.2.2	RLD Rotate Left Double Word (32-Bit) .....	193
11.2.3	RRD Rotate Right Double Word (32-Bit) .....	195
11.2.4	RLDA Rotate ACCU 1 Left via CC 1 (32-Bit) .....	197
11.2.5	RRDA Rotate ACCU 1 Right via CC 1 (32-Bit) .....	198
<b>12</b>	<b>Timer Instructions .....</b>	<b>199</b>
12.1	Overview of Timer Instructions .....	199
12.2	Location of a Timer in Memory and Components of a Timer .....	200
12.3	FR Enable Timer (Free) .....	203
12.4	L Load Current Timer Value into ACCU 1 as Integer .....	205
12.5	LC Load Current Timer Value into ACCU 1 as BCD .....	207
12.6	R Reset Timer .....	209

12.7	SP	Pulse Timer .....	210
12.8	SE	Extended Pulse Timer.....	212
12.9	SD	On-Delay Timer.....	214
12.10	SS	Retentive On-Delay Timer.....	216
12.11	SF	Off-Delay Timer .....	218
<b>13</b>	<b>Word Logic Instructions.....</b>		<b>221</b>
13.1		Overview of Word Logic Instructions .....	221
13.2	AW	AND Word (16-Bit) .....	222
13.3	OW	OR Word (16-Bit) .....	224
13.4	XOW	Exclusive OR Word (16-Bit) .....	226
13.5	AD	AND Double Word (32-Bit).....	228
13.6	OD	OR Double Word (32-Bit) .....	230
13.7	XOD	Exclusive OR Double Word (32-Bit).....	232
<b>14</b>	<b>Accumulator Instructions.....</b>		<b>235</b>
14.1		Overview of Accumulator and Address Register Instructions.....	235
14.2	TAK	Toggle ACCU 1 with ACCU 2 .....	236
14.3	POP	CPU with Two ACCUs.....	237
14.4	POP	CPU with Four ACCUs.....	238
14.5	PUSH	CPU with Two ACCUs .....	239
14.6	PUSH	CPU with Four ACCUs.....	240
14.7	ENT	Enter ACCU Stack .....	241
14.8	LEAVE	Leave ACCU Stack .....	242
14.9	INC	Increment ACCU 1-L-L .....	242
14.10	DEC	Decrement ACCU 1-L-L .....	244
14.11	+AR1	Add ACCU 1 to Address Register 1.....	245
14.12	+AR2	Add ACCU 1 to Address Register 2.....	246
14.13	BLD	Program Display Instruction (Null) .....	247
14.14	NOP 0	Null Instruction .....	247
14.15	NOP 1	Null Instruction .....	248
<b>A</b>	<b>Overview of All STL Instructions.....</b>		<b>249</b>
A.1		STL Instructions Sorted According to German Mnemonics (SIMATIC).....	249
A.2		STL Instructions Sorted According to English Mnemonics (International).....	255
<b>B</b>	<b>Programming Examples.....</b>		<b>261</b>
B.1		Overview of Programming Examples.....	261
B.2		Example: Bit Logic Instructions.....	262
B.3		Example: Timer Instructions .....	266
B.4		Example: Counter and Comparison Instructions .....	269
B.5		Example: Integer Math Instructions .....	271
B.6		Example: Word Logic Instructions .....	272
<b>C</b>	<b>Parameter Transfer.....</b>		<b>275</b>
<b>Index .....</b>			<b>277</b>



# 1 Bit Logic Instructions

## 1.1 Overview of Bit Logic Instructions

### Description

Bit logic instructions work with two digits, 1 and 0. These two digits form the base of a number system called the binary system. The two digits 1 and 0 are called binary digits or bits. In the world of contacts and coils, a 1 indicates activated or energized, and a 0 indicates not activated or not energized.

The bit logic instructions interpret signal states of 1 and 0 and combine them according to Boolean logic. These combinations produce a result of 1 or 0 that is called the "result of logic operation" (RLO).

Boolean bit logic applies to the following basic instructions:

- A And
- AN And Not
- O Or
- ON Or Not
- X Exclusive Or
- XN Exclusive Or Not
- O And before Or

You can use the following instructions to perform nesting expressions:

- A( And with Nesting Open
- AN( And Not with Nesting Open
- O( Or with Nesting Open
- ON( Or Not with Nesting Open
- X( Exclusive Or with Nesting Open
- XN( Exclusive Or Not with Nesting Open
- ) Nesting Closed

You can terminate a Boolean bit logic string by using one of the following instructions:

- = Assign
- R Reset
- S Set

*1.1 Overview of Bit Logic Instructions*

You can use one of the following instructions to change the result of logic operation (RLO):

- NOT Negate RLO
- SET Set RLO (=1)
- CLR Clear RLO (=0)
- SAVE Save RLO in BR Register

Other instructions react to a positive or negative edge transition:

- FN Edge Negative
- FP Edge Positive

## 1.2 A And

### Format

A <Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D, T, C

### Description

A checks whether the state of the addressed bit is "1", and ANDs the test result with the RLO.




 


Status Word Bit Checks:

The **AND** instruction can also be used to directly check the status word by use of the following addresses: ==0, <>0, >0, <0, >=0, <=0, OV, OS, UO, BR.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	x	x	x	1

### Example

STL Program	Relay Logic
	Power rail 
A I 1.0	I 1.0 signal state 1  NO contact
A I 1.1	I 1.1 signal state 1  NC contact
= Q 4.0	Q 4.0 signal state 1  Coil
 Displays closed switch	

### 1.3 AN And Not

**Format**

**N <Bit>**

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D, T, C

**Description**

**AN** checks whether the state of the addressed bit is "0", and ANDs the test result with the RLO.



Status Word Bit Checks:

The **AND NOT** instruction can also be used to directly check the status word by use of the following addresses: ==0, <>0, >0, <0, >=0, <=0, OV, OS, UO, BR.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	x	x	x	1

**Example**

STL Program		Relay Logic	
		Power rail	
<b>A</b>	<b>I 1.0</b>	I 1.0 Signal state 0	NO contact
<b>AN</b>	<b>I 1.1</b>	I 1.1 Signal state 1	NC contact
<b>=</b>	<b>Q 4.0</b>	Q 4.0 Signal state 0	Coil
			



# 1.4 O Or

## Format

**O** <Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D, T, C

## Description

**O** checks whether the state of the addressed bit is "1", and ORs the test result with the RLO.

Status Word Bit Checks:

The **OR** instruction can also be used to directly check the status word by use of the following addresses: ==0, <>0, >0, <0, >=0, <=0, OV, OS, UO, BR.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	x	1

## Example

STL Program	Relay Logic
<b>O</b> I 1.0	
<b>O</b> I 1.1	
<b>=</b> Q 4.0	

# 1.5 ON Or Not

## Format

ON <Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D, T, C

## Description

**ON** checks whether the state of the addressed bit is "0", and ORs the test result with the RLO.


Status Word Bit Checks:

The **OR NOT** instruction can also be used to directly check the status word by use of the following addresses: ==0, <>0, >0, <0, >=0, <=0, OV, OS, UO, BR.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:									

## Example

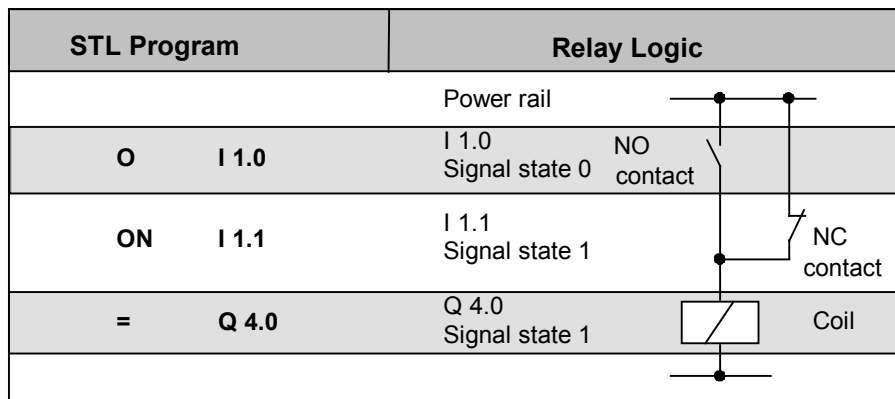

## 1.6 X Exclusive Or

### Format

X <Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D, T, C

### Description

X checks whether the state of the addressed bit is "1", and XORs the test result with the RLO.

You can also use the **Exclusive OR** function several times. The mutual result of logic operation is then "1" if an impair number of checked addresses is "1".

 
 
 

Status Word Bit Checks:

The **EXCLUSIVE OR** instruction can also be used to directly check the status word by use of the following addresses: ==0, <>0, >0, <0, >=0, <=0, OV, OS, UO, BR.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	x	1

### Example

Statement List Program	Relay Logic
	Power rail 
X I 1.0	Contact I 1.0 
X I 1.1	Contact I 1.1 
= Q 4.0	Q 4.0 Coil 

## 1.7 XN Exclusive Or Not

### Format

**XN** <Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D, T, C

### Description

**XN** checks whether the state of the addressed bit is "0", and XORs the test result with the RLO.


 



Status Word Bit Checks:

The **EXCLUSIVE OR NOT** instruction can also be used to directly check the status word by use of the following addresses: ==0, <>0, >0, <0, >=0, <=0, OV, OS, UO, BR.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	x	1

### Example

Statement List Program		Relay Logic	
		Power rail	
<b>X</b>	<b>I 1.0</b>	Contact I 1.0	
<b>XN</b>	<b>I 1.1</b>	Contact I 1.1	
<b>=</b>	<b>Q 4.0</b>	Q 4.0 Coil	
			

## 1.8 O And before Or

### Format

O


### Description

The **O** function performs a logical OR instruction on AND functions according to the rule: AND before OR.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	x	1	-	x

### Example

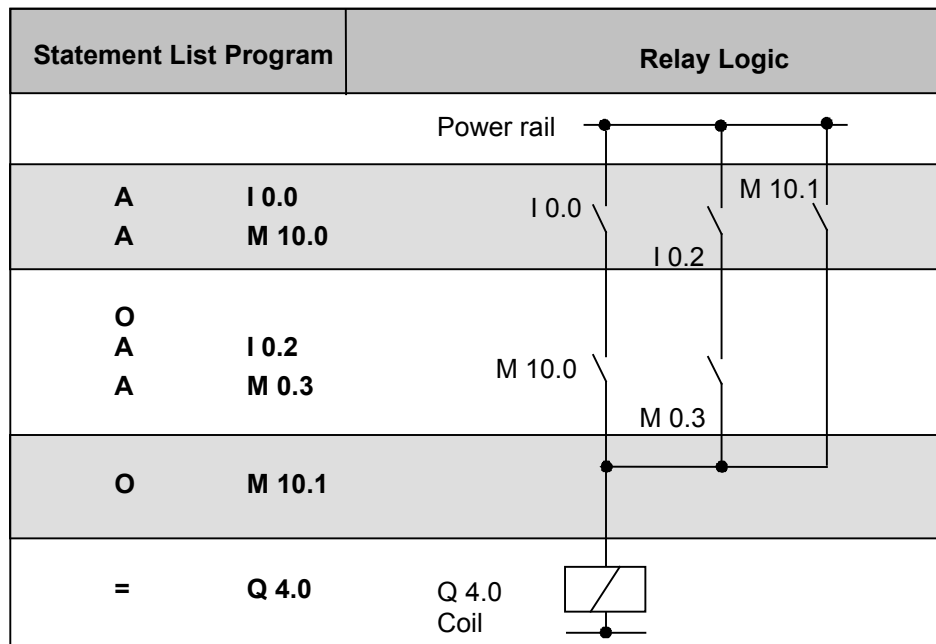

## 1.9 A( And with Nesting Open

### Format

A(


### Description

A( (AND nesting open) saves the RLO and OR bits and a function code into the nesting stack. A maximum of seven nesting stack entries are possible.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

### Example

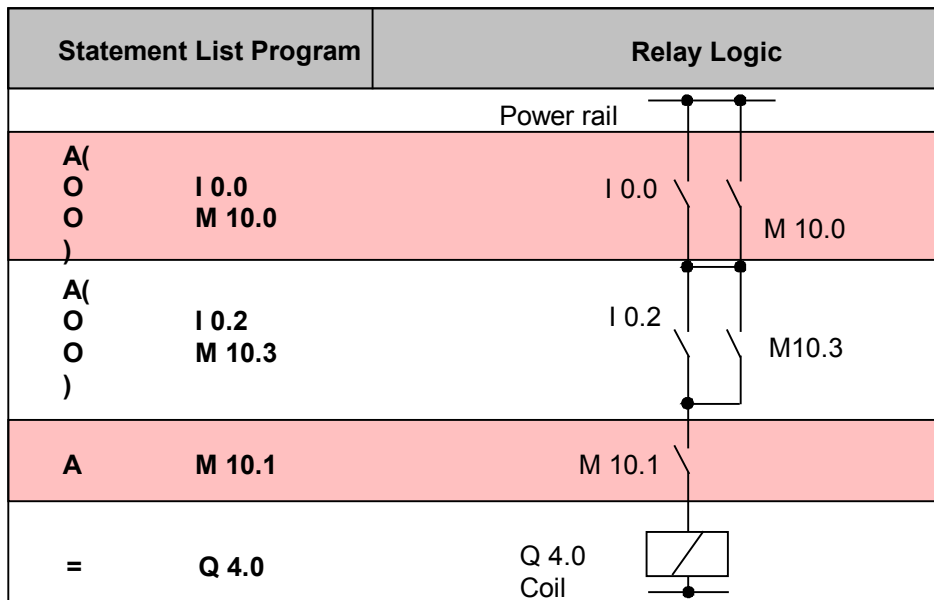

## 1.10 AN( And Not with Nesting Open

### Format

AN(

### Description

AN( (AND NOT nesting open) saves the RLO and OR bits and a function code into the nesting stack. A maximum of seven nesting stack entries are possible.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

## 1.11 O( Or with Nesting Open

### Format

O(

### Description

O( (OR nesting open) saves the RLO and OR bits and a function code into the nesting stack. A maximum of seven nesting stack entries are possible.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

1.12 ON( Or Not with Nesting Open

## 1.12 ON( Or Not with Nesting Open

### Format

ON(

### Description

ON( (OR NOT nesting open) saves the RLO and OR bits and a function code into the nesting stack. A maximum of seven nesting stack entries is possible.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

## 1.13 X( Exclusive Or with Nesting Open

### Format

X(

### Description

X( (XOR nesting open) saves the RLO and OR bits and a function code into the nesting stack. A maximum of seven nesting stack entries is possible.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0



## 1.14 XN( Exclusive Or Not with Nesting Open

### Format

XN(

### Description

**XN(** (XOR NOT nesting open) saves the RLO and OR bits and a function code into the nesting stack. A maximum of seven nesting stack entries is possible.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

## 1.15 ) Nesting Closed

### Format

)

### Description

**)** (nesting closed) removes an entry from the nesting stack, restores the OR bit, interconnects the RLO that is contained in the stack entry with the current RLO according to the function code, and assigns the result to the RLO. The OR bit is also included if the function code is "AND" or "AND NOT".

Statements which open parentheses groups:


- U( And with Nesting Open
- UN( And Not with Nesting Open
- O( Or with Nesting Open
- ON( Or Not with Nesting Open
- X( Exclusive Or with Nesting Open
- XN( Exclusive Or Not with Nesting Open

1.15) Nesting Closed

Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	x	1	x	1

Example

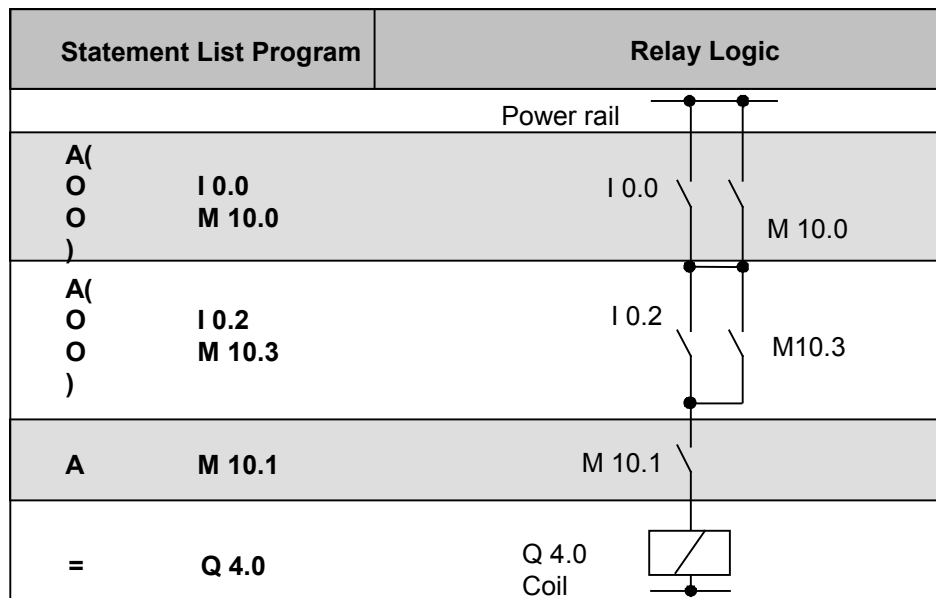

# 1.16 = Assign

## Format

<Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D


## Description

= <Bit> writes the RLO into the addressed bit for a switched on master control relay if MCR = 1. If MCR = 0, then the value 0 is written to the addressed bit instead of RLO.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	-	0

## Example

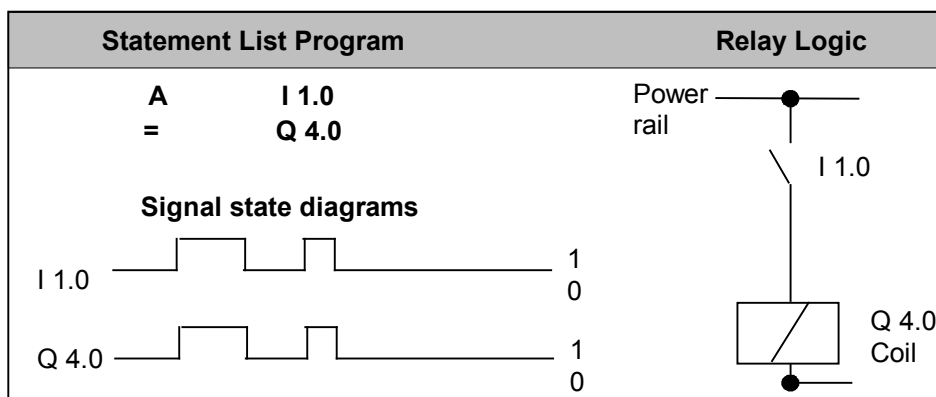

1.17 R Reset

# 1.17 R Reset

## Format

R <Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D


## Description

R (reset bit) places a "0" in the addressed bit if RLO = 1 and master control relay MCR = 1. If MCR = 0, then the addressed bit will not be changed.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	-	0

## Example

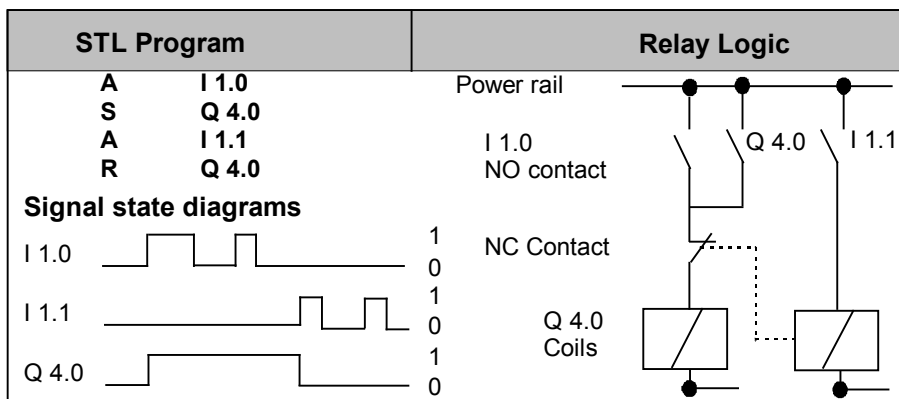

# 1.18 S Set

## Format

S <Bit>

Address	Data type	Memory area
<Bit>	BOOL	I, Q, M, L, D


## Description of instruction

S (set bit) places a "1" in the addressed bit if RLO = 1 and the switched on master control relay MCR = 1. If MCR = 0, the addressed bit does not change.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	-	0

## Example

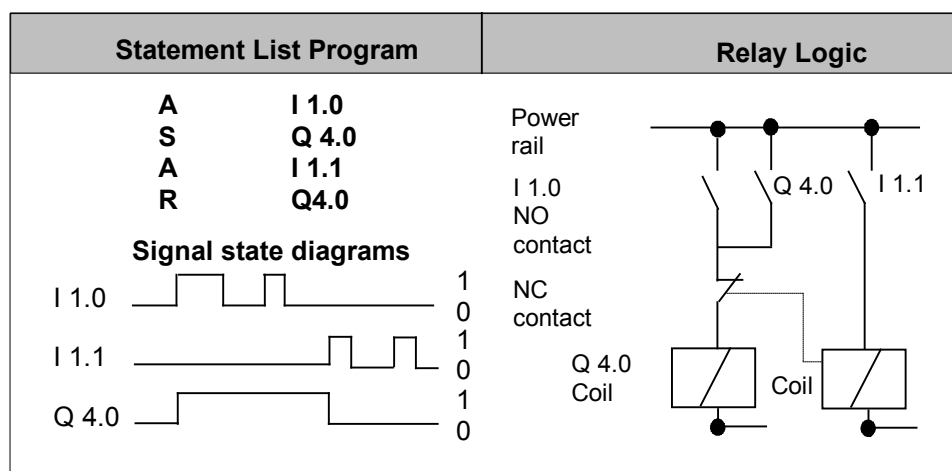

1.19 NOT Negate RLO

## 1.19 NOT Negate RLO

**Format**

NOT

**Description**

NOT negates the RLO.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	1	x	-

## 1.20 SET Set RLO (=1)

**Format**

SET

**Description**

SET sets the RLO to signal state "1".

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	1	0

**Example**

STL Program	Signal State	Result of Logic Operation (RLO)
SET		1
= M 10.0	1	←
= M 15.1	1	
= M 16.0	1	
CLR		0
= M 10.1	0	←
= M 10.2	0	

## 1.21 CLR Clear RLO (=0)

### Format

CLR

### Description

CLR sets the RLO to signal state "0".

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	0	0	0

### Example

Statement List	Signal State	Result of Logic Operation (RLO)
<b>SET</b>		1
= M 10.0	1	←
= M 15.1	1	
= M 16.0	1	
<b>CLR</b>		0
= M 10.1	0	←
= M 10.2	0	



## 1.22 **SAVE** Save RLO in BR Register

### Format

**SAVE**

### Description of instruction

**SAVE** saves the RLO into the BR bit. The first check bit /FC is not reset. For this reason, the status of the BR bit is included in the AND logic operation in the next network.

The use of **SAVE** and a subsequent query of the BR bit in the same block or in secondary blocks is not recommended because the BR bit can be changed by numerous instructions between the two. It makes sense to use the **SAVE** instruction before exiting a block because this sets the ENO output (= BR bit) to the value of the RLO bit and you can then add error handling of the block to this.

### Status word

	<b>BR</b>	<b>CC 1</b>	<b>CC 0</b>	<b>OV</b>	<b>OS</b>	<b>OR</b>	<b>STA</b>	<b>RLO</b>	<b>/FC</b>
writes:	x	-	-	-	-	-	-	-	-

## 1.23 FN Edge Negative

### Format

FN <Bit>

Address	Data type	Memory area	Description
<Bit>	BOOL	I, Q, M, L, D	Edge flag, stores the previous signal state of RLO.

### Description

**FN <Bit>** (Negative RLO edge) detects a falling edge when the RLO transitions from "1" to "0", and indicates this by RLO = 1.

During each program scan cycle, the signal state of the RLO bit is compared with that obtained in the previous cycle to see if there has been a state change. The previous RLO state must be stored in the edge flag address (<Bit>) to make the comparison. If there is a difference between current and previous RLO "1" state (detection of falling edge), the RLO bit will be "1" after this instruction.


### Note

The instruction has no point if the bit you want to monitor is in the process image because the local data for a block are only valid during the block's runtime.

### Status word


	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	x	1

### Definition

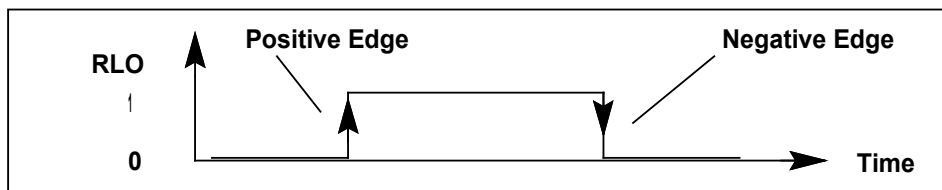

**Example**

If the programmable logic controller detects a negative edge at contact I 1.0, it energizes the coil at Q 4.0 for one OB1 scan cycle.

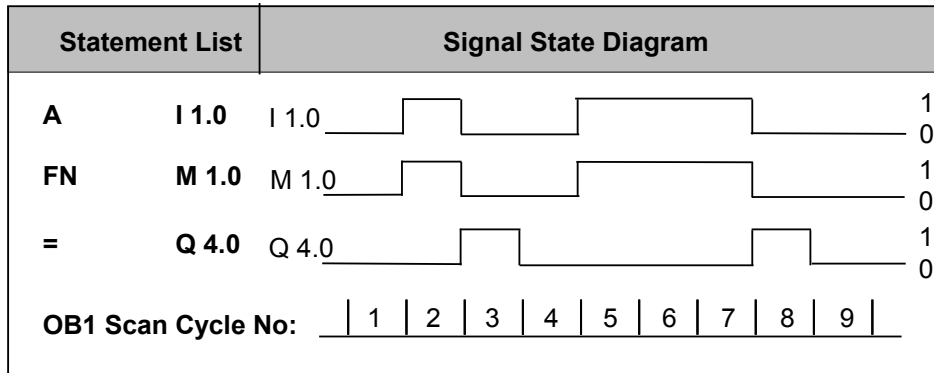

## 1.24 FP Edge Positive

### Format

FP <Bit>

Address	Data type	Memory area	Description
<Bit>	BOOL	I, Q, M, L, D	Edge flag, stores the previous signal state of RLO.

### Description

**FP <Bit>** (Positive RLO edge) detects a rising edge when the RLO transitions from "0" to "1" and indicates this by RLO = 1.

During each program scan cycle, the signal state of the RLO bit is compared with that obtained in the previous cycle to see if there has been a state change. The previous RLO state must be stored in the edge flag address (<Bit>) to make the comparison. If there is a difference between current and previous RLO "0" state (detection of rising edge), the RLO bit will be "1" after this instruction.


#### Note

The instruction has no point if the bit you want to monitor is in the process image because the local data for a block are only valid during the block's runtime.

### Status word


	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	x	x	1

### Definition

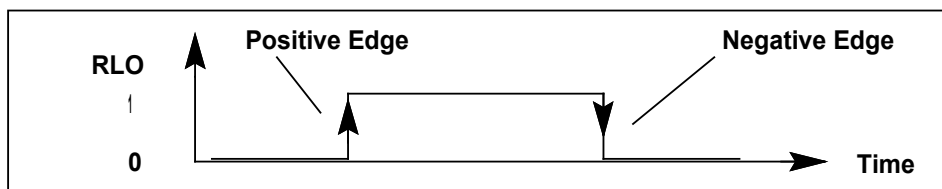

**Example**

If the programmable logic controller detects a positive edge at contact I 1.0, it energizes the coil at Q 4.0 for one OB1 scan cycle.

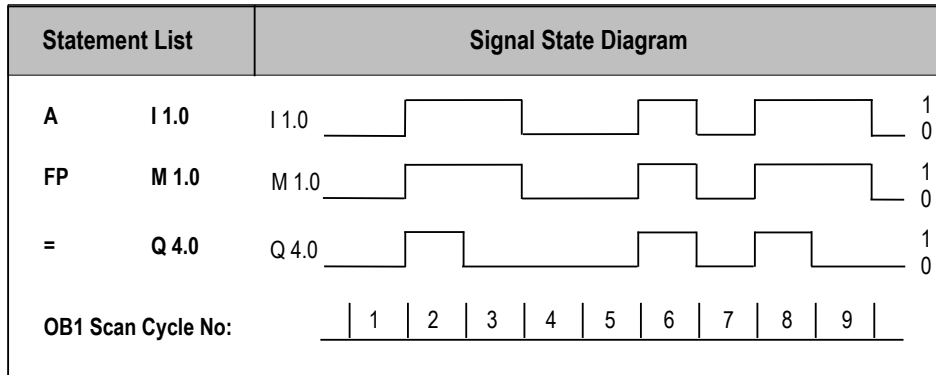



## 2 Comparison Instructions

### 2.1 Overview of Comparison Instructions

#### Description

ACCU1 and ACCU2 are compared according to the type of comparison you choose:

- == ACCU1 is equal to ACCU2
- <> ACCU1 is not equal to ACCU2
- > ACCU1 is greater than ACCU2
- < ACCU1 is less than ACCU2
- >= ACCU1 is greater than or equal to ACCU2
- <= ACCU1 is less than or equal to ACCU2

If the comparison is true, the RLO of the function is "1". The status word bits CC 1 and CC 0 indicate the relations "less," "equal," or "greater."

There are comparison instructions to perform the following functions:

- ? I Compare Integer (16-Bit)
- ? D Compare Double Integer (32-Bit)
- ? R Compare Floating-Point Number (32-Bit)

## 2.2 ? I Compare Integer (16-Bit)

### Format

==I, <>I, >I, <I, >=I, <=I

### Description of instruction

The Compare Integer (16-bit) instructions compare the contents of ACCU 2-L with the contents of ACCU 1-L. The contents of ACCU 2-L and ACCU 1-L are interpreted as 16-bit integer numbers. The result of the comparison is indicated by the RLO and the setting of the relevant status word bits. RLO = 1 indicates that the result of the comparison is true; RLO = 0 indicates that the result of the comparison is false. The status word bits CC 1 and CC 0 indicate the relations "less," "equal," or "greater."

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	0	-	0	x	x	1

### RLO values

Comparison instruction executed	RLO Result if ACCU 2 > ACCU 1	RLO Result if ACCU 2 = ACCU 1	RLO Result if ACCU 2 < ACCU 1
==I	0	1	0
<>I	1	0	1
>I	1	0	0
<I	0	0	1
>=I	1	1	0
<=I	0	1	1

### Example

STL	Explanation
L MW10	//Load contents of MW10 (16-bit integer).
L IW24	//Load contents of IW24 (16-bit integer).
>I	//Compare if ACCU 2-L (MW10) is greater (>) than ACCU 1- L (IW24).
= M 2.0	//RLO = 1 if MW10 > IW24.



## 2.3 ? D Compare Double Integer (32-Bit)

### Format

==D, <>D, >D, <D, >=D, <=D

### Description of instruction

The Compare Double Integer (32-bit) instructions compare the contents of ACCU 2 with the contents of ACCU 1. The contents of ACCU 2 and ACCU 1 are interpreted as 32-bit integer numbers. The result of the comparison is indicated by the RLO and the setting of the relevant status word bits. RLO = 1 indicates that the result of the comparison is true; RLO = 0 indicates that the result of the comparison is false. The status word bits CC 1 and CC 0 indicate the relations "less," "equal," or "greater."

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	0	-	0	x	x	1

### RLO values

Comparison instruction executed	RLO Result if ACCU 2 > ACCU 1	RLO Result if ACCU 2 = ACCU 1	RLO Result if ACCU 2 < ACCU 1
==D	0	1	0
<>D	1	0	1
>D	1	0	0
<D	0	0	1
>=D	1	1	0
<=D	0	1	1

### Example

STL	Explanation
L MD10	//Load contents of MD10 (double integer, 32 bits).
L ID24	//Load contents of ID24 (double integer, 32 bits).
>D	//Compare if ACCU 2 (MD10) is greater (>) than ACCU 1 (ID24).
= M 2.0	//RLO = 1 if MD10 > ID24

## 2.4 ? R Compare Floating-Point Number (32-Bit)

### Format

==R, <>R, >R, <R, >=R, <=R

### Description of instruction

The Compare Floating Point Number (32-bit, IEEE 754) instructions compare the contents of ACCU 2 with the contents of ACCU 1. The contents of ACCU 1 and ACCU 2 are interpreted as floating-point numbers (32-bit, IEEE 754). The result of the comparison is indicated by the RLO and the setting of the relevant status word bits. RLO = 1 indicates that the result of the comparison is true; RLO = 0 indicates that the result of the comparison is false. The status word bits CC 1 and CC 0 indicate the relations "less," "equal," or "greater."

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	0	x	x	1

### RLO values

Comparison instruction executed	RLO Result if ACCU 2 > ACCU 1	RLO Result if ACCU 2 = ACCU 1	RLO Result if ACCU 2 < ACCU 1
==R	0	1	0
<>R	1	0	1
>R	1	0	0
<R	0	0	1
>=R	1	1	0
<=R	0	1	1

### Example

STL	Explanation
L MD10	//Load contents of MD10 (floating-point number).
L 1.359E+02	//Load the constant 1.359E+02.
>R	//Compare if ACCU 2 (MD10) is greater (>) than ACCU 1 (1.359-E+02).
= M 2.0	//RLO = 1 if MD10 > 1.359E+02.

## 3 Conversion Instructions

### 3.1 Overview of Conversion Instructions

#### Description

You can use the following instructions to convert binary coded decimal numbers and integers to other types of numbers:

- BTI BCD to Integer (16-Bit)
- ITB Integer (16-Bit) to BCD
- BTD BCD to Integer (32-Bit)
- ITD Integer (16-Bit) to Double Integer (32-Bit)
- DTB Double Integer (32-Bit) to BCD
- DTR Double Integer (32-Bit) to Floating-Point (32-Bit IEEE 754)

You can use one of the following instructions to form the complement of an integer or to invert the sign of a floating-point number:

- INVI Ones Complement Integer (16-Bit)
- INVD Ones Complement Double Integer (32-Bit)
- NEGI Twos Complement Integer (16-Bit)
- NEGD Twos Complement Double Integer (32-Bit)
- NEGR Negate Floating-Point Number (32-Bit, IEEE 754)

You can use the following Change Bit Sequence in Accumulator 1 instructions to reverse the order of bytes in the low word of accumulator 1 or in the entire accumulator:

- CAW Change Byte Sequence in ACCU 1-L (16-Bit)
- CAD Change Byte Sequence in ACCU 1 (32-Bit)

You can use any of the following instructions to convert a 32-bit IEEE floating-point number in accumulator 1 to a 32-bit integer (double integer). The individual instructions differ in their method of rounding:

- RND Round
- TRUNC Truncate
- RND+ Round to Upper Double Integer
- RND- Round to Lower Double Integer

3.2 BTI BCD to Integer (16-Bit)

### 3.2 BTI BCD to Integer (16-Bit)

**Format**

BTI

**Description**

BTI (decimal to binary conversion of a 3-digit BCD number) interprets the contents of ACCU 1-L as a three-digit binary coded decimal number (BCD) and converts it to a 16-bit integer. The result is stored in the low word of accumulator 1. The high word of accumulator 1 and accumulator 2 remain unchanged.


**BCD number in ACCU 1-L:** The permissible value range for the BCD number is from "-999" to "+999". Bit 0 to bit 11 are interpreted as the value and bit 15 as the sign (0 = positive, 1= negative) of the BCD number. Bit 12 to bit 14 are not used in the conversion. If a decimal (4 bits) of the BCD number is in the invalid range of 10 to 15, a BCDF error occurs during attempted conversion. In general, the CPU will go into STOP. However, you may design another error response by programming OB121 to handle this synchronous programming error.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L MW10	//Load the BCD number into ACCU 1-L.
BTI	//Convert from BCD to integer; store result in ACCU 1-L.
T MW20	//Transfer result (integer number) to MW20.

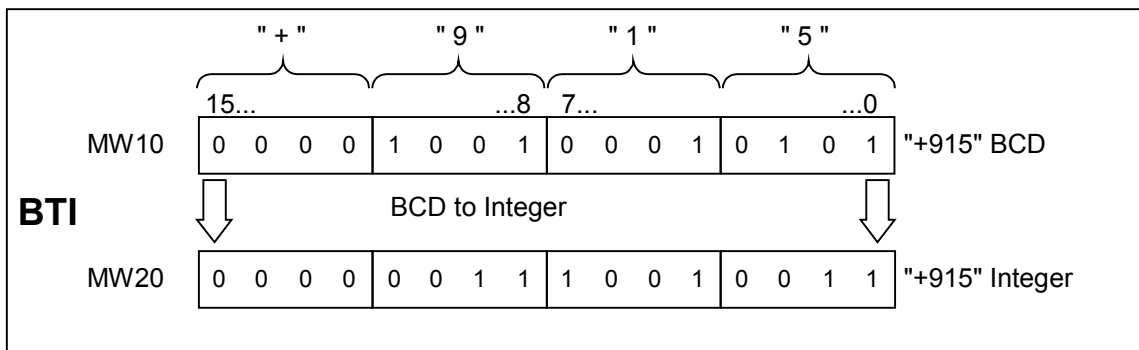

### 3.3 ITB Integer (16-Bit) to BCD

#### Format

ITB

#### Description

ITB (binary to decimal conversion of a 16-bit integer number) interprets the contents of ACCU 1-L as a 16-bit integer and converts it to a three-digit binary coded decimal number (BCD). The result is stored in the low word of accumulator 1. Bit 0 to bit 11 contain the value of the BCD number. Bit 12 to bit 15 are set to the state of the sign (0000 = positive, 1111= negative) of the BCD number. The high word of accumulator 1 and accumulator 2 remain unchanged.

The BCD number can be in the range of "-999" to "+999." If the number is out of the permissible range, then the status bits OV and OS are set to 1.


The instruction is executed without regard to, and without affecting, the RLO.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	X	X	-	-	-	-

#### Example

STL	Explanation
L MW10	//Load the integer number into ACCU 1-L.
ITB	//Convert from integer to BCD (16-bit); store result in ACCU 1-L.
T MW20	//Transfer result (BCD number) to MW20.

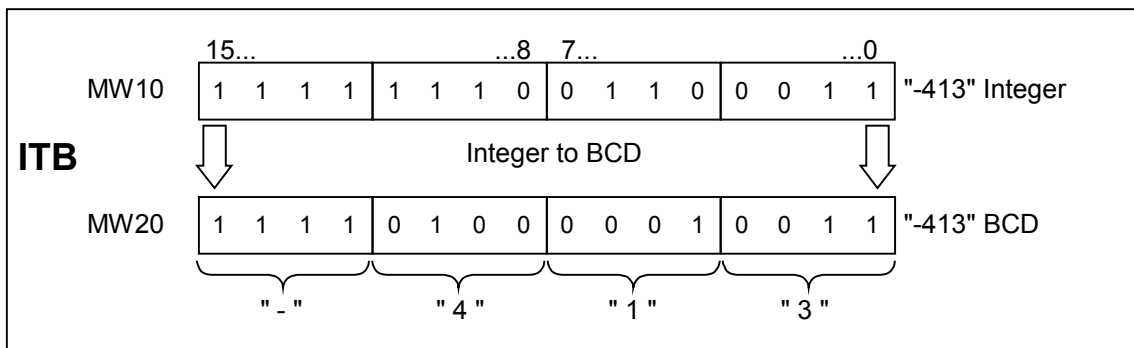

3.4 BT D BCD to Integer (32-Bit)

### 3.4 BT D BCD to Integer (32-Bit)

**Format**

BT D

**Description**

BT D (decimal to binary conversion of a 7-digit BCD number) interprets the contents of ACCU 1 as a seven digit binary coded decimal number (BCD) and converts it to a 32-bit double integer. The result is stored in accumulator 1. Accumulator 2 remains unchanged.

**BCD number in ACCU 1:** The permissible value range for the BCD number is from "-9,999,999" to "+9,999,999". Bit 0 to bit 27 are interpreted as the value and bit 31 as the sign (0 = positive, 1= negative) of the BCD number. Bit 28 to bit 30 are not used in the conversion.


If any decimal digit (a 4-bit tetrad of the BCD coding) is in the invalid range of 10 to 15, a BCDF error occurs during attempted conversion. In general, the CPU will go into STOP. However, you may design another error response by programming OB121 to handle this synchronous programming error.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L MD10	//Load the BCD number into ACCU 1.
BT D	//Convert from BCD to integer; store result in ACCU 1.
T MD20	//Transfer result (double integer number) to MD20.

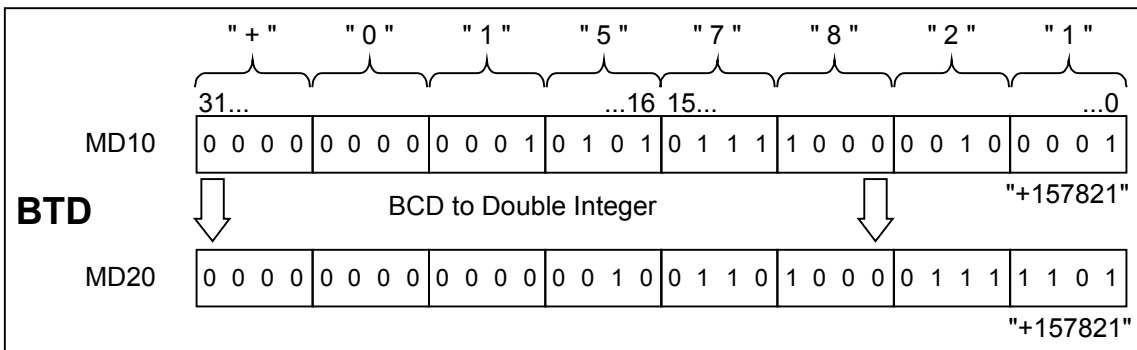

### 3.5 ITD Integer (16 Bit) to Double Integer (32-Bit)

#### Format

ITD

#### Description

ITD (conversion of a 16-bit integer number to a 32-bit integer number) interprets the contents of ACCU 1-L as a 16-bit integer and converts it to a 32-bit double integer. The result is stored in accumulator 1. Accumulator 2 remains unchanged.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

#### Example

STL	Explanation
L MW12	//Load the integer number into ACCU 1.
ITD	//Convert from integer (16-bit) to double integer (32-bit); store result in //ACCU 1.
T MD20	//Transfer result (double integer) to MD20.

#### Example: MW12 = "-10" (Integer, 16-bit)

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>ITD</b>	XXXX	XXXX	XXXX	XXXX	1111	1111	1111	0110
after execution of <b>ITD</b>	1111	1111	1111	1111	1111	1111	1111	0110
(X = 0 or 1, bits are not used for conversion)								

### 3.6 DTB Double Integer (32-Bit) to BCD

**Format**

DTB

**Description**

DTB (binary to decimal conversion of a 32-bit integer number) interprets the content of ACCU 1 as a 32-bit double integer and converts it to a seven-digit binary coded decimal number (BCD). The result is stored in accumulator 1. Bit 0 to bit 27 contain the value of the BCD number. Bit 28 to bit 31 are set to the state of the sign of the BCD number (0000 = positive, 1111 = negative). Accumulator 2 remains unchanged.


The BCD number can be in the range of "-9,999,999" to "+9,999,999". If the number is out of the permissible range, then the status bits OV and OS are set to 1.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	x	x	-	-	-	-

**Example**

STL	Explanation
L MD10	//Load the 32-bit integer into ACCU 1.
DTB	//Convert from integer (32-bit) to BCD, store result in ACCU 1.
T MD20	//Transfer result (BCD number) to MD20.

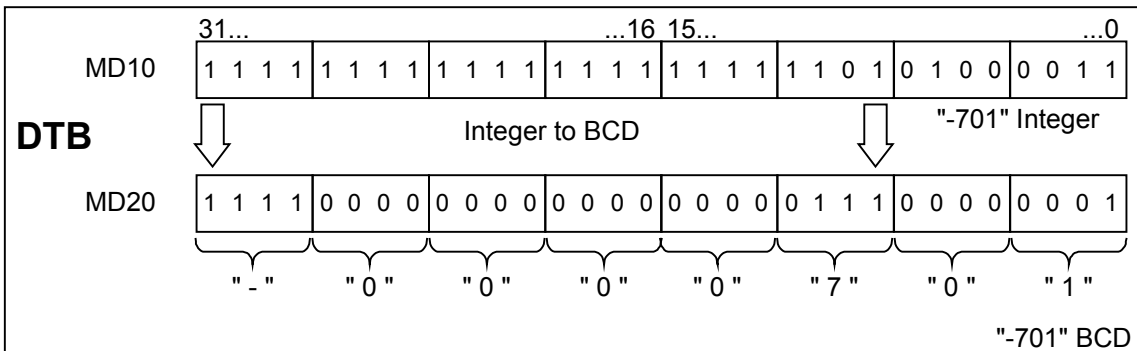



3.7 DTR Double Integer (32-Bit) to Floating-Point (32-Bit IEEE 754)

### 3.7 DTR Double Integer (32-Bit) to Floating-Point (32-Bit IEEE 754)

**Format**

DTR

**Description**


DTR (conversion of a 32-bit integer number to a 32-bit IEEE floating point number) interprets the content of ACCU 1 as a 32-bit double integer and converts it to a 32-bit IEEE floating point number. If necessary, the instruction rounds the result. (A 32-bit integer has a higher accuracy than a 32-bit floating point number). The result is stored in accumulator 1.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L MD10	//Load the 32-bit integer into ACCU 1.
DTR	//Convert from double integer to floating point (32-bit IEEE FP); store //result in ACCU 1.
T MD20	//Transfer result (BCD number) to MD20.

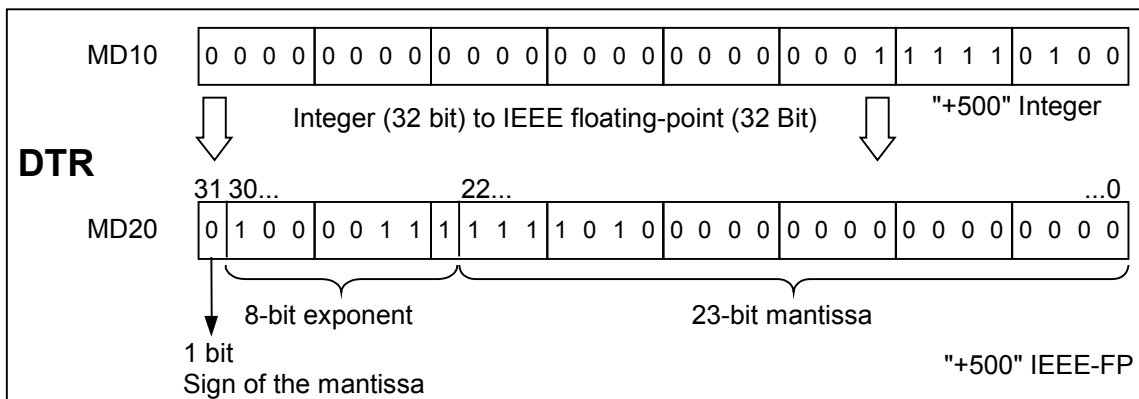

3.8 INVI Ones Complement Integer (16-Bit)

### 3.8 INVI Ones Complement Integer (16-Bit)

**Format**

INVI

**Description**

INVI (ones complement integer) forms the ones complement of the 16-bit value in ACCU 1-L. Forming the ones complement inverts the value bit by bit, that is, zeros replace ones and ones replace zeros. The result is stored in the low word of accumulator 1.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L IW8	//Load value into ACCU 1-L.
INVI	//Form ones complement 16-bit.
T MW10	//Transfer result to MW10.

Contents	ACCU1-L			
Bit	15 ...	..	..	... 0
before execution of <b>INVI</b>	0110	0011	1010	1110
after execution of <b>INVI</b>	1001	1100	0101	0001

### 3.9 *INVD* Ones Complement Double Integer (32-Bit)

#### Format

*INVD*

#### Description

*INVD* (ones complement double integer) forms the ones complement of the 32-bit value in ACCU 1. Forming the ones complement inverts the value bit by bit, that is, zeros replace ones, and ones replace zeros. The result is stored in accumulator 1.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

#### Example

STL	Explanation
L ID8	//Load value into ACCU 1.
<i>INVD</i>	//Form ones complement (32-bit).
T MD10	//Transfer result to MD10.

Contents	ACCU1-H				ACCU1-L			
	31 ...	..	..	... 16	15 ..	..	..	... 0
before execution of <i>INVD</i>	0110	1111	1000	1100	0110	0011	1010	1110
after execution of <i>INVD</i>	1001	0000	0111	0011	1001	1100	0101	0001

3.10 NEGI Twos Complement Integer (16-Bit)

### 3.10 NEGI Twos Complement Integer (16-Bit)

**Format**

NEGI

**Description**

NEGI (twos complement integer) forms the twos complement of the 16-bit value in ACCU 1-L. Forming the twos complement inverts the value bit by bit, that is, zeros replace ones and ones replace zeros; then a "1" is added. The result is stored in the low word of accumulator 1. The twos complement instruction is equivalent to multiplication by "-1." The status bits CC 1, CC 0, OS, and OV are set as a function of the result of the operation.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status word generation	CC 1	CC 0	OV	OS
Result = 0	0	0	0	-
-32768 <= Result <= -1	0	1	0	-
32767 >= Result >= 1	1	0	0	-
Result = 2768	0	1	1	1

**Example**

STL	Explanation
L IW8	//Load value into ACCU 1-L.
NEGI	//Form twos complement 16-bit.
T MW10	//Transfer result to MW10.

Contents	ACCU1-L			
Bit	15 ...	..	..	... 0
before execution of <b>NEGI</b>	0101	1101	0011	1000
after execution of <b>NEGI</b>	1010	0010	1100	1000

### 3.11 NEGD Twos Complement Double Integer (32-Bit)

#### Format

NEGD

#### Description

NEGD (twos complement double integer) forms the twos complement of the 32-bit value in ACCU 1. Forming the twos complement inverts the value bit by bit, that is, zeros replace ones and ones replace zeros; then a "1" is added. The result is stored in accumulator 1. The twos complement instruction is equivalent to a multiplication by "-1". The instruction is executed without regard to, and without affecting, the RLO. The status bits CC 1, CC 0, OS, and OV are set as a function of the result of the operation.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	X	X	X	X	-	-	-	-

Status word generation	CC 1	CC 0	OV	OS
Result = 0	0	0	0	-
-2.147.483.647 <= Result <= -1	0	1	0	-
2.147.483.647 >= Result >= 1	1	0	0	-
Result = -2 147 483 648	0	1	1	1

#### Example

STL	Explanation
L ID8	//Load value into ACCU 1.
NEGD	//Generate twos complement (32-bit).
T MD10	//Transfer result to MD10.

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>NEGD</b>	0101	1111	0110	0100	0101	1101	0011	1000
after execution of <b>NEGD</b>	1010	0000	1001	1011	1010	0010	1100	1000
	(X = 0 or 1, bits are not used for conversion)							

3.12 NEGR Negate Floating-Point Number (32-Bit, IEEE 754)

### 3.12 NEGR Negate Floating-Point Number (32-Bit, IEEE 754)

**Format**

NEGR

**Description of instruction**

NEGR (negate 32-bit IEEE floating-point number) negates the floating-point number (32-bit, IEEE 754) in ACCU 1. The instruction inverts the state of bit 31 in ACCU 1 (sign of the mantissa). The result is stored in accumulator 1.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L ID8	//Load value into ACCU 1 (example: ID 8 = 1.5E+02).
NEGR	//Negate floating-point number (32-bit, IEEE 754); stores the result in //ACCU 1.
T MD10	//Transfer result to MD10 (example: result = -1.5E+02).

### 3.13 CAW Change Byte Sequence in ACCU 1-L (16-Bit)

#### Format

CAW

#### Description

CAW reverses the sequence of bytes in ACCU 1-L. The result is stored in the low word of accumulator 1. The high word of accumulator 1 and accumulator 2 remain unchanged.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

#### Example

STL	Explanation
L MW10	//Load the value of MW10 into ACCU 1.
CAW	//Reverse the sequence of bytes in ACCU 1-L.
T MW20	//Transfer the result to MW20.

Contents	ACCU1-H-H	ACCU1-H-L	ACCU1-L-H	ACCU1-L-L
before execution of CAW	value A	value B	value C	value D
after execution of CAW	value A	value B	value D	value C

3.14 CAD Change Byte Sequence in ACCU 1 (32-Bit)

### 3.14 CAD Change Byte Sequence in ACCU 1 (32-Bit)

**Format**

CAD

**Description**

CAD reverses the sequence of bytes in ACCU 1. The result is stored in accumulator 1. Accumulator 2 remains unchanged.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L MD10	//Load the value of MD10 into ACCU 1.
CAD	//Reverse the sequence of bytes in ACCU 1.
T MD20	//Transfer the results to MD20.

Contents	ACCU1-H-H	ACCU1-H-L	ACCU1-L-H	ACCU1-L-L
before execution of CAD	value A	value B	value C	value D
after execution of CAD	value D	value C	value B	value A



## 3.15 RND Round

### Format

RND

### Description

RND (conversion of a 32-bit IEEE floating-point number to 32-bit integer) interprets the contents of ACCU 1 as a 32-bit IEEE floating-point number (32-bit, IEEE 754). The instruction converts the 32-bit IEEE floating-point number to a 32-bit integer (double integer) and rounds the result to the nearest whole number. If the fractional part of the converted number is midway between an even and an odd result, the instruction chooses the even result. If the number is out of the permissible range, then the status bits OV and OS are set to 1. The result is stored in accumulator 1.

Conversion is not performed and an overflow indicated in the event of a fault (utilization of a NaN or a floating-point number that cannot be represented as a 32-bit integer number).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	X	X	-	-	-	-

### Example

STL	Explanation
L MD10	//Load the floating-point number into ACCU 1-L.
RND	//Convert the floating-point number (32-bit, IEEE 754) into an integer //(32-bit) and round off the result.
T MD20	//Transfer result (double integer number) to MD20.

Value before conversion		Value after conversion
MD10 = "100.5"	=> RND =>	MD20 = "+100"
MD10 = "-100.5"	=> RND =>	MD20 = "-100"

## 3.16 TRUNC Truncate

### Format

TRUNC

### Description

TRUNC (conversion of a 32-bit IEEE floating-point number to 32-bit integer) interprets the contents of ACCU 1 as a 32-bit IEEE floating-point number. The instruction converts the 32-bit IEEE floating-point number to a 32-bit integer (double integer). The result is the whole number part of the floating-point number to be converted (IEEE rounding mode "round to zero"). If the number is out of the permissible range, then the status bits OV and OS are set to 1. The result is stored in accumulator 1.

Conversion is not performed and an overflow indicated in the event of a fault (utilization of a NaN or a floating-point number that cannot be represented as a 32-bit integer number).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	x	x	-	-	-	-

### Example

STL	Explanation
L MD10	//Load the floating-point number into ACCU 1-L.
TRUN	//Convert the floating-point number (32-bit, IEEE 754) to an integer (32-bit)
C	//and round result. Store the result in ACCU 1.
T MD20	//Transfer result (double integer number) to MD20.

Value before conversion		Value after conversion
MD10 = "100.5"	=> TRUNC =>	MD20 = "+100"
MD10 = "-100.5"	=> TRUNC =>	MD20 = "-100"

## 3.17 RND+ Round to Upper Double Integer

### Format

RND+

### Description

RND+ (conversion of a 32-bit IEEE floating-point number to 32-bit integer) interprets the contents of ACCU 1 as a 32-bit IEEE floating-point number. The instruction converts the 32-bit IEEE floating-point number to a 32-bit integer (double integer) and rounds the result to the smallest whole number greater than or equal to the floating-point number that is converted (IEEE rounding mode "round to +infinity"). If the number is out of the permissible range, then the status bits OV and OS are set to 1. The result is stored in accumulator 1.

Conversion is not performed and an overflow is indicated in the event of a fault (utilization of a NaN or a floating-point number that cannot be represented as a 32-bit integer number.)

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	X	X	-	-	-	-

### Example

STL	Explanation
L MD10	//Load the floating-point number (32-bit, IEEE 754) into ACCU 1-L.
RND+	//Convert the floating-point number (32-bit, IEEE 754) to an integer (32-bit) //and round result. Store output in ACCU 1.
T MD20	//Transfer result (double integer number) to MD20.

Value before conversion		Value after conversion
MD10 = "100.5"	=> RND+ =>	MD20 = "+101"
MD10 = "-100.5"	=> RND+ =>	MD20 = "-100"

## 3.18 RND- Round to Lower Double Integer

## 3.18 RND- Round to Lower Double Integer

## Format

RND-

## Description

RND- (conversion of a 32-bit IEEE floating-point number to 32-bit integer) interprets the contents of ACCU 1 as 32-bit IEEE floating-point number. The instruction converts the 32-bit IEEE floating-point number to a 32-bit integer (double integer) and rounds the result to the largest whole number less than or equal to the floating-point number that is converted (IEEE rounding mode "round to -infinity"). If the number is out of the permissible range, then the status bits OV and OS are set to 1. The result is stored in accumulator 1.

Conversion is not performed and an overflow indicated in the event of a fault (utilization of a NaN or a floating-point number that cannot be represented as a 32-bit integer number.)

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	x	x	-	-	-	-

## Example

STL	Explanation
L MD10	//Load the floating-point number into ACCU 1-L.
RND-	//Convert the floating-point number (32-bit, IEEE 754) to an integer (32-bit) and round result. Store result in ACCU 1.
T MD20	//Transfer result (double integer number) to MD20.

Value before conversion		Value after conversion
MD10 = "100.5"	=> RND- =>	MD20 = "+100"
MD10 = "-100.5"	=> RND- =>	MD20 = "-100"

# 4 Counter Instructions

## 4.1 Overview of Counter Instructions

### Description

A counter is a function element of the STEP 7 programming language that counts. Counters have an area reserved for them in the memory of your CPU. This memory area reserves one 16-bit word for each counter. The statement list instruction set supports 256 counters. To find out how many counters are available in your CPU, please refer to the CPU technical data.

Counter instructions are the only functions with access to the memory area.

You can vary the count value within this range by using the following Counter instructions:

- FR Enable Counter (Free)
- L Load Current Counter Value into ACCU 1
- LC Load Current Counter Value into ACCU 1 as BCD
- R Reset Counter
- S Set Counter Preset Value
- CU Counter Up
- CD Counter Down

## 4.2 FR Enable Counter (Free)

### Format

FR &lt;counter&gt;

Address	Data type	Memory area	Description
<counter>	COUNTER	C	Counter, range depends on CPU.

### Description

When RLO transitions from "0" to "1", FR <counter> clears the edge-detecting flag that is used for setting and selecting upwards or downwards count of the addressed counter. Enable counter is not required to set a counter or for normal counting. This means that in spite of a constant RLO of 1 for the Set Counter Preset Value, Counter Up, or Counter Down, these instructions are not executed again after the enable.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	-	-	0

### Example

STL	Explanation
A I 2.0	//Check signal state at input I 2.0.
FR C3	//Enable counter C3 when RLO transitions from 0 to 1.

## 4.3 L Load Current Counter Value into ACCU 1

### Format

L <counter>

Address	Data type	Memory area	Description
<counter>	COUNTER	C	Counter, range depends on CPU.

### Description


L <counter> loads the current count of the addressed counter as an integer into ACCU 1-L after the contents of ACCU 1 have been saved into ACCU 2.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L C3	//Load ACCU 1-L with the count value of counter C3 in binary format.

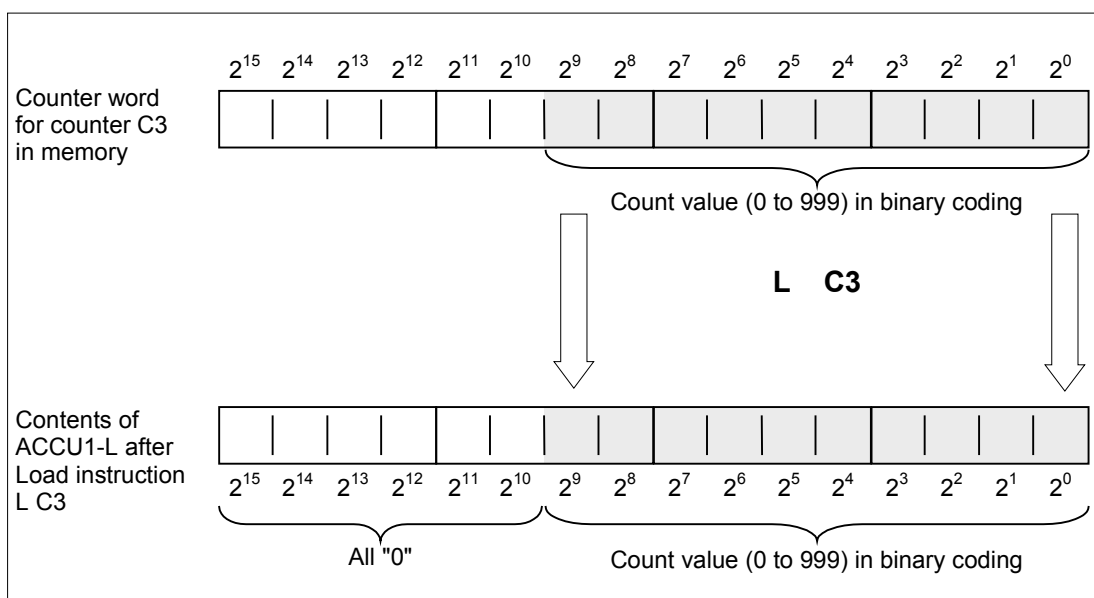

## 4.4 LC Load Current Counter Value into ACCU 1 as BCD

## 4.4 LC Load Current Counter Value into ACCU 1 as BCD

## Format

LC &lt;counter&gt;

Address	Data type	Memory area	Description
<counter>	COUNTER	C	Counter, range depends on CPU.

## Description

LC <counter> loads the count of the addressed counter as a BCD number into ACCU 1 after the old contents of ACCU 1 have been saved into ACCU 2.

## Status word


	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-



## 4.4 LC Load Current Counter Value into ACCU 1 as BCD

## Example

STL	Explanation
LC C3	//Load ACCU 1-L with the count value of counter C3 in binary coded decimal format.

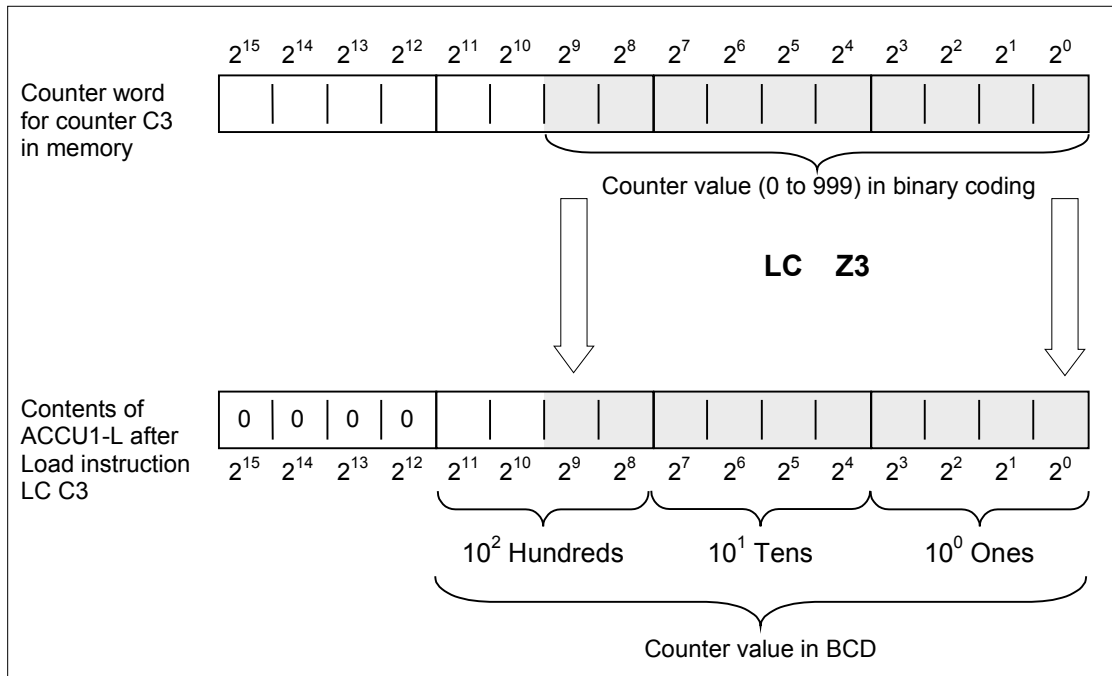

## 4.5 R Reset Counter

### Format

R <counter>

Address	Data type	Memory area	Description
<Counter>	COUNTER	C	Counter to be preset, range depends on CPU.

### Description

R <counter> loads the addressed counter with "0" if RLO=1.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	-	-	0

### Example

STL	Explanation
A I 2.3	//Check signal state at input I 2.3.
R C3	//Reset counter C3 to a value of 0 if RLO transitions from 0 to 1.

## 4.6 S Set Counter Preset Value

### Format

S <counter>

Address	Data type	Memory area	Description
<Counter>	COUNTER	C	Counter to be preset, range depends on CPU.

### Description

S <counter> loads the count from ACCU 1-L into the addressed counter when the RLO transitions from "0" to "1". The count in ACCU 1 must be a BCD number between "0" and "999".

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	-	-	0

### Example

STL	Explanation
A I 2.3	//Check signal state at input I 2.3.
L C#3	//Load count value 3 into ACCU 1-L.
S C1	//Set counter C1 to count value if RLO transitions from 0 to 1.

## 4.7 CU Counter Up

### Format

CU <counter>

Address	Data type	Memory area	Description
<counter>	COUNTER	C	Counter, range depends on CPU.

### Description

CU <counter> increments the count of the addressed counter by 1 when RLO transitions from "0" to "1" and the count is less than "999". When the count reaches its upper limit of "999", incrementing stops. Additional transitions of RLO have no effect and overflow OV bit is not set.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	-	-	0

### Example

STL	Explanation
A I 2.1	//If there is a positive edge change at input I 2.1.
CU C3	//Counter C3 is incremented by 1 when RL0 transitions from 0 to 1.

## 4.8 CD Counter Down

### Format

CD <counter>

Address	Data type	Memory area	Description
<counter>	COUNTER	C	Counter, range depends on CPU.

### Description

CD <counter> decrements the count of the addressed counter by 1 when RLO transitions from "0" to "1" and the count is greater than 0. When the count reaches its lower limit of "0", decrementing stops. Additional transitions of RLO have no effect as the counter will not count with negative values.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	-	-	0

### Example

STL	Explanation
L C#14	//Counter preset value.
A I 0.1	//Preset counter after detection of rising edge of I 0.1.
S C1	//Load counter 1 preset if enabled.
A I 0.0	//One count down per rising edge of I 0.0.
CD C1	//Decrement counter C1 by 1 when RLO transitions from 0 to 1 depending on //input I 0.0.
AN C1	//Zero detection using the C1 bit.
= Q 0.0	//Q 0.0 = 1 if counter 1 value is zero.

4.8 CD *Counter Down*

# 5 Data Block Instructions

## 5.1 Overview of Data Block Instructions

### Description

You can use the Open a Data Block (OPN) instruction to open a data block as a shared data block or as an instance data block. The program itself can accommodate one open shared data block and one open instance data block at the same time.

The following Data Block instructions are available:

- OPN      Open a Data Block
- CDB      Exchange Shared DB and Instance DB
- L DBLG    Load Length of Shared DB in ACCU 1
- L DBNO    Load Number of Shared DB in ACCU 1
- L DILG    Load Length of Instance DB in ACCU 1
- L DINO    Load Number of Instance DB in ACCU 1

## 5.2 OPN Open a Data Block

### Format

**OPN <data block>**

Address	Data block type	Source address
<data block>	DB, DI	1 to 65535

### Description of instruction

**OPN <data block>** opens a data block as a shared data block or as an instance data block. One shared data block and one instance data block can be open at the same time.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
OPN DB10	//Open data block DB10 as a shared data block.
L DBW35	//Load data word 35 of the opened data block into ACCU 1-L.
T MW22	//Transfer the content of ACCU 1-L into MW22.
OPN DI20	//Open data block DB20 as an instance data block.
L DIB12	//Load data byte 12 of the opened instance data block into ACCU 1-L.
T DBB37	//Transfer the content of ACCU 1-L to data byte 37 of the opened shared //data block.



## 5.3 CDB Exchange Shared DB and Instance DB

### Format

CDB

### Description of instruction

**CDB** is used to exchange the shared data block and instance data block. The instruction swaps the data block registers. A shared data block becomes an instance data block and vice-versa.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 5.4 L DBLG Load Length of Shared DB in ACCU 1

### Format

L DBLG

### Description of instruction

**L DBLG** (load length of shared data block) loads the length of the shared data block into ACCU 1 after the contents of ACCU 1 have been saved into ACCU 2.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
OPEN DB10	//Open data block DB10 as shared data block.
L DBLG	//Load length of shared data block (length of DB10).
L MD10	//Value for comparison if data block is long enough.
<D	

## 5.5 L DBNO Load Number of Shared DB in ACCU 1

```
| JC      ERRO      //Jump to ERRO jump label if length is less than value in MD10.
```

## 5.5 L DBNO Load Number of Shared DB in ACCU 1

## Format

L DBNO

## Description of instruction

**L DBNO** (load number of shared data block) loads the number of the shared open data block into ACCU 1-L after the content of ACCU 1 has been saved into ACCU 2.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 5.6 L DILG Load Length of Instance DB in ACCU 1

## Format

L DILG

## Description of instruction

**L DILG** (load length of instance data block) loads the length of the instance data block into ACCU 1-L after the content of ACCU 1 has been saved into ACCU 2.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## Example

STL	Explanation
-----	-------------

## 5.7 L DINO Load Number of Instance DB in ACCU 1

```

OPN  D120    //Open data block DB20 as an instance data block.
L    DILG    //Load length of instance data block (length of DB20).
L    MW10    //Value for comparison if data block is long enough.
<1
JC           //Jump to ERRO jump label if length is less than value in MW10.

```

## 5.7 L DINO Load Number of Instance DB in ACCU 1

### Format

L DINO

### Description of instruction

**L DINO** (load number of instance data block) loads the number of the opened instance data block into ACCU 1 after the content of ACCU 1 has been saved into ACCU 2.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

*5.7 L DINO Load Number of Instance DB in ACCU 1*

# 6 Logic Control Instructions

## 6.1 Overview of Logic Control Instructions

### Description

You can use the Jump instructions to control the flow of logic, enabling your program to interrupt its linear flow to resume scanning at a different point. You can use the LOOP instruction to call a program segment multiple times.

The address of a Jump or Loop instruction is a label. A jump label may be as many as four characters, and the first character must be a letter. Jumps labels are followed with a mandatory colon ":" and must precede the program statement in a line.

---

#### Note

Please note for S7– 300 CPU programs that the jump destination always (not for 318– 2) forms the **beginning** of a Boolean logic string in the case of jump instructions. The jump destination must not be included in the logic string.

---

You can use the following jump instructions to interrupt the normal flow of your program unconditionally:

- JU Jump Unconditional
- JL Jump to Labels

The following jump instructions interrupt the flow of logic in your program based on the result of logic operation (RLO) produced by the previous instruction statement:

- JC Jump if RLO = 1
- JCN Jump if RLO = 0
- JCB Jump if RLO = 1 with BR
- JNB Jump if RLO = 0 with BR

The following jump instructions interrupt the flow of logic in your program based on the signal state of a bit in the status word:

- JBI Jump if BR = 1
- JNBI Jump if BR = 0
- JO Jump if OV = 1
- JOS Jump if OS = 1

*6.1 Overview of Logic Control Instructions*

The following jump instructions interrupt the flow of logic in your program based on the result of a calculation:

- JZ    Jump if Zero
- JN    Jump if Not Zero
- JP    Jump if Plus
- JM    Jump if Minus
- JPZ    Jump if Plus or Zero
- JMZ    Jump if Minus or Zero
- JUO    Jump if Unordered

## 6.2 JU Jump Unconditional

### Format

**JU** <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

**JU** <jump label> interrupts the linear program scan and jumps to a jump destination, regardless of the status word contents. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation	
A	I 1.0	
A	I 1.2	
JC	DELE	//Jump if RLO=1 to jump label DELE.
L	MB10	
INC	1	
T	MB10	
JU	FORW	//Jump unconditionally to jump label FORW.
DELE:	L 0	
	T MB10	
FORW:	A I 2.1	//Program scan resumes here after jump to jump label FORW.

## 6.3 JL Jump to Labels

### Format

**JL** <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

**JL** <jump label> (jump via jump to list) enables multiple jumps to be programmed. The jump target list, with a maximum of 255 entries, begins on the next line after the **JL** instruction and ends on the line before the jump label referenced in the JL address. Each jump destination consists of one **JU** instruction. The number of jump destinations (0 to 255) is taken from ACCU 1-L-L.

The **JL** instruction jumps to one of the **JU** instructions as long as the contents of the ACCU is smaller than the number of jump destinations between the **JL** instruction and the jump label. The first **JU** instruction is jumped to if ACCU 1-L-L=0. The second **JU** instruction is jumped to if ACCU 1-L-L=1, etc. The **JL** instruction jumps to the first instruction after the last **JU** instruction in the destination list if the number of jump destinations is too large.

The jump destination list must consist of **JU** instructions which precede the jump label referenced in the address of the JL instruction. Any other instruction within the jump list is illegal.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-



**Example**

STL		Explanation
	L	MB0 //Load jump destination number into ACCU 1-L-L.
	JL	LSTX //Jump destination if ACCU 1-L-L > 3.
	JU	SEG0 //Jump destination if ACCU 1-L-L = 0.
	JU	SEG1 //Jump destination if ACCU 1-L-L = 1.
	JU	COMM //Jump destination if ACCU 1-L-L = 2.
	JU	SEG3 //Jump destination if ACCU 1-L-L = 3.
LSTX:	JU	COMM
SEG0:	*	//Permitted instruction
	*	
	JU	COMM
SEG1:	*	//Permitted instruction
	*	
	JU	COMM
SEG3:	*	//Permitted instruction.
	*	
	JU	COMM
COMM:	*	
	*	

## 6.4 JC Jump if RLO = 1

### Format

JC <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If the result of logic operation is 1, **JC <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

If the result of logic operation is 0, the jump is not executed. The RLO is set to 1, and the program scan continues with the next statement.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	1	0

### Example

STL	Explanation
A I 1.0	
A I 1.2	
JC JOVR	//Jump if RLO=1 to jump label JOVR.
L IW8	//Program scan continues here if jump is not executed.
T MW22	
JOVR: A I 2.1	//Program scan resumes here after jump to jump label JOVR.

## 6.5 JCN Jump if RLO = 0

### Format

JCN <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If the result of logic operation is 0, **JCN <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

If the result of logic operation is 1, the jump is not executed. The program scan continues with the next statement.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	1	0

### Example

STL	Explanation
A I 1.0	
A I 1.2	
JCN JOVR	//Jump if RLO = 0 to jump label JOVR.
L IW8	//Program scan continues here if jump is not executed.
T MW22	
JOVR: A I 2.1	//Program scan resumes here after jump to jump label JOVR.

## 6.6 JCB Jump if RLO = 1 with BR

### Format

**JCB <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If the result of logic operation is 1, **JCB <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

If the result of logic operation is 0, the jump is not executed. The RLO is set to 1, and the program scan continues with the next statement.

Independent of the RLO, the RLO is copied into the BR for the **JCB <jump label>** instruction.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	x	-	-	-	-	0	1	1	0

### Example

STL	Explanation
A I 1.0	
A I 1.2	
JCB JOVR	//Jump if RLO = 1 to jump label JOVR. Copy the contents of the RLO //bit into the BR bit.
L IW8	//Program scan continues here if jump is not executed.
T MW22	
JOVR: A I 2.1	//Program scan resumes here after jump to jump label JOVR.

## 6.7 JNB Jump if RLO = 0 with BR

### Format

**JNB <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If the result of logic operation is 0, **JNB <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

If the result of logic operation is 1, the jump is not executed. The RLO is set to 1 and the program scan continues with the next statement.

Independent of the RLO, the RLO is copied into the BR when there is a **JNB <jump label>** instruction.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	x	-	-	-	-	0	1	1	0

### Example

STL	Explanation
A I 1.0	
A I 1.2	
JNB JOVR	//Jump if RLO = 0 to jump label JOVR. Copy RLO bit contents into //the BR bit.
L IW8	//Program scan continues here if jump is not executed.
T MW22	
JOVR: A I 2.1	//Program scan resumes here after jump to jump label JOVR.

## 6.8 JBI Jump if BR = 1

### Format

**JBI <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bit BR is 1, **JBI <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. A jump label may be as many as four characters, and the first character must be a letter. Jump labels are followed with a mandatory colon ":" and must precede the program statement in a line. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

## 6.9 JNBI Jump if BR = 0

### Format

**JNBI <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bit BR is 0, **JNBI <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

## 6.10 JO Jump if OV = 1

### Format

JO <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bit OV is 1, **JO <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements). In a combined math instruction, check for overflow after each separate math instruction to ensure that each intermediate result is within the permissible range, or use instruction **JOS**.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L MW10	
L 3	
*I	//Multiply contents of MW10 by "3".
JO OVER	//Jump if result exceeds maximum range (OV=1).
T MW10	//Program scan continues here if jump is not executed.
A M 4.0	
R M 4.0	
JU NEXT	
OVER: AN M 4.0	//Program scan resumes here after jump to jump label OVER.
S M 4.0	
NEXT: NOP	//Program scan resumes here after jump to jump label NEXT.
0	



## 6.11 JOS Jump if OS = 1

### Format

**JOS <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bit OS is 1, **JOS <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	-	-	-	-

6.11 JOS Jump if OS = 1

**Example**

STL	Explanation	
L	IW10	
L	MW12	
*I		
L	DBW25	
+I		
L	MW14	
-I		
JOS	OVER	//Jump if overflow in one of the three instructions during //calculation OS=1. (See Note).
T	MW16	//Program scan continues here if jump is not executed.
A	M 4.0	
R	M 4.0	
JU	NEXT	
OVER:	AN	M 4.0 //Program scan resumes here after jump to jump label OVER.
	S	M 4.0
NEXT:	NOP 0	//Program scan resumes here after jump to jump label NEXT.

**Note**

In this case do not use the **JO** instruction. The **JO** instruction would only check the previous -I instruction if an overflow occurred.

## 6.12 JZ Jump if Zero

### Format

**JZ** <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bits CC 1 = 0 and CC 0 = 0, **JZ <jump label>** (jump if result = 0) interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L MW10	
SRW 1	
JZ ZERO	//Jump to jump label ZERO if bit that has been shifted out = 0.
L MW2	//Program scan continues here if jump is not executed.
INC 1	
T MW2	
JU NEXT	
ZERO: L MW4	//Program scan resumes here after jump to jump label ZERO.
INC 1	
T MW4	
NEXT: NOP 0	//Program scan resumes here after jump to jump label NEXT.

## 6.13 JN Jump if Not Zero

### Format

**JN <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If the result indicated by the status bits CC 1 and CC 0 is greater or less than zero (CC 1=0/CC 0=1 or CC 1=1/CC 0=0), **JN <jump label>** (jump if result  $\neq$  0) interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation	
L	IW8	
L	MW12	
XOW		
JN	NOZE	//Jump if the contents of ACCU 1-L are not equal to zero.
AN	M 4.0	//Program scan continues here if jump is not executed.
S	M 4.0	
JU	NEXT	
NOZE:	AN	M 4.1 //Program scan resumes here after jump to jump label NOZE.
	S	M 4.1
NEXT:	NOP 0	//Program scan resumes here after jump to jump label NEXT.

## 6.14 JP Jump if Plus

### Format

JP <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bits CC 1 = 1 and CC 0 = 0, **JP <jump label>** (jump if result < 0) interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation	
L	IW8	
L	MW12	
-I		//Subtract contents of MW12 from contents of IW8.
JP	POS	//Jump if result >0 (that is, ACCU 1 > 0).
AN	M 4.0	//Program scan continues here if jump is not executed.
S	M 4.0	
JU	NEXT	
POS:	AN	M 4.1 //Program scan resumes here after jump to jump label POS.
	S	M 4.1
NEXT:	NOP 0	//Program scan resumes here after jump to jump label NEXT.

## 6.15 JM Jump if Minus

### Format

**JM** <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bits CC 1 = 0 and CC 0 = 1, **JM <jump label>** (jump if result < 0) interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L IW8	
L MW12	
-I	//Subtract contents of MW12 from contents of IW8.
JM NEG	//Jump if result < 0 (that is, contents of ACCU 1 < 0).
AN M	//Program scan continues here if jump is not executed.
4.0	
S M	
4.0	
JU NEXT	
NEG: AN M	//Program scan resumes here after jump to jump label NEG.
4.1	
S M	
4.1	
NEXT: NOP 0	//Program scan resumes here after jump to jump label NEXT.

## 6.16 JPZ Jump if Plus or Zero

### Format

JPZ <jump label>

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If the result indicated by the status bits CC 1 and CC 0 is greater than or equal to zero (CC 1=0/CC 0=0 or CC 1=1/CC 0=0), **JPZ <jump label>** (jump if result  $\geq 0$ ) interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	

### Example

STL	Explanation
L IW8	
L MW12	
-I	//Subtract contents of MW12 from contents of IW8.
JPZ REG0	//Jump if result $\geq 0$ (that is, contents of ACCU 1 $\geq 0$ ).
AN M 4.0	//Program scan continues here if jump is not executed.
S M 4.0	
JU NEXT	
REG0: AN M 4.1	//Program scan resumes here after jump to jump label REG0.
S M 4.1	
NEXT: NOP 0	//Program scan resumes here after jump to jump label NEXT.

## 6.17 JMZ Jump if Minus or Zero

### Format

**JMZ <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If the result indicated by the status bits CC 1 and CC 0 is less than or equal to zero (CC 1=0/CC 0=0 or CC 1=0/CC 0=1), **JMZ <jump label>** (jump if result  $\leq 0$ ) interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L IW8	
L MW12	
-I	//Subtract contents of MW12 from contents of IW8.
JMZ RGE0	//Jump if result $\leq 0$ (that is, contents of ACCU 1 $\leq 0$ ).
AN M 4.0	//Program scan continues here if jump is not executed.
S M 4.0	
JU NEXT	
RGE0: AN M 4.1	//Program scan resumes here after jump to jump label RGE0.
S M 4.1	
NEXT: NOP 0	//Program scan resumes here after jump to jump label NEXT.



## 6.18 JUO Jump if Unordered

### Format

**JUO <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

If status bits CC 1 = 1 and CC 0 = 1, **JUO <jump label>** interrupts the linear program scan and jumps to a jump destination. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

Status bits CC 1 = 1 and CC 0 = 1 when

- A division by zero occurred
- An illegal instruction was used
- The result of a floating-point comparison is "unordered," that is, when a invalid format was used.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL		Explanation
	L MD10	
	L ID2	
	/D	//Divide contents of MD10 by contents of ID2.
	JUO ERRO	//Jump if division by zero (that is, ID2 = 0).
	T MD14	//Program scan continues here if jump is not executed.
	A M 4.0	
	R M 4.0	
	JU NEXT	
ERRO:	AN M 4.0	//Program scan resumes here after jump to jump label ERRO.
	S M 4.0	
NEXT:	NOP 0	//Program scan resumes here after jump to jump label NEXT.

## 6.19 LOOP Loop

### Format

**LOOP <jump label>**

Address	Description
<jump label >	Symbolic name of jump destination.

### Description

**LOOP <jump label>** (decrement ACCU 1-L and jump if ACCU 1-L  $\neq$  0) simplifies loop programming. The loop counter is accommodated in ACCU 1-L. The instruction jumps to the specified jump destination. The jump is executed as long as the content of ACCU 1-L is not equal to 0. The linear program scan resumes at the jump destination. The jump destination is specified by a jump label. Both forward and backward jumps are possible. Jumps may be executed only within a block, that is, the jump instruction and the jump destination must lie within one and the same block. The jump destination must be unique within this block. The maximum jump distance is -32768 or +32767 words of program code. The actual maximum number of statements you can jump over depends on the mix of the statements used in your program (one-, two-, or three word statements).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example for calculating the factor of 5

STL	Explanation
L L#1	//Load the integer constant (32 bit) into ACCU 1.
T MD20	//Transfer the contents from ACCU 1 into MD20 (initialization).
L 5	//Load number of loop cycles into ACCU 1-L.
NEXT: T MW10	//Jump label = loop start / transfer ACCU 1-L to loop counter.
L MD20	
* D	//Multiply current contents of MD20 by the current contents //of MB10.
T MD20	//Transfer the multiplication result to MD20.
L MW10	//Load contents of loop counter into ACCU 1.
LOOP NEXT	//Decrement the contents of ACCU 1 and jump to the NEXT jump label //if ACCU 1-L > 0.
L MW24	//Program scan resumes here after loop is finished.
L 200	
>I	

6.19 LOOP Loop

# 7 Integer Math Instructions

## 7.1 Overview of Integer Math Instructions

### Description

The math operations combine the contents of accumulators 1 and 2. In the case of CPUs with two accumulators, the contents of accumulator 2 remains unchanged.

In the case of CPUs with four accumulators, the contents of accumulator 3 is then copied into accumulator 2 and the contents of accumulator 4 into accumulator 3. The old contents of accumulator 4 remains unchanged.

Using integer math, you can carry out the following operations with **two integer numbers** (16 and 32 bits):

- +I Add ACCU 1 and ACCU 2 as Integer (16-Bit)
- -I Subtract ACCU 1 from ACCU 2 as Integer (16-Bit)
- \*I Multiply ACCU 1 and ACCU 2 as Integer (16-Bit)
- /I Divide ACCU 2 by ACCU 1 as Integer (16-Bit)
- + Add Integer Constant (16, 32 Bit)
- +D Add ACCU 1 and ACCU 2 as Double Integer (32-Bit)
- -D Subtract ACCU 1 from ACCU 2 as Double Integer (32-Bit)
- \*D Multiply ACCU 1 and ACCU 2 as Double Integer (32-Bit)
- /D Divide ACCU 2 by ACCU 1 as Double Integer (32-Bit)
- MOD Division Remainder Double Integer (32-Bit)

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

## 7.2 Evaluating the Bits of the Status Word with Integer Math Instructions

### Description

The integer math instructions influence the following bits in the Status word: CC1 and CC0, OV and OS.

The following tables show the signal state of the bits in the status word for the results of instructions with Integers (16 and 32 bits):

Valid Range for the Result	CC 1	CC 0	OV	OS
0 (zero)	0	0	0	*
16 bits: $-32\,768 \leq \text{result} < 0$ (negative number) 32 bits: $-2\,147\,483\,648 \leq \text{result} < 0$ (negative number)	0	1	0	*
16 bits: $32\,767 \geq \text{result} > 0$ (positive number) 32 bits: $2\,147\,483\,647 \geq \text{result} > 0$ (positive number)	1	0	0	*

\* The OS bit is not affected by the result of the instruction.

Invalid Range for the Result	A1	A0	OV	OS
Underflow (addition) 16 bits: result = -65536 32 bits: result = -4 294 967 296	0	0	1	1
Underflow (multiplication) 16 bits: result < -32 768 (negative number) 32 bits: result < -2 147 483 648 (negative number)	0	1	1	1
Overflow (addition, subtraction) 16 bits: result > 32 767 (positive number) 32 bits: result > 2 147 483 647 (positive number)	0	1	1	1
Overflow (multiplication, division) 16 bits: result > 32 767 (positive number) 32 bits: result > 2 147 483 647 (positive number)	1	0	1	1
Underflow (addition, subtraction) 16 bits: result < -32. 768 (negative number) 32 bits: result < -2 147 483 648 (negative number)	1	0	1	1
Division by 0	1	1	1	1

Operation	A1	A0	OV	OS
+D: result = -4 294 967 296	0	0	1	1
/D or MOD: division by 0	1	1	1	1

## 7.3 +I Add ACCU 1 and ACCU 2 as Integer (16-Bit)

### Format

+I

### Description

**+I** (add 16-bit integer numbers) adds the contents of ACCU 1-L to the contents of ACCU 2-L and stores the result in ACCU 1-L. The contents of ACCU 1-L and ACCU 2-L are interpreted as 16-bit integer numbers. The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction. The instruction produces a 16-bit integer number instead of an 32-bit integer number in the event of an overflow/underflow.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Sum = 0	0	0	0	-
-32768 <= Sum < 0	0	1	0	-
32767 >= Sum > 0	1	0	0	-
Sum = -65536	0	0	1	1
65534 >= Sum > 32767	0	1	1	1
-65535 <= Sum < -32768	1	0	1	1

### Example

STL	Explanation
L IW10	//Load the value of IW10 into ACCU 1-L.
L MW14	//Load the contents of ACCU 1-L into ACCU 2-L. Load the value of MW14 //into ACCU 1-L.
+I	//Add ACCU 2-L and ACCU 1-L; store the result in ACCU 1-L.
T DB1.DBW25	//The contents of ACCU 1-L (result) are transferred to DBW25 of DB1.

## 7.4 -I Subtract ACCU 1 from ACCU 2 as Integer (16-Bit)

### Format

-I

### Description

-I (subtract 16-bit integer numbers) subtracts the contents of ACCU 1-L from the contents of ACCU 2-L and stores the result in ACCU 1-L. The contents of ACCU 1-L and ACCU 2-L are interpreted as 16-bit integer numbers. The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction. The instruction produces a 16-bit integer number instead of a 32-bit integer number in the event of an overflow/underflow.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Difference = 0	0	0	0	-
-32768 <= Difference < 0	0	1	0	-
32767 >= Difference > 0	1	0	0	-
65535 >= Difference > 32767	0	1	1	1
-65535 <= Difference < -32768	1	0	1	1

### Example

STL	Explanation
L IW10	//Load the value of IW10 into ACCU 1-L.
L MW14	//Load the contents of ACCU 1-L into ACCU 2-L. Load the value of MW14 //into ACCU 1-L.
-I	//Subtract ACCU 1-L from ACCU 2-L; store the result in ACCU 1- L.
T DB1.DBW25	//The contents of ACCU 1-L (result) are transferred to DBW25 of DB1.



## 7.5 \*I Multiply ACCU 1 and ACCU 2 as Integer (16-Bit)

### Format

\*I

### Description

\*I (multiply 16-bit integer numbers) multiplies the contents of ACCU 2-L by the contents of ACCU 1-L. The contents of ACCU 1-L and ACCU 2-L are interpreted as 16-bit integer numbers. The result is stored in accumulator 1 as a 32-bit integer number. If the status word bits are OV1 = 1 and OS = 1, the result is outside the range of a 16-bit integer number.

The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Product = 0	0	0	0	-
-32768 <= Product < 0	0	1	0	-
32767 >= Product > 0	1	0	0	-
1073741824 >= Product > 32767	1	0	1	1
-1073709056 <= Product < -32768	0	1	1	1

### Example

STL	Explanation
L IW10	//Load the value of IW10 into ACCU 1-L.
L MW14	//Load contents of ACCU 1-L into ACCU 2-L. Load contents of MW14 into //ACCU 1-L.

## 7.6 // Divide ACCU 2 by ACCU 1 as Integer (16-Bit)

```
*I          //Multiply ACCU 2-L and ACCU 1-L, store result in ACCU 1.
T    DB1.DBD25 //The contents of ACCU 1 (result) are transferred to DBW25 in DB1.
```

## 7.6 // Divide ACCU 2 by ACCU 1 as Integer (16-Bit)

## Format

//

## Description

// (divide 16-bit integer numbers) divides the contents of ACCU 2-L by the contents of ACCU 1-L. The contents of ACCU 1-L and ACCU 2-L are interpreted as 16-bit integer numbers. The result is stored in accumulator 1 and consists of two 16-bit integer numbers, the quotient, and the remainder. The quotient is stored in ACCU 1-L and the remainder in ACCU 1-H. The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Quotient = 0	0	0	0	-
-32768 <= Quotient < 0	0	1	0	-
32767 >= Quotient > 0	1	0	0	-
Quotient = 32768	1	0	1	1
Division by zero	1	1	1	1

## Example

STL	Explanation
-----	-------------

---

*7.6 /I Divide ACCU 2 by ACCU 1 as Integer (16-Bit)*

---

```
L    IW10    //Load the value of IW10 into ACCU 1-L.
L    MW14    //Load the contents of ACCU 1-L into ACCU 2-L. Load the value of MW14
           //into ACCU 1-L.
/I           //Divide ACCU 2-L by ACCU 1-L; store the result in ACCU 1: ACCU 1-L:
           //quotient, ACCU 1-H: remainder
T    MD20    //The contents of ACCU 1 (result) are transferred to MD20.
```

**Example: 13 divided by 4**

Contents of ACCU 2-L before instruction (IW10): "13"  
Contents of ACCU 1-L before instruction (MW14): "4"  
Instruction /I (ACCU 2-L / ACCU 1-L): "13/4"  
Contents of ACCU 1-L after instruction (quotient): "3"  
Contents of ACCU 1-H after instruction (remainder): "1"

## 7.7 + Add Integer Constant (16, 32-Bit)

### Format

+ <integer constant>

Address	Data type	Description
<integer constant>	(16, or 32-bit integer)	Constant to be added

### Description

+ <integer constant> adds the integer constant to the contents of ACCU 1 and stores the result in ACCU 1. The instruction is executed without regard to, and without affecting, the status word bits.

+ <16-bit integer constant>: Adds a 16-bit integer constant (in the range of -32768 to +32767) to the contents of ACCU 1-L and stores the result in ACCU 1-L.

+ <32-bit integer constant>: Adds a 32-bit integer constant (in the range of - 2,147,483,648 to 2,147,483,647) to the contents of ACCU 1 and stores the result in ACCU 1.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example 1

STL	Explanation
L IW10	//Load the value of IW10 into ACCU 1-L.
L MW14	//Load the contents of ACCU 1-L to ACCU 2-L. Load the value of MW14 //into ACCU 1-L.
+I	//Add ACCU 2-L and ACCU 1-L; store the result in ACCU 1-L.
+ 25	//Add ACCU 1-L and 25; store the result in ACCU 1-L.
T DB1.DBW25	//Transfer the contents of ACCU 1-L (result) to DBW25 of DB1.

**Example 2**

STL		Explanation
L	IW12	
L	IW14	
+	100	//Add ACCU 1-L and 100; store the result in ACCU 1-L.
>I		//If ACCU 2 > ACCU 1, or IW12 > (IW14 + 100)
JC	NEXT	//then conditional jump to jump label NEXT.

**Example 3**

STL		Explanation
L	MD20	
L	MD24	
+D		//Add ACCU 1and ACCU 2; store the result in ACCU 1.
+	L#-200	//Add ACCU 1 and -200; store the result in ACCU 1.
T	MD28	

## 7.8 +D Add ACCU 1 and ACCU 2 as Double Integer (32-Bit)

### Format

+D

### Description

**+D** (add 32-bit integer numbers) adds the contents of ACCU 1 to the contents of ACCU 2 and stores the result in ACCU 1. The contents of ACCU 1 and ACCU 2 are interpreted as 32-bit integer numbers. The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Sum = 0	0	0	0	-
-2147483648 <= Sum < 0	0	1	0	-
2147483647 >= Sum > 0	1	0	0	-
Sum = -4294967296	0	0	1	1
4294967294 >= Sum > 2147483647	0	1	1	1
-4294967295 <= Sum < -2147483648	1	0	1	1

### Example

STL	Explanation
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load the contents of ACCU 1 to ACCU 2. Load the value of MD14 into //ACCU 1.
+D	//Add ACCU 2 and ACCU 1; store the result in ACCU 1.
T DB1.DBD25	//The contents of ACCU 1 (result) are transferred to DBD25 of DB1.

## 7.9 -D Subtract ACCU 1 from ACCU 2 as Double Integer (32-Bit)

**7.9 -D Subtract ACCU 1 from ACCU 2 as Double Integer (32-Bit)****Format****-D****Description**

**-D** (subtract 32-bit integer numbers) subtracts the contents of ACCU 1 from the contents of ACCU 2 and stores the result in ACCU 1. The contents of ACCU 1 and ACCU 2 are interpreted as 32-bit integer numbers. The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Difference = 0	0	0	0	-
-2147483648 <= Difference < 0	0	1	0	-
2147483647 >= Difference > 0	1	0	0	-
4294967295 >= Difference > 2147483647	0	1	1	1
-4294967295 <= Difference < -2147483648	1	0	1	1

**Example**

STL	Explanation
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load the contents of ACCU 1 into ACCU 2. Load the value of MD14 into //ACCU 1.
-D	//Subtract ACCU 1 from ACCU 2; store the result in ACCU 1.
T DB1.DBD25	//The contents of ACCU 1 (result) are transferred to DBD25 of DB1.

## 7.10 \*D Multiply ACCU 1 and ACCU 2 as Double Integer (32-Bit)

### Format

\*D

### Description

\*D (multiply 32-bit integer numbers) multiplies the contents of ACCU 2 by the contents of ACCU 1. The contents of ACCU 1 and ACCU 2 are interpreted as 32-bit integer numbers. The result is stored in accumulator 1 as a 32-bit integer number. If the status word bits are OV1 = 1 and OS = 1, the result is outside the range of a 32-bit integer number.

The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Product = 0	0	0	0	-
-2147483648 <= Product < 0	0	1	0	-
2147483647 >= Product > 0	1	0	0	-
Product > 2147483647	1	0	1	1
Product < -2147483648	0	1	1	1

### Example

STL	Explanation
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load contents of ACCU 1 into ACCU 2. Load contents of MD14 into //ACCU 1.
*D	//Multiply ACCU 2 and ACCU 1; store the result in ACCU 1.
T DB1.DB25	//The contents of ACCU 1 (result) are transferred to DB25 in DB1.



## 7.11 /D Divide ACCU 2 by ACCU 1 as Double Integer (32-Bit)

## 7.11 /D Divide ACCU 2 by ACCU 1 as Double Integer (32-Bit)

## Format

/D

## Description

/D (divide 32-bit integer numbers) divides the contents of ACCU 2 by the contents of ACCU 1. The contents of ACCU 1 and ACCU 2 are interpreted as 32-bit integer numbers. The result of the instruction is stored in accumulator 1. The result gives only the quotient and not the remainder. (The instruction MOD can be used to get the remainder.)

The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

See also Evaluating the Bits of the Status Word with Integer Math Instructions.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Quotient = 0	0	0	0	-
-2147483648 <= Quotient < 0	0	1	0	-
2147483647 >= Quotient > 0	1	0	0	-
Quotient = 2147483648	1	0	1	1
Division by zero	1	1	1	1

## Example

STL	Explanation
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load the contents of ACCU 1 into ACCU 2. Load the value of MD14 into

7.11 /D Divide ACCU 2 by ACCU 1 as Double Integer (32-Bit)

			//ACCU 1.
	/D		//Divide ACCU 2 by ACCU 1; store the result (quotient) in ACCU 1.
	T	MD20	//The contents of ACCU 1 (result) are transferred to MD20.

**Example: 13 divided by 4**

Contents of ACCU 2 before instruction (ID10):	"13"
Contents of ACCU 1 before instruction (MD14):	"4"
Instruction /D (ACCU 2 / ACCU 1):	"13/4"
Contents of ACCU 1 after instruction (quotient):	"3"

## 7.12 MOD Division Remainder Double Integer (32-Bit)

### Format

**MOD**

### Description

**MOD** (remainder of the division of 32-bit integer numbers) divides the contents of ACCU 2 by the contents of ACCU 1. The contents of ACCU 1 and ACCU 2 are interpreted as 32-bit integer numbers. The result of the instruction is stored in accumulator 1. The result gives only the division remainder, and not the quotient. (The instruction /D can be used to get the quotient.)

The instruction is executed without regard to, and without affecting, the RLO. The status word bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

Status bit generation	CC 1	CC 0	OV	OS
Remainder = 0	0	0	0	-
-2147483648 <= Remainder < 0	0	1	0	-
2147483647 >= Remainder > 0	1	0	0	-
Division by zero	1	1	1	1

### Example

STL	Explanation
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load the contents of ACCU 1 into ACCU 2. Load the value of MD14 into //ACCU 1.
MOD	//Divide ACCU 2 by ACCU 1, store the result (remainder) in ACCU 1.
T MD20	//The contents of ACCU 1 (result) are transferred to MD20.

7.12 MOD *Division Remainder Double Integer (32-Bit)*

**Example: 13 divided by 4**

Contents of ACCU 2 before instruction (ID10):	"13"
Contents of ACCU 1 before instruction (MD14):	"4"
Instruction MOD (ACCU 2 / ACCU 1):	"13/4"
Contents of ACCU 1 after instruction (remainder):	"1"

## 8 Floating-Point Math Instructions

### 8.1 Overview of Floating-Point Math Instructions

#### Description

The math instructions combine the contents of accumulators 1 and 2. In the case of CPUs with two accumulators, the contents of accumulator 2 remains unchanged.

In the case of CPUs with four accumulators, the contents of accumulator 3 is copied into accumulator 2 and the contents of accumulator 4 into accumulator 3. The old contents of accumulator 4 remains unchanged.

The IEEE 32-bit floating-point numbers belong to the data type called REAL. You can use the floating-point math instructions to perform the following math instructions using **two 32-bit IEEE floating-point numbers**:

- +R Add ACCU 1 and ACCU 2
- -R Subtract ACCU 1 from ACCU 2
- \*R Multiply ACCU 1 and ACCU 2
- /R Divide ACCU 2 by ACCU 1

Using floating-point math, you can carry out the following operations with **one 32-bit IEEE floating-point number**:

- ABS Absolute Value
- SQR Generate the Square
- SQRT Generate the Square Root
- EXP Generate the Exponential Value
- LN Generate the Natural Logarithm
- SIN Generate the Sine of Angles
- COS Generate the Cosine of Angles
- TAN Generate the Tangent of Angles
- ASIN Generate the Arc Sine
- ACOS Generate the Arc Cosine
- ATAN Generate the Arc Tangent

See also Evaluating the Bits of the Status Word.

## 8.2 Evaluating the Bits of the Status Word with Floating-Point Math Instructions

### Description

The basic arithmetic types influence the following bits in the Status word: CC 1 and CC 0, OV and OS.

The following tables show the signal state of the bits in the status word for the results of instructions with floating-point numbers (32 bits):

Valid Area for a Result	CC 1	CC 0	OV	OS
+0, -0 (Null)	0	0	0	*
$-3.402823E+38 < \text{result} < -1.175494E-38$ (negative number)	0	1	0	*
$+1.175494E-38 < \text{result} < 3.402824E+38$ (positive number)	1	0	0	*

\* The OS bit is not affected by the result of the instruction.

Invalid Area for a Result	CC 1	CC 0	OV	OS
Underflow $-1.175494E-38 < \text{result} < -1.401298E-45$ (negative number)	0	0	1	1
Underflow $+1.401298E-45 < \text{result} < +1.175494E-38$ (positive number)	0	0	1	1
Overflow Result $< -3.402823E+38$ (negative number)	0	1	1	1
Overflow Result $> 3.402823E+38$ (positive number)	1	0	1	1
Not a valid floating-point number or illegal instruction (input value outside the valid range)	1	1	1	1

## 8.3 Floating-Point Math Instructions: Basic

### 8.3.1 +R Add ACCU 1 and ACCU 2 as a Floating-Point Number (32-Bit IEEE 754)

#### Format

+R

#### Description of instruction

**+R** (add 32-bit IEEE floating-point numbers) adds the contents of accumulator 1 to the contents of accumulator 2 and stores the result in accumulator 1. The contents of accumulator 1 and accumulator 2 are interpreted as 32-bit IEEE floating-point numbers. The instruction is executed without regard to, and without affecting, the RLO. The status bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-infinite	0	1	1	1	Overflow
-qNaN	1	1	1	1	

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
--	----	------	------	----	----	----	-----	-----	-----

8.3 Floating-Point Math Instructions: Basic

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	X	X	X	X	-	-	-	-

**Example**

STL	Explanation
OPN DB10	
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load the value of ACCU 1 into ACCU 2. Load the value of MD14 into //ACCU 1.
+R	//Add ACCU 2 and ACCU 1; store the result in ACCU 1.
T DBD25	//The content of ACCU 1 (result) is transferred to DBD25 in DB10.



### 8.3.2 -R Subtract ACCU 1 from ACCU 2 as a Floating-Point Number (32-Bit IEEE 754)

#### Format

-R

#### Description

**-R** (subtract 32-bit IEEE floating-point numbers) subtracts the contents of accumulator 1 from the contents of accumulator 2 and stores the result in accumulator 1. The contents of accumulator 1 and accumulator 2 are interpreted as 32-bit IEEE floating-point numbers. The result is stored in accumulator 1. The instruction is executed without regard to, and without affecting, the RLO. The status bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-infinite	0	1	1	1	Overflow
-qNaN	1	1	1	1	

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

8.3 Floating-Point Math Instructions: Basic

**Example**

STL	Explanation
OPN DB10	
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load the value of ACCU 1 into ACCU 2. Load the value of MD14 into //ACCU 1.
-R	//Subtract ACCU 1 from ACCU 2; store the result in ACCU 1.
T DBD25	//The content of ACCU 1 (result) is transferred to DBD25 in DB10.

### 8.3.3 \*R Multiply ACCU 1 and ACCU 2 as Floating-Point Numbers (32-Bit IEEE 754)

#### Format

\*R

#### Description of instruction

\*R (multiply 32-bit IEEE floating-point numbers) multiplies the contents of accumulator 2 by the contents of accumulator 1. The contents of accumulator 1 and accumulator 2 are interpreted as 32-bit IEEE floating-point numbers. The result is stored in accumulator 1 as a 32-bit IEEE floating-point number. The instruction is executed without regard to, and without affecting, the RLO. The status bits CC 1, CC 0, OS, and OV are set as a result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs. The contents of accumulator 4 remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-infinite	0	1	1	1	Overflow
-qNaN	1	1	1	1	

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

8.3 Floating-Point Math Instructions: Basic

**Example**

STL	Explanation
OPN DB10	
L ID10	//Load the value of ID10 into ACCU 1.
L MD14	//Load the value of ACCU 1 into ACCU 2. Load the value of MD14 into //ACCU 1.
*R	//Multiply ACCU 2 and ACCU 1; store the result in ACCU 1.
T DBD25	//The content of ACCU 1 (result) is transferred to DBD25 in DB10.

### 8.3.4 /R Divide ACCU 2 by ACCU 1 as a Floating-Point Number (32-Bit IEEE 754)

#### Format

/R

#### Description of instruction

**/R** (divide 32-bit IEEE floating-point numbers) divides the contents of accumulator 2 by the contents of accumulator 1. The contents of accumulator 1 and accumulator 2 are interpreted as 32-bit IEEE floating-point numbers. The instruction is executed without regard to, and without affecting, the RLO. The status bits CC 1, CC 0, OS, and OV are set as a function of the result of the instruction.

The contents of accumulator 2 remain unchanged for CPUs with two ACCUs.

The contents of accumulator 3 are copied into accumulator 2, and the contents of accumulator 4 are copied into accumulator 3 for CPUs with four ACCUs.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-infinite	0	1	1	1	Overflow
-qNaN	1	1	1	1	

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	x	-	-	-	-

8.3 Floating-Point Math Instructions: Basic

**Example**

STL	DB	Explanation
OPN	DB10	
L	ID10	//Load the value of ID10 into ACCU 1.
L	MD14	//Load the contents of ACCU 1 into ACCU 2. Load the value of MD14 into //ACCU 1.
/R		//Divide ACCU 2 by ACCU 1; store the result in ACCU 1.
T	DBD20	//The content of ACCU 1 (result) is transferred to DBD20 in DB10.

### 8.3.5 ABS Absolute Value of a Floating-Point Number (32-Bit IEEE 754)

#### Format

**ABS**

#### Description

**ABS** (absolute value of a 32-bit IEEE FP) produces the absolute value of a floating-point number (32-bit IEEE floating-point number) in ACCU 1. The result is stored in accumulator 1. The instruction is executed without regard to, and without affecting, the status bits.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

#### Example

STL	Explanation
L ID8	//Load value into ACCU 1 (example: ID8 = -1.5E+02).
ABS	//Form the absolute value; store the result in ACCU 1.
T MD10	//Transfer result to MD10 (example: result = 1.5E+02).

## 8.4 Floating-Point Math Instructions: Extended

### 8.4.1 SQR Generate the Square of a Floating-Point Number (32-Bit)

#### Format

SQR

#### Description of instruction

**SQR** (generate the square of an IEEE 754 32-bit floating-point number) calculates the square of a floating-point number (32-bit, IEEE 754) in ACCU 1. The result is stored in accumulator 1. The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and also the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-qNaN	1	1	1	1	

#### Example

STL	Explanation
OPN DB17	//Open data block DB17.
L DBD0	//The value from data double word DBD0 is loaded into ACCU 1. //(This value must be in the floating-point format.)
SQR	//Calculate the square of the floating-point number (32-bit, IEEE //754) in ACCU 1. Store the result in ACCU 1.
AN OV	//Scan the OV bit in the status word for "0."
JC OK	//If no error occurred during the SQR instruction, jump to the OK //jump label.
BEU	//Block end unconditional, if an error occurred during the SQR //instruction.
OK: T DBD4	//Transfer the result from ACCU 1 to data double word DBD4.



## 8.4.2 SQRT Generate the Square Root of a Floating-Point Number (32-Bit)

### Format

**SQRT**

### Description of instruction

**SQRT** (generate the square root of a 32-bit, IEEE 754 floating-point number) calculates the square root of a floating-point number (32-bit, IEEE 754) in ACCU 1. The result is stored in accumulator 1. The input value must be greater than or equal to zero. The result is then positive. Only exception the square root of -0 is -0. The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and also the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-qNaN	1	1	1	1	

### Example

STL	Explanation
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. //(This value must be in the floating-point format.)
SQRT	//Calculate the square root of the floating-point number //(32-bit, IEEE 754) in ACCU 1. Store the result in ACCU 1.
AN OV	//Scan the OV bit in the status word for "0."
JC OK	//If no error occurred during the SQRT instruction, jump to the OK //jump label.
BEU	//Block end unconditional, if an error occurred during the //SQRT instruction.
OK: T MD20	//Transfer the result from ACCU 1 to memory double word MD20.

### 8.4.3 EXP Generate the Exponential Value of a Floating-Point Number (32-Bit)

#### Format

EXP

#### Description of instruction

**EXP** (generate the exponential value of a floating-point number, 32-bit, IEEE 754) calculates the exponential value (exponential value for base *e*) of a floating-point number (32-bit, IEEE 754) in ACCU 1. The result is stored in accumulator 1. The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and also the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-qNaN	1	1	1	1	

#### Example

STL	Explanation
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. //(This value must be in the floating-point format.)
EXP	//Calculate the exponential value of the floating-point number //(32-bit, IEEE 754) in ACCU 1 at base <i>e</i> . Store the result in //ACCU 1.
AN OV	//Scan the OV bit in the status word for "0."
JC OK	//If no error occurred during the EXP instruction, jump to the OK //jump label.
BEU	//Block end unconditional, if an error occurred during the //EXP instruction.
OK: T MD20	//Transfer the result from ACCU 1 to memory double word MD20.

### 8.4.4 LN Generate the Natural Logarithm of a Floating-Point Number (32-Bit)

#### Format

LN

#### Description of instruction

LN (generate the natural logarithm of an IEEE 754 32-bit floating-point number) calculates the natural logarithm (logarithm to base e) of a floating-point number (32-bit, IEEE 754) in ACCU 1. The result is stored in accumulator 1. The input value must be greater than zero. The instruction influences the CC 1, CC 0, UO, and OV status word bits.

The contents of accumulator 2 (and also the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-infinite	0	1	1	1	Overflow
-qNaN	1	1	1	1	

#### Example

STL	Explanation		
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. //(This value must be in the floating-point format.)		
LN	//Calculate the natural logarithm of the floating-point number //(32-bit, IEEE 754) in ACCU 1. Store the result in ACCU 1.		
AN OV	//Scan the OV bit in the status word for "0."		
JC OK	//If no error occurred during the instruction, jump to the //OK jump label.		
BEU	//Block end unconditional, if an error occurred during the //instruction.		
OK: T MD20	//Transfer the result from ACCU 1 to memory double word MD20.		

### 8.4.5 SIN Generate the Sine of Angles as Floating-Point Numbers (32-Bit)

#### Format

**SIN**

#### Description of instruction

**SIN** (generate the sine of angles as floating-point numbers, 32-bit, IEEE 754) calculates the sine of an angle specified as a radian measure. The angle must be present as a floating-point number in ACCU 1. The result is stored in accumulator 1. The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Overflow
+zero	0	0	0	-	
+infinite	1	0	1	1	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-qNaN	1	1	1	1	

See also Evaluating the Bits in the Status Word with Floating-Point Functions

#### Example

STL	Explanation
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. (This //value must be in the floating-point format.)
SIN	//Calculate the sine of the floating-point number (32-bit, IEEE 754) in //ACCU 1. Store the result in ACCU 1.
T MD20	//Transfer the result from ACCU 1 to the memory double word MD20.

## 8.4.6 COS Generate the Cosine of Angles as Floating-Point Numbers (32-Bit)

### Format

**COS**

### Description of instruction

**COS** (generate the cosine of angles as floating-point numbers, 32-bit, IEEE 754) calculates the cosine of an angle specified as a radian measure. The angle must be present as a floating-point number in ACCU 1. The result is stored in accumulator 1. The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Overflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-qNaN	1	1	1	1	

### Example

STL	Explanation
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. (This //value must be in the floating-point format.)
COS	//Calculate the cosine of the floating-point number (32-bit, IEEE 754) in //ACCU 1. Store the result in ACCU 1.
T MD20	//Transfer the result from ACCU 1 to memory double word MD20.

### 8.4.7 TAN Generate the Tangent of Angles as Floating-Point Numbers (32-Bit)

#### Format

TAN

#### Description of instruction

**TAN** (generate the tangent of angles as floating-point numbers, 32-bit, IEEE 754) calculates the tangent of an angle specified as a radian measure. The angle must be present as a floating-point number in ACCU 1. The result is stored in accumulator 1. The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+infinite	1	0	1	1	Overflow
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Underflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-infinite	0	1	1	1	Overflow
-qNaN	1	1	1	1	

#### Example

STL	Explanation
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. //(This value must be in the floating-point format.)
TAN	//Calculate the tangent of the floating-point number (32-bit, IEEE //754) in ACCU 1. Store the result in ACCU 1.
AN OV	//Scan the OV bit in the status word for "0."
JC OK	//If no error occurred during the TAN instruction, jump to the //OK jump label.
BEU	//Block end unconditional, if an error occurred during the //TAN instruction.
OK: T MD20	//Transfer the result from ACCU 1 to memory double word MD20.

### 8.4.8 ASIN Generate the Arc Sine of a Floating-Point Number (32-Bit)

#### Format

ASIN

#### Description of instruction

**ASIN** (generate the arc sine of a floating-point number, 32-bit, IEEE 754) calculates the arc sine of a floating-point number in ACCU 1. Permissible value range for the input value  
 $-1 \leq \text{input value} \leq +1$

The result is an angle specified as a radian measure. The value is in the following range

$$-\pi / 2 \leq \text{arc sine (ACCU1)} \leq +\pi / 2, \text{ with } \pi = 3.14159\dots$$

The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and also the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Overflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-qNaN	1	1	1	1	

#### Example

STL		Explanation
L	MD10	//The value from memory double word MD10 is loaded into ACCU 1. //(This value must be in the floating-point format.)
ASIN		//Calculate the arc sine of the floating-point number //(32-bit, IEEE 754) in ACCU 1. Store the result in ACCU 1.
AN	OV	//Scan the OV bit in the status word for "0."
JC	OK	//If no error occurred during the ASIN instruction, jump to the //OK jump label.
BEU		//Block end unconditional, if an error occurred during the //ASIN instruction.
OK:	T MD20	//Transfer the result from ACCU 1 to the memory double word MD20.

### 8.4.9 ACOS Generate the Arc Cosine of a Floating-Point Number (32-Bit)

#### Format

**ACOS**

#### Description of instruction

**ACOS** (generate the arc cosine of a floating-point number, 32-bit, IEEE 754) calculates the arc cosine of a floating-point number in ACCU 1. Permissible value range for the input value  $-1 \leq \text{input value} \leq +1$

The result is an angle specified in a radian measure. The value is located in the following range

$$0 \leq \text{arc cosine (ACCU1)} \leq \pi, \text{ with } \pi = 3.14159\dots$$

The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Overflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-qNaN	1	1	1	1	

#### Example

STL	Explanation		
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. //(This value must be in the floating-point format.)		
ACOS	//Calculate the arc cosine of the floating-point number //(32-bit, IEEE 754) in ACCU 1. Store the result in ACCU 1.		
AN OV	//Scan the OV bit in the status word for "0."		
JC OK	//If no error occurred during the ACOS instruction, jump to the //OK jump label.		
BEU	//Block end unconditional, if an error occurred during the //ACOS instruction.		
OK: T MD20	//Transfer the result from ACCU 1 to memory double word MD20.		



### 8.4.10 ATAN Generate the Arc Tangent of a Floating-Point Number (32-Bit)

#### Format

**ATAN**

#### Description of instruction

**ATAN** (generate the arc tangent of a floating-point number, 32-bit, IEEE 754) calculates the arc tangent of a floating-point number in ACCU 1. The result is an angle specified in a radian measure. The value is in the following range

$$-\pi / 2 \leq \text{arc tangent (ACCU1)} \leq +\pi / 2, \text{ with } \pi = 3.14159\dots$$

The instruction influences the CC 1, CC 0, OV, and OS status word bits.

The contents of accumulator 2 (and also the contents of accumulator 3 and accumulator 4 for CPUs with four ACCUs) remain unchanged.

#### Result

The result in ACCU 1 is	CC 1	CC 0	OV	OS	Note
+qNaN	1	1	1	1	
+normalized	1	0	0	-	
+denormalized	0	0	1	1	Overflow
+zero	0	0	0	-	
-zero	0	0	0	-	
-denormalized	0	0	1	1	Underflow
-normalized	0	1	0	-	
-qNaN	1	1	1	1	

#### Example

STL	Explanation
L MD10	//The value from memory double word MD10 is loaded into ACCU 1. //(This value must be in the floating-point format.)
ATAN	//Calculate the arc tangent of the floating-point number //(32-bit, IEEE 754) in ACCU 1. Store the result in ACCU 1.
AN OV	//Scan the OV bit in the status word for "0,"
JC OK	//If no error occurred during the ATAN instruction, jump to the //OK jump label.
BEU	//Block end unconditional, if an error occurred during the //ATAN instruction
OK: T MD20	//Transfer the result from ACCU 1 to memory double word MD20.



# 9 Load and Transfer Instructions

## 9.1 Overview of Load and Transfer Instructions

### Description

The Load (L) and Transfer (T) instructions enable you to program an interchange of information between input or output modules and memory areas, or between memory areas. The CPU executes these instructions in each scan cycle as unconditional instructions, that is, they are not affected by the result of logic operation of a statement.

The following Load and Transfer instructions are available:

- L Load
- L STW Load Status Word into ACCU 1
- LAR1 AR2 Load Address Register 1 from Address Register 2
- LAR1 <D> Load Address Register 1 with Double Integer (32-Bit Pointer)
- LAR1 Load Address Register 1 from ACCU 1
- LAR2 <D> Load Address Register 2 with Double Integer (32-Bit Pointer)
- LAR2 Load Address Register 2 from ACCU 1
  
- T Transfer
- T STW Transfer ACCU 1 into Status Word
- TAR1 AR2 Transfer Address Register 1 to Address Register 2
- TAR1 <D> Transfer Address Register 1 to Destination (32-Bit Pointer)
- TAR2 <D> Transfer Address Register 2 to Destination (32-Bit Pointer)
- TAR1 Transfer Address Register 1 to ACCU 1
- TAR2 Transfer Address Register 2 to ACCU 1
- CAR Exchange Address Register 1 with Address Register 2

## 9.2 L Load

## 9.2 L Load

## Format

L &lt;address&gt;

Address	Data type	Memory area	Source address
<address>	BYTE	E, A, PE, M, L, D,	0..65535
	WORD	Pointer, Parameter	0..65534
	DWORD		0..65532

## Description

L <address> loads the addressed byte, word, or double word into ACCU 1 after the old contents of ACCU 1 have been saved into ACCU 2, and ACCU 1 is reset to "0".

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## Examples

STL	Explanation
L IB10	//Load input byte IB10 into ACCU 1-L-L.
L MB120	//Load memory byte MB120 into ACCU 1-L-L.
L DBB12	//Load data byte DBB12 into ACCU 1-L-L.
L DIW15	//Load instance data word DIW15 into ACCU 1-L.
L LD252	//Load local data double word LD252 ACCU 1.
L P# I 8.7	//Load the pointer into ACCU 1.
L OTTO	//Load the parameter "OTTO" into ACCU 1.
L P# ANNA	//Load the pointer to the specified parameter in ACCU 1.
	//(This instruction loads the relative address offset of the specified
	//parameter. To calculate the absolute offset in the instance data block
	//in multiple instance FBs, the contents of the AR2 register must be
	//added to this value.

**Contents of ACCU 1**

<b>Contents of ACCU 1</b>	<b>ACCU1-H-H</b>	<b>ACCU1-H-L</b>	<b>ACCU1-L-H</b>	<b>ACCU1-L-L</b>
before execution of load instruction	XXXXXXXX	XXXXXXXX	XXXXXXXX	XXXXXXXX
after execution of <b>L MB10</b> (L <Byte>)	00000000	00000000	00000000	<MB10>
after execution of <b>L MW10</b> (L <word>)	00000000	00000000	<MB10>	<MB11>
after execution of <b>L MD10</b> (L <double word>)	<MB10>	<MB11>	<MB12>	<MB13>
after execution of <b>L P# ANNA</b> (in FB)	<86>	<Bit offset of ANNA relative to the FB start>. To calculate the absolute offset in the instance data block in multiple instance FBs, the contents of the AR2 register must be added to this value.		
after execution of <b>L P# ANNA</b> (in FC)	<An area-crossing address of the data which is transferred to ANNA>			
	X = "1" or "0"			

9.3 L STW Load Status Word into ACCU 1

### 9.3 L STW Load Status Word into ACCU 1

**Format**

**L STW**

**Description**

**L STW** (instruction L with the address STW) loads ACCU 1 with the contents of the status word. The instruction is executed without regard to, and without affecting, the status bits.

**Note**

For the S7-300 series CPUs, the statement **L STW** does not load the FC, STA, and OR bits of the status word. Only bits 1, 4, 5, 6, 7, and 8 are loaded into the corresponding bit positions of the low word of accumulator 1.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L STW	//Load contents of status word into ACCU 1.

The contents of ACCU 1 after the execution of **L STW** is:

Bit	31-9	8	7	6	5	4	3	2	1	0
Content:	0	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC

## 9.4 LAR1 Load Address Register 1 from ACCU 1

### Format

LAR1

### Description

**LAR1** loads address register AR1 with the contents of ACCU 1 (32-bit pointer). ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 9.5 LAR1 <D> Load Address Register 1 with Double Integer (32-Bit Pointer)

### Format

LAR1 <D>

Address	Data type	Memory area	Source address
<D>	DWORD pointer constant	D, M, L	0...65532

### Description

**LAR1 <D>** loads address register AR1 with the contents of the addressed double word <D> or a pointer constant. ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example: Direct addresses

STL	Explanation
LAR1 DBD20	//Load AR1 with the pointer in data double word DBD20.
LAR1 DID30	//Load AR1 with the pointer in instance data double word DID30.
LAR1 LD180	//Load AR1 with the pointer in local data double word LD180.
LAR1 MD24	//Load AR1 with the contents of memory double word MD24.

### Example: Pointer constant

STL	Explanation
LAR1 P#M100.0	//Load AR1 with a 32-bit pointer constant.



## 9.6 LAR1 AR2 Load Address Register 1 from Address Register 2

### Format

LAR1 AR2

### Description

**LAR1 AR2** (instruction LAR1 with the address AR2) loads address register AR1 with the contents of address register AR2. ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 9.7 LAR2 Load Address Register 2 from ACCU 1

### Format

LAR2

### Description

**LAR2** loads address register AR2 with the contents ACCU 1 (32-bit pointer).

ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 9.8 LAR2 &lt;D&gt; Load Address Register 2 with Double Integer (32-Bit Pointer)

## 9.8 LAR2 <D> Load Address Register 2 with Double Integer (32-Bit Pointer)

### Format

LAR2 &lt;D&gt;

Address	Data type	Memory area	Source address
<D>	DWORD pointer constant	D, M, L	0...65532

### Description

**LAR2 <D>** loads address register AR2 with the contents of the addressed double word <D> or a pointer constant. ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example: Direct addresses

STL	Explanation
LAR2 DBD 20	//Load AR2 with the pointer in data double word DBD20.
LAR2 DID 30	//Load AR2 with the pointer in instance data double word DID30.
LAR2 LD 180	//Load AR2 with the pointer in local data double word LD180.
LAR2 MD 24	//Load AR2 with the pointer in memory double word MD24.

### Example: Pointer constant

STL	Explanation
LAR2 P#M100.0	//Load AR2 with a 32-bit pointer constant.

## 9.9 T Transfer

### Format

T <address>

Address	Data type	Memory area	Source address
<address>	BYTE	I, Q, PQ, M, L, D	0...65535
	WORD		0...65534
	DWORD		0...65532

### Description

**T <address>** transfers (copies) the contents of ACCU 1 to the destination address if the Master Control Relay is switched on (MCR = 1). If MCR = 0, then the destination address is written with 0. The number of bytes copied from ACCU 1 depends on the size expressed in the destination address. ACCU 1 also saves the data after the transfer procedure. A transfer to the direct I/O area (memory type PQ) also transfers the contents of ACCU 1 or "0" (if MCR=0) to the corresponding address of the process image output table (memory type Q). The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Examples

STL	Explanation	
T QB10	//Transfers contents of ACCU 1-L-L to output byte QB10.	
T MW14	//Transfers contents of ACCU 1-L to memory word MW14.	
T DBD2	//Transfers contents of ACCU 1 to data double word DBD2.	

## 9.10 T STW Transfer ACCU 1 into Status Word

### Format

**T STW**

### Description

**T STW** (instruction T with the address STW) transfers bit 0 to bit 8 of ACCU 1 into the status word.

The instruction is executed without regard to the status bits.

Note: With the CPUs of the S7-300 family, the bits of the status word /ER, STA and OR are not written to by the T STW instruction. Only bits 1, 4, 5, 6, 7 and 8 are written according to the bit settings of ACCU1.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	x	x	x	x	x	x	x	x	x

### Example

STL	Explanation
T STW	//Transfer bit 0 to bit 8 from ACCU 1 to the status word.

The bits in ACCU 1 contain the following status bits:

Bit	31-9	8	7	6	5	4	3	2	1	0
Content:	*)	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC

\*) bits are not transferred.

## 9.11 CAR Exchange Address Register 1 with Address Register 2

### Format

CAR

### Description

**CAR** (swap address register) exchanges the contents of address registers AR1 and AR2. The instruction is executed without regard to, and without affecting, the status bits.

The contents of address register AR1 are moved to address register AR2 and the contents of address register AR2 are moved to address register AR1.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 9.12 TAR1 Transfer Address Register 1 to ACCU 1

### Format

TAR1

### Description

**TAR1** transfers the contents of address register AR1 into ACCU 1 (32-bit pointer). The previous contents of ACCU 1 are saved into ACCU 2. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 9.13 TAR1 <D> Transfer Address Register 1 to Destination (32-Bit Pointer)

### Format

TAR1 <D>

Address	Data type	Memory area	Source address
<D>	DWORD	D, M, L	0...65532

### Description

**TAR1 <D>** transfers the contents of address register AR1 into the addressed double word <D>. Possible destination areas are memory double words (MD), local data double words (LD), data double words (DBD), and instance data words (DID).

ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Examples

STL	Explanation
TAR1 DBD20	//Transfer the contents of AR1 into data double word DBD20.
TAR1 DID30	//Transfer the contents of AR1 into instance data double word DID30.
TAR1 LD18	//Transfer the contents of AR1 into local data double word LD18.
TAR1 MD24	//Transfer the contents of AR1 into memory double word MD24.

## 9.14 TAR1 AR2 Transfer Address Register 1 to Address Register 2

### Format

TAR1 AR2

### Description

**TAR1 AR2** (instruction TAR1 with the address AR2) transfers the contents of address register AR1 to address register AR2.

ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 9.15 TAR2 Transfer Address Register 2 to ACCU 1

### Format

TAR2

### Description

**TAR2** transfers the contents of address register AR2 into ACCU 1 (32-bit pointer). The contents of ACCU 1 were previously saved into ACCU 2. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 9.16 TAR2 <D> Transfer Address Register 2 to Destination (32-Bit Pointer)

### Format

TAR2 <D>

Address	Data type	Memory area	Source address
<D>	DWORD	D, M, L	0...65532

### Description

**TAR2 <D>** transfers the contents of address register AR2 to the addressed double word <D>. Possible destination areas are memory double words (MD), local data double words (LD), data double words (DBD), and instance double words (DID).

ACCU 1 and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Examples

STL	Explanation
TAR2 DBD20	//Transfer the contents of AR2 to data double word DBD20.
TAR2 DID30	//Transfer the contents of AR2 to instance double word DID30.
TAR2 LD18	//Transfer the contents of AR2 into local data double word LD18.
TAR2 MD24	//Transfer the contents of AR2 into memory double word MD24.



# 10 Program Control Instructions

## 10.1 Overview of Program Control Instructions

### Description

The following instructions are available for performing program control instructions:

- BE Block End
- BEC Block End Conditional
- BEU Block End Unconditional
- CALL Block Call
- CC Conditional Call
- UC Unconditional Call
- 
- Call FB
- Call FC
- Call SFB
- Call SFC
- Call Multiple Instance
- Call Block from a Library
  
- MCR (Master Control Relay)
- Important Notes on Using MCR Functions
- MCR( Save RLO in MCR Stack, Begin MCR
- )MCR End MCR
- MCRA Activate MCR Area
- MCRD Deactivate MCR Area

## 10.2 BE Block End

### Format

BE

### Description

**BE** (block end) terminates the program scan in the current block and causes a jump to the block that called the current block. The program scan resumes with the first instruction that follows the block call statement in the calling program. The current local data area is released and the previous local data area becomes the current local data area. The data blocks that were opened when the block was called are re-opened. In addition, the MCR dependency of the calling block is restored and the RLO is carried over from the current block to the block that called the current block. BE is not dependent on any conditions. However, if the BE instruction is jumped over, the current program scan does not end and will continue starting at the jump destination within the block.

The BE instruction is not identical to the S5 software. The instruction has the same function as BEU when used on S7 hardware.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0

### Example

STL	Explanation	
A I 1.0		
JC NEXT		//Jump to NEXT jump label if RLO = 1 (I 1.0 = 1).
L IW4		//Continue here if no jump is executed.
T IW10		
A I 6.0		
A I 6.1		
S M 12.0		
BE		//Block end
NEXT: NOP		//Continue here if jump is executed.
0		

## 10.3 BEC Block End Conditional

### Format

**BEC**

### Description

If RLO = 1, then **BEC** (block end conditional) interrupts the program scan in the current block and causes a jump to the block that called the current block. The program scan resumes with the first instruction that follows the block call. The current local data area is released and the previous local data area becomes the current local data area. The data blocks that were current data blocks when the block was called are re-opened. The MCR dependency of the calling block is restored.

The RLO (= 1) is carried over from the terminated block to the block that called. If RLO = 0, then BEC is not executed. The RLO is set to 1 and the program scan continues with the instruction following BEC.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	x	0	1	1	0

### Example

STL	Explanation
A I 1.0	//Update RLO.
BEC	//End block if RLO = 1.
L IW4	//Continue here if BEC is not executed, RLO = 0.
T MW10	

## 10.4 BEU Block End Unconditional

### Format

BEU

### Description

**BEU** (block end unconditional) terminates the program scan in the current block and causes a jump to the block that called the current block. The program scan resumes with the first instruction that follows the block call. The current local data area is released and the previous local data area becomes the current local data area. The data blocks that were opened when the block was called are re-opened. In addition, the MCR dependency of the calling block is restored and the RLO is carried over from the current block to the block that called the current block. BEU is not dependent on any conditions. However, if the BEU instruction is jumped over, the current program scan does not end and will continue starting at the jump destination within the block.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0

### Example

STL	Explanation	
A I 1.0		
JC NEXT		//Jump to NEXT jump label if RLO = 1 (I 1.0 = 1).
L IW4		//Continue here if no jump is executed.
T IW10		
A I 6.0		
A I 6.1		
S M 12.0		
BEU		//Block end unconditional.
NEXT: NOP 0		//Continue here if jump is executed.

## 10.5 CALL Block Call

### Format

**CALL <logic block identifier>**

### Description

**CALL <logic block identifier>** is used to call functions (FCs) or function blocks (FBs), system functions (SFCs) or system function blocks (SFBs) or to call the standard pre-programmed blocks shipped by Siemens. The CALL instruction calls the FC and SFC or the FB and SFB that you input as an address, independent of the RLO or any other condition. If you call an FB or SFB with CALL, you must provide the block with an associated instance DB. The calling block program continues logic processing after the called block is processed. The address for the logic block can be specified absolutely or symbolically. Register contents are restored after an SFB/SFC call.

### Example: CALL FB1, DB1 or CALL FILLVAT1, RECIPE1

Logic Block	Block Type	Absolute Address Call Syntax
FC	Function	CALL FCn
SFC	System function	CALL SFCn
FB	Function block	CALL FBn1,DBn2
SFB	System function block	CALL SFBn1,DBn2

### Note

When you use the STL Editor, the references (n, n1, and n2) in the table above must refer to valid existing blocks. Likewise, symbolic names must be defined prior to use.

### Passing parameters (incremental edit mode)

The calling block can exchange parameters with the called block via a variable list. The variable list is extended automatically in your STL program when you enter a valid CALL statement.

If you call an FB, SFB, FC or SFC and the variable declaration table of the called block has IN, OUT, and IN\_OUT declarations, these variables are added in the calling block as a formal parameter list.

When FCs and SFCs are called, you must assign actual parameters from the calling logic block to the formal parameters.

When you call FBs and SFBs, you must specify only the actual parameters that must be changed from the previous call. After the FB is processed, the actual parameters are stored in the instance DB. If the actual parameter is a data block, the complete, absolute address must be specified, for example DB1, DBW2.

10.5 CALL Block Call

The IN parameters can be specified as constants or as absolute or symbolic addresses. The OUT and IN\_OUT parameters must be specified as absolute or symbolic addresses. You must ensure that all addresses and constants are compatible with the data types to be transferred.

CALL saves the return address (selector and relative address), the selectors of the two current data blocks, as well as the MA bit in the B (block) stack. In addition, CALL deactivates the MCR dependency, and then creates the local data area of the block to be called.

**Status word**

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0

**Example 1: Assigning parameters to the FC6 call**

CALL	FC6	
	Formal parameter	Actual parameter
	NO OF TOOL	:= MW100
	TIME OUT	:= MW110
	FOUND	:= Q 0.1
	ERROR	:= Q 100.0

**Example 2: Calling an SFC without parameters**

STL	Explanation
CALL SFC43	//Call SFC43 to re-trigger watchdog timer (no parameters).

**Example 3: Calling FB99 with instance data block DB1**

CALL	FB99,DB1	
	Formal parameter	Actual parameter
	MAX_RPM	:= #RPM1_MAX
	MIN_RPM	:= #RPM1
	MAX_POWER	:= #POWER1
	MAX_TEMP	:= #TEMP1

**Example 4: Calling FB99 with instance data block DB2**

CALL	FB99, DB2	
	Formal parameter	Actual parameter
	MAX_RPM	:= #RPM2_MAX
	MIN_RPM	:= #RPM2
	MAX_POWER	:= #POWER2
	MAX_TEMP	:= #TEMP2

**Note**

Every FB or SFB CALL must have an instance data block. In the example above, the blocks DB1 and DB2 must already exist before the call.

10.6 Call FB

## 10.6 Call FB

### Format

**CALL FB n1, DB n1**

### Description

This instruction is intended to call user-defined function blocks (FBs). The CALL instruction calls the function block you entered as address, independent of the RLO or other conditions. If you call a function block with CALL, you must provide it with an instance data block. After processing the called block, processing continues with the program for the calling block. The address for the logic block can be specified absolutely or symbolically.

### Passing parameters (incremental edit mode)

The calling block can exchange parameters with the called block via the variable list. The variable list is extended automatically in your Statement List program when you enter a valid CALL instruction.

If you call a function block and the variable declaration table of the called block has IN, OUT, and IN\_OUT declarations, these variables are added in the program for the calling block as a list of formal parameters.

When calling the function block, you only need to specify the actual parameters that must be changed from the previous call because the actual parameters are saved in the instance data block after the function block is processed. If the actual parameter is a data block, the complete, absolute address must be specified, for example DB1, DBW2.

The IN parameters can be specified as constants or as absolute or symbolic addresses. The OUT and IN\_OUT parameters must be specified as absolute or symbolic addresses. You must ensure that all addresses and constants are compatible with the data types to be transferred.

CALL saves the return address (selector and relative address), the selectors of the two open data blocks, and the MA bit in the B (block) stack. In addition, CALL deactivates the MCR dependency, and then creates the local data area of the block to be called.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0



**Example 1: FB99 call with instance data block DB1**

CALL	FB99,DB1	
	Formal parameter	Actual parameter
	MAX_RPM	:= #RPM1_MAX
	MIN_RPM	:= #RPM1
	MAX_POWER	:= #POWER1
	MAX_TEMP	:= #TEMP1

**Example 2: FB99 call with instance data block DB2**

CALL	FB99,DB2	
	Formal parameter	Actual parameter
	MAX_RPM	:= #RPM2_MAX
	MIN_RPM	:= #RPM2
	MAX_POWER	:= #POWER2
	MAX_TEMP	:= #TEMP2

**Note**

Every function block CALL must have an instance data block. In the example above, the blocks DB1 and DB2 must already exist before the call.

## 10.7 Call FC

### Format

**CALL FC n**

#### Note

If you are working in the STL Editor, the reference (n) must relate to existing valid blocks. You must also define the symbolic names prior to use.

### Description

This instruction is intended to call functions (FCs). The CALL instruction calls the FC that you entered as address, independent of the RLO or other conditions. After processing the called block, processing continues with the program for the calling block. The address for the logic block can be specified absolutely or symbolically.

### Passing parameters (incremental edit mode)

The calling block can exchange parameters with the called block via the variable list. The variable list is extended automatically in your Statement List program when you enter a valid CALL instruction.

If you call a function and the variable declaration table of the called block has IN, OUT, and IN\_OUT declarations, these variables are added in the program for the calling block as a list of formal parameters.

When calling the function, you must assign actual parameters in the calling logic block to the formal parameters.

The IN parameters can be specified as constants or as absolute or symbolic addresses. The OUT and IN\_OUT parameters must be specified as absolute or symbolic addresses. You must ensure that all addresses and constants are compatible with the data types to be transferred.

CALL saves the return address (selector and relative address), the selectors of the two open data blocks, and the MA bit in the B (block) stack. In addition, CALL deactivates the MCR dependency, and then creates the local data area of the block to be called.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0

**Example: Assigning parameters to the FC6 call**

CALL	FC6	
	Formal parameter	Actual parameter
	NO OF TOOL	:= MW100
	TIME OUT	:= MW110
	FOUND	:= Q0.1
	ERROR	:= Q100.0

## 10.8 Call SFB

### Format

**CALL SFB n1, DB n2**

### Description

This instruction is intended to call the standard function blocks (SFBs) supplied by Siemens. The CALL instruction calls the SFB that you entered as address, independent of the RLO or other conditions. If you call a system function block with CALL, you must provide it with an instance data block. After processing the called block, processing continues with the program for the calling block. The address for the logic block can be specified absolutely or symbolically.

### Passing parameters (incremental edit mode)

The calling block can exchange parameters with the called block via the variable list. The variable list is extended automatically in your Statement List program when you enter a valid CALL instruction.

If you call a system function block and the variable declaration table of the called block has IN, OUT, and IN\_OUT declarations, these variables are added in the program for the calling block as a list of formal parameters.

When calling the system function block, you only need to specify the actual parameters that must be changed from the previous call because the actual parameters are saved in the instance data block after the system function block is processed. If the actual parameter is a data block, the complete, absolute address must be specified, for example DB1, DBW2.

The IN parameters can be specified as constants or as absolute or symbolic addresses. The OUT and IN\_OUT parameters must be specified as absolute or symbolic addresses. You must ensure that all addresses and constants are compatible with the data types to be transferred.

CALL saves the return address (selector and relative address), the selectors of the two open data blocks, and the MA bit in the B (block) stack. In addition, CALL deactivates the MCR dependency, and then creates the local data area of the block to be called.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0

**Example**

<b>CALL</b>	<b>SFB4, DB4</b>	
	<b>Formal parameter</b>	<b>Actual parameter</b>
	<b>IN:</b>	<b>I0.1</b>
	<b>PT:</b>	<b>T#20s</b>
	<b>Q:</b>	<b>M0.0</b>
	<b>ET:</b>	<b>MW10</b>

**Note**

Every system function block CALL must have an instance data block. In the example above, the blocks SFB4 and DB4 must already exist before the call.

## 10.9 Call SFC

### Format

**CALL SFC n**

#### Note

If you are working in the STL Editor, the reference (n) must relate to existing valid blocks. You must also define the symbolic names prior to use.

### Description

This instruction is intended to call the standard functions (SFCs) supplied by Siemens. The CALL instruction calls the SFC that you entered as address, independent of the RLO or other conditions. After processing the called block, processing continues with the program for the calling block. The address for the logic block can be specified absolutely or symbolically.

### Passing parameters (incremental edit mode)

The calling block can exchange parameters with the called block via the variable list. The variable list is extended automatically in your Statement List program when you enter a valid CALL instruction.

If you call a system function and the variable declaration table of the called block has IN, OUT, and IN\_OUT declarations, these variables are added in the program for the calling block as a list of formal parameters.

When calling the system function, you must assign actual parameters in the calling logic block to the formal parameters.

The IN parameters can be specified as constants or as absolute or symbolic addresses. The OUT and IN\_OUT parameters must be specified as absolute or symbolic addresses. You must ensure that all addresses and constants are compatible with the data types to be transferred.

CALL saves the return address (selector and relative address), the selectors of the two open data blocks, and the MA bit in the B (block) stack. In addition, CALL deactivates the MCR dependency, and then creates the local data area of the block to be called.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0

### Example: Calling an SFC without parameters

STL	Explanation
CALL SFC43	//Call SFC43 to re-trigger watchdog timer (no parameters).

## 10.10 Call Multiple Instance

### Format

**CALL # variable name**

### Description

A multiple instance is created by declaring a static variable with the data type of a function block. Only multiple instances that have already been declared are included in the program element catalog.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	x	x	x

## 10.11 Call Block from a Library

The libraries available in the SIMATIC Manager can be used here to select a block that

- Is integrated in your CPU operating system ("Standard Library")
- You saved in a library in order to use it again.

## 10.12 CC Conditional Call

### Format

**CC** <logic block identifier>

### Description

**CC** <logic block identifier> (conditional block call) calls a logic block if RLO=1. CC is used to call logic blocks of the FC or FB type without parameters. CC is used in the same way as the **CALL** instruction except that you cannot transfer parameters with the calling program. The instruction saves the return address (selector and relative address), the selectors of the two current data blocks, as well as the MA bit into the B (block) stack, deactivates the MCR dependency, creates the local data area of the block to be called, and begins executing the called code. The address for the logic block can be specified absolutely or symbolically.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	1	0

### Example

STL	Explanation
A I 2.0	//Check signal state at input I 2.0.
CC FC6	//Call function FC6 if I 2.0 is "1".
A M 3.0	//Executed upon return from called function (I 2.0 = 1) or directly after //A I 2.0 statement if I 2.0 = 0.

### Note

If the **CALL** instruction calls a function block (FB) or a system function block (SFB), an instance data block (DB no.) must be specified in the statement. The use of a variable of the type "BlockFB" or "BlockFC" in conjunction with the **CC** instruction is not permitted. Since you cannot assign a data block to the call with the **CC** instruction in the address of the statement, you can only use this instruction for blocks without block parameters and static local data.

Depending on the network you are working with, the Program Editor either generates the **UC** instruction or the **CC** instruction during conversion from the Ladder Logic programming language to the Statement List programming language. You should attempt to use the **CALL** instruction instead to avoid errors occurring in your programs.



## 10.13 UC Unconditional Call

### Format

UC <logic block identifier>

### Description

**UC <logic block identifier>** (unconditional block call) calls a logic block of the FC or SFC type. UC is like the CALL instruction, except that you cannot transfer parameters with the called block. The instruction saves the return address (selector and relative address) selectors of the two current data blocks, as well as the MA bit into the B (block) stack, deactivates the MCR dependency, creates the local data area of the block to be called, and begins executing the called code.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	0	0	1	-	0

### Example 1

STL	Explanation
UC FC6	//Call function FC6 (without parameters).

### Example 2

STL	Explanation
UC SFC43	//Call system function SFC43 (without parameters).

### Note

When the **CALL** instruction is used to call an FB or an SFB, an instance data block (DB no.) must be specified in the instruction. The use of a variable of the type "BlockFB" or "BlockFC" in conjunction with the **UC** instruction is not permitted. Since you cannot assign a data block to a call with the **UC** instruction in the address of the instruction, you can only use this instruction for blocks without block parameters and static local data.

Depending on the network you are working with, the Program Editor either generates the **UC** instruction or the **CC** instruction during conversion from the Ladder Logic programming language to the Statement List programming language. You should attempt to use the **CALL** instruction instead to avoid errors occurring in your programs.

## 10.14 MCR (Master Control Relay)

### Important Notes on Using MCR Functions



#### Warning

To prevent personal injury or property damage, never use the MCR to replace a hard-wired mechanical master control relay for an emergency stop function.

### Description

The Master Control Relay (MCR) is a relay ladder logic master switch for energizing and de-energizing power flow. Instructions triggered by the following bit logic and transfer instructions are dependent on the MCR:

- = <bit>
- S <bit>
- R <bit>
- T <byte>, T <word>, T <double word>

The **T** instruction, used with byte, word, and double word, writes a 0 to the memory if the MCR is 0. The **S** and **R** instructions leave the existing value unchanged. The instruction = writes "0" in the addressed bit.

### Instructions dependent on MCR and their reactions to the signal state of the MCR

Signal State of MCR	= <bit>	S <bit>, R <bit>	T <byte>, T <word> T <double word>
0 ("OFF")	Writes 0. (Imitates a relay that falls to its quiet state when voltage is removed.)	Does not write. (Imitates a relay that remains in its current state when voltage is removed.)	Writes 0. (Imitates a component that produces a value of 0 when voltage is removed.)
1 ("ON")	Normal processing	Normal processing	Normal processing

### MCR( - Begin MCR Area, )MCR - End MCR Area

The MCR is controlled by a stack one bit wide and eight bits deep. The MCR is energized as long as all eight entries are equal to 1. The MCR( instruction copies the RLO bit into the MCR stack. The )MCR instruction removes the last entry from the stack and sets the vacated position to 1. MCR( and )MCR instructions must always be used in pairs. A fault, that is, if there are more than eight consecutive MCR( instructions or an attempt is made to execute an )MCR instruction when the MCR stack is empty, triggers the MCRF error message.

**MCRA - Activate MCR Area, MCRD - Deactivate MCR Area**

MCRA and MCRD must always be used in pairs. Instructions programmed between MCRA and MCRD are dependent on the state of the MCR bit. The instructions that are programmed outside a MCRA-MCRD sequence are not dependent on the MCR bit state.

You must program the MCR dependency of functions (FCs) and function blocks (FBs) in the blocks themselves by using the MCRA instruction in the called block.

## 10.15 Important Notes on Using MCR Functions



---

### Take care with blocks in which the Master Control Relay was activated with MCRA

- If the MCR is deactivated, the value 0 is written by all assignments (T, =) in program segments between **MCR(** and **)MCR**.
  - The MCR is deactivated if the RLO was = 0 before an **MCR(** instruction.
- 



---

### Danger: PLC in STOP or undefined runtime characteristics!

The compiler also uses write access to local data behind the temporary variables defined in VAR\_TEMP for calculating addresses. This means the following command sequences will set the PLC to STOP or lead to undefined runtime characteristics:

#### Formal parameter access

- Access to components of complex FC parameters of the type STRUCT, UDT, ARRAY, STRING
- Access to components of complex FB parameters of the type STRUCT, UDT, ARRAY, STRING from the IN\_OUT area in a block with multiple instance capability (version 2 block).
- Access to parameters of a function block with multiple instance capability (version 2 block) if its address is greater than 8180.0.
- Access in a function block with multiple instance capability (version 2 block) to a parameter of the type BLOCK\_DB opens DB0. Any subsequent data access sets the CPU to STOP. T 0, C 0, FC0, or FB0 are also always used for TIMER, COUNTER, BLOCK\_FC, and BLOCK\_FB.

#### Parameter passing

- Calls in which parameters are passed.

#### LAD/FBD

- T branches and midline outputs in Ladder or FBD starting with RLO = 0.

#### Remedy

Free the above commands from their dependence on the MCR:

**1st** Deactivate the Master Control Relay using the MCRD instruction before the statement or network in question.

**2nd** Activate the Master Control Relay again using the MCRA instruction after the statement or network in question.

---

## 10.16 MCR( Save RLO in MCR Stack, Begin MCR

Important Notes on Using MCR Functions

### Format

**MCR(**

### Description

**MCR(** (open an MCR area) saves the RLO on the MCR stack and opens a MCR area. The MCR area is the instructions between the instruction **MCR(** and the corresponding instruction **)MCR**. The instruction **MCR(** must always be used in combination with the instruction **)MCR**.

If RLO=1, then the MCR is "on." The MCR-dependent instructions within this MCR zone execute normally.

If RLO=0, then the MCR is "off."

The MCR-dependent instructions within this MCR zone execute according to the table below.

### Instructions dependent on MCR Bit State

Signal State of MCR	= <bit>	S <bit>, R <bit>	T <byte>, T <word> T <double word>
0 ("OFF")	Writes 0. (Imitates a relay that falls to its quiet state when voltage is removed.)	Does not write. (Imitates a relay that remains in its current state when voltage is removed.)	Writes 0. (Imitates a component that produces a value of 0 when voltage is removed.)
1 ("ON")	Normal processing	Normal processing	Normal processing

The MCR( and )MCR instructions can be nested. The maximum nesting depth is eight instructions. The maximum number of possible stack entries is eight. Execution of MCR( with the stack full produces a MCR Stack Fault (MCRF).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

10.16 MCR( Save RLO in MCR Stack, Begin MCR

**Example**

STL		Explanation
MCRA		//Activate MCR area.
A	I 1.0	
MCR(		//Save RLO in MCR stack, open MCR area. MCR = "on" when RLO=1 //(I 1.0 ="1"); MCR = "off" when RLO=0 (I 1.0 ="0")
A	I 4.0	
=	Q 8.0	//If MCR = "off", then Q 8.0 is set to "0" regardless of I 4.0.
L	MW20	
T	QW10	//If MCR = "off", then "0" is transferred to QW10.
)MCR		//End MCR area.
MCRD		//Deactivate MCR area.
A	I 1.1	
=	Q 8.1	//These instructions are outside of the MCR area and are not dependent //upon the MCR bit.

## 10.17 )MCR End MCR

Important Notes on Using MCR Functions

### Format

)MCR

### Description

**)MCR** (end an MCR area) removes an entry from the MCR stack and ends an MCR area. The last MCR stack location is freed up and set to 1. The instruction MCR( must always be used in combination with the instruction )MCR. Execution of an )MCR instruction with the stack empty produces a MCR Stack Fault (MCRF).

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	1	-	0

### Example

STL	Explanation
MCRA	//Activate MCR area.
A I 1.0	
MCR(	//Save RLO in MCR stack; open MCR area. MCR = "on" when RLO=1
	//(I 1.0 ="1"); MCR = "off" when RLO=0 (I 1.0 ="0").
A I 4.0	
= Q 8.0	//If MCR = "off", then Q 8.0 is set to "0" regardless of I 4.0.
L MW20	
T QW10	//If MCR = "off", then "0" is transferred to QW10.
)MCR	//End MCR area.
MCRD	//Deactivate MCR area.
A I 1.1	
= Q 8.1	//These instructions are outside of the MCR area and are not
	//dependent upon the MCR bit.

## 10.18 MCRA Activate MCR Area

Important Notes on Using MCR Functions

### Format

**MCRA**

### Description

**MCRA** (Master Control Relay Activation) energizes the MCR dependency for the instructions following after it. The instruction MCRA must always be used in combination with the instruction MCRD (Master Control Relay Deactivation). The instructions programmed between MCRA and MCRD are dependent upon the signal state of the MCR bit.

The instruction is executed without regard to, and without affecting, the status word bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
MCRA	//Activate MCR area.
A I 1.0	
MCR(	//Save RLO in MCR stack, open MCR area. MCR = "on" when RLO=1
	//(I 1.0 ="1"); MCR = "off" when RLO=0 (I 1.0 ="0")
A I 4.0	
= Q 8.0	//If MCR = "off," then Q 8.0 is set to "0" regardless of I 4.0.
L MW20	
T QW10	//If MCR = "off," then "0" is transferred to QW10.
)MCR	//End MCR area.
MCRD	//Deactivate MCR area.
A I 1.1	
= Q 8.1	//These instructions are outside of the MCR area and are not
	//dependent upon the MCR bit.



## 10.19 MCRD Deactivate MCR Area

Important Notes on Using MCR Functions

### Format

**MCRD**

### Description

**MCRD** (Master Control Relay Deactivation) de-energizes the MCR dependency for the instructions following after it. The instruction MCRA (Master Control Relay Activation) must always be used in combination with the instruction MCRD (Master Control Relay Deactivation). The instructions that are programmed between MCRA and MCRD are dependent upon the signal state of the MCR bit.

The instruction is executed without regard to, and without affecting, the status word bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
MCRA	//Activate MCR area.
A I 1.0	
MCR(	//Save RLO in MCR stack, open MCR area. MCR = "on" when RLO=1
	//(I 1.0 ="1"); MCR = "off" when RLO=0 (I 1.0 ="0")
A I 4.0	
= Q 8.0	//If MCR = "off", then Q 8.0 is set to "0" regardless of I 4.0.
L MW20	
T QW10	//If MCR = "off", then "0" is transferred to QW10.
)MCR	//End MCR area.
MCRD	//Deactivate MCR area.
A I 1.1	
= Q 8.1	//These instructions are outside of the MCR area and are not dependent
	//upon the MCR bit.



# 11 Shift and Rotate Instructions

## 11.1 Shift Instructions

### 11.1.1 Overview of Shift Instructions

#### Description

You can use the Shift instructions to move the contents of the low word of accumulator 1 or the contents of the whole accumulator bit by bit to the left or the right (see also CPU Registers). Shifting by  $n$  bits to the left multiplies the contents of the accumulator by " $2^n$ "; shifting by  $n$  bits to the right divides the contents of the accumulator by " $2^n$ ". For example, if you shift the binary equivalent of the decimal value 3 to the left by 3 bits, you end up with the binary equivalent of the decimal value 24 in the accumulator. If you shift the binary equivalent of the decimal value 16 to the right by 2 bits, you end up with the binary equivalent of the decimal value 4 in the accumulator.

The number that follows the shift instruction or a value in the low byte of the low word of accumulator 2 indicates the number of bits by which to shift. The bit places that are vacated by the shift instruction are either filled with zeros or with the signal state of the sign bit (a 0 stands for positive and a 1 stands for negative). The bit that is shifted last is loaded into the CC 1 bit of the status word. The CC 0 and OV bits of the status word are reset to 0. You can use jump instructions to evaluate the CC 1 bit. The shift operations are unconditional, that is, their execution does not depend on any special conditions. They do not affect the result of logic operation.

The following Shift instructions are available:

- SSI Shift Sign Integer (16-Bit)
- SSD Shift Sign Double Integer (32-Bit)
- SLW Shift Left Word (16-Bit)
- SRW Shift Right Word (16-Bit)
- SLD Shift Left Double Word (32-Bit)
- SRD Shift Right Double Word (32-Bit)

## 11.1 Shift Instructions

## 11.1.2 SSI Shift Sign Integer (16-Bit)

## Format

**SSI**  
**SSI <number>**

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be shifted, range from 0 to 15

## Description

**SSI** (shift right with sign integer) shifts only the contents of ACCU 1- L to the right bit by bit. The bit places that are vacated by the shift instruction are filled with the signal state of the sign bit (bit 15). The bit that is shifted out last is loaded into the status word bit CC 1. The number of bit positions to be shifted is specified either by the address <number> or by a value in ACCU 2-L-L.

**SSI <number>**: The number of shifts is specified by the address <number>. The permissible value range is from 0 to 15. The CC 0 and OV status word bits are reset to 0 if <number> is greater than zero. If <number> is equal to zero, the shift instruction is regarded as a **NOP** operation.

**SSI**: The number of shifts is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. A shift number >16 always produces the same result (ACCU 1 = 16#0000, CC 1 = 0, or ACCU 1 = 16#FFFF, CC 1 = 1). If the shift number is greater than 0, the status word bits CC 0 and OV are reset to 0. If the shift number is zero, then the shift instruction is regarded as a **NOP** operation.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

## Examples

Contents	ACCU1-H				ACCU1-L				
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0	
before execution of <b>SSI 6</b>	0101	1111	0110	0100	1001	1101	0011	1011	
after execution of <b>SSI 6</b>	0101	1111	0110	0100	1111	1110	0111	0100	

**Example 1**

STL		Explanation
L	MW4	//Load value into ACCU 1.
SRW	6	//Shift bits with sign in ACCU 1 six places to the right.
T	MW8	//Transfer result to MW8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MW20	//Load contents of ACCU 1 into ACCU 2. Load value of MW20 into ACCU 1.
SRW		//Shift number is value of ACCU 2- L- L => Shift bits with sign in //ACCU 1-L three places to the right; fill free places with state of //sign bit.
JP	NEXT	//Jump to NEXT jump label if the bit shifted out last (CC 1) = 1.

## 11.1 Shift Instructions

## 11.1.3 SSD Shift Sign Double Integer (32-Bit)

## Format

SSD  
SSD <number>

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be shifted, range from 0 to 32

## Description

**SSD** (shift right with sign double integer) shifts the entire contents of ACCU 1 to the right bit by bit. The bit places that are vacated by the shift instruction are filled with the signal state of the sign bit. The bit that is shifted out last is loaded into the status word bit CC 1. The number of bit positions to be shifted is specified either by the address <number> or by a value in ACCU 2-L-L.

**SSD <number>**: The number of shifts is specified by the address <number>. The permissible value range is from 0 to 32. The CC 0 and OV status word bits are reset to 0 if <number> is greater than 0. If <number> is equal to 0, the shift instruction is regarded as a **NOP** operation.

**SSD**: The number of shifts is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. A shift number > 32 always produces the same result (ACCU 1 = 32#00000000, CC 1 = 0 or ACCU 1 = 32#FFFFFFFF, CC 1 = 1). If the shift number is greater than 0, the status word bits CC 0 and OV are reset to 0. If the shift number is zero, then the shift instruction is regarded as an **NOP** operation.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

## Examples

Contents	ACCU1-H				ACCU1-L				
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0	
before execution of <b>SSD 7</b>	1000	1111	0110	0100	0101	1101	0011	1011	
after execution of <b>SSD 7</b>	1111	1111	0001	1110	1100	1000	1011	1010	

**Example 1**

STL		Explanation
L	MD4	//Load value into ACCU 1.
SSD	7	//Shift bits in ACCU 1 seven places to the right, according to the sign.
T	MD8	//Transfer result to MD8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MD20	//Load contents of ACCU 1 into ACCU 2. Load value of MD20 into ACCU 1.
SSD		//Shift number is value of ACCU 2- L- L => Shift bits with sign in ACCU 1 //three places to the right, fill free places with state of sign bit.
JP	NEXT	//Jump to NEXT jump label if the bit shifted out last ( CC 1) = 1.

## 11.1 Shift Instructions

## 11.1.4 SLW Shift Left Word (16-Bit)

## Format

**SLW**  
**SLW <number>**

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be shifted, range from 0 to 15

## Description

**SLW** (shift left word) shifts only the contents of ACCU 1- L to the left bit by bit. The bit places that are vacated by the shift instruction are filled with zeros. The bit that is shifted out last is loaded into the status word bit CC 1. The number of bit positions to be shifted is specified either by the address <number> or by a value in ACCU 2-L-L.

**SLW <number>**: The number of shifts is specified by the address <number>. The permissible value range is from 0 to 15. The status word bits CC 0 and OV are reset to zero if <number> is greater than zero. If <number> is equal to zero, then the shift instruction is regarded as a **NOP** operation.

**SLW**: The number of shifts is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. A shift number >16 always produces the same result: ACCU 1- L = 0, CC 1 = 0, CC 0 = 0, and OV = 0. If 0 < shift number <= 16, the status word bits CC 0 and OV are reset to 0. If the shift number is zero, then the shift instruction is regarded as a **NOP** operation.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

## Examples

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>SLW 5</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>SLW 5</b>	0101	1111	0110	0100	1010	0111	0110	0000



**Example 1**

STL		Explanation
L	MW4	//Load value into ACCU 1.
SLW	5	//Shift the bits in ACCU 1 five places to the left.
T	MW8	//Transfer result to MW8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MW20	//Load contents of ACCU 1 into ACCU 2. Load value of MW20 into ACCU 1.
SLW		//Shift number is value of ACCU 2- L- L => Shift bits in ACCU 1-L //three places to the left.
JP	NEXT	//Jump to NEXT jump label if the bit shifted out last (CC 1) = 1.

## 11.1 Shift Instructions

## 11.1.5 SRW Shift Right Word (16-Bit)

## Format

**SRW**  
**SRW <number>**

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be shifted, range from 0 to 15

## Description

**SRW** (shift right word) shifts only the contents of ACCU 1- L to the right bit by bit. The bit places that are vacated by the shift instruction are filled with zeros. The bit that is shifted out last is loaded into the status bit CC 1. The number of bit positions to be shifted is specified either by the address <number> or by a value in ACCU 2-L-L.

**SRW <number>**: The number of shifts is specified by the address <number>. The permissible value range is from 0 to 15. The status word bits CC 0 and OV are reset to 0 if <number> is greater than zero. If <number> is equal to 0, the shift instruction is regarded as a **NOP** operation.

**SRW**: The number of shifts is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. A shift number >16 always produces the same result: ACCU 1- L = 0, CC 1 = 0, CC 0 = 0, and OV = 0. If 0 < shift number <= 16, the status word bits CC 0 and OV are reset to 0. If the shift number is zero, then the shift instruction is regarded as a **NOP** operation.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

## Examples

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>SRW 6</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>SRW 6</b>	0101	1111	0110	0100	0000	0001	0111	0100

**Example 1**

STL		Explanation
L	MW4	//Load value into ACCU 1.
SRW	6	//Shift bits in ACCU 1-L six places to the right.
T	MW8	//Transfer result to MW8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MW20	//Load contents of ACCU 1 into ACCU 2. Load value of MW20 into ACCU 1.
SRW		//Shift number is value of ACCU 2- L- L => Shift bits in ACCU 1-L //three places to the right.
SPP	NEXT	//Jump to NEXT jump label if the bit shifted out last (CC 1) = 1.

## 11.1 Shift Instructions

## 11.1.6 SLD Shift Left Double Word (32-Bit)

## Format

SLD  
SLD <number>

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be shifted, range from 0 to 32

## Description

**SLD** (shift left double word) shifts the entire contents of ACCU 1 to the left bit by bit. The bit places that are vacated by the shift instruction are filled with zeros. The bit that is shifted out last is loaded into the status word bit CC 1. The number of bit positions to be shifted is specified either by the address <number> or by a value in ACCU 2-L-L.

**SLD <number>**: The number of shifts is specified by the address <number>. The permissible value range is from 0 to 32. The status word bits CC 0 and OV are reset to zero if <number> is greater than zero. If <number> is equal to zero, then the shift instruction is regarded as a **NOP** operation.

**SLD**: The number of shifts is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. A shift number >32 always produces the same result: ACCU 1 = 0, CC 1 = 0, CC 0 = 0, and OV = 0. If 0 < shift number <= 32, the status word bits CC 0 and OV are reset to 0. If the shift number is zero, then the shift instruction is regarded as a **NOP** operation.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

## Examples

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>SLD 5</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>SLD 5</b>	1110	1100	1000	1011	1010	0111	0110	0000

**Example 1**

STL		Explanation
L	MD4	//Load value into ACCU 1.
SLD	5	//Shift bits in ACCU 1 five places to the left.
T	MD8	//Transfer result to MD8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MD20	//Load the contents of ACCU 1 into ACCU 2. Load value of MD20 into ACCU 1.
SLD		//Shift number is value of ACCU 2- L- L => Shift bits in ACCU 1 //three places to the left.
JP	NEXT	//Jump to NEXT jump label if the bit shifted out last (CC 1) = 1.

## 11.1 Shift Instructions

## 11.1.7 SRD Shift Right Double Word (32-Bit)

## Format

**SRD**  
**SRD <number>**

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be shifted, range from 0 to 32

## Description

**SRD** (shift right double word) shifts the entire contents of ACCU 1 to the right bit by bit. The bit places that are vacated by the shift instruction are filled with zeros. The bit that is shifted out last is loaded into the status word bit CC 1. The number of bit positions to be shifted is specified either by the address <number> or by a value in ACCU 2-L-L.

**SRD <number>**: The number of shifts is specified by the address <number>. The permissible value range is from 0 to 32. The status word bits CC 0 and OV are reset to 0 if <number> is greater than zero. If <number> is equal to 0, the shift instruction is regarded as a **NOP** operation.

**SRD**: The number of shifts is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. A shift number >32 always produces the same result: ACCU 1 = 0, CC 1 = 0, CC 0 = 0, and OV = 0. If 0 < shift number ≤ 32, the status word bits CC 0 and OV are reset to 0. If the shift number is zero, then the shift instruction is regarded as a **NOP** operation.

## Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

## Examples

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>SRD 7</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>SRD 7</b>	0000	0000	1011	1110	1100	1000	1011	1010

**Example 1**

STL		Explanation
L	MD4	//Load value into ACCU 1.
SRD	7	//Shift bits in ACCU 1 seven places to the right.
T	MD8	//Transfer result to MD8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MD20	//Load contents of ACCU 1 into ACCU 2. Load value of MD20 into ACCU 1.
SRD		//Shift number is value of ACCU 2- L- L => Shift bits in ACCU 1 three //places to the right.
JP	NEXT	//Jump to NEXT jump label if the bit shifted out last (CC 1) =1.

## 11.2 Rotate Instructions

### 11.2.1 Overview of Rotate Instructions

#### Description

You can use the Rotate instructions to rotate the entire contents of accumulator 1 bit by bit to the left or to the right (see also CPU Registers). The Rotate instructions trigger functions that are similar to the shift functions described in Section 14.1. However, the vacated bit places are filled with the signal states of the bits that are shifted out of the accumulator.

The number that follows the rotate instruction or a value in the low byte of the low word of accumulator 2 indicates the number of bits by which to rotate. Depending on the instruction, rotation takes place via the CC 1 bit of the status word. The CC 0 bit of the status word is reset to 0.

The following Rotate instructions are available:

- RLD Rotate Left Double Word (32-Bit)
- RRD Rotate Right Double Word (32-Bit)
- RLDA Rotate ACCU 1 Left via CC 1 (32-Bit)
- RRDA Rotate ACCU 1 Right via CC 1 (32-Bit)



## 11.2.2 RLD Rotate Left Double Word (32-Bit)

### Format

**RLD**  
**RLD <number>**

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be rotated, range from 0 to 32

### Description

**RLD** (rotate left double word) rotates the entire contents of ACCU1 to the left bit by bit. The bit places that are vacated by the rotate instruction are filled with the signal states of the bits that are shifted out of ACCU 1. The bit that is rotated last is loaded into the status bit CC 1. The number of bit positions to be rotated is specified either by the address <number> or by a value in ACCU 2-L-L.

**RLD <number>**: The number of rotations is specified by the address <number>. The permissible value range is from 0 to 32. The status word bits CC 0 and OV are reset to 0 if <number> is greater than zero. If <number> is equal to 0, the rotate instruction is regarded as a **NOP** operation.

**RLD**: The number of rotations is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. The status word bits CC 0 and OV are reset to 0 if the contents of ACCU 2-L-L are greater than zero. If the rotation number is zero, then the rotate instruction is regarded as an **NOP** operation.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

### Examples

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>RLD 4</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>RLD 4</b>	1111	0110	0100	0101	1101	0011	1011	0101

---

*11.2 Rotate Instructions***Example 1**

STL		Explanation
L	MD2	//Load value into ACCU 1.
RLD	4	//Rotate bits in ACCU 1 four places to the left.
T	MD8	//Transfer result to MD8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MD20	//Load contents of ACCU 1 into ACCU 2. Load value of MD20 into ACCU 1.
RLD		//Rotation number is value of ACCU 2- L- L => Rotate bits in ACCU 1 //three places to the left.
JP	NEXT	//Jump to NEXT jump label if the bit rotated out last (CC 1) = 1.

### 11.2.3 RRD Rotate Right Double Word (32-Bit)

#### Formate

**RRD**  
**RRD <number>**

Address	Data type	Description
<number>	integer, unsigned	number of bit positions to be rotated, range from 0 to 32

#### Description

**RRD** (rotate right double word) rotates the entire contents of ACCU 1 to the right bit by bit. The bit places that are vacated by the rotate instruction are filled with the signal states of the bits that are shifted out of ACCU 1. The bit that is rotated last is loaded into the status bit CC 1. The number of bit positions to be rotated is specified either by the address <number> or by a value in ACCU 2-L-L.

**RRD <number>**: The number of rotations is specified by the address <number>. The permissible value range is from 0 to 32. The status word bits CC 0 and OV are reset to 0 if <number> is greater than zero. If <number> equals zero, then the rotate instruction is regarded as a **NOP** operation.

**RRD**: The number of rotations is specified by the value in ACCU 2- L- L. The possible value range is from 0 to 255. The status word bits are reset to 0 if the contents of ACCU 2-L-L are greater than zero.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	x	x	-	-	-	-	-

#### Examples

Contents	ACCU1-H				ACCU1-L			
Bit	31 ...	..	..	... 16	15 ..	..	..	... 0
before execution of <b>RRD 4</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>RRD 4</b>	1011	0101	1111	0110	0100	0101	1101	0011

---

*11.2 Rotate Instructions***Example 1**

STL		Explanation
L	MD2	//Load value into ACCU 1.
RRD	4	//Rotate bits in ACCU 1 four places to the right.
T	MD8	//Transfer result to MD8.

**Example 2**

STL		Explanation
L	+3	//Load value +3 into ACCU 1.
L	MD20	//Load contents of ACCU 1 into ACCU 2. Load value of MD20 into ACCU 1.
RRD		//Rotation number is value of ACCU 2- L- L => Rotate bits in ACCU 1 //three places to the right.
JP	NEXT	//Jump to NEXT jump label if the bit rotated out last (CC 1) = 1.

### 11.2.4 RLDA Rotate ACCU 1 Left via CC 1 (32-Bit)

#### Format

**RLDA**

#### Description

**RLDA** (rotate left double word via CC 1) rotates the entire contents of ACCU 1 to the left by one bit position via CC 1. The status word bits CC 0 and OV are reset to 0.

#### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

#### Examples

Contents	CC 1	ACCU1-H				ACCU1-L			
Bit		31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>RLDA</b>	<b>X</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>RLDA</b>	<b>0</b>	1011	1110	1100	1000	1011	1010	0111	011 <b>X</b>
(X = 0 or 1, previous signal state of CC 1)									

STL	Explanation	
L MD2	//Load value of MD2 into ACCU 1.	
RLDA	//Rotate bits in ACCU 1 one place to the left via CC 1.	
JP NEXT	//Jump to NEXT jump label if the bit rotated out last (CC 1) = 1.	

11.2 Rotate Instructions

11.2.5 RRDA Rotate ACCU 1 Right via CC 1 (32-Bit)

Format

RRDA

Description

**RRDA** (rotate right double word via CC 1) rotates the entire contents of ACCU 1 to the right by one bit position. The status word bits CC 0 and OV are reset to 0.

Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

Examples

Contents	CC 1	ACCU1-H				ACCU1-L			
Bit		31 ...	..	..	... 16	15 ...	..	..	... 0
before execution of <b>RRDA</b>	<b>X</b>	0101	1111	0110	0100	0101	1101	0011	1011
after execution of <b>RRDA</b>	<b>1</b>	<b>X</b> 010	1111	1011	0010	0010	1110	1001	1101
(X = 0 or 1, previous signal state of CC 1)									

STL	Explanation	
L MD2	//Load value of MD2 into ACCU 1.	
RRDA	//Rotate bits in ACCU 1 one place to the right via CC 1.	
JP NEXT	//Jump to NEXT jump label if the bit rotated out last (CC 1) = 1.	

# 12 Timer Instructions

## 12.1 Overview of Timer Instructions

### Description

You can find information for setting and selecting the correct time under Location of a Timer in Memory and components of a Timer.

The following timer instructions are available:

- FR Enable Timer (Free)
- L Load Current Timer Value into ACCU 1 as Integer
- LC Load Current Timer Value into ACCU 1 as BCD
- R Reset Timer
- SD On-Delay Timer
- SE Extended Pulse Timer
- SF Off-Delay Timer
- SP Pulse Timer
- SS Retentive On-Delay Timer

## 12.2 Location of a Timer in Memory and Components of a Timer

### Area in Memory

Timers have an area reserved for them in the memory of your CPU. This memory area reserves one 16-bit word for each timer address. Programming with FBD supports supports 256 timers. Please refer to your CPU's technical information to establish the number of timer words available.

The following functions have access to the timer memory area:

- Timer instructions
- Updating of timer words by means of clock timing. This function of your CPU in the RUN mode decrements a given time value by one unit at the interval designated by the time base until the time value is equal to zero. The reduction is asynchronous to the user program. This means that the resulting time is always shorter by up to one interval of the time base.

### Time Value

Bits 0 through 9 of the timer word contain the time value in binary code. The time value specifies a number of units. Time updating decrements the time value by one unit at an interval designated by the time base. Decrementing continues until the time value is equal to zero. You can load a time value into the low word of accumulator 1 in binary, hexadecimal, or binary coded decimal (BCD) format.

You can pre-load a time value using either of the following formats:

- **W#16#txyz**  
Where t = the time base (that is, the time interval or resolution)  
Where xyz = the time value in binary coded decimal format
- **S5T#aH\_bM\_cS\_dMS**  
Where H = hours, M = minutes, S = seconds, and MS = milliseconds;  
user variables are: a, b, c, d  
The time base is selected automatically, and the value is rounded to the next lower number with that time base.

The maximum time value that you can enter is 9,990 seconds, or 2H\_46M\_30S.



## 12.2 Location of a Timer in Memory and Components of a Timer

**Time Base**

Bits 12 and 13 of the timer word contain the time base in binary code. The time base defines the interval at which the time value is decremented by one unit. The smallest time base is 10 ms; the largest is 10 s.

Time Base	Binary Code for the Time Base
10 ms	00
100 ms	01
1 s	10
10 s	11


Values must not exceed 2h\_46m\_30s. Values that are too high for a range or resolution are rounded down. The general format for S5TIME has the following limits:

Resolution	Range
0.01 second	10MS to 9S_990MS
0.1 second	100MS to 1M_39S_900MS
1 second	1S to 16M_39S
10 seconds	10S to 2H_46M_30S

**Bit Configuration in ACCU 1**


When a timer is started, the contents of ACCU1 are used as the time value. Bits 0 through 11 of the ACCU1-L hold the time value in binary coded decimal format (BCD format: each set of four bits contains the binary code for one decimal value). Bits 12 and 13 hold the time base in binary code.

The following figure shows the contents of ACCU1-L loaded with timer value 127 and a time base of 1 second:

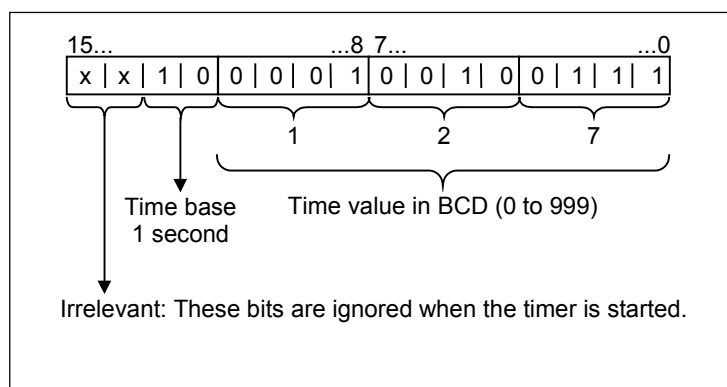

### Choosing the right Timer

This overview is intended to help you choose the right timer for your timing job.

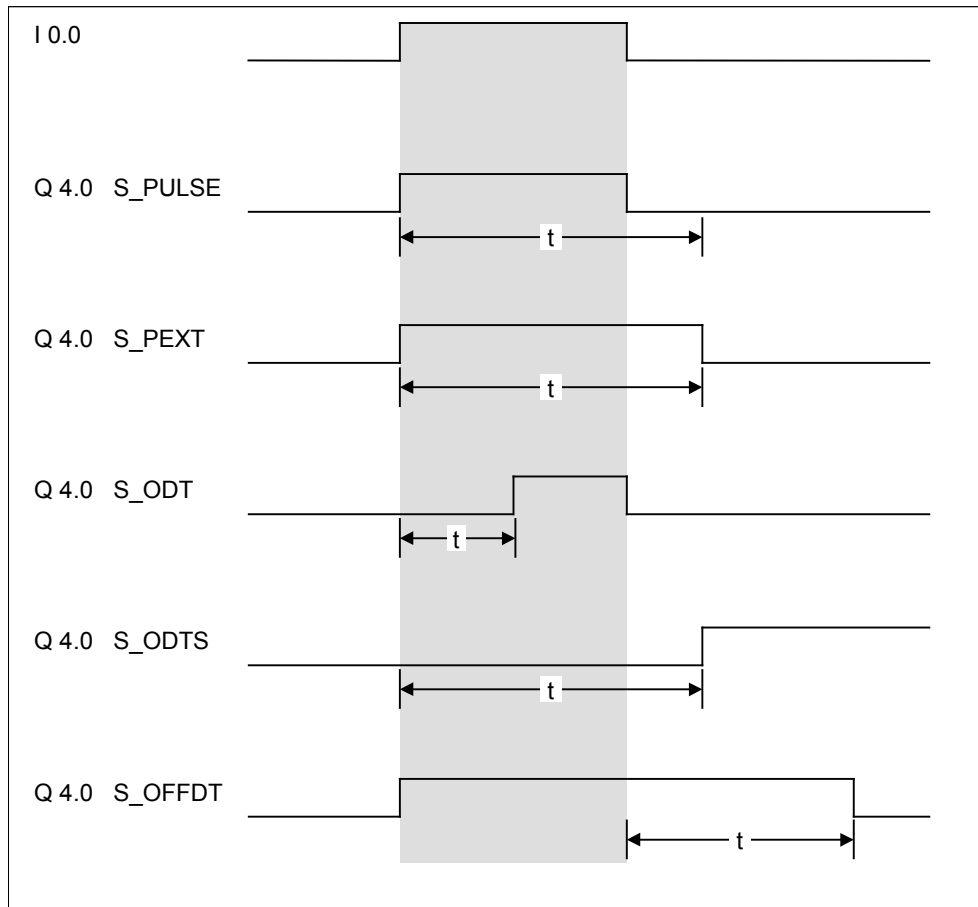

Timer	Description
<b>S_PULSE</b> Pulse timer	The maximum time that the output signal remains at 1 is the same as the programmed time value t. The output signal stays at 1 for a shorter period if the input signal changes to 0.
<b>S_PEXT</b> Extended pulse timer	The output signal remains at 1 for the programmed length of time, regardless of how long the input signal stays at 1.
<b>S_ODT</b> On-delay timer	The output signal changes to 1 only when the programmed time has elapsed and the input signal is still 1.
<b>S_ODTS</b> Retentive on-delay timer	The output signal changes from 0 to 1 only when the programmed time has elapsed, regardless of how long the input signal stays at 1.
<b>S_OFFDT</b> Off-delay timer	The output signal changes to 1 when the input signal changes to 1 or while the timer is running. The time is started when the input signal changes from 1 to 0.

## 12.3 FR Enable Timer (Free)

### Format

FR <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

When the RLO transitions from "0" to "1", **FR <timer>** clears the edge-detecting flag that is used for starting the addressed timer. A change in the RLO bit from 0 to 1 in front of an enable instruction (FR) enables a timer.

Timer enable is not required to start a timer, nor is it required for normal timer instruction. An enable is used only to re-trigger a running timer, that is, to restart a timer. The restarting is possible only when the start instruction continues to be processed with RLO = 1.


### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	0	-	-	0

### Example

STL	Explanation
A I 2.0	
FR T1	//Enable timer T1.
A I 2.1	
L S5T#10s	//Preset 10 seconds into ACCU 1.
SI T1	//Start timer T1 as a pulse timer.
A I 2.2	
R T1	//Reset timer T1.
A T1	//Check signal state of timer T1.
= Q 4.0	
L T1	//Load current time value of timer T1 as a binary number.
T MW10	

12.3 FR Enable Timer (Free)

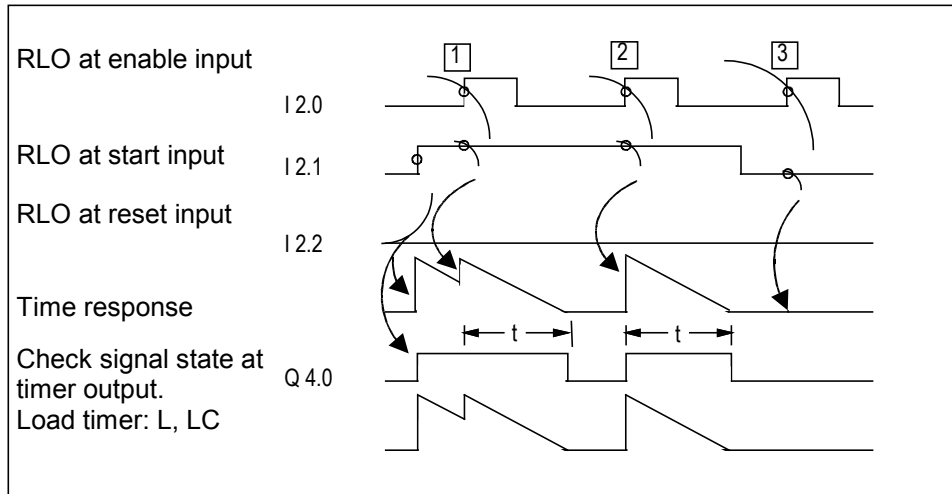

$t$  = programmed time interval

- (1) A change in the RLO from 0 to 1 at the enable input while the timer is running completely restarts the timer. The programmed time is used as the current time for the restart. A change in the RLO from 1 to 0 at the enable input has no effect.
- (2) If the RLO changes from 0 to 1 at the enable input while the timer is not running and there is still an RLO of 1 at the start input, the timer will also be started as a pulse with the time programmed.
- (3) A change in the RLO from 0 to 1 at the enable input while there is still an RLO of at the start input has no effect on the timer.

## 12.4 L Load Current Timer Value into ACCU 1 as Integer

### Format

L <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction


L <timer> loads the current timer value from the addressed timer word without a time base as a binary integer into ACCU 1-L after the contents of ACCU 1 have been saved into ACCU 2.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L T1	//Load ACCU 1-L with the current timer value of timer T1 in binary code.

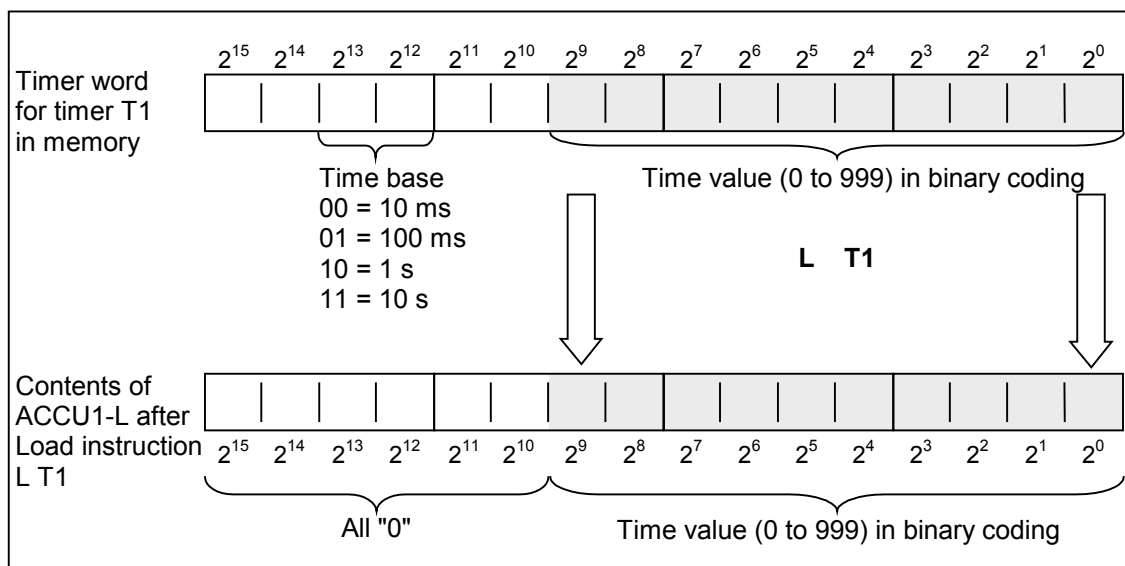

*12.4 L Load Current Timer Value into ACCU 1 as Integer*

---

**Note**

L <timer> loads only the binary code of the current timer value into ACCU1-L, and not the time base. The time loaded is the initial value minus the time elapsed since the timer was started.

---

## 12.5 LC Load Current Timer Value into ACCU 1 as BCD

### Format

LC <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

**LC <timer>** loads the current timer value and time base from the addressed timer word as a Binary Coded Decimal (BCD) number into ACCU 1 after the content of ACCU 1 has been saved into ACCU 2.


### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

12.5 LC Load Current Timer Value into ACCU 1 as BCD

**Example**

STL	Explanation
LC T1	//Load ACCU 1-L with the time base and current timer value of timer T1 in //binary coded decimal (BCD) format.

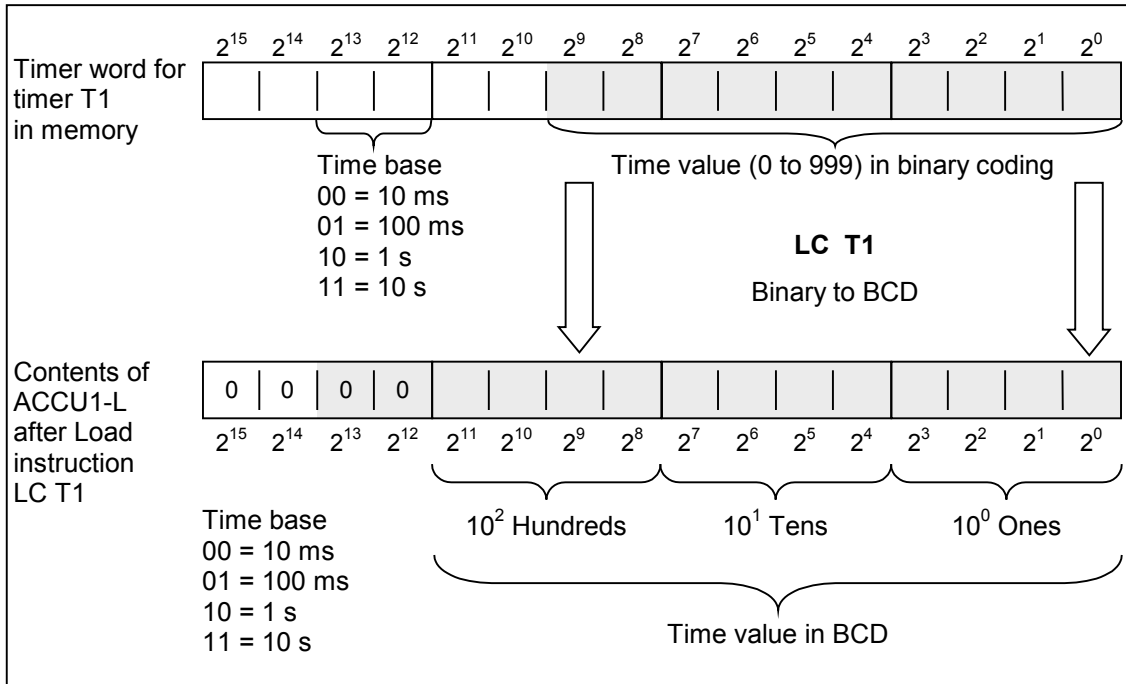



## 12.6 R Reset Timer

### Format

R <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

R <timer> stops the current timing function and clears the timer value and the time base of the addressed timer word if the RLO transitions from 0 to 1.

### Status word

	BIE	A1	A0	OV	OS	OR	STA	VKE	/ER
writes:	-	-	-	-	-	0	-	-	0

### Example

STL	Explanation
A I 2.1	
R T1	//Check the signal state of input I 2.1 If RLO transitioned from //0 = 1, then reset timer T1.

## 12.7 SP Pulse Timer

### Format

SP <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

**SP <timer>** starts the addressed timer when the RLO transitions from "0" to "1". The programmed time elapses as long as RLO = 1. The timer is stopped if RLO transitions to "0" before the programmed time interval has expired. This timer start command expects the time value and the time base to be stored as a BCD number in ACCU 1-L.


See also Location of a Timer in Memory and components of a Timer.

### Status word

	BIE	A1	A0	OV	OS	OR	STA	VKE	/ER
writes:	-	-	-	-	-	0	-	-	0

**Example**

STL	Explanation
A I 2.0	
FR T1	//Enable timer T1.
A I 2.1	
L S5T#10s	//Preset 10 seconds into ACCU 1.
SP T1	//Start timer T1 as a pulse timer.
A I 2.2	
R T1	//Reset timer T1.
A T1	//Check signal state of timer T1.
= Q 4.0	
L T1	//Load current time value of timer T1 as binary.
T MW10	
LC T1	//Load current time value of timer T1 as BCD.
T MW12	

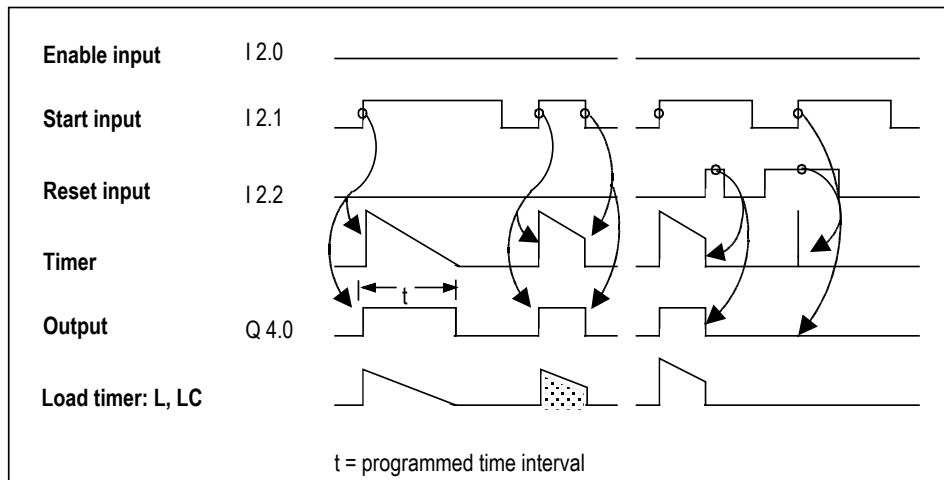

## 12.8 SE Extended Pulse Timer

### Format

SE <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

**SE <timer>** starts the addressed timer when the RLO transitions from "0" to "1". The programmed time interval elapses, even if the RLO transitions to "0" in the meantime. The programmed time interval is started again if RLO transitions from "0" to "1" before the programmed time has expired. This timer start command expects the time value and the time base to be stored as a BCD number in ACCU 1-L.


See also Location of a Timer in Memory and components of a Timer.

### Status word

	BIE	A1	A0	OV	OS	OR	STA	VKE	/ER
writes:	-	-	-	-	-	0	-	-	0

## Example

STL	Explanation
A I 2.0	
FR T1	//Enable timer T1.
A I 2.1	
L S5T#10s	//Preset 10 seconds into ACCU 1.
SE T1	//Start timer T1 as an extended pulse timer.
A I 2.2	
R T1	//Reset timer T1.
A T1	//Check signal state of timer T1.
= Q 4.0	
L T1	//Load current timer value of timer T1 as binary.
T MW10	
LC T1	//Load current timer value of timer T1 as BCD.
T MW12	

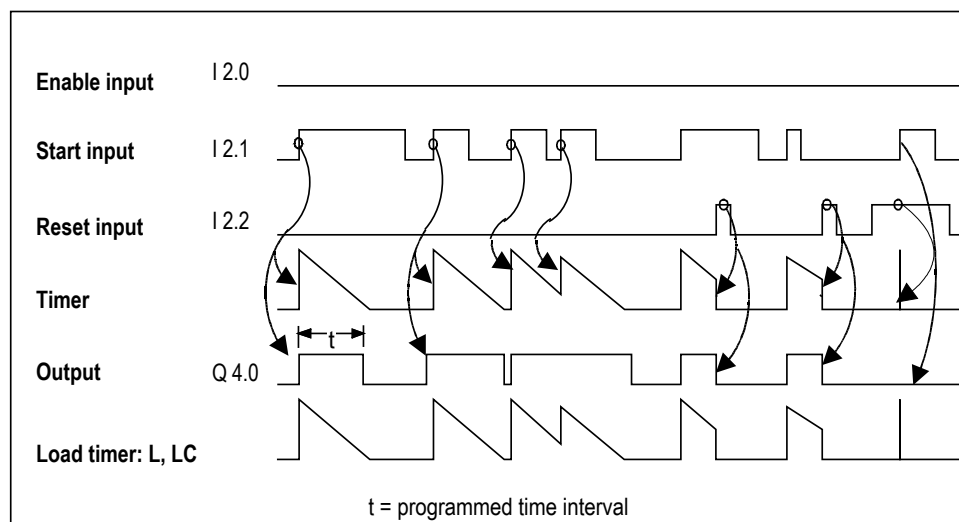

## 12.9 SD On-Delay Timer

### Format

SD <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

**SD <timer>** starts the addressed timer when the RLO transitions from "0" to "1". The programmed time interval elapses as long as RLO = 1. The time is stopped if RLO transitions to "0" before the programmed time interval has expired. This timer start instruction expects the time value and the time base to be stored as a BCD number in ACCU 1-L.


See also Location of a Timer in Memory and components of a Timer.

### Status word

	BIE	A1	A0	OV	OS	OR	STA	VKE	/ER
writes:	-	-	-	-	-	0	-	-	0

## Example

STL	Explanation
A I 2.0	
FR T1	//Enable timer T1.
A I 2.1	
L S5T#10s	//Preset 10 seconds into ACCU 1.
SD T1	//Start timer T1 as an on-delay timer.
A I 2.2	
R T1	//Reset timer T1.
A T1	//Check signal state of timer T1.
= Q 4.0	
L T1	//Load current timer value of timer T1 as binary.
T MW10	
LC T1	//Load current timer value of timer T1 as BCD.
T MW12	

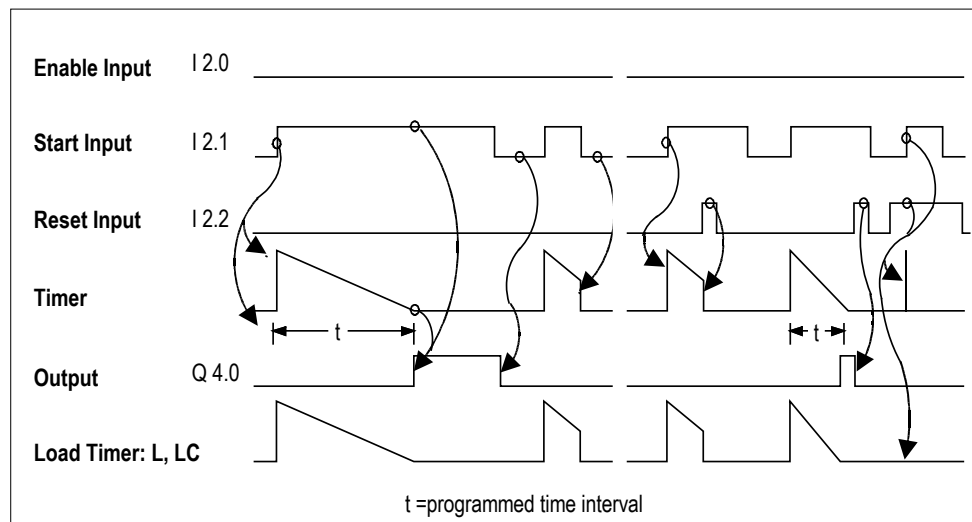

## 12.10 SS Retentive On-Delay Timer

### Format

SS <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

**SS <timer>** (start timer as a retentive ON timer) starts the addressed timer when the RLO transitions from "0" to "1". The full programmed time interval elapses, even if the RLO transitions to "0" in the meantime. The programmed time interval is re-triggered (started again) if RLO transitions from "0" to "1" before the programmed time has expired. This timer start command expects the time value and the time base to be stored as a BCD number in ACCU 1-L.

See also Location of a Timer in Memory and components of a Timer.


### Status word

	BIE	A1	A0	OV	OS	OR	STA	VKE	/ER
writes:	-	-	-	-	-	0	-	-	0



**Example**

STL	Explanation
A I 2.0	
FR T1	//Enable timer T1.
A I 2.1	
L S5T#10s	//Preset 10 seconds into ACCU 1.
SS T1	//Start timer T1 as a retentive on-delay timer.
A I 2.2	
R T1	//Reset timer T1.
A T1	//Check signal state of timer T1.
= Q 4.0	
L T1	//Load current time value of timer T1 as binary.
T MW10	
LC T1	//Load current time value of timer T1 as BCD.
T MW12	

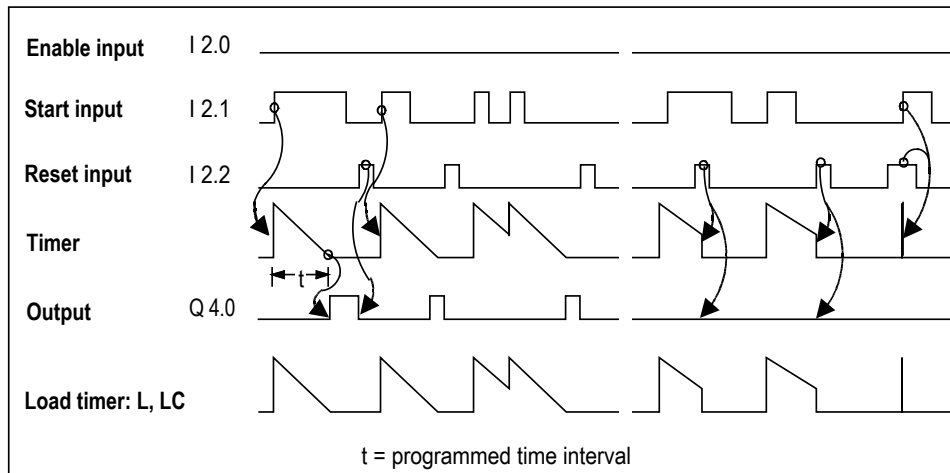

## 12.11 SF Off-Delay Timer

### Format

SF <timer>

Address	Data type	Memory area	Description
<timer>	TIMER	T	Timer number, range depends on CPU

### Description of instruction

**SF <timer>** starts the addressed timer when the RLO transitions from "1" to "0". The programmed time elapses as long as RLO = 0. The time is stopped if RLO transitions to "1" before the programmed time interval has expired. This timer start command expects the time value and the time base to be stored as a BCD number in ACCU 1-L.


See also Location of a Timer in Memory and components of a Timer.

### Status word

	BIE	A1	A0	OV	OS	OR	STA	VKE	/ER
writes:	-	-	-	-	-	0	-	-	0

## Example

STL	Explanation
A I 2.0	
FR T1	//Enable timer T1.
A I 2.1	
L S5T#10s	//Preset 10 seconds into ACCU 1.
SF T1	//Start timer T1 as an off-delay timer.
A I 2.2	
R T1	//Reset timer T1.
A T1	//Check signal state of timer T1.
= Q 4.0	
L T1	//Load current timer value of timer T1 as binary.
T MW10	
LC T1	//Load current timer value of timer T1 as BCD.
T MW12	

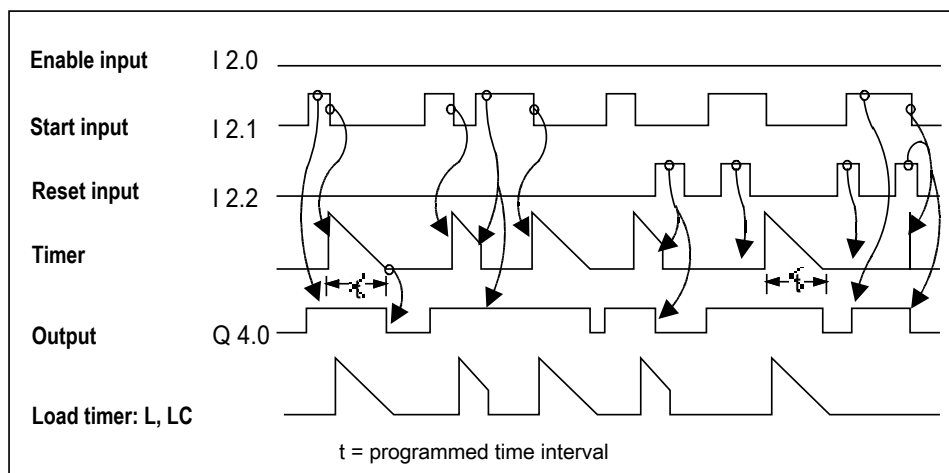

12.11 SF *Off-Delay Timer*

# 13 Word Logic Instructions

## 13.1 Overview of Word Logic Instructions

### Description

Word logic instructions compare pairs of words (16 bits) and double words (32 bits) bit by bit, according to Boolean logic. Each word or double word must be in one of the two accumulators.

For words, the contents of the low word of accumulator 2 is combined with the contents of the low word of accumulator 1. The result of the combination is stored in the low word of accumulator 1, overwriting the old contents.

For double words, the contents of accumulator 2 is combined with the contents of accumulator 1. The result of the combination is stored in accumulator 1, overwriting the old contents.

If the result does not equal 0, bit CC 1 of the status word is set to "1". If the result does equal 0, bit CC 1 of the status word is set to "0".

The following instructions are available for performing Word Logic operations:

- AW AND Word (16-Bit)
- OW OR Word (16-Bit)
- XOW Exclusive OR Word (16-Bit)
- AD AND Double Word (32-Bit)
- OD OR Double Word (32-Bit)
- XOD Exclusive OR Double Word (32-Bit)

## 13.2 AW AND Word (16-Bit)

### Format

**AW**  
**AW <constant>**

Address	Data type	Description
<constant>	WORD, 16-bit constant	Bit pattern to be combined with ACCU 1-L by AND

### Description of instruction

**AW** (AND word) combines the contents of ACCU 1-L with ACCU 2-L or a 16 bit-constant bit by bit according to the Boolean logic operation AND. A bit in the result word is "1" only when the corresponding bits of both words combined in the logic operation are "1". The result is stored in ACCU 1-L. ACCU 1-H and ACCU 2 (and ACCU 3 and ACCU 4 for CPUs with four ACCUs) remain unchanged. The status bit CC 1 is set as a result of the operation (CC 1 = 1 if result is unequal to zero). The status word bits CC 0 and OV are reset to 0.

**AW:** Combines ACCU 1-L with ACCU 2-L.

**AW <constant>:** Combines ACCU 1 with a 16-bit constant.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

### Examples

Bit	15 ...	..	..	... 0
ACCU 1-L before execution of <b>AW</b>	0101	1001	0011	1011
ACCU 2-L or 16-bit constant:	1111	0110	1011	0101
Result (ACCU 1-L) after execution of <b>AW</b>	0101	0000	0011	0001

**Example 1**

STL		Explanation
L	IW20	//Load contents of IW20 into ACCU 1-L.
L	IW22	//Load contents of ACCU 1 into ACCU 2. Load contents of IW22 into //ACCU 1-L.
AW		//Combine bits from ACCU 1-L with ACCU 2-L bits by AND; store result in //ACCU 1-L.
T	MW 8	//Transfer result to MW8.

**Example 2**

STL		Explanation
L	IW20	//Load contents of IW20 into ACCU 1-L.
AW	W#16#0FFF	//Combine bits of ACCU 1-L with bit pattern of 16-bit constant //(0000_1111_1111_1111) by AND; store result in ACCU 1-L.
JP	NEXT	//Jump to NEXT jump label if result is unequal to zero, (CC 1 = 1).

## 13.3 OW OR Word (16-Bit)

### Format

**OW**  
**OW <constant>**

Address	Data type	Description
<constant>	WORD, 16-bit constant	Bit pattern to be combined with ACCU 1-L by OR

### Description of instruction

**OW** (OR word) combines the contents of ACCU 1-L with ACCU 2-L or a 16 bit-constant bit by bit according to the Boolean logic operation OR. A bit in the result word is "1" when at least one of the corresponding bits of both words combined in the logic operation is "1". The result is stored in ACCU 1-L. ACCU 1-H and ACCU 2 (and ACCU 3 and ACCU 4 for CPUs with four ACCUs) remain unchanged. The instruction is executed without regard to, and without affecting, the RLO. The status bit CC 1 is set as a result of the operation (CC 1 = 1 if result is unequal to zero). The status word bits CC 0 and OV are reset to 0.

**OW:** Combines ACCU 1-L with ACCU 2-L.

**OW <constant>:** Combines ACCU 1-L with a 16-bit constant.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

### Examples

Bit	15 ...	..	..	... 0
ACCU 1-L before execution of <b>OW</b>	0101	0101	0011	1011
ACCU 2-L or 16 bit constant:	1111	0110	1011	0101
Result (ACCU 1-L) after execution of <b>OW</b>	1111	0111	1011	1111



**Example 1**

STL		Explanation
L	IW20	//Load contents of IW20 into ACCU 1-L.
L	IW22	//Load contents of ACCU 1 into ACCU 2. Load contents of IW22 into //ACCU 1-L.
OW		//Combine bits from ACCU 1-L with ACCU 2-L by OR, store result in //ACCU 1-L.
T	MW8	//Transfer result to MW8.

**Example 2**

STL		Explanation
L	IW20	//Load contents of IW 20 into ACCU 1-L.
OW	W#16#0FFF	//Combine bits of ACCU 1-L with bit pattern of 16-bit constant //(0000_1111_1111_1111) by OR; store result in ACCU 1-L.
JP	NEXT	//Jump to NEXT jump label if result is unequal to zero (CC 1 = 1).

## 13.4 XOW Exclusive OR Word (16-Bit)

### Format

**XOW**  
**XOW <constant>**

Address	Data type	Description
<constant>	WORD, 16-bit constant	Bit pattern to be combined with ACCU 1-L by XOR (Exclusive Or)

### Description of instruction

**XOW** (XOR word) combines the contents of ACCU 1-L with ACCU 2-L or a 16 bit-constant bit by bit according to the Boolean logic operation XOR. A bit in the result word is "1" only when one of the corresponding bits of both words combined in the logic operation is "1". The result is stored in ACCU 1-L. ACCU 1-H and ACCU 2 remain unchanged. The status bit CC 1 is set as a result of the operation (CC 1 = 1 if result is unequal to zero). The status word bits CC 0 and OV are reset to 0.

You can use the Exclusive OR function several times. The result of logic operation is then "1" if an impair number of checked addresses ist "1".

**XOW:** Combines ACCU 1-L with ACCU 2-L.

**XOW <constant>:** Combines ACCU 1-L with a 16-bit constant.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

### Examples

Bit	15 . . .	..	..	. . . 0
ACCU 1 before execution of <b>XOW</b>	0101	0101	0011	1011
ACCU 2-L or 16-bit constant:	1111	0110	1011	0101
Result (ACCU 1) after execution of <b>XOW</b>	1010	0011	1000	1110

**Example 1**

STL		Explanation
L	IW20	//Load contents of IW20 into ACCU 1-L.
L	IW22	//Load contents of ACCU 1 into ACCU 2. Load contents of ID24 into ACCU 1-L.
XOW		//Combine bits of ACCU 1-L with ACCU 2-L bits by XOR, store result in //ACCU 1-L.
T	MW8	//Transfer result to MW8.

**Example 2**

STL		Explanation
L	IW20	//Load contents of IW20 into ACCU 1-L.
XOW	16#0FFF	//Combine bits of ACCU 1-L with bit pattern of 16-bit constant //(0000_1111_1111_1111) by XOR, store result in ACCU 1-L.
JP	NEXT	//Jump to NEXT jump label if result is unequal to zero, (CC 1 = 1).

## 13.5 AD AND Double Word (32-Bit)

### Format

**AD**  
**AD <constant>**

Address	Data type	Description
<constant>	DWORD, 32-bit constant	Bit pattern to be combined with ACCU 1 by AND

### Description of instruction

**AD** (AND double word) combines the contents of ACCU 1 with ACCU 2 or a 32-bit constant bit by bit according to the Boolean logic operation AND. A bit in the result double word is "1" only when the corresponding bits of both double words combined in the logic operation are "1". The result is stored in ACCU 1. ACCU 2 (and ACCU 3 and ACCU 4 for CPU's with four ACCUs) remains unchanged. The status bit CC 1 is set as a result of the operation (CC 1 = 1 if result is unequal to zero). The status word bits CC 0 and OV are reset to 0.

**AD**: Combines ACCU 1 with ACCU 2.

**AD <constant>**: Combines ACCU 1 with a 32-bit constant.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

### Examples

Bit	31	..	..	..	..	..	..	..	0
ACCU 1 before execution of <b>UD</b>	0101	0000	1111	1100	1000	1001	0011	1011	
ACCU 2 or 32-bit constant	1111	0011	1000	0101	0111	0110	1011	0101	
Result (ACCU 1) after execution of <b>UD</b>	0101	0000	1000	0100	0000	0000	0011	0001	

**Example 1**

STL		Explanation
L	ID20	//Load contents of ID20 into ACCU 1.
L	ID24	//Load contents of ACCU 1 into ACCU 2. Load contents of ID24 //into ACCU 1.
AD		//Combine bits from ACCU 1 with ACCU 2 by AND, store result in //ACCU 1.
T	MD8	//Transfer result to MD8.

**Example 2**

STL		Explanation
L	ID 20	//Load contents of ID20 into ACCU 1.
AD	DW#16#0FFF_EF21	//Combine bits of ACCU 1 with bit pattern of 32-bit constant ( //0000_1111_1111_1110_1111_0010_0001) by AND; store result in //ACCU 1.
JP	NEXT	//Jump to NEXT jump label if result is unequal to zero, //(CC 1 = 1).

## 13.6 OD OR Double Word (32-Bit)

### Format

**OD**  
**OD <constant>**

Address	Data type	Description
<constant>	DWORD, 32-bit constant	Bit pattern to be combined with ACCU 1 by OR

### Description of instruction

**OD** (OR double word) combines the contents of ACCU 1 with ACCU 2 or a 32-bit constant bit by bit according to the Boolean logic operation OR. A bit in the result double word is "1" when at least one of the corresponding bits of both double words combined in the logic operation is "1". The result is stored in ACCU 1. ACCU 2 (and ACCU 3 and ACCU 4 for CPUs with four ACCUs) remains unchanged. The status bit CC 1 is set as a function of the result of the operation (CC 1 = 1 if result is unequal to zero). The status word bits CC 0 and OV are reset to 0.

**OD**: Combines ACCU 1 with ACCU 2.

**OD <constant>**: Combines ACCU 1 with a 32-bit constant.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

### Examples

Bit	31	..	..	..	..	..	..	..	0
ACCU 1 before execution of <b>OD</b>	0101	0000	1111	1100	1000	0101	0011	1011	
ACCU 2 or 32-bit constant:	1111	0011	1000	0101	0111	0110	1011	0101	
Result (ACCU 1) after execution of <b>OD</b>	1111	0011	1111	1101	1111	0111	1011	1111	

**Example 1**

STL		Explanation
L	ID20	//Load contents of ID20 into ACCU 1.
L	ID24	//Load contents of ACCU 1 into ACCU 2. Load contents of ID24 //into ACCU 1.
OD		//Combine bits from ACCU 1 with ACCU 2 bits by OR; store result //in ACCU 1.
T	MD8	//Transfer result to MD8.

**Example 2**

STL		Explanation
L	ID20	//Load contents of ID20 into ACCU 1.
OD	DW#16#0FFF_EF21	//Combine bits of ACCU 1 with bit pattern of 32-bit constant //(0000_1111_1111_1111_1110_1111_0010_0001) by OR, store result in //ACCU 1.
JP	NEXT	//Jump to NEXT jump label if result is not equal to zero, //(CC 1 = 1).

## 13.7 XOD Exclusive OR Double Word (32-Bit)

### Format

**XOD**  
**XOD <constant>**

Address	Data type	Description
<constant>	DWORD, 32-bit constant	Bit pattern to be combined with ACCU 1 by XOR (Exclusive Or).

### Description of instruction

**XOD** (XOR double word) combines the contents of ACCU 1 with ACCU 2 or a 32-bit constant bit by bit according to the Boolean logic operation XOR (Exclusive Or). A bit in the result double word is "1" when only one of the corresponding bits of both double words combined in the logic operation is "1". The result is stored in ACCU 1. ACCU 2 remains unchanged. The status bit CC 1 is set as a result of the operation (CC 1 = 1 if result is not equal to zero). The status word bits CC 0 and OV are reset to 0.

You can use the Exclusive OR function several times. The result of logic operation is then "1" if an impair number of checked addresses ist "1".

**XOD**: Combines ACCU 1 with ACCU 2.

**XOD <constant>**: Combines ACCU 1 with a 32-bit constant.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	x	0	0	-	-	-	-	-

### Examples

Bit	31	..	..	..	..	..	..	..	0
ACCU 1 before execution of <b>XOD</b>	0101	0000	1111	1100	1000	0101	0011	1011	
ACCU 2 or 32-bit constant	1111	0011	1000	0101	0111	0110	1011	0101	
Result (ACCU 1) after execution of <b>XOD</b>	1010	0011	0111	1001	1111	0011	1000	1110	



**Example 1**

STL	Explanation
L ID20	//Load contents of ID20 into ACCU 1.
L ID24	//Load contents of ACCU 1 into ACCU 2. Load contents of ID24 //into ACCU 1.
XOD	//Combine bits from ACCU 1 with ACCU 2 by XOR; store result in //ACCU 1.
T MD8	//Transfer result to MD8.

**Example 2**

STL	Explanation
L ID20	//Load contents of ID20 into ACCU 1.
XOD DW#16#0FFF_EF21	//Combine bits from ACCU 1 with bit pattern of 32-bit constant //(0000_1111_1111_1111_1110_0010_0001) by XOR, //store result in ACCU 1.
JP NEXT	//Jump to NEXT jump label if result is unequal to zero, //(CC 1 = 1).

13.7 XOD *Exclusive OR Double Word (32-Bit)*

# 14 Accumulator Instructions

## 14.1 Overview of Accumulator and Address Register Instructions

### Description

The following instructions are available to you for handling the contents of one or both accumulators:

- TAK Toggle ACCU 1 with ACCU 2
- PUSH CPU with Two ACCUs
- PUSH CPU with Four ACCUs
- POP CPU with Two ACCUs
- POP CPU with Four ACCUs
  
- ENT Enter ACCU Stack
- LEAVE Leave ACCU Stack
- INC Increment ACCU 1-L-L
- DEC Decrement ACCU 1-L-L
  
- +AR1 Add ACCU 1 to Address Register 1
- +AR2 Add ACCU 1 to Address Register 2
  
- BLD Program Display Instruction (Null)
- NOP 0 Null Instruction
- NOP 1 Null Instruction

See also

- CAW Change Byte Sequence in ACCU 1-L (16-Bit)
- CAD Change Byte Sequence in ACCU 1 (32-Bit)

14.2 TAK Toggle ACCU 1 with ACCU 2

## 14.2 TAK Toggle ACCU 1 with ACCU 2

### Format

TAK

### Description

TAK (toggle ACCU 1 with ACCU 2) exchanges the contents of ACCU 1 with the contents of ACCU 2. The instruction is executed without regard to, and without affecting, the status bits. The contents of ACCU 3 and ACCU 4 remain unchanged for CPUs with four ACCU s.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example: Subtract smaller value from greater value

STL	Explanation
L MW10	//Load contents of MW10 into ACCU 1-L.
L MW12	//Load contents of ACCU 1-L into ACCU 2-L. Load contents of MW12 //into ACCU 1-L.
>I	//Check if ACCU 2-L (MW10) greater than ACCU 1-L (MW12).
SPB NEXT	//Jump to NEXT jump label if ACCU 2 (MW10) is greater than //ACCU 1 (MW12).
TAK	//Swap contents ACCU 1 and ACCU 2
NEXT: -I	//Subtract contents of ACCU 2-L from contents of ACCU 1-L.
T MW14	//Transfer result (= greater value minus smaller value) to MW14.

Contents	ACCU 1	ACCU 2
before executing <b>TAK</b> instruction	<MW12>	<MW10>
after executing <b>TAK</b> instruction	<MW10>	<MW12>

## 14.3 POP CPU with Two ACCUs

### Format

POP

### Description

POP (CPU with two ACCUs) copies the entire contents of ACCU 2 to ACCU 1. ACCU 2 remains unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
T MD10	//Transfer contents of ACCU 1 (= value A) to MD10
POP	//Copy entire contents of ACCU 2 to ACCU 1
T MD14	//Transfer contents of ACCU 1 (= value B) to MD14

Contents	ACCU 1	ACCU 2
before executing POP instruction	value A	value B
after executing POP instruction	value B	value B

## 14.4 POP CPU with Four ACCUs

### Format

POP

### Description

POP (CPU with four ACCUs) copies the entire contents of ACCU 2 to ACCU 1, the contents of ACCU 3 to ACCU 2, and the contents of ACCU 4 to ACCU 3. ACCU 4 remains unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
T MD10	//Transfer contents of ACCU 1 (= value A) to MD10
POP	//Copy entire contents of ACCU 2 to ACCU 1
T MD14	//Transfer contents of ACCU 1 (= value B) to MD14

Contents	ACCU 1	ACCU 2	ACCU 3	ACCU 4
before executing POP instruction	value A	value B	value C	value D
after executing POP instruction	value B	value C	value D	value D

## 14.5 PUSH CPU with Two ACCUs

### Format

PUSH

### Description

PUSH (ACCU 1 to ACCU 2) copies the entire contents of ACCU 1 to ACCU 2. ACCU 1 remains unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L MW10	//Load the contents of MW10 into ACCU 1.
PUSH	//Copy entire contents of ACCU 1 into ACCU 2.

Contents	ACCU 1	ACCU 2
before executing <b>PUSH</b> instruction	<MW10>	<X>
after executing <b>PUSH</b> instruction	<MW10>	<MW10>

## 14.6 PUSH CPU with Four ACCUs

### Format

PUSH

### Description

PUSH (CPU with four ACCUs) copies the contents of ACCU 3 to ACCU 4, the contents of ACCU 2 to ACCU 3, and the contents of ACCU 1 to ACCU 2. ACCU 1 remains unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L MW10	//Load the contents of MW10 into ACCU 1.
PUSH	//Copy the entire contents of ACCU 1 to ACCU 2, the contents of ACCU 2 to ACCU 3, and the contents of ACCU 3 to ACCU 4.

Contents	ACCU 1	ACCU 2	ACCU 3	ACCU 4
before executing <b>PUSH</b> instruction	value A	value B	value C	value D
after executing <b>PUSH</b> instruction	value A	value A	value B	value C



## 14.7 ENT Enter ACCU Stack

### Format

ENT

### Description

**ENT** (enter accumulator stack) copies the contents of ACCU 3 into ACCU 4 and the contents of ACCU 2 into ACCU 3. If you program the ENT instruction directly in front of a load instruction, you can save an intermediate result in ACCU 3.

### Example

STL	Explanation
L DBD0	//Load the value from data double word DBD0 into ACCU 1. //(This value must be in the floating point format).
L DBD4	//Copy the value from ACCU 1 into ACCU 2. Load the value from data double //word DBD4 into ACCU 1. (This value must be in the floating point format).
+R	//Add the contents of ACCU 1 and ACCU 2 as floating point numbers //(32 bit, IEEE 754) and save the result in ACCU 1.
L DBD8	//Copy the value from ACCU 1 into ACCU 2 load the value from data double word //DBD8 into ACCU 1.
ENT	//Copy the contents of ACCU 3 into ACCU 4. Copy the contents of ACCU 2 //(intermediate result) into ACCU 3.
L DBD12	//Load the value from data double word DBD12 into ACCU 1.
-R	//Subtract the contents of ACCU 1 from the contents of ACCU 2 and store the //result in ACCU 1. Copy the contents of ACCU 3 into ACCU 2. Copy the //contents of ACCU 4 into ACCU 3.
/R	//Divide the contents of ACCU 2 (DBD0 + DBD4) by the contents of ACCU 1 //(DBD8 - DBD12). Save the result in ACCU 1.
T DBD16	//Transfer the results (ACCU 1) to data double word DBD16.

## 14.8 LEAVE Leave ACCU Stack

### Format

LEAVE

### Description

LEAVE (leave accumulator stack) copies the contents of ACCU 3 into ACCU 2 and the contents of ACCU 4 into ACCU 3. If you program the LEAVE instruction directly in front of a shift or rotate instruction, and combine the accumulators, then the leave instruction functions like an arithmetic instruction. The contents of ACCU 1 and ACCU 4 remain unchanged.

## 14.9 INC Increment ACCU 1-L-L

### Format

INC &lt;8-bit integer&gt;

Parameter	Data Type	Description
<8-bit integer>	8-bit integer constant	Constant added to ACCU 1-L-L; range from 0 to 255

### Description

INC <8-bit integer> (increment ACCU 1-L-L) adds the 8-bit integer to the contents of ACCU 1-L-L and stores the result in ACCU 1-L-L. ACCU 1-L-H, ACCU 1-H, and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Note

These instructions are not suitable for 16-bit or 32-bit math because no carry is made from the low byte of the low word of accumulator 1 to the high byte of the low word of accumulator 1. For 16-bit or 32-bit math, use the +I or +D. instruction, respectively.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

**Example**

STL	Explanation
L MB22	//Load the value of MB22
INC 1	//Instruction "Increment ACCU 1 (MB22) by 1"; store result in ACCU 1-L-L
T MB22	//Transfer the contents of ACCU 1-L-L (result) back to MB22

## 14.10 DEC Decrement ACCU 1-L-L

### Format

DEC <8-bit integer>

Address	Data Type	Description
<8-bit integer>	8-bit integer constant	Constant subtracted from ACCU 1-L-L; range from 0 to 255

### Description

DEC <8-bit integer> (decrement ACCU 1-L-L) subtracts the 8-bit integer from the contents of ACCU 1-L-L and stores the result in ACCU 1-L-L. ACCU 1-L-H, ACCU 1-H, and ACCU 2 remain unchanged. The instruction is executed without regard to, and without affecting, the status bits.

### Note

These instructions are not suitable for 16-bit or 32-bit math because no carry is made from the low byte of the low word of accumulator 1 to the high byte of the low word of accumulator 1. For 16-bit or 32-bit math, use the +I or +D. instruction, respectively.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example

STL	Explanation
L MB250	//Load the value of MB250
DEC 1	//Instruction "Decrement ACCU 1-L-L by 1"; store result in ACCU 1-L-L.
T MB250	//Transfer the contents of ACCU 1-L-L (result) back to MB250.

## 14.11 +AR1 Add ACCU 1 to Address Register 1

### Format

+AR1  
+AR1 <P#Byte.Bit>

Parameter	Data Type	Description
<P#Byte.Bit>	Pointer constant	Address added to AR1

### Description

+AR1 (add to AR1) adds an offset specified either in the statement or in ACCU 1-L to the contents of AR1. The integer (16 bit) is initially expanded to 24 bits with its correct sign and then added to the least significant 24 bits of AR1 (part of the relative address in AR1). The part of the area ID in AR1 (bits 24, 25, and 26) remains unchanged. The instruction is executed without regard to, and without affecting, the status bits.

+AR1: The integer (16 bit) to be added to the contents of AR1 is specified by the value in ACCU 1-L. Values from -32768 to +32767 are permissible.

+AR1 <P#Byte.Bit>: The offset to be added is specified by the <P#Byte.Bit> address.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example 1

STL	Explanation
L +300	//Load the value into ACCU 1-L
+AR1	//Add ACCU 1-L (integer, 16 bit) to AR1.

### Example 2

STL	Explanation
+AR1 P#300.0	//Add the offset 300.0 to AR1.

## 14.12 +AR2 Add ACCU 1 to Address Register 2

### Format

+AR2  
+AR2 <P#Byte.Bit>

Parameter	Data Type	Description
<P#Byte.Bit>	Pointer constant	Address added to AR2

### Description

+AR2 (add to AR2) adds an offset specified either in the instruction or in ACCU 1-L to the contents of AR. The integer (16 bit) is initially expanded to 2 bytes with its correct sign and then added to the least significant 24 bits of AR2 (part of the relative address in AR2). The part of the area ID in AR2 (bits 24, 25, and 26) remains unchanged. The instruction is executed without regard to, and without affecting, the status bits.

+AR2: The integer (16 bit) to be added to the contents of AR2 is specified by the value in ACCU 1-L. Values from -32768 to +32767 are permissible.

+AR2 <P#Byte.Bit>: The offset to be added is specified by the <P#Byte.Bit> address.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

### Example 1

STL	Explanation
L +300	//Load the value in ACCU 1-L.
+AR1	//Add ACCU 1-L (integer, 16 bit) to AR2.

### Example 2

STL	Explanation
+AR1 P#300.0	//Add the offset 30.0 to AR2.

## 14.13 BLD Program Display Instruction (Null)

### Format

BLD <number>

Address	Description
<number>	Number specifies BLD instruction, range from 0 to 255

### Description

BLD <number> (program display instruction; null instruction) executes no function and does not affect the status bits. The instruction is used for the programming device (PG) for graphic display. It is created automatically when a Ladder or FBD program is displayed in STL. The address <number> specifies the BLD instruction and is generated by the programming device.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 14.14 NOP 0 Null Instruction

### Format

NOP 0

### Description

NOP 0 (Instruction NOP with address "0") executes no function and does not affect the status bits. The instruction code contains a bit pattern with 16 zeros. The instruction is of interest only to the programming device (PG) when a program is displayed.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-

## 14.15 NOP 1 Null Instruction

### Format

NOP 1

### Description

NOP 1 (Instruction NOP with address "1") executes no function and does not affect the status bits. The instruction code contains a bit pattern with 16 ones. The instruction is of interest only to the programming device (PG) when a program is displayed.

### Status word

	BR	CC 1	CC 0	OV	OS	OR	STA	RLO	/FC
writes:	-	-	-	-	-	-	-	-	-



# A Overview of All STL Instructions

## A.1 STL Instructions Sorted According to German Mnemonics (SIMATIC)

German Mnemonics	English Mnemonics	Program Elements Catalog	Description
+	+	Integer math Instruction	Add Integer Constant (16, 32-Bit)
=	=	Bit logic Instruction	Assign
)	)	Bit logic Instruction	Nesting Closed
+AR1	+AR1	Accumulator	AR1 Add ACCU 1 to Address Register 1
+AR2	+AR2	Accumulator	AR2 Add ACCU 1 to Address Register 2
+D	+D	Integer math Instruction	Add ACCU 1 and ACCU 2 as Double Integer (32-Bit)
-D	-D	Integer math Instruction	Subtract ACCU 1 from ACCU 2 as Double Integer (32-Bit)
*D	*D	Integer math Instruction	Multiply ACCU 1 and ACCU 2 as Double Integer (32-Bit)
/D	/D	Integer math Instruction	Divide ACCU 2 by ACCU 1 as Double Integer (32-Bit)
? D	? D	Compare	Compare Double Integer (32-Bit) ==, <>, >, <, >=, <=
+I	+I	Integer math Instruction	Add ACCU 1 and ACCU 2 as Integer (16-Bit)
-I	-I	Integer math Instruction	Subtract ACCU 1 from ACCU 2 as Integer (16-Bit)
*I	*I	Integer math Instruction	Multiply ACCU 1 and ACCU 2 as Integer (16-Bit)
/I	/I	Integer math Instruction	Divide ACCU 2 by ACCU 1 as Integer (16-Bit)
? I	? I	Compare	Compare Integer (16-Bit) ==, <>, >, <, >=, <=
+R	+R	Floating point Instruction	Add ACCU 1 and ACCU 2 as a Floating-Point Number (32-Bit IEEE 754)
-R	-R	Floating point Instruction	Subtract ACCU 1 from ACCU 2 as a Floating-Point Number (32-Bit IEEE 754)
*R	*R	Floating point Instruction	Multiply ACCU 1 and ACCU 2 as Floating-Point Numbers (32-Bit IEEE 754)
/R	/R	Floating point Instruction	Divide ACCU 2 by ACCU 1 as a Floating-Point Number (32-Bit IEEE 754)
? R	? R	Compare	Compare Floating-Point Number (32-Bit) ==, <>, >, <, >=, <=
ABS	ABS	Floating point Instruction	Absolute Value of a Floating-Point Number (32-Bit IEEE 754)

A.1 STL Instructions Sorted According to German Mnemonics (SIMATIC)

German Mnemonics	English Mnemonics	Program Elements Catalog	Description
ACOS	ACOS	Floating point Instruction	Generate the Arc Cosine of a Floating-Point Number (32-Bit)
ASIN	ASIN	Floating point Instruction	Generate the Arc Sine of a Floating-Point Number (32-Bit)
ATAN	ATAN	Floating point Instruction	Generate the Arc Tangent of a Floating-Point Number (32-Bit)
AUF	OPN	DB call	Open a Data Block
BE	BE	Program control	Block End
BEA	BEU	Program control	Block End Unconditional
BEB	BEC	Program control	Block End Conditional
BLD	BLD	Program control	Program Display Instruction (Null)
BTD	BTD	Convert	BCD to Integer (32-Bit)
BTI	BTI	Convert	BCD to Integer (16-Bit)
CALL	CALL	Program control	Block Call
CALL	CALL	Program control	Call Multiple Instance
CALL	CALL	Program control	Call Block from a Library
CC	CC	Program control	Conditional Call
CLR	CLR	Bit logic Instruction	Clear RLO (=0)
COS	COS	Floating point Instruction	Generate the Cosine of Angles as Floating-Point Numbers (32-Bit)
DEC	DEC	Accumulator	Decrement ACCU 1-L-L
DTB	DTB	Convert	Double Integer (32-Bit) to BCD
DTR	DTR	Convert	Double Integer (32-Bit) to Floating-Point (32-Bit IEEE 754)
ENT	ENT	Accumulator	Enter ACCU Stack
EXP	EXP	Floating point Instruction	Generate the Exponential Value of a Floating-Point Number (32-Bit)
FN	FN	Bit logic Instruction	Edge Negative
FP	FP	Bit logic Instruction	Edge Positive
FR	FR	Counters	Enable Counter (Free)_(free, FR C 0 to C 255)
FR	FR	Timers	Enable Timer (Free)
INC	INC	Accumulator	Increment ACCU 1-L-L
INVD	INVD	Convert	Ones Complement Double Integer (32-Bit)
INVI	INVI	Convert	Ones Complement Integer (16-Bit)
ITB	ITB	Convert	Integer (16-Bit) to BCD
ITD	ITD	Convert	Integer (16-Bit) to Double Integer (32-Bit)
L	L	Load/Transfer	Load
L DBLG	L DBLG	Load/Transfer	Load Length of Shared DB in ACCU 1
L DBNO	L DBNO	Load/Transfer	Load Number of Shared DB in ACCU 1
L DILG	L DILG	Load/Transfer	Load Length of Instance DB in ACCU 1
L DINO	L DINO	Load/Transfer	Load Number of Instance DB in ACCU 1
L STW	L STW	Load/Transfer	Load Status Word into ACCU 1

A.1 STL Instructions Sorted According to German Mnemonics (SIMATIC)

German Mnemonics	English Mnemonics	Program Elements Catalog	Description
L	L	Load/Transfer	Load Current Timer Value into ACCU 1 as Integer_(the current timer value can be a number from 0 to 255, for example, L T 32)
L	L	Load/Transfer	Load Current Counter Value into ACCU 1_(the current counter value can be a number from 0 to 255, for example, L C 15)
LAR1	LAR1	Load/Transfer	Load Address Register 1 from ACCU 1
LAR1	LAR1	Load/Transfer	Load Address Register 1 with Double Integer (32-Bit Pointer)
LAR1	LAR1	Load/Transfer	Load Address Register 1 from Address Register 2
LAR2	LAR2	Load/Transfer	Load Address Register 2 from ACCU 1
LAR2	LAR2	Load/Transfer	Load Address Register 2 with Double Integer (32-Bit Pointer)
LC	LC	Counters	Load Current Counter Value into ACCU 1 as BCD_(the current timer value can be a number from 0 to 255, for example, LC C 15)
LC	LC	Timers	Load Current Timer Value into ACCU 1 as BCD_(the current counter value can be a number from 0 to 255, for example, LC T 32)
LEAVE	LEAVE	Accumulator	Leave ACCU Stack
LN	LN	Floating point Instruction	Generate the Natural Logarithm of a Floating-Point Number (32-Bit)
LOOP	LOOP	Jumps	Loop
MCR(	MCR(	Program control	Save RLO in MCR Stack, Begin MCR
)MCR	)MCR	Program control	End MCR
MCRA	MCRA	Program control	Activate MCR Area
MCRD	MCRD	Program control	Deactivate MCR Area
MOD	MOD	Integer math Instruction	Division Remainder Double Integer (32-Bit)
NEGD	NEGD	Convert	Twos Complement Double Integer (32-Bit)
NEGI	NEGI	Convert	Twos Complement Integer (16-Bit)
NEGR	NEGR	Convert	Negate Floating-Point Number (32-Bit, IEEE 754)
NOP 0	NOP 0	Accumulator	Null Instruction
NOP 1	NOP 1	Accumulator	Null Instruction
NOT	NOT	Bit logic Instruction	Negate RLO
O	O	Bit logic Instruction	Or
O(	O(	Bit logic Instruction	Or with Nesting Open
OD	OD	Word logic Instruction	OR Double Word (32-Bit)
ON	ON	Bit logic Instruction	Or Not
ON(	ON(	Bit logic Instruction	Or Not with Nesting Open
OW	OW	Word logic Instruction	OR Word (16-Bit)

A.1 STL Instructions Sorted According to German Mnemonics (SIMATIC)

German Mnemonics	English Mnemonics	Program Elements Catalog	Description
POP	POP	Accumulator	CPU with Two ACCUs
POP	POP	Accumulator	CPU with Four ACCUs
PUSH	PUSH	Accumulator	CPU with Two ACCUs
PUSH	PUSH	Accumulator	CPU with Four ACCUs
R	R	Bit logic Instruction	Reset
R	R	Counters	Reset Counter_(the current counter can be a number from 0 to 255, for example, R C 15)
R	R	Timers	Reset Timer_(the current timer can be a number from 0 to 255, for example, R T 32)
RLD	RLD	Shift/Rotate	Rotate Left Double Word (32-Bit)
RLDA	RLDA	Shift/Rotate	Rotate ACCU 1 Left via CC 1 (32-Bit)
RND	RND	Convert	Round
RND+	RND+	Convert	Round to Upper Double Integer
RND-	RND-	Convert	Round to Lower Double Integer
RRD	RRD	Shift/Rotate	Rotate Right Double Word (32-Bit)
RRDA	RRDA	Shift/Rotate	Rotate ACCU 1 Right via CC 1 (32-Bit)
S	S	Bit logic Instruction	Set
S	S	Counters	Set Counter Preset Value_(the current counter can be a number from 0 to 255, for example, S C 15)
SA	SF	Timers	Off-Delay Timer
SAVE	SAVE	Bit logic Instruction	Save RLO in BR Register
SE	SD	Timers	On-Delay Timer
SET	SET	Bit logic Instruction	Set
SI	SP	Timers	Pulse Timer
SIN	SIN	Floating point Instruction	Generate the Sine of Angles as Floating-Point Numbers (32-Bit)
SLD	SLD	Shift/Rotate	Shift Left Double Word (32-Bit)
SLW	SLW	Shift/Rotate	Shift Left Word (16-Bit)
SPA	JU	Jumps	Jump Unconditional
SPB	JC	Jumps	Jump if RLO = 1
SPBB	JCB	Jumps	Jump if RLO = 1 with BR
SPBI	JBI	Jumps	Jump if BR = 1
SPBIN	JNBI	Jumps	Jump if BR = 0
SPBN	JCN	Jumps	Jump if RLO = 0
SPBNB	JNB	Jumps	Jump if RLO = 0 with BR
SPL	JL	Jumps	Jump to Labels
SPM	JM	Jumps	Jump if Minus
SPMZ	JMZ	Jumps	Jump if Minus or Zero
SPN	JN	Jumps	Jump if Not Zero
SPO	JO	Jumps	Jump if OV = 1

## A.1 STL Instructions Sorted According to German Mnemonics (SIMATIC)

German Mnemonics	English Mnemonics	Program Elements Catalog	Description
SPP	JP	Jumps	Jump if Plus
SPPZ	JPZ	Jumps	Jump if Plus or Zero
SPS	JOS	Jumps	Jump if OS = 1
SPU	JUO	Jumps	Jump if Unordered
SPZ	JZ	Jumps	Jump if Zero
SQR	SQR	Floating point Instruction	Generate the Square of a Floating-Point Number (32-Bit)
SQRT	SQRT	Floating point Instruction	Generate the Square Root of a Floating-Point Number (32-Bit)
SRD	SRD	Shift/Rotate	Shift Right Double Word (32-Bit)
SRW	SRW	Shift/Rotate	Shift Right Word (16-Bit)
SS	SS	Timers	Retentive On-Delay Timer
SSD	SSD	Shift/Rotate	Shift Sign Double Integer (32-Bit)
SSI	SSI	Shift/Rotate	Shift Sign Integer (16-Bit)
SV	SE	Timers	Extended Pulse Timer
T	T	Load/Transfer	Transfer
T STW	T STW	Load/Transfer	Transfer ACCU 1 into Status Word
TAD	CAD	Convert	Change Byte Sequence in ACCU 1 (32-Bit)
TAK	TAK	Accumulator	Toggle ACCU 1 with ACCU 2
TAN	TAN	Floating point Instruction	Generate the Tangent of Angles as Floating-Point Numbers (32-Bit)
TAR	CAR	Load/Transfer	Exchange Address Register 1 with Address Register 2
TAR1	TAR1	Load/Transfer	Transfer Address Register 1 to ACCU 1
TAR1	TAR1	Load/Transfer	Transfer Address Register 1 to Destination (32-Bit Pointer)
TAR1	TAR1	Load/Transfer	Transfer Address Register 1 to Address Register 2
TAR2	TAR2	Load/Transfer	Transfer Address Register 2 to ACCU 1
TAR2	TAR2	Load/Transfer	Transfer Address Register 2 to Destination (32-Bit Pointer)
TAW	CAW	Convert	Change Byte Sequence in ACCU 1-L (16-Bit)
TDB	CDB	Convert	Exchange Shared DB and Instance DB
TRUNC	TRUNC	Convert	Truncate
U	A	Bit logic Instruction	And
U(	A(	Bit logic Instruction	And with Nesting Open
UC	UC	Program control	Unconditional Call
UD	AD	Word logic Instruction	AND Double Word (32-Bit)
UN	AN	Bit logic Instruction	And Not
UN(	AN(	Bit logic Instruction	And Not with Nesting Open
UW	AW	Word logic Instruction	AND Word (16-Bit)
X	X	Bit logic Instruction	Exclusive Or
X(	X(	Bit logic Instruction	Exclusive Or with Nesting Open

A.1 STL Instructions Sorted According to German Mnemonics (SIMATIC)

<b>German Mnemonics</b>	<b>English Mnemonics</b>	<b>Program Elements Catalog</b>	<b>Description</b>
XN	XN	Bit logic Instruction	Exclusive Or Not
XN(	XN(	Bit logic Instruction	Exclusive Or Not with Nesting Open
XOD	XOD	Word logic Instruction	Exclusive OR Double Word (32-Bit)
XOW	XOW	Word logic Instruction	Exclusive OR Word (16-Bit)
ZR	CD	Counters	Counter Down
ZV	CU	Counters	Counter Up

## A.2 STL Instructions Sorted According to English Mnemonics (International)

## A.2 STL Instructions Sorted According to English Mnemonics (International)

English Mnemonics	German Mnemonics	Program Elements Catalog	Description
+	+	Integer math Instruction	Add Integer Constant (16, 32-Bit)
=	=	Bit logic Instruction	Assign
)	)	Bit logic Instruction	Nesting Closed
+AR1	+AR1	Accumulator	AR1 Add ACCU 1 to Address Register 1
+AR2	+AR2	Accumulator	AR2 Add ACCU 1 to Address Register 2
+D	+D	Integer math Instruction	Add ACCU 1 and ACCU 2 as Double Integer (32-Bit)
-D	-D	Integer math Instruction	Subtract ACCU 1 from ACCU 2 as Double Integer (32-Bit)
*D	*D	Integer math Instruction	Multiply ACCU 1 and ACCU 2 as Double Integer (32-Bit)
/D	/D	Integer math Instruction	Divide ACCU 2 by ACCU 1 as Double Integer (32-Bit)
? D	? D	Compare	Compare Double Integer (32-Bit) ==, <>, >, <, >=, <=
+I	+I	Integer math Instruction	Add ACCU 1 and ACCU 2 as Integer (16-Bit)
-I	-I	Integer math Instruction	Subtract ACCU 1 from ACCU 2 as Integer (16-Bit)
*I	*I	Integer math Instruction	Multiply ACCU 1 and ACCU 2 as Integer (16-Bit)
/I	/I	Integer math Instruction	Divide ACCU 2 by ACCU 1 as Integer (16-Bit)
? I	? I	Compare	Compare Integer (16-Bit) ==, <>, >, <, >=, <=
+R	+R	Floating point Instruction	Add ACCU 1 and ACCU 2 as a Floating-Point Number (32-Bit IEEE 754)
-R	-R	Floating point Instruction	Subtract ACCU 1 from ACCU 2 as a Floating-Point Number (32-Bit IEEE 754)
*R	*R	Floating point Instruction	Multiply ACCU 1 and ACCU 2 as Floating-Point Numbers (32-Bit IEEE 754)
/R	/R	Floating point Instruction	Divide ACCU 2 by ACCU 1 as a Floating-Point Number (32-Bit IEEE 754)
? R	? R	Compare	Compare Floating-Point Number (32-Bit) ==, <>, >, <, >=, <=
A	U	Bit logic Instruction	And
A(	U(	Bit logic Instruction	And with Nesting Open
ABS	ABS	Floating point Instruction	Absolute Value of a Floating-Point Number (32-Bit IEEE 754)
ACOS	ACOS	Floating point Instruction	Generate the Arc Cosine of a Floating-Point Number (32-Bit)

A.2 STL Instructions Sorted According to English Mnemonics (International)

English Mnemonics	German Mnemonics	Program Elements Catalog	Description
AD	UD	Word logic Instruction	AND Double Word (32-Bit)
AN	UN	Bit logic Instruction	And Not
AN(	UN(	Bit logic Instruction	And Not with Nesting Open
ASIN	ASIN	Floating point Instruction	Generate the Arc Sine of a Floating-Point Number (32-Bit)
ATAN	ATAN	Floating point Instruction	Generate the Arc Tangent of a Floating-Point Number (32-Bit)
AW	UW	Word logic Instruction	AND Word (16-Bit)
BE	BE	Program control	Block End
BEC	BEB	Program control	Block End Conditional
BEU	BEA	Program control	Block End Unconditional
BLD	BLD	Program control	Program Display Instruction (Null)
BTD	BTD	Convert	BCD to Integer (32-Bit)
BTI	BTI	Convert	BCD to Integer (16-Bit)
CAD	TAD	Convert	Change Byte Sequence in ACCU 1 (32-Bit)
CALL	CALL	Program control	Block Call
CALL	CALL	Program control	Call Multiple Instance
CALL	CALL	Program control	Call Block from a Library
CAR	TAR	Load/Transfer	Exchange Address Register 1 with Address Register 2
CAW	TAW	Convert	Change Byte Sequence in ACCU 1-L (16-Bit)
CC	CC	Program control	Conditional Call
CD	ZR	Counters	Counter Down
CDB	TDB	Convert	Exchange Shared DB and Instance DB
CLR	CLR	Bit logic Instruction	Clear RLO (=0)
COS	COS	Floating point Instruction	Generate the Cosine of Angles as Floating-Point Numbers (32-Bit)
CU	ZV	Counters	Counter Up
DEC	DEC	Accumulator	Decrement ACCU 1-L-L
DTB	DTB	Convert	Double Integer (32-Bit) to BCD
DTR	DTR	Convert	Double Integer (32-Bit) to Floating-Point (32-Bit IEEE 754)
ENT	ENT	Accumulator	Enter ACCU Stack
EXP	EXP	Floating point Instruction	Generate the Exponential Value of a Floating-Point Number (32-Bit)
FN	FN	Bit logic Instruction	Edge Negative
FP	FP	Bit logic Instruction	Edge Positive
FR	FR	Counters	Enable Counter (Free)_(free, FR C 0 to C 255)
FR	FR	Timers	Enable Timer (Free)
INC	INC	Accumulator	Increment ACCU 1-L-L
INVD	INVD	Convert	Ones Complement Double Integer (32-Bit)



## A.2 STL Instructions Sorted According to English Mnemonics (International)

English Mnemonics	German Mnemonics	Program Elements Catalog	Description
INVI	INVI	Convert	Ones Complement Integer (16-Bit)
ITB	ITB	Convert	Integer (16-Bit) to BCD
ITD	ITD	Convert	Integer (16-Bit) to Double Integer (32-Bit)
JBI	SPBI	Jumps	Jump if BR = 1
JC	SPB	Jumps	Jump if RLO = 1
JCB	SPBB	Jumps	Jump if RLO = 1 with BR
JCN	SPBN	Jumps	Jump if RLO = 0
JL	SPL	Jumps	Jump to Labels
JM	SPM	Jumps	Jump if Minus
JMZ	SPMZ	Jumps	Jump if Minus or Zero
JN	SPN	Jumps	Jump if Not Zero
JNB	SPBNB	Jumps	Jump if RLO = 0 with BR
JNBI	SPBIN	Jumps	Jump if BR = 0
JO	SPO	Jumps	Jump if OV = 1
JOS	SPS	Jumps	Jump if OS = 1
JP	SPP	Jumps	Jump if Plus
JPZ	SPPZ	Jumps	Jump if Plus or Zero
JU	SPA	Jumps	Jump Unconditional
JUO	SPU	Jumps	Jump if Unordered
JZ	SPZ	Jumps	Jump if Zero
L	L	Load/Transfer	Load
L DBLG	L DBLG	Load/Transfer	Load Length of Shared DB in ACCU 1
L DBNO	L DBNO	Load/Transfer	Load Number of Shared DB in ACCU 1
L DILG	L DILG	Load/Transfer	Load Length of Instance DB in ACCU 1
L DINO	L DINO	Load/Transfer	Load Number of Instance DB in ACCU 1
L STW	L STW	Load/Transfer	Load Status Word into ACCU 1
L	L	Timers	Load Current Timer Value into ACCU 1 as Integer_(the current timer value can be a number from 0 to 255, for example, L T 32)
L	L	Counters	Load Current Counter Value into ACCU 1_(the current counter value can be a number from 0 to 255, for example, L C 15)
LAR1	LAR1	Load/Transfer	Load Address Register 1 from ACCU 1
LAR1 <D>	LAR1<D>	Load/Transfer	Load Address Register 1 with Double Integer (32-Bit Pointer)
LAR1 AR2	LAR1 AR2	Load/Transfer	Load Address Register 1 from Address Register 2
LAR2	LAR2	Load/Transfer	Load Address Register 2 from ACCU 1
LAR2 <D>	LAR2 <D>	Load/Transfer	Load Address Register 2 with Double Integer (32-Bit Pointer)
LC	LC	Counters	Load Current Counter Value into ACCU 1 as BCD_(the current timer value can be a number from 0 to 255, for example, LC C 15)

A.2 STL Instructions Sorted According to English Mnemonics (International)

English Mnemonics	German Mnemonics	Program Elements Catalog	Description
LC	LC	Timers	Load Current Timer Value into ACCU 1 as BCD_(the current counter value can be a number from 0 to 255, for example, LC T 32)
LEAVE	LEAVE	Accumulator	Leave ACCU Stack
LN	LN	Floating point Instruction	Generate the Natural Logarithm of a Floating-Point Number (32-Bit)
LOOP	LOOP	Jumps	Loop
MCR(	MCR(	Program control	Save RLO in MCR Stack, Begin MCR
)MCR	)MCR	Program control	End MCR
MCRA	MCRA	Program control	Activate MCR Area
MCRD	MCRD	Program control	Deactivate MCR Area
MOD	MOD	Integer math Instruction	Division Remainder Double Integer (32-Bit)
NEGD	NEGD	Convert	Twos Complement Double Integer (32-Bit)
NEGI	NEGI	Convert	Twos Complement Integer (16-Bit)
NEGR	NEGR	Convert	Negate Floating-Point Number (32-Bit, IEEE 754)
NOP 0	NOP 0	Accumulator	Null Instruction
NOP 1	NOP 1	Accumulator	Null Instruction
NOT	NOT	Bit logic Instruction	Negate RLO
O	O	Bit logic Instruction	Or
O(	O(	Bit logic Instruction	Or with Nesting Open
OD	OD	Word logic Instruction	OR Double Word (32-Bit)
ON	ON	Bit logic Instruction	Or Not
ON(	ON(	Bit logic Instruction	Or Not with Nesting Open
OPN	AUF	DB call	Open a Data Block
OW	OW	Word logic Instruction	OR Word (16-Bit)
POP	POP	Accumulator	CPU with Two ACCUs
POP	POP	Accumulator	CPU with Four ACCUs
PUSH	PUSH	Accumulator	CPU with Two ACCUs
PUSH	PUSH	Accumulator	CPU with Four ACCUs
R	R	Bit logic Instruction	Reset
R	R	Counters	Reset Counter_(the current counter can be a number from 0 to 255, for example, R C 15)
R	R	Timers	Reset Timer_(the current timer can be a number from 0 to 255, for example, R T 32)
RLD	RLD	Shift/Rotate	Rotate Left Double Word (32-Bit)
RLDA	RLDA	Shift/Rotate	Rotate ACCU 1 Left via CC 1 (32-Bit)
RND	RND	Convert	Round
RND-	RND-	Convert	Round to Lower Double Integer

## A.2 STL Instructions Sorted According to English Mnemonics (International)

English Mnemonics	German Mnemonics	Program Elements Catalog	Description
RND+	RND+	Convert	Round to Upper Double Integer
RRD	RRD	Shift/Rotate	Rotate Right Double Word (32-Bit)
RRDA	RRDA	Shift/Rotate	Rotate ACCU 1 Right via CC 1 (32-Bit)
S	S	Bit logic Instruction	Set
S	S	Counters	Set Counter Preset Value_(the current counter can be a number from 0 to 255, for example, S C 15)
SAVE	SAVE	Bit logic Instruction	Save RLO in BR Register
SD	SE	Timers	On-Delay Timer
SE	SV	Timers	Extended Pulse Timer
SET	SET	Bit logic Instruction	Set
SF	SA	Timers	Off-Delay Timer
SIN	SIN	Floating point Instruction	Generate the Sine of Angles as Floating-Point Numbers (32-Bit)
SLD	SLD	Shift/Rotate	Shift Left Double Word (32-Bit)
SLW	SLW	Shift/Rotate	Shift Left Word (16-Bit)
SP	SI	Timers	Pulse Timer
SQR	SQR	Floating point Instruction	Generate the Square of a Floating-Point Number (32-Bit)
SQRT	SQRT	Floating point Instruction	Generate the Square Root of a Floating-Point Number (32-Bit)
SRD	SRD	Shift/Rotate	Shift Right Double Word (32-Bit)
SRW	SRW	Shift/Rotate	Shift Right Word (16-Bit)
SS	SS	Timers	Retentive On-Delay Timer
SSD	SSD	Shift/Rotate	Shift Sign Double Integer (32-Bit)
SSI	SSI	Shift/Rotate	Shift Sign Integer (16-Bit)
T	T	Load/Transfer	Transfer
T STW	T STW	Load/Transfer	Transfer ACCU 1 into Status Word
TAK	TAK	Accumulator	Toggle ACCU 1 with ACCU 2
TAN	TAN	Floating point Instruction	Generate the Tangent of Angles as Floating-Point Numbers (32-Bit)
TAR1	TAR1	Load/Transfer	Transfer Address Register 1 to ACCU 1
TAR1	TAR1	Load/Transfer	Transfer Address Register 1 to Destination (32-Bit Pointer)
TAR1	TAR1	Load/Transfer	Transfer Address Register 1 to Address Register 2
TAR2	TAR2	Load/Transfer	Transfer Address Register 2 to ACCU 1
TAR2	TAR2	Load/Transfer	Transfer Address Register 2 to Destination (32-Bit Pointer)
TRUNC	TRUNC	Convert	Truncate
UC	UC	Program control	Unconditional Call
X	X	Bit logic Instruction	Exclusive Or
X(	X(	Bit logic Instruction	Exclusive Or with Nesting Open
XN	XN	Bit logic Instruction	Exclusive Or Not
XN(	XN(	Bit logic Instruction	Exclusive Or Not with Nesting Open

A.2 STL Instructions Sorted According to English Mnemonics (International)

<b>English Mnemonics</b>	<b>German Mnemonics</b>	<b>Program Elements Catalog</b>	<b>Description</b>
XOD	XOD	Word logic Instruction	Exclusive OR Double Word (32-Bit)
XOW	XOW	Word logic Instruction	Exclusive OR Word (16-Bit)

# B Programming Examples

## B.1 Overview of Programming Examples

### Practical Applications

Each statement list instruction triggers a specific operation. When you combine these instructions into a program, you can accomplish a wide variety of automation tasks. This chapter provides the following examples of practical applications of the statement list instructions:

- Controlling a conveyor belt using bit logic instructions
- Detecting direction of movement on a conveyor belt using bit logic instructions
- Generating a clock pulse using timer instructions
- Keeping track of storage space using counter and comparison instructions
- Solving a problem using integer math instructions
- Setting the length of time for heating an oven


### Instructions Used

Mnemonic	Program Elements Catalog	Description
AW	Word logic instruction	And Word
OW	Word logic instruction	Or Word
CD, CU	Counters	Counter Down, Counter Up
S, R	Bit logic instruction	Set, Reset
NOT	Bit logic instruction	Negate RLO
FP	Bit logic instruction	Edge Positive
+I	Floating-Point instruction	Add Accumulators 1 and 2 as Integer
/I	Floating-Point instruction	Divide Accumulator 2 by Accumulator 1 as Integer
*I	Floating-Point instruction	Multiply Accumulators 1 and 2 as Integers
>=I, <=I	Compare	Compare Integer
A, AN	Bit logic instruction	And, And Not
O, ON	Bit logic instruction	Or, Or Not
=	Bit logic instruction	Assign
INC	Accumulator	Increment Accumulator 1
BE, BEC	Program Control	Block End and Block End Conditional
L, T	Load / Transfer	Load and Transfer
SE	Timers	Extended Pulse Timer

## B.2 Example: Bit Logic Instructions

### Example 1: Controlling a Conveyor Belt

The following figure shows a conveyor belt that can be activated electrically. There are two push button switches at the beginning of the belt: S1 for START and S2 for STOP. There are also two push button switches at the end of the belt: S3 for START and S4 for STOP. It is possible to start or stop the belt from either end. Also, sensor S5 stops the belt when an item on the belt reaches the end.

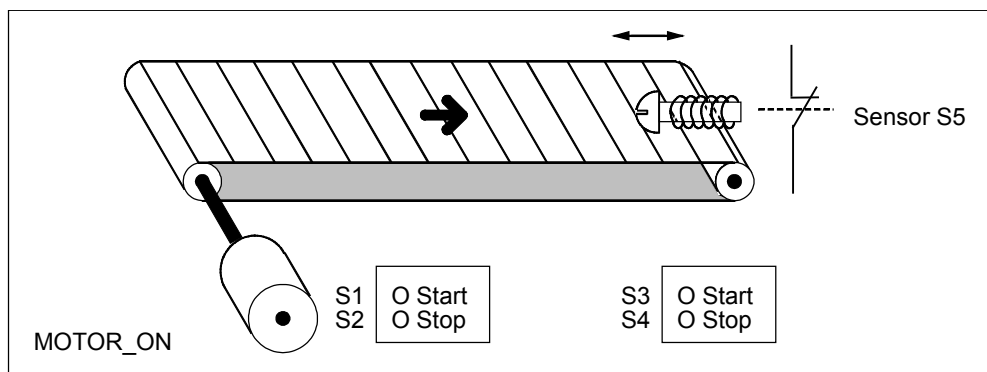

### Absolute and symbolic Programming

You can write a program to control the conveyor belt using **absolute values** or **symbols** that represent the various components of the conveyor system.

You need to make a symbol table to correlate the symbols you choose with absolute values (see the STEP 7 Online Help).

System Component	Absolute Address	Symbol	Symbol Table
Push Button Start Switch	I 1.1	S1	I 1.1 S1
Push Button Stop Switch	I 1.2	S2	I 1.2 S2
Push Button Start Switch	I 1.3	S3	I 1.3 S3
Push Button Stop Switch	I 1.4	S4	I 1.4 S4
Sensor	I 1.5	S5	I 1.5 S5
Motor	Q 4.0	MOTOR_ON	Q 4.0 MOTOR_ON


Absolute Program	Symbolic Program
O I 1.1	O S1
O I 1.3	O S3
S Q 4.0	S MOTOR_ON
O I 1.2	O S2
O I 1.4	O S4
ON I 1.5	ON S5
R Q 4.0	R MOTOR_ON

### Statement List to control the Conveyor Belt

STL	Explanation
O I 1.1	//Pressing either start switch turns the motor on.
O I 1.3	
S Q 4.0	
O I 1.2	//Pressing either stop switch or opening the normally closed contact at
	//the end of the belt turns the motor off.
O I 1.4	
ON I 1.5	
R Q 4.0	

### Example 2: Detecting the Direction of a Conveyor Belt

The following figure shows a conveyor belt that is equipped with two photoelectric barriers (PEB1 and PEB2) that are designed to detect the direction in which a package is moving on the belt. Each photoelectric light barrier functions like a normally open contact.

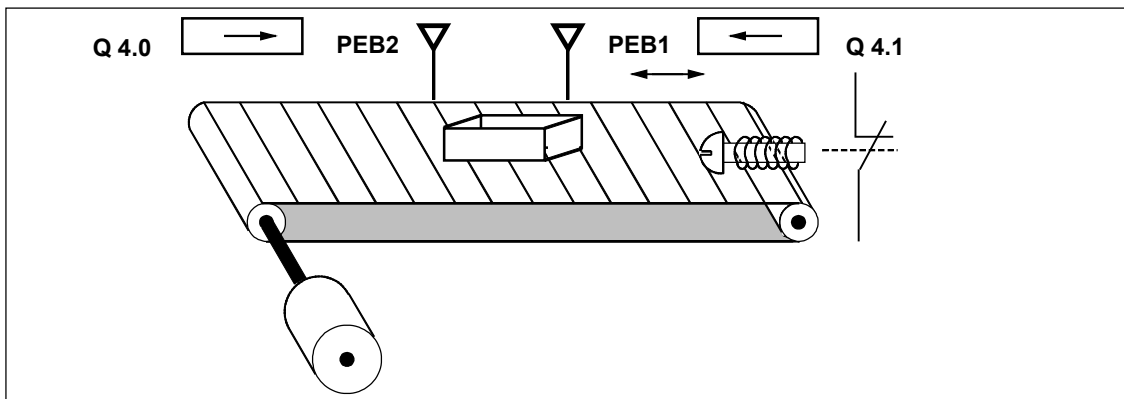

### Absolute and symbolic Programming

You can write a program to activate a direction display for the conveyor belt system using **absolute values** or **symbols** that represent the various components of the conveyor system.

You need to make a symbol table to correlate the symbols you choose with absolute values (see the STEP 7 Online Help).

System Component	Absolute Address	Symbol	Symbol Table
Photoelectric barrier 1	I 0.0	PEB1	I 0.0 PEB1
Photoelectric barrier 2	I 0.1	PEB2	I 0.1 PEB2
Display for movement to right	Q 4.0	RIGHT	Q 4.0 RIGHT
Display for movement to left	Q 4.1	LEFT	Q 4.1 LEFT
Pulse memory bit 1	M 0.0	PMB1	M 0.0 PMB1
Pulse memory bit 2	M 0.1	PMB2	M 0.1 PMB2

Absolute Program	Symbolic Program
A I 0.0	A PEB1
FP M 0.0	FP PMB1
AN I 0.1	AN PEB 2
S Q 4.1	S LEFT
A I 0.1	A PEB 2
FP M 0.1	FP PMB 2
AN I 0.0	AN PEB 1
S Q 4.0	S RIGHT
AN I 0.0	AN PEB 1
AN I 0.1	AN PEB 2
R Q 4.0	R RIGHT
R Q 4.1	R LEFT



## Statement List

STL	Explanation
A I 0.0	//If there is a transition in signal state from 0 to 1 (positive edge) //at input I 0.0 and, at the same time, the signal state at input I 0.1 //is 0, then the package on the belt is moving to the left.
FP M 0.0	
AN I 0.1	
S Q 4.1	
A I 0.1	//If there is a transition in signal state from 0 to 1 (positive edge) //at input I 0.1 and, at the same time, the signal state at input I 0.0 //is 0, then the package on the belt is moving to the right. If one of //the photo-electric light barriers is broken, this means that there //is a package between the barriers.
FP M 0.1	
AN I 0.0	
S Q 4.0	
AN I 0.0	//If neither photoelectric barrier is broken, then there is no package //between the barriers. The direction pointer shuts off.
AN I 0.1	
R Q 4.0	
R Q 4.1	

## B.3 Example: Timer Instructions

### Clock Pulse Generator

You can use a clock pulse generator or flasher relay when you need to produce a signal that repeats periodically. A clock pulse generator is common in a signalling system that controls the flashing of indicator lamps.


When you use the S7-300, you can implement the clock pulse generator function by using time-driven processing in special organization blocks. The example shown in the following statement list, however, illustrates the use of timer functions to generate a clock pulse. The sample program shows how to implement a freewheeling clock pulse generator by using a timer.

### Statement List to Generate a Clock Pulse (pulse duty factor 1:1)

STL	Explanation
AN T1	//If timer T 1 has expired,
L S5T#250ms	//load the time value 250 ms into T 1 and
SV T1	//start T 1 as an extended-pulse timer.
NOT	//Negate (invert) the result of logic operation.
BEB	//If the timer is running, end the current block.
L MB100	//If the timer has expired, load the contents of memory byte MB100,
INC 1	//increment the contents by 1,
T MB100	//and transfer the result to memory byte MB100.


### Signal Check

A signal check of timer T1 produces the following result of logic operation (RLO).

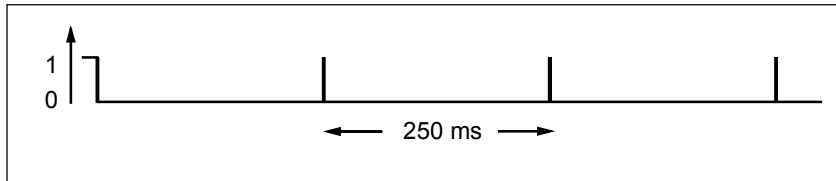

As soon as the time runs out, the timer is restarted. Because of this, the signal check made the statement **AN T1** produces a signal state of 1 only briefly.

The negated (inverted) RLO:

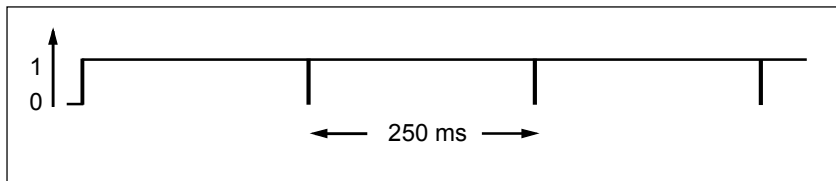

Every 250 ms the RLO bit is 0. Then the BEC statement does not end the processing of the block. Instead, the contents of memory byte MB100 is incremented by 1.

The contents of memory byte MB100 changes every 250 ms as follows:

0 -> 1 -> 2 -> 3 -> ... -> 254 -> 255 -> 0 -> 1 ...

### Achieving a Specific Frequency

From the individual bits of memory byte MB100 you can achieve the following frequencies:

Bits of MB100	Frequency in Hertz	Duration
M 100.0	2.0	0.5 s (250 ms on / 250 ms off)
M 100.1	1.0	1 s (0.5 s on / 0.5 s off)
M 100.2	0.5	2 s (1 s on / 1 s off)
M 100.3	0.25	4 s (2 s on / 2 s off)
M 100.4	0.125	8 s (4 s on / 4 s off)
M 100.5	0.0625	16 s (8 s on / 8 s off)
M 100.6	0.03125	32 s (16 s on / 16 s off)
M 100.7	0.015625	64 s (32 s on / 32 s off)

Statement List


STL	Explanation
A M10.0	//M 10.0 = 1 when a fault occurs. The fault lamp blinks at a frequency //of 1 Hz when a fault occurs.
A M100.1	
= Q 4.0	

Signal states of the Bits of Memory MB 101

Scan Cycle	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Time Value in ms
0	0	0	0	0	0	0	0	0	250
1	0	0	0	0	0	0	0	1	250
2	0	0	0	0	0	0	1	0	250
3	0	0	0	0	0	0	1	1	250
4	0	0	0	0	0	1	0	0	250
5	0	0	0	0	0	1	0	1	250
6	0	0	0	0	0	1	1	0	250
7	0	0	0	0	0	1	1	1	250
8	0	0	0	0	1	0	0	0	250
9	0	0	0	0	1	0	0	1	250
10	0	0	0	0	1	0	1	0	250
11	0	0	0	0	1	0	1	1	250
12	0	0	0	0	1	1	0	0	250

Signal state of Bit 1 of MB 101 (M 101.1)


Frequency =  $1/T = 1/1 \text{ s} = 1 \text{ Hz}$

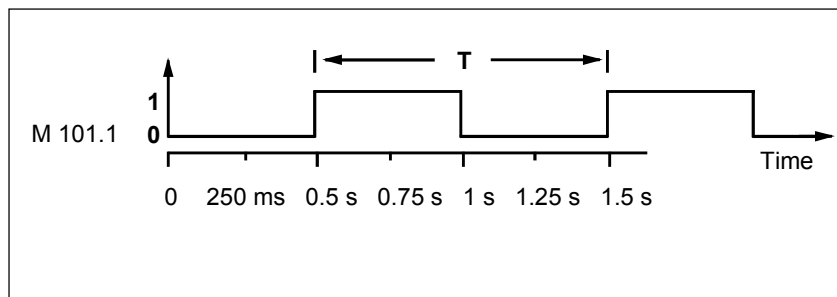

## B.4 Example: Counter and Comparison Instructions

### Storage Area with Counter and Comparator

The following figure shows a system with two conveyor belts and a temporary storage area in between them. Conveyor belt 1 delivers packages to the storage area. A photoelectric barrier at the end of conveyor belt 1 near the storage area determines how many packages are delivered to the storage area. Conveyor belt 2 transports packages from the temporary storage area to a loading dock where trucks take the packages away for delivery to customers. A photoelectric barrier at the end of conveyor belt 2 near the storage area determines how many packages leave the storage area to go to the loading dock. A display panel with five lamps indicates the fill level of the temporary storage area.

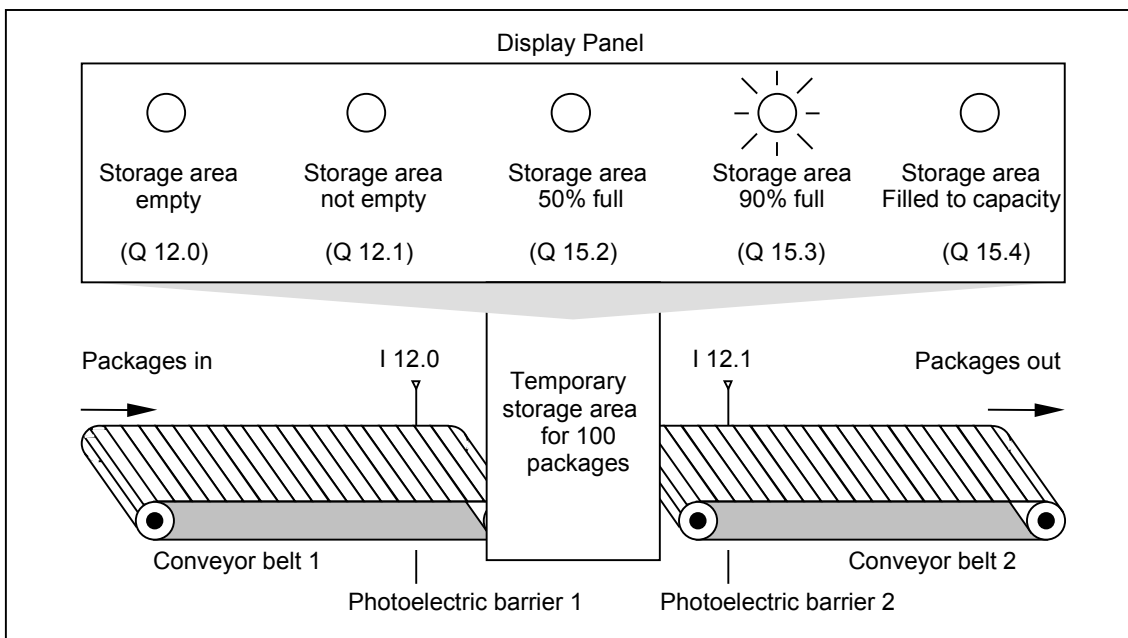

**Statement List that Activates the Indicator Lamps on the Display Panel**

STL	Explanation
A I 0.0	//Each pulse generated by photoelectric barrier 1
CU C1	//increases the count value of counter C 1 by one, thereby counting //the number of packages going into the storage area. //
A I 0.1	//Each pulse generated by photoelectric barrier 2
CD C1	//decreases the count value of counter C 1 by one, thereby counting //the packages that leave the storage area. //
AN C1	//If the count value is 0,
= Q 4.0	//the indicator lamp for "Storage area empty" comes on. //
A C1	//If the count value is not 0,
= A 4.1	//the indicator lamp for "Storage area not empty" comes on. //
L 50	
L C1	
<=I	//If 50 is less than or equal to the count value,
= Q 4.2	//the indicator lamp for "Storage area 50% full" comes on. //
L 90	
>=I	//If the count value is greater than or equal to 90,
= Q 4.3	//the indicator lamp for "Storage area 90% full" comes on. //
L Z1	
L 100	
>=I	//If the count value is greater than or equal to 100,
= Q 4.4	//the indicator lamp for "Storage area filled to capacity" comes on. //(You could also use output Q 4.4 to lock conveyor belt 1.)

## B.5 Example: Integer Math Instructions

### Solving a Math Problem

The sample program shows you how to use three integer math instructions to produce the same result as the following equation:

$$MD4 = ((IW0 + DBW3) \times 15) / MW2$$


### Statement List

STL		Explanation
L	EW0	//Load the value from input word IW0 into accumulator 1.
L	DB5.DBW3	//Load the value from shared data word DBW3 of DB5 into accumulator 1. //The old contents of accumulator 1 are shifted to accumulator 2.
+I	I 0.1	//Add the contents of the low words of accumulators 1 and 2. The //result is stored in the low word of accumulator 1. The contents of //accumulator 2 and the high word of accumulator 1 remain unchanged.
L	+15	//Load the constant value +15 into accumulator 1. The old contents of //accumulator 1 are shifted to accumulator 2.
*I		//Multiply the contents of the low word of accumulator 2 by the //contents of the low word of accumulator 1. The result is stored in //accumulator 1. The contents of accumulator 2 remain unchanged.
L	MW2	//Load the value from memory word MW2 into accumulator 1. The old //contents of accumulator 1 are shifted to accumulator 2.
/I		//Divide the contents of the low word of accumulator 2 by the //contents of the low word of accumulator 1. The result is stored in //accumulator 1. The contents of accumulator 2 remain unchanged.
T	MD4	//Transfer the final result to memory double word MD4. The contents //of both accumulators remain unchanged.

## B.6 Example: Word Logic Instructions

### Heating an Oven

The operator of the oven starts the oven heating by pushing the start push button. The operator can set the length of time for heating by using the thumbwheel switches shown in the figure. The value that the operator sets indicates seconds in binary coded decimal (BCD) format.

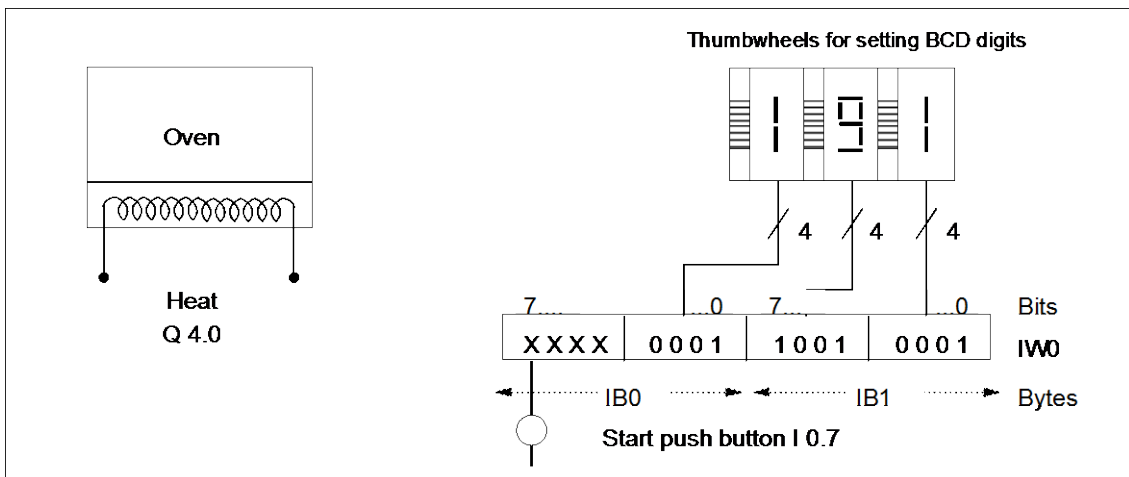

System Component	Absolute Address
Start Push Button	I 0.7
Thumbwheel for ones	I 1.0 to I 1.3
Thumbwheel for tens	I 1.4 to I 1.7
Thumbwheel for hundreds	I 0.0 to I 0.3
Heating starts	Q 4.0



## Statement List

STL		Explanation
A	T1	//If the timer is running,
=	Q 4.0	//then turn on the heat.
BEC		//If the timer is running, then end processing here. This prevents //timer T1 from being restarted if the push button is pressed.
L	IW0	
AW	W#16#0FFF	//Mask input bits I 0.4 through I 0.7 (that is, reset them to 0). The //time value in seconds is in the low word of accumulator 1 in binary //coded decimal format.
OW	W#16#2000	Assign the time base as seconds in bits 12 and 13 of the low word of accumulator 1.
A	I 0.7	
SE	T1	//Start timer T1 as an extended pulse timer if the push button is  //pressed.



## C Parameter Transfer

The parameters of a block are transferred as a value. With function blocks a copy of the actual parameter value in the instance data block is used in the called block. With functions a copy of the actual value lies in the local data stack. Pointers are not copied. Prior to the call the INPUT values are copied into the instance DB or to the L stack. After the call the OUTPUT values are copied back into the variables. Within the called block you can only work on a copy. The STL instructions required for this are in the calling block and remain hidden from the user.

---

### Note

If memory bits, inputs, outputs or peripheral I/Os are used as actual address of a function they are treated in a different way than the other addresses. Here, updates are carried out directly, not via L Stack.

---



---

### Caution

When programming the called block, ensure that the parameters declared as OUTPUT are also written. Otherwise the values output are random! With function blocks the value will be the value from the instance DB noted by the last call, with functions the value will be the value which happens to be in the L stack.

Note the following points:

- Initialize all OUTPUT parameters if possible.
  - Try not to use any Set and Reset instructions. These instructions are dependent on the RLO. If the RLO has the value 0, the random value will be retained.
  - If you jump within the block, ensure that you do not skip any locations where OUTPUT parameters are written. Do not forget BEC and the effect of the MCR instructions.
-



# Index

)  
) 25  
)MCR 175

\*

\*D 112  
\*I 105, 106  
\*R 123

/

/D 113, 114  
/I 106, 107  
/R 125

?

? D 41  
? I 40

+

+ 109  
+AR1 245  
+AR2 246  
+D 110  
+I 103  
+R 119, 120

=

= 27

**A**

A 15  
A( 22  
ABS 127  
Absolute Value of a Floating-Point Number (32-Bit IEEE 754) 127  
Accumulator operations and Address Register Instructions 235  
**ACOS** 136  
Activate MCR Area 176  
AD 228, 229  
Add ACCU 1 and ACCU 2 as a Floating-Point Number (32-Bit IEEE 754) 119  
Add ACCU 1 and ACCU 2 as Double Integer (32-Bit) 110  
Add ACCU 1 and ACCU 2 as Integer (16-Bit) 103

Add ACCU 1 to Address Register 1 245  
Add ACCU 1 to Address Register 2 246  
Add Integer Constant (16-  
32-Bit) 108  
AN 16  
AN( 23  
And 15  
And before Or 21  
AND Double Word (32-Bit) 228  
And Not 16  
And Not with Nesting Open 23  
And with Nesting Open 22  
AND Word (16-Bit) 222  
Area in memory 61, 200  
ASIN 135  
Assign 27  
ATAN 137  
AW 222, 223

**B**

BCD to Integer (16-Bit) 44  
BCD to Integer (32-Bit) 46  
BE 154  
BEC 155  
BEU 156  
**Bit Configuration in ACCU 1** 201  
BLD 247  
Block Call 157  
Block End 154  
Block End Conditional 155  
Block End Unconditional 156  
BTD 46  
BTI 44

**C**

CAD 56  
CALL 157, 158, 159  
Call Block from a Library 167  
Call FB 160  
Call FC 162  
Call Multiple Instance 167  
Call SFB 164  
Call SFC 166  
CAR 149  
CAW 55  
CC 168  
CD 69  
CDB 73

Change Byte Sequence in ACCU 1 (32-Bit) 56  
Change Byte Sequence in ACCU 1-L (16-Bit) 55  
**Choosing the right Timer** 202  
Clear RLO (=0) 32  
CLR 32  
Compare Double Integer (32-Bit) 41  
Compare Floating-Point Number (32-Bit) 42  
Compare Integer (16-Bit) 40  
Components of a timer 199, 200  
Conditional Call 168  
COS 133  
count value 61  
Counter Down 69  
Counter Up 68  
CU 68

## D

-D 111  
Deactivate MCR Area 177  
DEC 244  
Decrement ACCU 1-L-L 244  
Divide ACCU 2 by ACCU 1 as a Floating-Point  
Number (32-Bit IEEE 754) 125  
Divide ACCU 2 by ACCU 1 as Double Integer (32-  
Bit) 113  
Divide ACCU 2 by ACCU 1 as Integer (16-Bit) 106  
Division Remainder Double Integer (32-Bit) 115  
Double Integer (32-Bit) to BCD 48  
Double Integer (32-Bit) to Floating-Point (32-Bit  
IEEE 754) 49  
DTB 48  
DTR 49

## E

Edge Negative 34  
Edge Positive 36  
Enable Counter (Free) 62  
Enable Timer (Free) 203  
End MCR 175  
ENT 241  
Enter ACCU Stack 241  
Evaluating the Bits of the Status Word with Integer  
Math Instructions 102  
Evaluation of the Bits in the Status Word with  
Floating-Point Math Instructions 118  
Example  
Bit Logic Instructions 262  
Counter and Comparison Instructions 269  
Integer Math Instructions 271

Timer Instructions 266  
Word Logic Instructions 272  
Examples 261  
Exchange Address Register 1 with Address  
Register 2 149  
Exchange Shared DB and Instance DB 73  
Exclusive Or 19  
Exclusive OR Double Word (32-Bit) 232  
Exclusive Or Not 20  
Exclusive Or Not with Nesting Open 25  
Exclusive Or with Nesting Open 24  
Exclusive OR Word (16-Bit) 226  
EXP 130  
Extended Pulse Timer 212

## F

FN 34  
FP 36  
FR 62, 203  
Function Block Call 161  
Function Call 162

## G

Generate the Arc Cosine of a Floating-Point  
Number (32-Bit) 136  
Generate the Arc Sine of a Floating-Point Number  
(32-Bit) 135  
Generate the Arc Tangent of a Floating-Point  
Number (32-Bit) 137  
Generate the Cosine of Angles as Floating-Point  
Numbers (32-Bit) 133  
Generate the Exponential Value of a Floating-Point  
Number (32-Bit) 130  
Generate the Natural Logarithm of a Floating-Point  
Number (32-Bit) 131  
Generate the Sine of Angles as Floating-Point  
Numbers (32-Bit) 132  
Generate the Square of a Floating-Point Number  
(32-Bit) 128  
Generate the Square Root of a Floating-Point  
Number (32-Bit) 129  
Generate the Tangent of Angles as Floating-Point  
Numbers (32-Bit) 134

## I

-I 104  
Important Notes on Using MCR Functions 172  
INC 242, 243  
Increment ACCU 1-L-L 242

Integer (16-Bit) to BCD 45  
**Integer (16-Bit) to Double Integer (32-Bit)** 47  
 INVD 51  
 INVI 50  
 ITB 45  
 ITD 47

**J**

JBI 86  
 JC 82  
 JCB 84  
 JCN 83  
 JL 80, 81  
 JM 94  
 JMZ 96  
 JN 92  
 JNB 85  
 JNBI 87  
 JO 88  
 JOS 89, 90  
 JP 93  
 JPZ 95  
 JU 79  
 Jump if BR = 0 87  
 Jump if BR = 1 86  
 Jump if Minus 94  
 Jump if Minus or Zero 96  
 Jump if Not Zero 92  
 Jump if OS = 1 89  
 Jump if OV = 1 88  
 Jump if Plus 93  
 Jump if Plus or Zero 95  
 Jump if RLO = 0 83  
 Jump if RLO = 0 with BR 85  
 Jump if RLO = 1 82  
 Jump if RLO = 1 with BR 84  
 Jump if Unordered 97  
 Jump if Zero 91  
 Jump to Labels 80  
 Jump Unconditional 79  
 JUO 97, 98  
 JZ 91

**L**

L 140, 205  
 L DBLG 73  
 L DBNO 74  
 L DILG 74  
 L DINO 75

L STW 142  
 LAR1 143  
 LAR1 <D> Load Address Register 1 with Double Integer (32-Bit Pointer) 144  
 LAR1 AR2 145  
 LAR2 145  
 LAR2 <D> 146  
 LC 207, 208  
 LEAVE 242  
 Leave ACCU Stack 242  
 LN 131  
 Load 141  
 Load Address Register 1 from ACCU 1 143  
 Load Address Register 1 from Address Register 2 145  
 Load Address Register 2 from ACCU 1 145  
 Load Address Register 2 with Double Integer (32-Bit Pointer) 146  
 Load Current Timer Value into ACCU 1 as BCD 207  
 Load Current Timer Value into ACCU 1 as Integer 205  
 Load Length of Instance DB in ACCU 1 74  
 Load Length of Shared DB in ACCU 1 73  
 Load Number of Instance DB in ACCU 1 75  
 Load Number of Shared DB in ACCU 1 74  
 Load Status Word into ACCU 1 142  
 Location of a timer in memory 199, 200  
 Loop 99  
 LOOP 99

**M**

MCR 176, 177  
 MCR (Master Control Relay) 170  
**MCR Area** 174, 175, 176  
 MCR( 173, 174  
 MCRA 176  
 MCRD 177  
**Mnemonics**  
**English** 255  
 MOD 115, 116  
 Multiply ACCU 1 and ACCU 2 as Double Integer (32-Bit) 112  
 Multiply ACCU 1 and ACCU 2 as Floating-Point Numbers (32-Bit IEEE 754) 123  
 Multiply ACCU 1 and ACCU 2 as Integer (16-Bit) 105

**N**

Negate Floating-Point Number (32-Bit  
IEEE 754) 54  
Negate RLO 30  
NEGD 53  
NEGI 52  
NEGR 54  
Nesting Closed 25  
NOP 0 247  
NOP 1 248  
NOT 30  
Null Instruction 247, 248

**O**

O 17, 21  
O( 23  
OD 230, 231  
Off-Delay Timer 218  
ON 18  
ON( 24  
On-Delay Timer 214  
Ones Complement Double Integer (32-Bit) 51  
Ones Complement Integer (16-Bit) 50  
Open a Data Block 72  
**OPN** 72  
Or 17  
OR Double Word (32-Bit) 230  
Or Not 18  
Or Not with Nesting Open 24  
Or with Nesting Open 23  
OR Word (16-Bit) 224  
Overview of Word Logic instructions 221  
Overview of Bit Logic instructions 13  
Overview of Comparison instructions 39  
Overview of Conversion instructions 43  
Overview of Counter Instructions 61  
Overview of Data Block instructions 71  
Overview of Floating-Point Math instructions 117  
Overview of Integer Math Instructions 101  
Overview of Load and Transfer instructions 139  
Overview of Logic Control instructions 77  
Overview of Program Control instructions 153  
Overview of Programming Examples 261  
Overview of Rotate instructions 192  
Overview of Shift instructions 179  
Overview of Timer instructions 199  
OW 224, 225

**P**

POP 237, 238  
CPU with Four ACCUs 238  
CPU with Two ACCUs 237  
**Practical Applications** 261  
Program Display Instruction 247  
Pulse Timer 210  
PUSH 239, 240  
CPU with Four ACCUs 240  
CPU with Two ACCUs 239

**R**

R 28, 66, 209  
-R 121  
**-R** 122  
Reset 28  
Reset Counter 66  
**Reset Timer** 209  
Retentive On-Delay Timer 216  
RLD 193, 194  
RLDA 197  
RND 57  
RND- 60  
RND- 60  
**RND-** 60  
RND- 60  
RND- 60  
RND+ 59  
Rotate ACCU 1 Left via CC 1 (32-Bit) 197  
Rotate ACCU 1 Right via CC 1 (32-Bit) 198  
Rotate Left Double Word (32-Bit) 193  
Rotate Right Double Word (32-Bit) 195  
**Round** 57  
Round to Lower Double Integer 60  
Round to Upper Double Integer 59  
RRD 195, 196  
RRDA 198

**S**

S 29, 67  
SAVE 33  
Save RLO in BR Register 33  
Save RLO in MCR Stack  
Begin MCR 173  
SD 214, 215  
SE 212, 213  
Set 29  
SET 30  
Set Counter Preset Value 67



- Set RLO (=1) 30  
 SF 218, 219  
 Shift Left Double Word (32-Bit) 188  
 Shift Left Word (16-Bit) 184  
 Shift Right Double Word (32-Bit) 190  
 Shift Right Word (16-Bit) 186  
 Shift Sign Double Integer (32-Bit) 182  
 Shift Sign Integer (16-Bit) 180  
**SIN** 132  
 SLD 188, 189  
 SLW 184, 185  
 SP 210, 211  
 SQR 128  
 SQRT 129  
 SRD 190, 191  
 SRW 186, 187  
 SS 216, 217  
 SSD 182, 183  
 SSI 180  
 Subtract ACCU 1 from ACCU 2 as a Floating-Point Number (32-Bit IEEE 754) 121  
 Subtract ACCU 1 from ACCU 2 as Double Integer (32-Bit) 111  
 Subtract ACCU 1 from ACCU 2 as Integer (16-Bit) 104  
 System Function Block Call 165  
 System Function Call 166
- T**
- T 147  
 T STW 148  
 TAK 236  
 TAN 134  
 TAR1 149  
 TAR1 <D> 150  
 TAR1 AR2 151  
 TAR2 151  
 TAR2 <D> 152  
 Time Base 200, 201  
 Time Value 200, 201, 202  
 Toggle ACCU 1 with ACCU 2 236  
 Transfer 147  
 Transfer ACCU 1 into Status Word 148  
 Transfer Address Register 1 to ACCU 1 149  
 Transfer Address Register 1 to Address Register 2 151  
 Transfer Address Register 1 to Destination (32 Bit Pointer) 150  
 Transfer Address Register 2 to ACCU 1 151  
 Transfer Address Register 2 to Destination (32-Bit Pointer) 152  
 TRUNC 58  
 Truncate 58  
 Twos Complement Double Integer (32-Bit) 53  
 Twos Complement Integer (16-Bit) 52
- U**
- UC 169  
 Unconditional Call 169
- X**
- X 19  
 X( 24  
 XN 20  
 XN( 25  
 XOD 232, 233  
 XOW 226, 227

