

Refer to the following information to remove the thermostat from the wallplate.


Consulter les renseignements qui suivent pour retirer le thermostat de la plaque murale.

Consulte esta información para separar la placa de pared del termostato.

Pull at bottom to remove thermostat from wallplate.

Retirer le thermostat de la plaque murale en tirant la partie inférieure.

Jale por la parte inferior para separar el termostato de la placa de pared.

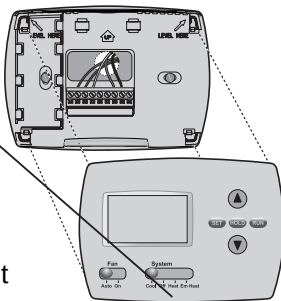

This is a legacy product document supported by Resideo. It is no longer manufactured

