


Maintenance Minder

Multi-Information Display (MID)*

Shows various types of information/messages that help with the operation of your vehicle, and indicates when periodic maintenance is due.

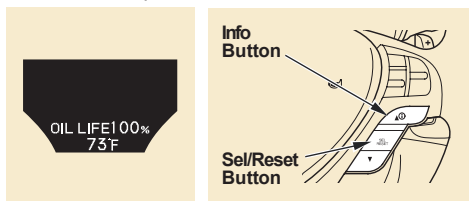

You can change the display and customize your vehicle settings using the Sel/Reset button.

Odometer: The number of miles driven.

Trip Meter (A & B): The number of miles driven since last reset.

Engine Oil Life /Maintenance Minder Display: The remaining engine oil life and the next maintenance due.

Inst. MPG: The fuel economy for the present time in a bar graph.

Elapsed Time: Time gone by since last reset.

Avg Speed: Average vehicle speed since last reset.

Avg. Fuel A/B: Average fuel economy since the last reset.

SH-AWD: How much torque is being delivered to each wheel.


HandsFreeLink™: HFL information.

Maintenance Minder*

Three types of messages appear in the display:

- SERVICE DUE SOON
- SERVICE DUE NOW (System Message Indicator)
- SERVICE PAST DUE

The system also displays the code for the maintenance items needing service. Have the service performed by your dealer.

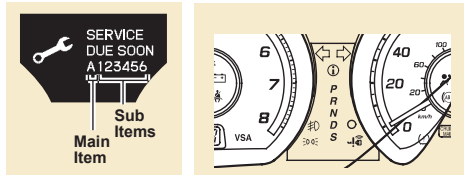

System Message Indicator*

If there is a problem with your vehicle, a message will be displayed. Press the INFO button to review.

Messages that may appear include:



Door and Trunk Open Monitor:

A door or the trunk is not closed.

Fasten Seat Belt/Passenger Seat

Belt: Either the driver or a front

passenger has not fastened their seat belt while the vehicle is moving.

Release Parking Brake: Driving without releasing the parking brake. A beep will also sound.

Passenger's Side Airbag Off: The passenger's side airbag has automatically shut off.

Tighten Fuel Cap: If your fuel cap is loose or missing, a TIGHTEN FUEL CAP message appears on the multi-information display after you start the engine. Turn the engine off, and confirm the fuel cap is installed. If it is, loosen it, then retighten it until it clicks at least once. When you restart the engine, the message appears again. The message should go off after several days of normal driving once you tighten or replace the fuel cap.

Fuel Low: The fuel level is low.

Low Washer Fluid: The windshield washer level is low.

Note: *If any of these messages appear on the display, there is a problem in that system. Have your vehicle checked by your dealer as soon as possible.*