



507AFDMTB



WIFI ENABLED
SMART CONTROL



ADAPTIVE
INVERTER
TECHNOLOGY



SURROUND
COOLING



MY FRESH CHOICE
CONVERTIBLE ZONE



DUAL TECH
COOLING



BRUSH
MATT FINISH

Contents

Safety and warning information	2
Installing your new appliance	8
Description of the appliance	10
Display controls	11
Using your appliance	14
Installing Smart Wifi Module	16
Helpful hints and tips	22
Troubleshooting	26
Disposal of Appliance	29
Warranty Terms & Conditions	32



Safety and warning information

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features.

Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Safety for children and others who are vulnerable people

According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep all packaging away from children as there is risk of suffocation.

- If you are discarding the appliance, pull the plug out of the Socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seal, is to replace an older appliance having a spring lock (latch) on the Door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.



General safety

- **WARNING** - This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- **WARNING** - Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING** - If the supply cord is damaged, if must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING** - Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING** - Do not use mechanical devices or other Means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** - Do not damage the refrigerant circuit.
- **WARNING** - Do not use electrical appliances inside the food storage

compartments of the appliance, unless they are of the type recommended by the manufacturer.

- **WARNING** - The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.
- **WARNING** - When positioning the appliance, ensure the Supply cord is not trapped or damaged.
- **WARNING** - Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Replacing the illuminating lamps

WARNING - The illuminating lamps must not be replaced by the user! If the illuminating lamps are damaged, contact the customer helpline for assistance.

This warning is only for refrigerators that contain illuminating lamps.

Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.

WARNING - Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.



WARNING: Risk of fire

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
 - Thoroughly ventilate the room in which the appliance is situated.
- It is dangerous to alter the specification or modify this product in any way. Any damage to the cord may cause a short circuit, fire, and/or electric shock.



Electrical safety

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged. A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only applied with a power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of the user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of a common one with other electric appliances. Its plug must match the socket with ground wire.

Daily use

Do not store flammable gases or liquids in the appliance. There is a risk of an explosion.

Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.)

When unplugging, always pull the plug from the mains socket, do not

pull on the cable.

Do not place hot items near the plastic components of this appliance.

Do not place food products directly against the air outlet on the near wall.

Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.

The appliances manufacturer's storage recommendations should be strictly adhered to. Refer to the relevant instructions for storage.

Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.

Frozen food can cause frost burns if consumed straight from the freezer compartment.

Do not place the appliance in direct sunlight.

Keep burning candles, lamps and other items with naked flames away from the appliance so that you do not set the appliance on fire.

The appliance is intended for keeping food stuff and/or beverages in a normal household as explained in this instruction booklet. The appliance is heavy. Care should be taken when moving it.

Do not remove nor touch items from the freezer compartment if your hands are damp/wet as this could cause skin abrasions or frost/freezer burns.

Never use the base, drawers, doors etc. to stand on or as supports.

Frozen food must not be refrozen once it has been thawed out.

Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.

To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.

Caution!

Care and cleaning

Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.

Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.

Do not use sharp objects to remove frost from the appliance. Use a plastic scraper.



Installation Important!

For electrical connection carefully, follow the instructions given in this manual.

Unpack the appliance and check if there are damages on it.

Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.

It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.

Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation follow the instructions relevant to installation.

Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.

The appliance must not be located close to radiators or cookers.

Make sure that the mains plug is accessible after the installation of the appliance.

Service

Any electrical work required to do the servicing of the appliance should be carried out by a qualified electrician or competent person.

This product must be serviced by an authorized Service Centre, and only genuine spare parts must be used.

- 1) If the appliance is Frost Free.
- 2) If the appliance contains freezer compartment.


Installing your new appliance

Before using the appliance for the first time, you should be informed of the following tips.

Ventilation of appliance

In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator.

Suggest: it is advisable for there to be 50-70mm of space from the back to the wall, at least 300mm from its top, at least 200mm from its side to the wall and a clear space in front to allow the doors to open 135°. As shown in following diagrams

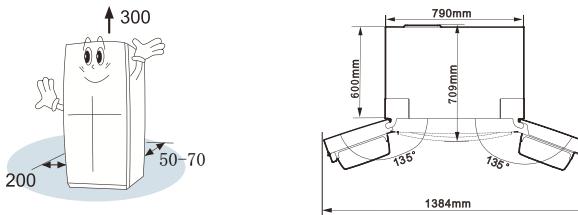


Note:

This appliance performs well within the climate class shown in the table below. It may not work properly if being left at a temperature above or below the indicated range for a long period.


Climate Class	Ambient temperature
T	+16 °C to +43 °C

- Stand your appliance in a dry place to avoid high moisture.
- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.

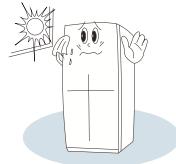


Levelling of appliance

- For sufficient levelling and air circulating in the lower rear section of the appliance, the bottom feet may need to be adjusted.
- To allow the doors to self-close, tilt the top backwards by about 10mm.
- You can adjust them manually by hand or by using a suitable spanner.

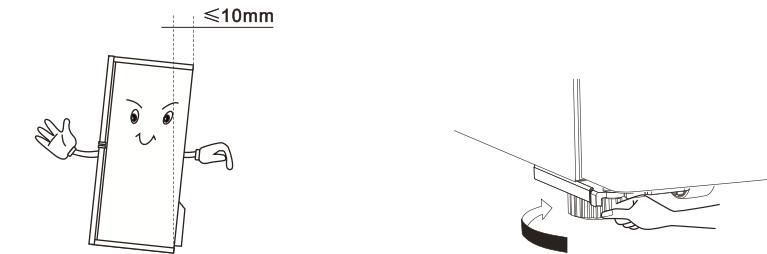

Description of the appliance

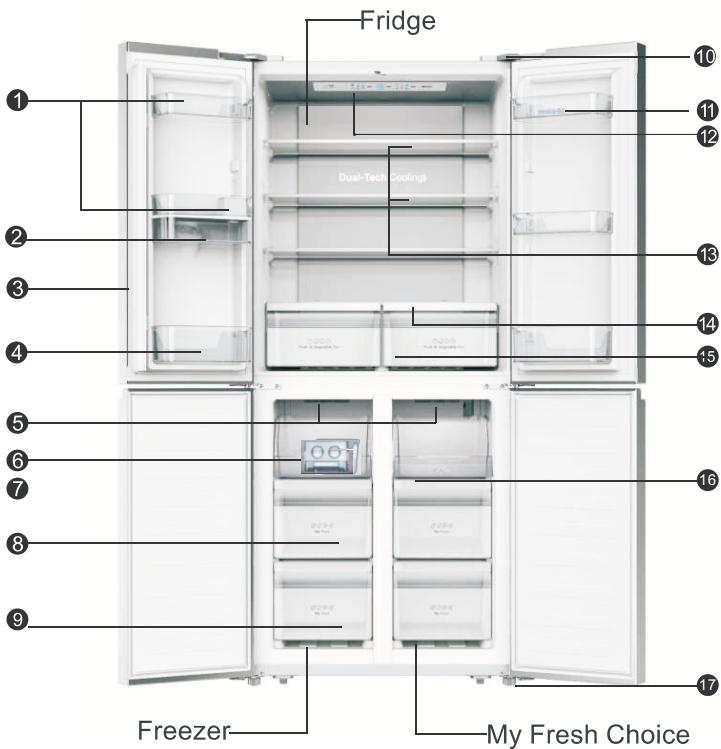

- | | |
|-----------------------------------|--|
| ① Door Rack | ⑪ Egg Tray(located in the plastic bag) |
| ② Water Tank | ⑫ Soft LED Lighting |
| ③ Rotary Separator | ⑬ Tempered Shelves |
| ④ Door Rack | ⑭ Crisper Cover |
| ⑤ Soft LED Lighting | ⑮ Fruit And Vegetables Crisper |
| ⑥ Twistable Ice Tray | ⑯ Glass Plates |
| ⑦ Upper Freezer Tray | ⑰ Adjustable Bottom Feet |
| ⑧ Middle Freezer Drawer | |
| ⑨ Lower Freezer Drawer | |
| ⑩ WIFI module connection position | |


Note: Due to unceasing modification of our products, your refrigerator may be slightly different from this instruction manual, but its functions and using methods remain the same. To get more space in the freezer, you can remove drawers (except lower freezer drawer).

Display controls

Use your appliance according to the following control regulations, your appliance has the corresponding functions and modes as the control panels showed in the pictures below. When the appliance is powered on for the first time, the backlighting of the icons on display panel start working. If no buttons have been pressed and the doors are closed, the backlighting will turn off.

Controlling the temperature

We recommend that when you start your refrigerator for the first time, the temperature for the fridge is set to 4 °C, my fresh choice to - 12 °C and the freezer to - 18 °C. If you want to

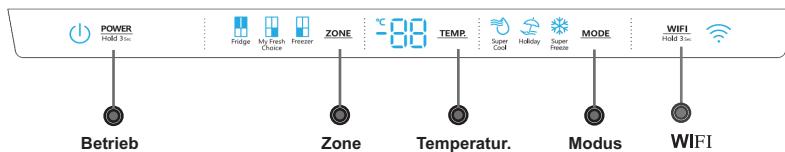

change the temperature follow the instructions below.

Caution! When you set a temperature, you set an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place it. Ambient temperature may also affect the actual temperature inside the appliance.

1. Fridge

Press "ZONE" repeatedly until "Fridge" icon lights up and then press "TEMP." repeatedly to set your desired fridge temperature between 8 °C and 2 °C, the temperature will

decrease by 1 °C with each press and the fridge temperature indicator will display the corresponding value according to the following sequence.



 
2. My Fresh Choice

Press “ZONE” repeatedly until “My Fresh Choice” icon lights up and then press “TEMP.” repeatedly to set temperature between -5 °C and - 18 °C and the temperature indicator will display corresponding values according to the following sequence. In the My Fresh Choice Space you can change temperature from -18 °C to -5 °C. This helps change this space to 4 different zones basis your needs-

Freezer for frozen items like potato wedges, purees, peas, fish, meat at -18 °C to -15 °C approx,

Soft Freezer for ice, ice cream, lollies at -8 °C to -5 °C approx,

Please Note: You can have any 1 zone at any one period of time



3. Freezer

Press “ZONE” repeatedly until “Freezer” icon lights up and then press “TEMP.” to set temperature between -14 °C and - 24 °C to suit your desired temperature, and the freezer temperature indicator will display corresponding value according to the following sequence.



4. Super Cool



Super Cool

Super Cool can refrigerate the food quicker and keep food fresh for a longer period of time.

Press "MODE" to activate this function. The super cool icon will be illuminated and the fridge temperature will indicate 2 °C.

- Super cool automatically switches off after 3 hours and the refrigerator temperature setting display 2 °C.
- When a super cool function is on, you can switch it off by pressing "MODE" and the refrigerator temperature setting will revert to the previous setting.

5. Super Freeze



Super Freeze

Super Freeze can rapidly lower frozen temperature and freeze your food substantially faster than usual. This feature also helps to keep vitamins and nutrition of fresh food for a longer period of time.

Press "MODE" to activate this function. The Super Freeze icon will illuminate and the freezer temperature will display -24 °C.

- Super freeze automatically switches off after 52 hours.
- When Super Freeze function is on you can switch it off by pressing the "MODE" button and the refrigerator temperature setting will revert to the previous setting.

Note: When selecting the Super Freeze function, ensure there are no bottled or canned drinks (especially carbonated drinks) in the freezer compartment as bottles and cans may explode.

6. Holiday



Holiday

When the holiday function is activated, the temperature of the refrigerator is automatically switched to 15 °C to minimize the energy consumption.

- **Important!** Do not store any food in the fridge during this time. When holiday function is on you can switch it off by pressing "MODE" and the refrigerator temperature setting will revert to its previous setting.

7. Door alarm

On leaving any door open for over 2 minutes will lead to activation of an alarm and buzzer, and the control panel will display "dr".

 
In case of door alarm, buzzer will beep 3 times per minute, and will automatically stop alarming 8 minutes later. To save energy, please avoid keeping the door open for a long time when using the appliance. The door alarm can be cleared by closing the door.

Using your appliance

Your appliance has the accessories as the "Description of the appliance" shown in general, with these instructions you can have the right way to use them.

Door rack

- It is suitable for the storage of eggs, canned liquid, bottled drinks and packed food, etc. Do not place too many heavy things in the racks
- The middle door racks can be placed at different heights according to your appliance. Please take food out of the racks before lifting vertically to reposition.




All the door racks are completely removable for cleaning.


Note: There are egg trays in the rack.

Shelf

- There are three glass shelves in the refrigerator chamber. They can be adjusted to various heights as needed.

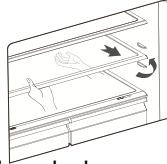

- When you remove the shelves, gently pull them forward until the shelf comes clear of the shelf guides.
- When you return the shelves, make sure there is no obstacle behind and gently push the shelf back into the position.

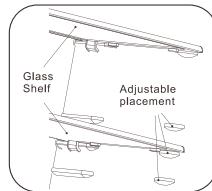


Crispers

- The crisper, mounted on telescopic extension slides, is for storing vegetables and fruits.

Crisper Cover

- It is for avoiding the vegetables from losing moisture. You can adjust the humidity inside the crispers by using the sliding block.

Crisper and Humidity Control

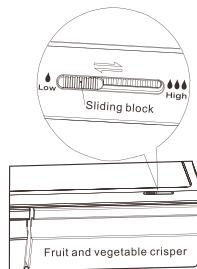


- The humidity control adjusts the airflow in the crisper; higher airflow results in lower humidity. Slide the humidity control to the right in order to increase humidity.
- High humidity settings are recommended for vegetables, while


low humidity is suitable for preservation of fruits.

Installing the Smart WiFi Module


1. Find the upper hand hinge cover of the refrigerator.

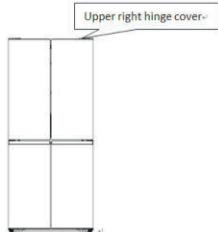

2. Open the groove cover on the left side of the upper right

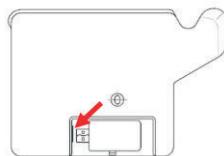

hinge cover and insert the Wifi module into the USB port in the groove.

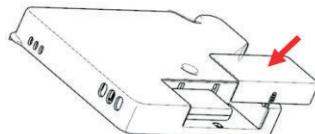

3. Cover the groove cover, and the Wifi installation module is finished.

Note: Actual product may have some structural differences, this instruction is only served as reference.

Downloading the EZ SmartHome

Open Android Play Store or IOS App Store in your smart phone, then enter "EZ SmartHome" in the Search bar to find the latest version. Download and install it. You can also scan the QR code below to download the latest version.



After the EZ SmartHome App is installed, You need to register an account and log in before using it. Run EZ SmartHome App, select "Register" and follow the tips in the App.

After you fill out the required information and click the "Get Verification Code", The system will send a verification code to your registered e-mailbox. Then submits the code and activates the account. After that, you will be required to input the password. Now you can sign in the application.

Before adding the refrigerator, please make sure your smartphone is connected to the Internet through a wireless router.

The smartphone can't add the refrigerator through cellular data service.

For specific instructions on adding a refrigerator, please refer to the instruction manual of the WIFI module.

Using your freezer drawer

- The freezer drawers are suitable for storage of foods required to be frozen, such as meat, ice cream and others.

Caution! Ensure that bottles or cans are not stored in the freezer as freezing may cause the bottle or can to burst.

Using the refrigerator chamber

The refrigerator chamber is suitable for storage of vegetables and fruits. Separate packing of different foods is recommended to avoid losing moisture or flavour permeating into other foods.

Caution!

Never close doors while the shelves, crisper and/or telescopic slides are extended. It may damage the unit.

- Follow these simple instructions to remove the crisper chamber, or freezer drawer, for cleaning. Empty the crisper chamber; pull it out to fully open position. Lift the crisper from the lateral slides. Push the slides fully in to avoid damage when closing the door

Water Dispenser


The water dispenser located in the fridge door is for storing drinking water. With this appliance you can obtain chilled water easily without opening the refrigerator. You should be informed of the following tips.

Before using

Before using this appliance for the first time, you should use it as follows.

1. Hold one bottom side of the door rack by a hand, lift up the opposite side by the other hand, when the slot of the door rack is off from the guide, and change hands to repeat these steps.
2. Hold one bottom side of the water tank by one hand, lift up the opposite side by the other hand, when the slot of the water tank is off from the guide, and change hands to repeat these steps.
3. Hold the two sides of the water tank tightly, lift up and put out of the water tank.
4. Unscrew the head, then clean the head, lids and the water tank.


Caution Drain the water tank before you take it down.

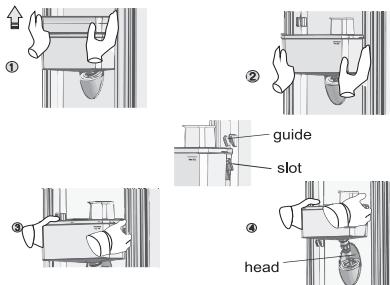

Assembling

After cleaning, please assemble the parts including the head, water tank and lids as follows:

1. Put the seal ring in order first (the seal ring cannot turn up), then insert the head into the hole.
2. Hold the two sides of the water tank tightly, fit the water tank along the guides on the door.
3. Push the two sides of the water tank downwards as the picture shows.
4. When you hear clicks on both sides and at the same time, then both sides of the water tank is closed to the door liner, It means the installation is complete.

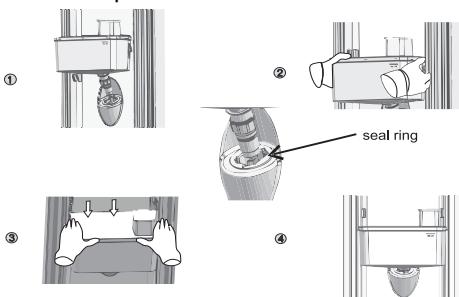


Filling water

Before you fill the drinking water into the water tank, ensure that the water tank is steady and in the correct position

Caution!

Fill with water up to 3.5L (which is suggested) and not above that level. Otherwise, it may overflow when the lids is closed.

We recommend that you fill the water in the following way.
Open the small lid and fill water from the inlet of the larger lid.

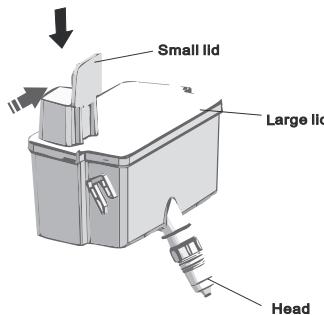


Warning!

Don't touch the other parts of the appliance when filling water, it may cause water leakage.

Please pour water slowly, or the water will overflow. In this situation, it may damage the mechanism.

Receiving Water

You should use the correct cups to receive water underneath the water dispenser.

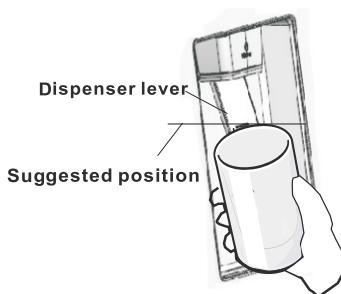

Warning!


Don't push the dispenser lever forward without a cup, it may cause water leakage from the dispenser.

Cleaning


1. Put the water tank out of the door carefully and then wash the tank, lid, and head lightly with water.
2. After you have successfully cleaned the appliance, you should dry it by normal air drying or using the dryer. If you have used the water dispenser many times, the water in the receiving tank may drop on the floor, which may make your floor wet. You should clean the tank with a dry towel regularly before refilling.

Twistable Ice Tray

- Twistable ice tray is placed in the freezer to make and store ice cubes, you should use it as follows
1. Pull out the twistable ice tray from the freezer compartment.
 2. Fill it with drinking water below the maximum level mark.

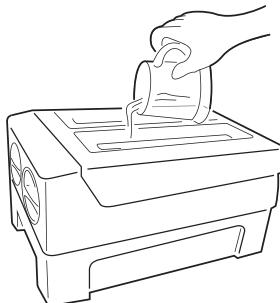

3. Place the filled ice tray back to the freezer compartment.
4. Wait for around 3 hours, twist the knobs clockwise and the ice will drop into the ice box below.

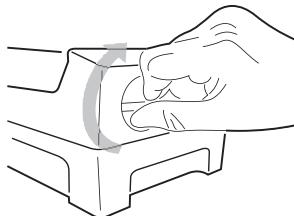

5. Ice cubes can be stored in the ice box, if you need them, you can pull out the ice box and take them out.

Note: If the ice tray is used for the first time or has not been used for a long time, please clean it before using.

Helpful hints and tips

Energy saving tips

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy.
- Ensure the appliance is away from any sources of heat (Direct sunlight, electric oven or cooker etc.)
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to Installing your new appliance chapter.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as this is designed to be the most energy efficient configuration.

Hints for fresh food refrigeration

- Do not place hot food directly into the refrigerator or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavour.
- Place food properly so that air can circulate freely around it.

Hints for refrigeration

- Meat (All Types) Wrap in polythene. Food: wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by food manufacturers.
- Cooked food, cold dishes, etc.: They should be covered and may be placed on any shelf.
- Fruit and vegetables: They should be stored in the special drawer provided.
- Butter and cheese: Should be wrapped in airtight foil or plastic film wrap
- Milk bottles:

Should have a lid and be stored in the door racks.

Hints for freezing

- When first starting-up or after a long period out of use, let the appliance run at least 2 hours on the higher settings before putting food into the compartment.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- Wrap up the food in aluminium foil or polyethylene food wraps which are airtight,
- Do not allow fresh, unfrozen food to touch the food which is already frozen to avoid temperature rise of the latter.
- Iced products, if consumed immediately after removal from the freezer compartment, will probably cause frost burns to the skin.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

Hints for the storage of frozen food

- Ensure that frozen food has been stored correctly by the food retailer
- Once defrosted, food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken to prevent formation of mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.

Caution! The appliance must not be connected to the mains during cleaning. Danger of electrical shock!

Before cleaning switch the appliance off and remove the plug from the mains socket.

Exterior cleaning

To maintain good appearance of your appliance, you should clean it regularly.

-Wipe the digital panel and display panel with a clean, soft cloth.

-Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance. This helps to ensure an even distribution of moisture to the surface.

-Clean the doors, handles and cabinet surfaces with a mild detergent and then wipe dry with a soft cloth.

Caution!

-Don't use sharp objects as they are likely to scratch the surface.

-Don't use Thinner, Car detergent, Clorox, ethereal oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the appliance and may cause fire.

Interior cleaning

You should clean the appliance interiors regularly. It will be easier to clean when food stocks are low. Wipe the inside of the fridge freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung-out sponge or cloth. Wipe completely dry before replacing the shelves and baskets.

Thoroughly dry all surfaces and removable parts.

Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open for too long. If the frost is too thick, choose a time when the supply of food stocks are low and proceed as follows:

1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the thawing process.

2. When defrosting is completed, clean your freezer as described above.

Caution! Don't use sharp objects to remove frost from the freezer compartment. Only after the interior is completely dry should the appliance be switched back on and plugged back into the mains socket.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

Caution! Only after the door seals are completely dry should the appliance be powered on.

Replacing the LED light:

Warning: The LED light must not be replaced by the user! If the LED light is damaged, contact the brand helpdesk for assistance. To replace the LED light, the below steps can be followed:

1. Unplug your appliance.
2. Remove light cover by pushing up and out.
3. Hold the LED cover with one hand and pull it with the other hand while pressing the connector latch.
4. Replace LED light and snap it correctly in place.

Defrosting

- Water contained in the food or getting into air inside the fridge by opening doors may form a layer of frost inside. It will weaken the refrigeration when the frost is thick.
- This appliance is a frost-free refrigerator, Automatic defrosts itself regularly, without manual defrost. Water from defrosting will be drained into a drip tray through a drain pipe. Then the water within the drip tray will be evaporated.

Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks according to this section before calling for Brand center helpline service.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a brand authorized service engineer.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned
	Some food, containers or wrapping may cause odours.

Noise from the appliance	<p>The sounds below are quite normal: Compressor running noises.</p> <p>Air movement noise from the small fan motor in the freezer compartment or other compartments.</p> <p>Gurgling sound similar to water boiling.</p> <p>Popping noise during automatic defrosting.</p> <p>Clicking noise before the compressor starts.</p>
	<p>Other unusual noises are due to the reasons below and may need to be checked and taken action for:</p> <p>The cabinet is not level.</p> <p>The back of appliance touches the wall.</p> <p>Bottles or containers have fallen or are rolling.</p>
The motor runs continuously	<p>It is normal to frequently hear the sound of the motor, it will need to run more in the following circumstances:</p> <p>Temperature setting is set colder than necessary</p> <p>Large quantity of warm food has recently been stored within the appliance.</p> <p>The temperature outside the appliance is too high.</p> <p>Doors are kept open for too long or too often.</p> <p>After installation of the appliance or it has been switched off for a long time.</p>
A layer of frost occurs in the compartment	<p>Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to cleaning and care chapter.</p>
Temperature inside is too warm	<p>You may have left the doors open too long or opened too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top</p>

Temperature inside is too cold	Increase the temperature by following the "Display controls" chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self-close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly levelled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	<p>The LED light may be damaged. Refer how to replace LED lights in the cleaning and care chapter.</p> <p>The control system has disabled the lights due to the door being kept open for too long, close and reopen the door to reactivate the lights.</p>

Disposal of the appliance

It is prohibited to dispose of this appliance in domestic household waste.

For disposal there are several possibilities:

- a) The municipality has established collection systems, where electronic waste can be disposed of at least free of charge to the user..
- b) As old products contain valuable resources, they can be sold to scrap metal dealers. Wild disposal of waste in forests and landscapes endangers your health when hazardous substances leak into the ground-water and find their way into the food chain.

	Disposal & RoHS Declaration
	<p>This marking indicates that this product should not be disposed with other household wastes throughout India. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p> <p>This product is ROHS compliant</p> <p>RoHS COMPLIANT</p>

- To avoid contamination of food, please respect the following instructions

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Regularly, clean surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drips onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making ice-cream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartment Type	Target storage temp. [°C]	Appropriate food
1	Fridge	2 ~+8	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods are not suitable for freezing.
2	(***)*-Freezer	≤-18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.

3	***-Freezer	≤-18	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
4	**-Freezer	≤-12	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 2 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
5	*-Freezer	≤-6	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 1 months, the longer the storage time, the worse the taste and nutrition), are not suitable for frozen fresh food.
6	0-star	-6~0	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably no more than 3 days). Partially encapsulated processed foods (non-freezable foods)

7	Chill	-2~ +3	Fresh/frozen pork, beef, chicken, freshwater aquatic products, etc. (7 days below 0 °C and above 0 °C is recommended for consumption within that day, preferably no more than 2 days). Seafood (less than 0 for 15 days, it is not recommended to store above 0 °C)
8	Fresh Food	0 ~+4	Fresh pork, beef, fish, chicken, cooked food, etc. (Recommended to eat within the same day, preferably no more than 3 days)
9	Wine	5 ~+20	red wine, white wine, sparkling wine etc.

Note: please store different foods according to the compartments or target storage temperature of your purchased products.

If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould formation within the appliance.

Water dispenser cleaning (special for water dispenser products): Clean water tanks if they have not been used for 48 h; flush the water system connected to a water supply if water has not been drawn for 5 days.

WARNING! Food needs to be packed in bags before putting into the refrigerator, and liquids need to be packed in bottles or capped containers to avoid spillages. The product design structure is not easy to clean.

Warranty Terms & Conditions

Flipkart India Private Limited ("Company") warranties the product to be free from manufacturing defects or any other specific defect as may be specified in the Specific Terms and Conditions below. The warranty is for a period mentioned in the Specific Terms and Conditions below, the invoice (if not specified in the Specific Terms and Conditions below), as well as the product listing page, and such period shall commence from the date of purchase of the product by the first end user. This is a non-transferable warranty, valid only in the territory of India and extended only to the first end user customer ("Customer") basis the following terms and conditions, which the Customer is deemed to have accepted upon purchase of the product

1. The warranty period of the product is 1 year, commencing from the date of purchase. Warranty service which includes replacement or repairs, will be carried out through the Authorised Service Centers ("ASC/s") only.
2. Warranty will be valid only when the original purchase invoice is presented at the time of service. Company reserves the right to decline warranty service, if the purchase invoice is not presented.
3. In case of commercial usage of the product, warranty period would be limited to 90 days only.
4. Warranty will cover only functional parts, issues having manufacturing defects and does not cover damages to the product resulting from unauthorised adaptations/ adjustments/ tampering/ repair , improper installation or placement, mishandling, improper use, deviation from the instructions set out in the user manual (if applicable) normal wear and tear caused due

to use of the product.

5. Warranty does not cover any external accessories and fittings to the product.
6. All plastic, rubber, glass, or aesthetic parts and consumable replacements will be on a chargeable basis.
7. Warranty shall not apply to damages caused to the product by accident, voltage fluctuations, lightening, ingress of water (beyond certified limits, if any), fire or any other natural calamity, improper ventilation, dropping or excessive shock, or any external cause beyond Company's control.
8. Company is not liable to provide repair services or spare parts after the period of warranty expires and the same if provided will be on a chargeable basis.
9. Whilst the Company, through its ASC, shall make every effort to carry out the service at the earliest, it is expressly clarified that the Company is under no obligation to do so within a certain time period.
10. Whilst Company would take all necessary steps to repair the product under warranty and maintain sufficient stock of the spare parts of the products, in certain cases, at its sole discretion, Company may due to non-availability of spare parts of the product or product being in a state which is beyond economic repair, offer a replacement scheme to the Customer. The terms of such replacement offer is subject to change from year to year and shall also be applicable on the maximum retail price of the product
11. All transportation & handling expenses incurred while replacing or repairing will be payable by the Customer.
12. For any warranty claim requested by the Customer from the region beyond municipal limits of the jurisdiction of the ASC, a

visit by an authorised service personnel may be arranged by the Company through its ASC, on a case to case basis, at its sole discretion and the charges towards such visit will be borne by the Customer.

13. Warranty shall be void if: The type or serial no. on the product has been altered, removed or defaced. The product is not operated as per the instructions given in the User Guide, if any. The defects are caused by household pets, rats, cockroaches or any other animals or insects.

14. The warranty automatically expires after the period of time stated in the product invoice even if the product may not be in use for any time for whatever reasons.

15. This Warranty shall not affect Customer's statutory rights under any applicable law.

16. Customer agrees to indemnify and keep Company harmless against all damages, liabilities, costs, expenses, claims, suits and proceedings (including reasonable attorney's fee) that may be suffered by the Company as a consequence of: (i) violation of these terms and condition by the Customer;

(ii) violation of applicable laws by the Customer; (iii) any action or inaction resulting in willful misconduct or negligence on the customer's part.

17. In the event of repairs of any part (s) of the product, the Warranty will thereafter continue and remain in force only for the unexpired period of the Warranty. Moreover, the time taken for repair and in transit whether under the Warranty or otherwise shall not be excluded from the Warranty period.

18. None of the employees, sellers, dealers or ASCs of the Company have the authority to vary these terms and conditions.

19. Customer agrees that the courts at Bangalore shall have the exclusive jurisdiction to settle any dispute that may arise in relation to this Warranty or these terms and conditions.

20. COMPANY SHALL NOT BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, SPECULATIVE OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, ANY LOSS OF USE, BUSINESS INTERRUPTION, AND LOSS OF INCOME OR PROFITS, IRRESPECTIVE OF WHETHER IT HAD AN ADVANCE NOTICE OF THE POSSIBILITY OF ANY SUCH DAMAGES.

21. For any further information / assistance please contact our customer Redressal cell at:

Consumer Care Officer,
Flipkart India Private Limited,
Buildings Alyssa, Begonia & Clove
Embassy Tech Village,
Outer Ring Road,
Devarabeesanahalli Village Bangalore,
Karnataka-560103
India
Tel. no. : 080-46331090
Email - support.moto@flipkart.com

KEEP OUT OF REACH OF CHILDREN

Children should be supervised to ensure that they do not play with the appliance



4165271