

2020-11-03



Catalogue

Introduction	1
Product functions	2-4
Remote control	5-6
Technical Indicators	7
Packing list	7
FQA	8

Dear users:

Thanks for your purchasing.Please read the directions carefully before using and follow the correct instructions.

Matters needing attention:

To ensure safety, please read carefully and follow the following safety instructions:

1. The equipment is up to The China Compulsory Certification.

2. The equipment should be used in a dry environment.

3.Do not place a fire source near the equipment.

4.Do not use near water source to avoid corrosion of products and accessories.


5.Do not open or disassemble or repair the battery module by yourself.There will be a risk of explosion if the battery is not replaced properly.Do not put the battery into water, fire or any overheated environment.

6. When taking an airplane, please follow the relevant regulations and regulations of the airline company to turn off this product before the airplane takes off to avoid any hidden danger.

7. The charging cable cannot be squeezed, pulled, bent, knotted, or suspended from heavy objects in order to avoid damage to the insulation layer of it and cause electric shock.

1

Guide to control and setting

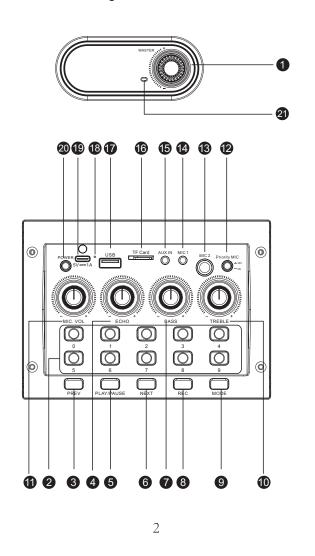

Operation Guide

1.Master: Main volume control knob

2.Number Key: Press to switch to the program with the corresponding serial number

3.Previous: Short press to switch to the last program; long press to fast backward.

4.Reverb: Adjust reverb.

5.Play/Pause: Short press to play/pause; In radio mode,long press for automatic radio station search; In bluetooth mode,long press for

TWS(only valid for the same model)

6.Next: Short press to switch to the next program; long press to fast forward.

7.Bass: Adjust bass sound.

8.REC: Long press to record audio, during this process, short press to stop recording. When there is a recording file in the storage device, short press is to play the recording file. (The recording function is only available when a storage device is pluged in)

9.Mode: short press to switch between bluetooth,flash card,TF card and FM radio.When bluetooth has already connected,long press to disconnect.

10.Treble: Adjust treble sound

11.MIC VOL: Adjust microphone volume

12.MIC Priority: When use microphone while playing audio, press this

3

button to reduce the sound of the background audio

13.Dynamic Microphone jack(6.35mm)

14.Condenser Microphone jack(3.55mm)

15.AUX IN Jack

16.TF Card Port

17.USB Port

18.Charging Indicator Light

19.5V Charging Port

20.Power

21.Sound Receiver Hole

 Turn on bluetooth on your mobile device. Press "Mode" key and switch the speaker to BT mode. Select "JYX-66BT" from available devices.(If JYX-66BT is navailable, please switch back to Bluetooth mode and try again) UX- IN ransmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. M Radio .Pull out the antenna on the top of speakerPress "Mode" key to switch to radio stationLong press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. 		
Turn on bluetooth on your mobile device. Press Mode" key and swlich the speaker to BT mode. Select 'JY-K-6BBT 'rom available devices. (If JYX-6BBT is navailable, please swlich back to Bluetooth mode and try again) UX- IN ransmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. Press 'Ndoe" key to switch to radio station. Long press 'Play/Playes' key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press 'Note' or 'Previous' to select your own station. Long press 'REC' again to play the recording audio. WS Function O use this feature, two JYX-66BT systems are required. . Turn on the two JYX-66BT systems are required. . Long press "REC' battr recording audio. WS Function O use this feature, two JYX-66BT systems are required. . Long press "PLAY/PAUSE" button of either of the two tachines (OH) need to press context customer erromp tone and stop flashing. TWS function will be activated by then. . Connect your device with the speaker and pary music. . Long press "PLAY/PAUSE" button again to inactivate TWS function. 'you're still wondering about these steps, please contact customer ervice team for a video Lutorial-iservice-us@gs2yx.com. on		
Press "Wode" key and switch the speaker to BT mode. Select "JYX-66BT" from available devices. (If JYX-66BT is navailable.please switch black to Bluetooth mode and thy again) UX- IN transmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. M Radio Pull out the antenna on the top of speaker. Press "Nede" key to suich to radio station. Long press "Play/Pause" key to seach and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. EC Plug in a TF card or flash card Long press "REC" again to play the recording audio. WS Function 0 use this feature.two JYX-66BT systems are required. .Long press "PLAY/PAUSE" button of either of the two tachines (Ohy need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button of again to inaclivate TWS function. You're still wondering about these steps, please contact customer ervice team for a video Lutorial service-us@gszjyx.com. on	Bluetooth Connection	Remote control
Select "JYX-66BT" from available devices.(If JYX-66BT is navailable, please switch back to Bluetooth mode and try again) UX- IN ransmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. M Radio .Pull out the antenna on the top of speaker. .Press "Mode" key to switch to radio station. .Long press "Play/Playse" ky to search and save more available tations automatically. .Press "Next" or "Previous" to select your own station. .Long press "Play/Playse" ky to search and save more available tations automatically. .Press "Next" or "Previous" to select your own station. .Long press "REC" to start recording, short press to end recording. .Short press "REC" again to play the recording audio. WS Function o use this feature, two JYX-66BT systems are required. .Long press "PLAY/PAUSE" button of either of the two machines (Ohly need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. You're still wondering about these steps, please contact customer ervice team for a video Lutorial: service-us@gszJyx.com. on	.Turn on bluetooth on your mobile device.	
navailable, please switch back to Bluetooth mode and try again) UX- IN Transmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. M Radio Pull out the antenna on the top of speaker. Press Node' key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press Next' or 'Previous' to select your own station. Long press "REC' to start recording short press to end recording. Short press "REC' again to play the recording audio. WS Function 0 use this feature, two JYX-66BT systems are required Long press "REC' to start recording abut the speaker and play music Long press "REC' to start recording the activated by then Connect your device with the speaker and play music Long press "REX/PAUSE" button of either of the two tachines (will flash "BLUE" on screen Long press "REX/PAUSE" button of play the activated by then Connect your device with the speaker and play music Long press "REX/PAUSE" button again to inactivate TWS function. You're still wondering about these steps, please contact customer ervice Learn for a video tutorial:service-us@sziyx.com.cn	.Press "Mode" key and switch the speaker to BT mode.	
UX-IN ransmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. M Radio Pull out the antenna on the top of speaker. Press "Mode" key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. Short press "REC" to start recording, short press to end recording. Short press "REC" to start recording audio. WS Function 0 use this feature, two JYX-66BT systems are required. Long press "REAV/PAUSE" button of either of the two rachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker end play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. You're still wondering about these steps, please contact customer ervice Leam for a video Lutorial:service-us@szjyx.com.cn	.Select "JYX-66BT" from available devices.(If JYX-66BT is	
ransmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. M Radio .Pull out the antenna on the top of speaker. .Press Mode' key to switch to radio station. .Long press "Play/Pause' key to search and save more available tations automatically. .The station searching completed when it no longer switch automatically. .Press Next' or "Previous" to select your own station. .Long press "REC" to start recording, short press to end recording. .Short press "REC" to start recording audio. WS Function o use this feature, two JYX-66BT systems are required. .Turn on the two JYX-66BT and turn them both into Bluetooth mode.Two tachines will flash "BLUE" on screen. .Long press "PLAY/PAUSE" button of either of the two tachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function. You're still wordering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn	navailable,please switch back to Bluetooth mode and try again)	
ack, the speaker will play the audio from input device automatically. ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio rom USB/TF card automatically. M Radio Pull out the antenna on the top of speaker. Press "Mode" key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. HEC Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" to start recording, short press to end recording. Short press "REC" to start recording audio. WS Function to use this feature, two JYX-66BT and turn them both into Bluetooth mode. Two nachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two nachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. You're still wordering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn	UX-IN	
 ISB and TF Input When insert USB or TF card into speaker, the speaker will play the audio om USB/TF card automatically. M Radio Pull out the antenna on the top of speaker. Press "Mode" key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. EC Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" to start recording, short press to end recording. Short press "REC" to start recording audio. WS Function o use this feature, two JYX-66BT and turn them both into Bluetooth mode. Two hachines(Only need to press one button), the other machine will make a nompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. You're still Wondering abut these sets pe, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn	ransmit audio without Bluetooth by plug 3.5mm audio cable into AUX IN	
 When insert USB or TF card into speaker, the speaker will play the audio from USB/TF card automatically. M Radio Pull out the antenna on the top of speaker. Press "Mode" key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The stations earching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. REC Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" to start recording audio. WS Function o use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT systems are required. Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. Yoou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.en	ack, the speaker will play the audio from input device automatically.	
rom USB/TF card automatically. M Radio .Pull out the antenna on the top of speaker. .Press "Mode" key to switch to radio station. .Long press "Play/Pause" key to search and save more available tations automatically. .The station searching completed when it no longer switch automatically. .Press "Next" or "Previous" to select your own station. EEC .Plug in a TF card or flash card .Long press "REC" to start recording short press to end recording. .Short press "REC" to start recording audio. WS Function o use this feature, two JYX-66BT systems are required. .Long press the "PLAY/PAUSE" button of either of the two nachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. .You're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn	JSB and TF Input	MODE
M Radio .Pull out the antenna on the top of speaker. .Press "Mode" key to switch to radio station. .Long press "Play/Pause" key to search and save more available tations automatically. .Press "Next" or "Previous" to select your own station. .EC .Plug in a TF card or flash card .Long press "REC" to start recording, short press to end recording. .Short press "REC" to start recording audio. WS Function o use this feature, two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. .Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. .your e still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn	Vhen insert USB or TF card into speaker, the speaker will play the audio	
 Pull out the antenna on the top of speaker. Press "Mode" key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. REC Plug in a TF card or flash card Long press "REC" to start recording short press to end recording. Short press "REC" again to play the recording audio. WS Function o use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. Fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 	rom USB/TF card automatically.	
 Pull out the antenna on the top of speaker. Press "Mode" key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. REC Plug in a TF card or flash card Long press "REC" to start recording short press to end recording. Short press "REC" again to play the recording audio. WS Function o use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. Fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 	Madio	0
 Press "Mode" key to switch to radio station. Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. REC Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" again to play the recording audio. WS Function Yux For Start recording audio. WS Function Yux on the two JYX-66BT systems are required. Long press "PLAY/PAUSE" button of either of the two nachines will flash "BLUE" on screen. Long press "PLAY/PAUSE" button of either of the two nachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. Yyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 		0
 Long press "Play/Pause" key to search and save more available tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. EC Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" again to play the recording audio. WS Function o use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 		
tations automatically. The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. EEC Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" again to play the recording audio. WS Function o use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. 'you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		(D) with
 The station searching completed when it no longer switch automatically. Press "Next" or "Previous" to select your own station. REC Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" again to play the recording audio. WS Function oo use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 	tations automatically.	
 Press "Next" or "Previous" to select your own station. Plug in a TF card or flash card Long press "REC" to start recording, short press to end recording. Short press "REC" again to play the recording audio. WS Function o use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 		•
 .Plug in a TF card or flash card .Long press "REC" to start recording, short press to end recording. .Short press "REC" again to play the recording audio. WS Function ouse this feature, two JYX-66BT systems are required. .Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. .Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 	Press "Next" or "Previous" to select your own station.	COMPACT AND A DESCRIPTION
 .Plug in a TF card or flash card .Long press "REC" to start recording, short press to end recording. .Short press "REC" again to play the recording audio. WS Function ouse this feature, two JYX-66BT systems are required. .Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. .Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 		- And - And - And -
 Long press "REC" to start recording, short press to end recording. Short press "REC" again to play the recording audio. WS Function ouse this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two hachines (Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. Fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn 		4 5 6 0
Short press "REC" again to play the recording audio. WS Function to use this feature, two JYX-66BT systems are required. . Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. . Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. . Connect your device with the speaker and play music. . Long press "PLAY/PAUSE" button again to inactivate TWS function. f you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn	-	CONTRACTOR OF THE
WS Function To use this feature, two JYX-66BT systems are required. Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. Connect your device with the speaker and play music. Long press "PLAY/PAUSE" button again to inactivate TWS function. f you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
To use this feature, two JYX-66BT systems are required. .Turn on the two JYX-66BT and turn them both into Bluetooth mode. Two hachines will flash "BLUE" on screen. .Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. Fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn	.Short press "REC" again to play the recording audio.	0
.Turn on the two JYX-66BT and turn them both into Bluetooth mode.Two hachines will flash "BLUE" on screen. .Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. Fyou're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
Anachines will flash "BLUE" on screen. .Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button), the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. f you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
Long press the "PLAY/PAUSE" button of either of the two hachines(Only need to press one button),the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. 'you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
nachines(Only need to press one button),the other machine will make a rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. You're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
rompt tone and stop flashing. TWS function will be activated by then. .Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
.Connect your device with the speaker and play music. .Long press "PLAY/PAUSE" button again to inactivate TWS function. you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
.Long press "PLAY/PAUSE" button again to inactivate TWS function. you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
f you're still wondering about these steps, please contact customer ervice team for a video tutorial:service-us@szjyx.com.cn		
ervice team for a video tutorial:service-us@szjyx.com.cn		
4 5		
	4	5

Directions of Remote Control	Product Parameters
1.Silent:press to Silent ON,press again to Silent OFF.	Model: JYX-65BT
2.Mode:Press to switch the system between USB,TF card,Radio	Speaker size: 6.5 inch bass + 2 inch treble
station,AUX IN and Bluetooth modes.	RMS: 15W
3.BT:Press to switch to Bluetooth mode in any working state.	Input voltage: 5V
4.Play/Pause:When in USB/TF card mode,short press to play/pause the	Package includes Speaker system
program,long press to repeat.When FM works,short press to silent	Charging cable1PC
ON,long press is for searching radio stations.	User manual1PC
	Remote control1PC
5.Next.	3.55mm audio cable1PC
6.REC	Adjustable shoulder strap1PC
7.Digital keys:Press to play the program with the corresponding serial	
number.	
8.Repeat:Press for single loop and list loop.	
9.Vol+	
10.PREV.	
11.Vol-	
12.REC Play:Press to play the recording file.	
6	7

FAQ

- Q:The system can not start up.
- A:Charging the built-in battery;
- Check if the adapter is connected securely.
- Q:The system provides no sound. A:Check if the system is power on. Adjust the volume.
- Q:The Bluetooth connection is not available. A:Move your device closer to the system. Check to see if the Bluetooth is engaged.
- Q:Unable to connect two system with TWS feature. A:Make sure the two systems are within one meter of each other.
- Q:Reset the system.
- A: If the system does not respond to any operations, long press "Power" key for 8 seconds to reset the system.
- (Notes: If necessary, contact after-sales team)

Contact Information

SHENZHEN CITY JIAYUXIANG ACOUSTICS ELECTRONIC CO.,LTD. JIA YU XIANG(HK)INTERNATIONAL ELECTRONICS CO.,LIMITED Factor address:NO.7th Building,Houhaixufa Industrial Zone, Loucun,Gongming town,Guangming District,Shenzhen,China TEL:+(86)-0755-23410725 FAX:+(86)-0755-27508507 Website:www.szjyx.com.cn E-mail:service-us@szjyx.com.cn

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.