


HIGH PERFORMANCE BLENDER
INSTRUCTION MANUAL

KING

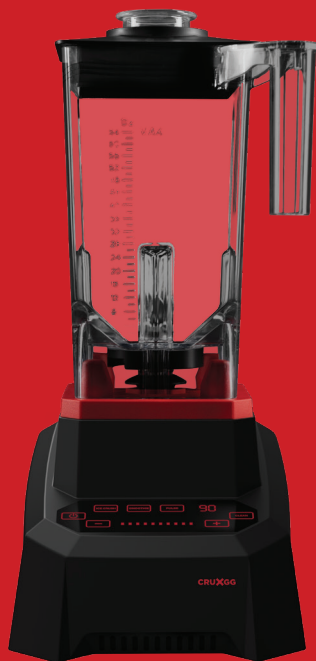

CRUXGG™

TABLE OF CONTENTS

Important Safeguards	2-3
Additional Important Safeguards	4-5
Notes on the Cord	5
Notes on the Plug.....	5
Plasticizer Warning.....	6
Electric Power.....	6
Getting to Know Your CRUXGG™ High Power Blender.....	7
Control Panel	8
Before Using For the First Time	8
Operating Instructions.....	9
Using the Variable Speed Control Settings	10
Using the Smoothie Function	10
Using the Ice Crush Function	11
Using the Clean Function.....	11
Using the Pulse Function	12
User Maintenance Instructions	12
Manual Thermal Protector.....	12
Care & Cleaning Instructions.....	13
Storing Instructions.....	13
Warranty	14-15

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following;

1. READ ALL INSTRUCTIONS.

2. To protect against risk of electrical shock do not put cord, plugs, or appliance in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
4. Close supervision is necessary when any appliance is used by or near children.
5. This blender is not a toy. Children should be supervised to ensure they do not play with the appliance.
6. Turn the appliance OFF, then unplug from outlet when not in use, before putting on or taking off attachments and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

CAUTION: FLASHING LIGHT INDICATES READY TO OPERATE. AVOID CONTACT WITH MOVING PARTS.

7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or it is dropped, or has been damaged in any manner. Contact Consumer Service for examination, repair or adjustment.
8. The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.

9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surfaces, including the stove.
12. Blades are sharp. Handle carefully.
13. Do not blend hot liquids.
14. Never use the blender jar to process food without the lid and lid cap properly locked in place.
15. Never place any blender attachments into a microwave oven.
16. Keep hands and utensils out of the jar while blending to reduce the risk of severe injury to persons or damage to the unit. A scraper may be used but be used only when the blender is not running.
17. Always operate the blender with its cover in place.
18. Never add ingredients to the jar while the appliance is operating.
19. The jar must be properly assembled and in place before operating the appliance.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

ADDITIONAL IMPORTANT SAFEGUARDS

1. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. The cord to this appliance should be plugged into a 120V AC electrical outlet only.
3. If this appliance begins to malfunction during use, immediately press the ON/OFF function or the function actively in use (with illuminated indicator light) and unplug the cord. Do not use or attempt to repair the malfunctioning appliance.
4. If this appliance falls or accidentally becomes immersed in water, unplug it immediately. Do not reach into the water!
5. Do not use this appliance after it has fallen into or becomes immersed in water.
6. To reduce the risk of injury to persons or property, never use this appliance in an unstable position.
7. Do not use this appliance for other than its intended use.
8. Do not use if the jar is cracked or chipped.

IMPORTANT: DO NOT OVERFILL. NEVER FILL INGREDIENTS BEYOND THE JAR'S MAX LINE.

WARNING: FAILURE TO ADD ENOUGH LIQUID BEFORE PROCESSING MAY CAUSE THE JAR TO BREAK OR CHIP.

WARNING: TO AVOID SPILLS, MAKE SURE THE LID IS PROPERLY LOCKED IN PLACE ON THE JAR WITH THE LID CAP IN POSITION BEFORE PRESSING ANY SPEED OR PRE-PROGRAMMED BUTTONS.

NOTES ON THE PLUG

This appliance has a grounded 3-prong plug. Connect to a properly grounded outlet only. If the plug does not fit fully into the outlet, contact a qualified electrician. Do not attempt to modify the plug in any way.

NOTES ON THE CORD

- A. A short power-supply cord (or detachable power-supply cord) is provided to reduce risks from tangling or tripping over.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
 - 1) the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) if the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord; and
 - 3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled by children or tripped over.

PLASTICIZER WARNING

CAUTION: TO PREVENT PLASTICIZERS FROM MIGRATING TO THE FINISH OF THE COUNTER TOP OR TABLE TOP OR OTHER FURNITURE, PLACE NON-PLASTIC COASTERS OR PLACE MATS BETWEEN THE APPLIANCE AND THE FINISH OF THE COUNTER TOP OR TABLE TOP. FAILURE TO DO SO MAY CAUSE THE FINISH TO DARKEN; PERMANENT BLEMISHES MAY OCCUR OR STAINS CAN APPEAR.


ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

GETTING TO KNOW YOUR CRUXGG™ BLENDER

Product may vary slightly from illustration

1. 1.5 oz Center Measuring Cap
2. Blending Jar Cover
3. 64 oz Tritan™ Jar
4. Stainless Steel Blending Blades
5. Motor Base
6. ON/OFF switch
7. Control Panel
8. Grounded 3-prong plug (not shown)
9. Non-Skid Feet

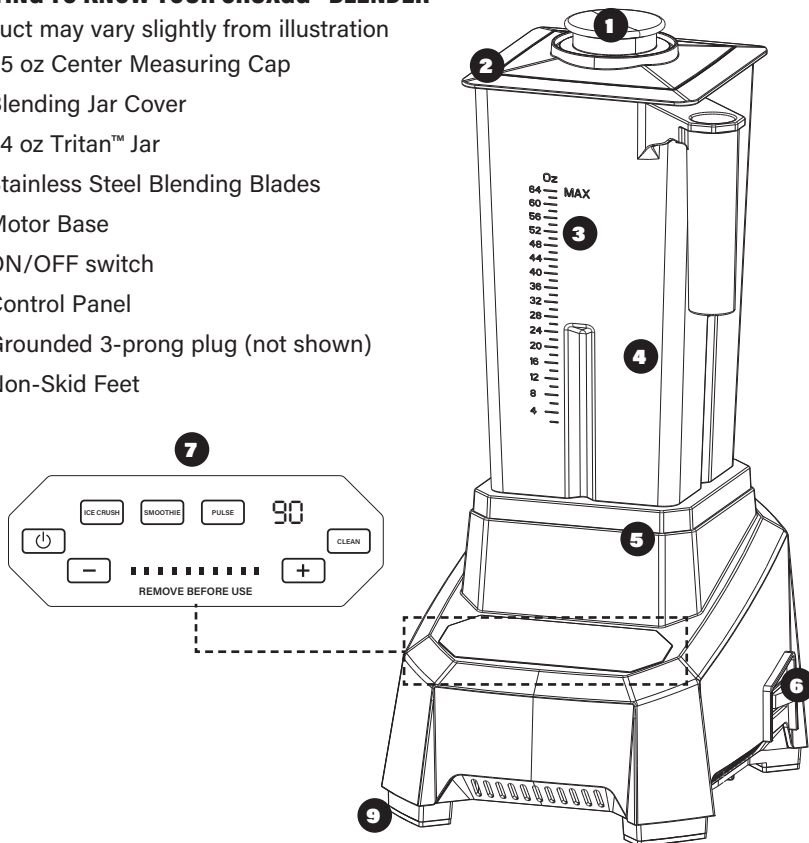

CONTROL PANEL

1. The blender is equipped with an intuitive capacitive touch control panel with dead front appearance and armed with 10 variable speeds, a Pulse function, and 3 preset settings and timer.
2. Use the variable speed control settings to control how your ingredients are incorporated and achieve your desired consistency.
3. Blending on the go? Use the 3 preset settings for seamless blending – Smoothie, Ice Crush and Clean. Each setting is preset and timed to achieve the expected result. Select the Pulse setting for short bursts of power. This function blends ingredients through controlled pulses. This setting helps dislodge ingredients clumped around the blade and at the bottom of the jar.

BEFORE USING FOR THE FIRST TIME

Carefully unpack the CRUXGG™ Blender and remove all packaging materials. Check the contents to ensure that all attachments (64 oz. jar, lid, lid measuring cap and blending blade) are present.

1. Wash the jar, lid, lid cap, and stainless steel blade in warm, soapy water before first use. Rinse thoroughly.

WARNING: DO NOT TOUCH BLADES. BLENDING BLADES ARE VERY SHARP. USE EXTREME CARE WHEN HANDLING. FAILURE TO DO SO CAN RESULT IN PERSONAL INJURY.

2. Wipe the motor base with a damp cloth.

WARNING: DO NOT IMMERSE THE MOTOR BASE IN WATER.

OPERATING INSTRUCTIONS

1. Place the motor base on a flat, clean, dry counter top or table.
2. Place jar onto the motor base and add ingredients into the jar.

NOTE: WHEN BLENDING, FOODS OR LIQUIDS TEND TO EXPAND AS THEY RISE UP THE SIDE OF THE JAR. DO NOT FILL JAR PAST ITS MAX LINE.

WARNING: PAY CLOSE ATTENTION WHILE PROCESSING. NEVER OPERATE THE CRUXGG™ BLENDER WHEN THE JAR IS EMPTY.

3. To avoid spills, ensure that the lid is firmly secured to the jar. Press the lid down on the top portion of the jar until it rests firmly in place. Place the measuring cap into the center of the lid and twist clockwise to secure it safely in place. Use the measure cap to measure and add ingredients prior to commencing any operation.
4. Plug the unit into a 120V outlet and turn the power switch on the side of the housing to the ON position.
5. The Power button will flash for 15 seconds once the power switch on the side of the housing has been turned to the On position.

USING THE VARIABLE SPEED CONTROL SETTINGS:

1. Press the Power button for the control panel to illuminate.
2. Press the + button to begin selecting your desired speed setting. All functions besides the + function and the Power button will disappear. The + function will begin flashing. Press the + function to activate the blender.

NOTE: IF YOU ACCIDENTALLY PRESS THE + FUNCTION, PRESS THE POWER BUTTON AND THE ENTIRE CONTROL PANEL WILL ILLUMINATE.

3. Once you have moved to speed 2, the option to go up (+) or down (-) in speed becomes available and the - function will illuminate.
4. The timer will begin counting up.
5. To end the blending process, select the Power button.

USING THE SMOOTHIE FUNCTION:

1. Press the Power button for the control panel to illuminate.
2. Press the Smoothie function. All functions besides the Smoothie function and Power button will disappear. The Smoothie function will begin flashing. Press the Smoothie function again to activate the blender.

NOTE: IF YOU ACCIDENTALLY PRESS THE SMOOTHIE FUNCTION, PRESS THE POWER BUTTON AND THE ENTIRE CONTROL PANEL WILL ILLUMINATE.

3. The timer will begin counting down from the preset 60 second cycle.
4. To end the blending process, select the Power button. If you do not end the blending process before the 60 second blending cycle, the blender will automatically power off once the cycle has ended.

USING THE ICE CRUSH FUNCTION:

1. Press the Power button for the control panel to illuminate.
2. Press the Ice Crush function. All functions besides the Ice Crush function and Power button will disappear. The Ice Crush function will begin flashing. Press the Ice Crush function again to activate the blender.

NOTE: IF YOU ACCIDENTALLY PRESS THE ICE CRUSH FUNCTION, PRESS THE POWER BUTTON AND THE ENTIRE CONTROL PANEL WILL ILLUMINATE.

3. The timer will begin counting down from the preset 10 second cycle.
4. To end the blending process, select the Power button. If you do not end the blending process before the 10 second blending cycle, the blender will automatically power off once the cycle has ended.

USING THE CLEAN FUNCTION:

1. Press the Power button for the control panel to illuminate.
2. Press the Clean function. All functions besides the Clean function and Power button will disappear. The Clean function will begin flashing. Press the Clean function again to activate the blender.

Note: If you accidentally press the Clean function, press the Power button and the entire control panel will illuminate.

3. The timer will begin counting down from the preset 90 second cycle.
4. To end the blending process, select the Power button. If you do not end the blending process before the 90 second blending cycle, the blender will automatically power off once the cycle has ended.
5. For care and cleaning instructions, reference the section on page 12.

USING THE PULSE FUNCTION:

1. Press the Power button for the control panel to illuminate.
2. Press the Pulse function. All functions besides the Pulse function and Power button will disappear. The Pulse function will begin flashing. The Pulse function is used for short bursts of power. Press and hold the Pulse function to activate. Once the function has been released, the blender will stop operating.

NOTE: IF YOU ACCIDENTALLY PRESS THE PULSE FUNCTION, PRESS THE POWER BUTTON AND THE ENTIRE CONTROL PANEL WILL ILLUMINATE.

4. The timer will begin counting the number of Pulses that are activated.
5. To end the Pulsing, select the Power button.

HINT! A SMALL SPATULA IS HELPFUL FOR REMOVING THICKER PROCESSED FOODS.

6. Once you are done blending, turn the On/Off switch to the Off position.
7. Unplug the CRUXGG™ Blender when not in use and before cleaning.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Contact the customer service department for any unusual issues you may experience.

MANUAL THERMAL PROTECTOR

This product is equipped with a Manual Thermal Protector to protect the motor. If the motor shuts down, turn the On/Off switch to the Off position and unplug the blender. Let the blender rest for approximately 60 minutes. Once the resetting period has elapsed, plug the power cord back into outlet and turn the side switch to On position to continue blending.

CARE & CLEANING INSTRUCTIONS

CAUTION: NEVER IMMERSE THE MOTOR BASE, PLUG OR CORD IN WATER OR ANY OTHER LIQUID.

1. Always unplug the CRUXGG™ Blender before cleaning.
2. To clean the blender jar by hand: Mix 1 drop of dishwashing detergent with 1 cup of cool water and add it to the blender jar. Scrub and rinse out the interior of the blender jar and the lid to dislodge and remove as much residue as possible. Empty the blender jar. Add another few drops of dishwashing detergent to the blender jar with 1 cup of cool water. Put the lid on the blender jar, place the jar on blender base, plug the blender in and run on high speed for two minutes.

NOTE: DO NOT FILL THE BLEND JAR ABOVE THE MAX FILL LINE FOR CLEANING.

3. To clean the blender base, unplug the power cord. Wipe the exterior surfaces with a soft cloth or sponge dampened with cleaning solution. Rinse with clean water. Do not immerse the base in cleaning solution or water. Wipe the base with a dry towel.
4. Always wash and rinse the blender jar prior to initial use.

STORING INSTRUCTIONS

1. Unplug and clean unit.
2. Store in original box or in a clean, dry place.
3. Never store the CRUXGG™ Blender while it is hot or plugged in.
4. Never wrap cord tightly around the appliance. Never place any stress on cord, especially where the cord enters the motor base, as this could cause the cord to fray and break.

LIMITED TWO-YEAR WARRANTY

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

Exclusions:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

How To Obtain Warranty Service:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.



For customer service, call 1-866-832-4843
or email help@cruxkitchen.com
For recipes, visit www.cruxgg.com

SENSIO Inc.
New York, NY 10016/USA

14981 Rev. 7