


BLUETOOTH FLAME SPEAKER

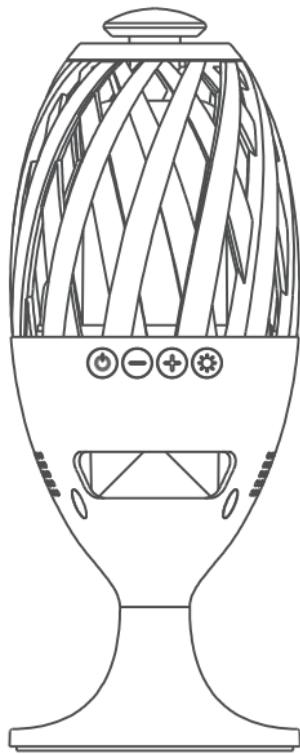

USER MANUAL

MODEL: 354958



Goodmans



1 Welcome

2 Your Bluetooth Flame Speaker

- 2.1 In the box
- 2.2 Back View
- 2.3 Side View
- 2.4 Accessories View

3 Quick Setup

- 3.1 Charging Your Bluetooth Flame Speaker
- 3.2 Pairing With a Bluetooth Device
- 3.3 Playing Your Music
- 3.4 Using the Supplied Table Stand or Garden Spike
- 3.5 Storage

4 Troubleshooting

5 Technical Specifications

6 EC Declaration



1 Welcome

Thank you for choosing this Goodmans product. We've been making electrical products for the British people for over 90 years. Each of our products has been carefully designed to be great at Flame they do and this one is no exception. We hope you enjoy your Bluetooth Flame Speaker.

2 Your Bluetooth Flame Speaker

2.1 In the Box

Carefully remove your Bluetooth flame speaker from the box.
Inside the box you will find:

- Bluetooth Flame Speaker
- 2 x Garden Spike
- 1 x Micro USB Cable
- Quick Start Guide
- Instruction Manual
- Safety & Guarantee Leaflet

2.2 Front View

A Garden Light

The LED light non-replaceable.

B Power Button

Press hold the button for 3 seconds to turn the speaker ON or OFF.

Press the button once and the speaker will Play or Pause.

C “-” Button

Press the button once to return to the previous track.

Press hold the button to decrease volume level.

D “+” Button


Press the button once to skip to the next track.

Press hold the button to increase volume level.

E Garden Light ON / OFF Button

Press the button to turn ON or OFF the flame effect LED light.

F Speaker

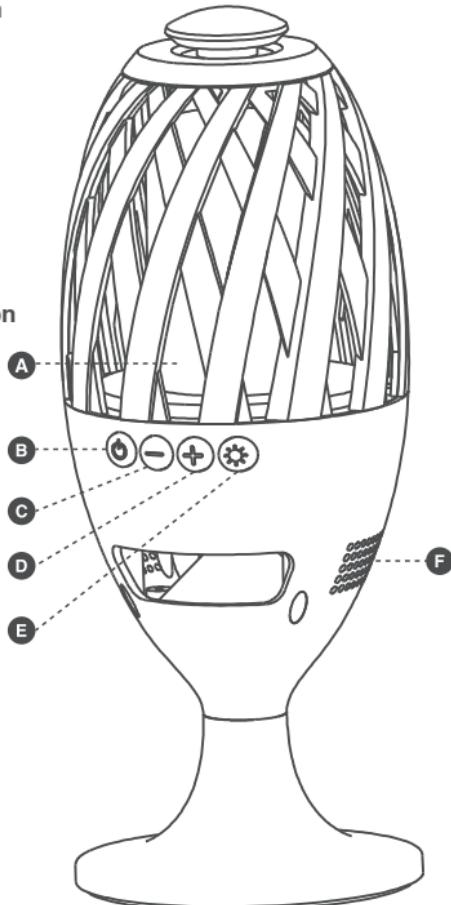


2.3 Back View

G Micro USB Charging Port

Used to Charge the battery.


H Charging LED indicator Light

I Table Stand

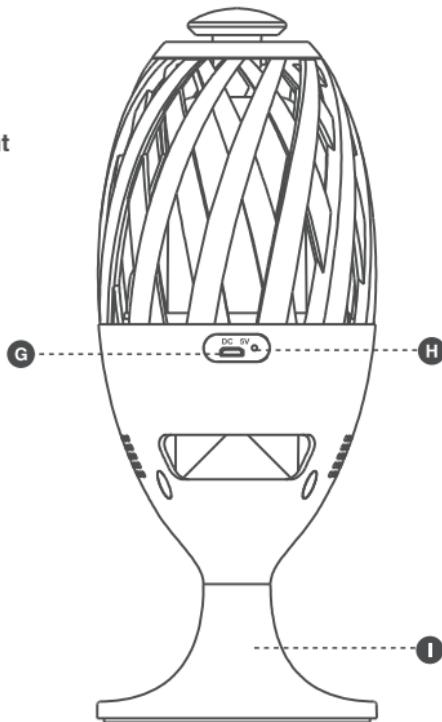

2.4 Accessories View

J Garden Spike

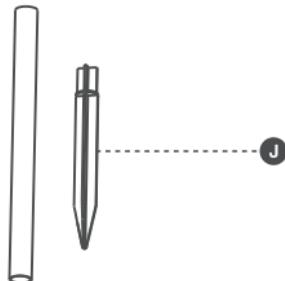



3 Quick Set Up

3.1 Charging Your Bluetooth Flame Speaker

1. Your Bluetooth flame speaker has a built in rechargeable battery. Before using it for the first time please fully charge the battery.
2. To charge, connect the USB cable provided to the USB port on your Bluetooth flame speaker.
3. Connect the other end of the USB cable to a USB port on your computer, or a 5V 1A USB wall charger , A wall charger is not included, when your Bluetooth flame speaker is charging the LED indicator will show RED.
4. When the Bluetooth flame speaker is fully charged the RED LED indicator will turn off.

Note: when the battery is getting low, the low battery warning alert will sound, when you hear this, please recharge the battery.

Warning: Only use the supplied charger lead to recharge the Speaker.

3.2 Pairing With a Bluetooth Device

1. Press and hold the power ON/OFF button 3 seconds to turn ON the speaker, you will hear "Bluetooth mode, Pairing".
2. Using your Bluetooth phone or tablet, turn on Bluetooth and search for Bluetooth devices.
3. Enable Bluetooth on your Smartphone and search for Bluetooth connections, Select "GOODMANS FLAME" from the list of devices, if you are asked for pass code enter "0000".
4. When successfully paired, you will hear "connected".
5. Once you have paired the Bluetooth flame speaker with a Smartphone, the Flame Speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range, you do not need to re-pair any previously connected devices.
6. The Flame Speaker will attempt to automatically connect to the last device it was paired with if Bluetooth mode is turned on, if you want to pair it with a new device, please turn off your last Bluetooth device and then use your new device to search and select the pairing name.

3.3 Playing Your Music

When your Smartphone phone or tablet is paired to the Bluetooth Flame Speaker, use your music app to playback your music.



3.4 Using the supplied Table Stand or Garden Spike

Depending on your requirements use either the Table Stand (just push firmly into place) or if placing in your garden connect together the 2 parts of the plastic Spike and push firmly into a suitable place in your garden, the Flame speaker can then be pushed into the plastic spike.

3.5 Storage

When the Speaker is not in use for long periods of time store indoors in a cool, dry location, if possible in original packaging. This Speaker is rated as IPX4 so can withstand splashing of water from any direction. Do not leave outdoors for long periods of time or when there is heavy rain.

4 Troubleshooting

Problem	What to do
I can't turn ON my Flame Speaker.	Make sure that the Bluetooth Flame speaker is fully charging. Press the Power button for 3 seconds to turn it ON.
I can't pair the Bluetooth Flame Speaker with my Bluetooth device.	Turn on the Bluetooth Flame Speaker. Make sure the Flame Speaker is "Pairing" mode. Make sure that your device is not further than 10 meters away from the Flame Speaker.
I can't hear my Music.	Turn the Flame Speaker to ON. Use the volume control on your device to turn the volume up.

5 Technical Specifications



Model Number	354958
Bluetooth Specification	Bluetooth 4.2
Maximum Bluetooth Operating Distance	10 metres
Built-in Battery	3.7V / 1800mAh
Charging Input	DC 5V / 1000mA
Charging Time	Approx. 5-6 hours
Working Time	Approx. 3 hours
Speaker Power	1 x 3W
Frequency Response	120Hz-20KHz
Waterproof Grade	IPX4
Product Size	10x10x25.5cm

6 EC Declaration

This product is intended for use within UK

This appliance complies with the below listed EU directives

2014/53/EU Radio Equipment Directive

2011/65/EU Restriction of Hazardous Substances Directive

2013/56/EU Waste Batteries & Accumulators

The complete declaration of conformity is available upon request for relevant enquiries.

 **Bluetooth®** is a trademark on a registered trademark of Bluetooth SIG Inc.

Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).



Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



Made in China

Imported by B&M Retail Ltd., Dakota Drive, Liverpool, L24 8RJ, UK