

REMINGTON®

H-9000

Use & Care Guide



20 HEATED-CLIPROLLERS

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits: Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: www.RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING.
KEEP AWAY FROM WATER.**

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with certain disabilities and special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated surfaces. **Do not wrap the cord around the appliance.**
- Never use while sleeping.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Never block the air openings of the appliance or place it on a soft surface, such as bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- Do not touch the roller sockets that hold the rollers. They are hot.
- Do not touch the inside of the heated clips. They are hot.

SAVE THESE INSTRUCTIONS

Product Features

Remington® Heated Clip Hair Setter

20 velvety soft rollers with heated clips

Dual Heating Technology

Heated Clips allow heat to penetrate the hair from the outside as well as from the roller on the inside. Maximum heat transfer onto the hair sets the curls faster and holds them longer; creating curls in 5 minutes versus 20 minutes with ordinary setters.



A. Heated Clip

B. 20 clips and rollers in two sizes (8 med and 12 large)

C. On-indicator Light

How to Use

Remington® Heated Clip Setter

- Close lid and plug in unit.
- Roller will be ready in 90 seconds.
- For a soft, wavy curl, use the rollers for only a couple of minutes. For a tighter curl, leave the rollers in the hair for 5-10 minutes.



1. Get Ready

Before setting, hair should be dry or only slightly damp, but never wet. Section hair and comb it smooth. Roll hair as usual in the direction of desired style. To secure each roller, place the clip crosswise over the rollers.



2. Get Set

Continue until your entire head is set. The time the rollers are left in the hair affects the tightness of the curl. The shorter the time, the softer the curl. Rollers will remain actively curling for approximately 15 minutes.



3. Go!

To release secured roller, remove each clip and roller gently. Unwind, never pull. Place roller back on correct post. Let each new curl spring back into position and cool for a moment. Then brush out hair and style. Spritz hair for extra hold.

Roller Placement:

To maximize roller temperatures, place the larger rollers on the front three rails and the medium rollers on the back two rails.

Operating and Maintenance

Operating Instructions

1. These heated rollers are designed to work on ordinary household current only (120 volts, 60 cycles AC). They are not intended for commercial use.
2. Plug cord into outlet, leaving lid closed. When unit is heated, follow "How To Use" section. Unplug unit after use.
3. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install a polarized outlet. Never try to defeat this safety feature.
4. Do not attempt to disassemble or modify this appliance.

BE ADVISED THAT THE END RINGS OF THE ROLLERS AND THE CLIPS MAY BE WARMER THAN OTHER ROLLERS, DUE TO THE UNIQUE DUAL HEATING TECHNOLOGY.

CAUTION: DO NOT TOUCH THE METAL RAILS THAT HEAT THE ROLLERS. THE RAILS BECOME VERY HOT WHEN HEATING. DO NOT TOUCH THE INSIDE OF THE CLIPS, AS THEY ALSO BECOME HOT WHEN HEATING.

CAUTION: TO AVOID DAMAGE, ROLLERS MUST BE RETURNED TO METAL RAILS WHEN NOT IN USE.

Maintenance Instructions

1. Clean unit with damp cloth only. No other maintenance is required.
2. Rollers may be cleaned with a damp cloth and mild detergent or soap.
3. Store appliance and cord where they will not be damaged.
4. **Do not wrap the cord around the hairsetter.**
5. Do not attempt to repair the appliance yourself; return it to Remington Consumer Service.

Note: To order accessories, please call 1-800-392-6544 or visit www.RemingtonProducts.com

Warranty

Limited Four-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse, or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting the unit to incorrect current and voltage
- Wrapping the cord around the appliance, causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

Performance Guarantee

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648.

120 VAC 60 Hz

Questions or comments: Call 800-736-4648 in U.S. or visit www.RemingtonProducts.com

® Registered Trademark of Spectrum Brands, Inc., or one of its subsidiaries.

©2010 SBI 05/10 Job# CS40051

Dist By: Spectrum Brands, Inc. Madison, WI 53711

Manufactured to Remington's specifications in the PRC.

T22-30231

