

JOOWIN

Outdoor AP Quick Installation Guide




Outdoor AP
Version 1.0

1. Cable installation: diagram



- ① Connect the network cable to the device (AP/AC/ONU) port
- ② The network cable passes through the bracket
- ③ The network cable passes through the hole
- ④ The network cable passes through the special socket cable

2. Device connection diagram

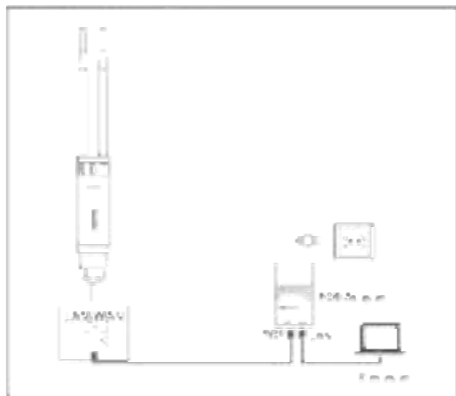

3. Set the computer to obtain the IP address automatically, and connect the LAN port of the device to the computer to enter the management page.

4. The device is defaulted to the interface language mode. The steps to enter the setup page are as follows:

01. Push the left control function button on the device and wait for the cursor to start on IP address.

02. Connect the device to a router (default IP: 192.168.1.1) or PC.

03. Open the computer browser, and input 192.168.1.1 to get into the device setup page (Default password: admin).

The device language is compatible with Chinese and English at present, and you can set up the language by the touch pad (arrow icon) 05.

② The AP needs to set up its local IP address (do not set the same IP address as the upper network). If want to manage the device, manually set the IP address of the same network segment or the upper IP.



③ In the figure:

1. IP Address:

2. Subnet Mask:



④ AP Mode: The router can 2.4GHz WiFi with the SSID, network channel and security in advance. After setting up the device, the WPA-PSK or WPA2-PSK wireless LAN password can be set. In the device, users can compare the SSID to that of the upper (Note: The SSID in WiFi Identification suggests 2.4G and 5.8G, which are not supported.)



⑤ In the figure:



⑥ In the figure:

SSID:

Security:

Channel:

2.4GHz in MHz:

5GHz Channel:

5GHz in MHz:

5GHz Channel:

Next



E. Bridge Mode: The AP device can act like a standard IP switch (the wireless SSID's ignore what you need to bridge) (all distinguish between 2 SSIDs and 2 VLANs) and enter the password.

Subnote: In Bridge mode, the access to the external network, the network segments of the IP address (obtain me) by an administrator, you can access to the AP is approved by the supervisor.

Note: According to the actual settings, you can also set the device's default interface IP address. If you need to manage the device, you must manually set the IP address of the computer's locally connected network card.

(1) LAN network IP configuration (This IP address can be the management IP)



(2) Click on the search and select the wireless SSID that you want to bridge and enter the wireless password.



(3) Set the SSID and password of the LAN's SSID of the AP (SSID: WLAN1 and WLAN2 and SSID use the same SSID are permitted).

Basic: Turn off WPA2, disable SSID, set SSID to SSID, and password of SSID separately.

9. Router Mode: There are three ways to surf the internet: PPPoE, Static IP, and DHCP (P refers to IP address; S refers to IP address).

Note: In Router mode, if you need to manage the device, you have to connect to SSID to enter the management page.

10. Repeater Mode: You can set the LAN network IP of the AP. Then, select the wireless SSID, but you have to connect to the wireless network SSID to enter the management page. Note: The SSID of the wireless network is the SSID of the wireless network. (1) When it is the repeater mode, the IP address of other wireless devices accessing the AP are assigned by the router.

21 | LAN network IP setting

Home > Settings > Network > LAN

LAN

IP ADDRESS:

SUBNET MASK:

Save

22 Search for the wireless SSID you want to connect. Then enter the network password.

Home > Settings > Network > Wireless

Wireless

SSID:

PASS:

MODE:

Save

23 Set the SSID and password of the LAN/5GHz of the AP (5GHz Underwater mode). 2.4G and 5GHz use the same SSID and password.

Note Turn off WiFi Location on. You can set the SSID and password of 2.4GHz separately.

Home > Settings > Network > LAN/5GHz

LAN/5GHz

SSID:

Password:

Save

Quick Installation Guide

Without any official written permission, no unit or individual shall be allowed, reproduced, transmitted or disseminated in any form or by any means to anyone without the prior written consent of the copyright owner for the purposes of using any content in profitable purposes.

JOOWITE is the registered trademark of Shenzhen First Stone Ultra Link Network Technology Co., Ltd. Chengde. All other trademarks or registered trademarks mentioned in this document, is reserved to its owner.

It is not a responsibility and a liability of the company for reference on a subject to specific technical matters. Unless there are clear special agreed, the company is used only as a general guide. All statements, information, etc. are non-responsible any form of damages.



Service hotline

+86 755 2376 3646

Main office: #601th M & S Tower, #101, #11

Address: Room 703-705, Block D, Tao, #4th Floor, #101

Guangdong Beiqi Technology Co., Ltd. #101, #11, #11

Website: www.joo-wite.com