

Vision Sensor FHV Series Smart Camera

Setup Manual

FHV7H-□□□□



Z408-E1-01

NOTE

- All rights reserved.
- No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.
- No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions.

Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

Trademarks

- Sysmac and SYSMAC are trademarks or registered trademarks of OMRON Corporation in Japan and other countries for OMRON factory automation products.
- This software is based in part on the work of the Independent JPEG Group.
- Microsoft, Windows, Windows Vista, Excel, and Visual Basic are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Intel, Core and Pentium are trademarks of Intel Corporation in the U.S. and/or other countries.
- ODVA, CIP, CompoNet, DeviceNet, and EtherNet/IP are trademarks of ODVA.
- The SD, SDHC, microSD, and microSDHC logos are trademarks of SD-3C, LLC.



- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- MELSEC is a registered trademarks of Mitsubishi Electric Corporation.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

Copyrights

Microsoft product screen shots reprinted with permission from Microsoft Corporation.

Introduction

Thank you for purchasing the FHV Series Smart Camera.

This manual contains information that is necessary to use the FHV Series Smart Camera.

Please read this manual and make sure you understand the functionality and performance of the FHV Series Smart Camera before you attempt to use it in a control system.

Keep this manual in a safe place where it will be available for reference during operation.

Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of introducing FA systems.
- Personnel in charge of designing FA systems.
- Personnel in charge of installing and maintaining FA systems.
- Personnel in charge of managing FA systems and facilities.

Applicable Products

This manual covers the following products.

- FHV7H-□□□□

Part of the specifications and restrictions are given in other manuals. Refer to Relevant Manuals on *Relevant Manuals* on page 2 and *Related Manuals* on page 23.

Relevant Manuals

The following table provides the relevant manuals for this product. Read all of the manuals that are relevant to your system configuration and application before you use this product.


Information Reference Matrix	Manual			
	Basic information		Vision System FH/FHV/FZ5 Series Processing Item Function Reference Manual	Vision System FH/FHV/FZ5 Series User's Manual for Communications Settings
	Vision System FH/FHV/FZ5 Series User's Manual	Vision System FHV Series Smart Camera Setup Manual		
Overview of FHV7 series	●	●		
Setup and Wiring				
EtherNet/IP				
PROFINET		●		
Ethernet				
RS-232C				
Parallel interface				
Setup the communication setting of Smart Camera				
EtherNet/IP				
PROFINET	●	●		●
Ethernet				
RS-232C				
Parallel interface				
Setup the Smart Camera				
EtherNet/IP				
PROFINET	●			●
Ethernet				
RS-232C				
Parallel interface				
Create and Set the Scene				
EtherNet/IP				
PROFINET	●		●	
Ethernet				
RS-232C				
Parallel interface				

Information Reference Matrix	Manual			
	Basic information		Vision System FH/FHV/FZ5 Series Processing Item Function Reference Manual	Vision System FH/FHV/FZ5 Series User's Manual for Communications Settings
	Vision System FH/FHV/FZ5 Series User's Manual	Vision System FHV Series Smart Camera Setup Manual		
Optimizing the Scene Flow			●	
EtherNet/IP				
PROFINET				
Ethernet				
RS-232C				
Parallel interface				
Connecting the Controller				
EtherNet/IP				
PROFINET	●	●		●
Ethernet				
RS-232C				
Parallel interface				
Using Helpful Functions				
EtherNet/IP				
PROFINET	●			
Ethernet				
RS-232C				
Parallel interface				
Troubleshooting and Problem Solving	●			

Manual Structure

Page Structure

The following page structure is used in this manual.

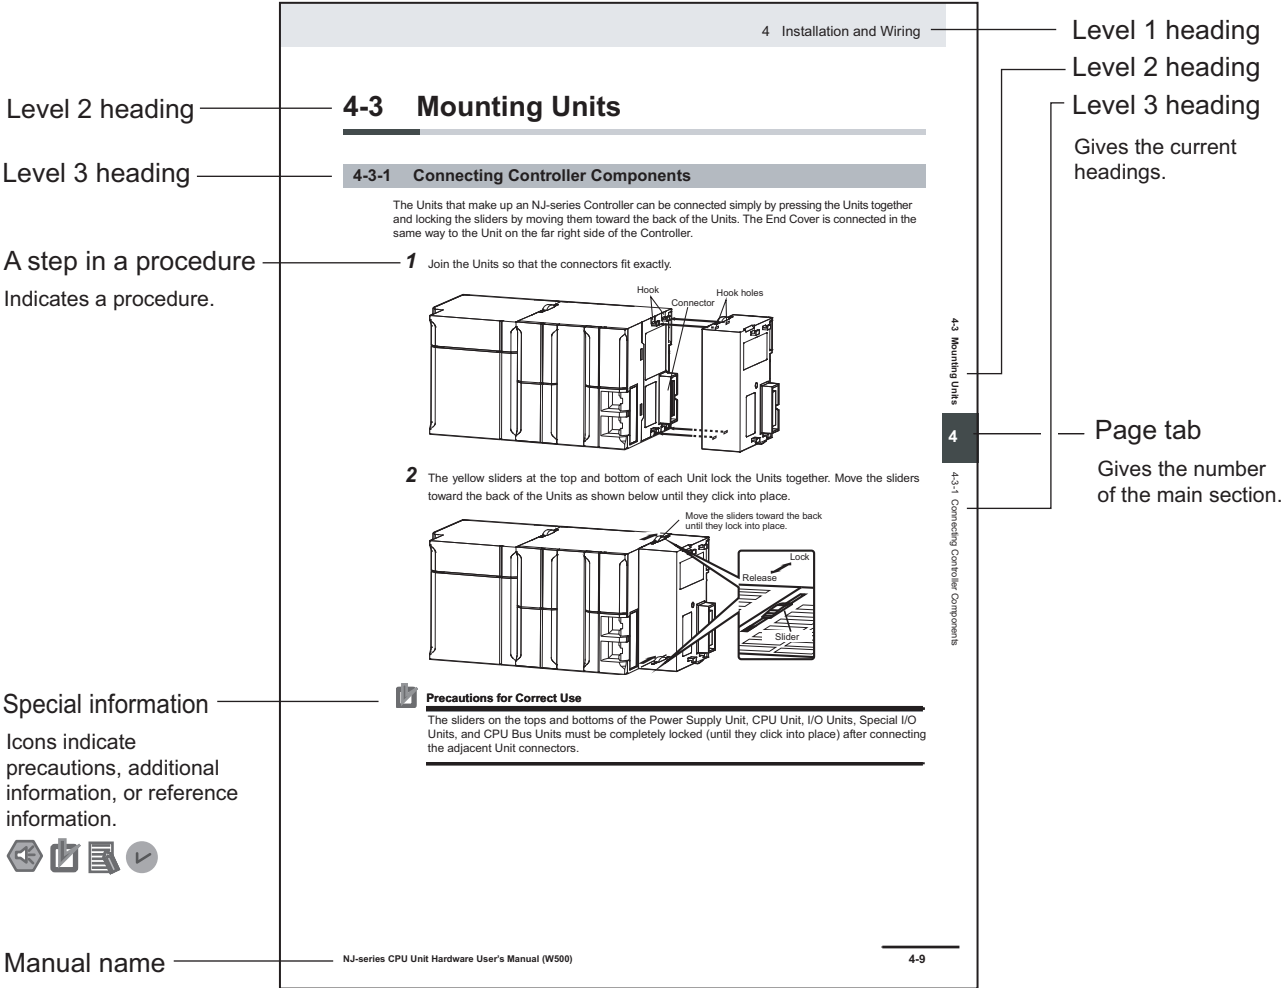

Note This illustration is provided only as a sample. It may not literally appear in this manual.

Special Information

Special information in this manual is classified as follows:



Precautions for Safe Use

Precautions on what to do and what not to do to ensure safe usage of the product.



Precautions for Correct Use

Precautions on what to do and what not to do to ensure proper operation and performance.



Additional Information

Additional information to read as required.

This information is provided to increase understanding or make operation easier.

CONTENTS

Introduction	1
Intended Audience	1
Applicable Products	1
Relevant Manuals.....	2
Manual Structure.....	4
Page Structure	4
Special Information	5
.....	6
Sections in This Manual	29
Terms and Conditions Agreement.....	10
Warranty, Limitations of Liability	10
Application Considerations	11
Disclaimers	11
Safety Precautions.....	13
Symbols and the Meanings for Safety Precautions Described in This Manual	13
Meanings of Alert Symbols	13
Warning.....	14
Precautions for Safe Use	15
Condition of the Fitness of OMRON Products	15
Installation Environment	15
Power Supply and Wiring	15
Mounting	16
Others	17
Precautions for Correct Use	18
Installation Location	18
Power Supply, Connection, and Wiring.....	18
Maintenance	19
Beam	19
Image Sensor	19
Communications with Upper Equipment.....	19
Failsafe Measures	20
Warm-up	20
Camera Installation	20
Others	20
LED Safety.....	21
Regulations and Standards	22
Using Product Outside Japan	22
Conformance to KC Standards	22
Conformance to EC/EU Directives	22
Related Manuals.....	23
Terminology.....	24
Revision History.....	28

Section 1 Confirm the Package

1-1 Smart Camera	1 - 2
1-1-1 FHV7H-□□□□□-C Series	1 - 2
1-1-2 FHV7H-□□□□□-S□□ Series	1 - 2
1-1-3 FHV7H-□□□□□-S□□-□□ Series	1 - 3
1-2 Sold Separately	1 - 4
1-2-1 Cables	1 - 4
1-2-2 Modules	1 - 5
1-2-3 Accessories	1 - 6
1-2-4 Lighting and Lighting Controller	1 - 8
1-2-5 Software	1 - 8

Section 2 Overview of FHV Series

2-1 Overview of System	2 - 2
2-1-1 Basic System of Measurement	2 - 2
2-2 Flow of Use Procedure	2 - 7

Section 3 Configuration

3-1 Smart Camera	3 - 2
3-1-1 FHV Series	3 - 2
3-2 Cables	3 - 10
3-2-1 I/O Cables	3 - 10
3-2-2 Ethernet Cables	3 - 13
3-3 Lens Modules	3 - 15
3-3-1 Specifications	3 - 15
3-3-2 Meaning of Optical Chart	3 - 17
3-4 C Mount Lenses	3 - 20
3-4-1 Specifications	3 - 20
3-4-2 Meaning of Optical Chart	3 - 30
3-5 Lighting Modules	3 - 37
3-5-1 Specifications	3 - 37
3-5-2 Dimensions	3 - 38
3-6 Optical Filters	3 - 39
3-6-1 Specifications	3 - 39
3-6-2 Dimensions	3 - 39
3-7 Waterproof Hoods	3 - 41
3-7-1 Specifications	3 - 41
3-7-2 Dimensions	3 - 42
3-8 Mounting Fixtures	3 - 46
3-8-1 Specifications	3 - 46
3-8-2 Dimensions	3 - 46
3-9 Software	3 - 48
3-9-1 Remote Operation Tool	3 - 48
3-9-2 Simulation Software	3 - 48

Section 4 Handling and Installation Environment

4-1 Warning	4 - 2
--------------------	--------------

Section 5 Installation

5-1 Assembling Equipment	5 - 2
5-1-1 C Mount Lens / IP40 Configuration	5 - 2
5-1-2 C Mount Lens / IP67 Configuration	5 - 3
5-1-3 Lens Module / IP40 Configuration	5 - 5
5-1-4 Lens Module / IP67 Configuration	5 - 8
5-1-5 Lens Module / Internal Lighting / IP67 Configuration	5 - 10
5-2 Installing the Smart Camera	5 - 14
5-2-1 How to Connect.....	5 - 14
5-2-2 When Connecting the Smart Camera to a Lighting Controller	5 - 18

Section 6 Power Supply and I/O Interface

6-1 When Turning Power ON and OFF	6 - 2
6-2 Fail-safe Measures.....	6 - 4
6-3 Precautions for I/O Interface.....	6 - 5
6-4 I/O Cable Interface (Power Supply, I/O, RS-232C).....	6 - 6
6-4-1 Recommended Power Supply for FHV Series	6 - 6
6-4-2 Cables	6 - 7
6-4-3 Pin Layout	6 - 8
6-4-4 Interface Specifications	6 - 9
6-4-5 I/O Interface Input / Output Circuit Diagram	6 - 12
6-4-6 RS-232C Interface	6 - 14
6-5 Ethernet Interface	6 - 15
6-5-1 Cables	6 - 16
6-5-2 Pin Layout	6 - 17
6-6 Inserting and Removing the MicroSD Card.....	6 - 18
6-6-1 How to Insert / Remove the MicroSD Card	6 - 18

Section 7 Software Setup

7-1 Setting up the Software.....	7 - 2
7-1-1 Recommended Operational Environment	7 - 2
7-1-2 Installation	7 - 2
7-1-3 Windows.....	7 - 3
7-1-4 Use Procedures	7 - 4
7-2 Operating the Smart Camera Remotely [Remote Operation Tool]	7 - 10
7-2-1 Summary	7 - 10
7-2-2 Environment Settings	7 - 11
7-2-3 Network Settings for the Remote Operation PC	7 - 11
7-2-4 Network Settings for the Smart Camera	7 - 12
7-2-5 Network Settings for the Smart Camera with Remote Operation Tool	7 - 14
7-2-6 Launching the Remote Operation	7 - 14
7-2-7 Terminating the Remote Operation	7 - 17
7-3 Using the Simulation Software [Simulation Software]	7 - 18
7-3-1 Introduction	7 - 18
7-3-2 Available Image Formats.....	7 - 18
7-3-3 Operational Precautions.....	7 - 18

Index

Terms and Conditions Agreement

Warranty, Limitations of Liability

Warranties

● Exclusive Warranty

Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

● Limitations

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right.

● Buyer Remedy

Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <http://www.omron.com/global/> or contact your Omron representative for published information.

Limitation on Liability; Etc

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY

WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Application Considerations

Suitability of Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Disclaimers

Performance Data

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may

be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Safety Precautions

Symbols and the Meanings for Safety Precautions Described in This Manual

The following notation is used in this manual to provide precautions required to ensure safe usage of a Sensor Controller. The safety precautions that are provided are extremely important to safety.

Always read and heed the information provided in all safety precautions.

The following notation is used.

 WARNING	Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.
 Caution	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

Meanings of Alert Symbols

	General Prohibition Indicates general prohibitions, including warnings, for which there is no specific symbol
	General Caution Indicates general cautions, including warnings, for which there is no specific symbol.
	Electrical Hazard Indicates the possible danger of electric shock under specific conditions.
	LED light Hazard Indicates the possible danger of LED radiation or light.
	High Temperature Caution Indicates the possible danger of injury by high temperature under specific conditions.

Warning**⚠ WARNING**

This product must be used according to this manual and Instruction Sheet.
Failure to observe this may result in the impairment of functions and performance of the product.



This product is not designed or rated for ensuring the safety of persons.
Do not use it for such purposes.



Never connect the AC power supply with this product. When the AC power supply is connected, it causes the electric shock and a fire.



If you keep watching the LED light, it may have an adverse effect on the eyes, do not stare directly into the light emitted from the LED. If a specular object is used, take care not to allow reflected light to enter your eyes.



Do not touch the terminals while the power supply is ON.
Doing so may result in electrical shock.



Please take external safety measures so that the system as a whole should be on the safe side even if a failure of a smart camera or an error due to an external factor occurred. An abnormal operation may result in serious accident.



Please take fail-safe measures on your side in preparation for an abnormal signal due to signal conductor disconnection and/or momentary power interruption.
An abnormal operation may result in a serious accident.

**⚠ Caution**

Danger of burns. Do not touch the case while the power is ON or just after power is turned OFF, since it remains extremely hot.



When mounting the lighting module, lens module, and covers, make sure that the screws are tightened securely. If not, the product may break or malfunction, or injury may result.



Precautions for Safe Use

Condition of the Fitness of OMRON Products

- Please do not use this product to directly or indirectly use to detect the human body for the purpose of ensuring the safety. In the same application, please use the safety sensor that is published on our sensor catalog.
- *Omron products* are designed and manufactured as general-purpose products for use in general industrial applications. They are not intended to be used in the following critical applications. If you are using *Omron products* in the following applications, *Omron* shall not provide any warranty for such *Omron products*, unless otherwise specifically agreed or unless the specific applications are intended by Omron.
 - a) Applications with stringent safety requirements, including but not limited to nuclear power control equipment, combustion equipment, aerospace equipment, railway equipment, elevator/lift equipment, amusement park equipment, medical equipment, safety devices and other applications that could cause danger/harm to people's body and life.
 - b) Applications that require high reliability, including but not limited to supply systems for gas, water and electricity, etc., 24 hour continuous operating systems, financial settlement systems and other applications that handle rights and property.
 - c) Applications under severe condition or in severe environment, including but not limited to outdoor equipment, equipment exposed to chemical contamination, equipment exposed to electromagnetic interference and equipment exposed to vibration and shocks.
 - d) Applications under conditions and environment not described in specifications.
- (1) In addition to the applications listed from (a) to (d) above, *Omron products* (see definition) are not intended for use in vehicles designed human transport (including two wheel vehicles). Please do NOT use Omron products for vehicles designed human transport. Please contact the Omron sales staff for information on our automotive line of products.
- (2) The above is part of the Terms and Conditions Agreement. Please use carefully read the contents of the guarantee and disclaimers described in our latest version of the catalog, data sheets and manuals.

Installation Environment

- Do not use the product in areas where flammable or explosive gases are present.
- Do not install the product close to high-voltage devices and power devices in order to secure the safety of operation and maintenance.
- Do not install the product to a place where vibrations and/or impacts are expected.
- Do not install the product near to a device causing noises. If the product is installed in a noisy environment and operational errors are caused, be sure to take shielding measures.

Power Supply and Wiring

- Make sure to use the product with the power supply voltage specified. If a DC voltage exceeding the rating or an AC voltage is applied, the circuit parts may be burnt or exploded.
- Do not connect the power supply with polarity reversed.

- Use a DC power supply with safety measures against high-voltage spikes (safety extra low-voltage circuits on the secondary side).
- Use an independent power source for this product. Do not use a shared power source.
- Never apply more than the rated voltage or AC power supply to this product. It may cause malfunction.
- The recommended power supplies are as follows:
 - When attaching the lighting module, use S8VK-G12024 (OMRON) or S8VS-12024 (OMRON).
 - When not attaching the lighting module, use S8VK-G06024 (OMRON) or S8VS-06024 (OMRON).
- Wire high-voltage cables or power cables separately from the cables of this product. If the same cable or duct is used, the product may receive induction and it may cause malfunctioning or breakage.
- Do not short-circuit load on the open collector output.
- Apply load not exceeding the rating.
- When wiring, put a crimp terminal of the specified size. Do not connect wires simply twisted together to the power supply or terminal block directly.
- If using an I/O cable 20 m long, confirm that the power supply output is 24 VDC or higher. If it is lower than 24 VDC, the product does not operate.
- Cut off unnecessary signal wires so that they do not contact any other signal wires.
- After wiring the cables, confirm if the power supply is appropriate, if there is miswiring such as short-circuit of load, if the load current is appropriate, and if FG is connected appropriately. Otherwise, the product may be broken due to miswiring etc.
- Take enough safety measures such as a failsafe circuit before using the product.
- Be sure to apply Class D grounding (100Ω or lower grounding resistance) to the case of the smart camera and the ground wire of the I/O cable.
- Do not share the ground wire with some other devices or connect it to the beam of the building. The product may be adversely affected.
- Determine the contact point as near as possible to shorten the ground wire as much as possible. The product may be adversely affected.

Mounting

- When doing the following, be sure to turn OFF the power of the smart camera main unit or connected peripheral devices. Not doing so leads to a product failure.
 - Cable connection and wiring
 - Connector mounting/removal
 - Lighting module mounting/removal
 - Lens module mounting/removal
- Tighten the mounting screws securely using the defined torque and order described in the Setup Manual.
- Mount the lens module in the correct direction. Mounting it in the wrong direction may cause malfunction of the device or injury.
- After removing the cable, be sure to put the connector cap. If the connector cap is not put, the product may malfunction or be broken due to entering of foreign materials.
- For the component with a lock mechanism, be sure to confirm that it is locked before using the product.
- Do not apply torsional stress to the cable. Doing so may cause cable breakage.
- Secure the minimum bending radius of the cable. If it cannot be secured, the cable may be broken.
- Assemble as avoiding the waterproof packings and harnesses from being caught by the case, etc.

- Do not use any damaged waterproof packings and light shielding sheet or assemble the product with foreign materials attached to or caught in.
- Mount the lens module and lighting model in the correct direction. Mounting them in the wrong direction may cause broken or malfunction of the device, or injury.
- Do not touch the lens or image sensor with bare hands. Doing so may lead to malfunctioning or breakage.

Assemble the lens and image sensor with a correct combination. If not, malfunction may result.

Others

- Use only the dedicated cable (FHV-VN□/FHV-VD□), camera-mount lighting controller (FL-TCC□/FLV-TCC□), lighting module (FHV-LTM-□), and lens module (FHV-LEM-□). Otherwise, the product may malfunction or be broken.
- If anything abnormal occurs, for example, strange smell/sound is detected, the main unit gets very hot, or a smoke comes, stop using the product, turn OFF the product, and consult OMRON's branch or sales office.
- Do not disassemble, deform by pressurizing, incinerate, repair, or alter this product.
- When disposing of the product, treat as industrial waste.
- Do not drop the product or expose it to abnormal vibration or impact. Doing so may lead to product failure.
- If using the measurement result of the smart camera to operate the stage or robot (output of axis moving distance by calibration and alignment measurement), be sure to take failsafe measures externally.
- The waterproof packing and light shielding sheet are rubber products. Avoid storing them in a location where rubber deteriorates.

Precautions for Correct Use

Installation Location

In order to prevent the product from becoming inoperable or malfunction, and to prevent other adverse effects to the performance or equipment, please observe the following.

- A location where the ambient temperature does not exceed the rated range (operating: 0 to 40°C, storage: -25 to 65°C).
- A location where the temperature does not vary sharply (condensation occurs).
- A location where relative temperature does not exceed a range of 35-85%RH.
- A location not exposed to corrosive gases or combustible gases.
- A location not exposed to dust, salt, or metal powder.
- A location not exposed to direct vibration or impact.
- A location not exposed to strong disturbance light (laser light, arc welding light, or ultraviolet light).
- A location not near a heating appliance or exposed to direct sunlight.
- A location not exposed to mist of water, oil, or chemicals or misty atmosphere.
- A location not exposed to strong magnetic/electric fields.
- A location not near a high-voltage device or power device
- A location where rubber quality is not deteriorated.

Power Supply, Connection, and Wiring

- If using a commercially available switching regulator, earth the frame ground terminal.
- If the power supply line has surge, connect a surge absorber according to the operational environment to use the product.
- After wiring the cables, confirm if the power supply is appropriate, if there is miswiring such as short-circuit of load, or if the load current is appropriate. Otherwise, the product may be broken due to miswiring etc.
- Do not put load on the cables and connectors before wiring them.
- Do not turn OFF the power supply while data are being saved in the smart camera. Otherwise, data on the memory is broken, so the product does not operate normally when started up next time.
- When turning OFF the power, confirm that data have been saved completely before starting operations.
 - When data are saved by operating the sensor controller, the saving process must have been completed and the following user operations must be possible.
 - When data are saved using communication commands, processing of the applicable commands must have been completed and the busy state is OFF.
- If contacting a terminal or a signal cable inside the connector, use a wrist strap to take antistatic measures to prevent breakage due to static electricity.
- If removing the microSD card, confirm that data are not being read or written before removing it.
- Do not insert the microSD card inversely, obliquely, or as twisting it.
- While data are being read in or written to the microSD card, the SD ACCESS LED on the Smart Camera main unit is turned on for a while. Remove the card after confirming that the LED is completely turned off.
- Except when inserting or removing the microSD card, put the cover of the microSD card inserting connector and screw it up before using the product.

- When a message indicating that processing is being executed is displayed on the screen, do not turn OFF the power. Otherwise, data on the memory is broken, so the product does not operate normally when started up again.
- Do not use the product in environments subject to water droplets when an external lighting is connected. The main unit may be broken.
- The RS-232C communication standard defines the maximum cable length as 15 m. Implement this communication using an I/O cable 2/3/5/10 m long.
- When connecting cables, align terminals and connect them straightly. If not, the terminals bent and may cause malfunction or unable to communicate normally.

Maintenance

- Turn OFF the power and confirm safety before starting maintenance.
- Remove dirt on the lens using the special cloth for lens or an air brush.
- If a large dust attaches to the image sensor, use the blower brush (for the camera lens) to blow it off. Do not blow it off with your exhaled air.
- Do not use thinner, alcohol, benzene, acetone, or kerosene to clean his product.
- When the lens or lens module is not being mounted, be sure to attach the C mount cap to the lens mounting part. If a dust attached to the image sensor, the product may sense incorrectly or be broken.
- Wipe off dirt on this product with a soft cloth gently.
- Be sure to put the cap/cover onto the connector not used. Otherwise, the product may malfunction or get out of order due to entering of foreign materials.

Beam

- The beam center may vary product by product. When mounting this module, be sure to confirm the center position of the video on the monitor.
The beam center of this product may vary over a couple of pixels due to the variation of ambient temperature because of the material characteristics.
- Select the model by confirming the field of view and camera installation distance on the optical diagram. In addition, the field of view may vary product by product.
When mounting this product, be sure to confirm video using the monitor.

Image Sensor

- For this product, a line may appear depending on the measurement condition or sensitivity because of the specification of the image sensor.
However, this is not a fault or failure of the product. In addition, although there may be multiple defective pixels, this is not a fault or failure of the product. Use the product as confirming the actual image.

Communications with Upper Equipment

- Implement communications with upper equipment after confirming that this product has been started up. In addition, when this product is being started up, unstable signals may be issued by the upper

interface. In the initial operation, take action such as clearing the receiving buffer of the equipment used.

Failsafe Measures

- When operating a stage or robot using measurement results of the Smart Camera (axis moving distance output by the calibration or alignment measurement), take measures as follows: Be sure to operate the stage or robot after confirming the measurement result data on the stage or robot side that the data are within the movable range of the stage or robot.

Warm-up

- Turn ON the power and wait for 60 minutes or more before conducting precise inspection. The circuit is not stable directly after the power is turned ON, so brightness may vary gradually.

Camera Installation

- In an environment exposed to high humidity and sharp temperature fluctuation, the inside of the lighting cover may become cloudy in rare cases. If it becomes cloudy, remove the lighting cover and wipe off the inside with a soft cloth.
- If installing smart camera main units side by side, secure a space of 30 mm or more wide between them.

Others

- For better heat radiation, use the separately sold fitting (FHV-XMT-7) or mount the product to the metal frame (recommended size: 100×110 mm or more and thickness: 10 mm or more).
- Do not assemble the lighting module or waterproof hood in a hot and humid environment. Otherwise, condensation may occur. If it becomes cloudy, remove the lighting cover and wipe off the moisture with an absorbent, but soft cloth so as not to damage the product.
- There are two types of polarizing filters: FHV-XPL (for visible light) and FHV-XPL-IR (for both visible and infrared lights). Use the appropriate option according to the illumination light source.
- If switching the focus for a long period of time continuously except when installing and adjusting the product, performance may be degraded due to heat generation or abrasion of inner parts.
- When the lens module is mounted to the product, the specifications of vibration tolerance are changed.
- Do not touch the lens module after it is mounted. Otherwise, it may be broken.
- If using this product without attaching the lighting module in an environment needing waterproof, use waterproof hood FHV-XHD series.
- Operate the product by using Calculation and Branch processing items on the Smart Camera side additionally and creating a check flow, for example, if the stage or robot is within a range of -xxxxx to xxxxx from its movable range, data are not output to outside.
- The lighting module and lens module are fixed to the smart camera with dropout preventing screws. Do not remove them from the product.
- When turning on the FHV series, the date/time settings always returns to the default. Therefore, you need to re-set the date/time with an operation or a communication command every time at startup.


For details of communication commands, refer to each communication command in the *Vision System FH/FZ5 Series User's Manual for Communications Settings (Cat. No.Z342)*.

LED Safety


This product is classified into the following risk groups by IEC62471.

Model	Color	LED safety	Display
FHV-LTM-W	White	Risk group 2	A
FHV-LTM-R	Red	Risk group 1	B
FHV-LTM-IR	Infrared light	Risk group 1	C
FHV-LTM-MC	Red	Risk group 1	B
	Green	Risk group 2	A
	Blue	Risk group 2	A
	Infrared light	Risk group 1	C

A

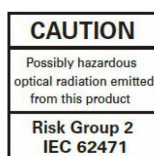

B

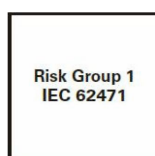

C



Regulations and Standards

Using Product Outside Japan

If you export (or provide a non-resident with) this product or a part of this product that falls under the category of goods (or technologies) specified by the Foreign Exchange and Foreign Trade Control Law as those which require permission or approval for export, you must obtain permission or approval or service transaction permission) pursuant to the law.

Conformance to KC Standards

Observe the following precaution if you use this product in Korea.

A 급 기기 (업무용 방송통신기자재)
이 기기는 업무용(A 급) 전자파적합기기로서 판매자
또는 사용자는 이 점을 주의하시기 바라며, 가정외의
지역에서 사용하는 것을 목적으로 합니다.

- Class A Device (Broadcasting Communications Device for Office Use)
This device obtained EMC registration for office use (Class A), and it is intended to be used in places other than homes. Sellers and/or users need to take note of this.

Conformance to EC/EU Directives

The product is compliant with the standards below:

- EU Directive 2014/30/EU (After April 20 2016)/EU EN61326-1
Electromagnetic environment : Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)
- This product complies with EC/EU Directives. EMC-related performance of the OMRON devices that comply with EC/EU Directives will vary depending on the configuration, wiring, and other conditions of the equipment or control panel on which the OMRON devices are installed.
- The customer must, therefore, perform the final check to confirm that devices and the overall machine conform to EMC standards.

Related Manuals





The followings are the manuals related to this manual. Use these manuals for reference.

Name of Manual	Man. No..	Model	Purpose	Contents
Smart Camera FHV Instruction Sheet	3129404-0	FHV7□-□□□□-C	To confirm the safety and usage precautions of the Smart Camera FHV7 series.	Describes the definitions of basic terms, the meaning of signal words, and precautions for correct use of FHV7 series in the manual.
Smart Camera Lighting Module FHV-LTM Instruction Sheet	3129276-4	FHV-LTM□□	To confirm the safety and usage precautions of the Smart camera lighting module FHV-LTM.	Describes the definitions of basic terms, the meaning of signal words, and precautions for correct use of the lighting module FHV-LTM in the manual.
Smart Camera Lens Module FHV-LEM-S Instruction Sheet	3128622-5	FHV-LEM-S□□	To confirm the safety and usage precautions of the Smart camera lens module FHV-LEM.	Describes the definitions of basic terms, the meaning of signal words, and precautions for correct use of the lens module FHV-LEM.
FHV Series i-Smart Camera Setup Manual	Z408	FHV7□-□□□□-C FHV7□-□□□□-S-□□ FHV7□-□□□□-S-□□-□□	When User want to know about the hardware specifications or to setup the Smart camera FHV series.	Describes FHV series specifications, dimensions, part names, I/O information, installation information, and wiring information.
Vision System FH/FHV/FZ5 Series User's Manual	Z365	FH-1□□□ FH-1□□□-□□ FH-2□□□	When User want to know about the FH/FHV/FZ5 series.	Describes the soft functions, setup, and operations to use FH/FHV/FZ5 series/
Vision System FH/FHV/FZ5 Series Processing Item Function Reference Manual	Z341	FH-2□□□-□□ FH-3□□□ FH-3□□□-□□ FH-5□□□ FH-5□□□-□□ FH-L□□□	When User confirm the details of each processing items at the create the measurement flow or operate it.	Describes the software functions, settings, and operations for using FH/FHV/FZ5 series.
Vision System FH/FHV/FZ5 Series User's manual for Communications Settings	Z342	FH-L□□□-□□ FHV7□-□□□□-C FHV7□-□□□□-S-□□ FHV7□-□□□□-S-□□-□□ FZ5-L35□ FZ5-L35□-□□ FZ5-6□□ FZ5-6□□-□□ FZ5-8□□ FZ5-8□□-□□ FZ5-11□□ FZ5-11□□-□□ FZ5-12□□ FZ5-12□□-□□	When User confirm the setting of communication functions.	Describes the functions, settings, and communications methods for communication between FH/FHV/FZ5 series and PLCs. The following communications protocol are described. Parallel, PLC Link, EtherNet/IP, EtherCAT, and Non-procedure.

Terminology

Term	Definition
FHV Series	All FHV series model names.
Measurement flow (abbreviated as “flow”)	A continuous flow of measurement processing. A measurement flow consists of a scene created from a combination of processing items.
Measurement processing	Executing processing items for inspections and measurements.
Measurement ID	Measurement time: YYYY-MM-DD_HH-MM-SS-XXXX (YYYY: Calendar,, MM: Month, DD: Day, HH: Hour, MM: Minutes, SS: Second, XXXX: Millisecond and Line number.) Example: Measurement time: 11:10:25.500 AM, December 24, 2007 and Line 0, the measurement ID is "2007-12-24_11-10-25-5000".
Processing item	Any of the individual items for vision inspections that are partitioned and packaged so that they can be flexibly combined. These include the Search, Position Compensation, and Fine Matching items. Processing items can be classified for image input ([Input image]), inspection/measurement ([Measurement]), image correction ([Compensate image]), inspection/measurement support ([Support measurement]), process branching ([Branch]), results external output ([Output result]), resulting image display ([Display result]), etc. You can freely classify processing items to handle a wide range of applications. A scene (i.e., a unit for changing the measurement flow) is created by registering the processing items as units.
Scene	A unit for changing the measurement flow that consists of a combination of processing items. Scene is used because of the correspondence to the scene (i.e., type of measurement object and inspection contents) where measurements are performed. A scene is created for each measurement or measurement contents. You can easily achieve a changeover simply by changing the scene when the measurement object or inspection content changes. Normally you can set up to 128 scenes. If you need more than 128 scenes, you can separate them into different groups or use the Conversion Scene Group Data Tool to create a scene group that contains over 128 scenes.
Processing unit (abbreviated as <i>unit</i>)	A processing item that is registered in a scene. Numbers are assigned to processing units in order from the top and they are executed in that order. Processing items are registered for the processing units to create a scene (i.e., a unit for changing the measurement flow).
Measurement trigger	A trigger for executing measurements. With a parallel interface, the STEP signal is used. With a serial interface, an Execute One Measurement or a Start Continuous Measurement command is used.
Test measurement	A measurement that is performed to manually test (check) measurements under the conditions that are set in the currently displayed scene. Test measurements can be executed on an Adjustment Window. Processing is completed inside the Controller and the measurement results are not normally output on an external interface. However, you can select Output in Test measurement to output the measurement results after executing measurements.
Single measurement	A measurement that is executed only once in synchronization with the trigger input.
Continuous measurement	Measurements are executed repeatedly and automatically without a trigger input.

Term	Definition
Operation mode	• Double Speed Multi-input A mode that processes the measurement flow for the first trigger and then processes the measurement flow in parallel for the second trigger to achieve a high-speed trigger input interval. It is used together with the multi-input function. • Non-stop adjustment mode A mode that allows you to adjust the flow and set parameters while performing measurements. The enables adjustments without stopping the line or stopping inspections. • Standard A logging mode that allows complete parallel processing of measurements and logging. Traditionally, logging was not possible while processing measurements. Either measurements or logging had to be given priority and the other one had to wait. With this mode, you can save the measurement images in external storage without affecting the transaction time.
Parallel processing (an option for any of the above operation modes)	Parallel processing splits part of the measurement flow into two or more tasks, and processes each task in parallel to shorten the transaction time. Processing items for parallel processing are used so that the user can specify the required parallel processing.
Multi-input function	A function that is used to consecutively and quickly input images. It allows the next STEP signal to be acknowledged as soon as the image input processing is completed. There is no need to wait for measurement processing to be completed. You can check whether image input processing has been completed with the status of the READY signal. Even if the READY signal is ON when measurement processing is being executed, the next STEP signal can be acknowledged.

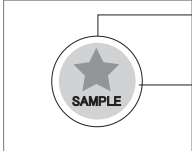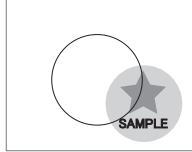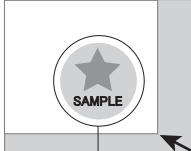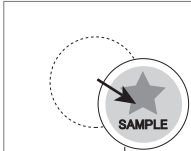Term	Definition
Position compensation	When the location and direction of measured objects are not fixed, the positional deviation between reference position and current position is calculated and measurement is performed after correcting. Please select processing items that are appropriate to the measurement object from processing items that are related to position compensation. ●Reference position Measurement area and objects to be measured are correctly aligned.  ●When position of object to be measured is deflected  Object to be measured overflows Measurement area. When position deflection correction is set in advance: Measurement will be carried out after moving the image for a corresponding deflection and returning to the reference position.  Measurement will be carried out after measured object enters into Measurement area. Measurement will be carried out after moving the Measurement area for a corresponding deflection. 
Reference position	The point that is always the reference. If the location of the registered model is different from the reference position, the setting should be changed in Ref. setting .
Model	The image pattern that serves as the inspection target. Characteristics portions are extracted from images of the object and registered as model registration.

Term	Definition
2's complement	Binary numbers are generally used to represent negative numbers. Negative numbers are expressed by <i>Inverting all bits of a positive number and adding 1 to the result.</i> Ex. -1 is expressed as 2's complement. -1 can be calculated by 0-1. └─ (In the case of 1, minus 1) $\begin{array}{r} 00000000 (= 0) \\ -) 00000001 (= 1) \\ \hline 11111111 (= -1) \end{array}$ ◀ -"1" expresses with 2's Complement (for 8 bits) There are methods for simple calculation without performing this kind of computation. For instance, <i>Negative number = inverting all bits of a positive number and then adding 1 to the result.</i> $\begin{array}{r} 00000001 (= 1) \\ \downarrow \text{Invert all bits} \\ 11111110 \\ \downarrow \text{Plus 1} \\ \boxed{11111111} (= -1) \end{array}$ The <i>first digit</i> is used to judge whether the number is positive or negative. • When 0: Positive number (or 0) • When 1: Negative number The advantage of two's complement numbers is that positive and negative numbers can be used as is in calculations. Ex. When -1+10=9 $\begin{array}{r} 11111111 (= -1) \\ +) 00001010 (= 10) \\ \hline 00001001 (= 9) \end{array}$

Revision History

A manual revision code appears as a suffix to the catalog number on the front and back covers of the manual.



Revision code	Date	Revised content
A	Nov. 2018	Original production

Sections in This Manual

		1
1	Confirm the Package	2
2	Overview of FHV series	3
3	Configuration	4
4	Handling and Installation Environment	5
5	Installation	6
6	Power Supply and I/O Interface	7
7	Software Setup	I
I	Index	

Confirm the Package

1-1	Smart Camera	1 - 2
1-1-1	FHV7H-□□□□□-C Series	1 - 2
1-1-2	FHV7H-□□□□□-S□□ Series	1 - 2
1-1-3	FHV7H-□□□□□-S□□-□□ Series	1 - 3
1-2	Sold Separately	1 - 4
1-2-1	Cables	1 - 4
1-2-2	Modules	1 - 5
1-2-3	Accessories	1 - 6
1-2-4	Lighting and Lighting Controller	1 - 8
1-2-5	Software	1 - 8

1-1 Smart Camera

First, please check to see if the package has all the necessary Smart Camera parts.

1-1-1 FHV7H-□□□□□-C Series



- Smart Camera
FHV7H-□□□□□-C: 1
- Connector cap for Ethernet cable (mounted on the body): 1
- Connector cap for an external lighting (mounted on the body): 1
- C mount cap (mounted on the body): 1
- C mount cover (mounted on the body): 1
- Instruction sheet: 1
- Membership registration: 1
- Compliance sheet: 1

1-1-2 FHV7H-□□□□□-S□□ Series



- Smart Camera
FHV7H-□□□□□-S□□: 1
- Connector cap for Ethernet cable (mounted on the body): 1
- Connector cap for an external lighting (mounted on the body): 1
- Special cover for FHV-LEM-S (mounted on the body): 1
- Instruction sheet: 1 each (Body, and lens module)
- Membership registration: 1
- Compliance sheet: 1

1-1-3 FHV7H-□□□□□-S□□-□□ Series



- Smart Camera
FHV7H-□□□□□-S□□-□□: 1
- Connector cap for Ethernet cable (mounted on the body): 1
- Connector cap for an external lighting (mounted on the body): 1
- Instruction sheet: 1 each (Body, lens module, and lighting module)
- Membership registration: 1
- Compliance sheet: 1

1-2 Sold Separately

1-2-1 Cables

I/O Cables

Appearance	Description	Model
	I/O cable straight Cable length: 2 m, 3 m, 5 m, 10 m, 20 m	FHV-VDB □□M
	I/O cable right-angle Cable length: 2 m, 3 m, 5 m, 10 m, 20 m	FHV-VDLB □□M

Ethernet Cables

Appearance	Description	Model
	Ethernet cable straight Cable length: 2 m, 3 m, 5 m, 10 m, 20 m	FHV-VNB □□M
	Ethernet cable right-angle Cable length: 2 m, 3 m, 5 m, 10 m, 20 m	FHV-VNLB □□M

1-2-2 Modules

Lens Modules

Appearance	Focal distance	Model	Package contents
	6 mm	FHV-LEM-S06	• Main unit: 1 • Special cover for FHV-LEM-S: 1 • Screws: M3×8 mm: 5 (including one spare piece) • Instruction sheet : 1 • Compliance sheet: 1
	9 mm	FHV-LEM-S09	
	12 mm	FHV-LEM-S12	
	16 mm	FHV-LEM-S16	
	25 mm	FHV-LEM-S25	

If purchasing the Smart Camera with integrated lens module, refer to *1-1-2 FHV7H-□□□□□-S□□ Series* on page 1 - 2 and *1-1-3 FHV7H-□□□□□-S□□-□□ Series* on page 1 - 3.

Lighting Modules

Appearance	Color	Peak wavelength	Source	Model	Package contents
	White	-	LED	FHV-LTM-W	• Main unit: 1 • Waterproof packing (small) FHV-XWP-CAM: 1 • Waterproof packing (large) FHV-XWP-LTM: 1 • Light shielding sheet FHV-XLS-LTM: 1 • Lighting cover FHV-XCV: 1 • Hexagonal wrench (length: 60 mm): 1 • Instruction sheet: 1 • Compliance sheet: 1
	Red	Typ. 630 nm	LED	FHV-LTM-R	
	Infrared light	Typ. 850 nm	LED	FHV-LTM-IR	
	Multi-color	R: Typ. 630 nm G: Typ. 525 nm B: Typ. 465 nm IR: Typ. 850 nm	LED	FHV-LTM-MC	


If purchasing the Smart Camera with integrated lighting module, refer to the *1-1-3 FHV7H-□□□□□-S□□-□□ Series* on page 1 - 3.

1-2-3 Accessories

Optical Filters

Appearance	Type	Supported wavelength	Model
	Polarization filter	Visible	FHV-XPL
	Polarization filter	Visible to infrared	FHV-XPL-IR
	Diffusion filter		FHV-XDF
	Lighting cover		FHV-XCV

 Waterproof Hoods

Appearance	Description	Model	Package contents
	For C mount lens 3Z4S-LE SV-V series	FHV-XHD-S	- Hood cover: 1 - Hood base: 1 - Waterproof packing, FHV-XWP-CAM: 1 - Screws, M3×8 mm: 5
	For C mount lens 3Z4S-LE SV-H series	FHV-XHD-L	
	For lens module	FHV-XHD-LEM	- Hood cover: 1 - Hood base: 1 - Waterproof packing FHV-XWP-CAM: 2 - Hexagonal wrench: (length: 60 mm): 1

Mounting Fixtures

Appearance	Description	Model	Package contents
	For Smart Camera body and lighting controller mounting	FHV-XMT-7	None
	For lighting controller mounting	FHV-XMT-7-TCC	Screws: M5×8 mm: 5

Waterproof Packings

Appearance	Description	Model
	For camera: 5*1	FHV-XWP-CAM
	For internal lighting: 5*1	FHV-XWP-LTM

Appearance	Description	Model
	For hood: 5*1	FHV-XWP-HD-SL

*1. After this was used once, replace this with the new one when mounting and dismounting lens or lighting module.

Waterproof Caps

1

Appearance	Description	Model
	For lighting connector	FHV-XWC-LCN
	For Ethernet connector	FHV-XWC-ECN

Light-shielding Sheet

Appearance	Description	Model
	For lighting module: 3*1	FHV-XLS-LTM

*1. After this was used once, replace this with the new one when mounting and dismounting lens or lighting module.

1-2-4 Lighting and Lighting Controller

Appearance	Description			Model
—	External lighting	—	—	FLV series
—		—	—	FL series
	Lighting Controller (Required to control external lighting from a Smart Camera)	For FLV series	Camera mount lighting controller	FLV-TCC series
			Analog lighting controller	FLV-ATC series
		For FL series	Camera mount lighting controller	FL-TCC series
			Digital lighting controller	FL-STC series

For the setting method of lighting controllers, refer to those instruction sheets respectively.

1-2-5 Software

Appearance	Description	Model
—	FH_FHV Remote Operation Tool	—

The Remote Operation tool and the simulation software are possible to download with free by doing the member registration after purchasing the Smart Camera. For details, refer to the membership registration sheet packed with the Smart Camera.

2

Overview of FHV Series

2-1	Overview of System	2 - 2
2-1-1	Basic System of Measurement	2 - 2
2-2	Flow of Use Procedure	2 - 7

2-1 Overview of System

2-1-1 Basic System of Measurement

FHV series use pre-built packages that contain all the processing tasks (for image input, measurement processing, displays, outputs, etc.) that are required for vision inspections.

Users arrange these packaged processes to make measurement flows with in order of execution of the vision inspection.

An FHV executes vision inspections according to user-created flows.



Additional Information


In the FHV settings, a flow containing packaged processes that are arranged in order of execution of processing items and image processing is called a measurement flow.

Processing items and measurement flows can have more than one setting. You can switch the setting based on the scene to inspect.

For details, refer to the *Vision System FH/FHV/FZ5 series User's Manual (Cat. No. Z365)*.

Concept of Measurement Processing


When the FHV receives a measurement trigger from the PLC or other external device, the image input from a Camera, measurement processing, and output of measurement results (e.g., OK/NG judgement results) are executed in the order that those processing items are registered in the measurement flow.

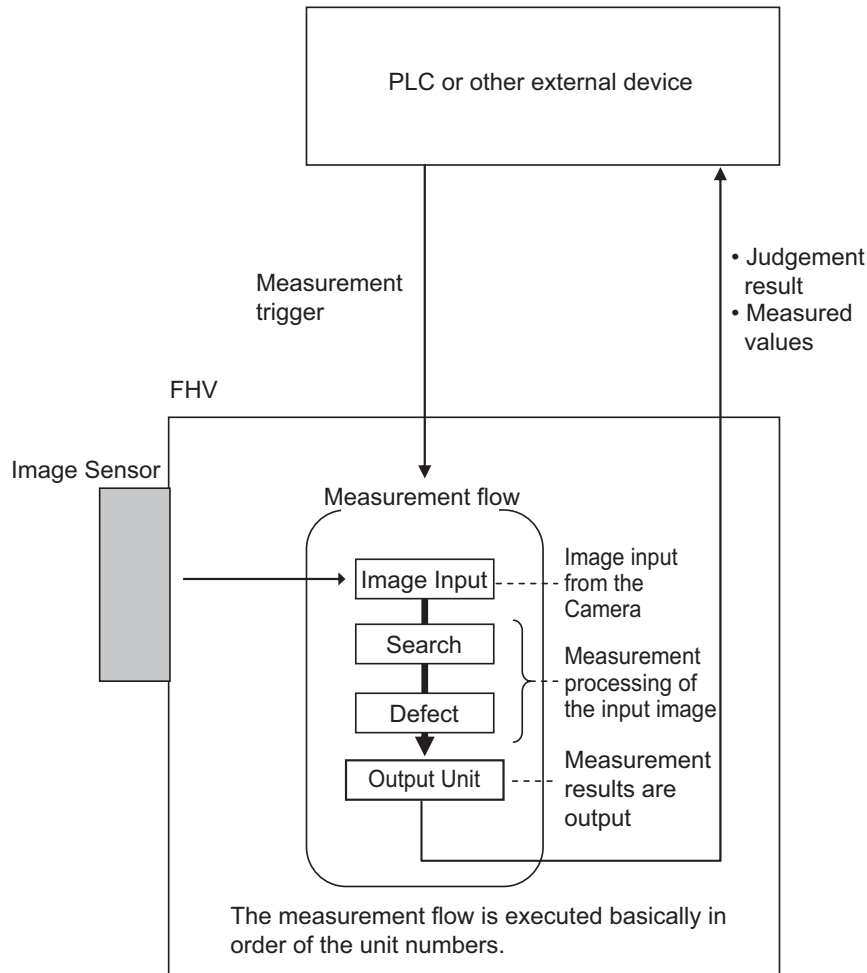

In the measurement flow, you can change the processing to execute based on the inspection results or input conditions of the vision inspection.

FHV Series

An example of the system configuration is as follows.

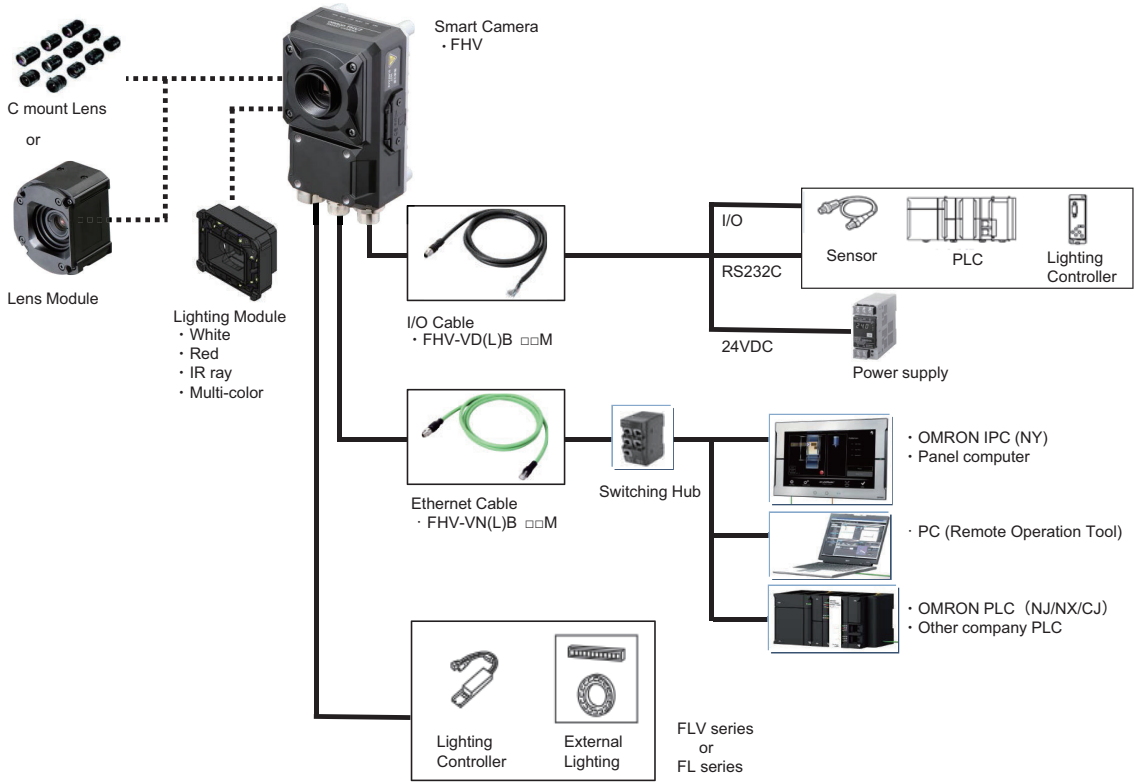

Smart Camera Models and System Configuration

● Model Reference





FHV7H- - -

① ② ③ ④ ⑤ ⑥

Model Reference	Meaning	Description
①	Imaging element type	- M: Monochrome - C: Color
②	Resolution	004: 0.4 [Mpix] 016: 1.6 [Mpix] 032: 3.2 [Mpix] 050: 5.0 [Mpix] 063: 6.3 [Mpix] 120: 12.0 [Mpix]
③	Shutter system	- Non: Global shutter - R: Rolling shutter
④	Lens type	- C: C mount lens - S: Autofocus lens
⑤	Focal length	06: 6 [mm] 09: 9 [mm] 12: 12 [mm] 16: 16 [mm] 25: 25 [mm]
⑥	Lighting color	- W: White - R: Red - IR: Infrared light - MC: Multi color

● System Configurations

    For the Smart Camera FHV7 series, there are five configurations below by module combinations.

Smart camera		Lens	Internal lighting	Protective structure	Integrated model	Appearance	Configuration
0.4Mpix 1.6Mpix 3.2Mpix 5.0Mpix 6.3Mpix 12.0Mpix	FHV7H- □004-□ FHV7H- □016-□ FHV7H- □032-□ FHV7H- □050-□ FHV7H- □063R-□ FHV7H- □120R-□	C mount lens 3Z4S-LE SV- □□□□□V 3Z4S-LE SV- □□□□□H	N/A	IP40	FHV7H- □□□□□-C		C mount lens/IP40
				IP67 FHV-XHD-S FHV-XHD-L	N/A		C mount lens/IP67
0.4Mpix 1.6Mpix 3.2Mpix 6.3Mpix	FHV7H- □004-□ FHV7H- □016-□ FHV7H- □032-□ FHV7H- □063R-□	FHV lens module FHV-LEM-S□□	N/A	IP40	FHV7H- □□□□□-S□□		Lens module/IP40
				IP67 FHV-XHD-LEM	N/A		Lens module/IP67
			FHV-LTM- □□	IP67	FHV7H- □□□□□-S□□-□□		Lens module /Internal lighting - IP67

2-2 Flow of Use Procedure

The following table shows the flow for using the FHV.

Procedure	Description	Reference
Preparations	Installation and Wiring	<i>Section 4 Handling and Installation Environment</i> on page 4 - 1 <i>Section 5 Installation</i> on page 5 - 1
	↓	
	Turning ON Power	<i>6-1 When Turning Power ON and OFF</i> on page 6 - 2
	↓	
	Connecting the Remote Operation Tool	<i>7-2 Operating the Smart Camera Remotely [Remote Operation Tool]</i> on page 7 - 10
	↓	
	Language Selection in Dialog Box (only when the Sensor Controller is started for the first time)	<i>Vision System FH/FHV/FZ5 series User's Manual</i> (Cat. No. Z365)
	↓	
	Main Window (Layout 0) Display	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Camera Adjustments (Display the settings dialog box for a Camera Image Input processing item.)	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Select Tool – System settings , and then under Startup setting , set the settings for <i>Basic</i> , <i>Communication</i> , and <i>Operation mode</i> .	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Click Data save , and then select Function – System restart .	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Select Tool – System settings , and then set <i>Camera</i> , <i>Communication</i> and <i>Other</i> .	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Click Data save .	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
↓		

Procedure	Description	Reference
Scene Editing	In the Main Window (layout 0), edit the measurement flow. - Register processing items. - Set the properties for each processing item.	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Click Data save .	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
↓↑		
Testing	Execute test measurements. (In the Main Window (layout 0), click Measure .)	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Adjust the parameters for each processing item.	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	Click Data save .	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
↓		
Measuring (Operation)	In the Main Window (layout 0), click Switch layout , and then select <i>Main Window (Layout 1)</i> .	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	In the Main Window (layout 1), check the communications with the PLC.	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
	↓	
	In the Main Window (layout 1), execute commands from the PLC, such as measurement trigger commands.	<i>Vision System FH/FHV/FZ5 series User's Manual</i>
↓		
Management and Analysis	Save and analyze measurement data and images.	<i>Vision System FH/FHV/FZ5 series User's Manual</i>

3

Configuration

3

3-1	Smart Camera	3 - 2
3-1-1	FHV Series	3 - 2
3-2	Cables	3 - 10
3-2-1	I/O Cables	3 - 10
3-2-2	Ethernet Cables	3 - 13
3-3	Lens Modules	3 - 15
3-3-1	Specifications	3 - 15
3-3-2	Meaning of Optical Chart	3 - 17
3-4	C Mount Lenses	3 - 20
3-4-1	Specifications	3 - 20
3-4-2	Meaning of Optical Chart	3 - 30
3-5	Lighting Modules	3 - 37
3-5-1	Specifications	3 - 37
3-5-2	Dimensions	3 - 38
3-6	Optical Filters	3 - 39
3-6-1	Specifications	3 - 39
3-6-2	Dimensions	3 - 39
3-7	Waterproof Hoods	3 - 41
3-7-1	Specifications	3 - 41
3-7-2	Dimensions	3 - 42
3-8	Mounting Fixtures	3 - 46
3-8-1	Specifications	3 - 46
3-8-2	Dimensions	3 - 46
3-9	Software	3 - 48
3-9-1	Remote Operation Tool	3 - 48
3-9-2	Simulation Software	3 - 48

3-1 Smart Camera

3-1-1 FHV Series

Specifications

Item			FHV7H-											
			M004	C004	M016	C016	M032	C032	M050	C050	M063R	C063R	M120R	C120R
Specifications	Operation Mode	Standard	Yes											
		Double speed multi-input	Yes											
		Non-stop adjustment mode	Yes											
	Parallel processing		Yes											
	Possible No. of captured images		256		64		36		25		19		10	
	Possible No. of logging images to Smart Camera		214		52		25		15		12		5	
	Possible No. of scenes		128*1											
	UI operation		Remote Operation Tool											
	Setup		Create the processing flow using Flow editing.											
	Language		Japanese, English, Simplified Chinese, Traditional Chinese, German, French, Italian, Spanish, Korean, Vietnamese, Polish											


Item		FHV7H-											
		M004	C004	M016	C016	M032	C032	M050	C050	M063R	C063R	M120R	C120R
Imaging	CMOS Image elements	1/2.9-inch equivalent		1/2.9-inch equivalent		1/1.8-inch equivalent		2/3-inch equivalent		1/1.8-inch equivalent		1/1.7-inch equivalent	
	Color/Mono-chrome	Mon-ochrome	Color	Mon-ochrome	Color	Mon-ochrome	Color	Mon-ochrome	Color	Mon-ochrome	Color	Mon-ochrome	Color
	Effective pixels (H×V)	720 × 540		1440 × 1080		2048 × 1536		2448 × 2048		3072 × 2048		4000 × 3000	
	Pixel size	6.9×6.9 μm		3.45×3.45 μm		3.45×3.45 μm		3.45×3.45 μm		2.4×2.4 μm		1.85×1.85 μm	
	Imaging area H×V (opposing corner)	5.0×3.8 (6.3 mm)		5.0×3.8 (6.3 mm)		7.1×5.3 (8.9 mm)		8.5×7.1 (11.1 mm)		7.4×5.0 (8.9 mm)		7.4×5.6 (9.3 mm)	
	Shutter system	Global Shutter								Rolling shutter (Global reset mode compatible)			
	Shutter function	Electronic shutter: Shutter speed can be set from 1 μs to 100 ms.								Electronic shutter: Shutter speed can be set from 55 μs to 100 ms.		Electronic shutter: Shutter speed can be set from 84 μs to 100 ms.	
	Partial function	4 to 540 lines (4-line increments)		4 to 1080 lines (4-line increments)		4 to 1536 lines (4-line increments)		4 to 2048 lines (4-line increments)		4 to 2048 lines (4-line increments)		4 to 3000 lines (4-line increments)	
	Frame rate (image acquisition time)	430 fps (2.3 ms)		224 fps (4.5 ms)		55 fps (18.0 ms)		35 fps (28.0 ms)		59 fps (16.7 ms)		19 fps (25.0 ms)	
Lens mounting	C mount												
Field of view, Installation distance	Selecting a lens according to the field of view and installation distance												

Item	FHV7H-											
	M004	C004	M016	C016	M032	C032	M050	C050	M063R	C063R	M120R	C120R
External Interface	Serial	RS-232C×1										
	Ethernet	Protocol: Non-procedure (TCP/UDP) I/F: 1000BASE-T×1										
	EtherNet/IP	Yes (Target/Ethernet port)										
	PROFINET	Yes (Slave/Ethernet port), Conformance class A										
	EtherCAT	N/A										
	Parallel I/O	NPN/PNP common										
	Parallel I/F	High-speed input: 1, General input: 3, High-speed output: 1, General output: 4										
	Encoder I/F	N/A										
	Monitor I/F	N/A										
	USB I/F	N/A										
	SD Card I/F	microSD card: SDHC×1										
Indicator Lamps	Main	PWR: Green, RUN: Green, LINK: Yellow, BUSY: Green, OR: Yellow, ERR: Red										
	SD	SD ACCESS: Yellow										
Supply Voltage		21.6 VDC to 26.4 VDC (When an I/O cable with 20 m is connected, it is 24.0 VDC to 26.4 VDC.)										
Current Consumption		With lighting modules: 4.2 A Without lighting modules: 0.60 A										
Built-in FAN		N/A										
Usage Environment	Ambient temperature range	Operating: 0 to +40°C, Storage: –25 to +65°C (with no icing or condensation)										
	Ambient humidity range	Operating & Storage: 35 to 85%RH (With no condensation)										
	Ambient atmosphere	No corrosive gases										
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10 With lens modules: Half amplitude: 0.15 mm (Others are the same as above.)										
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)										
	Noise immunity	Fast transient burst • DC power Direct infusion: 2kV, Pulse rising: 5 ns, Pulse width: 50 ns, Burst continuation time: 15 ms/0.75 ms, Period: 300 ms, Application time: 1 min. • I/O line Direct infusion: 1kV, Pulse rising: 5 ns, Pulse width: 50 ns, Burst continuation time: 15 ms/0.75 ms, Period: 300 ms, Application time: 1 min.										
	Grounding	Class D grounding (100Ω or less grounding resistance) * Existing the third class grounding										

Item	FHV7H-											
	M004	C004	M016	C016	M032	C032	M050	C050	M063R	C063R	M120R	C120R
External shape	Dimensions	110 mm × 68.5 mm × 55.5 mm (HxWxD)										
	Weight	Approx. 670 g										
	Degree of protection	With lighting modules or waterproof hoods: IEC60529 - IP67 (except a connector cap removed) Other than the above: IEC60529 - IP40										
	Case material	Aluminum die-casting (ADC12)										
Accessories		• Connector cap for Ethernet cable (mounted on the body): 1 • Connector cap for an external lighting (mounted on the body): 1 • C mount cap (mounted on the body): 1 • C mount cover (mounted on the body): 1 • Instruction sheet: 1 • Membership registration: 1 • Compliance sheet: 1										

*1. The number of scenes can be increased up to 1,024 with the Conversion scene group data tool.


Component Names and Functions

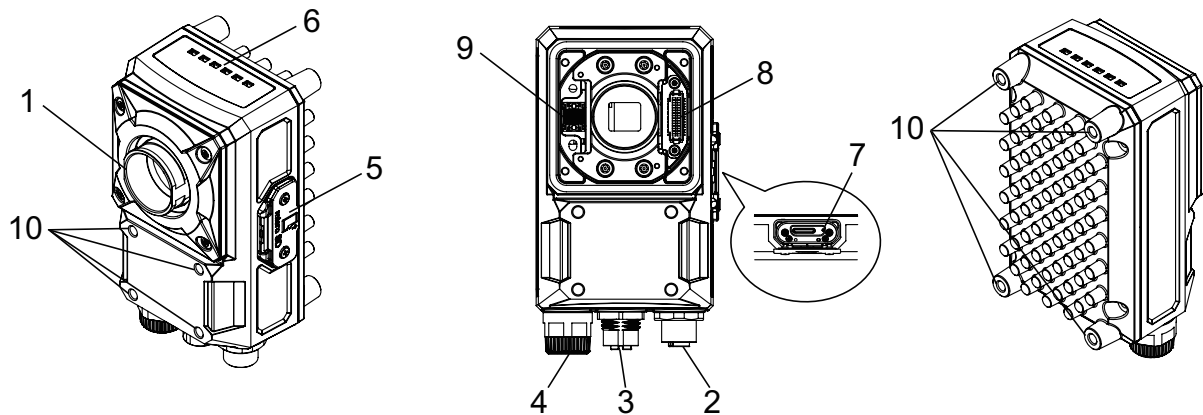

No.	Name		Description
1	Imaging unit		Captures images.
2	Connector for I/O cable		Use this connector when connecting the smart camera with a power supply or an external device using an I/O cable. Dedicated I/O cable: FHV-VD□□
3	Connector for Ethernet cable		Use this connector when connecting the smart camera with a personal computer and so on using an Ethernet cable. Dedicated Ethernet cable: FHV-VN□□
4	Connector for external lighting		Use this connector when connecting an external lighting and the external lighting controller. Connectable external lighting controller: FL-TCC□ and FLV-TCC□
5	Connector to attach microSD card		Use this connector to attach a microSD card. Do not extract/insert the microSD card during processing. Otherwise, measurement time may be influenced or data may be broken.
6	Operation indicator	PWR (Green)	Lights while power is supplied.
		RUN (Green)	Lights when switching to the layout in which the RUN signal output is set ON.
		LINK (Yellow)	Lights when connected with Ethernet equipment and blinks during communication.
		BUSY (Green)	Lights while processing is in progress.
		OR (Yellow)	Lights when the overall judgment output signal is ON.
		ERR (Red)	Lights when an error occurs.
7		SD ACCESS (Yellow)	Lights when accessing to the microSD card.
8	Connector for lighting module (white)		Use this connector when mounting the lighting module.
9	Connector for lens module (Black)		Use this connector when mounting the lens module.
10	Mounting screw holes		Use them to screw up the smart camera. Recommended tightening torque : 2.3N · m


Dimensions

- FHV7H-□□□□□-C

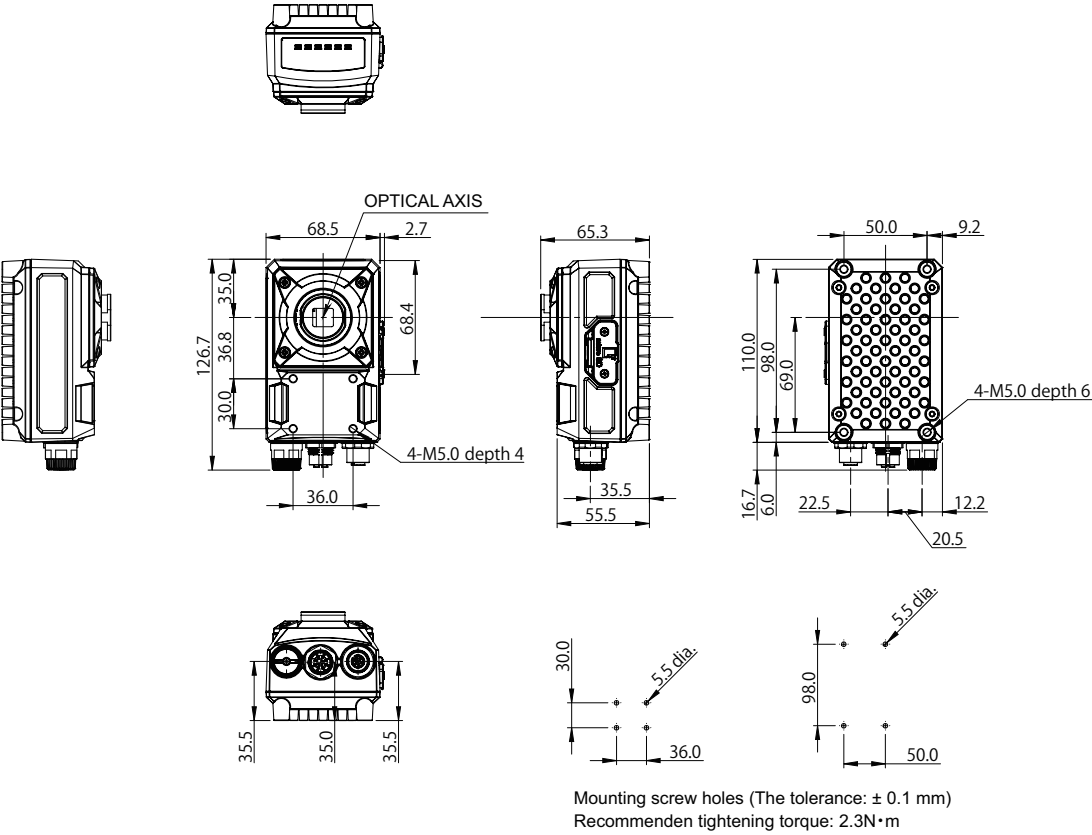


(Unit: mm)

- FHV7H-□□□□□-S□□

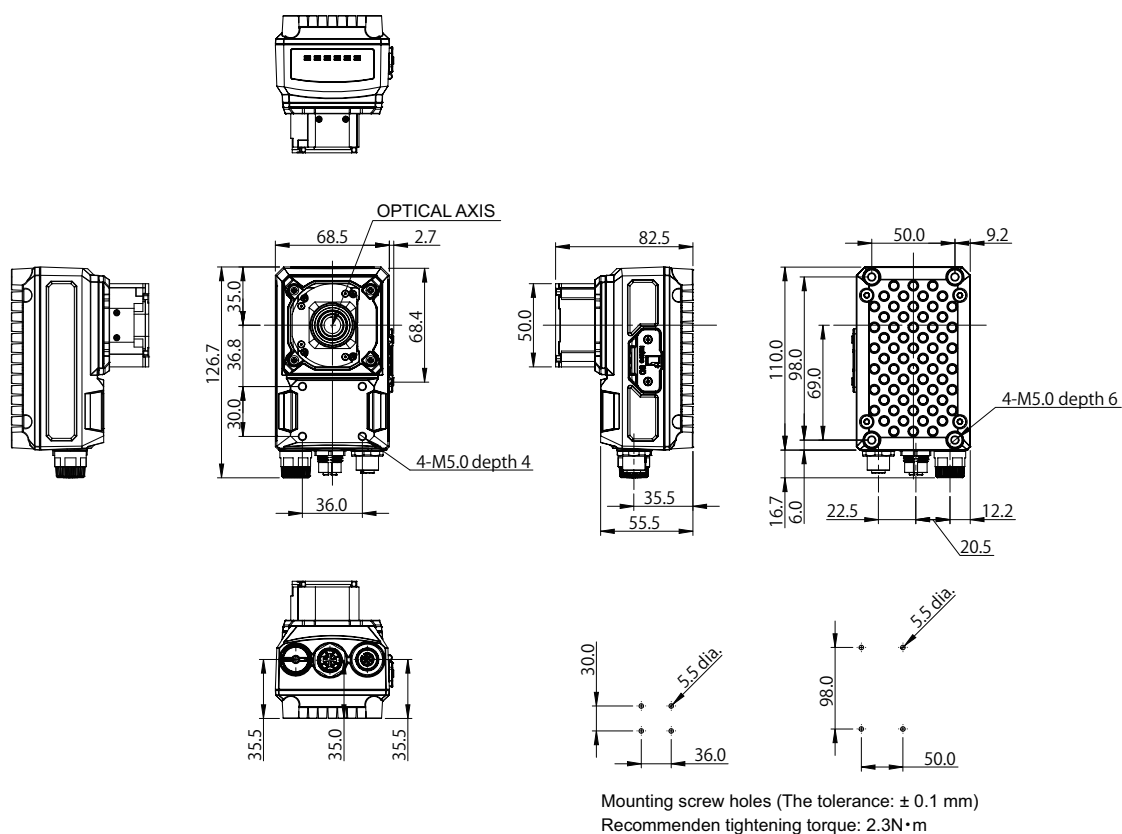

(Unit: mm)

- FHV7H-□□□□□-S□□-□□

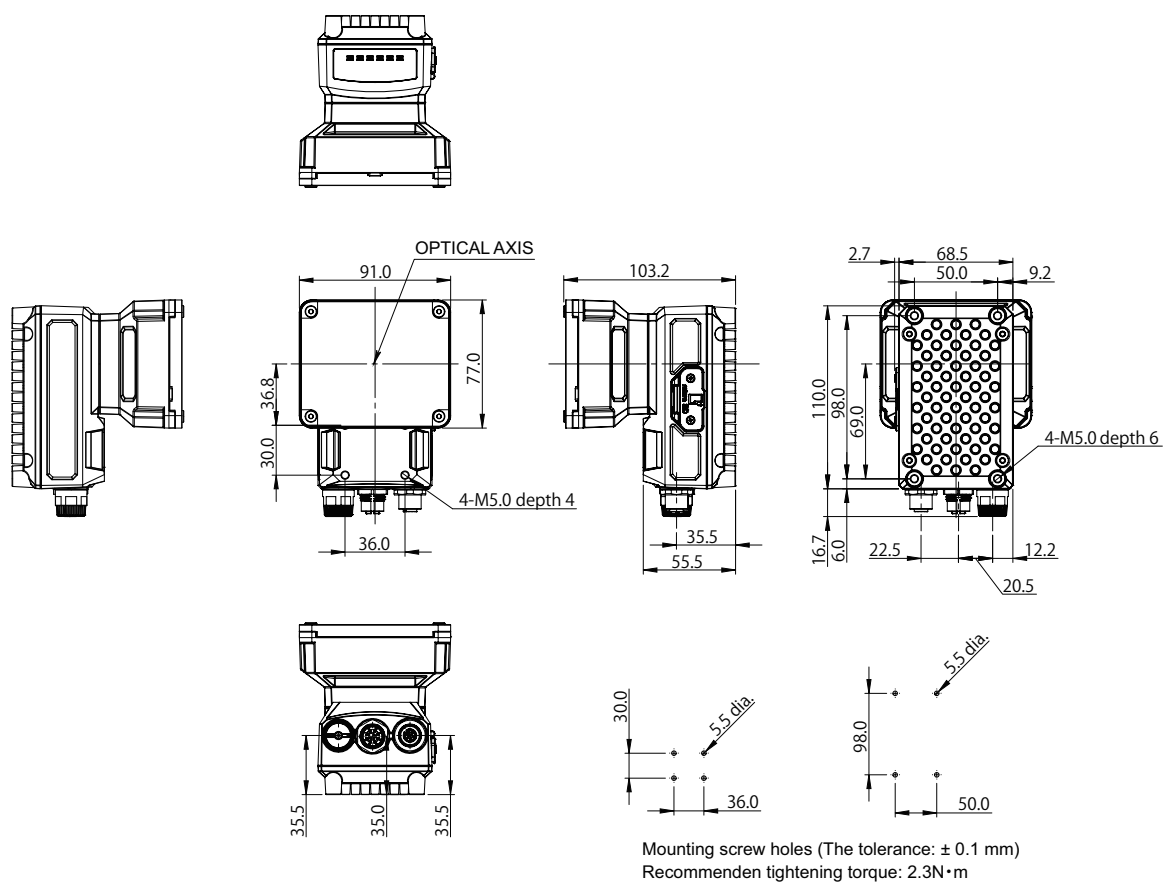

(Unit: mm)



Additional Information

We have the 2D CAD data or 3D CAD data.
You can download CAD data from www.fa.omron.co.jp.

3-2 Cables

3-2-1 I/O Cables

Specifications

- I/O cables (Straight)

Item		FHV-VDB 2M	FHV-VDB 3M	FHV-VDB 5M	FHV-VDB 10M	FHV-VDB 20M
Cable length		2 m	3 m	5 m	10 m	20 m
Cable type		Bending resistance cable				
Connector type		Straight connector				
Size	Power line	AWG21				
	Others	AWG26				
Outer diameter		9.0±0.3 mm dia.				
Min. bending radius		Fixed use: 54 mm, Sliding use: 72 mm				
Usage environment	Ambient temperature range	Operating: -30 to +80°C, Storage: -30 to +100°C (with no icing or condensation)				
	Ambient humidity range	Operating & Storage: 0 to 93%RH (With no condensation)				
	Ambient atmosphere	No corrosive gases				
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10				
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)				
Material		Mold part: Nylon, Thermoplastic polyurethane, Sheath part: PVC				
Weight		Approx. 270 g	Approx. 390 g	Approx. 620 g	Approx. 1200 g	Approx. 2350 g


- I/O cables (Right angle)

Item		FHV-VDLB 2M	FHV-VDLB 3M	FHV-VDLB 5M	FHV-VDLB 10M	FHV-VDLB 20M
Cable length		2 m	3 m	5 m	10 m	20 m
Cable type		Bending resistance cable				
Connector type		Right angle connector				
Size	Power line	AWG21				
	Others	AWG26				
Outer diameter		9.0±0.3 mm dia.				
Min. bending radius		Fixed use: 54 mm, Sliding use: 72 mm				

Item		FHV-VDLB 2M	FHV-VDLB 3M	FHV-VDLB 5M	FHV-VDLB 10M	FHV-VDLB 20M
Usage environment	Ambient temperature range	Operating: -30 to +80°C, Storage: -30 to +100°C (with no icing or condensation)				
	Ambient humidity range	Operating & Storage: 0 to 93%RH (With no condensation)				
	Ambient atmosphere	No corrosive gases				
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10				
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)				
Material		Mold part: Nylon, Thermoplastic polyurethane, Sheath part: PVC				
Weight		Approx. 270 g	Approx. 390 g	Approx. 620 g	Approx. 1200 g	Approx. 2350 g


Dimensions

- I/O cable (Straight)

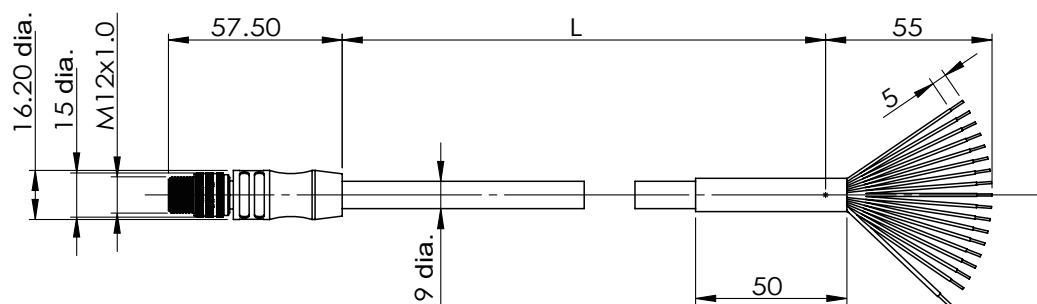

(Unit: mm)

- I/O cable (Right angle)

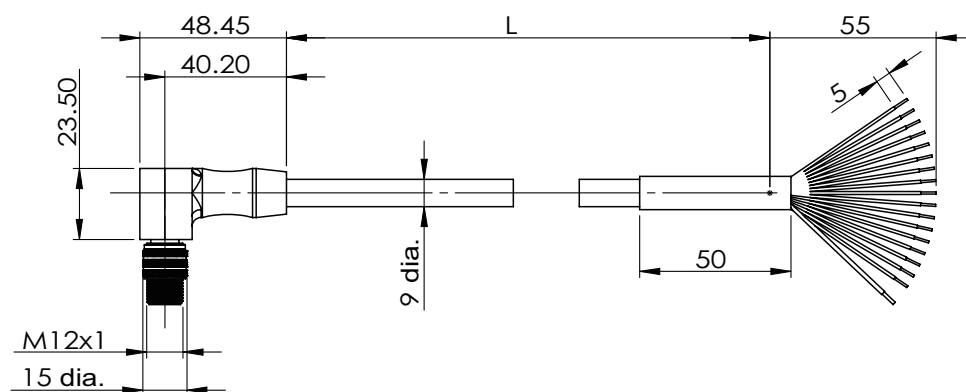

(Unit: mm)



Additional Information

We have the 2D CAD data or 3D CAD data.
You can download CAD data from www.fa.omron.co.jp.

3-2-2 Ethernet Cables

Specifications

- Ethernet Cables (Straight)

Item		FHV-VNB 2M	FHV-VNB 3M	FHV-VNB 5M	FHV-VNB 10M	FHV-VNB 20M
Cable length		2 m	3 m	5 m	10 m	20 m
Cable type		Bending resistance cable				
Connector type		Straight connector				
Outer diameter		7.2+0.3 mm dia.				
Min. bending radius		Fixed use: 35 mm, Sliding use: 70 mm				
Usage environment	Ambient temperature range	Operating: -40 to +80°C, Storage: -40 to +100°C (with no icing or condensation)				
	Ambient humidity range	Operating & Storage: 0 to 93%RH (With no condensation)				
	Ambient atmosphere	No corrosive gases				
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10				
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)				
Material		Mold part: Nylon, Thermoplastic polyurethane, Sheath part: Polyurethane				
Weight		Approx. 210 g	Approx. 240 g	Approx. 310 g	Approx. 380 g	Approx. 730 g


- Ethernet cables (Right angle)

Item		FHV-VNLB 2M	FHV-VNLB 3M	FHV-VNLB 5M	FHV-VNLB 10M	FHV-VNLB 20M
Cable length		2 m	3 m	5 m	10 m	20 m
Cable type		Bending resistance cable				
Connector type		Right angle connector				
Outer diameter		7.2+0.3 mm dia.				
Min. bending radius		Fixed use: 35 mm, Sliding use: 70 mm				
Usage environment	Ambient temperature range	Operating: -40 to +80°C, Storage: -40 to +100°C (with no icing or condensation)				
	Ambient humidity range	Operating & Storage: 0 to 93%RH (With no condensation)				
	Ambient atmosphere	No corrosive gases				
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10				
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)				
Material		Mold part: Nylon, Thermoplastic polyurethane, Sheath part: Polyurethane				

Item	FHV-VNLB 2M	FHV-VNLB 3M	FHV-VNLB 5M	FHV-VNLB 10M	FHV-VNLB 20M
Weight	Approx. 210 g	Approx. 240 g	Approx. 310 g	Approx. 380 g	Approx. 730 g


Dimensions

- Ethernet cable (Straight)

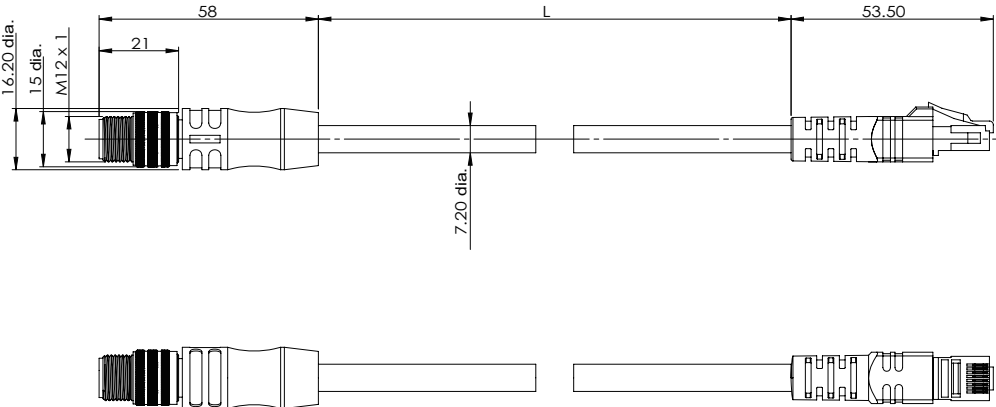

(Unit: mm)

- Ethernet cable (Right angle)

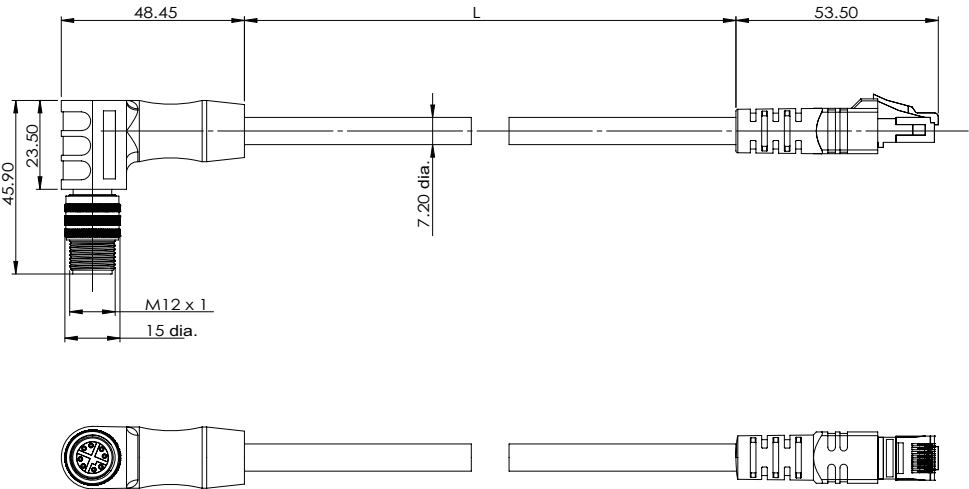

(Unit: mm)



Additional Information

We have the 2D CAD data or 3D CAD data.
You can download CAD data from www.fa.omron.co.jp.


3-3 Lens Modules

3-3-1 Specifications

Item		FHV-LEM-				
		S06	S09	S12	S16	S25
Focal length		6 mm	9 mm	12 mm	16 mm	25 mm
Installation distance		59 to 1000 mm	60 to 1000 mm	60 to 1000 mm	110 to 2000 mm	188 to 2000 mm
Usage environment	Ambient temperature range	Operating: 0 to +40°C, Storage: -25 to +65°C (with no icing or condensation)				
	Ambient humidity range	Operating & Storage: 35 to 85%RH (With no condensation)				
	Ambient atmosphere	No corrosive gases				
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.15 mm ^{*1} , Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10				
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)				
External shape	Dimension	50 mm × 41 mm × 31 mm (HxWxD)				
	Weight	Approx. 50 g				
	Case material	Polycarbonate				
Accessories		• Special cover for FHV-LEM-S: 1 • Screws: M3×8 mm: 5 (including one spare piece) • Instruction sheet : 1 • Compliance sheet: 1				

*1. When the lens module is mounted to the product, the specifications of vibration tolerance are changed.

Dimensions

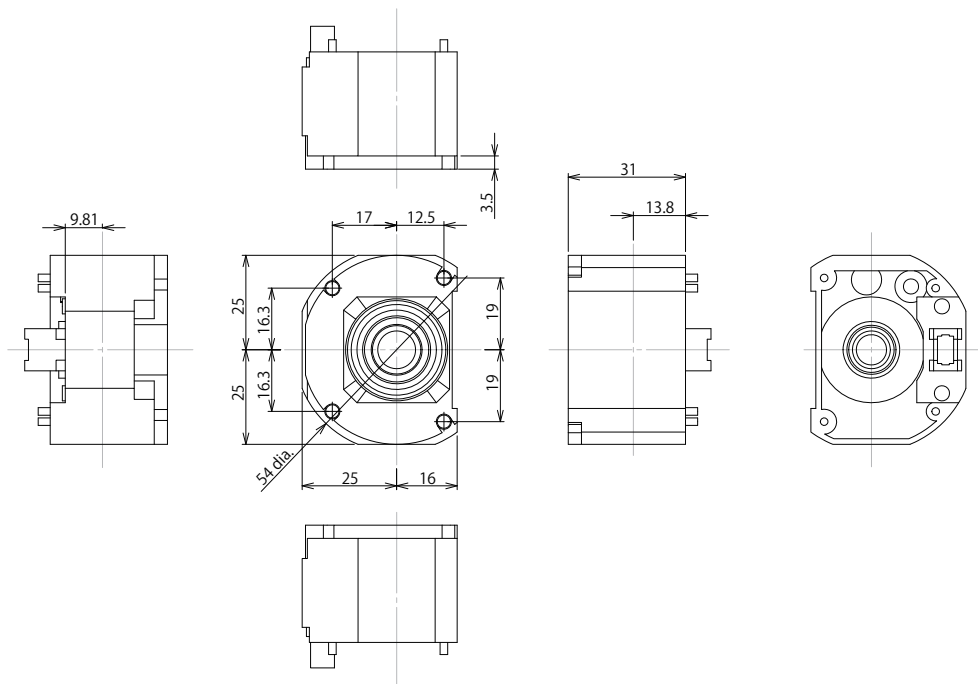

(Unit: mm)




Additional Information

We have the 2D CAD data or 3D CAD data.
You can download CAD data from www.fa.omron.co.jp.

3-3-2 Meaning of Optical Chart

How to View the Optical Chart

The X axis of the optical chart shows the field of vision (mm).
The Y axis of the optical chart shows the camera installation distance (mm).

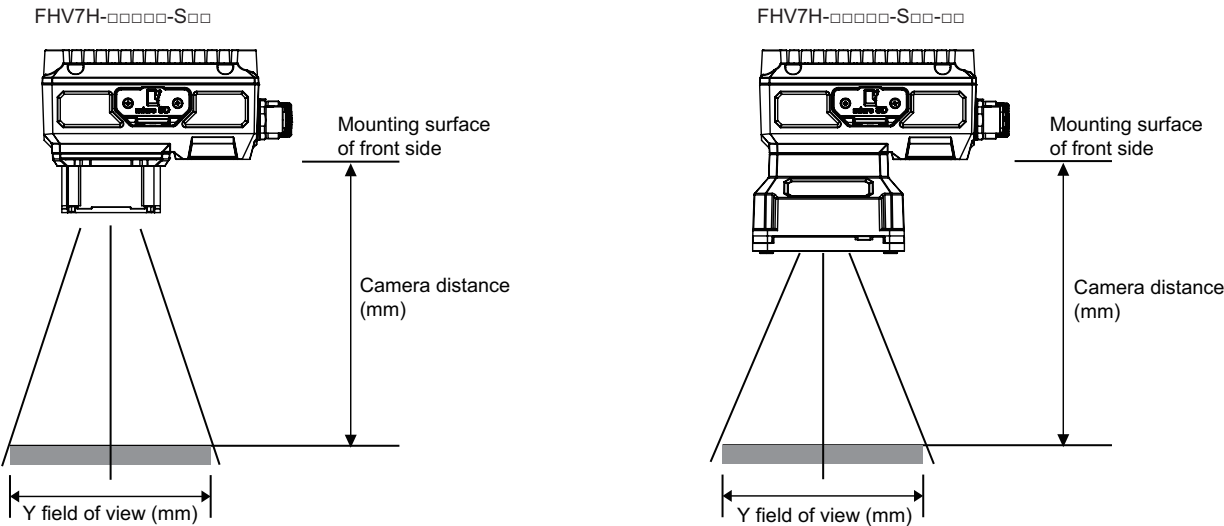

The lengths of the fields of view given in the optical charts are the lengths of the Y axis.



Precautions for Correct Use

The optical axis may vary product by product. When mounting this module, be sure to confirm the center position of the video on the monitor. The optical axis of this product may vary over a couple of pixels due to the variation of ambient temperature because of the material characteristics.




Precautions for Correct Use


Select the model by confirming the field of view and camera installation distance on the optical diagram. In addition, the field of view may vary product by product. When mounting this product, be sure to confirm video using the monitor.

Optical Chart


- FHV7H-□004, FHV7H-□016

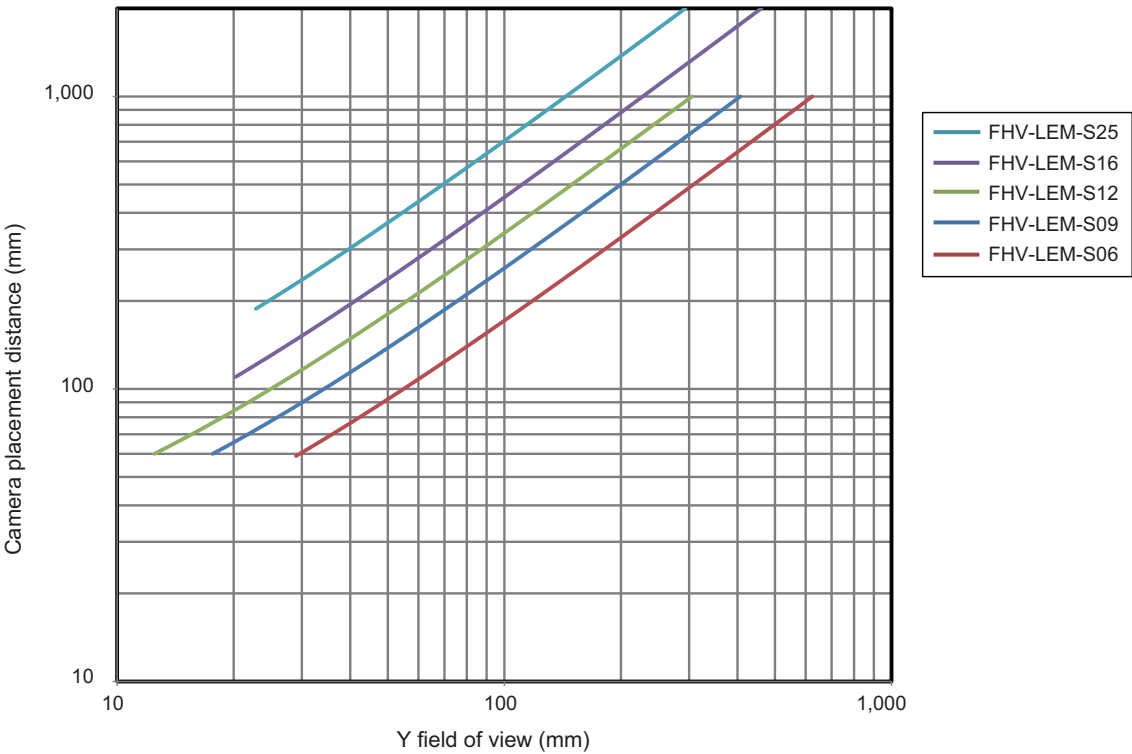

- FHV7H-□032

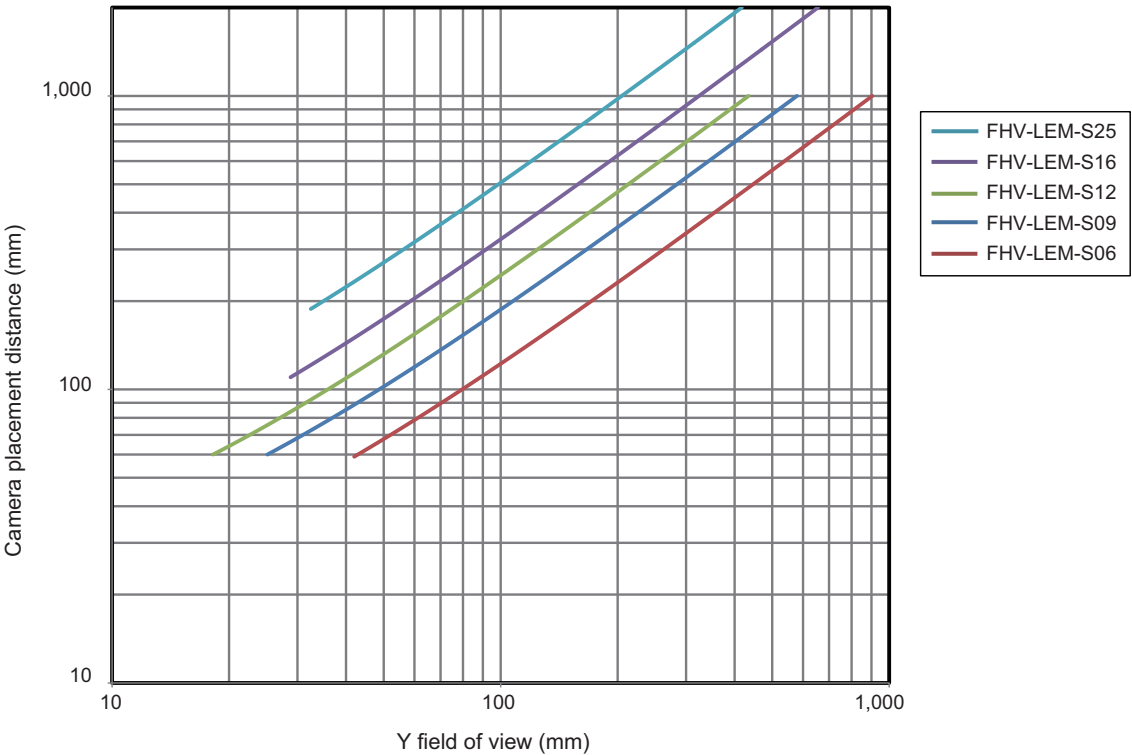

- FHV7H-□063R

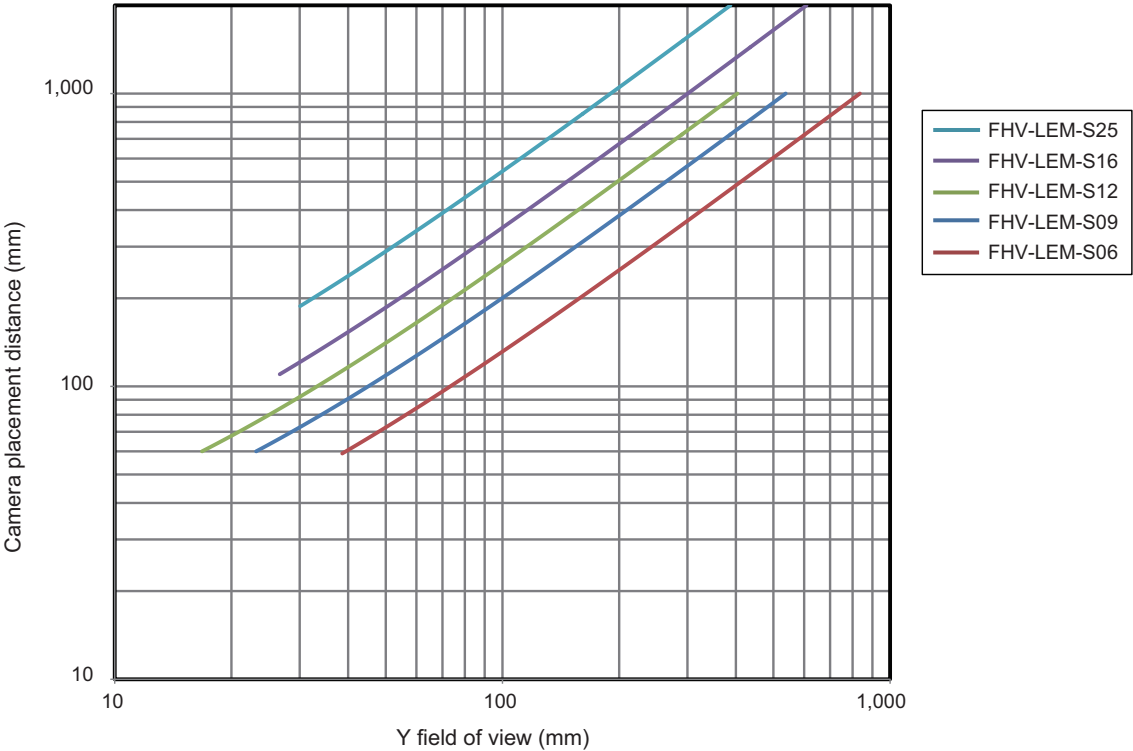

3-4 C Mount Lenses

3-4-1 Specifications

SV-V Series

FHV7H-□004 and FHV7H-□016 are recommended.

Model	3Z4S-LE			
	SV-03514V	SV-04514V	SV-0614V	SV-0813V
Appearance/ Dimensions [mm]				
Focal length [mm]	3.5	4.5	6	8
Aperture (F No.)	1.4 to Close	1.4 to Close	1.4 to Close	1.3 to Close
Filter size	—	—	M27.0 P0.5	M25.5 P0.5
Max. sensor size	1/3-inch	1/3-inch	1/3-inch	1/3-inch
Mount	C mount			

Model	3Z4S-LE			
	SV-1214V	SV-1614V	SV-2514V	SV-3518V
Appearance/ Dimensions [mm]				
Focal length [mm]	12	16	25	35
Aperture (F No.)	1.4 to Close	1.4 to Close	1.4 to Close	1.8 to Close
Filter size	M27.0 P0.5	M27.0 P0.5	M27.0 P0.5	M27.0 P0.5
Max. sensor size	1/3-inch	1/3-inch	1/3-inch	1/3-inch
Mount	C mount			

Model	3Z4S-LE		
	SV-5018V	SV-7527V	SV-10035V
Appearance/ Dimensions [mm]			
Focal length [mm]	50	75	100
Aperture (F No.)	1.8 to Close	2.7 to Close	3.5 to Close
Filter size	M30.5 P0.5	M30.5 P0.5	M30.5 P0.5
Max. sensor size	1/3-inch	1/3-inch	1/3-inch
Mount	C mount		

SV-H Series

FHV7H-□032, FHV7H-□050, FHV7H-□063R, and FHV7H-□120R are recommended.

Model	3Z4S-LE			
	SV-0614H	SV-0814H	SV-1214H	SV-1614H
Appearance/ Dimensions [mm]				
Focal length [mm]	6	8	12	16
Aperture (F No.)	1.4 to 16	1.4 to 16	1.4 to 16	1.4 to 16
Filter size	M40.5 P0.5	M35.5 P0.5	M27.0 P0.5	M27.0 P0.5
Max. sensor size	2/3-inch	2/3-inch	2/3-inch	2/3-inch
Mount	C mount			

Model	3Z4S-LE			
	SV-2514H	SV-3514H	SV-5014H	SV-7525H
Appearance/ Dimensions [mm]				
Focal length [mm]	25	35	50	75
Aperture (F No.)	1.4 to 16	1.4 to 16	1.4 to 16	2.5 to Close
Filter size	M27.0 P0.5	M35.5 P0.5	M40.5 P0.5	M34.0 P0.5
Max. sensor size	2/3-inch	2/3-inch	2/3-inch	1-inch
Mount	C mount			

Model	3Z4S-LE
	SV-10028H
Appearance/ Dimensions [mm]	
Focal length [mm]	100
Aperture (F No.)	2.8 to Close
Filter size	M37.5 P0.5
Max. sensor size	1-inch
Mount	C mount

Vibration / Shock-resistance Lens VS-MCA Series for C Mount Camera

FHV7H-□004, FHV7H-□016, FHV7H-□032, FHV7H-□050, FHV7H-□063R, and FHV7H-□120R are recommended.

Model	3Z4S-LE VS-MCA4-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 29.0 [0.01x] ~ 29.2 [0.04x]								
Focal length [mm]	4 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.01x			0.02x			0.04x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm]*2	1680.0	4560.0	6480.0	420.0	1140.0	1640.0	105.0	290.0	415.0
Maximum sensor size	1/2-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA6.5-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 23.1 [0.01x] ~ 23.4 [0.06x]								
Focal length [mm]	6.5 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.01x			0.03x			0.06x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm]*2	1840.0	4560.0	6480.0	204.4	515.6	728.9	51.1	131.1	188.9
Maximum sensor size	1/2-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA10-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 24.2 [0.02x] ~ 25.5 [0.15x]								
Focal length [mm]	10 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.02x			0.10x			0.15x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm] ^{*2}	460.0	1140.0	1640.0	19.2	49.6	70.4	9.2	22.8	32.7
Maximum sensor size	1/2-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA15-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 27.9 [0.03x] ~ 32.0 [0.30x]								
Focal length [mm]	15 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.03x			0.20x			0.30x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm] ^{*2}	186.7	515.6	728.9	4.8	13.4	19.2	2.3	6.5	9.2
Maximum sensor size	2/3-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA20-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 24.5 [0.04x] ~ 32.0 [0.40x]								
Focal length [mm]	20 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.04x			0.25x			0.40x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm]*2	105.0	290.0	415.0	3.2	9.0	12.8	1.5	3.9	5.6
Maximum sensor size	2/3-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA25-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 27.0 [0.05x] ~ 38.5 [0.50x]								
Focal length [mm]	25 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.05x			0.25x			0.50x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm]*2	67.2	188.8	268.8	3.2	9.0	12.8	1.0	2.7	3.8
Maximum sensor size	2/3-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA30-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 24.5 [0.06x] ~ 36.2 [0.45x]								
Focal length [mm]	30 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.06x			0.15x			0.45x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm] ^{*2}	53.3	131.1	188.9	8.2	22.8	32.7	1.3	3.2	4.6
Maximum sensor size	2/3-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA35-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 32.0 [0.26x] ~ 45.7 [0.65x]								
Focal length [mm]	35 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.26x			0.30x			0.65x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm] ^{*2}	3.0	8.4	12.0	2.2	6.5	9.2	0.7	1.7	2.5
Maximum sensor size	2/3-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA50-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 44.0 [0.08x] ~ 63.4 [0.48x]								
Focal length [mm]	50 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.08x			0.20x			0.48x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm] ^{*2}	32.5	75.0	107.5	6.0	13.4	19.2	1.3	2.9	4.1
Maximum sensor size	2/3-inch								
Mount	C mount								

Model	3Z4S-LE VS-MCA75-□□□□*1								
Appearance/ Dimensions [mm]	 31 dia. 70.0 [0.14x] ~ 105.5 [0.62x]								
Focal length [mm]	75 mm								
Filter size	M27.0 P0.5								
Optical magnification	0.14x			0.20x			0.62x		
Aperture (fixed F No.)	2	5.6	8	2	5.6	8	2	5.6	8
Depth of field [mm] ^{*2}	16.7	28.6	41.2	9.2	13.4	19.2	1.3	2.5	3.6
Maximum sensor size	2/3-inch								
Mount	C mount								

*1. Insert the aperture into □□□□ in the model number as follows.

F=2: Blank

F=5: F5.6

F=8: F8

*2. When an allowable diameter of confusion circle is 0.04 mm

High-resolution Telecentric Lens VS-TCH Series for C Mount Lens for 2/3-inch Image Sensor

FHV7H-□004, FHV7H-□01, FHV7H-□032, FHV7H-□050, FHV□□-□063R, and FHV□□-□120R are recommended.

Model			3Z4S-LE VS-TCH05		3Z4S-LE VS-TCH1	
			-65□□□□	-110□□□□	-65□□□□	-110□□□□
Optical magnification (±5%)			0.5×		1.0×	
Field of view (±5%) (VxH) [mm]	FHV7H-□004/-□016	1/2.9-inch equivalent	9.9×7.5		5.0×3.7	
	FHV7H-□032	1/1.8-inch equivalent	14.1×10.6		7.1×5.3	
	FHV7H-□063R	1/1.8-inch equivalent	14.8×9.8		7.4×4.9	
	FHV7H-□120R	1/1.7-inch equivalent	14.8×11.1		7.4×5.6	
	FHV7H-□50	2/3-inch equivalent	16.9×14.1		8.5×7.1	
WD [mm] ^{*2}			75.3	110.8	68.8	110.3
Effective F No.			9.42	9.49	9.94	10.49
Depth of field [mm] ^{*3}			3	3.04	0.8	0.84
Resolution [μm] ^{*4}			12.43	12.9	6.71	6.99
TV distortion			0.02%	0.02%	0.01%	0.02%
Max. sensor size			2/3-inch			

Model			3Z4S-LE VS-TCH1.5		3Z4S-LE VS-TCH2	
			-65□□□□	-110□□□□	-65□□□□	-110□□□□
Optical magnification (±5%)			1.5×		2.0×	
Field of view (±5%) (VxH) [mm]	FHV7H-□004/-□016	1/2.9-inch equivalent	3.3×2.5		2.5×1.9	
	FHV7H-□032	1/1.8-inch equivalent	4.7×3.5		3.5×2.7	
	FHV7H-□063R	1/1.8-inch equivalent	4.9×3.3		3.7×2.5	
	FHV7H-□120R	1/1.7-inch equivalent	4.9×3.7		3.7×2.8	
	FHV7H-□50	2/3-inch equivalent	5.6×4.7		4.2×3.5	
WD [mm] ^{*2}			65	110.8	65	110.8
Effective F No.			11.8	11.97	13.6	13.5
Depth of field [mm] ^{*3}			0.4	0.43	0.3	0.27
Resolution [μm] ^{*4}			5.24	5.33	4.53	4.53
TV distortion			0.01%	0.02%	0.03%	0.03%
Max. sensor size			2/3-inch			

Model			3Z4S-LE VS-TCH4	
			-65□□□□	-110□□□□
Optical magnification (±5%)			4.0×	
Field of view (±5%) (V×H) [mm]	FHV7H-□004/- □016	1/2.9-inch equivalent	1.4×0.9	
	FHV7H-□032	1/1.8-inch equivalent	1.8×1.3	
	FHV7H-□063R	1/1.8-inch equivalent	1.8×1.2	
	FHV7H-□120R	1/1.7-inch equivalent	1.9×1.4	
	FHV7H-□50	2/3-inch equivalent	2.1×1.8	
WD [mm] ^{*2}			65	110.8
Effective F No.			17.91	22.2
Depth of field [mm] ^{*3}			0.09	0.11
Resolution [μm] ^{*4}			3	3.73
TV distortion			0.02%	0.03%
Max. sensor size			2/3-inch	

*1. Insert the shape into □□□□ in the model number as follows.

Straight: -O

Coaxial: CO-O

*2. The working distance is from the end of the lens to the sensor.

*3. The depth of field is calculated using a allowable diameter of confusion circle of 0.04 mm.

*4. The resolution is calculated using a wavelength of 550 nm.

Note:

- (1) Fixing the lens or other reinforcement may be required depending on the installation angle or operating environment (vibration/shock).
When fixing the lens, insulate the lens from the fixture.
- (2) The above specifications are values calculated from the optical design and can vary depending on installation conditions.

Non-telecentric Macro Lens VS-MC Series for C Mount Camera

Model			3Z4S-LE VS			
			-MC01-330	-MC03-180	-MC05-130	-MC1-80
Optical magnification ($\pm 5\%$)			0.1x	0.3x	0.5x	1.0x
Field of view ($\pm 5\%$) (VxH) [mm]	FHV7H- □004/-□016	1/2.9-inch equivalent	49.7x37.3	16.6x12.4	9.9x7.5	5.0x3.7
	FHV7H-□032	1/1.8-inch equivalent	70.7x53.0	23.6x17.7	14.1x10.6	7.1x5.3
	FHV7H- □063R	1/1.8-inch equivalent	73.7x49.2	24.6x16.4	14.8x9.8	7.4x4.9
	FHV7H- □120R	1/1.7-inch equivalent	74.0x55.5	24.7x18.5	14.8x11.1	7.4x5.6
	FHV7H-□050	2/3-inch equivalent	84.5x70.7	28.2x23.6	16.9x14.1	8.5x7.1
WD [mm] ^{*1}			325.5	184.8	126.3	82.4
Effective F No.			4.43	5.29	6.10	8.14
Resolution [μm] ^{*2}			30.5	11.6	8.2	5.5
Depth of field [mm] ^{*3}			35.4	4.7	2.0	0.7
TV distortion			0.01% or less	0.00% or less	0.00% or less	0.00% or less

*1. The working distance is from the end of the lens to the sensor.

*2. The resolution is calculated using a wavelength of 550 nm.


*3. The depth of field is calculated using an allowable diameter of confusion circle of 0.04 mm.

3-4-2 Meaning of Optical Chart

How to View the Optical Chart

The X axis of the optical chart shows the field of view [mm].

The Y axis of the optical chart shows the camera installation distance [mm] or WD.

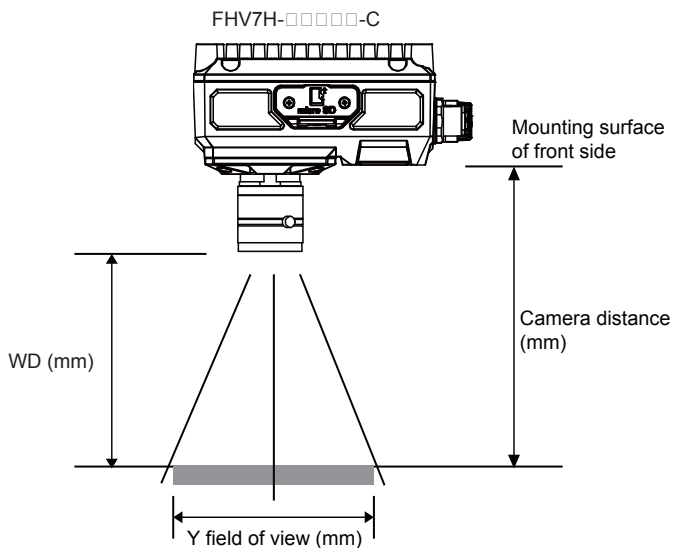

The lengths of the fields of view given in the optical charts are the lengths of the Y axis.



Precautions for Correct Use

The optical axis may vary product by product. When mounting this module, be sure to confirm the center position of the video on the monitor. The optical axis of this product may vary over a couple of pixels due to the variation of ambient temperature because of the material characteristics.




Precautions for Correct Use

Select the model by confirming the field of view and camera installation distance on the optical diagram. In addition, the field of view may vary product by product. When mounting this product, be sure to confirm video using the monitor.


Optical Chart

● Normal Lenses


(a) Smart camera: FHV7H-□004, FHV7H-□016 (for 3Z4S-LE SV-V series)

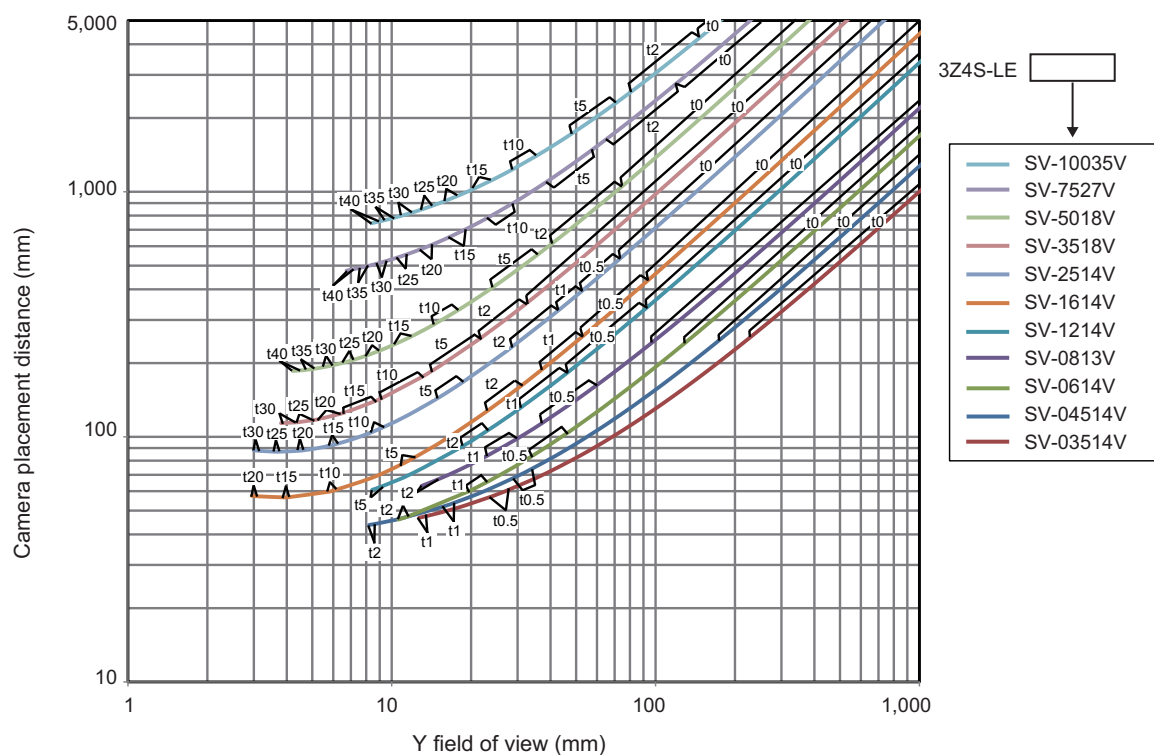


(b) Smart camera: FHV7H-□004, FHV7H-□016 (for 3Z4S-LE SV-H series)

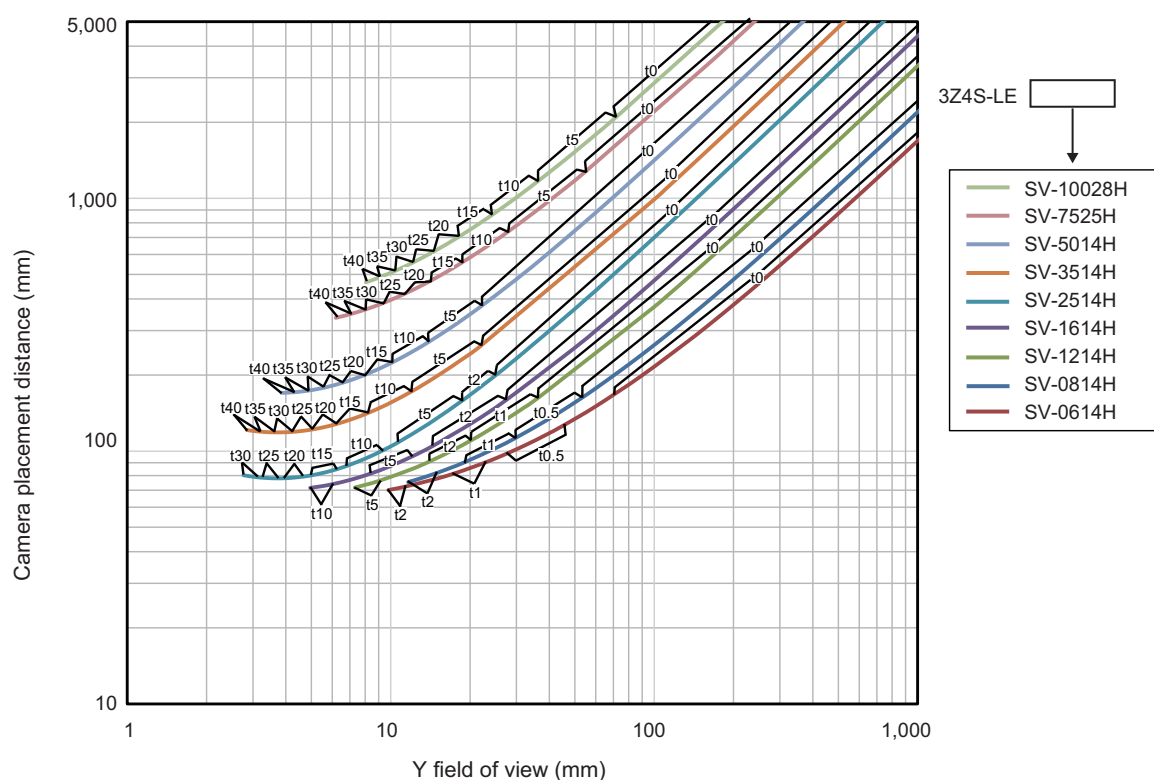

(c) Smart camera: FHV7H-□032 (for 3Z4S-LE SV-H series)

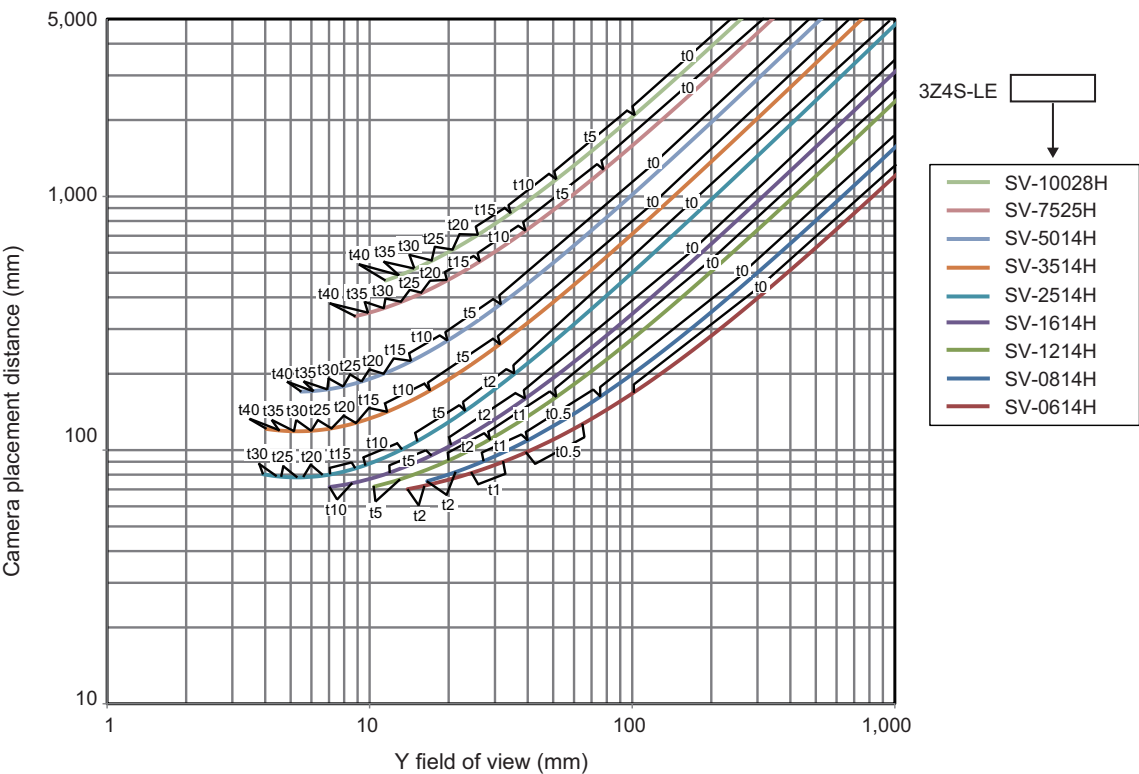


(d) Smart camera: FHV7H-□050 (for 3Z4S-LE SV-H series)

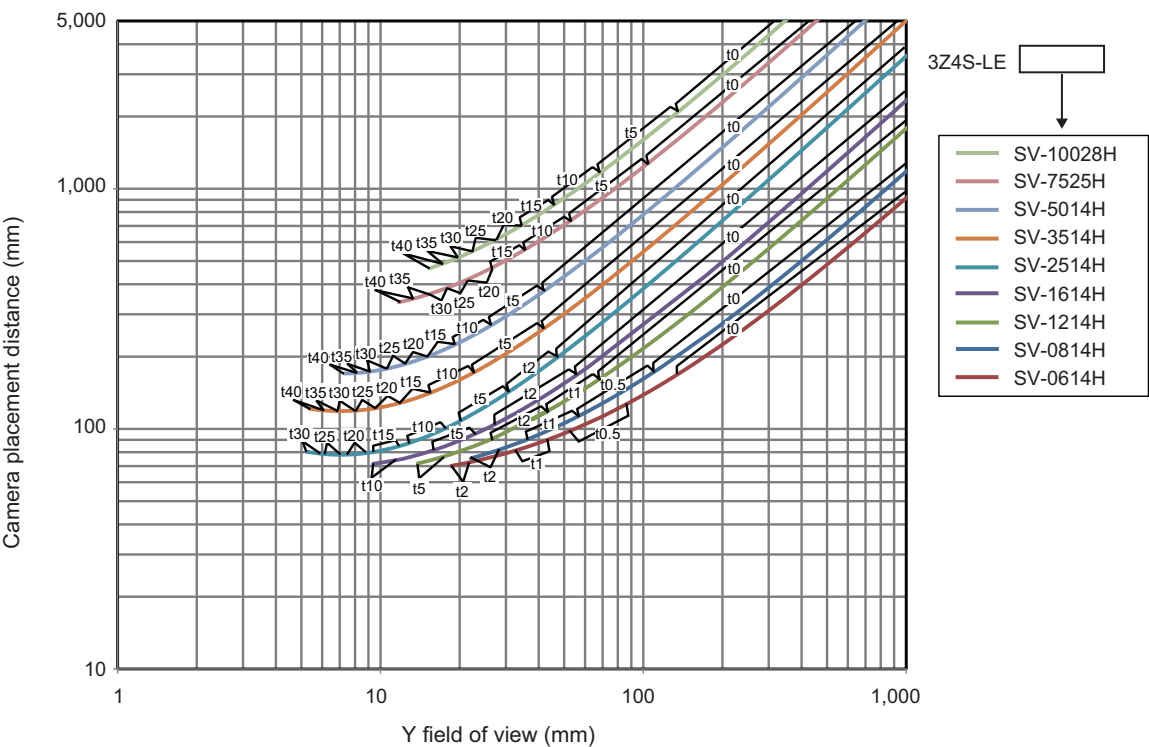


● **Vibration / Shock-resistance Lens**


(a) Smart Camera: FHV7H-□004, FHV7H-□016 (for 3Z4S-LE VS-MCA series)

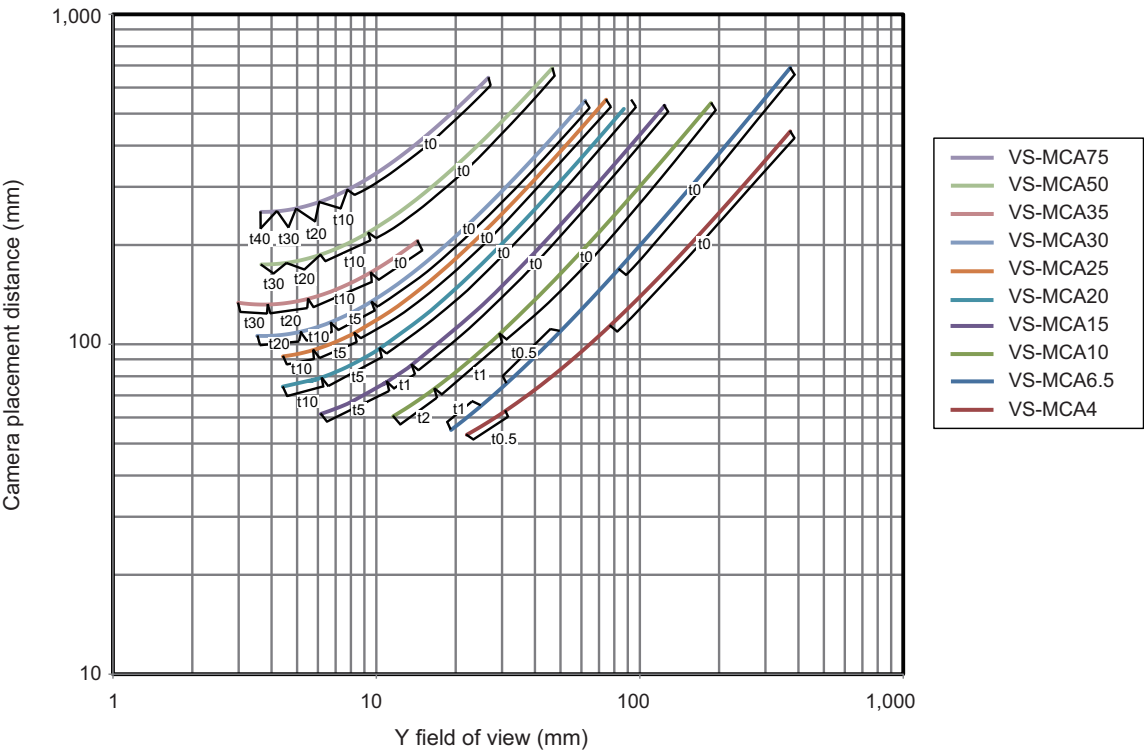


(b) Smart camera: FHV7H-□032 (for 3Z4S-LE VS-MCA series)

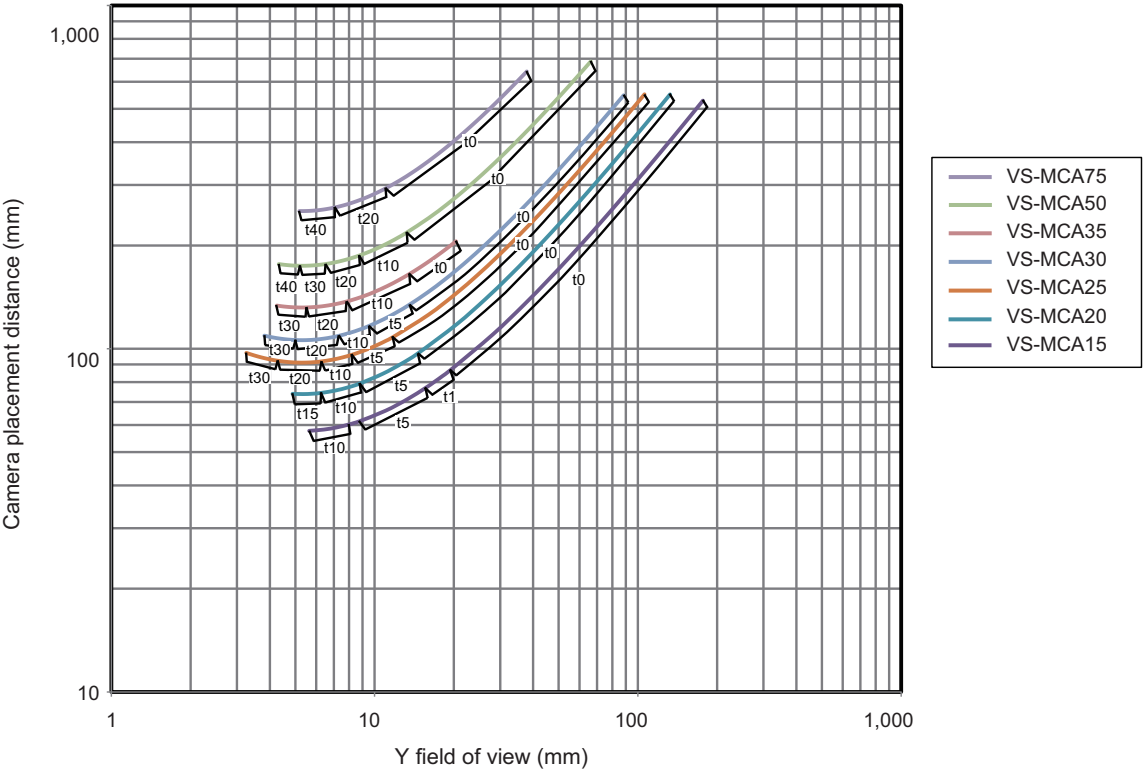


(c) Smart camera: FHV7H-□050 (for 3Z4S-LE VS-MCA series)

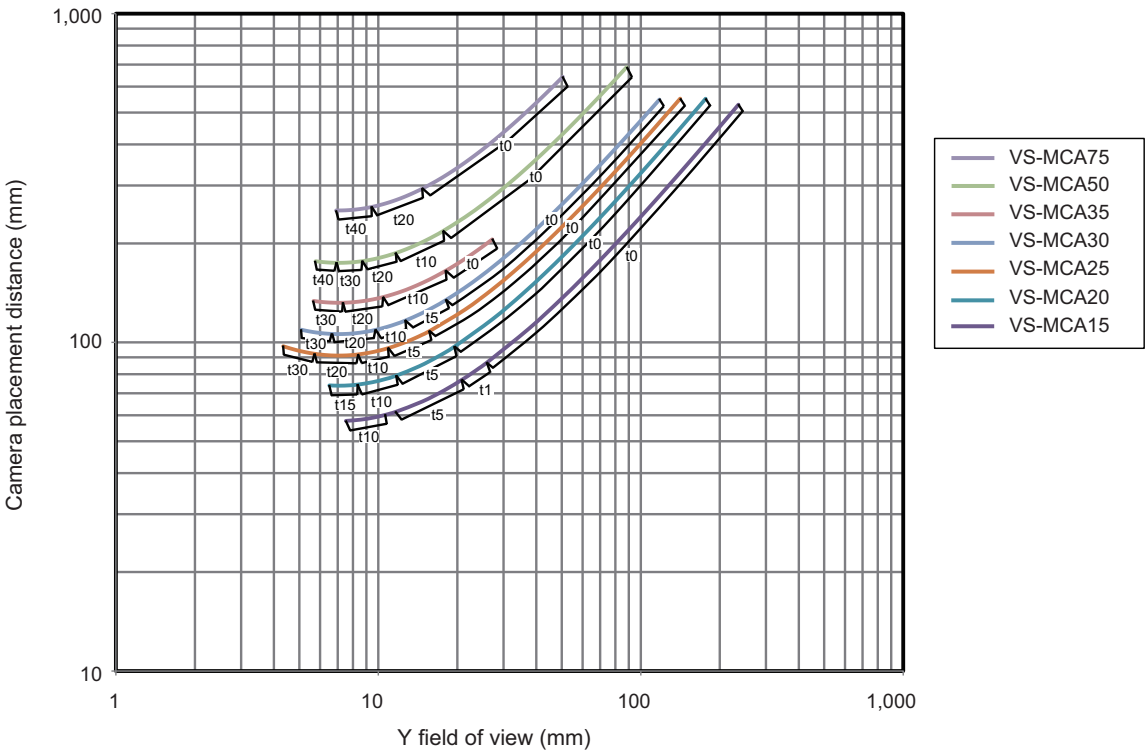

(d) Smart camera: FHV7H-□063R (for 3Z4S-LE VS-MCA series)

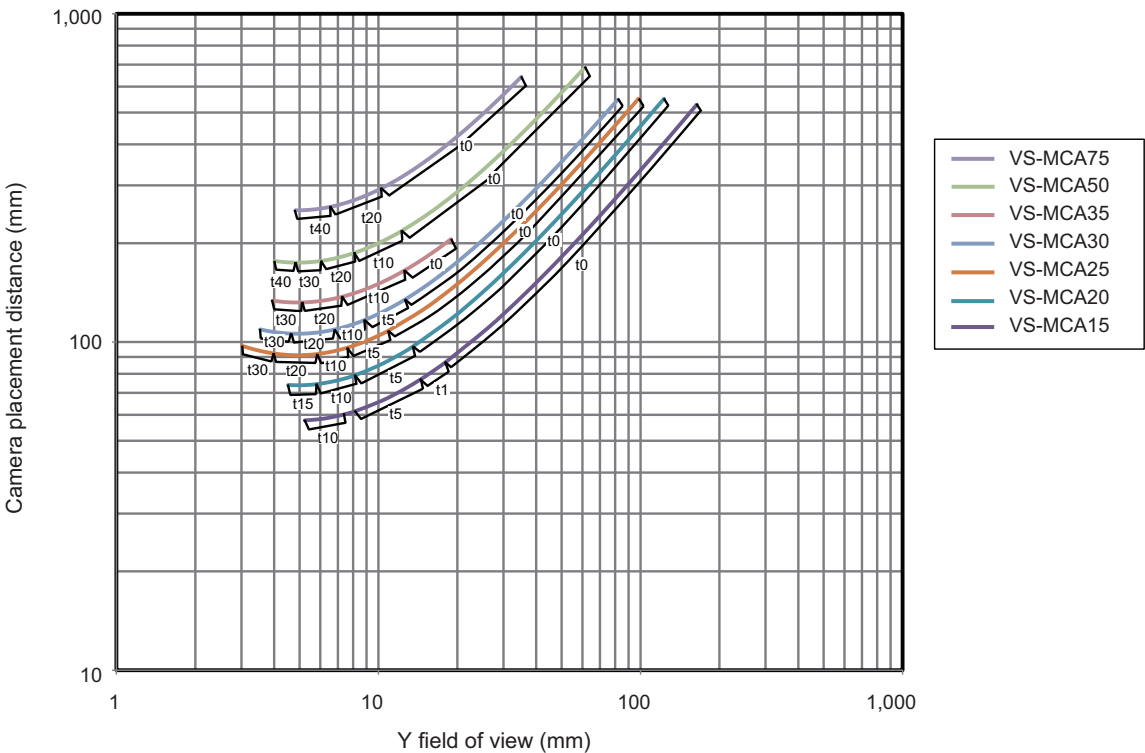

(e) Smart camera: FHV7H-□120R (for 3Z4S-LE VS-MCA series)

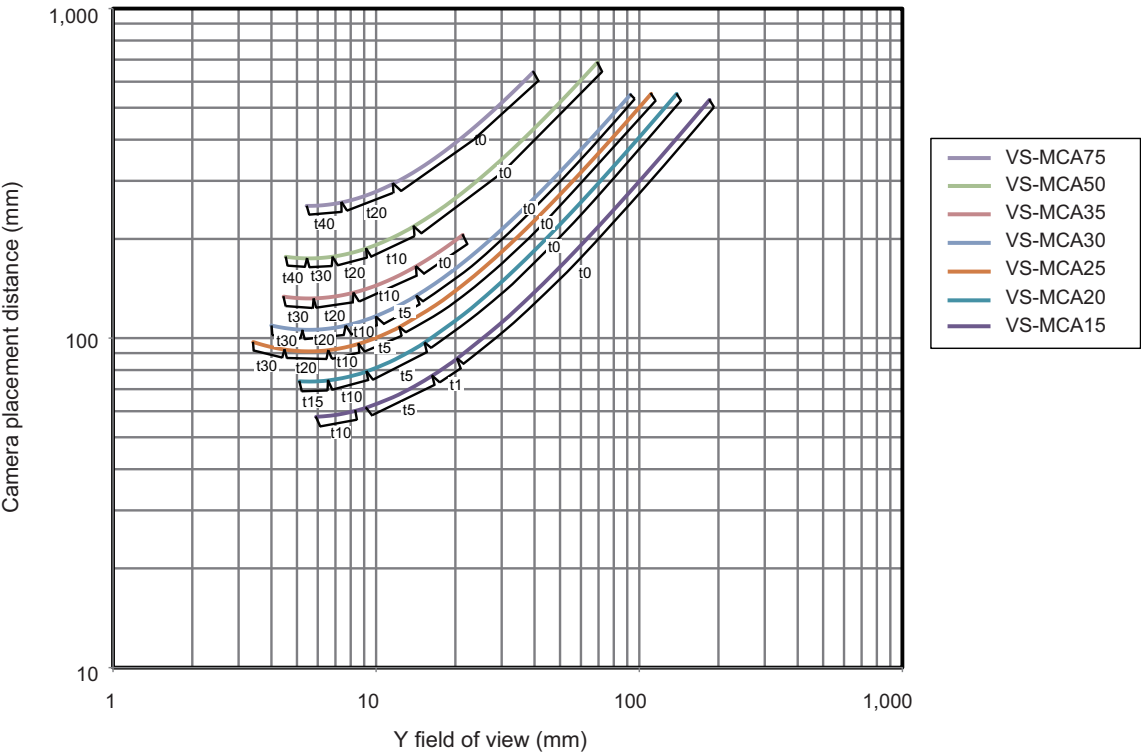


3-5 Lighting Modules

3-5-1 Specifications

Model		FHV-LTM-W	FHV-LTM-R	FHV-LTM-IR	FHV-LTM-MC
Color		White	Red	Infrared light	Multi color
Peak wave length		-	Typ. 630 nm	Typ. 850 nm	R: Typ. 630 nm G: Typ. 525 nm B: Typ. 465 nm IR: Typ. 850 nm
Light source		LED	LED	LED	LED
Risk group		Group 2	Group 1	Group 1	R: Group 1 G: Group 2 B: Group 2 IR: Group 1
Usage environment	Ambient temperature range	Operating: 0 to +40°C, Storage: -25 to +65°C (with no icing or condensation)			
	Ambient humidity range	Operating & Storage: 35 to 85%RH (With no condensation)			
	Ambient atmosphere	No corrosive gases			
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10			
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)			
Dimensions		52 mm × 91 mm × 77 mm (HxWxD)			
Weight		270 g	270 g	270 g	270 g
Material		Aluminum die-casting (ADC12), polycarbonate			
Accessories		- Waterproof packing (small) FHV-XWP-CAM: 1 - Waterproof packing (large) FHV-XWP-LTM: 1 - Light shielding sheet FHV-XLS-LTM: 1 - Lighting cover FHV-XCV: 1 - Hexagonal wrench (length: 60 mm): 1 - Instruction sheet: 1 - Compliance sheet: 1			

3-5-2 Dimensions

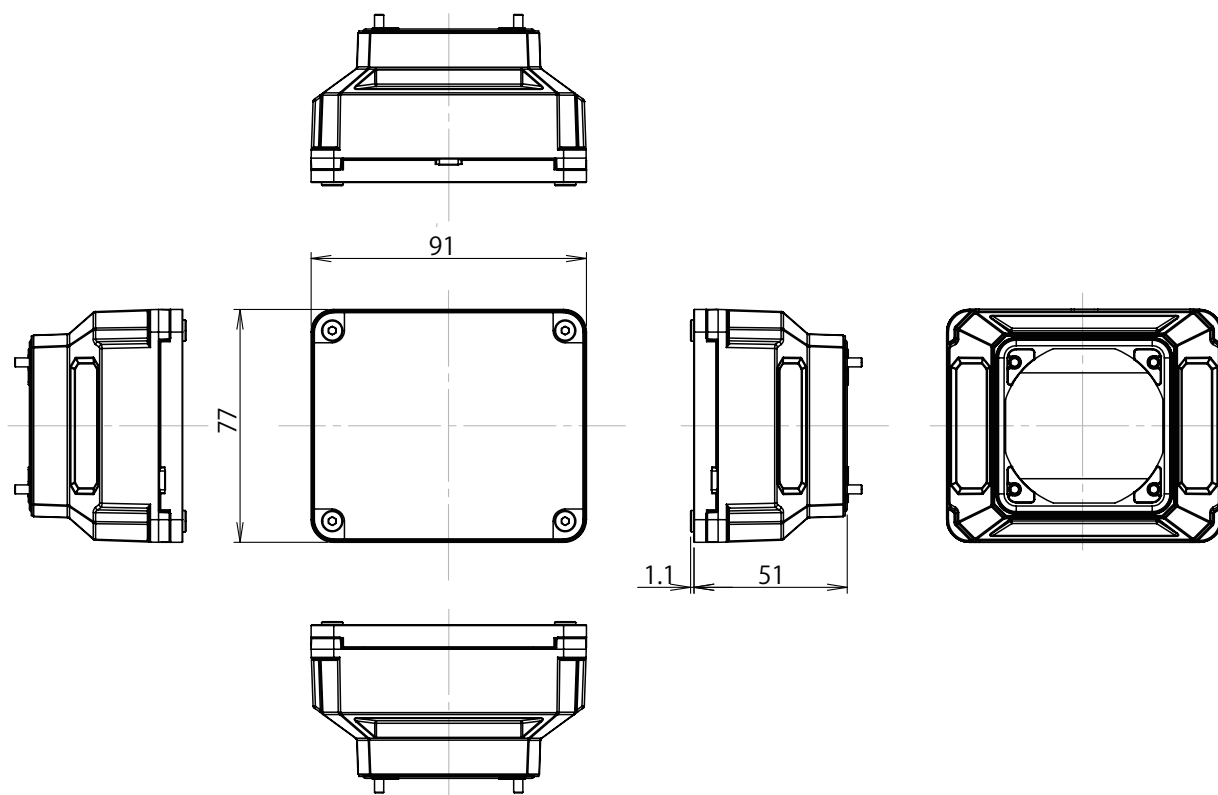

(Unit: mm)



Additional Information


We have the 2D CAD data or 3D CAD data.
You can download CAD data from www.fa.omron.co.jp.

3-6 Optical Filters

3-6-1 Specifications

Model		FHV-XDF	FHV-XPL	FHV-XPL-IR	FHV-XCV
Filter type		Diffusion filter	Polarization filter	Polarization filter	Lighting cover for replacement
Wavelength		Visible to infrared	Visible	Visible to infrared	Visible to infrared
Adapted lighting module		FHV-LTM-W FHV-LTM-R FHV-LTM-IR FHV-LTM-MC	FHV-LTM-W FHV-LTM-R FHV-LTM-MC (Infrared light is not used.)	FHV-LTM-W FHV-LTM-R FHV-LTM-IR FHV-LTM-MC	FHV-LTM-W FHV-LTM-R FHV-LTM-IR FHV-LTM-MC
Usage environment	Ambient temperature range	Operating: 0 to +40°C, Storage: -25 to +65°C (with no icing or condensation)			
	Ambient humidity range	Operating & Storage: 35 to 85%RH (With no condensation)			
	Vibration tolerance	No corrosive gases			
	Shock resistance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10			
	Vibration tolerance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/back, left/right)			
Material		Aluminum (A6061), polycarbonate			
Weight		Approx. 70 g	Approx. 70 g	Approx. 70 g	Approx. 70 g

3-6-2 Dimensions

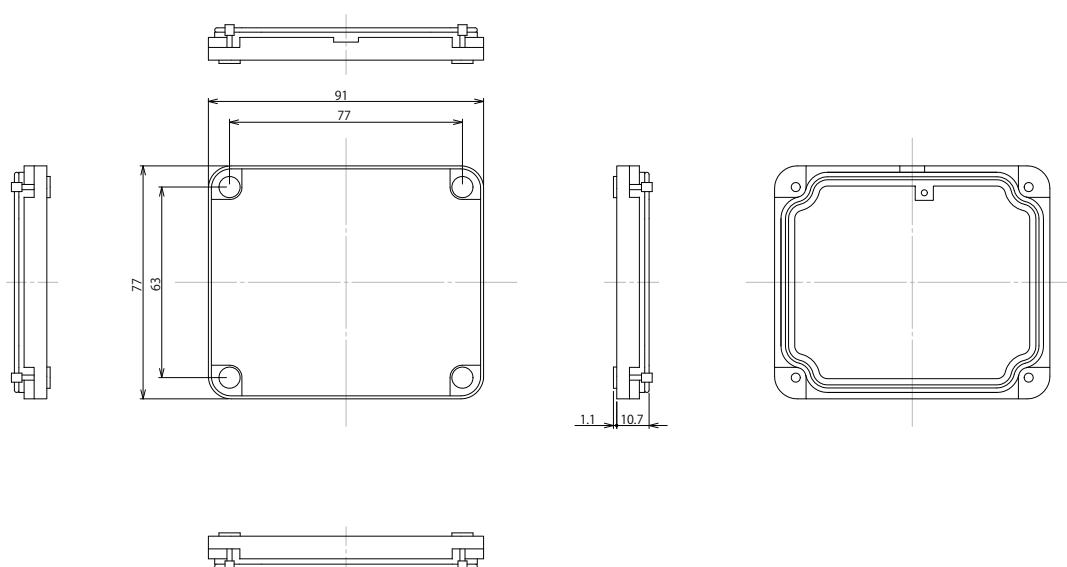

(Unit: mm)



Additional Information

We have the 2D CAD data or 3D CAD data.
You can download CAD data from www.fa.omron.co.jp.

3-7 Waterproof Hoods

3-7-1 Specifications


Model		FHV-XHD-S	FHV-XHD-L	FHV-XHD-LEM
Suitable lens		3Z4S-LE SV-V series SV-0614V SV-0813V SV-1214V SV-1614V SV-2514V	3Z4S-LE SV-H series SV-0614H*1 SV-0814H*2 SV-1214H SV-1614H SV-2514H SV-3514H SV-5014H	FHV-LEM-S series FHV-LEM-S06 FHV-LEM-S09 FHV-LEM-S12 FHV-LEM-S16 FHV-LEM-S25
Usage environment	Ambient temperature range	Operating: 0 to +40°C, Storage: -25 to +65°C (with no icing or condensation)		
	Ambient humidity range	Operating & Storage: 35 to 85%RH (With no condensation)		
	Ambient atmosphere	No corrosive gases		
	Vibration tolerance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10		
	Shock resistance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)		
Material		Aluminum (A6061), polycarbonate		
Weight		Approx. 220 g	Approx. 220 g	Approx. 220 g

*1. This is not available in FHV7H-□050、FHV7H-□063R、FHV7H-□120R.

*2. This is not available in FHV7H-□050.


3-7-2 Dimensions

- FHV-XHD-S

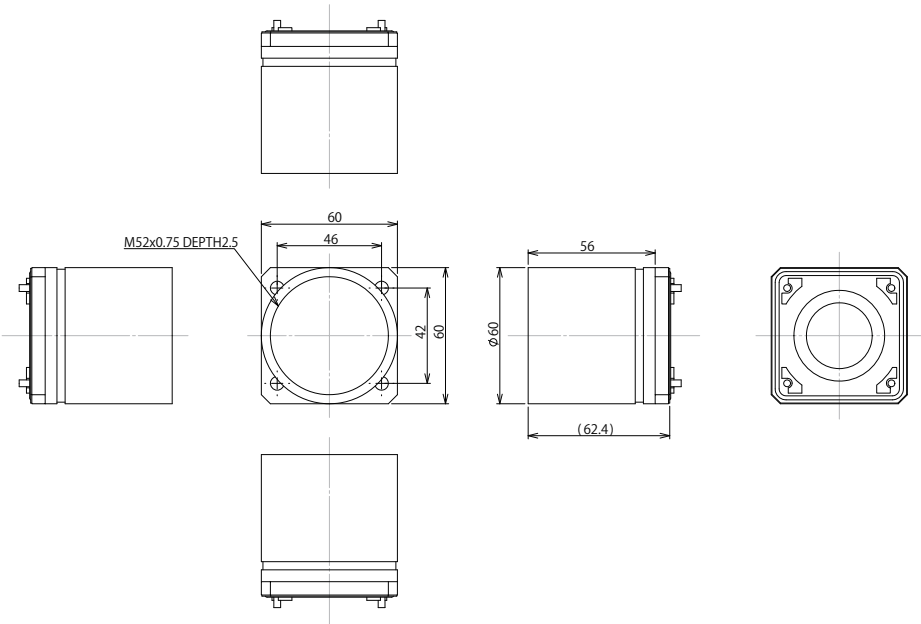


(Unit: mm)

- FHV-XHD-L

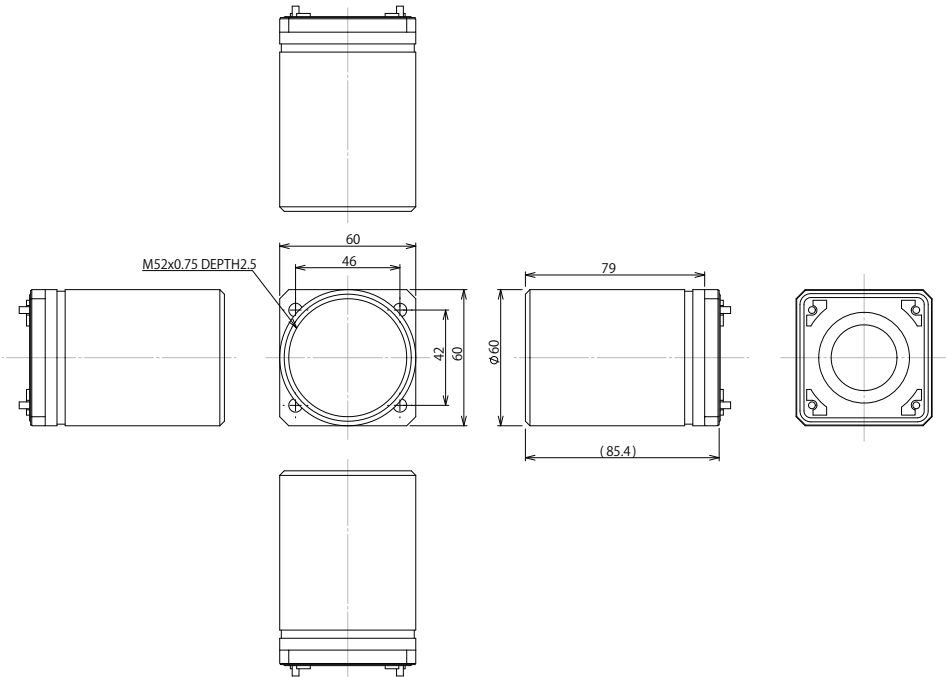


(Unit: mm)

- FHV-XHD-LEM

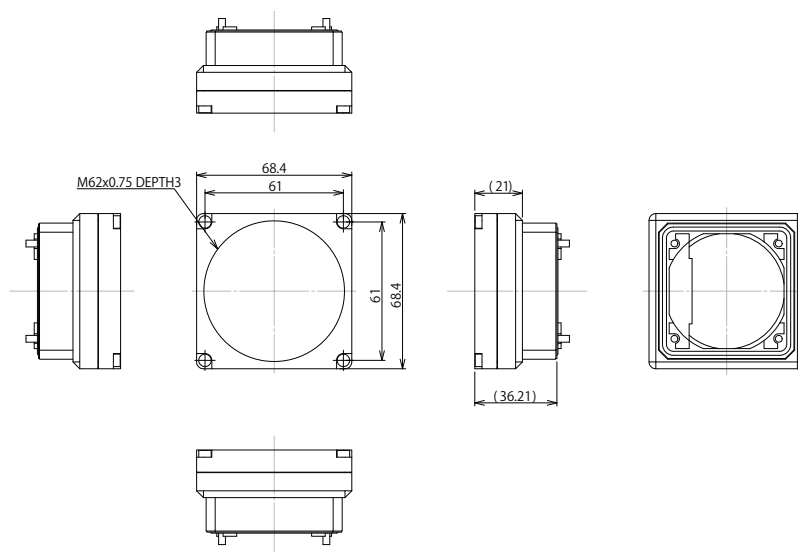


(Unit: mm)

- Outer size when the waterproof hood, FHV-XHD-S, is mounted.

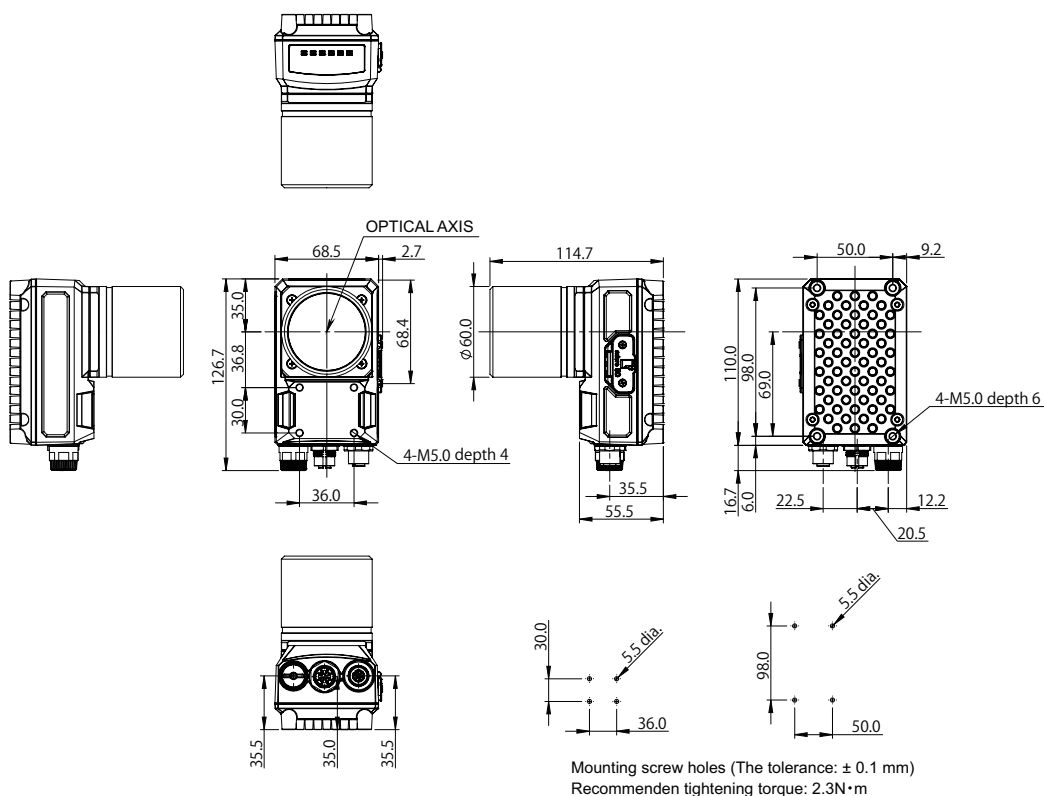


(Unit: mm)

- Outer size when the waterproof hood, FHV-XHD-L, is mounted.

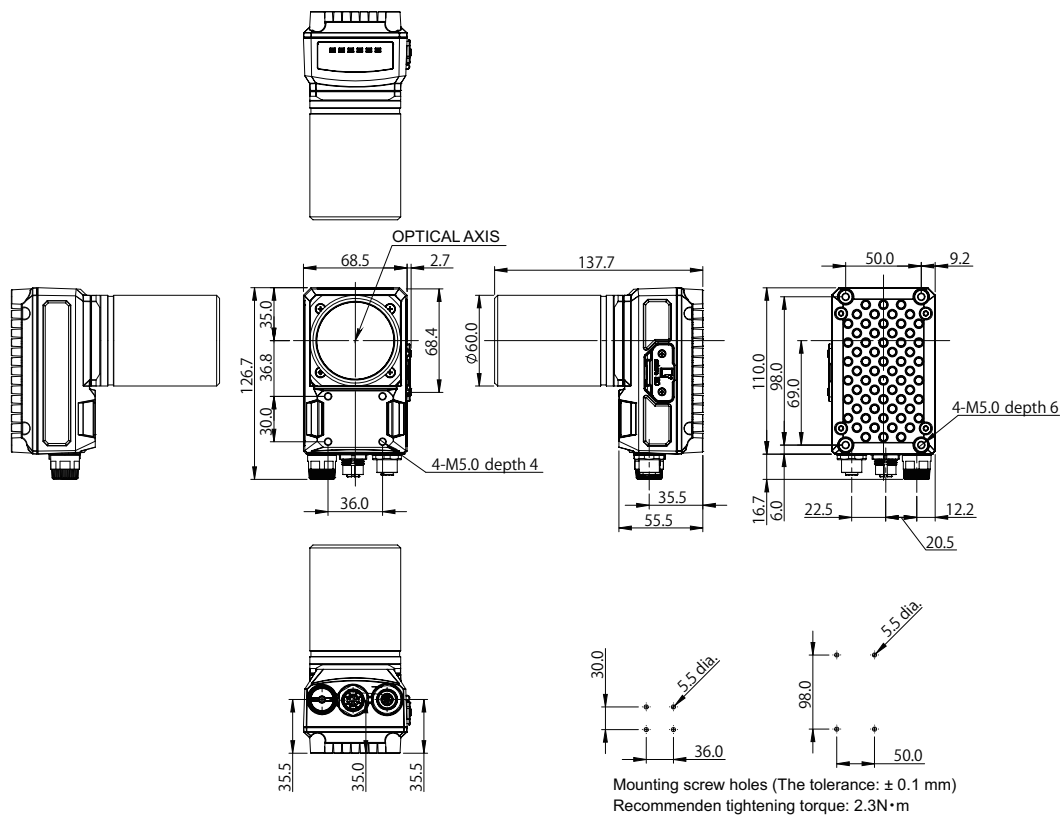

(Unit: mm)

- Outer size when the waterproof hood, FHV-XHD-LED, is mounted.

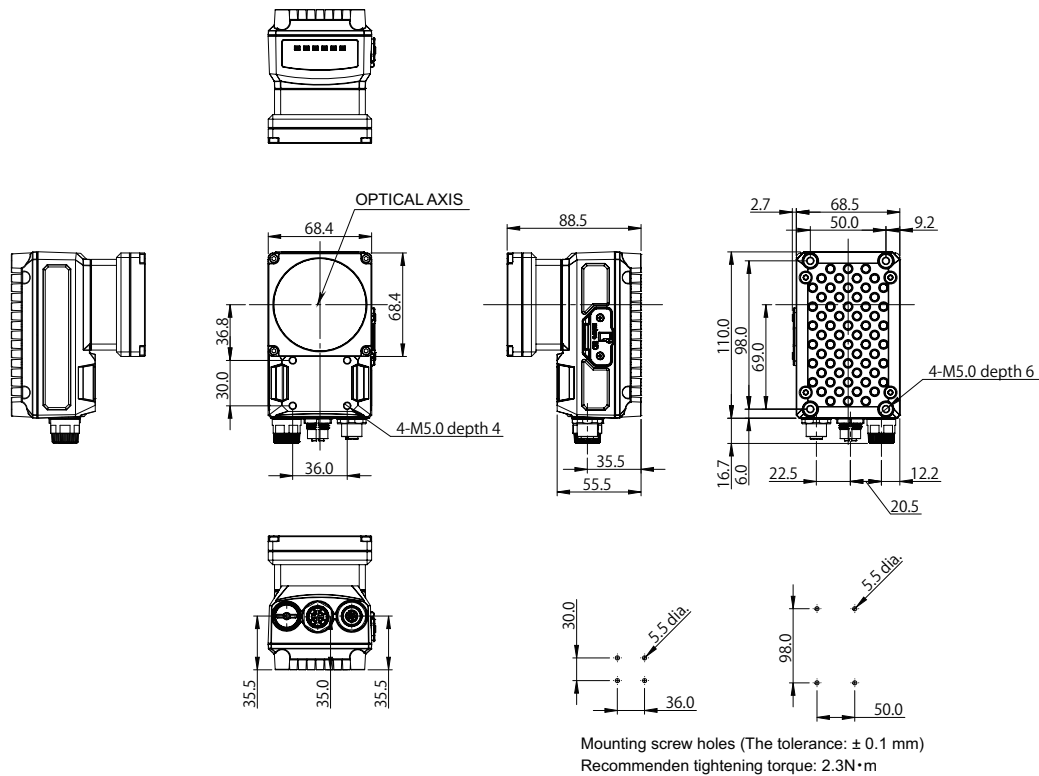

(Unit: mm)



Additional Information

We have the 2D CAD data or 3D CAD data.

You can download CAD data from www.fa.omron.co.jp.


3-8 Mounting Fixtures

3-8-1 Specifications

Model		FHV-XMT-7	FHV-XMT-7-TCC
Purpose		Specifical fixture for FHV7 series	
		For Smart Camera body and lighting controller mounting	For lighting controller mounting
Usage environment	Ambient temperature range	Operating: 0 to +40℃, Storage: -25 to +65℃ (with no icing or condensation)	
	Ambient humidity range	Operating & Storage: 35 to 85%RH (With no condensation)	
	Vibration tolerance	No corrosive gases	
	Shock resistance	Oscillation frequency: 10 to 150Hz, Half amplitude: 0.35 mm, Vibration direction: X/Y/Z, Sweep time: 8 minute/count, Sweep count: 10	
	Vibration tolerance	Impact force: 150 m/s ² , Test direction: 6 directions, three time each (up/down, front/behind, left/right)	
Material		Aluminum (A6061)	POM (Black)
Weight		Approx. 220 g	Approx. 50 g

3-8-2 Dimensions

- FHV-XMT-7

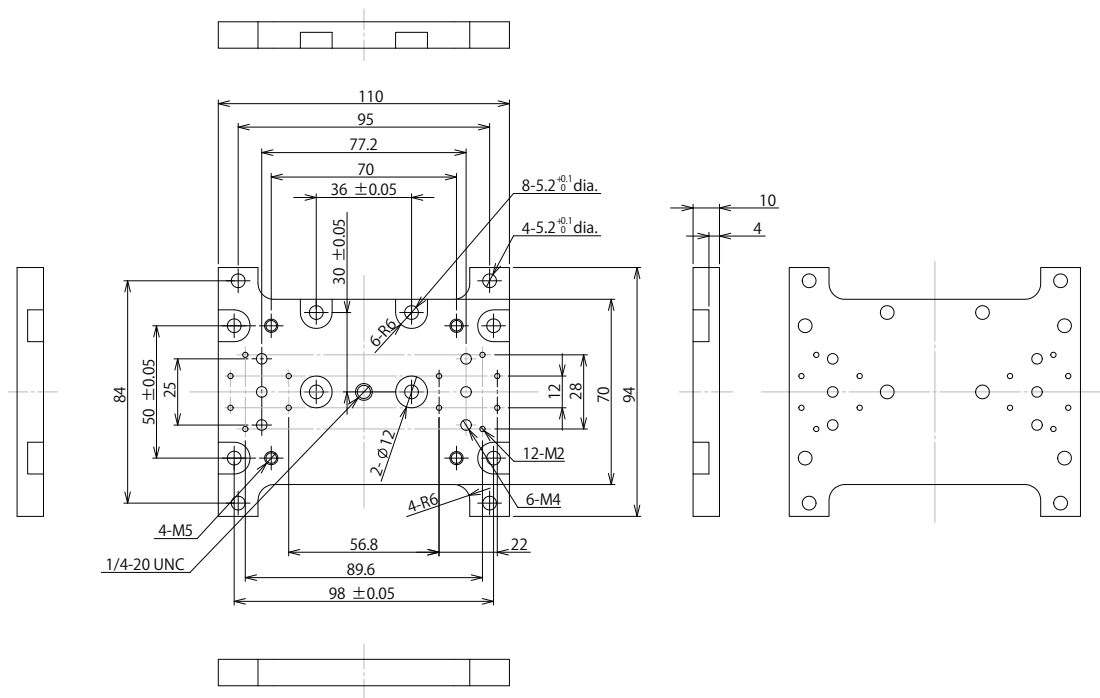

(Unit: mm)

3-9 Software

There are two special software:

- FH_FHV Remote Operation tool
- Simulation software

3-9-1 Remote Operation Tool

This Remote Operation tool supports Smart Camera of all FHV series. It is used to set conditions for inspection and measurement, and output image processing results according to the set conditions. You can download the simulation software with free by registering as our member after purchasing. For details, please check the membership registration card packed in the package.

3-9-2 Simulation Software

The simulation software allows you to experience the operability of FHV series on PC. You can download the simulation software with free by registering as our member after purchasing. For details, please check the membership registration card packed in the package.

4

Handling and Installation Environment

4-1	Warning	4 - 2
-----	---------------	-------

4-1 Warning

WARNING

This product must be used according to this manual and the instruction sheet.
Failure to observe this may result in the impairment of functions and performance of the product.



Please do not use this product to directly or indirectly use to detect the human body for the purpose of ensuring the safety.



Precautions for Safe Use

Installation Environment

- Do not use the product in areas where flammable or explosive gases are present.
- Do not install the product close to high-voltage devices and power devices in order to secure the safety of operation and maintenance.
- Do not install the product to a place where vibrations and/or impacts are expected.
- Do not install the product near to a device causing noises. If the product is installed in a noisy environment and operational errors are caused, be sure to take shielding measures.



Precautions for Correct Use

Installation Location

In order to prevent the product from becoming inoperable or malfunction, and to prevent other adverse effects to the performance or equipment, please observe the following.

- A location where the ambient temperature does not exceed the rated range (operating: 0 to 40°C, storage: -25 to 65°C).
- A location where the temperature does not vary sharply (condensation occurs).
- A location where relative temperature does not exceed a range of 35-85%RH.
- A location not exposed to corrosive gases or combustible gases.
- A location not exposed to dust, salt, or metal powder.
- A location not exposed to direct vibration or impact.
- A location not exposed to strong disturbance light (laser light, arc welding light, or ultraviolet light).
- A location not near a heating appliance or exposed to direct sunlight.
- A location not exposed to mist of water, oil, or chemicals or misty atmosphere.
- A location not exposed to strong magnetic/electric fields.
- A location not near a high-voltage device or power device.
- A location where rubber quality is not deteriorated.

MicroSD Card Handling

- If removing the microSD card, confirm that data are not being read or written before removing it.
- Do not insert the microSD card inversely, obliquely, or as twisting it.
- While data are being read in or written to the microSD card, the SD ACCESS LED on the smart camera main unit is turned on for a while. Remove the card after checking that the LED is completely turned off.
- Except when inserting or removing the microSD card, put the cover of the microSD card inserting connector and screw it up before using the product.

Camera Installation

- In an environment exposed to high humidity and sharp temperature fluctuation, the inside of the lighting cover may become cloudy in rare cases. If it becomes cloudy, remove the lighting cover and wipe off the inside with a soft cloth.
- If installing smart camera main units side by side, secure a space of 30 mm or more wide between them.


5

Installation


5-1	Assembling Equipment	5 - 2
5-1-1	C Mount Lens / IP40 Configuration.....	5 - 2
5-1-2	C Mount Lens / IP67 Configuration.....	5 - 3
5-1-3	Lens Module / IP40 Configuration	5 - 5
5-1-4	Lens Module / IP67 Configuration	5 - 8
5-1-5	Lens Module / Internal Lighting / IP67 Configuration	5 - 10
5-2	Installing the Smart Camera.....	5 - 14
5-2-1	How to Connect	5 - 14
5-2-2	When Connecting the Smart Camera to a Lighting Controller.....	5 - 18

5-1 Assembling Equipment


5-1-1 C Mount Lens / IP40 Configuration

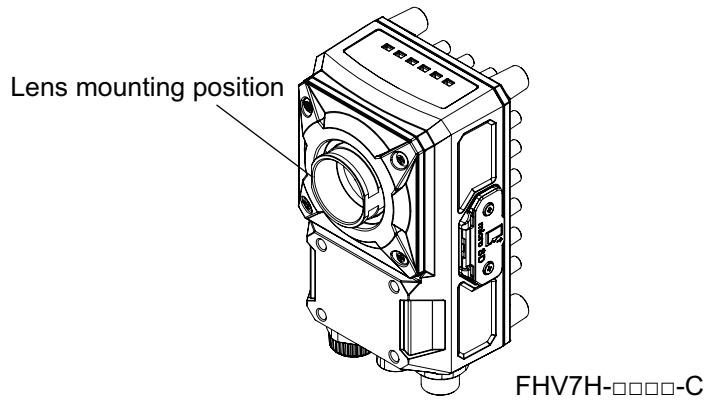

- 1 Attach the C Mount Lens to the Smart Camera body.

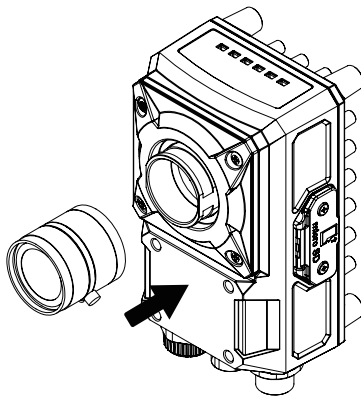


- 2 Securely tighten the C mount lens.

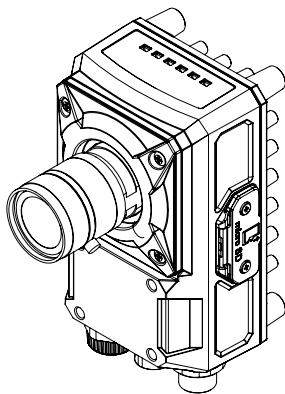

- 3 Adjust focus and aperture and fix the them.


5-1-2 C Mount Lens / IP67 Configuration

- 1** Remove the C mount cover from the Smart Camera.

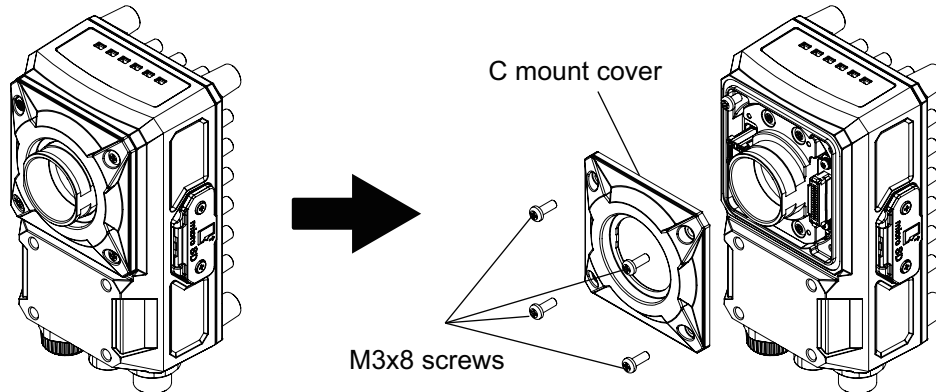


- 2** Attach the waterproof packing and then attach the hood base with the screws included with the packing.

Recommended tightening torque: 0.54 N · m

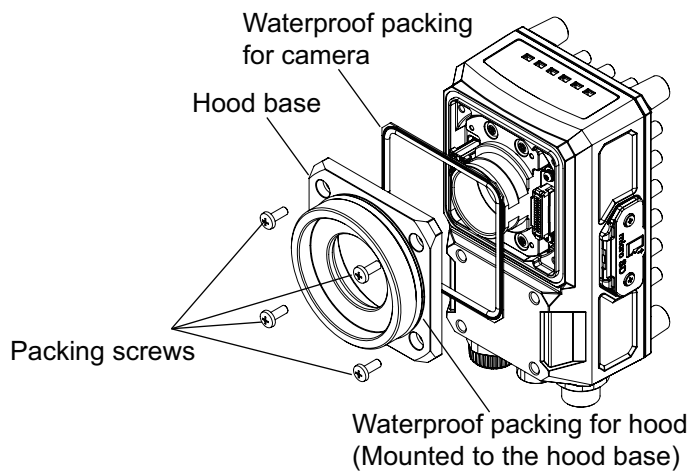

- 3** Attach the C mount Lens.

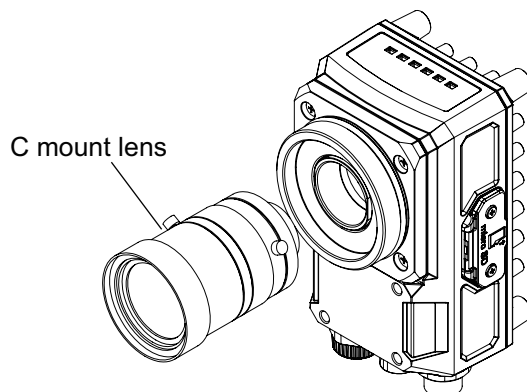


- 4** Adjust the focus and aperture and fix them.



Precautions for Correct Use

Once the correct focus is set, secure in place by tightening the lock screws.

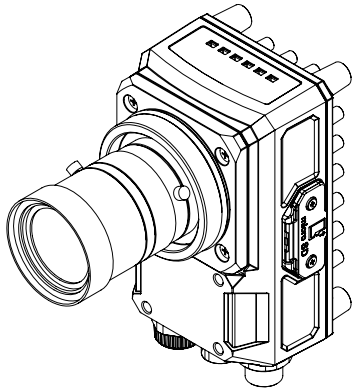


- 5** Attach the waterproof hood.



Precautions for Correct Use

When attaching the hood cover, tighten it securely until the bottom of the hood cover is touching the hood base surface.

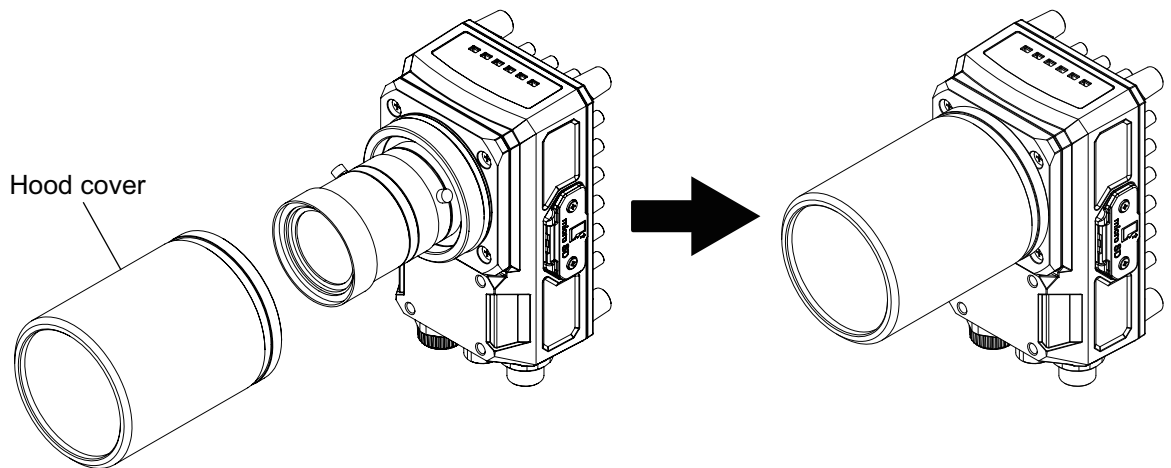

5-1-3 Lens Module / IP40 Configuration

Attaching the Lens Module

WARNING

This product must be used according to the instructions in the manual or instruction sheet. Failure to observe this may result in impairment of functions and performance of the product.



Caution

In rare events, there is a possibility of mild burns. Do not touch the camera body while it is in operation, or just after power is turned OFF, since it can be extremely hot.



When attaching the lens module or cover, make sure to tighten all attaching screws securely. Failure to do so may damage the unit, causing malfunction, or injury.



Precautions for Safe Use

- Do not use waterproof packing that has been scratched, or has any foreign matter adhering to it.
- The lens module is specifically designed for use with the FHV Series Smart Camera. Do not use it for any other purpose.
- Do not remove or replace the lens or any other part of the lens module.
- Be sure to turn OFF the power of the Smart Camera itself and any peripheral devices connected to it when attaching or removing the lens module. Failing to do so can cause equipment malfunction or damage.
- Tighten the mounting screws securely with the specified torque and in the order described in this manual.
- Do not apply excessive stress to lenses and connectors. It may damage the connectors.
- Do not touch the lens or cover with bare hands. It may result in malfunction or damage to the product.
- When using a lens module without a lighting module or waterproof cover, be sure that they are protected using the covers included with the product specifically for that purpose.
- Please ensure the compatibility of the lens module to the Smart Camera before attempting to attach it. If they are not compatible, it may result in malfunction.



Precautions for Correct Use

Maintenance

- Always turn OFF the power and ensure safety before performing maintenance.
- Clean the lens with a lens-cleaning cloth or air brush.
- When attaching the lens module, if any large dust particles, or other foreign matter gets on the imaging element, please blow it off with a blower brush (for camera lens). Please avoid breathing, or blowing on it.
- Do not use thinner, alcohol, benzene, acetone, kerosene, etc. for cleaning the lens module.

Optical Axis and Field of View


- The optical axis center may vary slightly from product to product. When installing, be sure to check the center position of the image on the monitor. Due to the nature of the material, the center of the optical axis of this product may change by several pixels due to changes in the ambient temperature.
- Please select the model after checking the field of view and camera installation distance on the optical chart. Also, the field of view may vary slightly from product to product. When installing, be sure to check the image on the monitor.

Other

- Continually switching the focus after the initial adjusting and setting of focus at installation time could adversely affect performance over time due to heat generation or internal part wear.
- Attaching the lens module to the Smart Camera does change its vibration resistance specification.
- When using the lens module in an environment requiring waterproofing, please use waterproof hood FHV-XHD-LEM.
- Excessive vibration or shock may cause focus to be shifted. Please take care to avoid it.
- After attaching the lens module, do not touch the lens module part. It may result in damage to the product.
- Attach the lens module to the Smart Camera using its locking screws. Do not attempt to remove the locking screws from the lens module as they are not intended to be completely removable.

Please attach the module following these procedures.

- 1** Remove the C mount cover from the Smart Camera.

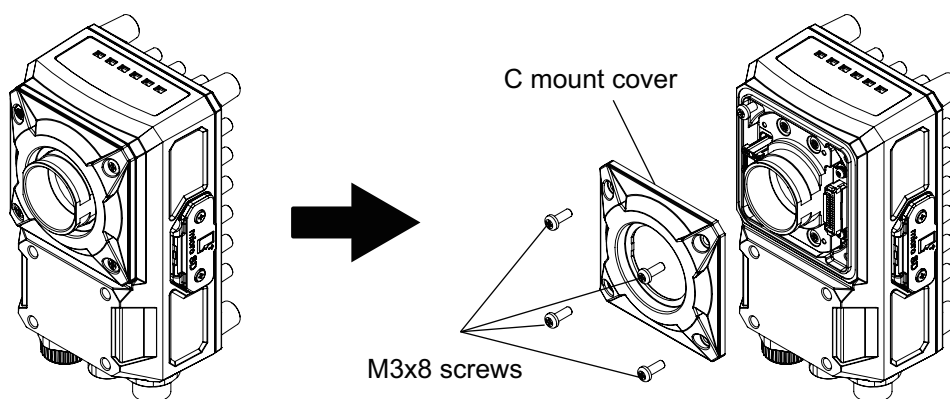


- 2** Attach the lens module to the Smart Camera body.



Precautions for Correct Use

- Ensure that there is no foreign matter on the surface of the image sensor before attaching it.
- Connect the lens module to the (black) lens module connector of the Smart Camera.
- Tighten the screws in order of 1 to 4 as shown in the figure below.
- Tightening torque: 0.15 N · m

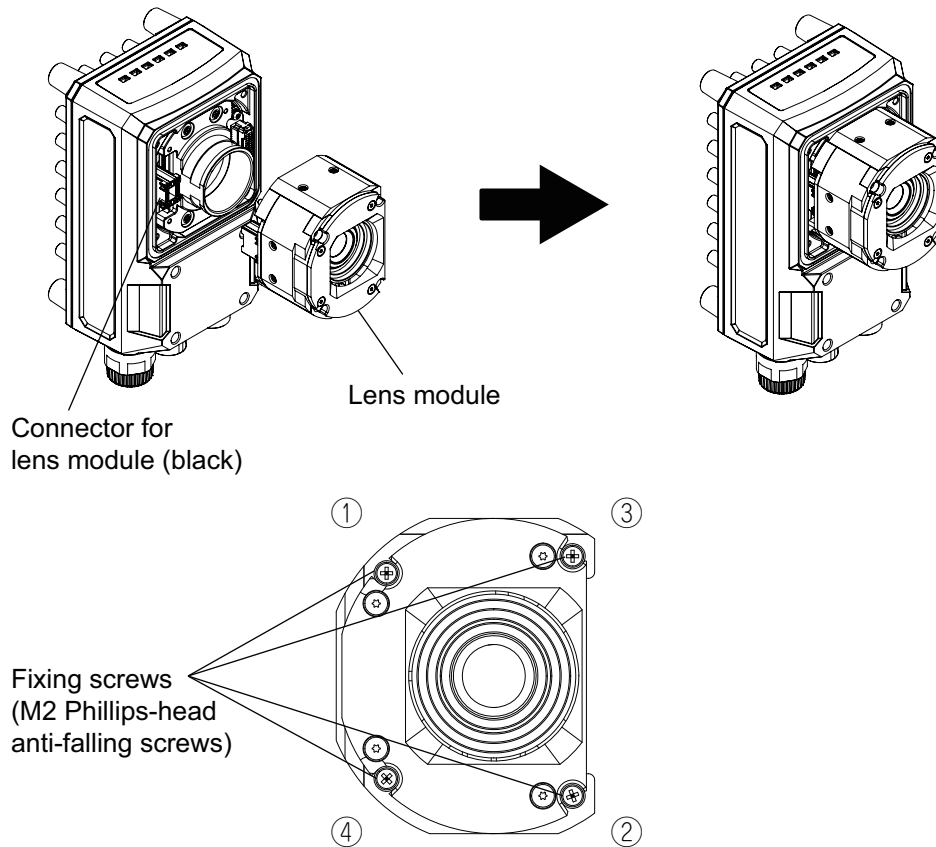


3 Attach the FHV-LEM□□-S cover.




Precautions for Correct Use

- Note that this is unnecessary when the lighting module, or waterproof hood is used.
- Align the orientation of the cover so that the (white) lighting module connector is covered and not visible.
- Tightening torque: 0.54 N · m

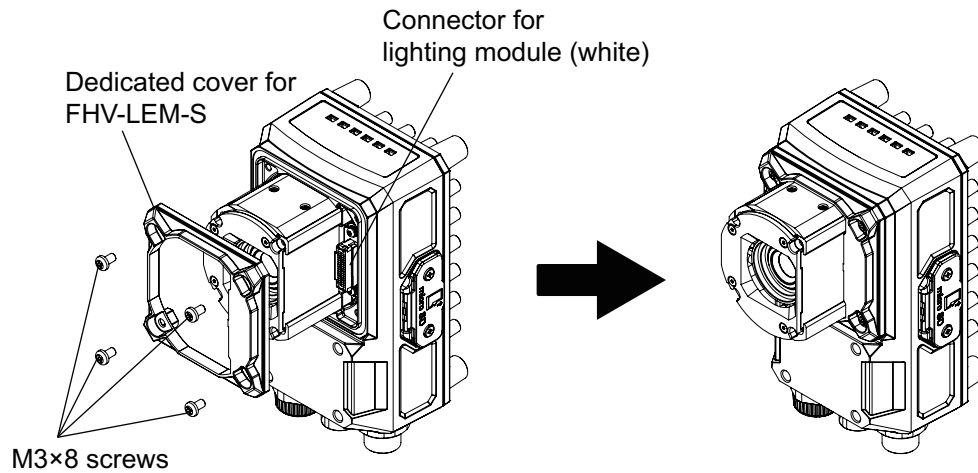

5-1-4 Lens Module / IP67 Configuration

- 1** Remove the FHV-LEM-S cover from the FHV7-□□□□-S□□ Smart Camera.

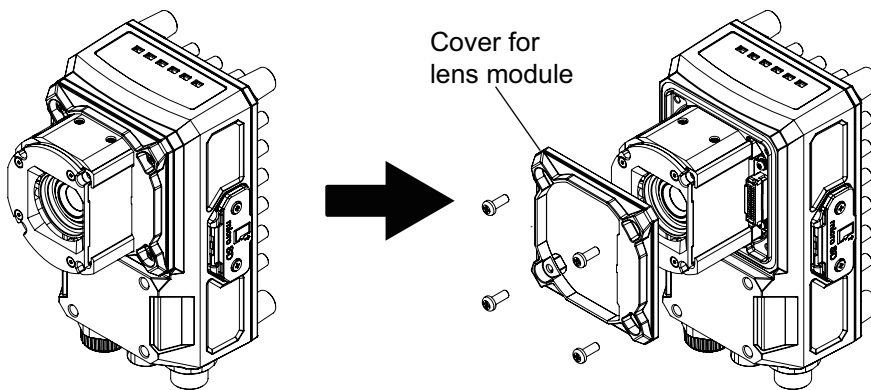


- 2** Attach the waterproof packing and the hood base.



Precautions for Correct Use

- Place the waterproof packing along the groove of the Smart Camera, being careful not to twist it.
- Pass the hexagon wrench included with the waterproof hood through the holes and tighten the screws in order of 1 to 4 as shown in the figure below.
- Recommended tightening torque (M3 Hexagon socket screw): 0.54 N · m

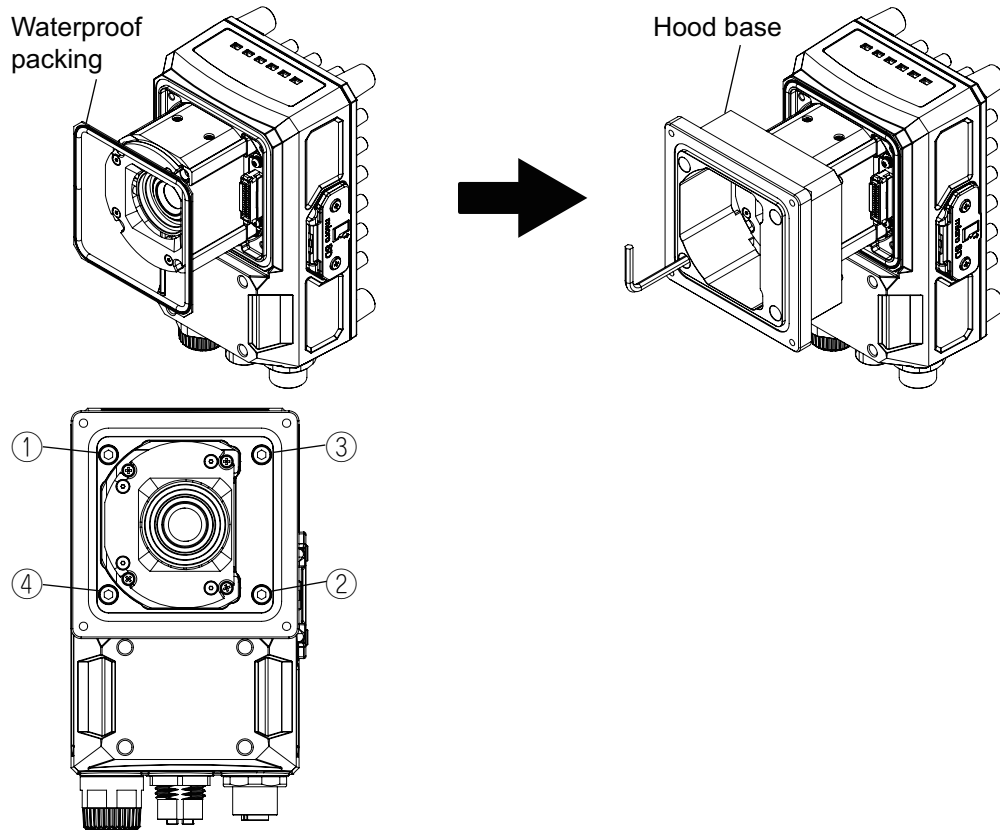


- 3** Attach the waterproof packing and hood cover.
Using the same hexagon wrench, tighten the screws in the order shown below.
Tightening torque (M2.5 Hexagon screw): 0.3 N · m



Precautions for Correct Use

- Place the waterproof packing along the groove of the Smart Camera, being careful not to twist it.
- Pass the hexagon wrench included with the waterproof hood through the holes and tighten the screws in order of 1 to 4 as shown in the figure below.
- Recommended tightening torque (M3 Hexagon socket screw): 0.54 N · m

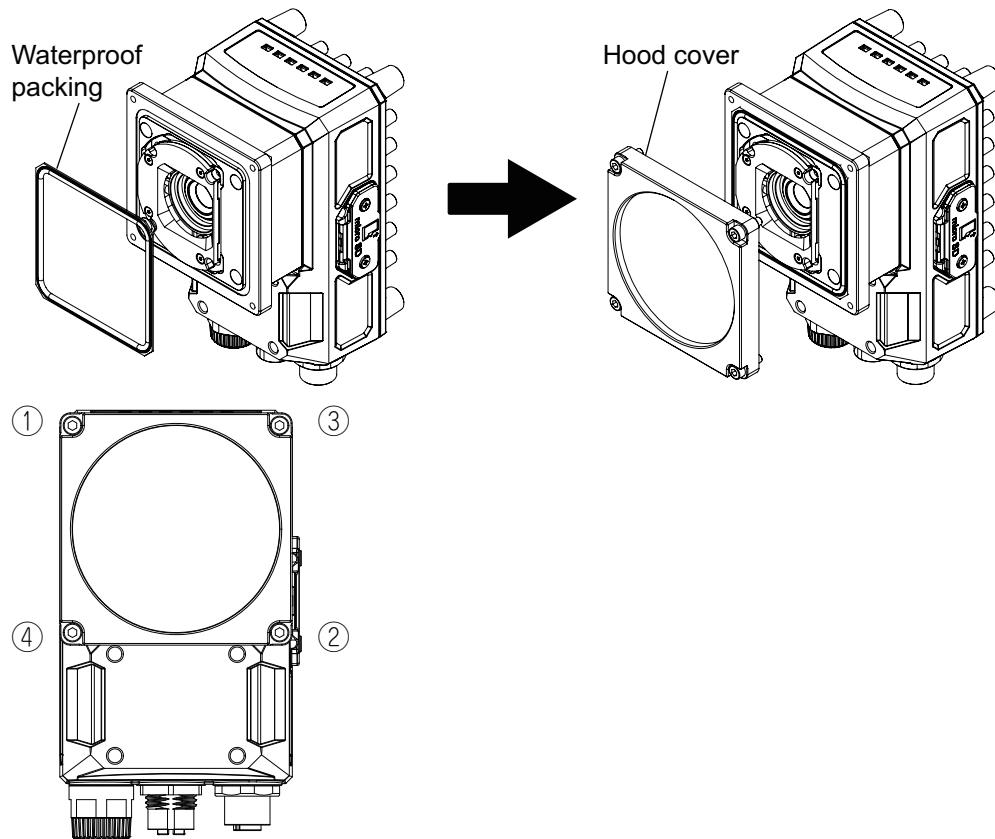

5-1-5 Lens Module / Internal Lighting / IP67 Configuration

Attaching the Lighting Module

Please attach it following these procedures.

WARNING

This product must be used according to this manual or instruction sheet. Failure to do so may result in impairment of functions and performance of the product.



Continually look at the LED light may in rare cases cause visual impairment. Do not stare directly into the light emitted from the lighting module. Likewise, if an object with a reflective surface is used, take care not to allow the reflected light to enter your eyes.



Caution

In rare events, there is a possibility of mild burns. Do not touch the camera body while it is in operation, or just after power is turned OFF, since it can be extremely hot.



When attaching the lighting module or cover, make sure to tighten all attaching screws securely. Failure to do so may damage the unit, causing malfunction, or injury.





Precautions for Safe Use

Installation

- Be sure to turn OFF the power of the smart camera itself and any peripheral devices connected to it when attaching or removing the lighting module. Failing to do so can cause equipment malfunction or damage.
- To ensure waterproofing, follow the correct mounting method and use it only after it has been attached in the correct order.
- Tighten the mounting screws securely with the specified torque and in the order described in this manual.
- If there are any locking mechanisms in place, make sure to check that they are securely in a locked position before using.
- Take care that waterproof packing and harnesses do not catch on, or get pinched between any parts of the case when assembling.
- Do not use waterproof packing or light shielding sheet that has been scratched, or has any foreign matter adhering to it.

Other

- The module is specifically designed for use with the (FHV7 Series) Smart Camera. Do not attempt to use it for any other purpose.
- Do not touch the face plate of the lighting with bare hands.
- Do not touch any exposed circuit board or electronic components with bare hands. It may result in damage to the product.
- Should you notice any abnormal odor, sound, smoke, or excessive heat emitting from the product, immediately stop use, turn OFF the power supply, and contact your OMRON representative.
- Do not attempt to dismantle, repair, modify, or deform the product in any way.
- When disposing of the product, treat it as industrial waste.
- Do not drop the product nor apply excessive vibration or shock to the product. Doing so may damage the product.
- The waterproof packing is made of a rubber material. Avoid storing it in a location where rubber may deteriorate easily.



Precautions for Correct Use

Maintenance

- Turn OFF the power and ensure the safety before maintenance.
- Lightly wipe off dirt with a soft cloth.
- Do not use thinner, alcohol, benzene, acetone, kerosene, etc. for cleaning this product.

Warm up Time

- When performing a precise inspection, please use after 60 minutes or more after turning on the power supply. Since the circuit is not stable immediately after turning on the power, the brightness may change gradually.

Camera placement

- Do not assemble the unit in a location subject to high temperatures or high humidity. Condensation on the unit may develop. If it becomes foggy due to condensation, remove the lighting cover and wipe off moisture with an absorbent, but soft cloth so as not to scratch it.

Other

- There are two types of polarization filters corresponding to the visible light range (FHV-XPL) and the visible light to infrared light range (FHV-XPL-IR). Please use the correct filter according to the type of light source.
- Attach this product to the Smart Camera using its locking screws. Do not attempt to remove the locking screws from the product as they are not intended to be completely removable.


Please attach the Lighting module following these procedures.

- 1** Attach the lens module
For more detailed information on the lens module, please refer to *5-1-3 Lens Module / IP40 Configuration* on page 5 - 5.
- 2** Attach the waterproof packing (small).



Precautions for Correct Use

Place the waterproof packing along the groove of the smart camera, being careful not to twist it.

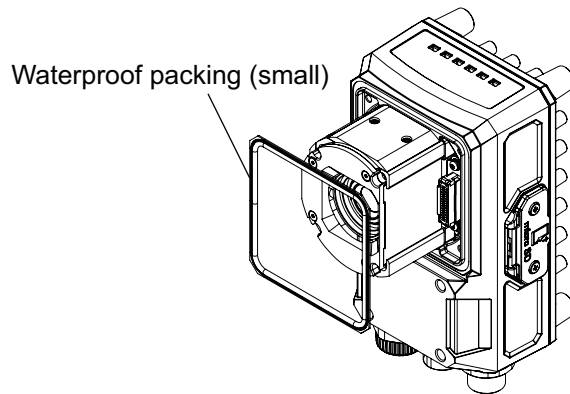


- 3** Connect the harness of the lighting module to the (white) lighting module connector of the Smart Camera.



Precautions for Correct Use

- Do not pull or stress the harness when attaching.
 - Hold the connector part of the harness and attach/detach the lighting module.
 - Take care that the harness does not catch on, or get pinched between any parts of the case when assembling.
-

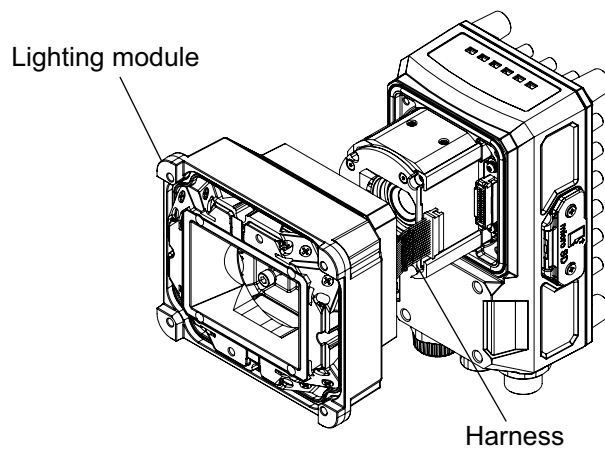


4 Attach the Lighting Module



Precautions for Correct Use

- Pass the included hexagon wrench through the holes and tighten the screws in order of 1 to 4 as shown in the figure below.
- Recommended tightening torque (M3 Hexagon socket screw Hole size 2.5 mm): 0.54 N · m

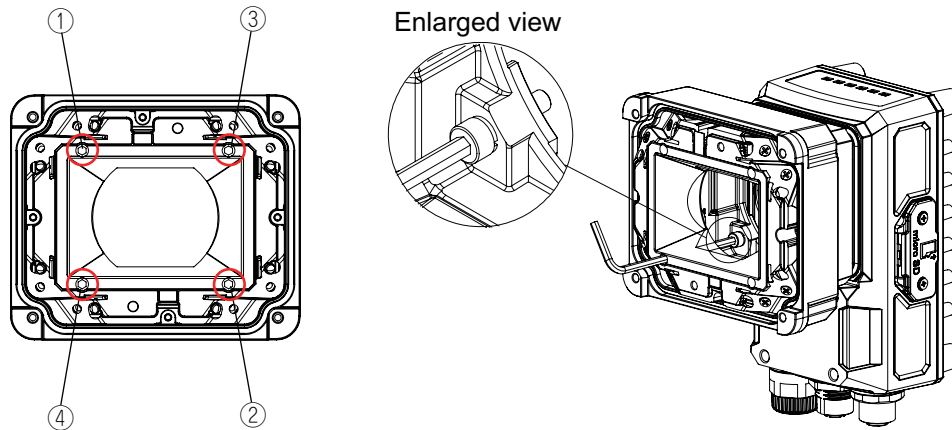


5 Attach waterproof packing (large), light shielding sheet, lighting cover in that order.



Precautions for Correct Use

- Place the waterproof packing and light shielding sheet along the groove, being careful not to twist them.
- Pass the included hexagon wrench through the holes and tighten the screws in order of 1 to 4 as shown in the figure below.
- Recommended tightening torque (M2.5 Hexagon socket screw Hole size 2.5 mm): 0.3 N · m

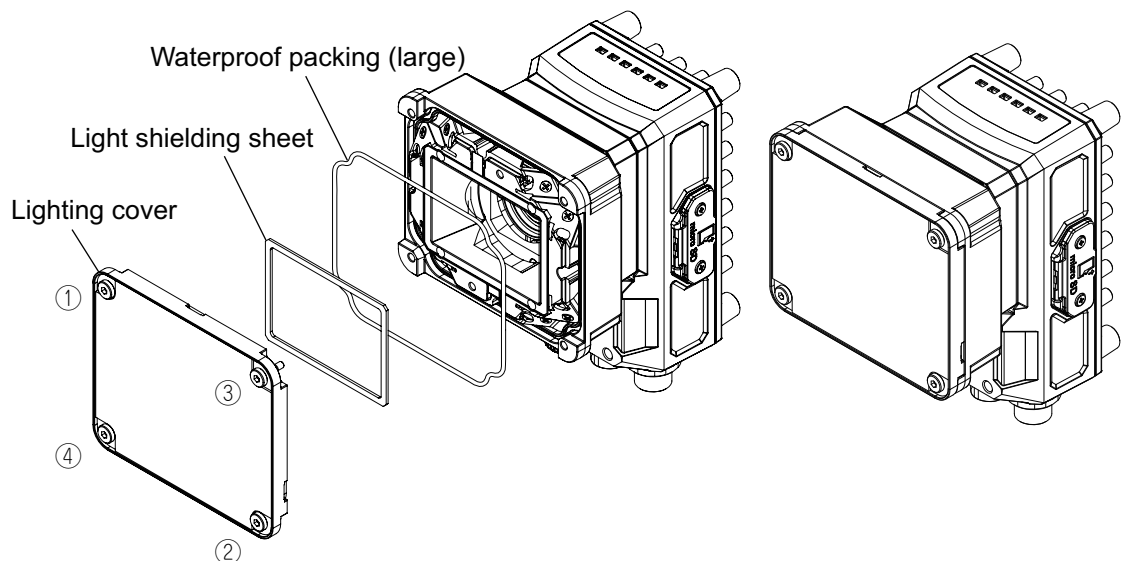

5-2 Installing the Smart Camera

5-2-1 How to Connect



Precautions for Safe Use

Installation


- Be sure to turn OFF the power of the Smart Camera itself and any peripheral devices connected to it when doing any of the following. Failing to do so can cause equipment malfunction and damage.
 - When connecting wires or cables
 - When connecting or disconnecting any connectors
 - When connecting or disconnecting lighting modules
 - When connecting or disconnecting lens modules
- Tighten the mounting screws securely with the specified torque and in the order described in this manual.
- Be sure to attach the connector cap when removing the cable. Failure to do so may result in malfunction or equipment damage due to foreign matter getting in to the connector.
- If there are any locking mechanisms in place, make sure to check that they are securely in a locked position before using.
- Do not apply torsion stress to the cable. It may damage the cable.
- Secure the minimum bending radius of the cable. Otherwise the cable may be damaged.



Precautions for Correct Use

For good ventilation, provide a clearance of 30 mm or more

- Do not let the ambient temperature exceed 40°C.
Provide a forced-air fan cooling or air conditioning if the ambient temperature is near 40°C or higher so that the ambient temperature never exceeds 40°C.

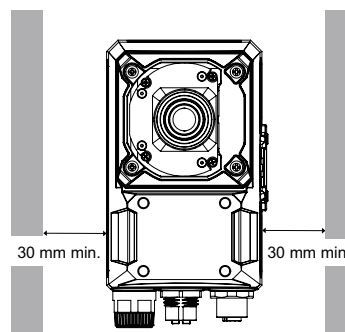

When Mounting the Smart Camera Directly (without Mounting Fixture)

- 1 Attach with M5 screws.




Precautions for Correct Use

Please refer to the Product Dimension Diagram for the position of the screw holes. Note that models with integrated lighting cannot be attached by its front surface.

Tightening torque: $2.3 \text{ N} \cdot \text{m}$


- When mounting from the back side:

Mounting screw hole depth: Effective depth 6 mm

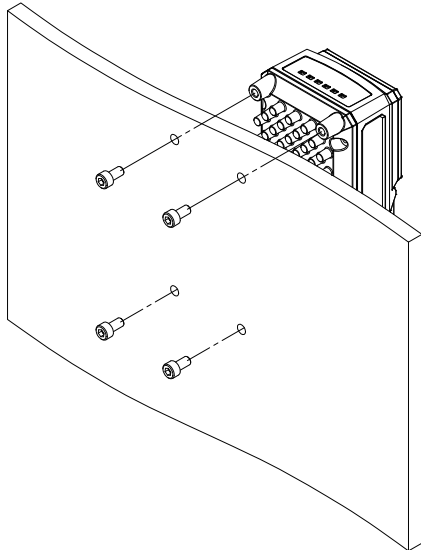

- When mounting from the front side:

Mounting screw hole depth: Effective depth 4 mm

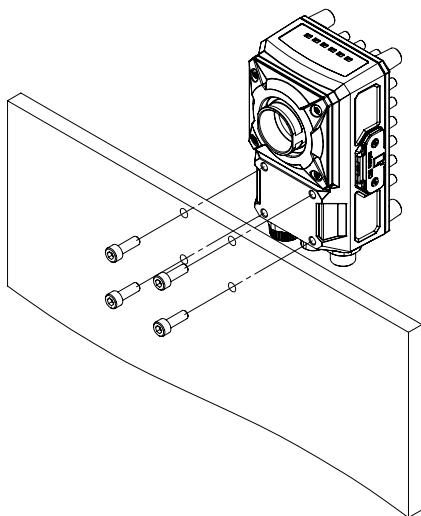




Precautions for Correct Use

Note that models with integrated lighting cannot be attached by its front surface.

Front mounting is not available
due to the lighting hood.

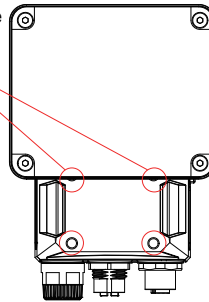

When Mounting the Smart Camera Using the Mounting Fixture

When attaching the mounting fixture to the Smart Camera, a special fixture (FHV-XMT-7) can be used that allows it to be attached by the screws to the front of the Smart Camera. Attach it to either the back or the front of the Smart Camera.



● When Installing Using the Mounting Fixture

- 1 Attach the mounting fixture (FHV-XMT-7) to the back of the camera.

Recommended mounting screw size: M5 x 10 mm


Tightening torque: 2.3 N · m

* M5 screws for mounting are not included with this product. Please provide or purchase separately.

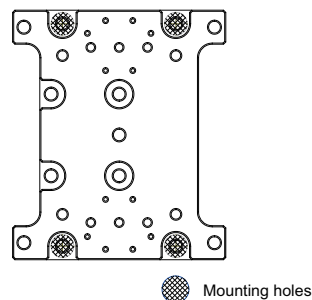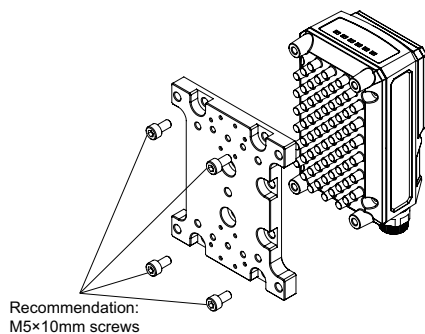



- 2 Attach the mounting fixture to the desired position.

* M5 screws for mounting are not included with this product. Please provide or purchase separately.

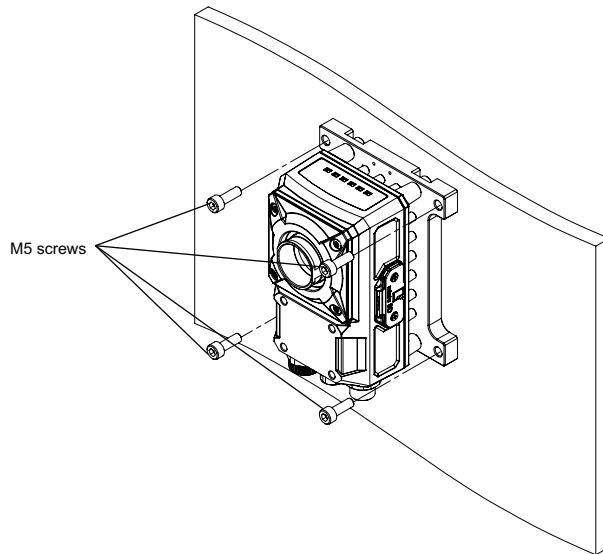


● When Installing Using the Mounting Fixture on the Front

- 1** Attach the mounting fixture (FHV-XMT-7) to the front.
 Recommended mounting screw size: M5 x 8 mm
 Tightening torque: 2.3 N · m
 * M5 screws for mounting are not included with this product. Please provide or purchase separately.

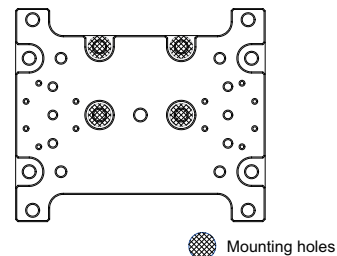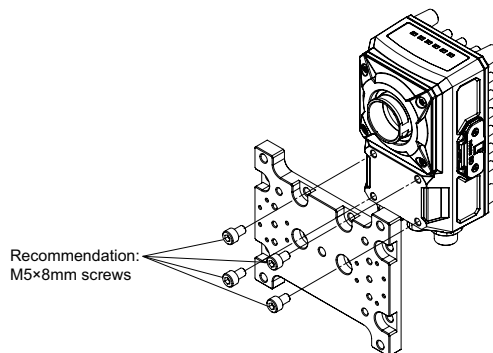


- 2** Attach the mounting fixture to the desired position for mounting.
 * M5 screws for mounting are not included with this product. Please provide or purchase separately.

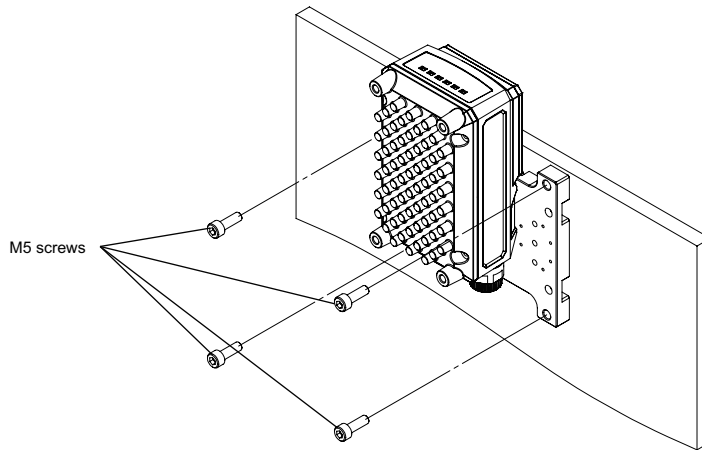

Additional Information


There are screw holes in FHV-XMT-7 for installing a lighting controller. FHV-XMT-7 can be used as a mounting fixture for a lighting controller.

- Screw holes to be used when mounting a lighting controller of the common type (1ch to 4ch).

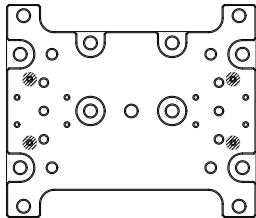

 Mounting holes

- Screw holes to be used when mounting a dedicated lighting controller (1ch).

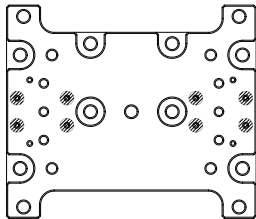

 Mounting holes


5-2-2 When Connecting the Smart Camera to a Lighting Controller

For connecting the Smart Camera to a Lighting Controller, use the mounting fixture (FHV-XMT-7-TCC). Do not use the camera mounting plate that is included when purchasing the lighting controller. For attaching, please use the screws that are included with the Lighting controller for that purpose.


Mounting and Attaching

- 1 Attach the lighting controller mounting fixture (FHV-XMT-7-TCC) to the Smart Camera.
Tightening torque: 2.3 N · m
Screws: M5 × 8 mm countersunk head screw

- When attaching the mounting fixture to the back side:

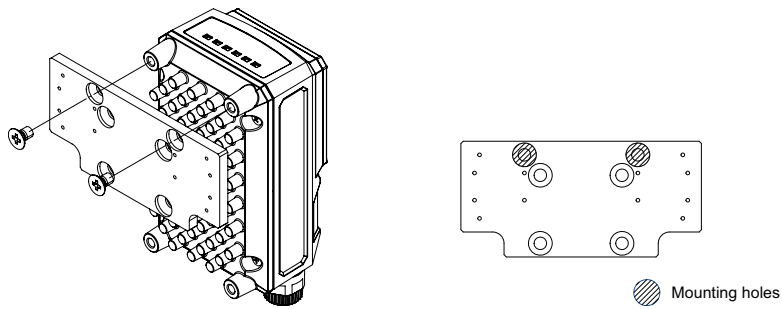

- When attaching the mounting fixture to the front side:

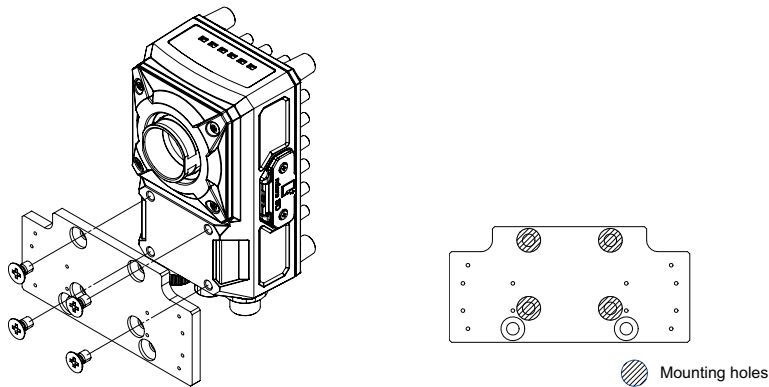


2 Attach the lighting controller.


Tightening torque: 0.15 N · m

Screws: M5 × 8 mm countersunk head screw


- When using 1ch to 4ch common type of FLV-TCC

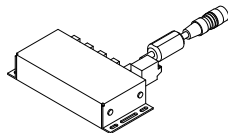


- When attaching the mounting fixture to the back side:

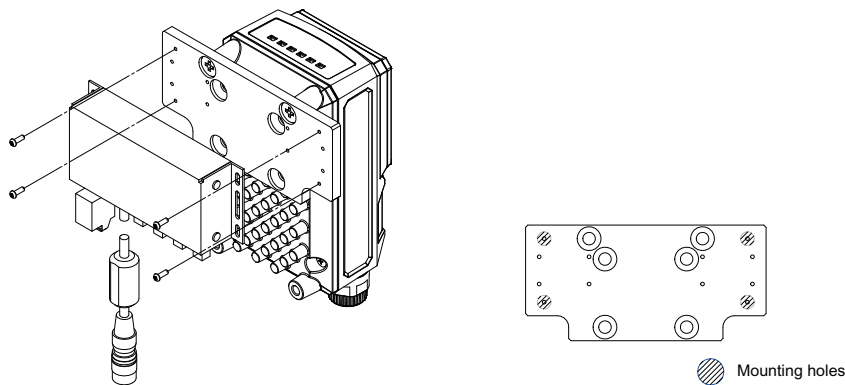


- When attaching the mounting fixture to the front side:

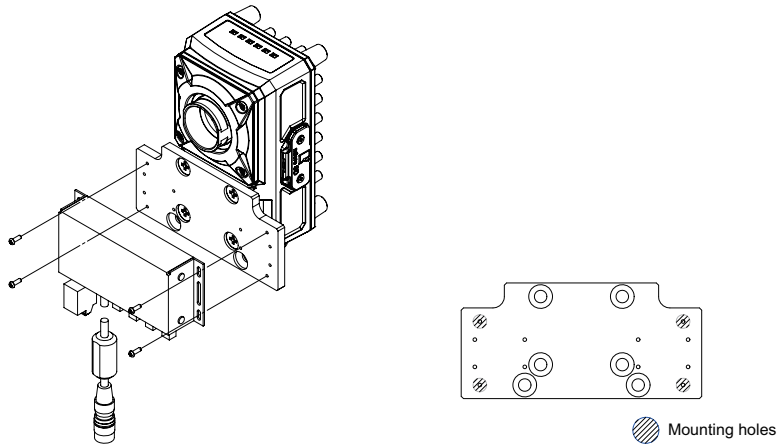


- When using 1ch type of FL-TCC Series

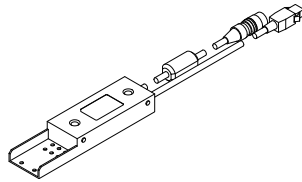

- When attaching the mounting fixture to the back side:

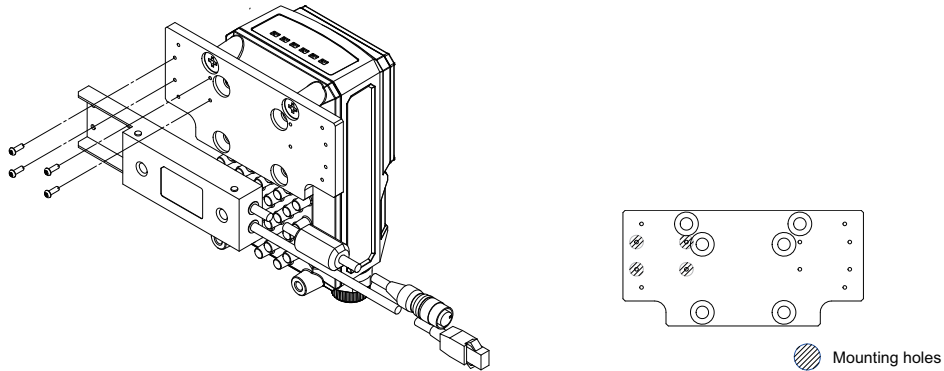

- When attaching the mounting fixture to the front side:

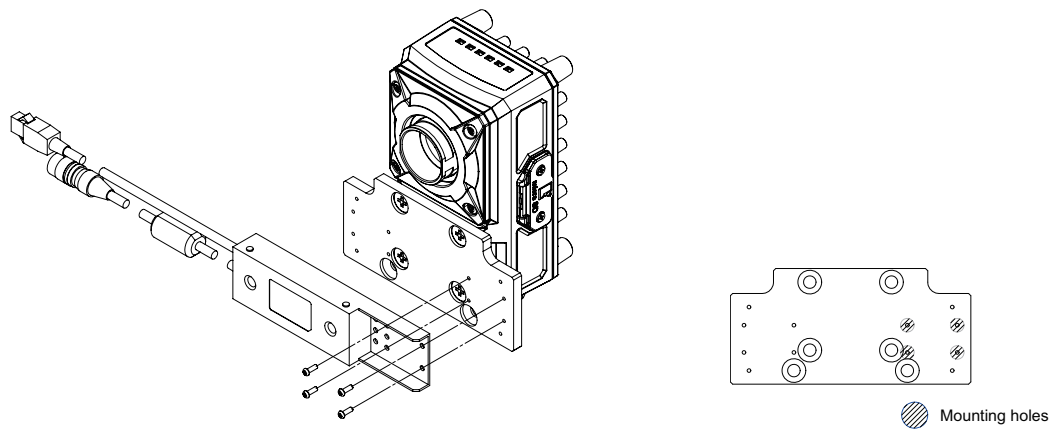

6

Power Supply and I/O Interface

6-1	When Turning Power ON and OFF.....	6 - 2
6-2	Fail-safe Measures	6 - 4
6-3	Precautions for I/O Interface	6 - 5
6-4	I/O Cable Interface (Power Supply, I/O, RS-232C)	6 - 6
6-4-1	Recommended Power Supply for FHV Series.....	6 - 6
6-4-2	Cables.....	6 - 7
6-4-3	Pin Layout.....	6 - 8
6-4-4	Interface Specifications.....	6 - 9
6-4-5	I/O Interface Input / Output Circuit Diagram	6 - 12
6-4-6	RS-232C Interface	6 - 14
6-5	Ethernet Interface.....	6 - 15
6-5-1	Cables.....	6 - 16
6-5-2	Pin Layout.....	6 - 17
6-6	Inserting and Removing the MicroSD Card	6 - 18
6-6-1	How to Insert / Remove the MicroSD Card.....	6 - 18

6-1 When Turning Power ON and OFF

WARNING

Do not connect an AC power source to this product. Doing so could cause electrical shock, or fire.



Do not touch the terminals while the power supply is ON. Doing so could cause electrical shock.



Caution

In rare events, there is a possibility of mild burns. Do not touch the camera body while it is in operation, or just after power is turned OFF, since it can be extremely hot.



Precautions for Safe Use

Check the following again before turning on the power supply.


- Make sure to use the product with the power supply voltage specified. If DC voltage exceeding the rating or AC voltage is applied, the circuit parts may be burnt or exploded.
- Make sure the connections to the power supply are not in the reverse direction.
- Use a DC power supply with safety measures against high-voltage spikes (safety extra low-voltage circuits on the secondary side).
- If UL certification is required, use a UL class II power supply.
- Do not use this product with other products on the same power supply. Use a dedicated power supply only for this product.
- Never connect the product to an AC power source, or to a power source that exceeds its voltage rating. Doing so will damage the product.
- The following are the recommended power supplies.
 - With lighting module attached
S8VK-G12024 (OMRON), or S8VS-12024 (OMRON)
 - With no lighting module attached
S8VK-G06024 (OMRON), or S8VS-06024 (OMRON)
- Make sure that wiring for this product is separated from high-voltage lines and other power lines. If the same wiring or the same duct is used, there may be electrical induction, causing malfunction or damage.
- Do not short-circuit the load with the open collector output.
- Ensure the load is below the rating limit.
- Attach crimp terminal of specified size to wiring. Do not directly connect an electric wire that is simply twisted to the terminal block.
- If using a 20 m I/O cable length, make sure that the power output is 24 VDC or more. If it is less than 24VDC, it will not operate.
- Please cut off unnecessary signal wires to ensure they do not come in contact with other signal wires.
- Before turning on the power supply, check whether there is incorrect connection such as power supply error, load short circuit, etc., and that there is the proper load current and FG connection. Malfunction, or damage may occur due to incorrect wiring etc.



Precautions for Safe Use

Grounding

- The Smart camera casing and grounding wire of the input output cable must be grounded according to Class D grounding (grounding resistance of 100Ω or less).
- Do not share the ground wire with other equipment or connect it to the beams of the building. It could be adversely affected.
- Keep the ground line as short as possible by setting the grounding point as close as possible.
- The FHV body enclosure, the I/O connector enclosure, the EtherNet connector enclosure, and the lighting connector enclosure are all at the same potential (FG) and are connected to 0V via a capacitor and a resistor in the internal circuit.
- When connecting to a PLC, or other external device, ensure that FG of the Smart Camera and the FG of the external device are grounded so as to have the same electric potential. Depending on the grounding method, a potential difference may occur between the Smart Camera and the external device, which may result in equipment failure, or malfunction.
- When the positive (+) terminal of 24 VDC power supply is grounded.
 - Inside of an external device, the shell of an Ethernet connector and SG should not be connected. [①]
 - Inside of an external device, 0V and FG should not be connected. [②]
 Since FG and 0V will make short-circuit like below diagram, do not ground the positive (+) terminal.

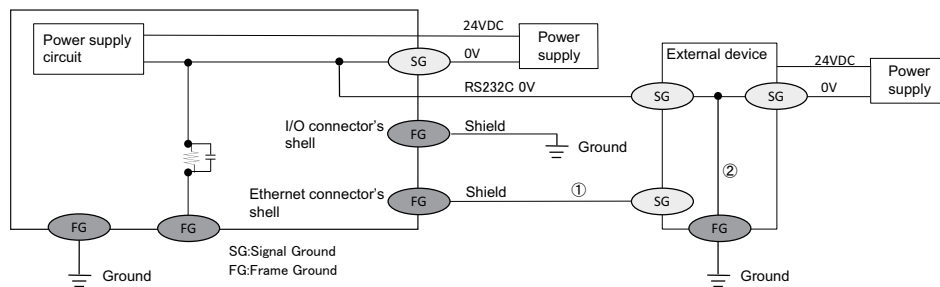

Precautions for Correct Use

Power Supply and Wiring

- When using a commercially available switching regulator, ground the frame ground terminal.
- If there is a surge on the power supply line, please use a surge absorber, depending on the usage environment it is connected in.
- After wiring is complete, but before turning on the power supply, check whether there is incorrect connection such as power supply error, load short circuit, etc., and that there is the proper load current. Malfunction, or damage may occur due to incorrect wiring etc.
- Wiring should be done in a state that there is no load on the cables and connectors.
- Do not turn off the power while saving data to the Smart Camera. Doing so causes the data in the memory to be corrupted, resulting in the product not operating properly upon the next start-up.
- Before turning power OFF, confirm that data save processing is completed according to the following guidelines.
 - When the data save process is performed by operation on the smart camera: The data save process is completed and the next operation is enabled
 - When the data save process is executed by a communication command: Processing of the corresponding command has been completed and BUSY is OFF
- When touching a terminal part or a signal wire in a connector, take anti-static measures using a wrist strap or another device to prevent damage from static electricity.
- Do not turn OFF the power while any message is displayed indicating that a task is in progress. Doing so causes the data in the memory to be corrupted, resulting in the product not operating properly upon the next start-up.

6-2 Fail-safe Measures

WARNING

Please take external safety measures to ensure safety for the system as a whole should any failure or error occur on the Smart Camera due to external factors. An abnormal equipment operation could result in a serious accident.



Please take fail-safe measures in preparation for any abnormal signal due to signal conductor disconnection and/or momentary power failure. An abnormal equipment operation could result in a serious accident.



Precautions for Safe Use

- If you intend to operate a stage and/or a robot using a measurement result from the Smart Camera (e.g. axis movement amount output based on calibration/alignment measurement), always take safety measures before operation so that measurement results are re-checked by the stage or robot to be within its range of movement.



Precautions for Correct Use

Fail-Safe Measures

- When controlling stages and robots using the measurement results from the smart camera (axis movement output based on calibration and alignment measurement), always take fail-safe measures within the stage and robot systems, such as checking whether the data obtained from the measurement results is within the range of movement of the stages and robots.
- Additionally, in setting up the Smart Camera, use the Calculation and Branch processing items in the Smart Camera software to configure a check flow (such as “*data should not be externally output if the data is in a range from-XXXXX to XXXXX*”) based on the range of movement of the stage or robot.

6-3 Precautions for I/O Interface



Precautions for Safe Use

- Use only the cables designed specifically for the product. Use of other cables may result in malfunction or damage to the product.
- Always turn OFF the power to the Smart Camera before connecting or disconnecting a cable. Connecting the cable while power is being supplied may result in damage to the camera or peripheral devices.
- Do not apply torsion stress to the cable. It may damage the cable.
- Secure the minimum bending radius of the cable. Otherwise, the cable may be damaged.



Precautions for Correct Use

- Check the following items on the communications cables that are used in the network.
 - Are there any breaks?
 - Are there any shorts?
 - Are there any connector problems?
- When you connect the cable to the communications connectors on devices, firmly insert the communications cable connector until it locks in place.
- Do not lay the communications cables together with high-voltage lines.
- Do not lay the communications cable near devices that generate noise.
- Do not lay the communications cables in locations subject to high temperatures or high humidity.
- Do not lay the communications cables in locations subject to excessive dirt and dust or to oil mist or other contaminants.

6-4 I/O Cable Interface (Power Supply, I/O, RS-232C)

6-4-1 Recommended Power Supply for FHV Series

Consumption current varies depending on the type of lighting module used. Please use the appropriate one from the table below.


Item	Lighting module, Light, Lighting controller	Power Supply
Recommended Power Supply S8VK S8VS	• With lighting module attached • When connecting the following lighting controllers without external power supply - FLV-TCC1 - FLV-TCC4 - FLV-TCC3HB • When connecting the following lights or lighting controller - FL-TCC1 - FLV-TCC1EP	S8VK-G12024 S8VS-12024
	For other than the above	S8VK-G06024 S8VS-06024

6-4-2 Cables

Please use the following I/O cables.


Name	Model	Description	Note
I/O Cable	FHV-VDB □□ / FHV-VDLB □□	FHV Series only Cable lengths: 2m, 3m, 5m, 10m, 20m Minimum bending radius: Fixed use 54 mm, Sliding use 72 mm	- One end of the cable is a connector and other end is non-terminated wires. - Connect with the cable, ensuring not to exceed the minimum bending radius.

FHV-VDB □□

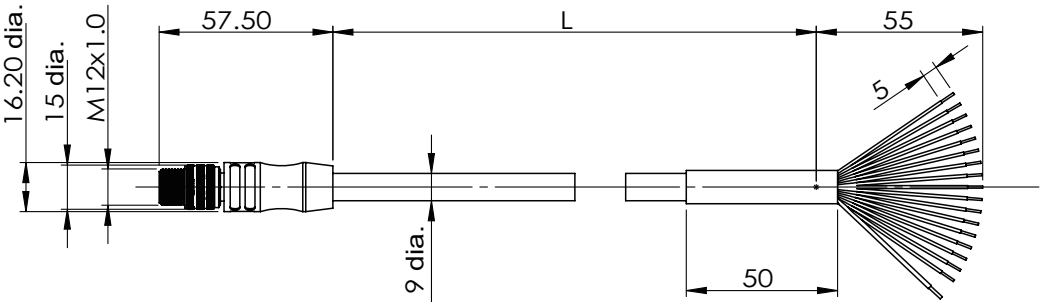

*1. Cable lengths (L) are 2 m/3 m/5 m/10 m/20 m.

FHV-VDLB □□

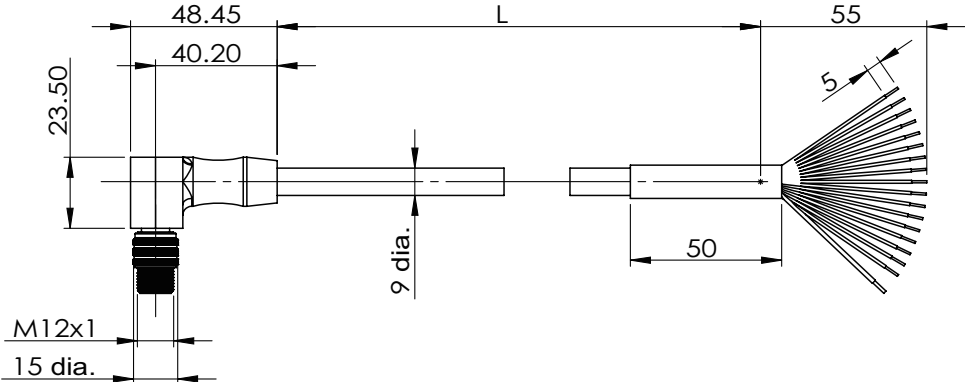

*1. Cable lengths (L) are 2 m/3 m/5 m/10 m/20 m.

6-4-3 Pin Layout

Wire Color	Mark	Part		Signal Name	Function
Brown (Heavy gauge)	None	Power supply	-	24 VDC	External power supply (24VDC)
Blue (Heavy gauge)	None		-	0V	
Black (Heavy gauge)	None	Ground	-	FG	Ground
White	Black	I/O	-	COMIN	Common for input signals
Pink	Black		-	COMOUT	Common for output signals
Orange	None		OUT	ERROR	ON when there is an error
White	None		OUT	OR	Overall Judgement Result
Yellow	None		OUT	BUSY	Processing in progress
Purple	None		OUT	READY	ON when Image input is allowed
Black	None		OUT	STGOUT/ SHTOUT	STGOUT: Strobe trigger signal SHTOUT: Shutter output signal
Red	None		IN	DI2	Serial Data ※ DI7 (Run) during operation.
Green	None		IN	DI1	Serial Data
Gray	None		IN	DI0	Serial Data
Pink	None		IN	STEP	Measurement trigger input
Green	Black	RS-232C	OUT	RS-232C OUT	RS-232C Data transmit
Purple	Black		IN	RS-232C IN	RS-232C Data receive
Light blue	Black		-	RS-232C 0V	RS-232C GND
Black (heavy gauge)	None	-	-	FG	Not used (do not touch other power lines, grounding lines, and signal lines.)

6-4-4 Interface Specifications

Specifications differ according to the signal type.

[Input]

Signals / DIO0, DIO1, DIO2

Connect to COMIN terminal when using these signals.

Item	Specification
Input voltage	24 VDC $\pm$ 10%
ON current*1	5 mA min.
ON voltage*1	8.8 V min.
OFF current*2	0.5 mA max.
OFF voltage*2	1.1 V max.
ON delay	5 ms max.
OFF delay	0.7 ms max.

*1. ON current / ON voltage

It is the current or voltage that will change the state from OFF to ON. The ON voltage is the potential difference between COM IN and each input terminal.

*2. OFF current / OFF voltage

It is the current or voltage that will change the state from ON to OFF. The ON voltage is the potential difference between COM IN and each input terminal.



Precautions for Correct Use

Chattering measures

Although the Smart Camera has equipped chattering measures function, erroneous inputs by chattering cannot be prevented when chattering occurred for 100 μ s or more. (Input signal changes less than 100 μ s are ignored. Input signals are determined when the same or higher level is held 100 μ s or longer.) We recommend using components with no contact such as SSR or PLC transistor output. When using components with contact like a relay, rebounds of a contact may generate input signals again.

[Input]

Signal: STEP

Connect to COM IN terminal when using these signals.

Item	Specification
Input voltage	24 VDC $\pm$ 10%
ON current*1	5 mA min.
ON voltage*1	8.8 V min.
OFF current*2	0.5 mA max.
OFF voltage*2	0.8 V max.
ON delay	0.1 ms max.
OFF delay	0.1 ms max.

*1. ON current / ON voltage

It is the current or voltage that will change the state from OFF to ON. The ON voltage is the potential difference between COM IN and each input terminal.

*2. OFF current / OFF voltage

It is the current or voltage that will change the state from ON to OFF. The ON voltage is the potential difference between COM IN and each input terminal.



Precautions for Correct Use

Chattering measures

Although the Smart Camera has equipped chattering measures function, erroneous inputs by chattering cannot be prevented when chattering occurred for 100 μ s or more. (Input signal changes less than 100 μ s are ignored. Input signals are determined when the same or higher level is held 100 μ s or longer.) We recommend using components with no contact such as SSR or PLC transistor output. When using components with contact like a relay, rebounds of a contact may generate input signals again.

[Output]

Signal: READY, BUSY, OR, and ERROR
Connect to the COMOUT terminal when using these signals.
Signal: STGOUT, SHTOUT
Connect to the COMIN and COMOUT terminals when using these signals.

Item	Specification
Output voltage	24 VDC±10%
Load current*1	45 mA max.
ON residual voltage	2 V max.
OFF leakage current	0.2 mA max.


*1. Please use a load current at or below the specified value for current. Exceeding the specified current may cause damage of the output circuit.

6-4-5 I/O Interface Input / Output Circuit Diagram


The Parallel Interface is a Common NPN/PNP type. Do the appropriate wiring according to the specifications of the external device used.

[Input]

- Signal
- DI0 to DI2
- Connect to COMIN when using these signals.
- a) Internal Specification for NPN connection

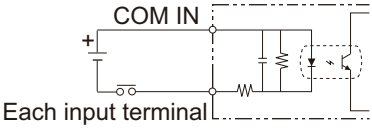Item	Specifications
Internal circuit diagram	

b) Internal Specification for PNP connection

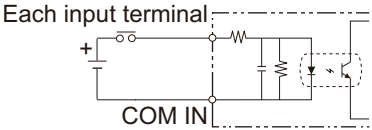Item	Specification
Internal circuit diagram	

[Input]

Signal

- STEP

Connect to COMIN when using this signal.

a) Internal Specification for NPN connection

Item	Specifications
Internal circuit diagram	

b) Internal Specification for PNP connection

Item	Specification
Internal circuit diagram	

[Output]

Signal

- READY/BUSY/OR/ERROR

Connect to COMOUT when using these signals.

a) Internal Specification for NPN connection

Item	Specification
Internal circuit diagram	

b) Internal Specification for PNP connection

Item	Specification
Internal circuit diagram	


[Output]

Signal


- STGOUT/SHTOUT

Connect to COMOUT or COMIN when using these signals.

a) Internal Specification for NPN connection

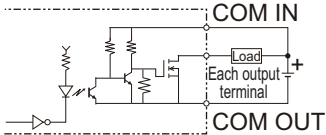Item	Specification
Internal circuit diagram	


b) Internal Specification for PNP connection

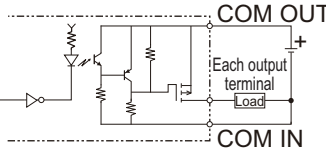Item	Specification
Internal circuit diagram	

6-4-6 RS-232C Interface

Pin numbers depend on the type of external devices or models to be connected. Refer to manuals for your programmable controller or PC.

Smart Camera		
Signal name	Color	Stripe
RS-232C IN	Violet	Black
RS-232C OUT	Green	Black
RS-232C 0V	Pale blue	Black

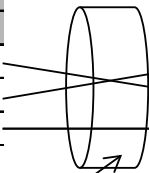

External device to connect	
Pin No.	Signal name
*	RD
*	SD
*	GND

RS/CS control is not allowed.

Use a shielded cable.

6-5 Ethernet Interface

The Ethernet port on the Smart Camera can be used for EtherNet/IP or Serial (Ethernet) communication.



Precautions for Safe Use

- Use only the cables designed specifically for the product. Use of other cables may result in malfunction or damage to the product.
- Always turn OFF the power to the Smart Camera before connecting or disconnecting a cable. Connecting the cable while power is being supplied may result in damage to the camera or peripheral devices.
- Do not apply torsion stress to the cable. It may damage the cable.
- Secure the minimum bending radius of the cable. Otherwise the cable may be damaged.



Precautions for Correct Use


- Check the following items on the communications cables that are used in the network.
 - Are there any breaks?
 - Are there any shorts?
 - Are there any connector problems?
- When you connect the cable to the communications connectors on devices, firmly insert the communications cable connector until it locks in place.
- Do not lay the communications cables together with high-voltage lines.
- Do not lay the communications cable near devices that generate noise.
- Do not lay the communications cables in locations subject to high temperatures or high humidity.
- Do not lay the communications cables in locations subject to excessive dirt and dust or to oil mist or other contaminants.

6-5-1 Cables

Please use the following Ethernet cables.


Name	Model	Description	Note
Ethernet Cable	FHV-VNB□□ / FHV-VNLB□□	For FHV Series only Cable lengths: 2m, 3m, 5m, 10m, 20m Minimum bending radius: Fixed 35mm, Sliding 70mm	- One end of the cable is a connector and other end is non-terminated wires. - Connect with the cable, ensuring not to exceed the minimum bending radius.

FHV-VNB□□

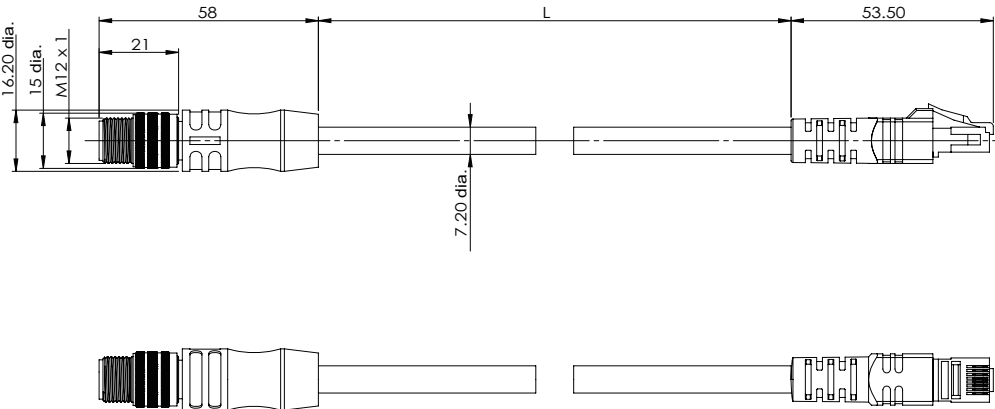

*1. Cable lengths (L) are 2m/3m/5m/10m/20m.


FHV-VNLB□□

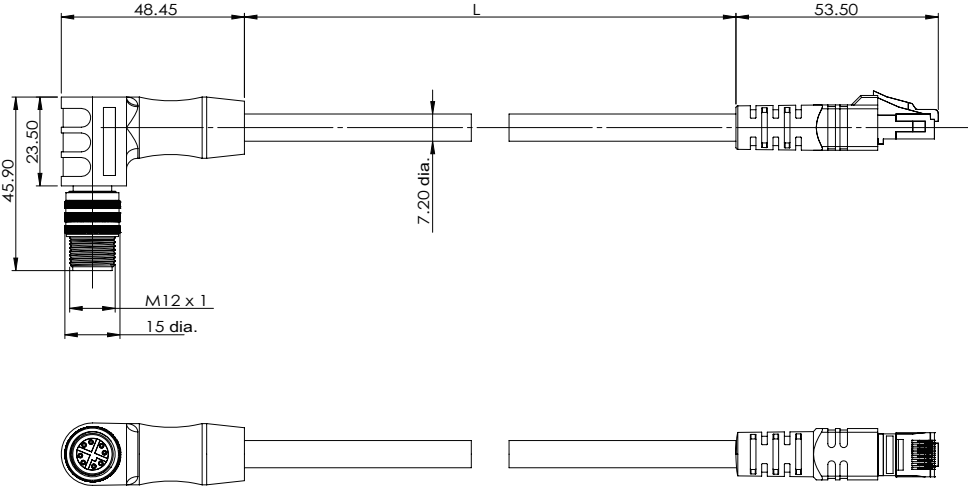


*1. Cable lengths (L) are 2m/3m/5m/10m/20m.

6-5-2 Pin Layout

10BASE-T / 100BASE-T

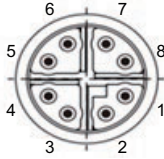RJ45	Pin No. (RJ45)	Signal name	Abbr.	Signal direc- tion	Pin No. (M12)	M12
	1	Transmit data +	TD+	Output	1	
	2	Transmit data -	TD-	Output	2	
	3	Received data +	RD+	Input	3	
	4	Not used	-	-	8	
	5	Not used	-	-	7	
	6	Received data -	RD-	Input	4	
	7	Not used	-	-	5	
	8	Not used	-	-	6	

1000Base-T

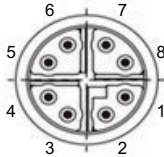RJ45	Pin No. (RJ45)	Signal name	Abbr.	Signal direc- tion	Pin No. (M12)	M12
	1	Communication data DA +	BI_DA +	Output	1	
	2	Communication data DA -	BI_DA -	Output	2	
	3	Communication data DB +	BI_DB +	Input/Output	3	
	4	Communication data DB -	BI_DB -	Input/Output -	8	
	5	Communication data DC +	BI_DC +	Input/Output	7	
	6	Communication data DC -	BI_DC -	Input/Output	4	
	7	Communication data DD +	BI_DD +	Input/Output	5	
	8	Communication data DD -	BI_DD -	Input/Output	6	

6-6 Inserting and Removing the microSD Card



Precautions for Correct Use

Handling the microSD card


- When touching a terminal part of the microSD card, antistatic measures such as a wrist strap or others is required.
- Do not insert a microSD card in the reverse direction, at an angle, or in a twisting manner.
- Do not insert or remove the microSD card during measurement, or while data is being loaded from, or written to the card. It could cause data to be corrupted, or adversely affect measurement speed.

When removing the microSD card,


- first confirm that no Data Read or Data Write processing is in progress before removing the card.
- When using a microSD card, the SD ACCESS LED on the smart camera flashes while data is being read or written. Make sure that the LED stops flashing before removing the card.
- If any message is displayed on the screen indicating that a task is in progress, do not turn OFF the power. Do not insert or remove USB memory during measurement, loading, and writing.

6-6-1 How to Insert / Remove the microSD Card


- 1 Loosen the screws on the microSD card slot cover and open it.

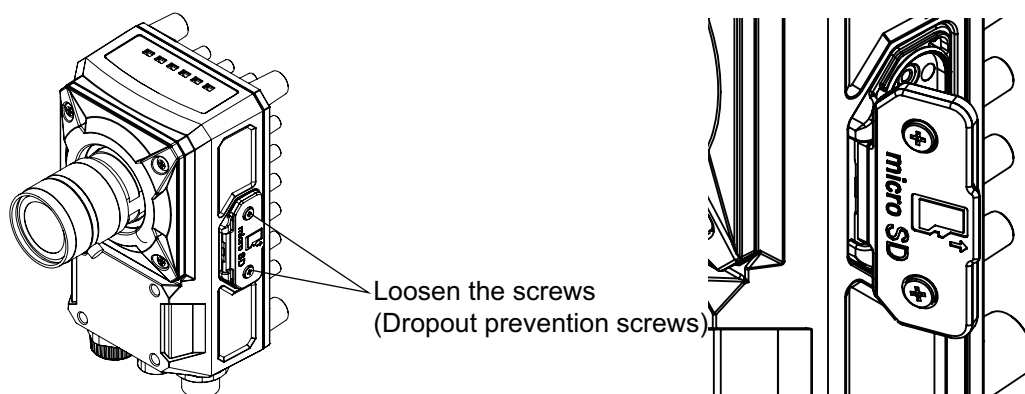

2 Insert/Remove the microSD card

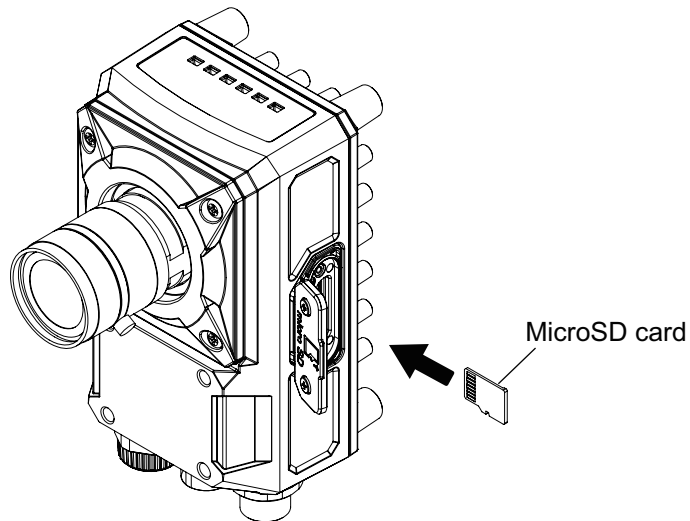

3 Close the cover and tighten the screws. Recommended tightening torque: 0.15 N · m

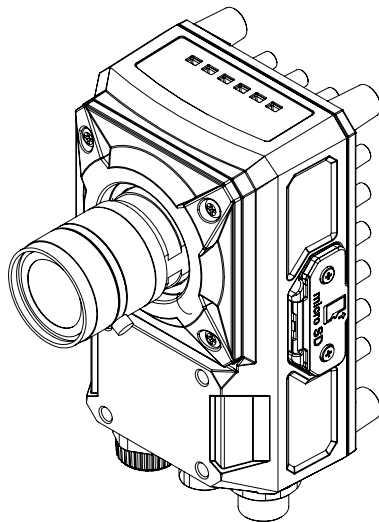

Software Setup

Here describes a simulation software, which gives you experiences how to use the Smart Camera functions on your PC. Moreover, this also describes the FH/FHV Launcher to launch the Remote Operation tool and the simulation software.

7-1	Setting up the Software	7 - 2
7-1-1	Recommended Operational Environment.....	7 - 2
7-1-2	Installation.....	7 - 2
7-1-3	Windows	7 - 3
7-1-4	Use Procedures	7 - 4
7-2	Operating the Smart Camera Remotely [Remote Operation Tool]	7 - 10
7-2-1	Summary	7 - 10
7-2-2	Environment Settings.....	7 - 11
7-2-3	Network Settings for the Remote Operation PC	7 - 11
7-2-4	Network Settings for the Smart Camera	7 - 12
7-2-5	Network Settings for the Smart Camera with Remote Operation Tool.....	7 - 14
7-2-6	Launching the Remote Operation.....	7 - 14
7-2-7	Terminating the Remote Operation.....	7 - 17
7-3	Using the Simulation Software [Simulation Software]	7 - 18
7-3-1	Introduction	7 - 18
7-3-2	Available Image Formats	7 - 18
7-3-3	Operational Precautions	7 - 18

7-1 Setting up the Software

To launch the Remote Operation tool or the simulation software, use the FH/FHV Launcher.

The FH/FHV Launcher provides functions below.

- Version selecting function of the simulation software
Specifies and runs simulation software with a version to use. Specifying a file to use enables the simulation software with the corresponding version to launch.
- Version selecting function of the Remote Operation tool
Specifies and runs the Remote Operation tool with a version to use. Specifying a file to use enables the Remote Operation tool with corresponding version to Launch.
- Switching function of display language
Switches the language displayed on the FH/FHV Launcher.

The Remote Operation tool and the simulation software are possible to download with free by doing the member registration after purchasing the Smart Camera. For details, refer to the membership registration sheet packed with the Smart Camera.

7-1-1 Recommended Operational Environment

The recommended operational conditions for FH/FHV Launcher are as follows.

Name	Description
CPU	Intel Pentium Processor (SSE2 or higher)
OS	• Windows 7 Professional (32/64-bit) or Enterprise (32/64-bit) or Ultimate (32/64-bit) • Windows 10 Pro (32/64-bit) or Enterprise (32/64-bit)
Memory	2GB (3GB or more recommended)
Hard disk space	2GB or more
Display	Resolution: 1280 x 1240 dots or more Color: True Color (32-bit)
Network	10BASE-T (100BASE-TX recommended)

Using the FH/FHV Launcher requires Microsoft .NET Framework 3.5 installed.

7-1-2 Installation

- 1** Decompress the FH/FHV Launcher to an appropriate folder and click setup.exe.
Install it according to the instructions displayed on the screen.
- 2** Then decompress the PC software (simulation software/Remote Operation tool) to an appropriate folder and click setup.exe.
Install it according to the instructions displayed on the screen.




Precautions for Correct Use

A license number registration is required when using them beyond 30 days. For details, refer to *Registering the License* on page 7 - 7.

7-1-3 Windows


Windows for the FH/FHV Launcher consists of three windows like the simulation window, Remote Operation tool window, and language setting window. Here describe the FH/FHV Launcher windows and name of each part.

Simulation Software Window and Remote Operation Tool Window

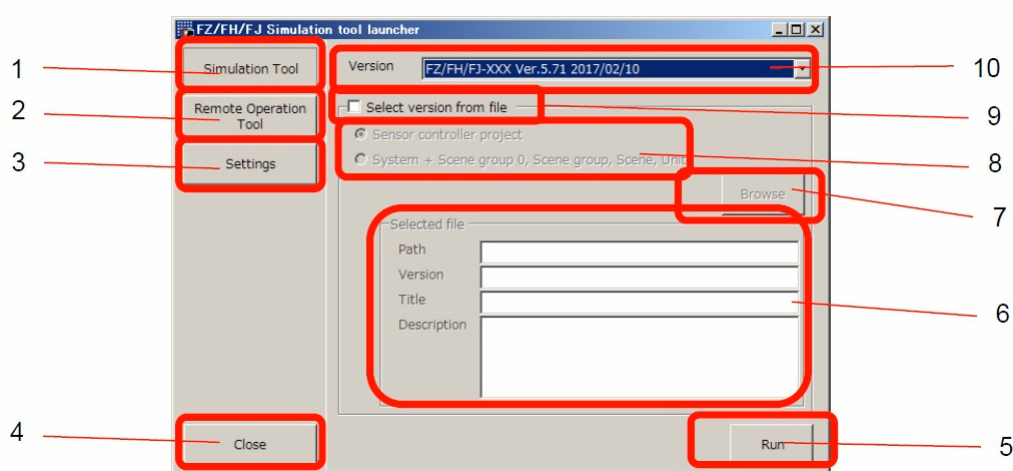

No.	Name	Description
1	Simulation Tool	Displays the simulator startup window.
2	Remote Operation Tool	Displays the remote operation tool window
3	Settings	Displays the language setting window.
4	Close	Exits FH/FHV Launcher.
5	Run	Launches the selected version of the simulation software or the Remote Operation tool.
6	File information display	Displays the selected file information. When selecting <i>system + Scene group 0</i> , Title and Description are not displayed.
7	Browse	Selects a file to check the version.
8	File selection	Selects a file type to check the version.
9	Select version from file	Check the version of software to run by specifying a file.
10	Combo box for version	Displays all versions installed as a candidate. When the Simulation Tool or the Remote Operation Tool is clicked, a simulator or remote operation tool with the selected and displayed version will launch. The setting is saved and will be default for the next startup.

Language Setting Window

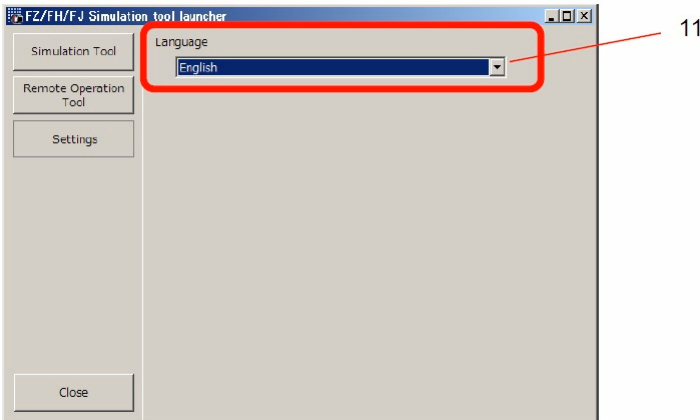

No.	Name	Description
11	Language selection box	Displays the current language setting. When changing the display language, the change is reflected immediately. The setting is saved and will be default for the next startup.

7-1-4 Use Procedures


Here describes how to launch the FH/FHV Launcher and the simulation software, and how to change the language settings.

Launching the FH/FHV Launcher


The following describes the launching procedure for the FH/FHV Launcher.

- 1 From the **Start** menu on your PC, select **All Programs - OMRON - FH_FHV Series - FH_FHV Launcher**.

The FH/FHV Launcher window appears.

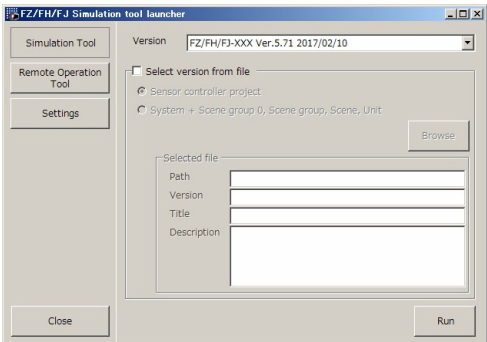

Launching the Simulation Software

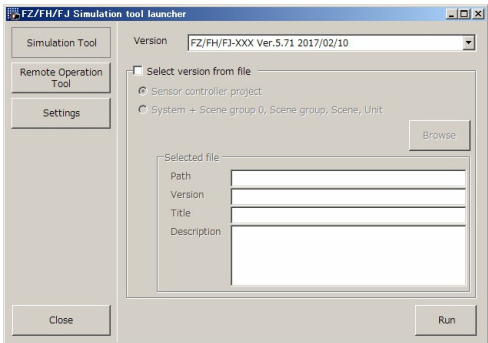

- 1 Click **Simulation Tool** .
- 2 Specify the version if it has already been known.
All software versions installed in the PC will be displayed.
- 3 When data for Sensor controller project, System + Scene group 0, Scene group, Scene, and Unit exist, the version of the software to launch can be checked by specifying data.
 - Check the check box of *Select version from file*.
 - Specify a file.

Item	Setting value Factory default	Description
Select version from file	• Unchecked • Checked	Checks this when checking the version from file.
Configuration file	• Sensor controller project • System +Scene group 0, Scene group, Scene, Unit	Sensor controller project: Selects this when checking the version of simulation software with data generated by the environment copy function. System +Scene group 0, Scene group, Scene, Unit: Selects this when checking the version of simulation software by using data like System +Scene group 0, Scene group, Scene, and Unit.




Precautions for Correct Use

If no version of a simulator to match the configuration file exists, a message of *No version of a simulator to match the configuration file is installed.* will appear.

- 4 The matched version of a simulator with the configuration file will appear.
- 5 Click **Run**.

Launching the Remote Operation Tool

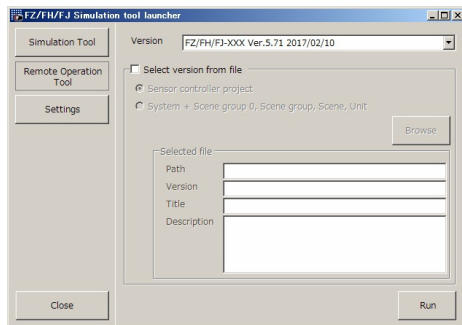

- 1 Click **Remote Operation Tool**.
- 2 Specify the version if it has already been known.
All software versions installed in the PC will be displayed.
- 3 When data for Sensor controller project, System + Scene group 0, Scene group, Scene, and Unit exist, the version of software to launch can be checked by specifying data.
 - Check the check box of *Select version from file*.
 - Specify a file.

Item	Setting value Factory default	Description
Select version from file	• Unchecked • Checked	Checks this when checking the version from file.
Configuration file	• Sensor controller project • System +Scene group 0, Scene group, Scene, Unit	Sensor controller project: Selects this when checking the version of simulation software with data generated by the environment copy function. System +Scene group 0, Scene group, Scene, Unit: Selects this when checking the version of simulation software by using data like System +Scene group 0, Scene group, Scene, and Unit.




Precautions for Correct Use

If no version of a simulator to match the configuration file exists, a message of *No version of a simulator to match the configuration file is installed.* will appear.

- 4 The matched version of a simulator with the configuration file will appear.
- 5 Click **Run**.

Changing Display Language

Change the current language setting of the tool.

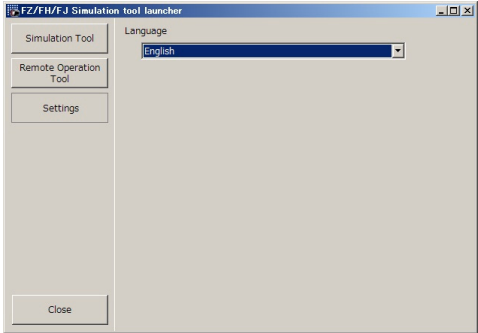


- 1 Click **Settings**.
- 2 Select language to display in the language setting dialog box.

Name	Description
Language seting	Displays the current language setting. When changing the display language, the change is reflected immediately. The setting is saved and will be default for the next startup.


Registering the License

This software displays a *License error!* message at startup when it passes 30 days after the installation and does not launch. To use this continuously, register the license. Input the license number using the **FH/FHV Licence Tool**. The FH_FHV License Tool should be executed with administrative rights.

- 1 Click **Start** on the task bar of Windows and click **All programs**.
- 2 Click **FH_FHV License Tool** on **FH_FHV Series** of **OMRON**. FH/FHV License Tool dialog appears.

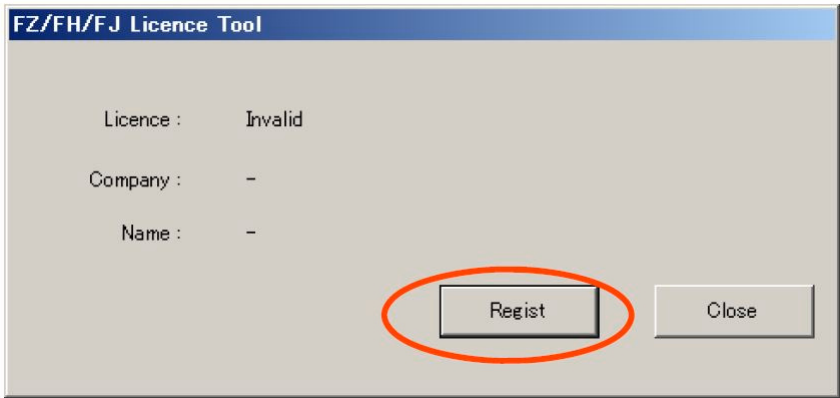

- 3 Click **Regist**.
The Setup window appears.

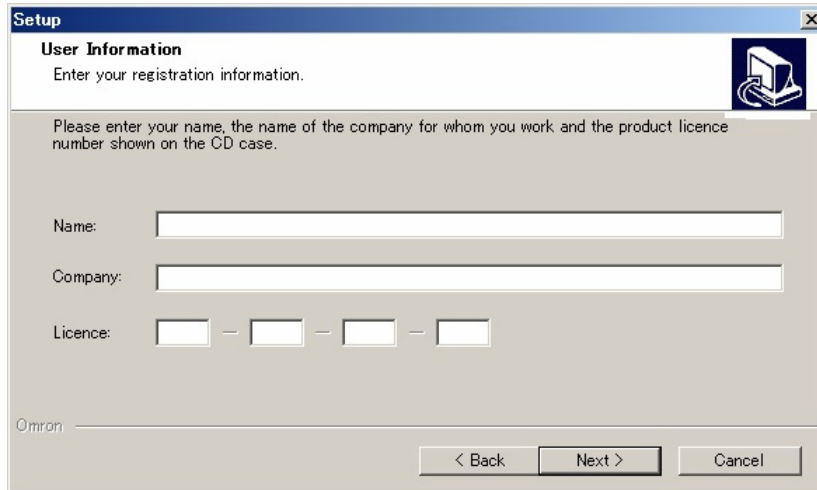

Setup

User Information
Enter your registration information.

Please enter your name, the name of the company for whom you work and the product licence number shown on the CD case.

Name:


Company:

Licence: - - -

Omron

< Back Next > Cancel

- 4** In the Setup window, input the Name, Company, and Serial Number) (License number) and click **Next**.
The Registration Confirmation window appears.

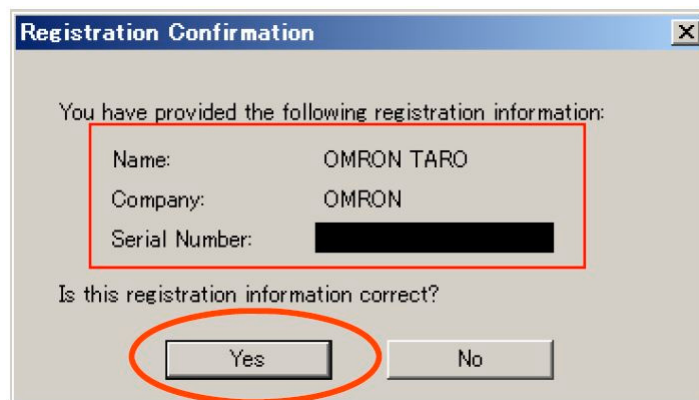

Registration Confirmation


You have provided the following registration information:

Name: OMRON TARO
Company: OMRON
Serial Number:

Is this registration information correct?

Yes No

- 5** Click **Yes**.
When *License: valid* is displayed, the input is completed.

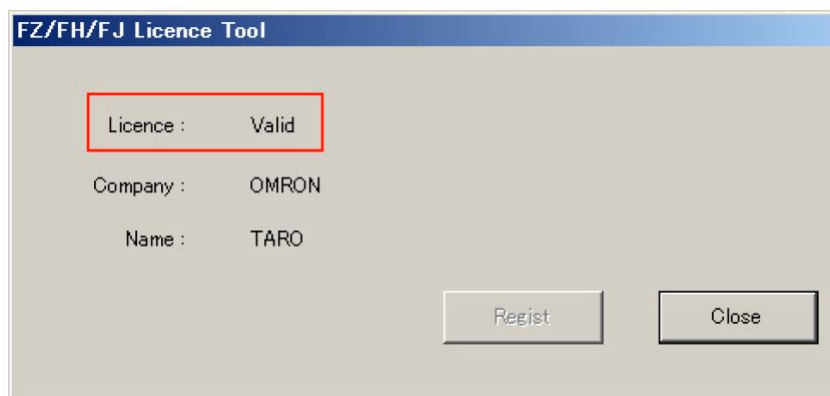

FZ/FH/FJ Licence Tool

Licence : Valid

Company : OMRON

Name : TARO

Regist Close

- 6** Click **Close** to close the window.

Troubleshooting

Trouble	Actions
A message of <i>The corresponding version of the simulator software is not installed.</i> appears.	- The message appears when no corresponding version of the simulator matching the configuration file is not installed. Get the simulation software with the version matching the configuration file. - The configuration file may be 5.70 or earlier. This software does not support those versions.
<i>License error!</i> appears at startup.	30 days and more have passed from the installation. Register the license number again when you continue using this software.
Buttons such as File selection are not displayed in the simulation software window.	The DPI setting of the PC may be set to <i>Expansion</i>. Set it to <i>100% (96DPI)</i> or <i>Standard</i>.

7-2 Operating the Smart Camera Remotely [Remote Operation Tool]

7-2-1 Summary

With a PC on your network, you can remotely operate processing items editing or actual measurements to be performed on the Smart Camera. This feature is only available with an Ethernet connection.



Precautions for Correct Use

Smart Camera windows cannot be operated or displayed simultaneously on multiple PCs on your network.




Precautions for Correct Use


The physical storage location of the setting data and data saving destination is on the Smart Camera.

For instance, the following usage is possible.

- (1) Using one specific PC handles GUI operations such as editing processing items and changing settings for inspection and measurement on multiple lines.

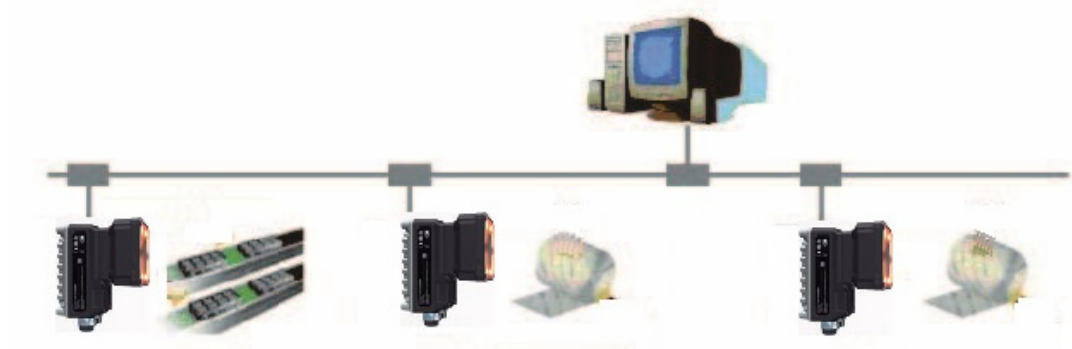

- (2) By changing a mode to the non-stop adjustment mode, adjustments are remotely available without stopping the line measurement.

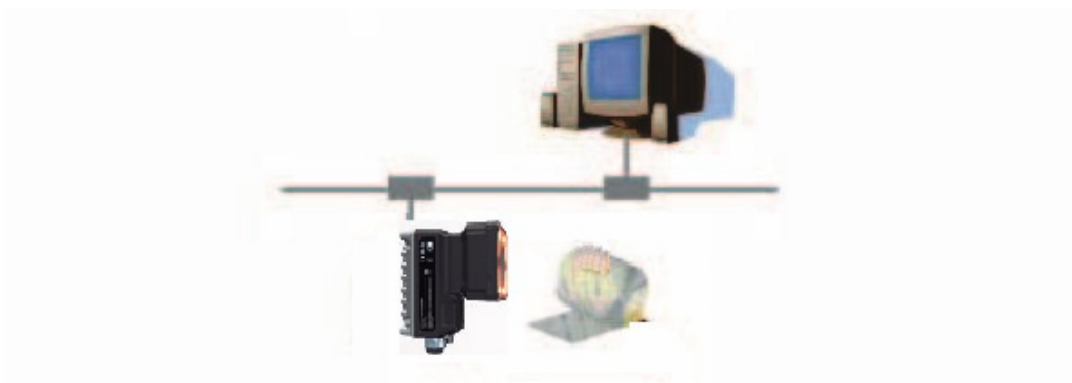

7-2-2 Environment Settings

The following preparations are required on the Smart Camera and a remote operation PC respectively to launch the remote operation.

- Remote operation PC: Arrange communications and GUI environments for the remote operation.
- Smart Camera: Set up a server for the remote operation.

Install a PC software to the remote operation PC.



Precautions for Correct Use

Make sure that the software version installed on the remote operation PC should be the same as that on the Smart Camera.



Precautions for Correct Use

In the remote operation, the following port numbers are used to communication with the Smart Camera.

- 9900 + Line number (e.g. port 9900 for line 0)
- 9910 + Line number (e.g. port 9910 for line 0)
- 9920 + Line number (e.g. port 9920 for line 0)


If these ports are disabled due to security settings of your PC or the domain security policy, the remote operation is not available.

Reconsider the security settings of your PC or the domain security policy, or ask your domain security administrator.


7-2-3 Network Settings for the Remote Operation PC

Set the IP address for the remote operation PC.

- 1 Open the Local Area Connection Properties on the remote operation PC.

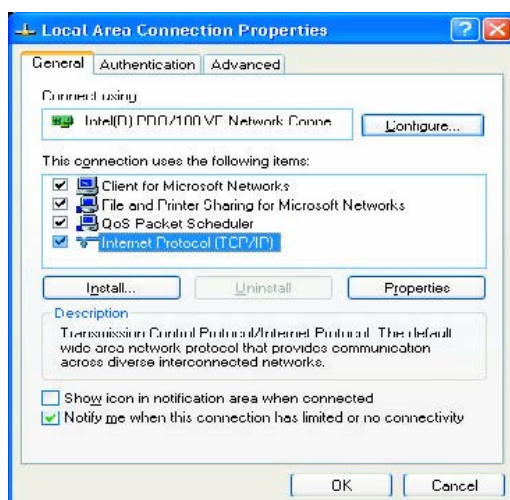

- 2 Input the IP address.

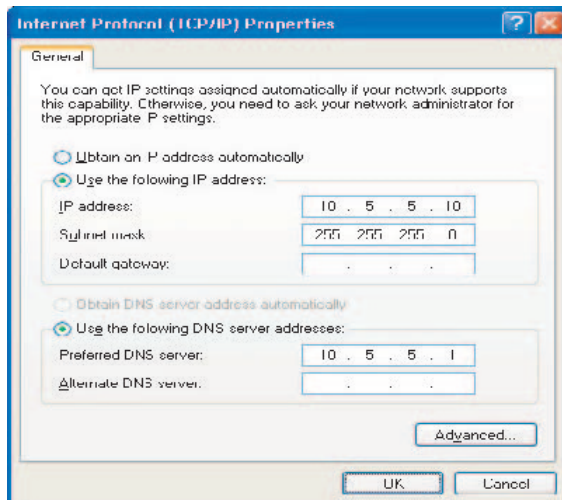

7-2-4 Network Settings for the Smart Camera




Precautions for Correct Use

The network settings for the Smart Camera set with this procedure is temporary. Since the settings are discarded with restarting the Sensor Controller or power off, perform the procedures of *7-2-5 Network Settings for the Smart Camera with Remote Operation Tool* on page 7 - 14 after the remote operation connected.

- 1 From **Start** menu on your PC, select **All Programs - OMRON - FH_FHV Series - FH_FHV Launcher**.

The FH/FHV Launcher window appears.

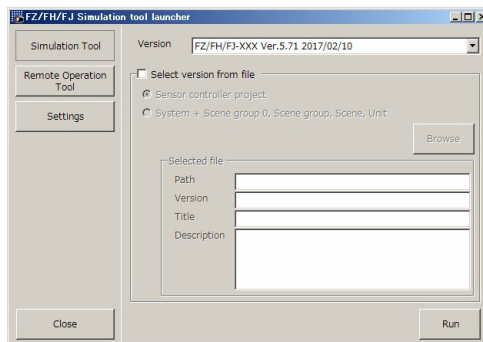

- 2 Click **Remote Operation Tool**.
- 3 Specify the version if it has already been known.
All software versions installed in the PC will be displayed.



Additional Information

When data for Sensor controller project, System +Scene group 0, Scene group, Scene, and Unit exist, the version of software to be run can be checked by specifying data. For details, refer to *Launching the Remote Operation Tool* on page 7 - 6.


- 4 Click **Run**.



Precautions for Correct Use


Do not connect or disconnect the Remote Operation tool during a measurement or the system running.

5 Click **Browse**.

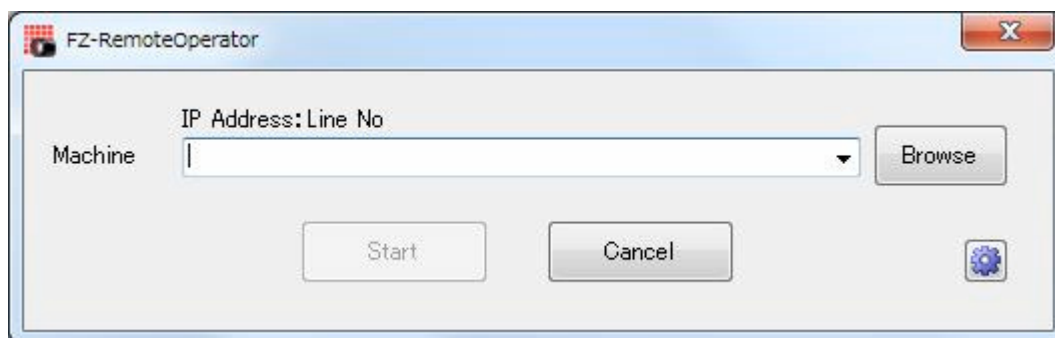


A Network reference list will be displayed.

6 Select your target Smart Camera in the list and click **Set Network....**

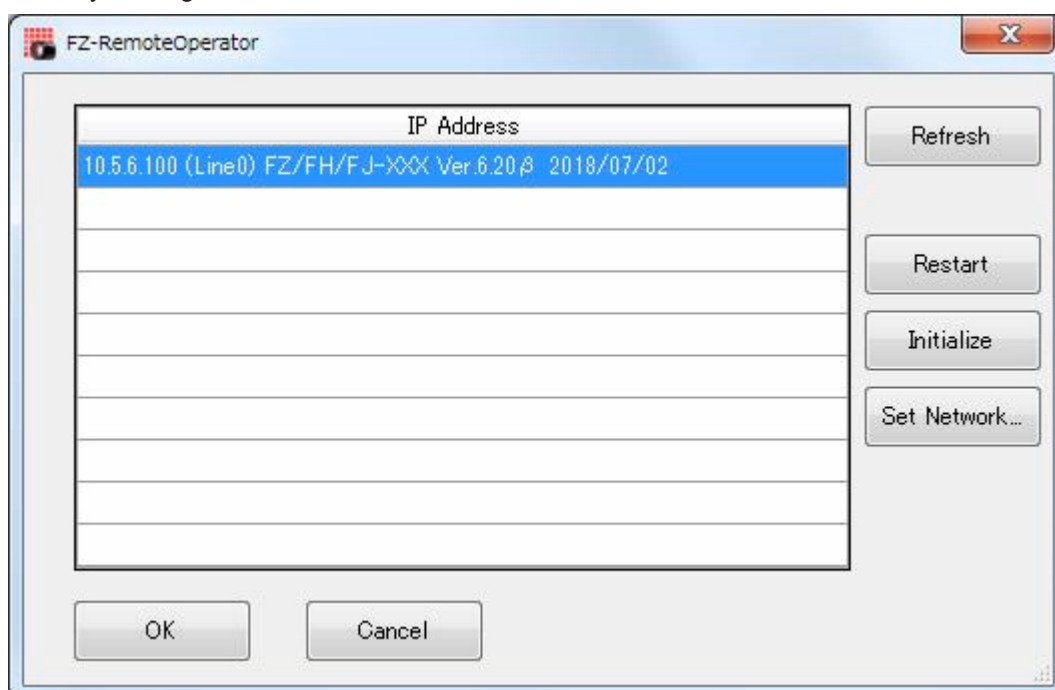

7 Set the IP address for the Smart Camera on the Network setting.

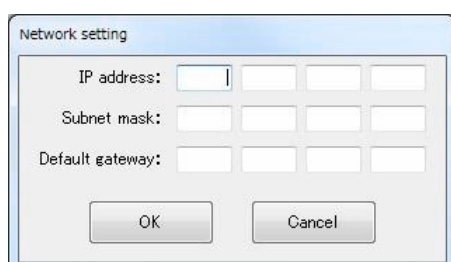

8 Click **OK**. The IP address is set to the Smart Camera.

- 9 On the network reference list, click **Refresh** to check the IP address setting is reflected.



Precautions for Correct Use

The reflection of IP address settings may take time. If it were not reflected, click **Refresh** again.



Precautions for Correct Use

If a bad IP address or an IP address overlapped with a device on the same network are set, an IP address different from your Setting will be displayed on the list like (169.254. xx. xx). Perform this procedure to set a valid IP address.

7-2-5 Network Settings for the Smart Camera with Remote Operation Tool

- 1 In the Main window, select **Tool** → **System settings** → **Communications** → **Ethernet (****)**. Set the IP address 2.
The (****) area indicates the *Serial (Ethernet)* contents set in the *Communication module*.

The screenshot shows a 'Network Settings' window with three sections:

- Address setting 1:**
 - ☐ Obtain an IP address automatically
 - ☒ Use the following IP address
 - IP address: 10.5.5.100
 - Subnet mask: 255.255.255.0
 - Default gateway: 10.5.5.100
 - DNS server: 10.5.5.100
 - Preferred WINS server: 0.0.0.0
 - Alternate WINS server: 0.0.0.0
- Address setting 2:**
 - ☐ Obtain an IP address automatically
 - ☒ Use the following IP address
 - IP address: 10.5.5.100
 - Subnet mask: 255.255.255.0
 - Default gateway: 10.5.5.100
 - DNS server: 10.5.5.100
 - Preferred WINS server: 0.0.0.0
 - Alternate WINS server: 0.0.0.0
- Input/Output setting:**
 - Input mode: Normal
 - Input form: ASCII
 - Output IP address: 0.0.0.0
 - Input port No.: 9600
 - Output port No.: -1 (-1: Same number Input port No.)

7-2-6 Launching the Remote Operation



Precautions for Correct Use

If the connection is disconnected during the remote operation, the Remote Operation tool and the Smart Camera may not operate properly. After terminating the Remote Operation tool, return the Smart Camera to normal state with clicking **Restart** or **Initialize** on the Remote Operation tool. If the Remote Operation tool could not be terminated with **Close**, then terminate the process of *FZ-PanDA.exe* with the task manager.


- 1 In order to launch the Launcher, from **Start** at the lower left area of the window for the remote operation PC, select **All programs - OMRON - FH_FHV series - FH_FHV Launcher**.
Note that the Smart Camera must be placed in a measurement capable state.




Precautions for Correct Use

Do not connect or disconnect the Remote Operation Tool during a measurement or the system running.

- 2 The FH/FHV Launcher window appears.

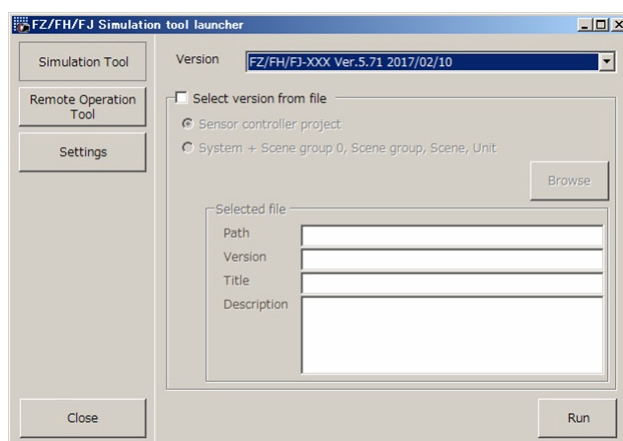

- 3 Click **Remote Operation Tool**.

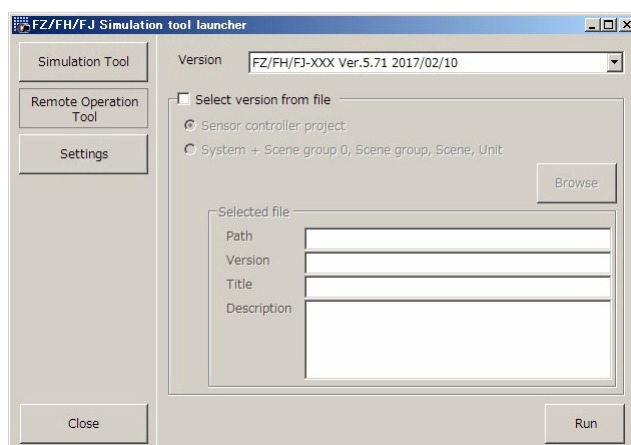


- 4 Specify the version if it has already been known.
All software versions installed in the PC will be displayed.




Additional Information

When data for Sensor controller project, System +Scene group 0, Scene group, Scene, and Unit exist, the version of software to be run can be checked by specifying data. For details, refer to *Launching the Remote Operation Tool* on page 7 - 6.

- 5 Click **Run**.
- 6 Select or directly input the IP address and *Line No.* for the Sensor Controller to be connected.

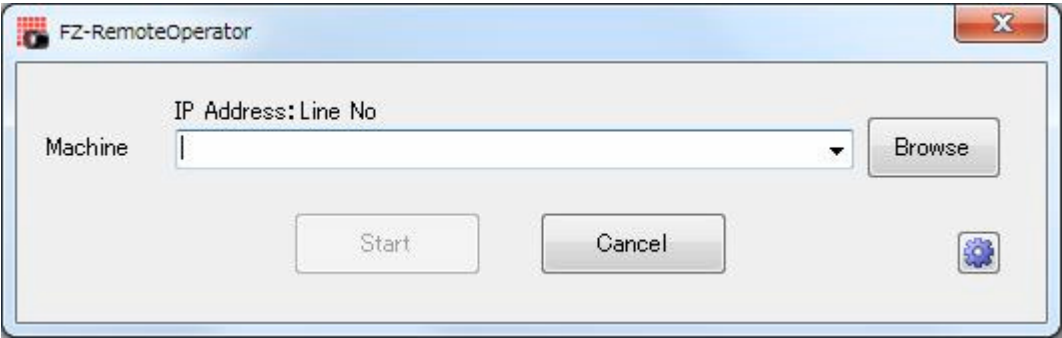

Click **Browse** to check the IP addresses and Line No. for connectable Smart Camera.

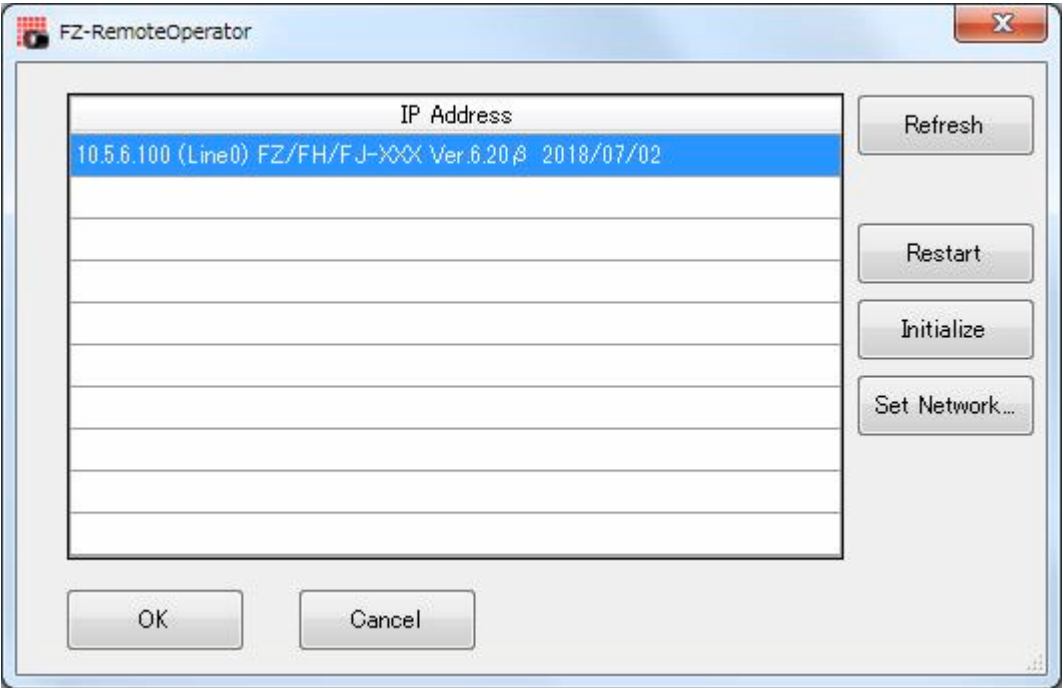


* The *Line No.* selected here is one of the following based on the system's operation mode.

Operation mode		Setting
Standard		Line No. = 0
Double Speed Multi-input		Line No. = 0
Non-stop adjustment	Measurement window	Line No. = 0
	Non-stop adjustment window	Line No. = 1

If a Line No. other than the above was selected, the remote operation cannot be connected to Sensor Controllers.

- 7** Change the size of an image to transfer with the remote operation as necessary. Select () to set.

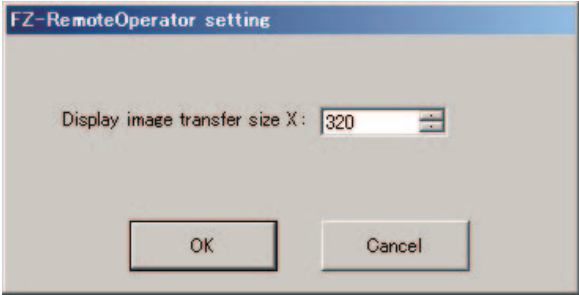

Setting item	Description
Display image transfer size (Size of an image to transfer)	Sets the size of the image displayed in the remote operation window. Depending on the "Display image transfer size (Size of the image to transfer)" setting, the roughness of the display image or figure display changes.

8 Click **Start**.




Additional Information

When the security setting has been set on a Sensor Controller to connect, inputting the password for a security setting item is requested on the Remote operation window.

- In Layout 8, an error dialog will not be displayed even if an error occurred. Instead, an error string is displayed on the Error Pane. When an error occurred, check it on the Error Pane.
- In Layout 8, the Layout Modification Mode can handle the following panes only. When using panes other than them, use a layout other than Layout 8 for the normal remote operation.
 - Flow Display Pane
 - Image Pane
 - Judgement Pane
 - Error Pane

7-2-7 Terminating the Remote Operation

1 To terminate the remote operation with the remote operation PC, click **End** in the **File** menu on the Remote Operation tool.

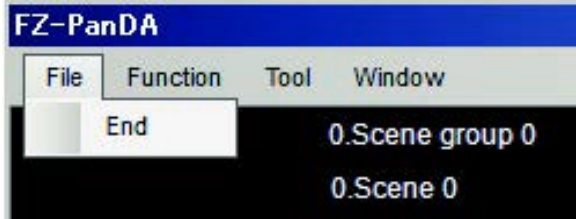

Precautions for Correct Use

Follow the procedures above to terminate the *Remote Operation Tool*. If you do not follow the procedures above, such as shutting down the remote operation PC or using the task manager to terminate, the Smart Camera may not operate properly.

7-3 Using the Simulation Software [Simulation Software]

7-3-1 Introduction

With the simulation software, you experience the operability of the Smart Camera FHV series on a PC. Other than sample images saved in the Smart Camera, the simulation software allows you to use images saved in FH/FHV series and ones shot by a digital camera.

7-3-2 Available Image Formats

Image formats that are available in this simulation software are below. Before use, store them to an external storage beforehand and copy them to a folder generated in a specified location. (For creating a folder, refer below.)

- File type: bmp, jpg, ifz (OMRON image logging file format for FH/FHV), bfz (This format was added to the software version 5.50 and later for FH. A container format image logging file including bmp type image files.), jfz (This image file type was added to the software version 5.60 and later for FH. Jpeg format image files are organized in folders when saved as a logging image file format.)
- Color: 256 (monochrome) or 24-bit (color)
- File name: Half-width alphanumeric only

7-3-3 Operational Precautions

The simulation software allows you to experience functions of the Smart Camera FHV series on a PC. Please note that operations on the simulation software may be different from those on the actual FHV series.

■ Unavailable operations with the simulation software

- Image input and measurement with a camera connected.
- Use and check of the I/O monitor
- Data output in the result output processing item
- Conditional branch corresponding to DI in the input conditional branch processing item.
- Saving each data to the Smart Camera

■ Different Operations from the Smart Camera.

- Performing measurements

Since a measurement with a connected camera is unavailable, the measurement is always performed on file images.

- Settings for camera image input
Changing values are only available.

- Saving data to the Smart Camera memory.

Scene data, scene group data, when selecting **Main memory** at saving **System** setting data, the data is saved in the following folder.

C:\¥Documents and Settings¥Computer name¥My Documents¥OMRON FZ¥SettingData

- Other precautions

- This simulation software can load scene data and system data generated with FHV series. Likewise, scene data and system data generated with the simulation software can be used with FHV series. However, regarding a setting including "path" (logging setting or capture setting case), the path name may differ on the FHV series, it may require re-set.
- Different memory capacity does not allow FHV series to load data generated by the simulation software.
Reconsider the settings and scenes and reduce the necessary memory amount, then load them again.
- As same as the above issue, FHV series can load scene data with many processing units related to image input and image conversion due to the memory amount difference, but the simulation software may not load and measure the data because of *NG (insufficient memory)*. Reconsider the scene contents and reduce the necessary memory amount, then load them again.



Index

Index

A		
Accessories.....	1 - 6	
Assembling Equipment.....	5 - 2	
B		
Basic System of Measurement.....	2 - 2	
C		
Cables.....	1 - 4	
I/O Cable Interface (Power Supply, I/O, RS-232C).....	6 - 7	
C Mount Lens.....	3 - 20	
High-resolution Telecentric Lens VS-TCH Series for C Mount Lens for 2/3-inch Image Sensor.....	3 - 27	
How to View the Optical Chart.....	3 - 30	
Meaning of Optical Chart.....	3 - 30	
Non-telecentric Macro Lens VS-MC Series for C Mount Camera.....	3 - 29	
Optical Chart.....	3 - 31	
SV-H Series.....	3 - 21	
SV-V Series.....	3 - 20	
Vibration / Shock Resistance Lens VS-MCA Series for C Mount Camera.....	3 - 22	
C Mount Lens/IP40 Configuration.....	5 - 2	
C Mount Lens/IP67 Configuration.....	5 - 3	
C Mount Lenses.....	3 - 20	
Component Names and Functions.....	3 - 6	
Concept of Measurement Processing.....	2 - 3	
Configuration.....	3 - 1	
confirm the Package.....	1 - 1	
Smart Camera.....	1 - 2	
Connection		
How to connect.....	5 - 14	
D		
Dimensions		
Ethernet Cables.....	3 - 14	
FHV Series.....	3 - 7	
I/O Cables.....	3 - 12	
Lens Modules.....	3 - 16	
Lighting Modules.....	3 - 38	
Mounting Fixtures.....	3 - 46	
Dimintions		
Opetical Filters.....	3 - 39	
Dimensions		
Waterproof Hood.....	3 - 42	
E		
Ethernet Cables.....	1 - 4, 3 - 13	
Dimensions.....	3 - 14	
Ethernet interface.....	6 - 15	
Cables.....	6 - 16	
Pin Layout.....	6 - 17	
F		
Fail-safe Measures.....	6 - 4	
FHV7H-□□□□□-C Series.....	1 - 2	
FHV7H-□□□□□-S□□ Series.....	1 - 2	
FHV7H-□□□□□-S□□-□□ Series.....	1 - 3	
FHV Series.....	2 - 4, 3 - 2	
Dimensions.....	3 - 7	
Component Names and Functions.....	3 - 6	
Specifications.....	3 - 2	
Flow of Use Procedure.....	2 - 7	
H		
Handling and Installation Environment.....	4 - 1	
I		
I/O Cable Interface (Power Supply, I/O, RS-232C).....		
.....	6 - 6, 6 - 9, 6 - 12	
RS-232C Interface.....	6 - 14	
I/O Cables.....	1 - 4, 3 - 10	
Dimensions.....	3 - 12	
Specifications.....	3 - 10	
I/O Interface Input/Output Circuit Diagram.....	6 - 12	
Installation.....	5 - 2, 5 - 3, 5 - 5	
Instalatilation.....	5 - 1	
Lens Module/IP67 Configuration.....	5 - 8	
Setting up the Software.....	7 - 2	
Installing the Smart Camera.....	5 - 14	
When Connecting the Smart Camera to a Lighting Controller.....	5 - 18	
When Mounting the Smart Camera Directly (without Mounting Fixture).....	5 - 15	
When Mounting the Smart Camera Directly Using the Mounting Fixture.....	5 - 16	
Interface Specification.....	6 - 9	
L		
Launching the Remote Operation.....	7 - 14	
Lens module		
Attaching the Lens Module.....	5 - 5	
Lens Module/IP40 Configuration.....	5 - 5	
Lens Modules.....	1 - 5, 3 - 15	
Dimensions.....	3 - 16	
How to View the Optical Chart.....	3 - 17	
Meaning of Optical Chart.....	3 - 17	
Optical Chart.....	3 - 18	

Specifications.....	3 - 15
Lighting	
Lighting Controller.....	1 - 8
Lighting Controller	
Mounting and Attaching.....	5 - 18
Lighting Module	
Attaching the Lighting Module.....	5 - 10
Lighting Modules.....	1 - 5, 3 - 37
Dimensions.....	3 - 38
Specifications.....	3 - 37
Light-shielding Sheet.....	1 - 7

M

MicroSD Card	
How to Insert / Remove the MicroSD Card.....	6 - 18
Inserting and Removing the MicroSD Card.....	6 - 18
Model Reference.....	2 - 5
Modules.....	1 - 5
Mounting tFixture	
When Installing Using the Mounting Fixture on the Front...	
.....	5 - 17
Mounting Fixtures.....	1 - 6, 3 - 46
Dimensions.....	3 - 46
Specifications.....	3 - 46

N

Network Settings for the Remote Operation PC.....	7 - 11
Network Settings for the Smart Camera.....	7 - 12
Non-telecentric Macro Lens VS-MC Series for C Mount Camera.....	3 - 29

O

Optical Chart	
Normal Lenses.....	3 - 31
Vibration/Shock-resistance Lens.....	3 - 34
Optical Filters	
Specifications.....	3 - 39
Dimensions.....	3 - 39
Overview of FHV Series.....	2 - 1
Overview of System.....	2 - 2

P

Pin Layout	
1000BASE-T.....	6 - 17
10BASE-T / 100BASE-T.....	6 - 17
I/O Cable Interface (Power Supply, I/O, RS-232C).....	6 - 8
Power Supply and I/O Interface.....	6 - 1
Precautions for I/O Interface.....	6 - 5

R

Recommended Operational Environment	
Software Setup.....	7 - 2
Recommended Power Supply for FHV Series).....	6 - 6
Remote Operational Tool	
Launching the Remote Operation.....	7 - 14

Terminating the Remote Operation.....	7 - 17
Remote Operation Tool.....	3 - 48, 7 - 10
Environment Settings.....	7 - 11
Network Settings for the Smart Camera.....	7 - 12
Network Settings for the Remote Operation PC.....	7 - 11
Network Settings for the Smart Camera with Remote Operation Tool.....	7 - 14
Summary.....	7 - 10

S

Setting up the Software.....	7 - 2
Simulation Software.....	3 - 48, 7 - 18
Smart Camera.....	3 - 2
Smart Camera Models and System Configuration.....	2 - 5
Software.....	1 - 8, 3 - 48
Software Setup.....	7 - 1
Sold Separately.....	1 - 4
Specifications	
Vibration / Shock Resistance Lens VS-MCA Series for C Mount Camera.....	3 - 22
Specifications.....	3 - 13, 3 - 20
Ethernet Cables.....	3 - 13
FHV Series.....	3 - 2
High-resolution Telecentric Lens VS-TCH Series for C Mount Lens for 2/3-inch Image Sensor.....	3 - 27
I/O Cables.....	3 - 10
Lens Modules.....	3 - 15
Lighting Modules.....	3 - 37
Optical Filters.....	3 - 39
SV-H Series.....	3 - 21
SV-V Series.....	3 - 20
Waterproof Hood.....	3 - 41
System Configurations.....	2 - 6

T

Terminating the Remote Operation.....	7 - 17
---------------------------------------	--------

U

Use Procedures.....	7 - 4
Changing Display Language.....	7 - 6
Launching the FH/FHV Launcher.....	7 - 4
Launching the Remote Operation Tool.....	7 - 6
Launching the Simulation Software.....	7 - 5
Registering the License.....	7 - 7
Troubleshooting.....	7 - 9
Using the Simulation Software.....	7 - 18
Available Image Formats.....	7 - 18
Introduction.....	7 - 18
Operational Precautions.....	7 - 18

W

Warning.....	4 - 2
Waterproof Caps.....	1 - 7
Waterproof Hood.....	3 - 41
Dimensions.....	3 - 42
Specifications.....	3 - 41

Waterproof Hoods.....1 - 6

Waterproof Packings..... 1 - 6

When Turning Power ON and OFF..... 6 - 2

Windows..... 7 - 3

 Language Setting Window..... 7 - 4

 Simulation Software Window and Remote Operation Tool Window.....7 - 3

Mounting Fixture

 When Installing Using the Mounting Fixture..... 5 - 16

OMRON Corporation **Industrial Automation Company**
Kyoto, JAPAN

Contact: www.ia.omron.com

Regional Headquarters

OMRON EUROPE B.V.

Wegalaan 67-69, 2132 JD Hoofddorp
The Netherlands
Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200
Hoffman Estates, IL 60169 U.S.A.
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD.

No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark,
Singapore 119967
Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2018 All Rights Reserved.
In the interest of product improvement,
specifications are subject to change without notice.

Cat. No. Z408-E1-01

1118