DGSS

Wireless Portable Bluetooth Speaker




Mode No.: DOSS SoundBox User Manual

Thank you for purchasing the **DOSS SoundBox Wireless Portable Bluetooth** Speaker with Bluetooth and Hands free function. We encourage you to read this instruction guide thoroughly to get the most out of this innovative wireless portable speaker.

Package content

- User manual

Product overview

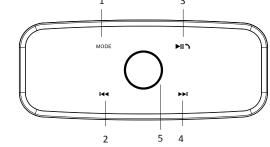

Backlit touch-sensitive buttons

- 1. Mode switch: Touch MODE to toggle play mode among Bluetooth, TF Card and Aux-in connection.

 2. In Bluetooth mode/TF mode, touch ◄◄ to skip backward.
- 3. Play/Pause and handset button
- In Bluetooth mode, touch **> 1** to answer or end a call. Touch for 3 seconds to reject a call.
- In Bluetooth mode, touch **> 1** to play/pause your tune. Touch for 3 seconds to disconnect with your device.
- In TF mode, touch ► to play/pause your tune. 4. In Bluetooth mode/TF mode, touch ▶▶ to skip forward.

Counterclockwise rotation to decrease the volume.

- Clockwise rotation to increase the volume.

Introduction

• One wireless portable speaker

- USB charging cable
- Φ3.5mm auxiliary cable

- 6. **Power button:** Long press $\overset{\sim}{\mathbf{O}}$ to turn the device on and off. 7. Auxiliary Φ3.5mm jack: Use it for cabled playback with compatible devices. • When using AUX mode, control audio playback via the connected device.
- 8. **TF card:** Use it for TF card (with music) playback. support mp3,wav songs, 32G or smaller size cards are better, if not, please format that to FAT32 or FAT.

6 7 8 9 10

- 9. Charging port: Plug the supplied USB cable into this port to recharge
- the built-in battery. 10. LED charging indicator.
- Charging: Steady Red.
- Fully charged : Steady Green.

Status indicators

	Center indicator/ Control button	Flashing blue	Indicates that the speaker has entered into the pairing mode and it is ready to be paired
		Steady blue	Indicates that the device is successfully paired
		Steady red	Indicates that the device has switched to the auxiliary input mode
		Steady Green	Indicates that the device has switched to the TF mode
	Battery status indicator	Steady red	Battery is charging
		Steady green	Battery is fully charged



Scan the QR code or search 'DOSS fans' on Facebook to join our group Share your experience and find more surprise!

DGSS

Wonders Technology Co.,Ltd Website: www.dossaudio.com Follow us on Facebook: https://www.facebook.com/dossav Email: support@dossav.com Tel.:1-833 275 3677 Mon-Fri 9AM-5PM (PST)

Preparation

- Use the supplied USB cable to charge your portable speaker directly from your computer micro USB port or the cellphone adapter(please confirm its output is 5V)
- Make sure that the speaker is fully charged before using it for the first time. It will take approximately 2-3 hours to recharge after.
- LED light will remain RED when charging and turn GREEN once charge
- Press & Hold the power button to turn on the speaker. Repeat the steps to turn the device off as well.
- Note: If the speaker beeps every few seconds, please recharge it for
- •The speaker has a built-in battery saver mode where it will automatically power off if not in use for 15 minutes. This function can be removed with a firmware upgrade. For assistance, please contact: support@dossav.com

Pairing the wireless speaker with your smart device

- 1. Place your smart device and wireless speaker no more than one meter away from each other.
- 2. Press the power button located on the back of the speaker for several seconds to turn it on.
- 3. Set your smart device to "discover" the wireless speaker. Upon powering on, a tone will be heard, the blue LED will start flashing, accompanied by a prompt notifying that the speaker has entered into the pairing mode.
- 4. Enabled Bluetooth on your device and choose **DOSS SoundBox** from
- 5. If pairing is successful, the LED will change to steady blue and your phone will confirm that the connection has been established. If the pairing process fails after 60 seconds, please press the >15 button for 5 seconds and have a try again.
- 6. long press the button), you can disconnect the Bluetooth. Note: If your smart device cannot discover the SoundBox,long press the button 🖊 👣 and have a try again.

Answering and ending a call using your speaker or mobile

- 1. When there is an incoming call, the speaker will generate a tone and a verbal notification to alert you of this event.
- 2. Briefly press the Handset button to pick up, long press to reject. You may also press the answer button on your smart phone to take the call using the speaker.
- 3. Speak with a clear voice right into the built-in microphone located on the front section of the speaker.
- 4. To end a call, tap the Handset button once again. Likewise, you may also end the call directly using the command on your cell phone.
- 5. When listening to music using your smart phone, playback will resume automatically once the call has ended.

Using it with your Echo Dot

- You can connect the Dot with the speaker using a 3.5 mm auxin cable or Bluetooth. Please use the following steps to set up using Bluetooth:
- 1. Download the Alexa APP, follow the standard setup procedure to get the dot connected to your home Wi-Fi network.
- 2. Switch the SoundBox speaker to Bluetooth mode, you can press the 'play/handsfree' button for 5 seconds to keep it in pairing status.
- 3. Run the Alexa app, tap Menu and then tap Settings.
- 4. Tap the Echo Dot in your list of Alexa Devices, then tap Bluetooth. 5. The SoundBox speaker should appear in the list of Bluetooth Devices.
- If not, press the " ▶II " button for 5 seconds and try again. Once listed, tap on The SoundBox speaker to complete the pairing process. To remove the device, return to Bluetooth -> tap the name of the speaker -> then tap "Forget Device".

- 1. Voice command will not be able to turn on/off the Soundbox no matter whether you connect it via Bluetooth / Aux cable. It can only translate sound signal.
- 2. To remove the battery saver option, please contact our customer service at support@dossav.com to remove the function by upgrading the firmware.

Bluetooth Cannot Pair with Bluetooth

The song cuts off during

Not paired with transmitter

the card is inserted, and jump

directly back to Bluetooth

The song cuts off during

Customer Service Email

be turned off

Product type: Wireless Portable Bluetooth Speaker with Built-in Microphone Output power: 6W x 2 Driver unit: 1.5 inch speaker x 2 + 2.6 inch passive radiator Frequency response: 100Hz-18kHz Signal to noise ratio: ≥55dB Unit weight: 560 g Unit dimension: 6.6 x 2.7 x 2.9 inch Warranty: One-year limited

Press Play/Pause button for 5

the default playback device

Please check if the Bluetooth

the battery level is low

charge it during playback

SoundBox.it's for your laptop

contact the computer company

Please press Play/ Pause button

transmitter's customer service

for 5 seconds or contact with the

or FAT32. If not, format it to FAT or

Check the song format. The speaker

There may be a problem with the

song's file, try deleting all the songs in

only supports MP3, WAV

reset button inside Auxin

support@dossav.com

the same file

All the lights are lit and can not Use the needle or wire to poke the

Bluetooth function, please

or windows

for help

distance is more than 33 feet or

put it in another place and do not

Cannot play music after pairing | Please select 'DOSS SoundBox' as

There is noise during playback Maybe caused by the

Laptop prompts to install driver This driver is not special for

TF Card The speaker do not play when Check whether the card format is FA

seconds, then have a try to pair it

 Battery type: Li-ion 3.7V, 2200mAh Input:5V === 1A

- Battery charge up time: 3 hours approximately (when fully depleted).
- Battery playback time: up 12 hours (duration time may vary depending on the volume level used and usage patterns).

Wireless/Networking

Product specifications

- Bluetooth specification: V4.0+EDR, backwards compatible with previous Bluetooth versions
- Profiles supported A2DP (Advanced Audio Distribution Profile)
- Maximum operation range: 10 meters / 33 ft

- Do NOT drop, hit or shake the device.
- Do NOT disassemble, repair or modify the Bluetooth speaker by yourself. • Do NOT use cleaning products that contain benzene, solvents or alcohol.
- Do NOT expose the Bluetooth speaker to excessive heat or to direct
- sunlight for long periods of time. • Do NOT store the device in a place with high humidity or dust.
- Do NOT place heavy objects on top of the Bluetooth speaker.
- Do NOT use near a microwave oven or wireless LAN products.