



SERVICE MANUAL

Code 57.4403.3200 - 2nd Edition 01/2008

Handler with telescopic boom


GTH 55-19

(from serial n. 17548 to serial n. 17565)

(from serial n. 17822 to serial n. 17825)

(from serial n. 18154 to serial n. 18168)


(from serial n. 18556 to serial n. 18586)

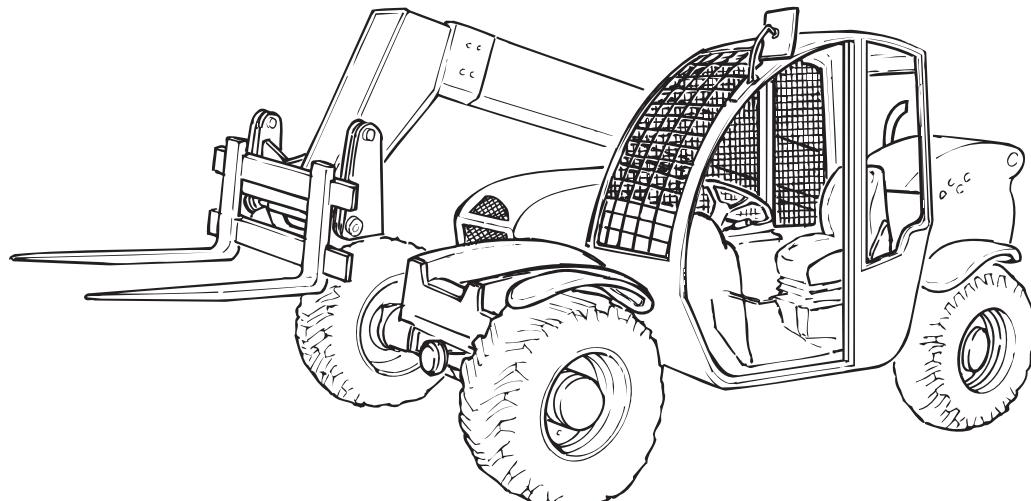

English

Edition

INDEX

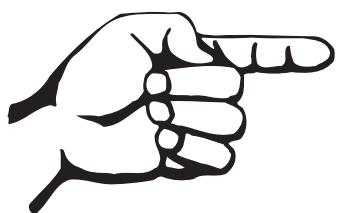

Intentionally blank page

SERVICE MANUAL

Code 57.4403.3200 - 2nd Edition 01/2008

Number:

Consigned to:

DECLARATION

I, the undersigned.....

declare that I have received the **Service manual for GENIE lifts series GTH 55-19**.

Copies consigned: n° on paper
 n° on CD-Rom

The undersigned is obliged to use the manual in their workshop, without disclosing the information in the same in any way, to unauthorised workshops and third parties in general, and not to photocopy or reproduce this manual or parts of the same in any way without the prior written authorisation of GENIE to do so.

If business relations between the undersigned and GENIE should come to an end, the undersigned is obliged to return the copies received without charges for GENIE.

Yours sincerely

Date

For acceptance

The consignee

Company stamp
and signature of the Legal representative

.....

*Copy to return stamped and signed for acceptance by the
Legal representative of the company receiving the copies of the manual.*



SERVICE MANUAL

Code 57.4403.3200 - 2nd Edition 01/2008

Number:

Consigned to:

DECLARATION

I, the undersigned.....

declare that I have received the **Service manual for GENIE lifts series GTH 55-19**.

Copies consigned: n° on paper
 n° on CD-Rom

The undersigned is obliged to use the manual in their workshop, without disclosing the information in the same in any way, to unauthorised workshops and third parties in general, and not to photocopy or reproduce this manual or parts of the same in any way without the prior written authorisation of GENIE to do so.

If business relations between the undersigned and GENIE should come to an end, the undersigned is obliged to return the copies received without charges for GENIE.

Yours sincerely

Date

For acceptance

The consignee

Company stamp
and signature of the Legal representative

| Revision | | Revised pages | Notes | Issued by |
|----------|---------|-----------------|-------------|-----------|
| No. | Date | | | |
| 1 | 06-2007 | | Publication | |
| 2 | 01-2008 | Section 2, 5, 6 | Revision | |
| 3 | | | | |
| 4 | | | | |
| 5 | | | | |
| 6 | | | | |
| 7 | | | | |
| 8 | | | | |
| 9 | | | | |
| 10 | | | | |
| 11 | | | | |
| 12 | | | | |
| 13 | | | | |
| 14 | | | | |
| 15 | | | | |
| 16 | | | | |
| 17 | | | | |
| 18 | | | | |
| 19 | | | | |
| 20 | | | | |
| 21 | | | | |
| 22 | | | | |
| 23 | | | | |
| 24 | | | | |
| 25 | | | | |
| 26 | | | | |
| 27 | | | | |
| 28 | | | | |
| 29 | | | | |
| 30 | | | | |
| 31 | | | | |
| 32 | | | | |
| 33 | | | | |
| 34 | | | | |
| 35 | | | | |
| 36 | | | | |
| 37 | | | | |
| 38 | | | | |
| 39 | | | | |
| 40 | | | | |

MANUAL CONTENTS

INTRODUCTION

Sect. 1 SAFETY RULES

Sect. 2 TECHNICAL SPECIFICATIONS

Sect. 3 SCHEDULED MAINTENANCE INSPECTIONS

Sect. 4 SCHEDULED MAINTENANCE PROCEDURES

Sect. 5 TROUBLESHOOTING

Sect. 6 SCHEMES

Sect. 7 REPAIR PROCEDURES

| Machine denomination | Literature valid up to serial number |
|----------------------|---|
| GTH 55-19 | from 17548 to 17565, from 17822 to 17825, from 18154 to 18168, from 18556 to 18586 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

INTRODUCTION

Important

Read, understand and obey the safety rules and operating instructions in the **GTH 55-19 Operator's Handbook** before attempting any maintenance or repair procedure.

This manual provides the machine owner and user with detailed information on the scheduled maintenance. It also provided qualified service technicians with information on troubleshooting and repair procedures.

Basic mechanical, hydraulic and electrical skills are required to perform most procedures. However, several procedures require specialized skills, as well as specific tools and equipment.

In these instances, we strongly recommend letting service and repair the machine at an authorized TEREXLIFT service center.

Technical Publications

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means without prior written permission from TEREXLIFT srl.

In pursuing a policy of constant quality improvement, TEREXLIFT srl reserves the right to make changes at any time and without undertaking to give prior notice; therefore, also this publication may be subject to modifications.

Contact Us

<http://www.terexlift.com>

e-mail: info@terexlift.it

<http://www.genielift.com>

DESCRIPTION OF THE MACHINE OPERATION

The mechanical energy source of this machine is a Perkins diesel engine (1), model 804C-33 Tier 2, which supplies 47.1 kW at 2600 rev/min (63 HP) with a max torque of 198 Nm (146 lb-ft) at 1600 rev/min.

On the flywheel side of the engine, and connected to the same by a Technodrive coupler complete with elastic joint and with a 1-to-1 ratio, there is Bosch-Rexroth closed-loop pump for hydrostatic drives, model A4VG56 (2) with adjustment valve of DA type. The max displacement of this swashplate pump is 56 cm³/rev. and the max calibration pressure is 430 bar (6235 psi). This pump is used to supply hydraulic power under form of pressure and flow rate which is then used for moving the machine. On the through-shaft of such drive pump there is a Casappa open-loop gear pump (with fixed displacement) (3) with priority valve integrated in the housing. The displacement of this pump is 27 cm³/rev. Its function is to provide hydraulic power, under form of pressure and flow rate, to the steering circuit of the machine (primary branch of the priority valve) and to the circuit for the telescopic boom movements (secondary branch of the priority valve). The assembly of the two pumps involves they have a rotation velocity equal to the speed of the diesel engine.

The suction line of the open-loop pump (3) is protected by an immersed filter (8), placed inside the hydraulic fluid tank (10) whose capacity is 75 litres (20 gallons). Just upstream of the connection with the suction line, there is a gate valve with ball valve (9) which lets you cut out the hydraulic oil tank in order to perform maintenance interventions on the machine's hydraulic system without having to drain oil off the tank built in the same circuit. The filter (34), placed in the line returning to pump (3), purifies most oil coming from the hydraulic circuit operating the telescopic boom before this oil returns to the tank. In addition to purify the oil coming from the main open-loop circuit of the machine (telescopic boom operating circuit), this filter can deliver oil at a minimum pressure of 0.5 bar to the suction line of the drive pump (2). This construction feature of the filter guarantees important advantages in terms of absence of cavitation in the transmission suction line, especially when the machine is started from cold.

The one-way valve (11) set at 2.5 bar (36 psi) protects the pump housing against high pressures and guarantees a certain circulation of the drain oil to the hydrostatic motor reducing, in this way, the temperature. From port "G" of the drive pump (2) low-pressure oil is taken (25-30 bar) to feed the anti-cavitation circuit of the automatic fork levelling system, the pilot circuit of the main valve of the telescopic boom (16) and the parking brake unlock circuit. The hydraulic energy produced by the drive pump (2) is converted into mechanical power by a closed-loop hydrostatic motor, model Bosch-Rexroth A6VM107 (5) equipped with adjustment valve of DA1 type and with flush valve (36) for reducing the max temperatures inside

the drive circuit. The max displacement of this bent-axis motor is 107 cm³/rev.

The motor is directly flanged to the front steering axle (26). The mechanical torque produced by the drive motor is transmitted to the rear axle (27) through a Cardan shaft. The hydraulic drive (12) of "load sensing" type with a displacement of 125 cm³/rev., receives oil from the priority line of pump (3) in relation to the "load sensing" signal sent by the hydraulic drive and connected to such pump with function of pilot signal. In this way, the input flow to the hydraulic drive is exactly the one needed for the instantaneous steering functions; any excess flow of the pump is available for operating the different movements of the telescopic boom. The steering circuit is protected against input overpressures by a pressure reducing valve set at 170 bar (2465 psi). On the two delivery lines to the steering cylinders there are other two pressure reducing valves with anti-shock function set at 225 bar (3262 psi). These two valves are intended to limit possible shocks on the steering wheel due to overstress caused by the wheels on the steering cylinders. These pressure reducing valves are installed in the hydrostatic drive (12) and cannot be regulated from the outside. The steering circuit is completed by the front steering cylinder (14), the rear steering cylinder (15) (these cylinders being integral part of the front axle (26) and the rear axle (27) respectively) and by a 4-way/3-position solenoid valve (13) for the selection of the three different steer modes (rear wheels straight, co-ordinate front/rear steering and independent front/rear steering). When the solenoid valve (13) is not energised, the front steering cylinder is fed by the hydraulic drive and the rear cylinder is blocked. When one magnet or the other of the solenoid valve (13) is energised, the chambers of the cylinders are connected in a different manner thus causing the desired effect on the steering mode. The Walvoil hydraulic 4-section main valve (16) receives oil from the secondary line of pump (3) and feeds all the movements of the telescopic boom. Each of the 4 sections of the main valve controls a specific function of the machine (lifting/lowering, attachment holding plate rotation, boom extension/retraction, attachment locking/unlocking). In the head there is a pressure relief valve set at 270 bar (3915 psi) which reduces the max pressure at the main valve inlet and drains the excess oil. The joystick (18) is used to reduce the pressures of the main valve section pilot lines and to move the main sliders of the main valve in a proportional manner with respect to their neutral position. Slider 1 of the main valve controls the lifting cylinder (17) of the telescopic boom. This cylinder has one single-acting compensation valve with safety function. Slider 2 of the main valve controls the attachment holding frame cylinder (19) of the telescopic boom. This cylinder is equipped with a double-acting compensation valve serving also as a safety valve. Parallel to this cylinder, there is the fork levelling compensation cylinder (20) (also called balancing cylinder) which is equipped

with a special double-acting compensation valve. Inside this valve, the one-way valves are mounted in reversed manner with respect to the normal position to avoid the pressurisation of the cylinder when the rotation control of the attachment holding frame is activated. Again inside this valve, there are other two one-way valves, set at 5 bar (72 psi), serving as anti-cavitation check valves (6). These valves deliver oil, taken from the low-pressure line of the transmission pump (2), to the fork levelling compensation circuit when needed. The two pressure relief valves (7) set at 290 bar (4205 psi) which protect the automatic fork levelling circuit during the boom lifting/lowering phases and in case of overload on the attachment holding frame (for instance, in the case of use of the bucket) are installed in the two control lines of cylinder (19) and they are integral to module 2. Slider 3 of the main valve controls the extension cylinder (22) of the telescopic boom which operates the movement of the second boom telescope and is equipped with a single-acting compensation valve used as well as safety valve.

Slider 4 of the main valve controls the attachment locking cylinder (23). This cylinder has a double one-way valve with hydraulic release and safety function. On the feeding lines of this cylinder, there are two quick-fit connectors (24) for the connection of the hydraulic lines to those optional attachments necessitating hydraulic power for their operation (ex. hydraulic winch and maintenance jib, mixing bucket, etc.).


The special hydraulic block (21) has been designed to group, in a single element, some valves of the low-pressure circuit fed through port "G" of pump (2), which, in the previous versions of the machine, were installed separately. In particular, this block houses the selection solenoid valve (29) operating the parking brake and the relevant valve controlling the flow rate of the calibrated throttle with 0.5mm diameter; the selection solenoid valves (31) and (35) used to switch the pilot lines coming from joystick (18) and relevant to the longitudinal axis of this joystick (forward/backward) which, depending on the operation of the two pushbuttons installed on the control lever in the driving place, activate one of the three sections of the main valve (16), and namely the lift/lower movement, the attachment holding plate rotation movement and the attachment lock/unlock movement. The selection solenoid valve (30), again built in block (21), activates the attachment lock/unlock line (also used as auxiliary line for the operation of optional attachments) without any need to move the joystick (continuous flow). The pressure reducing valve with screw adjustment (38), when operated together with solenoid valve (30), allows to adjust the oil flow rate of the attachment lock/unlock line (auxiliary line) through the adjustment of the pilot pressure on the line of the fourth element of the main valve (16). Finally, one of the hydraulic ports of the block connected to the feeding line of the parking brake is used for the connection of the safety

pressure switch (28). This pressure switch prevents the machine from moving when the pressure of the parking brake line is too low to guarantee the complete release of this brake.

The circuit of the service brake is operated by a SAFIM 27-20 pump (25) which takes hydraulic oil from tank (37) to operate the service brake, located inside the front axle (26). The brake pump can provide a maximum pressure of 80 bar (1160 psi), thus depending on the pressure exerted on the brake pedal placed inside the driving place.

The pressure switch (4) set at 2.8-6.3 bar (40 - 90 psi), placed on the pump head, sends an electrical signal when the service brake is engaged. The oil coming from the drain line of the main valve operating the telescopic boom (16) is cooled down by the heat exchanger (32). This exchanger is divided in two sectors, the former absorbs heat from the cooling circuit of the diesel engine and the latter absorbs heat from the hydraulic circuit of the machine. The oil cooled down by the heat exchanger is sent back to the special filter (34) and finally drained into tank (10). A one-way valve (33) calibrated at 8 bar (116 psi), is installed parallel to the input line of the heat exchanger and used as safety valve. Its function is to avoid overpressure conditions of the heat exchanger (as is the case of a machine starting at low temperatures) by directly draining any excess oil into the tank.

GTH 55-19 hydraulic schematic

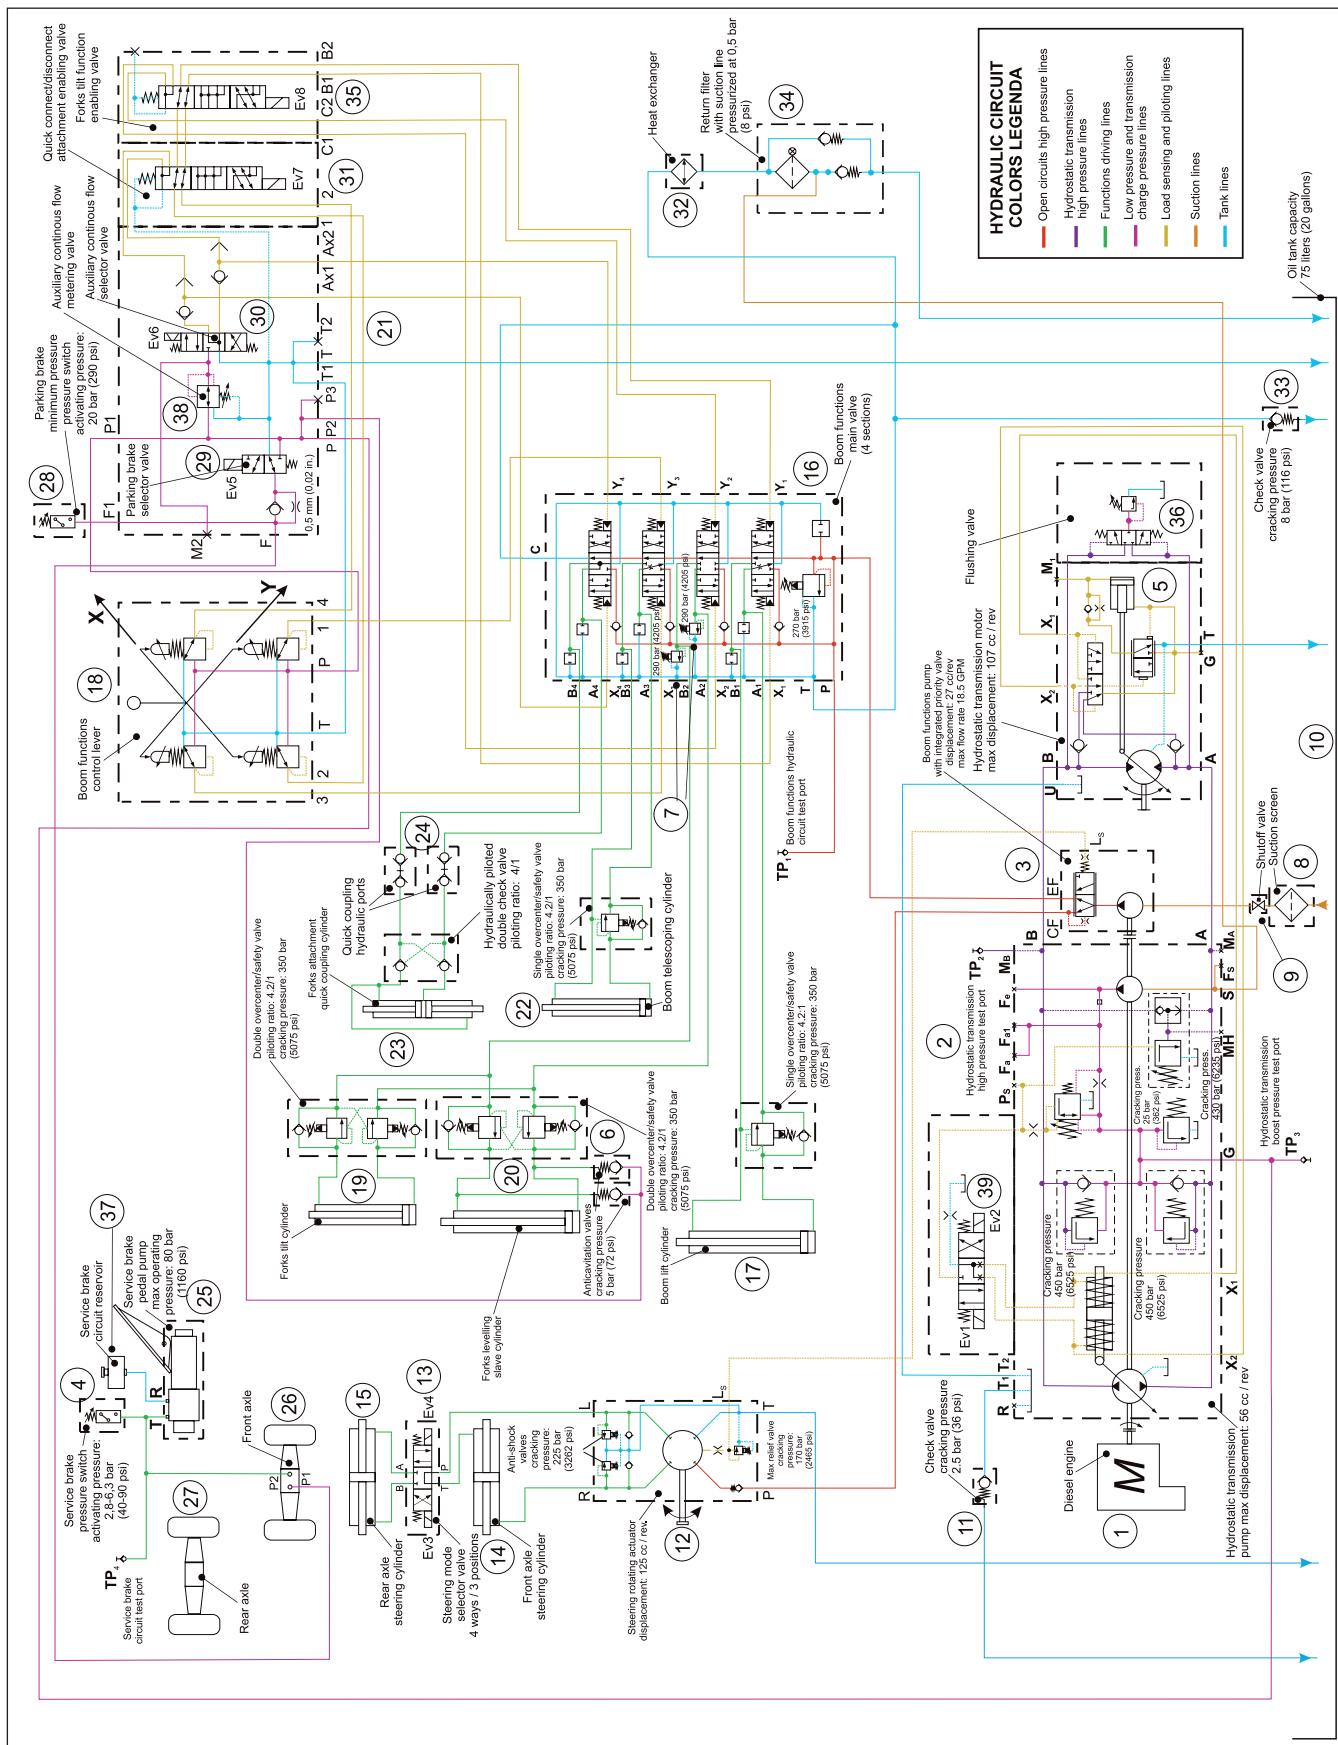

Section 1

SAFETY INFORMATION

SECTION INDEX

| | | | |
|-------|--|------|---|
| 1.1 | Safety rules | page | 2 |
| 1.1-1 | Personal safety | | 2 |
| 1.1-2 | Workplace safety | | 3 |
| 1.2 | General remarks | | 4 |
| 1.3 | Servicemen's requisites | | 4 |
| 1.3-1 | Personal protective equipment | | 5 |
| 1.4 | General safety precautions | | 5 |
| 1.4-1 | Working areas | | 5 |
| 1.4-2 | Precautions during work | | 5 |

1.1 SAFETY RULES

1.1-1 Personal Safety

In this manual, any important information is preceded by a **SPECIAL SYMBOL**.

All operators who work or service the machine must know the exact meaning of these safety symbols.

There are six special (or safety) symbols in this manual, always combined with keywords that class the situations according to their danger degree.

The symbols are always followed by a text explaining the situation taken into account, the attention to be paid to such situation, the method and the behaviour to be adopted. When necessary, it stresses prohibitions or supplies instructions to prevent dangers.

Sometimes, it can be followed by illustrations.

We list below the special (or safety) symbols according to the relative seriousness of the hazard situation:



Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

DANGER

Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

WARNING

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

CAUTION

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

CAUTION

Draws the attention to important technical information or practical advice that allows for a safer and more efficient use of the machine.

NOTICE

Draws the attention to important environment-related information.



Be sure to wear protective eye wear and other protective clothing if the situation warrants it.



Be aware of potential crushing hazards such as moving parts, free swinging or unsecured components when lifting or placing loads. Always wear approved steel-toed shoes.

1.1-2 Workplace Safety

Be sure to keep sparks, flames and lighted tobacco away from flammable and combustible materials like battery gases and engine fuels. Always have an approved fire extinguisher within easy reach.



Be sure that all tools and working areas are properly maintained and ready for use. Keep work surfaces clean and free of debris that could get into machine components and cause damage.



Be sure that your workshop or work area is properly ventilated and well lit.



Be sure any forklift, overhead crane or other lifting or supporting device is fully capable of supporting and stabilizing the weight to be lifted. Use only chains or straps that are in good condition and of ample capacity.



Be sure that fasteners intended for one time use (i.e., cotter pins and self-locking nuts) are not reused. These components may fail if they are used a second time.



Be sure to properly dispose of old oil or other fluids. Use an approved container. Please be environmentally safe.

1.2 GENERAL REMARKS

Most accidents occurring while working, servicing or maintaining operation machines, are caused by not complying with the basic safety precautions.

Therefore, it is necessary to pay steady attention to the potential hazards and the effects that may come of operations carried out on the machine.

CAUTION

If you recognise hazardous situations, you can prevent accidents!

For instance, this handbook makes use of special **safety symbols** to highlight potentially hazardous situations.

CAUTION

The instructions given in this handbook are the ones established by GENIE. They do not exclude other safe and most convenient ways for the machine commissioning, operation and maintenance that take into account the available spaces and means.

If you decide to follow instructions other than those given in this manual, you must:

- be sure that the operations you are going to carry out are not explicitly forbidden;
- be sure that the methods are safe and in compliance with the indications given in this section;
- be sure that the methods cannot damage the machine directly or indirectly or make it unsafe;
- contact GENIE Assistance Service for any suggestion and the necessary written permission.

CAUTION

Do not hesitate to pose questions if you are in doubt! Contact GENIE: the assistance service is at your disposal. Addresses, phone and fax numbers are given in the cover and in the title-page of this manual.

1.3 SERVICEMEN'S REQUISITES

The operators who use the machine regularly or occasionally (e.g. for maintenance or transport) shall have the following requisites:

health:

before and during any operation, operators shall never take alcoholic beverages, medicines or other substances that may alter their psycho-physical conditions and, consequently, their working abilities.

physical:

good eyesight, acute hearing, good co-ordination and ability to carry out all required operations in a safe way, according to the instructions of this manual.

mental:

ability to understand and apply the rules, regulations and safety precautions. They shall be careful and sensible for their own as well as for the others' safety and shall desire to carry out the work correctly and in a responsible way.

emotional:

they shall keep calm and always be able to evaluate their own physical and mental conditions.

training:

they shall read and familiarise with this handbook, its enclosed graphs and diagrams, the identification and hazard warning plates. They shall be skilled and trained about the machine use.

CAUTION

It is recommended to take part in at least one technical training course organised by GENIE Assistance Office.

CAUTION

Ordinary and extraordinary maintenance of the machine are quite complex from a technical point of view and should be performed by an authorised service centre.

1.3-1 PERSONAL PROTECTIVE EQUIPMENT

During work, but especially when maintaining or repairing the machine, operators must wear suitable protective clothing and equipment:

- Overalls or any other comfortable garments. Operators should wear neither clothes with large sleeves nor objects that can get stuck in moving parts of the machine
- Protective helmet when working under or in the vicinity of suspended load
- Protective gloves
- Working shoes
- Breathing set (or dust mask)
- Ear-protectors or equivalent equipment
- Goggles or facial screen.

CAUTION

Use only type-approved protective equipment in good condition.

1.4 SAFETY PRECAUTIONS**DANGER**

Read and understand the following safety instructions before servicing the machine.

The following list contains safety rules which must absolutely be obeyed to prevent accidents and injuries.

1.4-1 WORKING AREA

- Make sure the area all around the machine is safe. Always be aware of potential risks.
- During work, keep the working area in order. Never leave objects scattered: they could hinder the machine movements and represent a danger for personnel.

1.4-2 PRECAUTIONS DURING WORK

- Do not walk or stop under raised loads or machine parts supported by hydraulic cylinders or ropes only.
- Keep the machine handholds and access steps always clean from oil, grease or dirt to prevent falls or slips.
- When entering/leaving the cab or other raised parts, always face the machine; never turn the back.
- When carrying out operations at hazardous heights (**over 3 meters from the ground**), always use type-approved safety belts or fall preventing devices.
- Do not enter/leave the machine when it is running.
- Before servicing the engine, let its parts cool down.
- Do not leave the driving place when the machine is running.
- Neither stop nor carry out interventions under or between the machine wheels when engine is running. When maintenance in this area is needed, stop the engine, engage the parking brake and chock the wheels to prevent accidental movements.
- Do not carry out maintenance or repair works without a sufficient lighting.
- When using the machine lights, the beam should be oriented in order not to blind the personnel at work.
- Before applying voltage to electric cables or components, ensure they are properly connected and efficient.
- Do not carry out interventions on electric components with voltage over 48V.

NOTICE

Treatment and disposal of used oils is subject to federal, national and local laws and regulations. Collect and deliver these wastes to authorised centres.

- Use the assistance of a second person to handle loads weighing 30 to 50 kg.
- For loads over 50 kg, the use of special hoisting equipment in good condition and equipped as per enforced regulations is mandatory.

A DANGER

Any intervention on the hydraulic or pneumatic circuit must be carried out by authorised personnel. Before any operation on lines under pressure, release any residual pressure from the circuit.

Do not use your fingers to check for pressure leaks. Fine jets of air, oil or fuel can injure you.

- Neither smoke nor use open flames if there is a risk of fire or close to fuel, oil or batteries.
- Do not leave fuel cans or bottles in unsuitable places.
- Do not empty catalytic mufflers or other vessels containing burning materials without taking the necessary precautions.
- Carefully handle all flammable or dangerous substances.
- After any maintenance or repair work, make sure that no tool, cloth or other object has been left within compartments with moving parts or in which suction and cooling air circulates.
- Never give orders to several people at a time. Instructions and signs must be given by one person only.
- Always pay the due attention to the instructions given by the foreman.
- Never distract the operator during working phases or crucial manoeuvres.
- Do not call an operator suddenly, if unnecessary.
- Do not frighten an operator or throw objects by no means.
- After work, never leave the machine under potentially dangerous conditions.


Section 2

TECHNICAL SPECIFICATIONS

SECTION INDEX

| | page |
|--|------|
| 2.1 Main dimensions | 2 |
| 2.2 Tyres | 3 |
| 2.3 Limit of use | 3 |
| 2.4 Weight | 3 |
| 2.5 Speed | 3 |
| 2.6 Payload and reach | 3 |
| 2.7 Forks (floating type) | 4 |
| 2.8 Diesel engine | 4 |
| 2.9 Electrical system | 4 |
| 2.10 Machine sound levels | 4 |
| 2.11 Vibration levels | 5 |
| 2.12 Refuelling | 5 |
| 2.13 Tightening torques | 6 |
| 2.14 Drill diameters for threads | 8 |
| 2.15 Standard tightening torques for fitting seals | 9 |
| 2.16 Locking material | 11 |
| 2.17 Hoisting instructions | 12 |
| 2.18 Advice to renew flexible hoses | 13 |
| 2.19 Lists of recommended spare parts | 14 |
| 2.20 Machine paint colour | 17 |
| 2.21 Checking the cylinder movement times | 18 |
| 2.22 Hydraulic settings | 19 |

2.1 MAIN DIMENSIONS

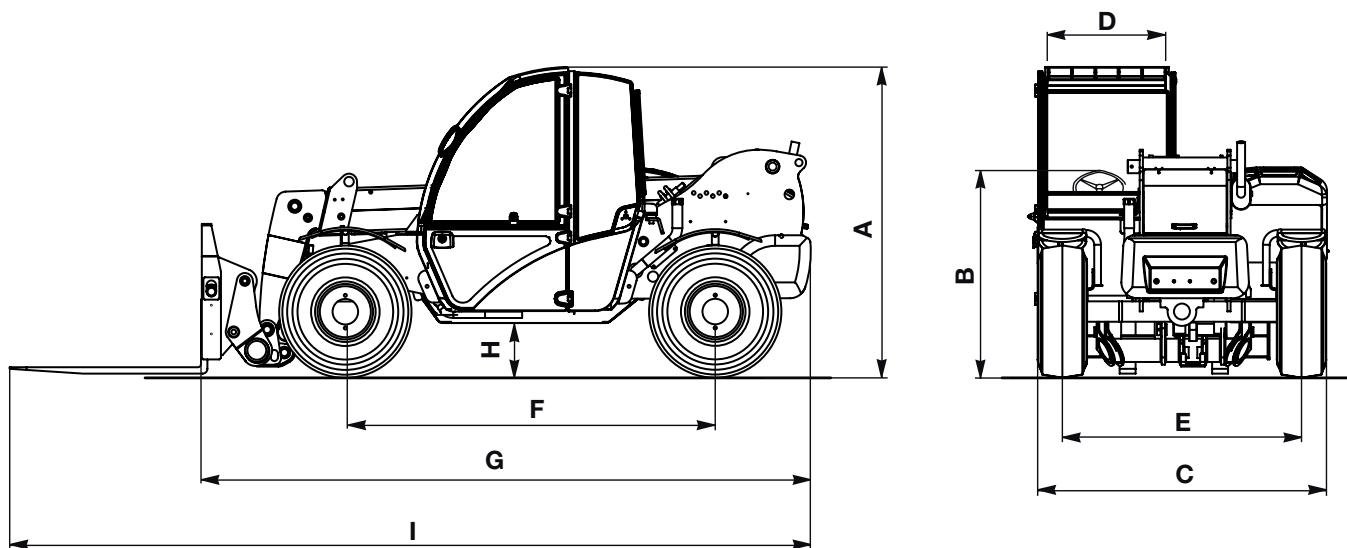

GTH 55-19

| | | | |
|----------|---------------------------------|----|----------|
| A | Height | ft | 6' - 4" |
| B | Height at steering whell | ft | 4' - 1" |
| C | Width | ft | 5' - 11" |
| D | Inside cab width | ft | 2' - 6" |
| E | Track | ft | 4' - 11" |
| F | Wheelbase | ft | 7' - 7" |
| G | Length at fork-holder plate | ft | 12' - 7" |
| H | Ground clearance | ft | 1' - 1" |
| I | Overall length | ft | 6' - 7" |
| • | Internal steering radius | ft | 5' - 9" |
| • | External steering radius | ft | 11' |
| • | Chassis levelling on both axles | ° | 2,3 |

2.2 TYRES

GTH 55-19

Standard

| | | |
|--------------|-----|-------------------|
| - Dimensions | | 12-16.5 |
| - Load index | | 10 pr |
| - Rim | | 9.75 x 16.5 |
| - Wheel disc | | 8 holes DIN 70361 |
| - Pressure | bar | 4.5 |
| - Pressure | Psi | 65 |

2.3 LIMIT OF USE

| GTH 55-19 | | | |
|------------------|--|----|----|
| • | Angle of approach (machine front side) | ° | 90 |
| • | Departure angle (machine rear side) | ° | 60 |
| • | Ambient temperature | °C | - |

2.4 WEIGHT

| GTH 55-19 | | | |
|------------------|------------------|----|------|
| • | Weight with fork | lb | 9810 |

2.5 SPEED

| GTH 55-19 | | | |
|------------------|--|-----|------|
| • | Travel speed (max) | mph | 15 |
| • | Max. slope with full load | % | 70 |
| • | Traction to the dynamometer (max load) | lb | 9325 |
| • | Traction to the dynamometer (no load) | lb | 6835 |

2.6 PAYLOAD AND REACH

| GTH 55-19 | | | |
|------------------|---|----|------|
| • | Max lifting height | ft | 19' |
| • | Max forward reach | ft | 11' |
| • | Reach at maximum height | ft | 2' |
| • | Fork-holder plate rotation | ° | 130 |
| • | Max lifting capacity | lb | 5500 |
| • | Lift capacity at maximum height | lb | 4400 |
| • | Lift capacity at maximum reach | lb | 1900 |
| • | Break-out force (with 500lt shovel SAE J732/80) | lb | 8157 |

2.7 FORKS (floating type)

| GTH 55-19 | | | |
|------------------|--|----|---------------------|
| • Dimensions | | in | 47,2" x 3,9" x 1,6" |
| • Weight | | lb | 9270 |

2.8 DIESEL ENGINE

| GTH 55-19 | | | |
|---------------------------------|-----------------|--|---------------------|
| • Make | | | PERKINS |
| • Model/Type | | | 804C-33 |
| • Displacement | in ³ | | 203 |
| • Cylinder arrangement | | | Vertical in-line |
| • Combustion System | | | In-direct injection |
| • Max Power Output (@ 2600rpm) | hp | | 63,0 |
| • Max Torque Output (@ 1600rpm) | lb·ft | | 140 |
| • Rated Power (@ 2600rpm) | | | 116 ft-lb / 58 hp |
| • Aspiration | | | Aspirated |
| • Cylinder's number | | | 4 |

2.9 ELECTRICAL SYSTEM

| GTH 55-19 | | | |
|------------------|----|--|-----|
| • Voltage | V | | 12 |
| • Battery | Ah | | 100 |

2.10 MACHINE SOUND LEVELS

- Not applicable

2.11 VIBRATION LEVELS

| GTH 55-19 | | | |
|------------------|---|------------------|-------|
| • | Mean assessed vibration level transmitted to arms | m/s ² | < 2.5 |
| • | Mean assessed vibration level transmitted to body | m/s ² | < 0.5 |

Values calculated in accordance with standard prEN13059

CAUTION

This is a Class A device. In a residential environment, such device can cause radio disturbance. In such cases, the operator is required to take suitable measures.

2.12 REFUELING

| GTH 55-19 | | | |
|------------------|---|--|-----------|
| • | Diesel engine | | 11 + 3.5 |
| • | Fuel tank | | 60 |
| • | Hydraulic oil tank | | 62 |
| • | Front differential gear with reduction gear | | 6 |
| • | Rear differential gear | | 5 |
| • | Front wheel reduction gears | | 1.5 + 1.5 |
| • | Rear wheel reduction gears | | 0.7 + 0.7 |
| • | Brake oil tank | | 0.1 |

Products:

Engine oil: **SHELL RIMULA SAE 15W-40 (API CH-4/ CG-4/ CF-4/CF, ACEA E3, MB 228.3)**

Power divider-Differential gears-Reduction gears: **FUCHS TITAN GEAR LS 85 W-90 (API GL-5 LS / GL-5)**

Hydraulic system and brakes: **SHELL TELLUS T 46 (DENISON HF-1 DIN 51524 part. 2 e 3)**

2.13 TIGHTENING TORQUES

| Thread diameter mm | Pitch mm | Wrench measure mm | | | Tightening torques Material class | | | | | | | | | | |
|-----------------------|-------------|---|----|-----|---|--|---|--------|---|--------|---|--------|---|--|---|
| | |  UNI 5931/32 | | |  UNI 5933÷36 | |  UNI 5923÷30 | |  8.8 Normal Nm | |  10.9 Galvanized Nm | |  12.9 Normal Nm | |  12.9 Galvanized Nm |
| | | | | | | | | | | | | | | | |
| 4 | 0,7 | 7 | 3 | 2,5 | 2 | | 3,2 | 2,8 | 4,4 | 3,9 | 5,3 | 4,8 | | | |
| 5 | 0,8 | 8 | 4 | 3 | 2,5 | | 6,1 | 5,5 | 8,7 | 7,8 | 10,3 | 9,3 | | | |
| 6 | 1 | 10 | 5 | 4 | 3 | | 10,6 | 9,5 | 14,8 | 13,3 | 17,8 | 16,0 | | | |
| 8 | 1,25 | 13 | 6 | 5 | 4 | | 25,1 | 22,5 | 35,4 | 31,8 | 42,5 | 30,2 | | | |
| | 1 | 13 | 6 | 5 | 4 | | 26,5 | 23,8 | 37,3 | 33,5 | 44,7 | 40,3 | | | |
| 10 | 1,5 | 17 | 8 | 6 | 5 | | 51,1 | 46,0 | 71,9 | 64,7 | 86,3 | 77,6 | | | |
| | 1,25 | 17 | 8 | 6 | 5 | | 53,4 | 48,1 | 75,1 | 67,5 | 90,2 | 81,1 | | | |
| 12 | 1,75 | 19 | 10 | 8 | 6 | | 86,5 | 77,8 | 121,4 | 109,2 | 145,9 | 131,3 | | | |
| | 1,25 | 19 | 10 | 8 | 6 | | 92,4 | 83,2 | 129,5 | 116,6 | 156,1 | 140,5 | | | |
| 14 | 2 | 22 | 12 | 10 | 6 | | 137,7 | 123,9 | 193,8 | 174,4 | 232,6 | 209,3 | | | |
| | 1,5 | 22 | 12 | 10 | 6 | | 145,9 | 131,3 | 206,1 | 185,5 | 246,9 | 222,0 | | | |
| 16 | 2 | 24 | 14 | 10 | 8 | | 209,1 | 188,2 | 293,8 | 264,4 | 353,0 | 317,7 | | | |
| | 1,5 | 24 | 14 | 10 | 8 | | 218,3 | 196,5 | 308,1 | 277,3 | 369,3 | 332,4 | | | |
| 18 | 2,5 | 27 | 14 | 12 | 8 | | 288,7 | 259,8 | 406,1 | 365,5 | 487,7 | 436,9 | | | |
| | 1,5 | 27 | 14 | 12 | 8 | | 314,2 | 282,8 | 442,8 | 398,5 | 530,6 | 477,5 | | | |
| 20 | 2,5 | 30 | 17 | 12 | 10 | | 408,1 | 367,3 | 573,4 | 516,1 | 687,7 | 618,9 | | | |
| | 1,5 | 30 | 17 | 12 | 10 | | 439,7 | 395,8 | 619,3 | 557,4 | 742,8 | 662,5 | | | |
| 22 | 2,5 | 32 | 17 | - | 12 | | 542,3 | 488,5 | 763,2 | 686,9 | 915,3 | 823,7 | | | |
| | 1,5 | 32 | 17 | - | 12 | | 582,6 | 524,3 | 819,3 | 737,4 | 983,6 | 885,3 | | | |
| 24 | 3 | 36 | 19 | - | 12 | | 705,1 | 634,5 | 990,8 | 891,7 | 1193,3 | 1074,4 | | | |
| | 2 | 36 | 19 | - | 12 | | 745,3 | 671,3 | 1051,0 | 945,9 | 1255,1 | 1129,5 | | | |
| 27 | 3 | 41 | 19 | - | - | | 1036,0 | 927,5 | 1448,9 | 1304,0 | 1734,6 | 1561,2 | | | |
| | 2 | 41 | 19 | - | - | | 1091,8 | 982,6 | 1530,6 | 1377,5 | 1836,7 | 1653,0 | | | |
| 30 | 3,5 | 46 | 22 | - | - | | 1307,9 | 1258,1 | 1989,3 | 1772,4 | 2357,1 | 2121,4 | | | |
| | 2 | 46 | 22 | - | - | | 1510,2 | 1359,1 | 2122,4 | 1910,2 | 2540,8 | 2286,7 | | | |
| 33 | 3,5 | 50 | 24 | - | - | | 2000,0 | 1800,0 | 2800,0 | 2520,0 | 3400,0 | 3060,0 | | | |
| | 2 | 50 | 24 | - | - | | 1610,0 | 1450,0 | 2300,0 | 2070,0 | 2690,0 | 2420,0 | | | |
| 36 | 4 | 55 | 27 | - | - | | 2600,0 | 2340,0 | 3700,0 | 3330,0 | 4300,0 | 3870,0 | | | |
| | 3 | 55 | 27 | - | - | | 2800,0 | 2520,0 | 3900,0 | 3510,0 | 4600,0 | 4140,0 | | | |
| 39 | 4 | 60 | 27 | - | - | | 3400,0 | 3060,0 | 4800,0 | 4320,0 | 5600,0 | 5040,0 | | | |
| | 3 | 60 | 27 | - | - | | 3600,0 | 3240,0 | 5100,0 | 4590,0 | 5900,0 | 5310,0 | | | |

| <i>Thread diameter</i> | <i>Pitch</i> | <i>Standard nuts</i> | | <i>Low nuts</i> | |
|------------------------|--------------|--|--|--|--|
| | |  <i>Nm</i> |  <i>Nm</i> |  <i>Nm</i> |  <i>Nm</i> |
| 4 | 0,7 | 5,5 | | 3,5 | |
| 5 | 0,8 | 5,5 | | 3,5 | |
| 6 | 1 | 9,5 | 13,0 | 6,0 | 8,0 |
| 8 | 1,25 | 23,0 | 32,0 | 14,0 | 20,0 |
| | 1 | 25,0 | 35,0 | 16,0 | 22,0 |
| 10 | 1,5 | 46,0 | 64,0 | 29,0 | 40,0 |
| | 1,25 | 49,0 | 68,0 | 31,0 | 42,0 |
| 12 | 1,75 | 80,0 | 110,0 | 50,0 | 69,0 |
| | 1,25 | 88,0 | 125,0 | 55,0 | 78,0 |
| 14 | 2 | 125,0 | 180,0 | 78,0 | 110,0 |
| | 1,5 | 140,0 | 195,0 | 88,0 | 120,0 |
| 16 | 2 | 195,0 | 275,0 | 120,0 | 170,0 |
| | 1,5 | 210,0 | 295,0 | 130,0 | 185,0 |
| 18 | 2,5 | 270,0 | 390,0 | 170,0 | 245,0 |
| | 1,5 | 305,0 | 425,0 | 190,0 | 265,0 |
| 20 | 2,5 | 305,0 | 540,0 | 190,0 | 340,0 |
| | 1,5 | 425,0 | 600,0 | 260,0 | 375,0 |
| 22 | 2,5 | 510,0 | 720,0 | 320,0 | 450,0 |
| | 1,5 | 570,0 | 800,0 | 360,0 | 500,0 |
| 24 | 3 | 660,0 | 930,0 | 410,0 | 580,0 |
| | 2 | 720,0 | 1000,0 | 450,0 | 630,0 |
| 27 | 3 | 980,0 | 1400,0 | 610,0 | 880,0 |
| | 2 | 1050,0 | 1500,0 | 660,0 | 940,0 |
| 30 | 3,5 | 1350,0 | 1850,0 | 850,0 | 1160,0 |
| | 2 | 1450,0 | 2050,0 | 910,0 | 1280,0 |
| 33 | 3,5 | 1650,0 | 2310,0 | 1050,0 | 1470,0 |
| | 2 | 1980,0 | 2770,0 | 1270,0 | 1780,0 |
| 36 | 4 | 2120,0 | 2970,0 | 1360,0 | 1900,0 |
| | 3 | 2550,0 | 3570,0 | 1630,0 | 2280,0 |
| 39 | 4 | 2730,0 | 3820,0 | 1750,0 | 2450,0 |
| | 3 | 3250,0 | 4550,0 | 2080,0 | 2910,0 |

2.14 DRILL DIAMETERS FOR THREADS

| <i>Thread x pitch</i> | <i>DRILL DIAMETER LIMITS</i> | | <i>DRILL BIT DIAMETER</i> |
|---------------------------|----------------------------------|------------|-------------------------------|
| | <i>max</i> | <i>min</i> | |
| M 4 x 0,7 | 3,42 | 3,24 | 3,30 |
| x 0,5 | 3,60 | 3,46 | 3,50 |
| M 5 x 0,8 | 4,33 | 4,13 | 4,20 |
| x 0,5 | 4,60 | 4,46 | 4,50 |
| M 6 x 1 | 5,15 | 4,92 | 5,00 |
| x 0,75 | 5,38 | 5,19 | 5,20 |
| M 8 x 1,25 | 6,91 | 6,65 | 6,80 |
| x 1 | 7,15 | 6,92 | 7,00 |
| M 10 x 1,5 | 8,87 | 8,38 | 8,50 |
| x 1,25 | 9,38 | 9,19 | 9,20 |
| M 12 x 1,75 | 10,44 | 10,10 | 10,20 |
| x 1,5 | 10,68 | 10,38 | 10,50 |
| M 14 x 2 | 12,21 | 11,83 | 12,00 |
| x 1,5 | 12,68 | 12,38 | 12,50 |
| M 16 x 2 | 14,21 | 13,84 | 14,00 |
| x 1,5 | 14,68 | 14,38 | 14,50 |
| M 18 x 2,5 | 15,74 | 15,29 | 15,50 |
| x 1,5 | 16,68 | 16,38 | 16,50 |
| M 20 x 2,5 | 17,74 | 17,29 | 17,50 |
| x 1,5 | 18,68 | 18,38 | 18,50 |
| M 22 x 2,5 | 19,74 | 19,29 | 19,50 |
| x 1,5 | 20,68 | 20,38 | 20,50 |
| M 24 x 3 | 21,25 | 20,75 | 21,00 |
| x 2 | 22,21 | 21,83 | 22,00 |
| M 27 x 3 | 24,25 | 23,75 | 24,00 |
| x 2 | 25,21 | 24,83 | 25,00 |
| M 30 x 3,5 | 26,77 | 26,21 | 26,50 |
| x 3 | 27,25 | 26,75 | 27,00 |
| M 33 x 3,5 | 27,77 | 29,21 | 29,50 |
| x 2 | 31,21 | 30,83 | 31,00 |
| M 36 x 4 | 32,27 | 31,65 | 32,00 |
| x 3 | 33,25 | 32,75 | 33,00 |
| M 39 x 4 | 35,27 | 34,67 | 35,00 |
| x 3 | 36,25 | 35,75 | 36,00 |

2.15 STANDARD TIGHTENING TORQUES FOR FITTING SEALS

■ **60° CONICAL SEALS**

| <i>Thread diameter</i> | | TIGHTENING TORQUES (0+10%) |
|------------------------|-----------|-----------------------------------|
| | | 60° CONICAL SEALS Nm |
| <i>inc.</i> | <i>mm</i> | |
| G 1/8" | | 15 |
| G 1/4" | M 10 x 1 | 20 |
| 9/16"-18 | | 25 |
| 11/16"-16 | | 40 |
| 13/16"-16 | | 55 |
| 3/4"-16 | | 62 |
| 1"-14 | | 80 |
| 7/8"-14 | | 80 |
| 1.1/16"-12 | | 110 |
| 1.3/16"-12 | | 115 |
| 1.5/16"-12 | | 160 |
| 1.7/16"-12 | | 130 |
| 1.11/16"-12 | | 190 |
| 1.5/8"-12 | | 225 |
| 1.7/8"-12 | | 270 |
| 2"-12 | | 245 |
| 2.1/4"-12 | | 360 |

■ **FRONT O-LOK (Parker) SEALS**

| <i>Thread diameter</i> | | TIGHTENING TORQUES (0+10%) |
|------------------------|-----------|--------------------------------------|
| | | FRONT O-LOK (Parker) SEALS Nm |
| <i>inc.</i> | <i>mm</i> | |
| 9/16"-18 | | 25 |
| 11/16"-16 | | 40 |
| 13/16"-16 | | 55 |
| 1"-14 | | 80 |
| 1.3/16"-12 | | 115 |
| 1.7/16"-12 | | 130 |
| 1.11/16"-12 | | 190 |
| 2"-12 | | 245 |

■ **37° COUNTER-SUNK CONICAL SEALS (JIC)**



| <i>Thread diameter</i> | | TIGHTENING TORQUES (0+10%) |
|------------------------|-----------|-----------------------------------|
| | | 37° CONICAL SEALS (JIC) Nm |
| <i>inc.</i> | <i>mm</i> | |
| 7/16"-20 | M10x1 | 15 |
| 1/2"-20 | M12x1.5 | 20 |
| 9/16"-18 | M14x1.5 | 28 |
| | M16x1.5 | 62 |
| 3/4"-16 | M18x1.5 | 62 |
| 7/8"-14 | M22x1.5 | 80 |
| 1.1/16"-12 | M27x2 | 110 |
| 1.3/16"-12 | | 141 |
| 1.5/16"-12 | M33x2 | 160 |
| 1.5/8"-12 | M42x2 | 225 |
| 1.7/8"-12 | M48x2 | 270 |
| 2.1/4"-12 | M10x1 | 360 |

TECHNICAL SPECIFICATIONS
■ SEALS WITH GRIP-RING

| Thread diameter | | Fitting Series | Pipe ø mm | TIGHTENING TORQUE (0+10%) |
|-----------------|---------|----------------|-----------|---------------------------|
| inc. | mm | | | SEALS WITH GRIP-RING Nm |
| G 1/8" | M10x1 | LL | 4 | 10 |
| G 1/8" | M10x1 | LL | 6 | 10 |
| G 1/8" | M10x1 | L | 6 | 25 |
| G 1/4" | M12x1.5 | L | 8 | 50 |
| G 1/4" | M14x1.5 | L | 10 | 50 |
| G 1/8" | M20x1.5 | L | 12 | 130 |
| G 1/8" | M20x1.5 | L | 15 | 190 |
| G 1/8" | M20x1.5 | L | 18 | 245 |
| G 1/8" | M20x1.5 | L | 22 | 130 |
| G 1/8" | M20x1.5 | L | 28 | 190 |
| G 1/8" | M20x1.5 | L | 35 | 245 |
| G 1/8" | M20x1.5 | L | 42 | 245 |
| G 1/4" | M12x1.5 | S | 6 | 50 |
| G 1/4" | M14x1.5 | S | 8 | 50 |
| G 3/8" | M16x1.5 | S | 10 | 80 |
| G 3/8" | M18x1.5 | S | 12 | 80 |
| G 1/2" | M22x1.5 | S | 16 | 105 |
| G 3/4" | M27x2 | S | 20 | 220 |
| G 1" | M33x2 | S | 25 | 370 |
| G 1.1/4" | M42x2 | S | 30 | 500 |
| G 1.1/2" | M48x2 | S | 38 | 600 |

■ FITTING ASSEMBLY

| Thread diameter | TIGHTENING TORQUES (0+10%) | |
|-----------------|----------------------------|-----|
| | JOINTS | |
| inc. | mm | Nm |
| G 1/8" | M10x1 | 25 |
| | M12x1.5 | 30 |
| G 1/4" | | 40 |
| | M14x1.5 | 50 |
| | M16x1.5 | 60 |
| | M18x1.5 | 80 |
| G 3/8" | | 95 |
| | M20x1.5 | 140 |
| G 1/2" | M22x1.5 | 140 |
| | M26x1.5 | 220 |
| G 3/4" | | 250 |
| | M27x2 | 250 |
| G 1" | | 400 |
| | M33x2 | 400 |
| G 1.1/4" | | 600 |
| | M42x2 | 600 |
| G 1.1/2" | | 800 |
| | M48x2 | 800 |
| | | 350 |

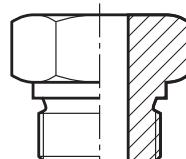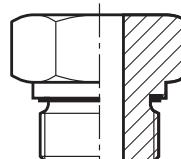
A

B

A Male face
Mechanical seal or copper washer

B Male face
Soft seal with O-ring

2.16 LOCKING MATERIAL

THREAD LOCKERS

| Product | APPLICATION | Characteristics | Locking | Resistance |
|-------------|----------------|-----------------|---------|------------|
| | | Temp. °C | Thread | speed |
| Loctite 290 | Thread locking | to 150° | M 12 | Rapid |
| Loctite 222 | Thread locking | to 150° | M 20 | Moderate |
| Loctite 243 | Thread locking | to 150° | M 20 | Rapid |
| Loctite 262 | Thread locking | to 150° | M 20 | Moderate |
| Loctite 270 | Thread locking | to 150° | M 20 | Moderate |
| Loctite 277 | Thread locking | to 150° | M 36 | Slow |
| Loctite 272 | Thread locking | to 200° | M 36 | Slow |

THREAD SEALANT *For hermetic sealing. Not suitable for thermoplastic materials*

| Product | APPLICATION | Characteristics | | Locking | Disassembly |
|-------------|-----------------|-----------------|------------|-----------|---------------|
| | | max °C | Thread max | speed | difficulty |
| | | | type | | |
| Loctite 511 | Fitting sealant | 150° | M80 | Con./Cyl. | Rapid |
| Loctite 542 | Fitting sealant | 150° | M36 | Con./Cyl. | Rapid |
| Loctite 545 | Fitting sealant | 150° | M36 | Con./Con. | Moderate |
| Loctite 565 | Fitting sealant | 150° | M80 | Con./Cyl. | Instantaneous |
| Loctite 572 | Fitting sealant | 150° | M80 | Con./Cyl. | Moderate |
| Loctite 577 | Fitting sealant | 150° | M80 | Con./Cyl. | Rapid |

GASKETS *Total sealing in 24-72 hours*

| Product | APPLICATION | Characteristics | | Formation | Resistance |
|--------------|------------------------|-----------------|-------------|---------------|------------|
| | | max °C | Play max mm | time | to fluids |
| Loctite 518 | Formed-in-place gasket | 150° | 0,5 | Moderate | Excellent |
| Loctite 509 | Formed-in-place gasket | 150° | 0,2 | Moderate | Excellent |
| Loctite 573 | Formed-in-place gasket | 150° | 0,2 | Slow | Excellent |
| Loctite 574 | Formed-in-place gasket | 150° | 0,5 | Rapid | Excellent |
| Loctite 510 | Formed-in-place gasket | 200° | 0,2 | Moderate | Excellent |
| Loctite 5699 | Formed-in-place gasket | 200° | 6,0 | Rapid | Excellent |
| Loctite 5999 | Formed-in-place gasket | 200° | 6,0 | Instantaneous | Excellent |
| Loctite 5910 | Formed-in-place gasket | 200° | 6,0 | Rapid | Excellent |
| Loctite 5900 | Formed-in-place gasket | 200° | 6,0 | Instantaneous | Excellent |
| Loctite 5920 | Formed-in-place gasket | 250° | M 36 | Slow | Good |

2.17 HOISTING INSTRUCTIONS

DANGER

All parts weighing more than 25 kg MUST COMPULSORILY be handled with suitable hoisting means.

In the Disassembly and Assembly section there is a clear indication of the weight of the part to handle, while chapter A.12 contains a summary table with the weight of the single components.

Before removing parts of the machine, make sure that:

- all fixing bolts have been removed
- all hydraulic and electrical parts have been disconnected
- the part to be removed is not blocked.


STRANDED ROPES

- Use ropes or other hoisting accessories suitable to the weight of the part to be handled. For ropes, refer to the following table:


| STRANDED ROPES | |
|---------------------|---------------------------|
| Rope diameter mm | Max admissible load kg |
| 10 | 1000 |
| 11.2 | 1400 |
| 12.5 | 1600 |
| 14 | 2200 |
| 16 | 2800 |
| 18 | 3600 |
| 20 | 4400 |
| 22.4 | 5600 |
| 30 | 10000 |
| 40 | 18000 |
| 50 | 28000 |
| 60 | 40000 |

The value of the admissible load has been considered as equal to 1/6 the rope breaking load.

- Attach the load to the natural seat of the hook. Attaching a load to an end can cause the load to fall down during raising and result in serious injury.

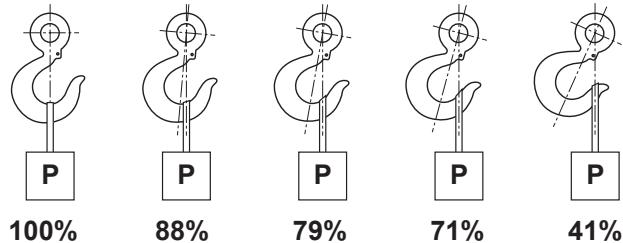

- Do not attach a heavy load to ropes forming a wide suspension angle. The total capacity of the ropes reduces proportionally to the angle as shown in the following chart.

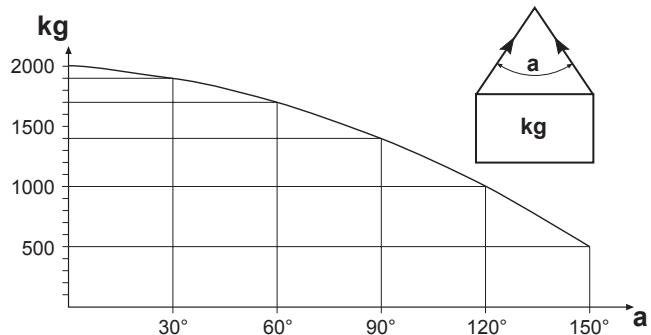

2.18 ADVICE TO RENEW FLEXIBLE HOSES

NOTICE

Before disconnecting a hydraulic pipe, place containers of suitable size underneath to prevent oil spillage.

CAUTION

Plug all disconnected parts to prevent dust or impurities from entering the circuit. They can cause serious damage.

DANGER


Before disconnecting the hydraulic pipe, check that there is no residual pressure. In case, eliminate the pressure operating the control levers with the engine stopped.

In any case, disconnect the hydraulic pipe with extreme caution and always wear suitable personal protection equipment -e.g. goggles, gloves, facial screen, etc.

Wrap up the end of the pipe to be disconnected with some rags and slowly loosen the pipe connector so that air comes out as slow as possible.

- 1 Before disconnecting or refitting a flexible hose, carefully clean the area all around.
- 2 Blow some compressed air to remove any impurity.
- 3 For an easier renewal of the hoses, whose run is not clearly visible, proceed as follows:
 - disconnect the hose to be replaced from both sides
 - tie a cord to one end of the hose
 - remove the hose pulling the cord until it comes out completely
 - untie the cord and tie it to the new hose
 - pull the cord from the other side to refit the hose until reaching the connecting point to the line.

Useful advice for mounting flexible hoses:

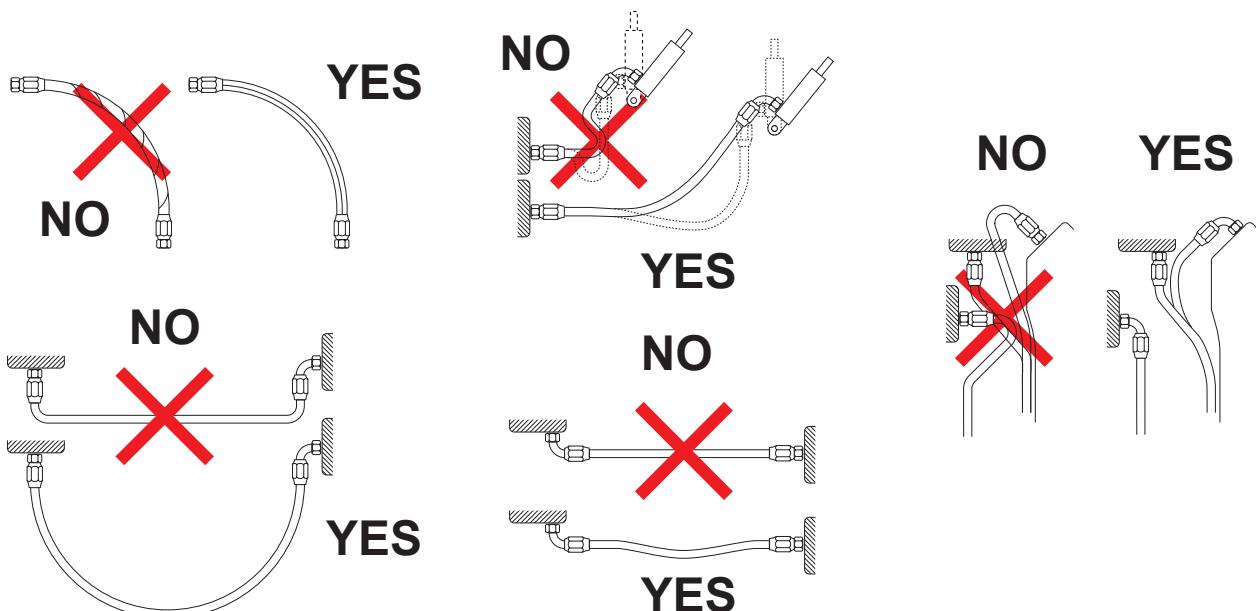

2.19 LISTS OF RECOMMENDED SPARE PARTS

| Code | Description | Q.ty |
|--------------|--|------|
| 07.0700.0023 | Oil filter cartridge (inside the tank) | 1 |
| 09.4604.0004 | Hydraulic oil filter | 1 |
| 07.0700.0037 | Primary engine air filter element | 1 |
| 07.0700.0036 | Safety engine air filter element | 1 |
| 07.0723.0149 | Cab air filter | 1 |
| 07.4501.0139 | Fuel filter | 1 |
| 07.4501.0138 | Engine oil filter | 1 |
| 07.0705.0093 | Solenoid | 1 |
| 07.0705.0096 | Solenoid | 1 |
| 07.0705.0099 | Solenoid | 1 |
| 07.0728.0007 | Solenoid | 2 |
| 07.0709.0417 | Seals kit | 2 |
| 07.0701.0200 | Seals kit | 1 |
| 07.4529.0112 | Seals kit | 1 |
| 07.0701.0210 | Seals kit | 1 |
| 07.4529.0027 | Seals kit | 1 |
| 639395 | Seals kit | 1 |
| 07.0705.0081 | Seals kit | 1 |
| 640096 | Seals kit | 1 |
| 639993 | Seals kit | 1 |
| 635965 | Seals kit | 1 |
| 07.0705.0085 | Seals kit | 1 |
| 639992 | Seals kit | 1 |
| 07.0705.0082 | Seals kit | 1 |
| 07.0700.0028 | Restriction indicator | 1 |
| 07.0738.0003 | Star wheel | 1 |
| 53.3001.5400 | Manifold | 1 |
| 53.3001.5500 | Manifold | 1 |
| 07.0701.0007 | Coil | 2 |
| 07.0701.0209 | Solenoid valve | 2 |
| 07.0703.0479 | Speed switch | 1 |
| 07.0703.0472 | Ignition switch | 1 |
| 07.0704.0118 | Red cap | 2 |
| 07.0704.0117 | Pushbutton | 2 |
| 07.0704.0119 | Yellow cap | 2 |
| 04.4239.0004 | Valve on balance cylinder | 1 |
| 07.0703.0081 | 2A fuse | 2 |
| 07.0703.0080 | 5A fuse | 2 |
| 634972 | 7.5A fuse | 2 |
| 07.0703.0148 | 10A fuse | 2 |
| 634973 | 15A fuse | 2 |
| 634975 | 20A fuse | 2 |
| 07.0703.0060 | 50A fuse | 1 |
| 07.4501.0059 | Relay | 1 |
| 57.0008.6100 | Operator's manual (ITA) | 1 |
| 57.0008.6200 | Operator's manual (GB) | 1 |
| 57.0409.9000 | Spare parts catalogue (ITA) | 1 |
| 57.0410.0000 | Spare parts catalogue (GB) | 1 |

| Code | Description | Q.ty |
|--------------|--|-------------|
| 09.4618.0644 | Sticker: GTH-5519 32x5 (white) | 1 |
| 97664 | Sticker: Risk of crushing-English | 1 |
| 09.4618.0641 | Sticker: Genie 50x14 (white) | 1 |
| 09.4618.0061 | Sticker: Tyre inflation pressure (4.5 Bar) | 1 |
| 09.4618.0010 | Sticker: Prohibition to open with the engine running | 1 |
| 97673 | Sticker: Prohibition to lift people-English | 2 |
| 09.4618.0782 | Sticker: Connect./disconnect. quick coupling | 1 |
| 09.4618.0643 | Sticker: Genie GTH-5519 130x15 (white) | 1 |
| 09.4618.0777 | Sticker: Testing ports Tp2, Tp3 | 1 |
| 97675 | Sticker: Risk of explosion-English | 1 |
| 97671 | Sticker: Risk of explosion-English | 1 |
| 97665 | Sticker: Safety belts-English | 1 |
| 97668 | Sticker: Risk of overturning-English | 1 |
| 97676 | Sticker: Electrical hazard-English | 1 |
| 97670 | Sticker: Risk of crushing-English | 1 |
| 97672 | Sticker: Risk of crushing-English | 1 |
| 97666 | Sticker: Read the user's manual-English | 1 |
| 97669 | Sticker: Risk due to falling objects-English | 1 |
| 09.4618.0205 | Sticker: Boom tilting degree | 1 |
| 97674 | Sticker: Risk of crushing-English | 1 |
| 97688 | Sticker: Emergency exit handle-English | 1 |
| 82558 | Sticker: Fluid at pressure-English | 1 |
| 09.4618.0776 | Sticker: Upper door unlock system | 1 |
| 09.4616.0051 | Decal: Hydraulic oil | 1 |
| 09.4618.0783 | Decal: Load chart | 1 |
| 09.4618.0389 | Decal: Control lever controls | 1 |
| 09.4618.0780 | Decal: Continuous flow knob | 1 |
| 09.4618.0781 | Decal: Flow reversal button | 1 |
| 09.4618.0109 | Sticker with various warnings | 1 |
| 09.4616.0101 | Machine data plate | 1 |
| 09.4618.0778 | Sticker: Testing ports Tp1 | 1 |
| 09.4618.0779 | Sticker: Testing ports Tp4 | 1 |
| 56.0013.0001 | Fuel gauge | 1 |
| 07.0723.0042 | Mirror | 1 |
| 09.0803.0228 | Left mud-guard | 1 |
| 09.0803.0229 | Right mud-guard | 1 |
| 09.4645.0030 | Cable | 1 |
| 09.4670.0004 | Vibration-proof support | 1 |
| 07.0723.0446 | Wiper blade | 1 |
| 07.0723.0037 | Wiper blade | 1 |
| 07.0723.0024 | Mirror | 1 |
| 07.0703.0088 | Switch | 1 |
| 07.0703.0476 | Switch | 1 |
| 641065 | Switch | 1 |
| 54.0702.0013 | Sliding guide | 2 |
| 54.0702.0000 | Sliding guide | 4 |
| 54.0702.0001 | Sliding guide | 2 |
| 54.0702.0002 | Sliding guide | 2 |
| 54.0702.0005 | Sliding guide | 2 |
| 51.0809.3900 | Boom shim | 2 |

| Code | Description | Q.ty |
|--------------|---|-------------|
| 51.0804.9000 | Boom shim | 4 |
| 04.4210.0019 | Quick coupling: F 1/2" Faster Art. 2FFI12GASF | 2 |
| 04.4210.0018 | Quick coupling: M 1/2" Faster Art. FFI12GASM | 2 |
| 04.4239.0005 | Block valve | 1 |
| 04.4239.0005 | Block valve | 1 |
| 04.4239.0052 | Block valve | 1 |
| 04.4240.0052 | Solenoid valve | 1 |
| 56.0006.0002 | Relay: 12v 20/30A | 2 |
| 04.0605.0612 | Flex hose | 1 |
| 04.0605.0615 | Flex hose | 1 |
| 04.0605.0613 | Flex hose | 1 |
| 04.0605.0614 | Flex hose | 1 |
| 52.1100.7500 | Carter | 1 |
| 09.4604.0047 | Hydraulic oil filter | 1 |
| 09.4604.0052 | Air filter complete | 1 |
| 05.4309.0001 | Brake pump | 1 |
| 07.0704.0133 | Joystick | 1 |
| 07.0704.0042 | Valve | 1 |
| 04.4239.0002 | Block valve | 1 |
| 07.0722.0023 | Valve | 1 |
| 04.4237.0010 | Complete servo-control | 1 |
| 04.4239.0051 | Block valve | 1 |

2.20 MACHINE PAINT COLOUR

GENIE machines

BLU GENIE

GRIGIO GENIE

NERO RAL 9500

2.21 CHECKING THE CYLINDER MOVEMENT TIMES

CAUTION

The check of the movement times of the cylinders shall be done with the hydraulic oil at a temperature of 60°.

CAUTION


To check the engine speed, the area easy to reach is the shaft of the CASAPPA pump.

Min engine speed = 950 rpm

Max engine speed = 2600 rpm


BOOM LIFTING/LOWERING

| GTH 55-19 | | Time (s) | |
|--------------------------|--|----------|------|
| | | up | down |
| Max engine speed | | 7" | 4" |
| Min. engine speed | | 18" | 11" |

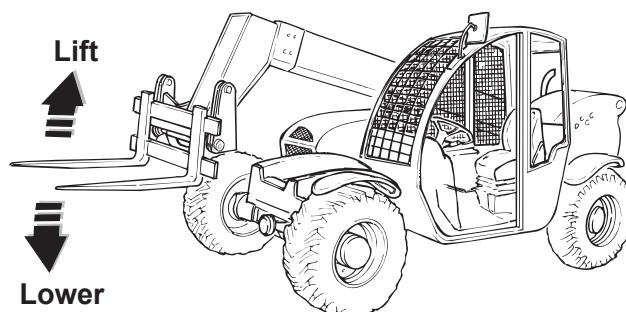


BOOM EXTENSION/RETRACTION

| GTH 55-19 | | Time (s) | |
|--------------------------|--|----------|-----|
| | | out | in |
| Max engine speed | | 7" | 4" |
| Min. engine speed | | 19" | 11" |

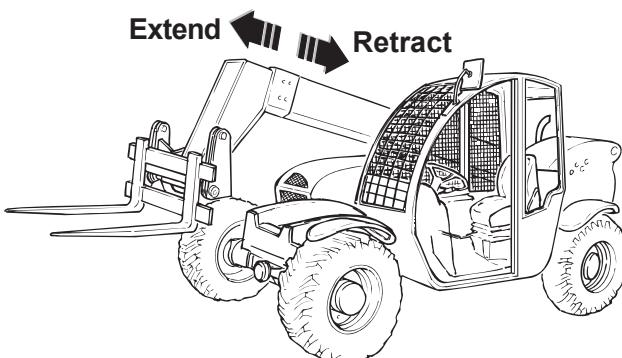

ATTACHMENT DUMPING

| GTH 55-19 | | Time (s) | |
|--------------------------|--|----------|-----------|
| | | dumping | roll-back |
| Max engine speed | | 3" | 4" |
| Min. engine speed | | 7" | 10" |

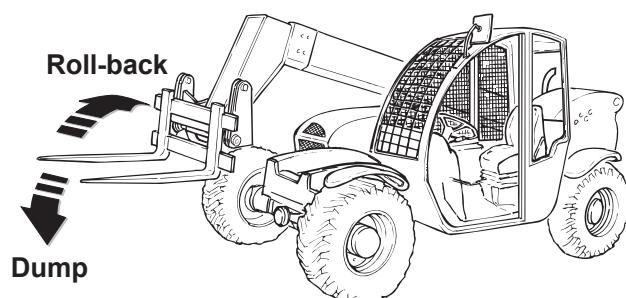

2.22 HYDRAULIC SETTINGS

1. PRELIMINARY OPERATIONS


Check that the engine idle is set at 950 rpm and that the engine maximum speed is set at 2600 rpm.

Warm up the hydraulic oil to 60°C by keeping one of the elements of the boom main valve to full stroke under pressure.

To reach this temperature in a faster way, cover the oil core of the radiator with a carton in the case of a water-oil combined cooler, or the oil radiator if the machine is equipped with a separate oil radiator.

2. CALIBRATING THE BOOM MAIN VALVE


Open the engine bonnet, find the mini-socket **ref. 9** (see **picture below**) and fit a 0-400 bar pressure gauge (0-5972 psi) to this socket.

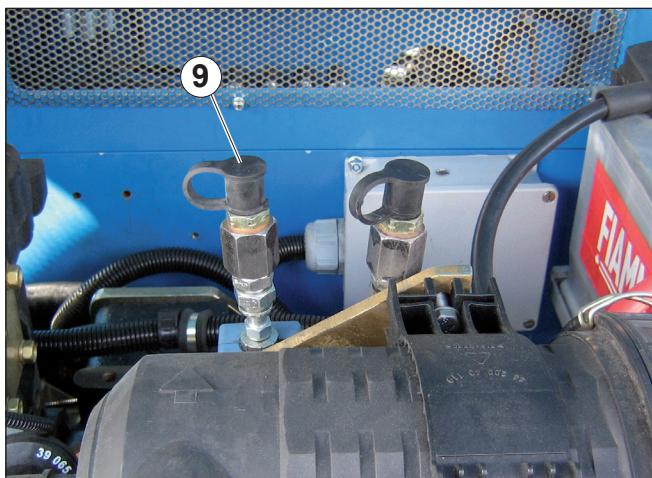

- Increase the pressure of valve **A** of the main valve to 300 bar moving the lifting cylinder to end of stroke (fully out).
- With the engine running at maximum speed, tilt the forks to one direction by means of the joystick and act on one of the two valves **B** until reaching a pressure of 290 bar. Adjust the second valve **B** by pitching the forks back.
- When both fork inclination valves have been calibrated, reset the pressure control valve to 270 bar (3915 psi) by adjusting the adjustment screw **A**.

CAUTION

For safety reasons, do not hold the cylinder to end of stroke and do not let the engine run at max speed for more than 5 seconds.

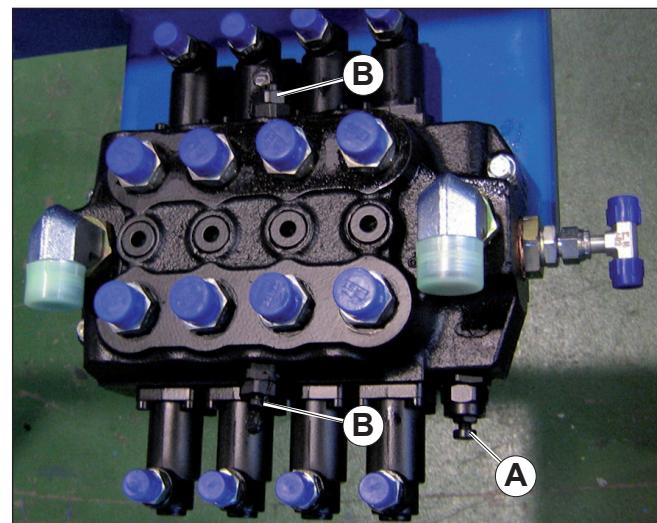

2.1 CALIBRATING THE MAIN VALVE PRESSURE CONTROL VALVE

Remove the central protective cover of the machine and, with a 13mm wrench, loosen the locknut of the pressure relief valve **A** of the main valve (see **annex 1**).

With the engine running at max speed, move the boom fully up and to end of stroke by operating joystick **1**, and set valve **A** to 270 bar (3915 psi).


For the inspection of the safety valves **B**, proceed as follows:

- Connect a 0-400 bar (0-5972 psi) manometer to the mini-socket **ref. 9**.

3. SETTING THE HYDROMATIK PUMP HYDROSTATIC TRANSMISSION

Do the calibration of the hydrostatic transmission with the hydraulic oil at 60°C.

- Connect a 0-60 bar (868 psi) manometer **A** to the mini-socket **ref. 4** to read the boost pressure value (see **annex 1**).
- Connect a 0-600 bar (0-8688 psi) manometer **B** to the mini-socket **ref. 5** to read the high-pressure value.

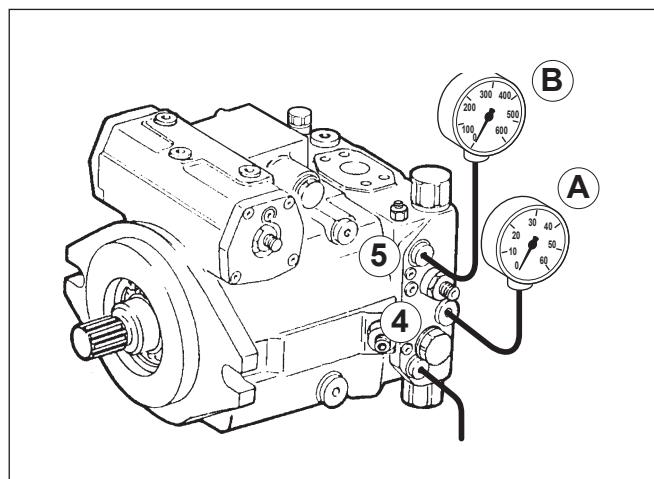


WARNING

Do not fit the manometer to the application point corresponding to the reverse speed. This operation is extremely dangerous for the serviceman who is calibrating the transmission.

- Hold the selector to neutral position and make sure the maximum speed of the engine does not exceed 2600 rpm. The engine must run at a idle speed of 950 rpm. Otherwise, adjust the minimum speed.
- Read the boost pressure on manometer **A** and ensure it is about 30 bar with the engine running at idle speed.
The boost pressure has not a fixed value but varies from pump to pump.
- Hold the machine blocked by disconnecting the power plug of the solenoid valve controlling the parking brake.

STARTING THE CALIBRATION


- Set the forward-neutral-reverse selector to the forward or reverse position.
- Run the engine at 1200 rpm. Check the value on the tachometer.
- Adjust shutter **D** by means of the register until reading a value of 50 bar (724 psi) on the high-pressure manometer **B**.

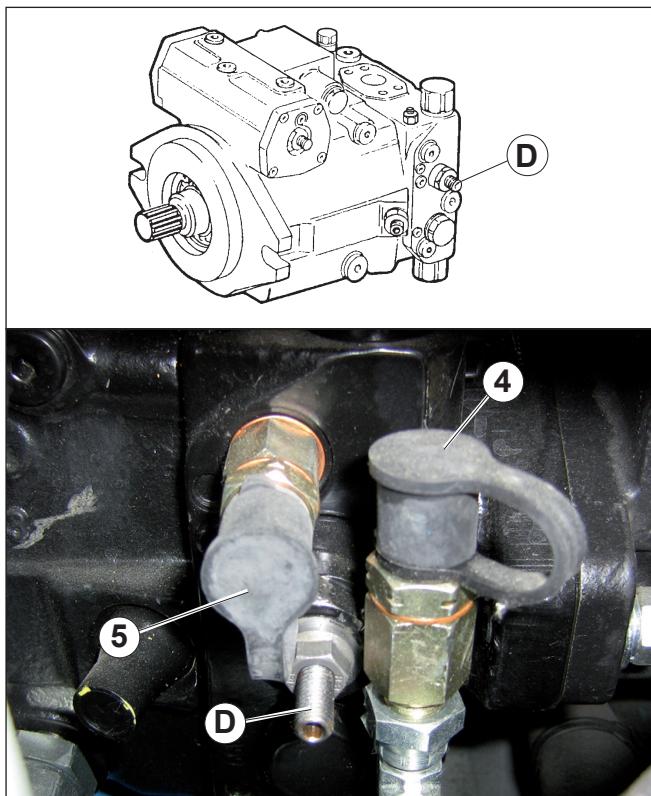

3.1 CALIBRATION OF THE MAXIMUM PRESSURE

Do this operation with extreme caution. The proper functioning of pump and transmission depends on this calibration.


- Set the forward-neutral-reverse selector to the forward position.
- Run the engine at maximum speed and check the high-pressure value on the manometer **B**. If this value is less than 430 bar (6235 psi), increase the pressure to 430 bar (6235 psi) by means of the pressure cut-off valve **E**.
- Remove the manometers and do an attempt.

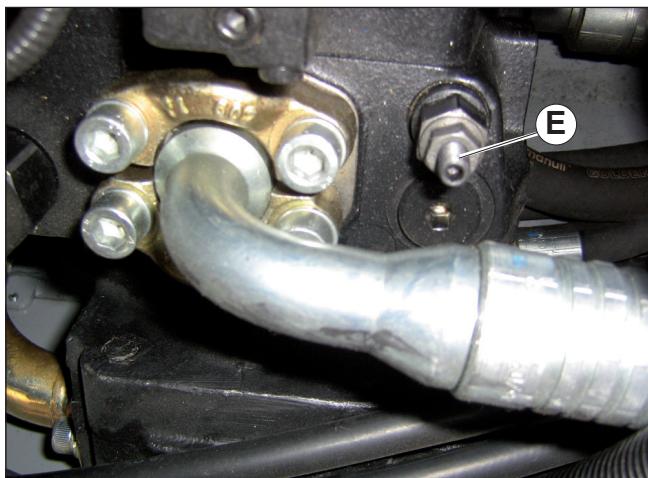

4. CALIBRATING THE POWER STEERING


- Fit a coupling complete with mini-socket **Z** in the position shown in **annex 2**.
- Fit a 0-250 bar pressure gauge (0-3620 psi) to the mini-socket **Z**.
- Select the front axle steering mode.
- Move the steering cylinder to stroke end and make sure the value of the power steering **A** is 170 bar (2465 psi). If the value is less, tighten valve **X**; if the value is greater, loosen the valve.

Note: To gain access to valve **X**, remove the protection cap (see **annex 2**).

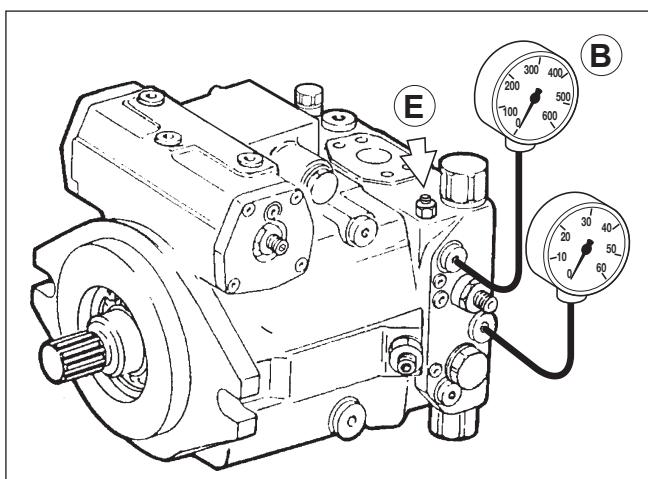


HYDRAULIC SYSTEM - MAIN VALVE


annex 1

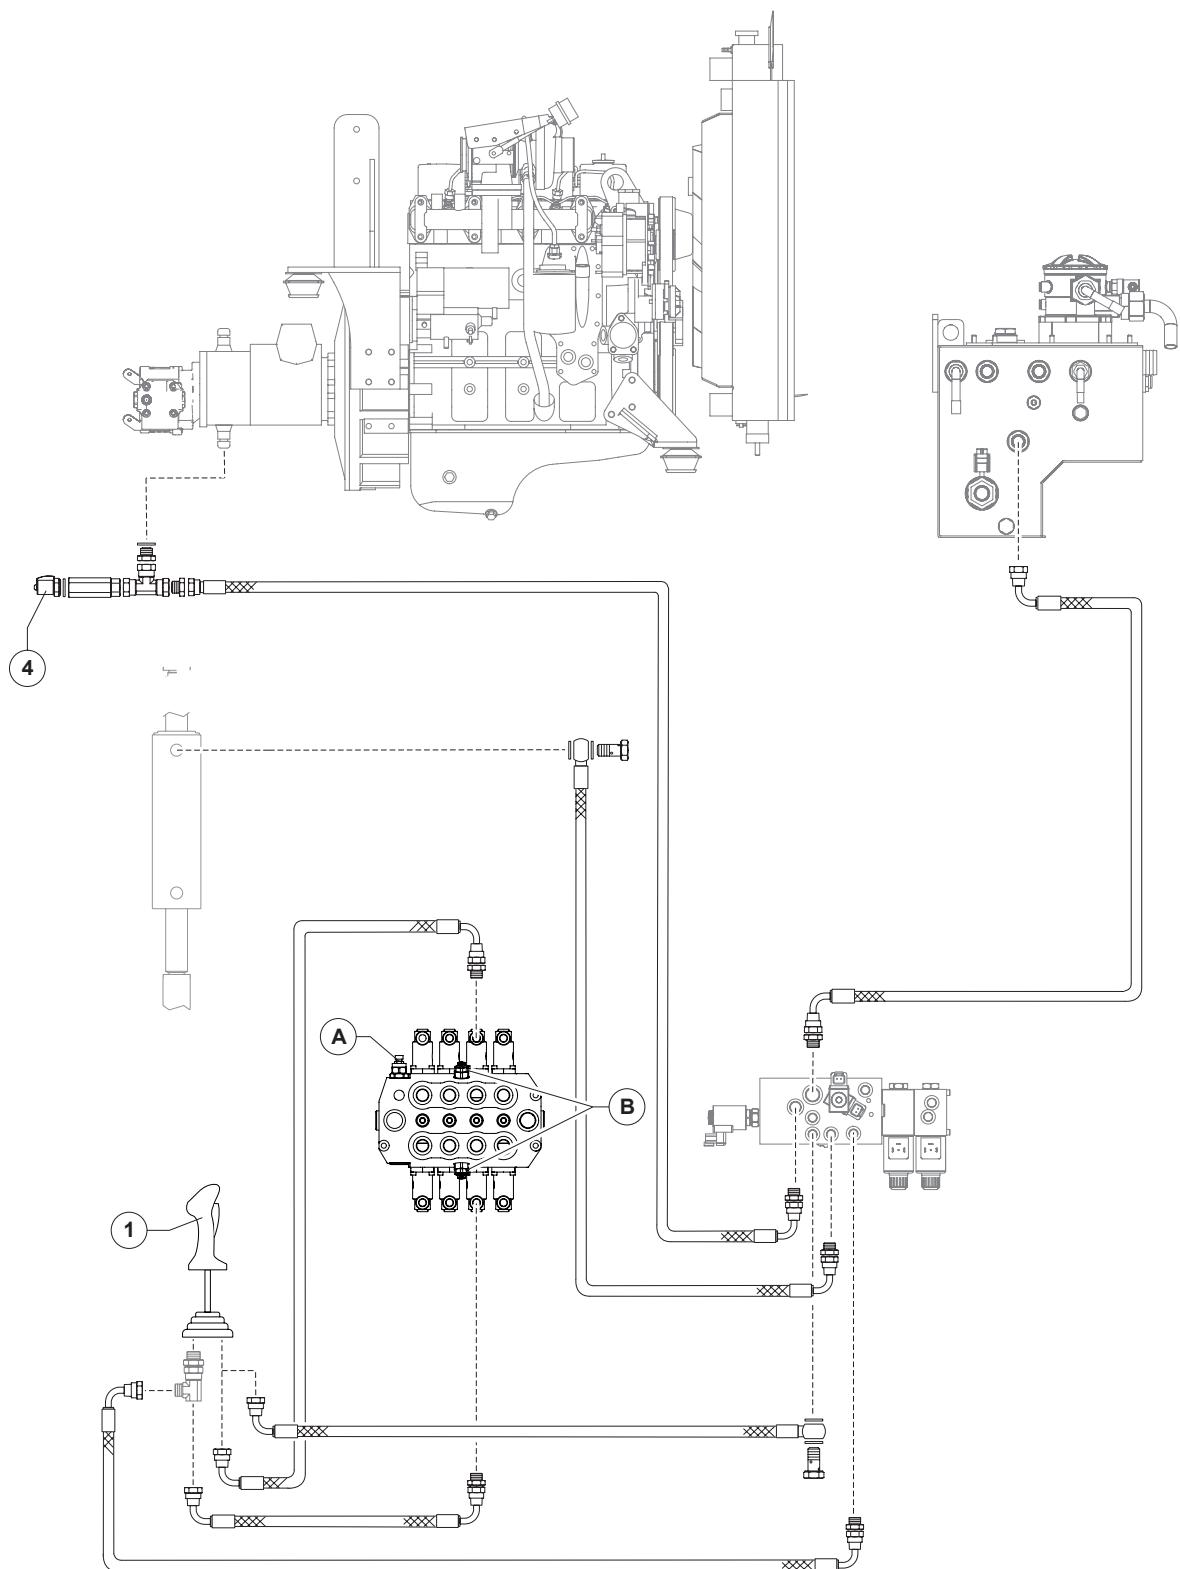

POWER STEERING SYSTEM

annex 2

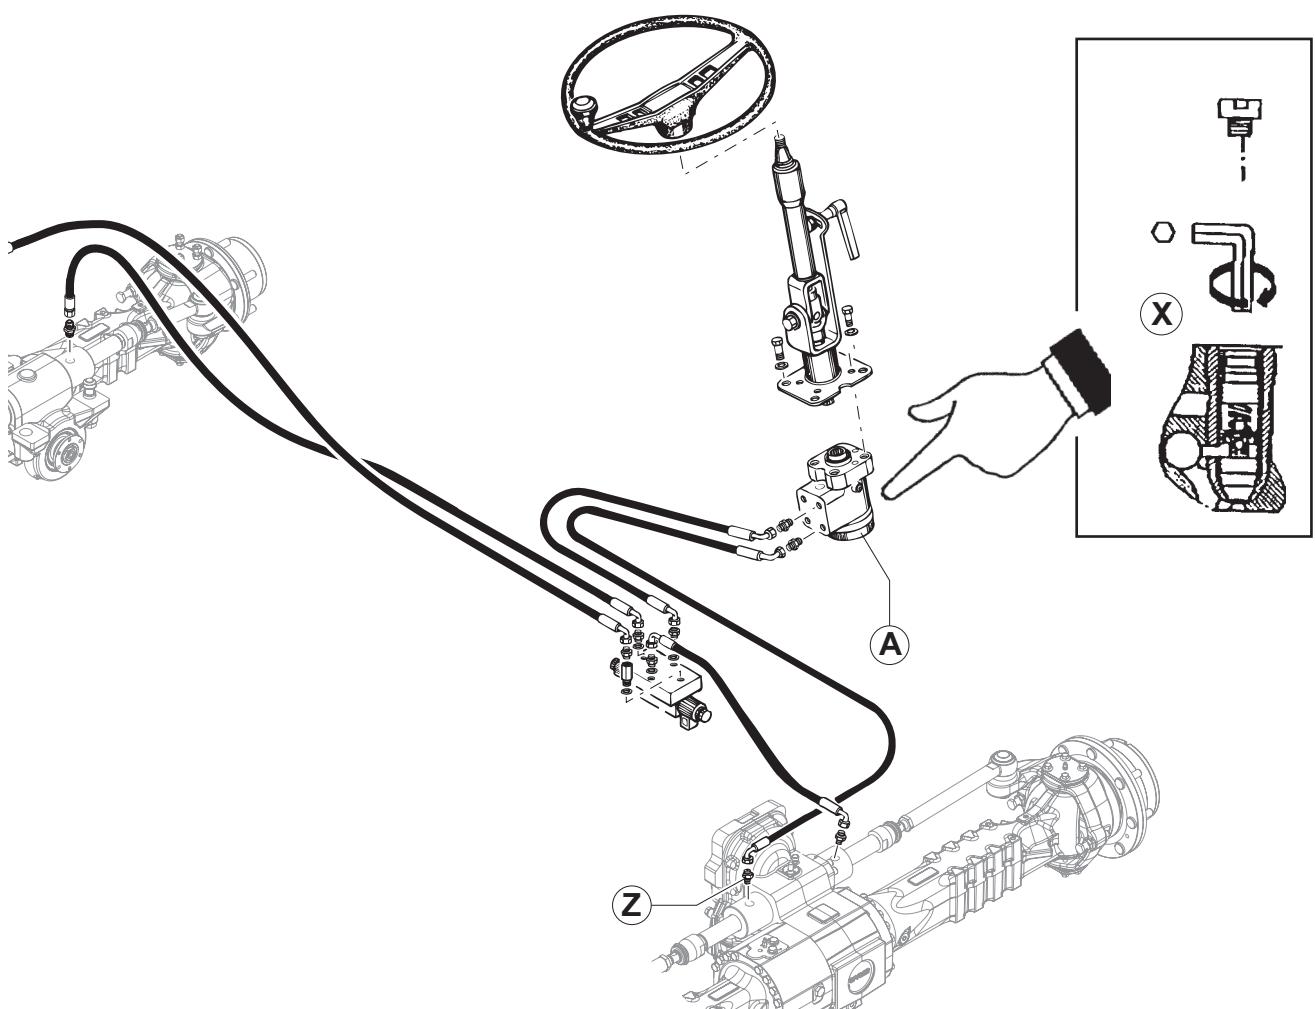

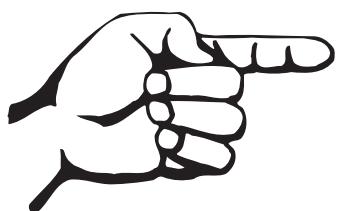

Intentionally blank page

Section 3

SCHEDULED MAINTENANCE

INSPECTIONS

SECTION INDEX

| | | | |
|-----|-------------------------------------|------|---|
| 3.1 | Introduction..... | page | 2 |
| 3.2 | About this section | | 3 |
| 3.3 | Maintenance table | | 4 |
| 3.4 | Maintenance inspection report | | 7 |

3.1 INTRODUCTION



- *Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.*
- *Scheduled maintenance must be carried out at the intervals indicated in the MAINTENANCE REPORT.*

WARNING

Failure to properly complete each inspection when required may cause death, serious injury or substantial machine damage.

- *Immediately tag and remove from service a damaged or malfunctioning machine.*
- *Repair any machine damage or malfunction before operating machine.*

3.2 ABOUT THIS SECTION

Intervention times

Maintenance interventions have been divided into 7 different groups in relation to the time at which they must be carried out, say daily, weekly, monthly, every 6 months, yearly, every 2 years and at 5 years (afterwards every 2 years).

For ease of use, the service intervals have been grouped in different tables, as explained below:

| Inspection | Table |
|---------------------------------------|-------------|
| Daily | A |
| Weekly | A+B |
| Monthly | A+B+C |
| Six month | A+B+C+D |
| Yearly | A+B+C+D+E |
| Every 2 years | A+B+C+D+E+F |
| At 5 years (afterwards every 2 years) | G |

Maintenance table

The maintenance table contains general information on the type of intervention to be carried out at a certain interval.

For the explanation of the maintenance jobs to be done, please refer to chapter 4 "Maintenance Procedures".

Maintenance inspection report

The maintenance report summarises all of the interventions to be carried at a given interval and lets the maintenance technician note the result of the check or intervention carried out.

This card can be photocopied to be used at the different service intervals and to keep a trace of all interventions carried out.

3.3 MAINTENANCE TABLE**TABLE A*****During the first 10 working hours:***

- A-1** Check the oil level within reduction gears, power divider and differential gears.
- A-2** Check the tightening of the wheel bolts.
- A-3** Check the tightening of all bolts and nuts.
- A-4** Check the couplings for oil leaks.

Every 10 working hours or daily:

- A-5** Inspect the Operator Manual.
- A-6** Inspect the decals and placards.
- A-7** Check the engine oil level
- A-8** Clean the air suction filter.
- A-9** Check and clean the radiator.
- A-10** Check the hydraulic oil level in the tank.
- A-11** Check the greasing of the boom section pads.
- A-12** Grease the forks.
- A-13** Grease all joints of the boom, the rear axle shaft joint, the transmission shafts, the front and rear axles and any equipment of the machine.
- A-14** Check the efficiency of the lighting electric system.
- A-15** Check the efficiency of braking system and parking brake.
- A-16** Check the efficiency of the steering selection system.
- A-17** Check the efficiency of the fork balancing system.
- A-18** Make sure the safety devices installed are in efficient working order.
- A-19** Check the engine coolant level.

TABLE B***Within the first 50 working hours:***

B-1 Change the engine oil.

Every 50 working hours or weekly:

B-2 Check the tension of the alternator belt.

B-3 Check the tyre inflation.

B-4 Check the tightening of the wheel nuts.

B-5 Check the tightening of the cardan shaft screws.

TABLE C***Every 250 working hours or monthly:***

C-1 Change the engine oil and relevant filter.

C-2 Check the oil level in the front and rear differential gears and the power divider.

C-3 Check the oil level in the four wheel reduction gears.

C-4 Check the cartridge of the engine air filter. Replace, if necessary.

C-5 Check the clamping of the cableheads to the battery terminals.

C-6 Check the air suction hose between engine and filter.

C-7 Check the cylinder chromium-plated rods.

C-8 Check the hydraulic lines are not worn because of rubbing against the frame or other mechanical components.

C-9 Check the electric cables do not rub against the frame or other mechanical components.

C-10 Check the wear of the sliding pads of the boom sections.

C-11 Adjust the play of the sliding pads of the boom sections.

C-12 Remove any grease from the boom, then re-grease the sliding parts of the boom sections.

C-13 Check the level of the battery electrolyte.

C-14 Check the efficiency of the block valves.

TABLE D

Every 500 working hours or every six months:

- D-1** Visually check the smoke quantity evacuated from the engine exhaust.
- D-2** Check the tightening of the engine fixing screws.
- D-3** Check the tightening of the cab fixing screws.
- D-4** Check the backlash between pins and bushings in all joints.
- D-5** Change the cartridge of the hydraulic oil filter.
- D-6** Change the cartridge of the hydraulic oil filter in the tank.
- D-7** Have the hydraulic system checked by a skilled technician.
- D-8** Change the cartridge of the engine air filter.
- D-9** Clean or replace, if necessary, the air filter in the cab.

TABLE E

Every 1000 working hours or yearly:

- E-1** Change the inner element of engine air filter.
- E-2** Change the oil in the front and rear differential units and in the power divider.
- E-3** Change the oil in the four wheel reduction gears.
- E-4** Change the hydraulic oil.

TABLE F

Every 2000 working hours or every 2 years:

- F-1** Change the engine coolant.

TABLE F

At 6000 hours or 5 years and, subsequently, every 2 years:

- G-1** Checking the state of the structure.

3.4 MAINTENANCE INSPECTION REPORT

| | | | |
|---|--------------------------------------|--|--|
| Model | | | |
| Serial number | | | |
| Date | | | |
| Hour meter | | | |
| Machine owner | | | |
| Inspected by | | | |
| Inspector signature | | | |
| Inspector title | | | |
| Inspector company | | | |
| Instructions: | | | |
| <ul style="list-style-type: none"> - Make copies of this page to use for each inspection. - Select the appropriate checklist(s) for the type of inspection to be performed. | | | |
| <input type="checkbox"/> | Every 10 hours: A | | |
| <input type="checkbox"/> | Every 50 hours: A+B | | |
| <input type="checkbox"/> | Every 250 hours: A+B+C | | |
| <input type="checkbox"/> | Every 500 hours: A+B+C+D | | |
| <input type="checkbox"/> | Every 1000 hours: A+B+C+D+E | | |
| <input type="checkbox"/> | Every 2000 hours: A+B+C+D+E+F | | |
| <input type="checkbox"/> | At 6000 hours: G | | |

- Place a check in the appropriate box after each inspection procedure is completed.
- Use the maintenance tables in this section and the step-by-step procedures in section 4 to learn how to perform these inspection.
- If any inspection receives an "N", tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the "R" box.

Legend:

Y = yes, acceptable

N = no, remove from service

R = repaired.

Table A Y N R

During the first 10 working hours:

| | | |
|--|--|--|
| A-1 Oil level within reduction gears, power divider and differential gears. | | |
| A-2 Tightening of the wheel bolts. | | |
| A-3 Tightening of all bolts and nuts. | | |
| A-4 Check the couplings for oil leaks. | | |

Every 10 working hours:

| | | |
|---|--|--|
| A-5 Operator Manual. | | |
| A-6 Decals and placards. | | |
| A-7 Engine oil level. | | |
| A-8 Air suction filter. | | |
| A-9 Radiator. | | |
| A-10 Hydraulic oil level in the tank. | | |
| A-11 Greasing of the boom section pads. | | |
| A-12 Grase the forks. | | |
| A-13 Grease all joints of the boom, the rear axle shaft joint, the transmission shafts, the front and rear axles and any equipment of the machine. | | |
| A-14 Efficiency of the lighting electric system. | | |
| A-15 Efficiency of braking system and parking brake. | | |
| A-16 Efficiency of the steering selection system. | | |
| A-17 Efficiency of the fork balancing system. | | |
| A-18 Safety devices. | | |

Table B Y N R

Within the first 50 working hours:

| | | |
|---|--|--|
| B-1 Change the engine oil. | | |
| Every 50 working hours: | | |
| B-2 Tension of the alternator belt. | | |
| B-3 Check the tyre inflation. | | |
| B-4 Tightening of the wheel nuts. | | |
| B-5 Tightening of the cardan shaft screws. | | |

Table C Y N R

Every 250 working hours:

| | | |
|---|--|--|
| C-1 Engine oil and relevant filter. | | |
| C-2 Oil level in the differential gears and reducer. | | |
| C-3 Oil level in the four reduction gears. | | |
| C-4 Cartridge of the engine air filter. | | |
| C-5 Clamping of the cableheads to the battery terminals. | | |
| C-6 Air suction hose between engine and filter. | | |
| C-7 Cylinder chromium-plated rods. | | |
| C-8 Check the hydraulic lines. | | |
| C-9 Check the electric cables. | | |
| C-10 Wear of the sliding pads of the boom sections. | | |
| C-11 Play of the sliding pads of the boom sections. | | |
| C-12 Sliding parts of the boom sections. | | |
| C-13 Level of the battery electrolyte. | | |
| C-14 Efficiency of the block valves. | | |

Table D Y N R

Every 500 working hours:

| | | |
|--|--|--|
| D-1 Smoke from engine exhaust. | | |
| D-2 Tightening of the engine fixing screws. | | |
| D-3 Tightening of the cab fixing screws. | | |
| D-4 Backlash between pins and bushings in all joints. | | |
| D-5 Hydraulic oil filter of the transmission. | | |
| D-6 Hydraulic oil filter in the tank. | | |
| D-7 Efficiency of hydraulic system. | | |
| D-8 Cartridge of the engine air filter. | | |
| D-9 Air filter in the cab. | | |

Table E Y N R

Every 1000 working hours:

| | | |
|--|--|--|
| E-1 Oil of the differential casing and the power divider. | | |
| E-2 Oil in the four wheel reduction gears. | | |
| E-3 Change the hydraulic oil. | | |

Model

| Table F | Y | N | R |
|----------------------------------|---|---|---|
| <i>Every 2000 working hours:</i> | | | |
| F-1 Change the engine coolant | | | |

Serial number

Date

| Table G | Y | N | R |
|---|---|---|---|
| <i>At 6000 working hours:</i> | | | |
| G-1 Checking the state of the structure | | | |

Hour meter

Machine owner

Inspected by

Inspector signature

Inspector title

Inspector company

Instructions:

- Make copies of this page to use for each inspection.
- Select the appropriate checklist(s) for the type of inspection to be performed.

- Every 10 hours: A**
- Every 50 hours: A+B**
- Every 250 hours: A+B+C**
- Every 500 hours: A+B+C+D**
- Every 1000 hours: A+B+C+D+E**
- Every 2000 hours: A+B+C+D+E+F**
- At 6000 hours: G**

- Place a check in the appropriate box after each inspection procedure is completed.
- Use the maintenance tables in this section and the step-by-step procedures in section 4 to learn how to perform these inspection.
- If any inspection receives an "N", tag and remove the machine from service, repair and re-inspect it. After repair, place a check in the "R" box.

Legend:

Y = yes, acceptable

N = no, remove from service

R = repaired.

Section 4

SCHEDULED MAINTENANCE

PROCEDURES

SECTION INDEX

| | | | |
|-----|--------------------------|------|----|
| 4.1 | Introduction..... | page | 2 |
| 4.2 | About this section | | 3 |
| 4.3 | TABLE A procedures | | 4 |
| 4.4 | TABLE B procedures..... | | 22 |
| 4.5 | TABLE C procedures..... | | 26 |
| 4.6 | TABLE D procedures..... | | 39 |
| 4.7 | TABLE E procedures..... | | 46 |
| 4.8 | TABLE F procedures | | 50 |
| 4.9 | TABLE G procedures | | 51 |

4.1 INTRODUCTION



- *Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.*
- *Scheduled maintenance must be carried out at the intervals indicated in the MAINTENANCE REPORT.*

WARNING

Failure to properly complete each inspection when required may cause death, serious injury or substantial machine damage.

- *Immediately tag and remove from service a damaged or malfunctioning machine.*
- *Repair any machine damage or malfunction before operating machine.*
- *Unless otherwise specified, perform each procedure with the machine in the following configuration:*
 - *machine parked on a flat level surface;*
 - *boom in the stowed position;*
 - *key switch in the OFF position with the key removed.*

4.2 ABOUT THIS SECTION

This section describes the maintenance interventions to be carried out on the machine according to the indications of the maintenance inspection report (see chapter 3).

Safety symbols:



Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

⚠ DANGER

Draws the attention to situations that involve your own as well as the others' safety and that can result in serious or lethal injury.

⚠ WARNING

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

⚠ CAUTION

Draws the attention either to situations that involve your own as well as the others' safety and that can result in minor or moderate injury or to situations that involve the machine efficiency.

CAUTION

Draws the attention to important technical information or practical advice that allows for a safer and more efficient use of the machine.

NOTICE

Draws the attention to important environment-related information.

4.3 TABLE A PROCEDURES

A-1 CHECK THE OIL LEVEL WITHIN REDUCTION GEARS, POWER DIVIDER AND DIFFERENTIAL GEARS

To check the oil level within the **wheel reduction gears**:

- Stop the machine on a level ground and ensure the parking brake is engaged and plug **A** finds on the horizontal axis.
- Clean the plug all around, then remove it and check if oil is level with the hole.
- If necessary, add new oil through hole **A** until it is level.
- Refit the plug.

NOTICE


Place a container of suitable size under the plug.

To check the oil level in the **front and rear differential gears**:

- Stop the machine on a level ground and engage the parking brake.
- Loosen level plug **A** and check if oil is level with the hole.
- If necessary, add new oil through the hole of the level plug until it comes out.
- Refit and tighten plug **A**.

NOTICE

Place a container of suitable size under the plug.

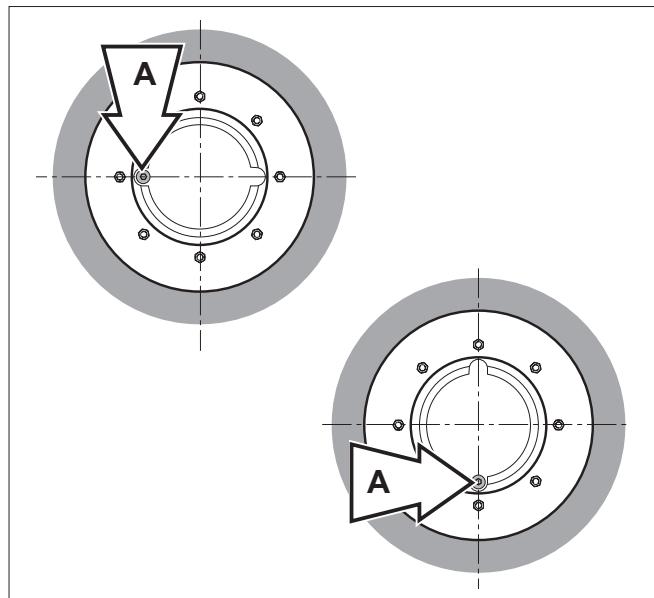


To check the oil level in the **power divider**:

- Stop the machine on a level ground and engage the parking brake.
- Clean the plug **A** all around, then remove it and check if oil is level with the hole.
- If necessary, add new oil through hole **A** until it is level.
- Refit the plug.

NOTICE

Place a container of suitable size under the plug.

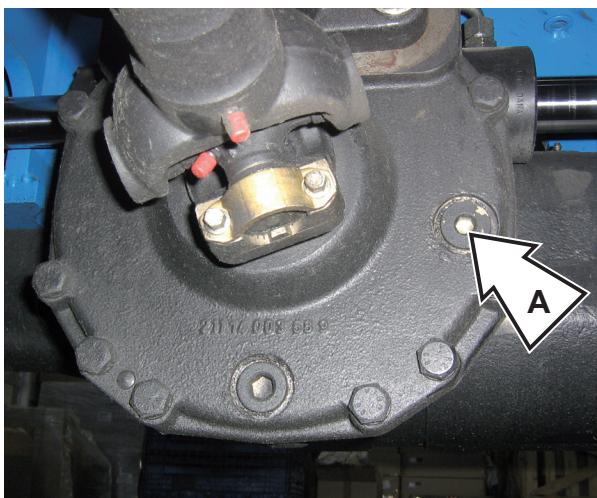

A-2 CHECK THE TIGHTENING OF THE WHEEL BOLTS


If you have to check the tightening of the wheel bolts or replace a wheel, proceed as follows:

- Raise the machine using a hydraulic jack.
- Remove the wheel rolling it on the ground.
- Line up the wheel with the axle and fit the 8 nuts.
- Tighten the nuts following the alternate sequence shown in the picture with a pneumatic screwdriving machine.
- Lower the machine to the ground.

Re-tighten all nuts to a torque 300 Nm.


WARNING

Check the tightening of wheels one hour after the job. They might get loose until they do not stay correct.

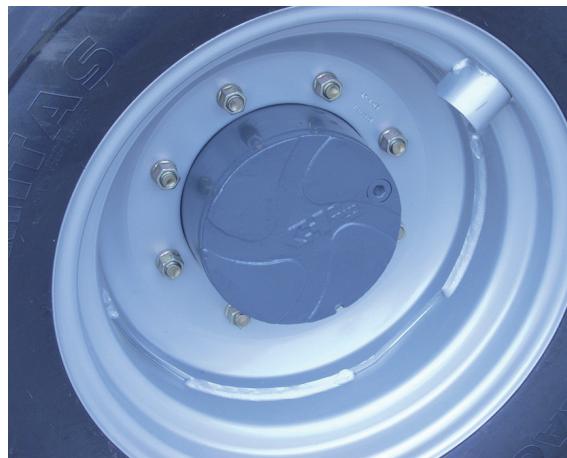

WARNING

On new machines, and when a wheel has been disassembled or replaced, check the nut torque of the wheels every 2 hours until they stay correct.

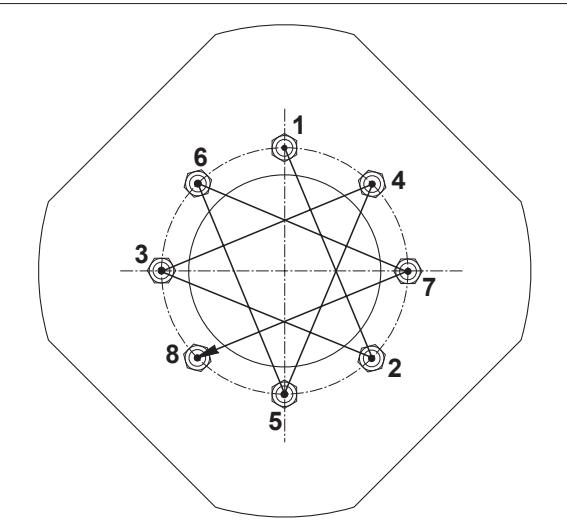

WARNING

Always use tyres having the dimensions indicated in the vehicle registration card.

| | | STANDARD GTH 55-19 |
|------------------------------------|---------|-------------------------------|
| Dimensions (front and rear) | | 12-16.5 |
| Load index | | 10 pr |
| Rim | | 9.75x16.5 |
| Wheel disc | | 8 holes DIN 70361 |
| Pressure | bar/Psi | 4.5/65 |

A-3 CHECK THE TIGHTENING OF ALL BOLTS AND NUTS

Before starting your daily work, proceed with a random check of the bolts.

For the correct tightening torques, please refer to par. 2.13 in section 2 "Technical Specifications".

A-4 CHECK THE COUPLINGS FOR OIL LEAKS

Before starting your work, do a walk-around inspection and check for oil leaks.

If you find them, rectify before starting using the machine.

A-5 INSPECT THE OPERATOR MANUAL

Maintaining the operator manual in good condition is essential to safe machine operation.

Manual are included with each machine and should be stored in the cab. An illegible or missing manual will not provide safety and operational information necessary for a safe operating condition.

In particular:

- check to be sure the storage container is in good condition.
- check to make sure that the operator manual are present, complete and in the storage container in the cab.
- examine the pages of each manual to be sure that they are legible and in good condition.
- always return the manual to the storage container after use.

CAUTION

Contact GENIE Service Centre if replacement manuals are needed.

A-6 INSPECT THE DECALS AND PLACARDS

Maintaining all of safety and instructional decals and placards in good condition is mandatory for safe machine operation. Decals alert operators and personnel to the many possible hazards associated with using this machine.

An illegible decal will fair to alert personnel of a procedure or hazard and could result in unsafe operating conditions.

- refer to the "labels and warning plates applied on the machine" section in the Operator Manual and use the decal list and illustrations to determine that all decals and placards are in place.
- inspect all decals for legibility and damage. Replace any damaged or illegible decal immediately.



CAUTION

Contact GENIE Service Centre if replacement decals are needed.


A-7 CHECK THE ENGINE OIL LEVEL

To check the engine oil level:


- Park the machine on a flat ground, stop the engine and check the parking brake is engaged.
- Remove dipstick **A** and check if oil reaches the max mark **B**.

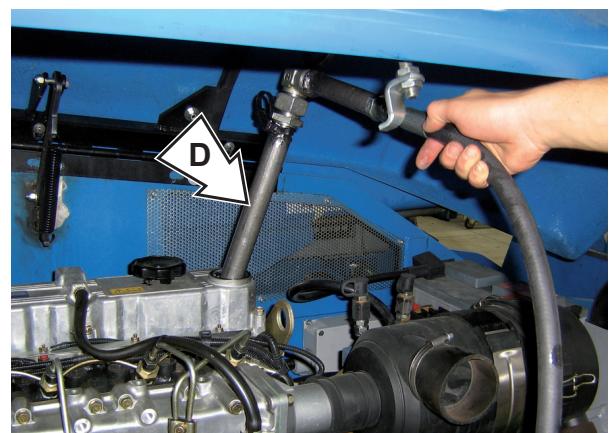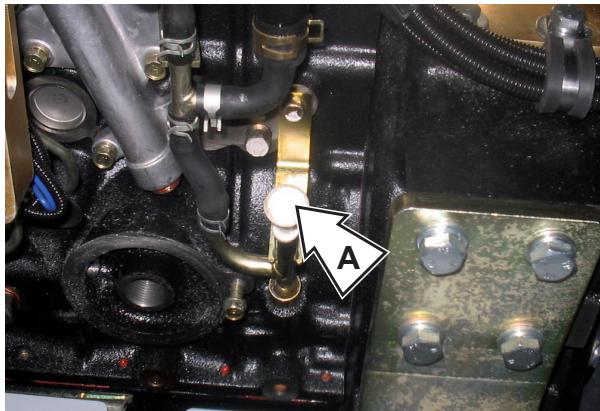

- Remove dipstick **A** once again and check if oil reaches the max mark **B**.
- Refit the plug.

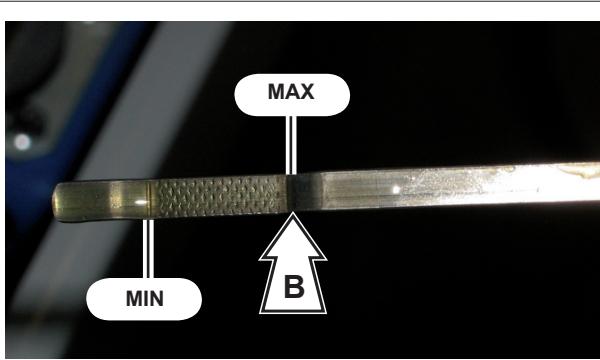

- If oil is below this mark, remove plug **C** and pour new oil into the engine using the special appliance **D**.

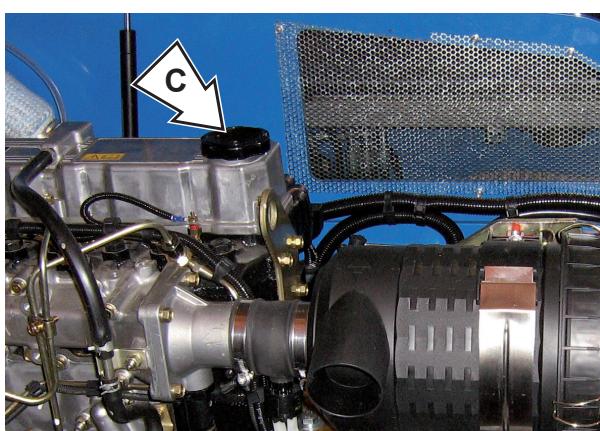


A-8 CLEAN THE AIR SUCTION FILTER

Clean the engine air filter every 10 hours:

- Stop the engine and engage the parking brake.
- Unlatch the fasteners **A** and remove cover **B**.
- Pull out the filter cartridge **C**.
- Clean the filter bowl.
- Dry clean the cartridge (at max. 6 bar pressure) and direct the air jet from inside to outside.
- Check the filter element for cracks by introducing a lamp inside.
- Refit the cartridge and make sure it is properly positioned.
- Close cover **B** and lock in place with fasteners **A**.

WARNING

As soon as the warning lamp on the cab dashboard switches on, replace the outer element.

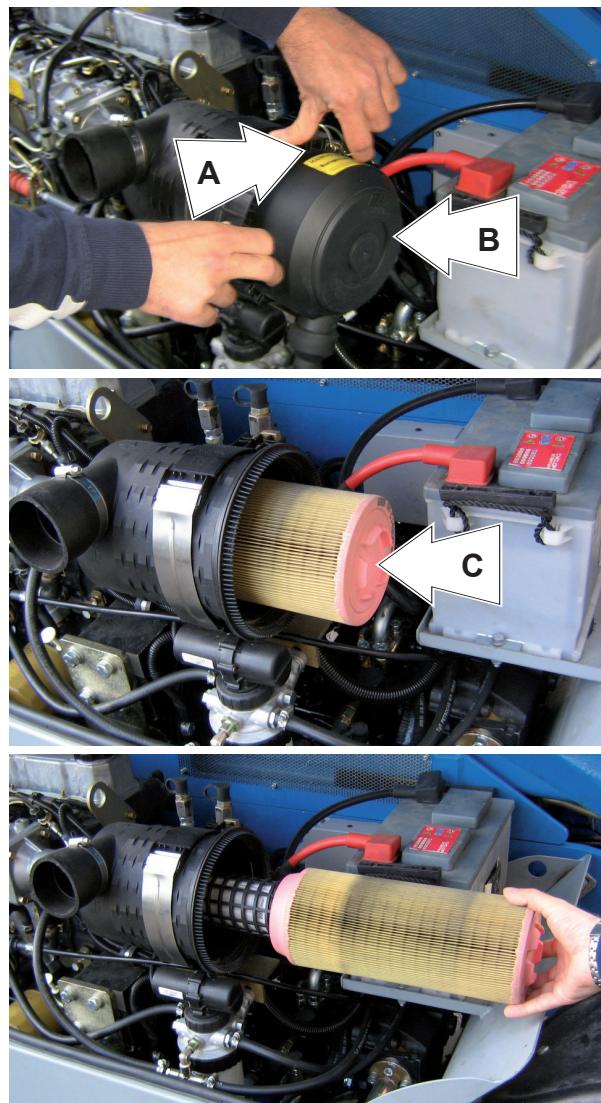

A-9 CHECK AND CLEAN THE RADIATOR**⚠ DANGER**

When using a steam-washer, always wear protective clothes. Hot steam may cause serious injury.

- Open the radiator panel.
- Check the fins of radiator for sediments.
- If necessary, prepare a compressed air nozzle (max. 2 bar) or a nozzle distributing water under pressure or steam.

Cleaning using compressed air

- Direct a jet of compressed air toward radiator paying attention not to damage its fins.
- Remove any loose particles of dirt with some water.

Cleaning using water under pressure or steam

- Spray radiator with a cold commercial detergent and wait for at least 10 minutes to allow the detergent to react.
- Wash radiator using a jet of water or steam.

CAUTION

The core fouling depends on the dust of the outside environment and the presence of oil and fuel leaks in the motor area. It is therefore advisable to remove oil and fuel leaks immediately in case of very dusty environments.

A-10 CHECK THE HYDRAULIC OIL LEVEL IN THE TANK**DANGER**


Fine jets of hydraulic oil under pressure can penetrate the skin. Do not use your fingers, but a piece of cardboard to detect oil leaks.

Check the hydraulic oil level (visually) through the special level **B** fitted into the tank.

When necessary, add new oil through filler **A**.

WARNING

Check the oil level with the machine in the travel position, that is boom lowered and telescopes fully in.

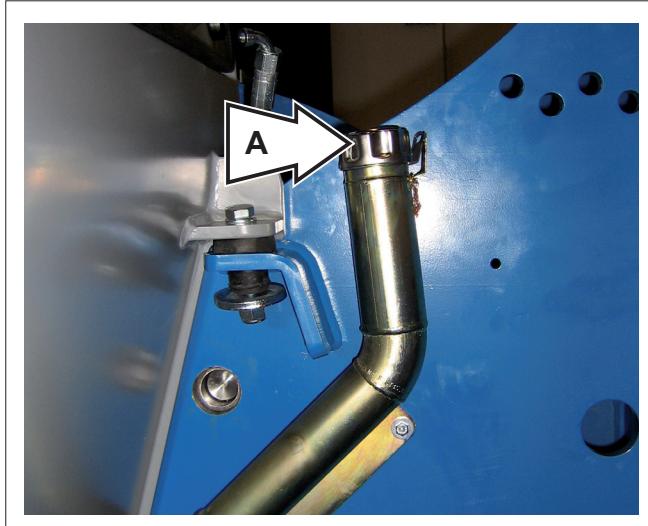**NOTICE**

The handling and disposing of used oils can be ruled by local or national regulations. Address to authorised centres.



A-11 CHECK THE GREASING OF THE BOOM SECTION PADS

Any boom section is fitted with adjustable pads located on the four sides of the profile. These pads are secured to both fixed and mobile part of every section.


At regular intervals, check that the telescopes are well greased in correspondence of the sliding pads.

If necessary, scrape off the old grease and brush new grease. We recommend using:

- INTERFLON grease **FIN GREASE LS 2**

CAUTION

Avoid mixing greases of different type or features and do not use greases of lower quality.

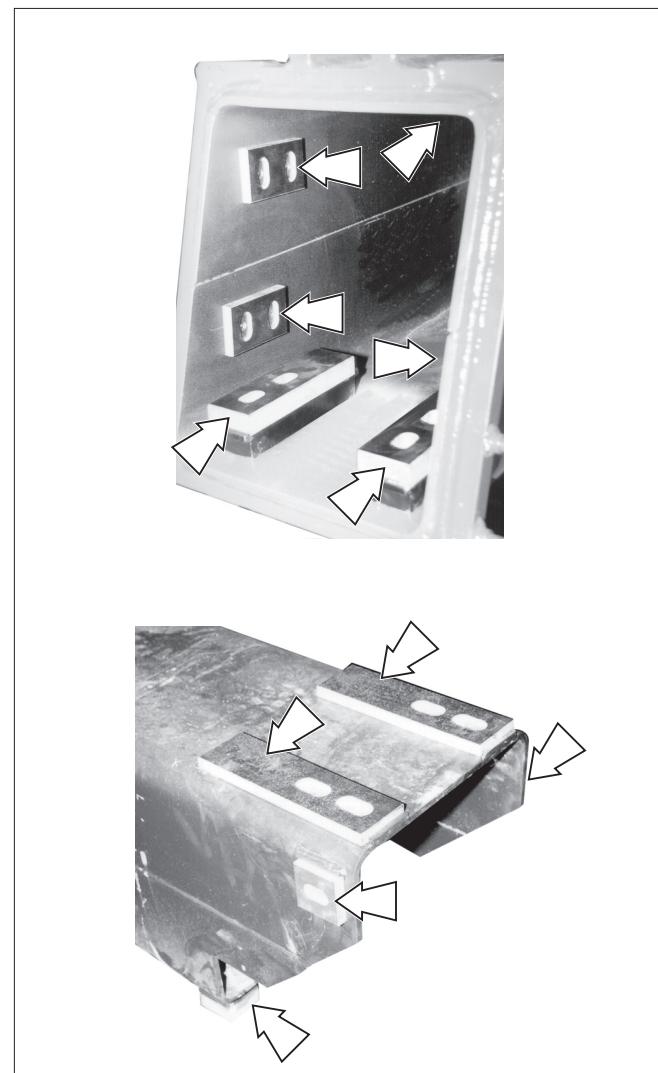

A-12 GREASE THE FORKS

CAUTION


Before use grease, thoroughly clean the intervention zone to avoid that mud, dust or other matters can mix with the lubricant and reduce or annihilate the lubrication effect.

Remove any old grease with a degreaser from the telescopes before smearing them with new grease.

Smear pin A with grease to help the forks slide on it.

Recommended grease:

- AGIP graphitized grease type GR NG 3

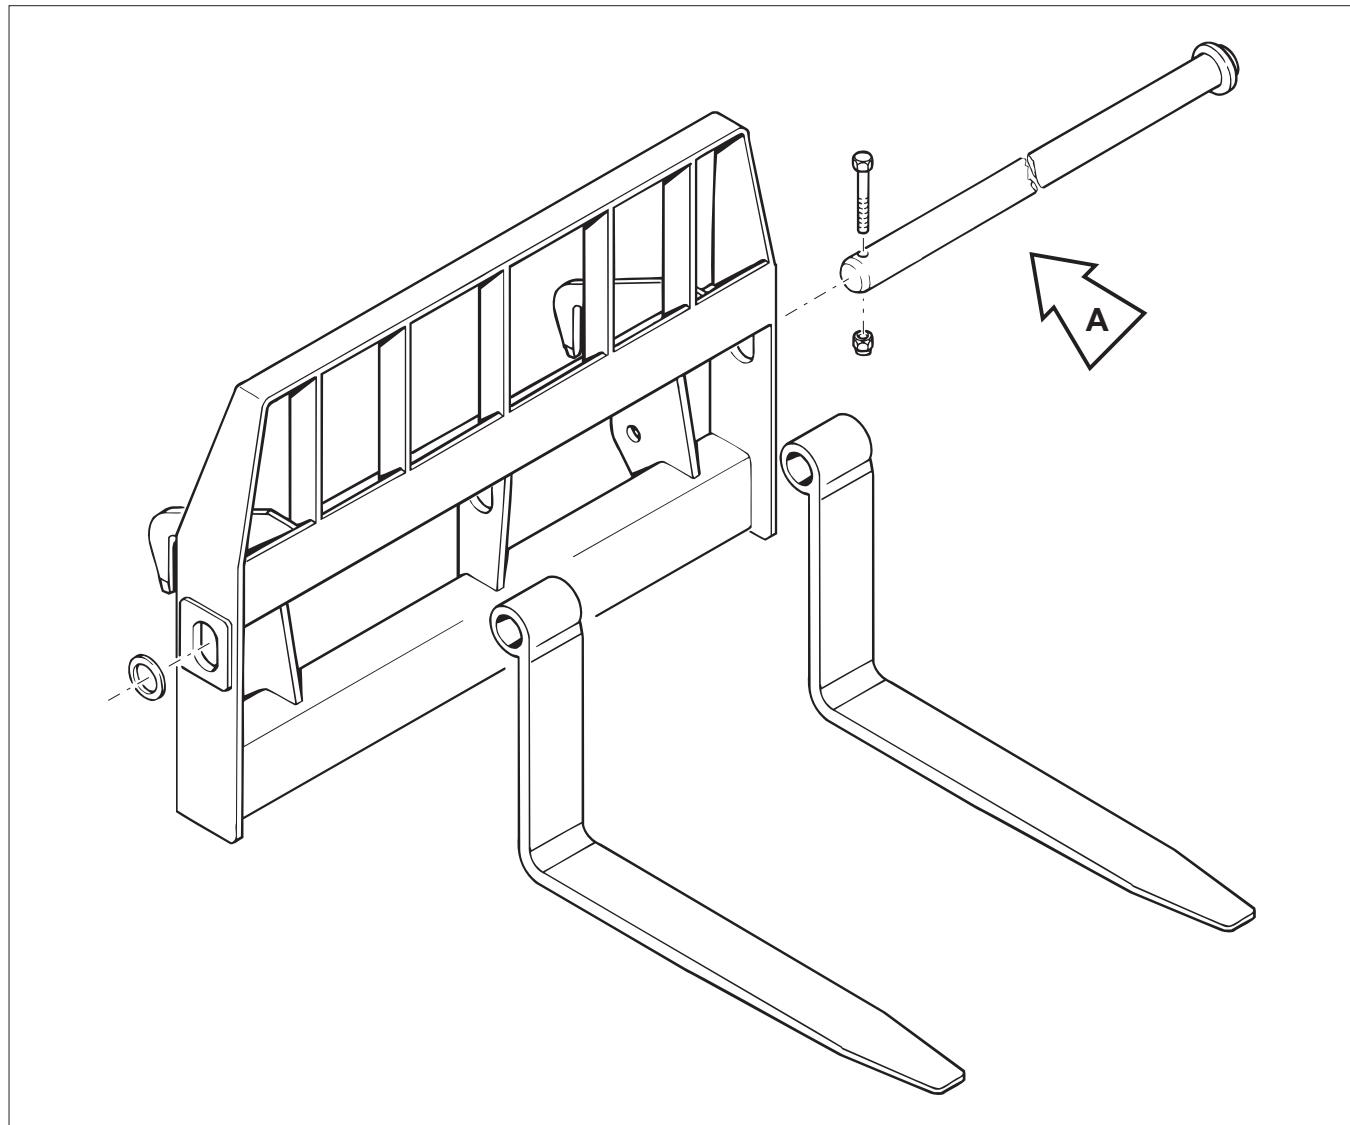

**A-13 GREASE ALL JOINTS OF THE BOOM,
THE REAR AXLE SHAFT JOINT, THE
TRANSMISSION SHAFTS, THE FRONT
AND REAR AXLES AND ANY EQUIPMENT
OF THE MACHINE**

CAUTION

Before injecting grease into the greasers, thoroughly clean them to avoid that mud, dust or other matters can mix with the lubricant and reduce or annihilate the lubrication effect.

Remove any old grease with a degreaser from the telescopes before smearing them with new grease.




Regularly grease the machine to grant it efficient conditions and a long life.

By means of a pump, inject grease into the special greasers.

As the fresh grease comes out, stop the operation.

The greasing points are shown in the following figures:

- the symbol  represents the points to be greased by a pump
- the symbol  represents the points to be greased by a brush

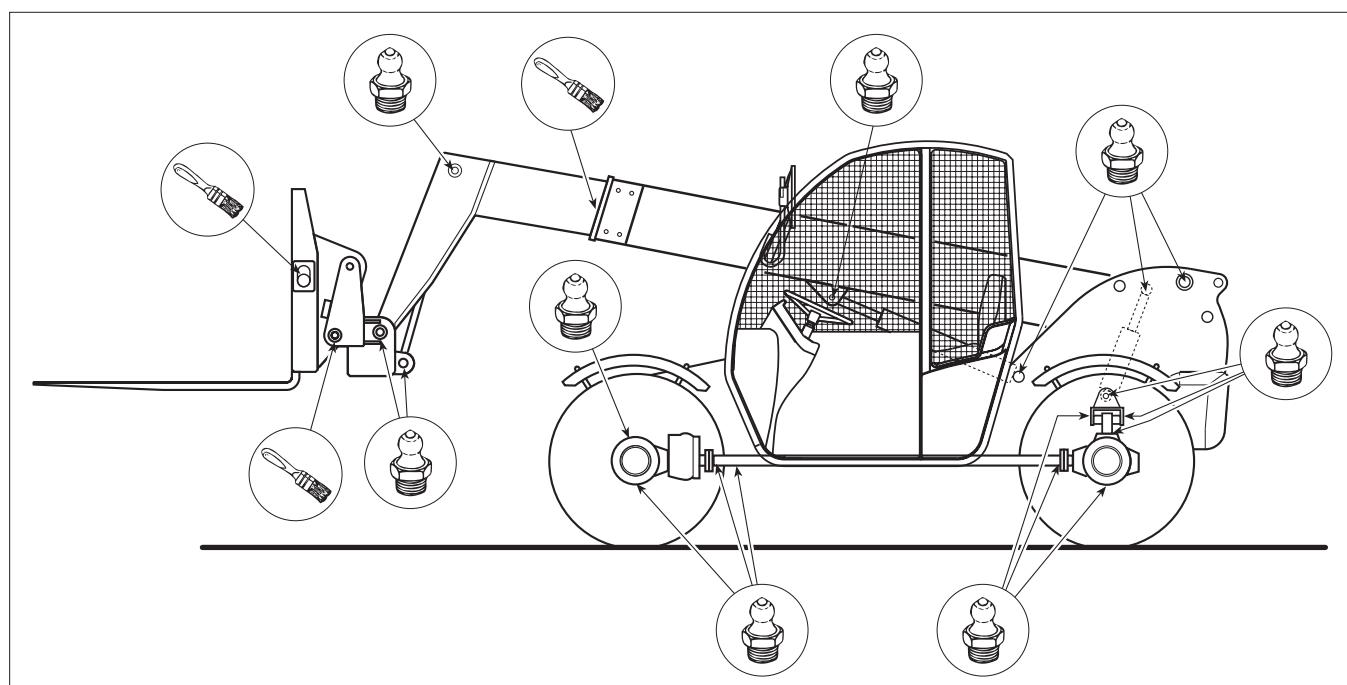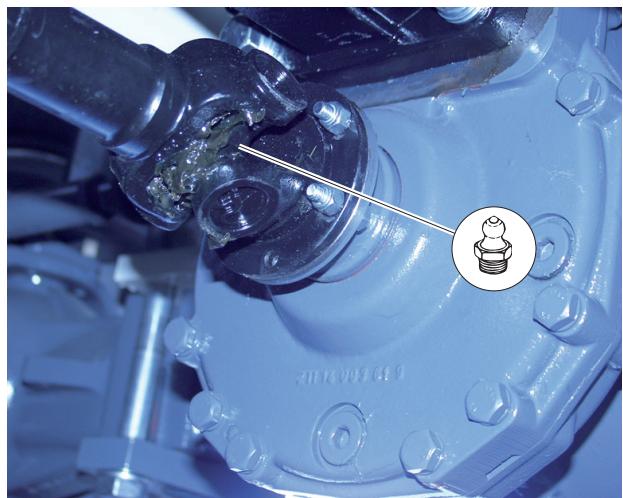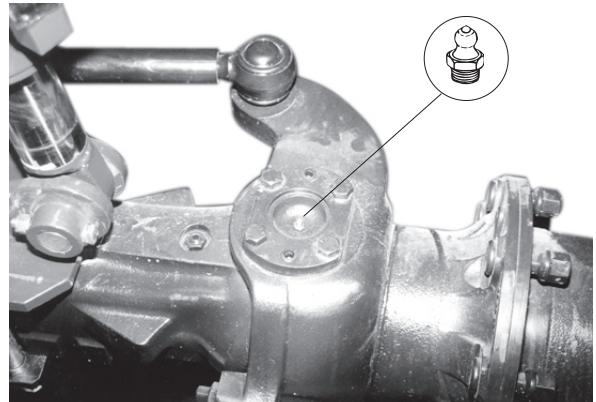

A-14 CHECK THE EFFICIENCY OF THE LIGHTING ELECTRIC SYSTEM

If the LIGHTS KIT is installed, check every day that the electrical system powering the lights of the machine is in efficient working order.

Use the assistance of a second technician to check that the front lights (position lights, low and high beams and turn signals) and the rear lights (position lights, stop/tail lights and turn signals) are in excellent state of repair.

Also check beacon located on the cab roof.

If one lamp or more must be replaced, use the table below as a reference.

WARNING

When switched on, lamps get hot. Before touching a lamp with your fingers, let it cool down.

CAUTION

Never touch the bulb of halogen lamps (mount type H3) with your fingers: this may damage the lamp (use of a clean cloth or a paper tissue). If you touch it accidentally, thoroughly clean with a paper tissue and some ethyl alcohol.


| Use | Voltage | Mount type | Power |
|---|---------|------------|---------|
| • Front low/high beam | 12 V | P45t | 45/40 W |
| • Front position lights | 12 V | BA 9s | 3 W |
| • Side/tail turn signals | 12 V | BA 15s | 21 W |
| • Stop lights and rear position lights | 12 V | BAY 15d | 21/5 W |
| • Beacon - Work lights (OPTIONAL) | 12 V | H3 | 55 W |
| • Dashboard indicators and cab lighting | 12 V | W 2x4,6d | 1,2 W |
| • Interior lamp | 12 V | SV 8,5-8 | 5 W |
| • License plate lights | 12 V | BA 15s | 5 W |
| • Back-up lamps | 12 V | BA 15s | 21W |

A-15 CHECK THE EFFICIENCY OF BRAKING SYSTEM AND PARKING BRAKE

For any intervention on the braking system (adjustment and/or substitution of the brake discs) address to the GENIE Technical Service Centre or the nearest GENIE authorised workshop.


The malfunctioning of the braking system may depend on the presence of air in the hydraulic circuit.

The braking system is equipped with two purge valves **A** and **B** to eliminate any air from the circuit. The first valve is used to purge the service brake circuit (**B**); the second valve is used to purge the negative parking brake circuit (**A**). Both valves can be easily reached through the slot located on the front part of the chassis.

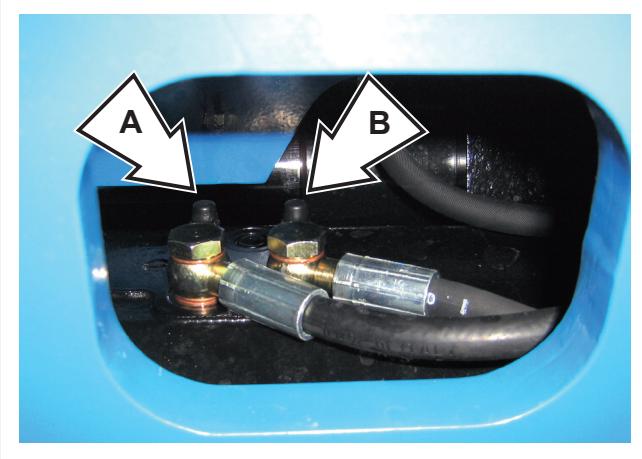


TO BLEED THE CIRCUIT OF THE SERVICE BRAKE, DO THE FOLLOWING:


- Make sure that compressor **F** contains a sufficient quantity of oil so you can proceed with the circuit bleeding.

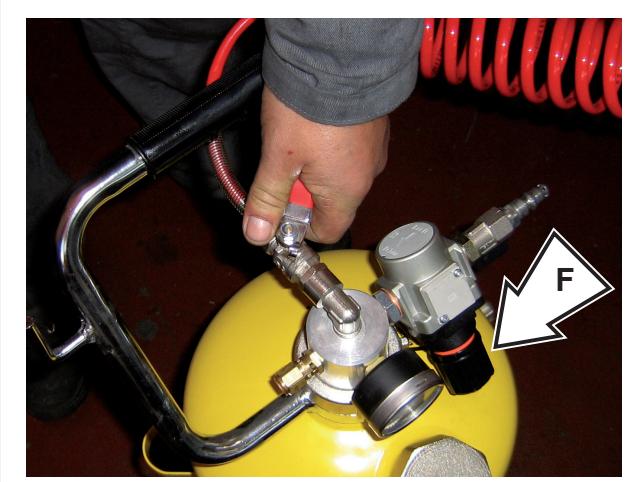


- Connect the flexible hose of the compressor to the mini-socket **TP4** placed inside the engine compartment.

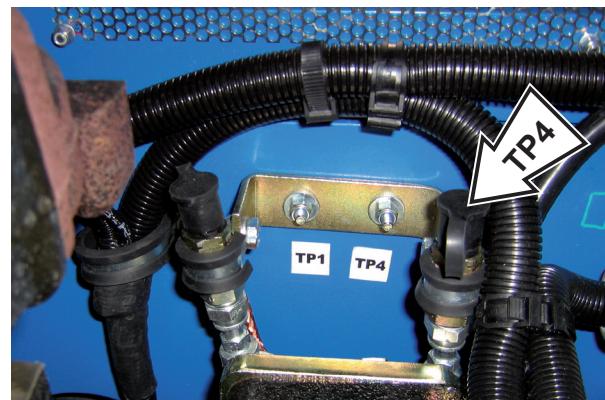


- Connect the compressor to an air source and pressurise the system.
- Unscrew valve **B** to help air flow out of the braking circuit.
- Open the cap of the feeding tank **D**.

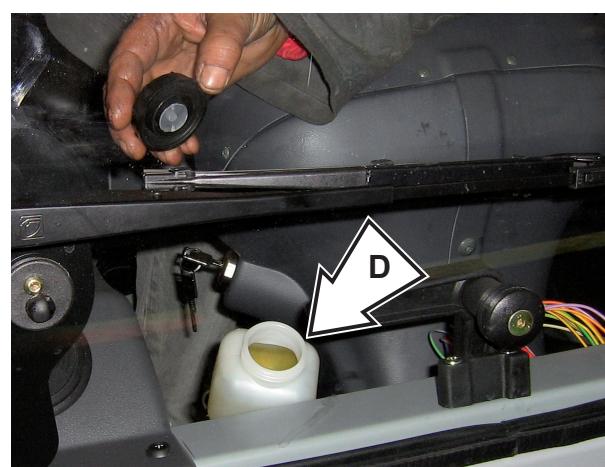

- Open the tap of the compressor **F** which has been previously connected to mini-socket **TP4**.

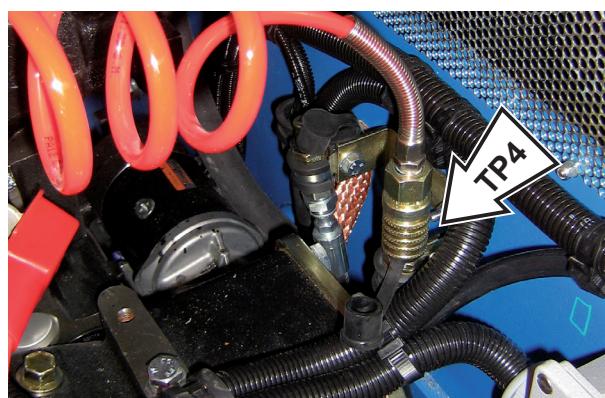

- Check that air flows out of valve **B**. As soon as oil without air bubbles starts flowing out of this valve, close the same.
- Check that the fluid in tank **E** reaches the recommended level.

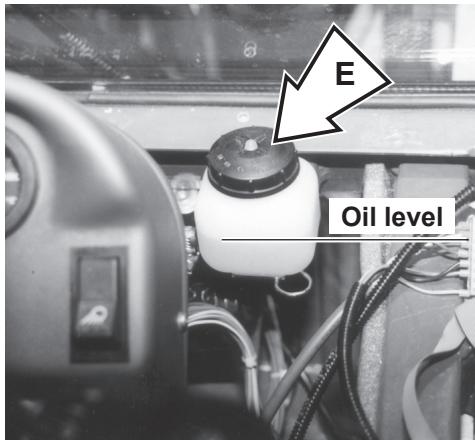


- Close the tap of the compressor.
- Disconnect the hose from mini-socket **TP4**.
- Test the efficiency of the braking system.

In order to bleed the service brake circuit WITHOUT A COMPRESSOR (for this operation, two service technicians are needed – one in the driving place and the other near the drain valve **B**):

- Fill tank **D** with oil.
- With the machine stopped, step down on the brake pedal 5-6 times.
- Hold the pedal pressed down and slowly unscrew valve **B**. Close the valve as soon as oil mixed with air starts flowing out.
- Ease up the brake pedal.
- Repeat steps **2**, **3** and **4** until oil without air bubbles starts flowing out of the valve.
- Test the efficiency of the braking system.

TO BLEED THE CIRCUIT OF THE PARKING BRAKE, DO THE FOLLOWING:

- Start the diesel engine.
- Press pushbutton **C** to unlock the parking brake.
- Slowly unscrew valve **A** and close the same as soon as oil mixed with air starts flowing out.
- Repeat until oil without air bubbles starts flowing out of the valve.
- Test the efficiency of the braking system.

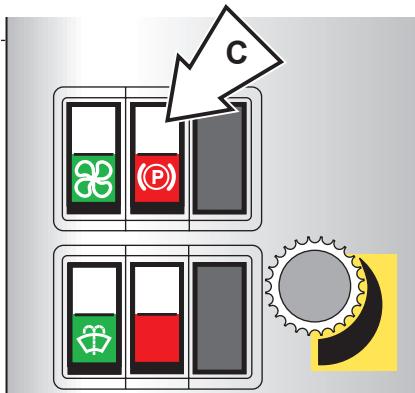


WARNING

Once the circuit has been bled, make sure the brake circuit is in efficient working order.

CHECKING THE BRAKE OIL LEVEL

The oil within the braking circuit must be at about 2 cm from the tank plug **E**.


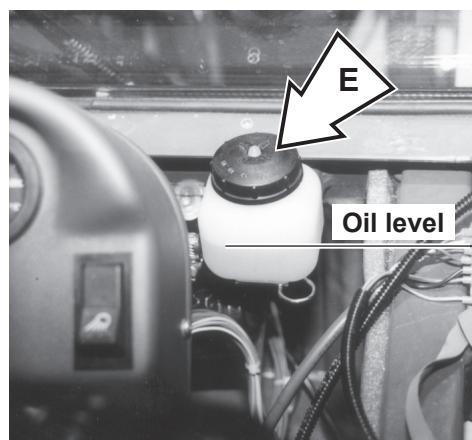


A-16 CHECK THE EFFICIENCY OF THE STEERING SELECTION SYSTEM

During operation, the alignment of the front and rear axles of the machine can be subject to variations. This can depend on an oil blow-by from the steering control circuit, or on a steering of both axles when front and rear wheels are not perfectly aligned.

To fix this problem, rather than checking the alignment visually, follow the procedure below:

- 1 Move to a solid and level ground.
- 2 Set the steering selection switch **A** to "four-wheel steer" (pos. **2**).
- 3 Rotate the steering up to its stop (either to the right or to the left).
- 4 Set the steering selection switch to "two-wheel steer" (pos. **0**).
- 5 Rotate the steering up to its stop (turn in the same direction as above).
- 6 Reset the steering selection switch to "four-wheel steer" (pos. **2**).
- 7 Rotate the steering (to the side opposite to point 3) so that the rear axle reaches its stop
- 8 Reset the steering selection switch to "two-wheel steer" (pos. **0**)
- 9 Rotate the steering (to the same side as in point 7) so that the front axle reaches its stop
- 10 Reset the steering selection switch to "four-wheel steer" (pos. **2**)

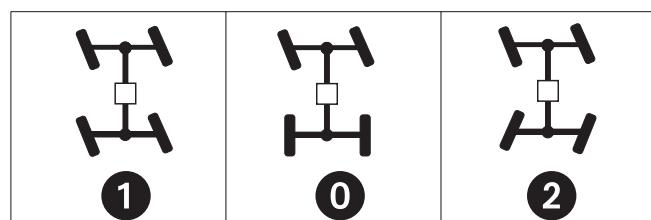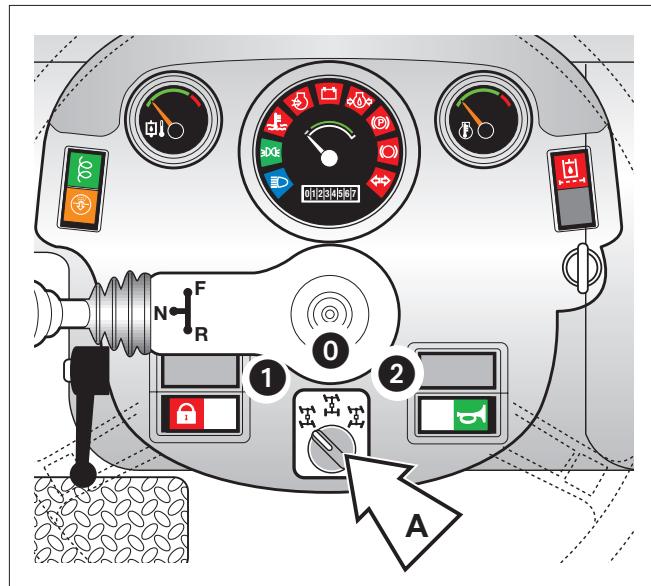

Now the wheels should be re-aligned.

A-17 CHECK THE EFFICIENCY OF THE FORK BALANCING SYSTEM**WARNING**

Test the system without any load on the machine's forks.

To check the efficiency of the fork balancing system, obey the instructions below:

- Drive the machine to a flat, smooth ground.
- Move the retracted boom fully down and align the forks with the ground.
- Start lifting the boom and check that the forks remain parallel to the ground.

A-18 MAKE SURE THE SAFETY DEVICES INSTALLED ARE IN EFFICIENT WORKING ORDER


Attempt to start the engine with the forward or reverse gear put.

The engine must not start. If the engine starts, contact the GENIE Technical Service.

Repeat the operation putting first one gear, then the other.

CAUTION

If the forks do not remain parallel to the ground, consult section 5 "Problems - Causes - Solutions".

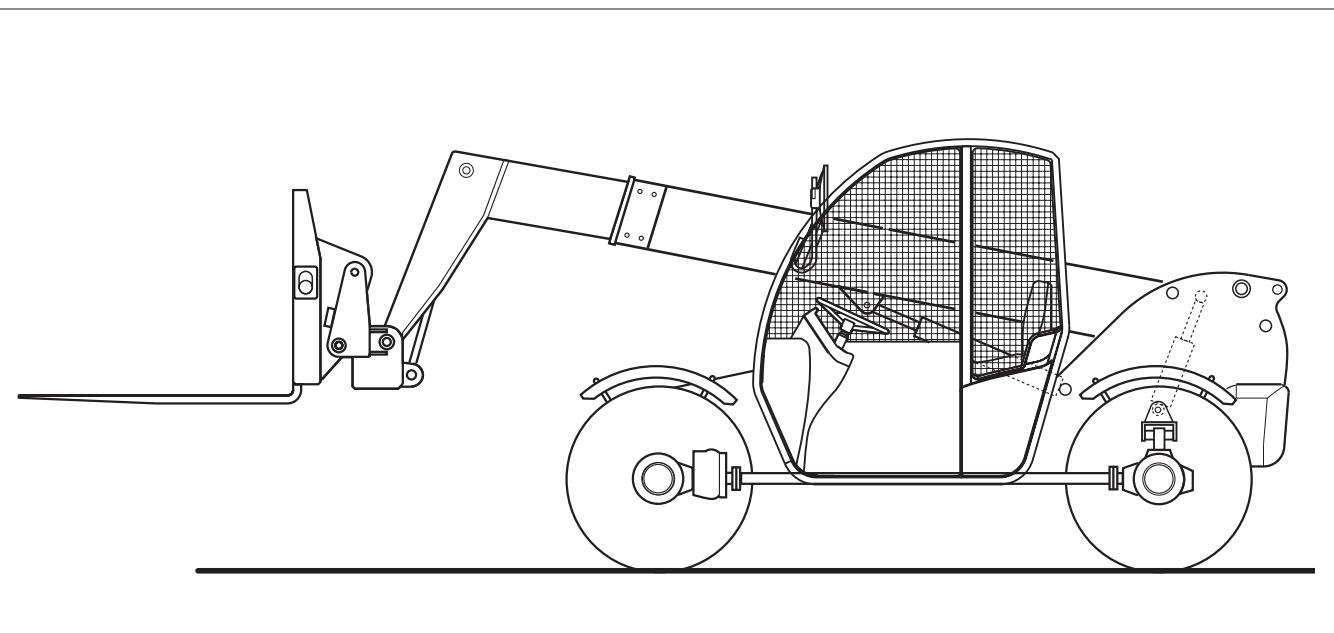


A-19 CHECK THE ENGINE COOLANT LEVEL
DANGER


When the coolant is hot, the cooling system is under pressure. With warm engine, loosen the radiator plug slowly and carefully, without removing it, to drain the pressure. Use protection gloves and keep your face at a safe distance.

- Every week, before starting working (with the coolant cold), check the coolant level through the glass cap of plug **A**.
- When necessary, add clean water or an antifreeze mixture through cap **B**.

On delivery, the machine is filled with a cooling mixture consisting of 50% water and 50% anti-freeze.

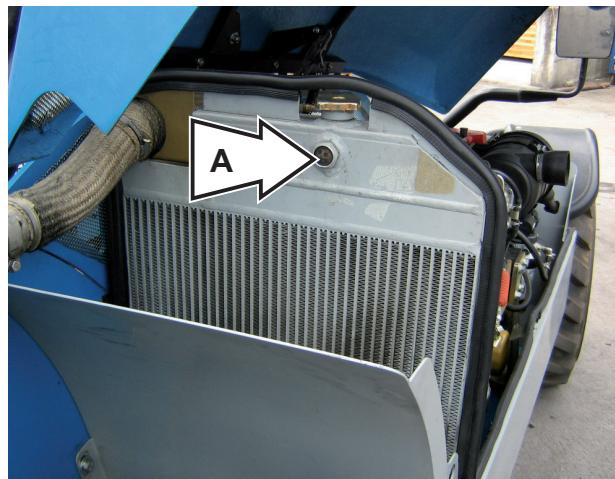

| TEREX PRO COOL | | |
|---------------------------------------|----------------|---------------|
| Protection against boiling / freezing | | |
| Product % | Freezing point | Boiling point |
| 33 | -17 °C | 123 °C |
| 40 | -24 °C | 126 °C |
| 50 | -36 °C | 128 °C |
| 70 | -67 °C | 135 °C |

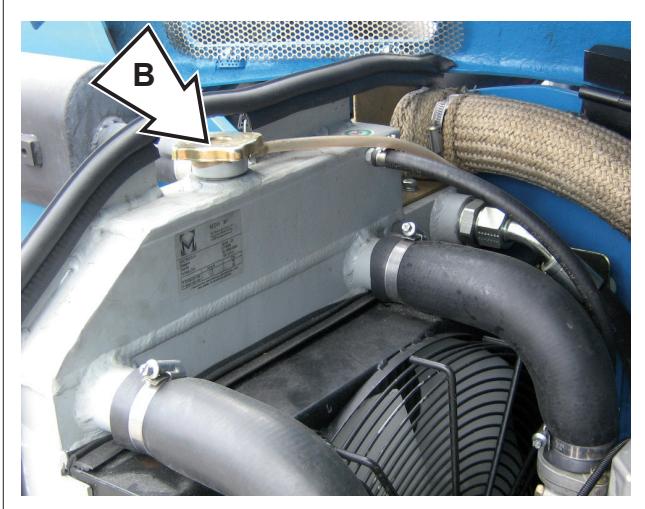

4.4 TABLE B PROCEDURES

**B-1 CHANGE THE ENGINE OIL AND RENEW
THE FUEL FILTER**


**B-2 CHECK THE TENSION OF THE ALTERNATOR
BELT**

CAUTION

For the engine maintenance, please refer to the specific Operator handbook (code SLBU 7853-00) supplied with the machine.

B-3 CHECK THE TYRE INFLATION**⚠ DANGER**

Over-inflated or overheated tyres can burst. Do not flame-cut or weld the wheel rims. For any repair work, call in a qualified technician.

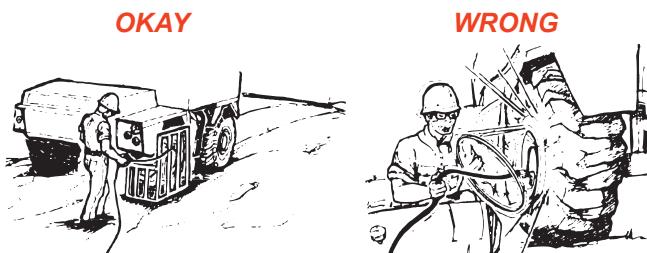

For the tyre inflation or substitution, please refer to the table below:

| | | STANDARD GTH 55-19 |
|-----------------------------|---------|-----------------------|
| Dimensions (front and rear) | | 12-16.5 |
| Load index | | 10 pr |
| Rim | | 9.75x16.5 |
| Wheel disc | | 8 holes DIN 70361 |
| Pressure | bar/Psi | 4.5/65 |

On new machines, and when a wheel has been disassembled or replaced, check the nut torque of the wheels every 2 hours until they stay correct.

⚠ WARNING


Always use tyres having the dimensions indicated in the vehicle registration card.

B-4 CHECK THE TIGHTENING OF THE WHEEL NUTS

If you have to check the tightening of the wheel bolts or replace a wheel, proceed as follows:

- Raise the machine using a hydraulic jack
- Remove the wheel rolling it on the ground.
- Line up the wheel with the axle and fit the 8 nuts.
- Tighten the nuts following the alternate sequence shown in the picture with a pneumatic screwdriving machine.
- Lower the machine to the ground.

Re-tighten all nuts to a torque 300 Nm.

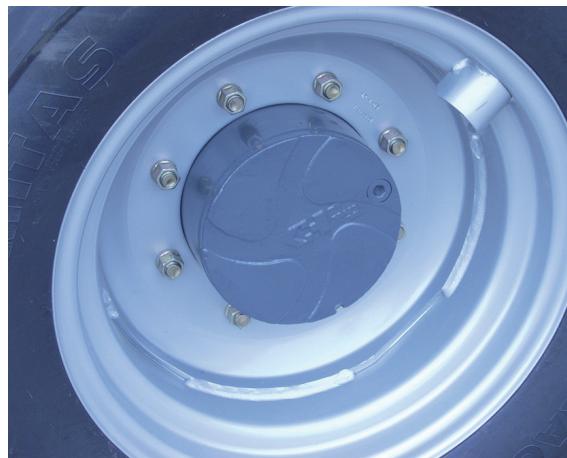

WARNING


Check the tightening of wheels one hour after the job. They might get loose until they do not stay correct.

WARNING

On new machines, and when a wheel has been disassembled or replaced, check the nut torque of the wheels every 2 hours until they stay correct.

WARNING

Always use tyres having the dimensions indicated in the vehicle registration card.

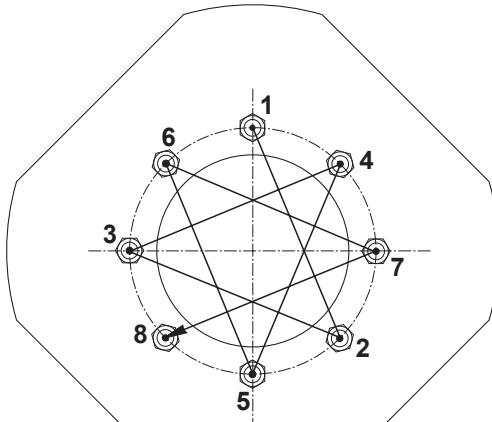


| | STANDARD GTH 55-19 |
|------------------------------------|-------------------------------------|
| Dimensions (front and rear) | 12-16.5 |
| Load index | 10 pr |
| Rim | 9.75x16.5 |
| Wheel disc | 8 holes DIN 70361 |
| Pressure | bar/Psi |
| | 4.5/65 |

**B-5 CHECK THE TIGHTENING OF THE CARDAN
SHAFT SCREWS**

Check every week that the screws of the Cardan shaft **A** are tight.

For the correct tightening torques, please refer to par. 2.13 in section 2 "Technical Specifications".

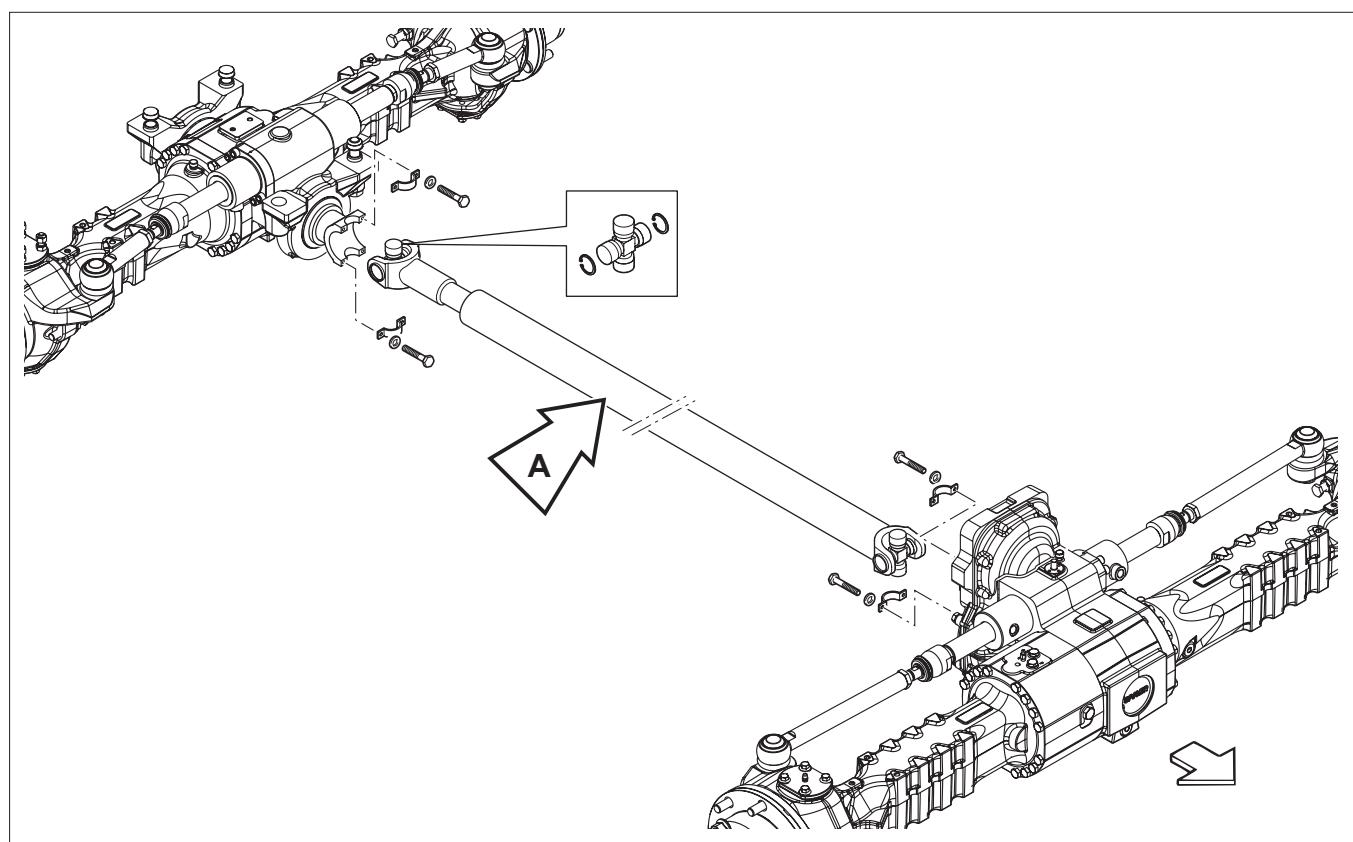

4.5 TABLE C PROCEDURES**C-1 CHANGE THE ENGINE OIL AND RELEVANT FILTER****CAUTION**

For the engine maintenance, please refer to the specific Operator handbook (code SLBU 7853-00) supplied with the machine.

C-2 CHECK THE OIL LEVEL IN THE DIFFERENTIAL GEARS AND POWER DIVIDER

To check the oil level in the **front and rear differential gears**:

- Stop the machine on a level ground and engage the parking brake.
- Loosen level plug **A** and check if oil is level with the hole.
- If necessary, add new oil through the hole of the level plug until it comes out.
- Refit and tighten plug **A**.

NOTICE

Place a container of suitable size under the plug.




To check the oil level in the **power divider**:

- Stop the machine on a level ground and engage the parking brake.
- Clean the plug **A** all around, then remove it and check if oil is level with the hole.
- If necessary, add new oil through hole **A** until it is level.
- Refit the plug.

NOTICE

Place a container of suitable size under the plug.

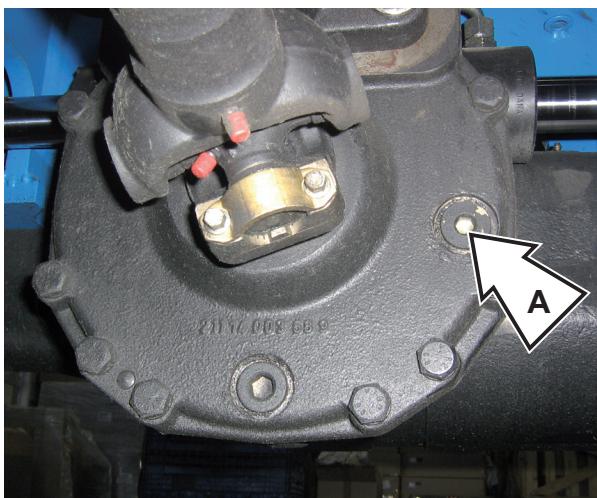


C-3 CHECK THE OIL LEVEL IN THE FOUR WHEEL REDUCTION GEARS

To check the oil level within the **wheel reduction gears**:

- Stop the machine on a level ground and ensure the parking brake is engaged and plug **A** finds on the horizontal axis.
- Clean the plug all around, then remove it and check if oil is level with the hole.
- If necessary, add new oil through hole **A** until it is level.
- Refit the plug.

NOTICE

Place a container of suitable size under the plug.

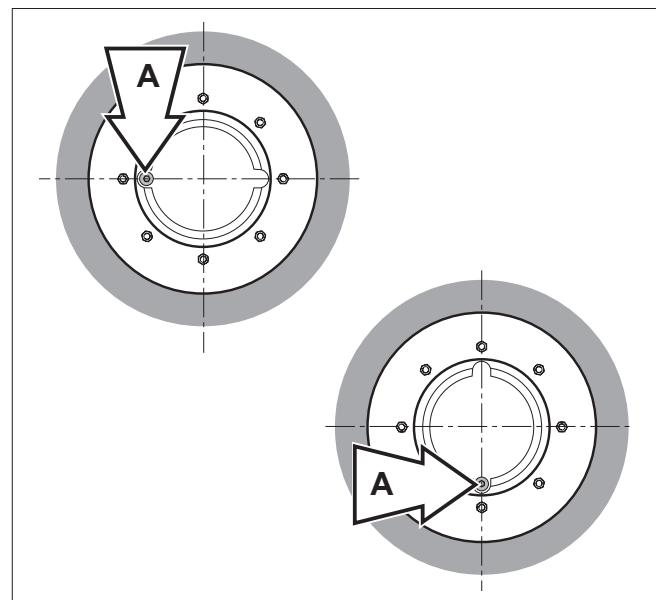


C-4 CHECK AND CLEAN THE ENGINE AIR FILTER

To clean the engine air filter :

- Stop the engine and engage the parking brake.
- Unlatch the fasteners **A** and remove cover **B**.
- Pull out the filter cartridge **C**.
- Clean the filter bowl.
- Dry clean the cartridge (at max. 6 bar pressure) and direct the air jet from inside to outside.
- Check the filter element for cracks by introducing a lamp inside.
- Refit the cartridge and make sure it is properly positioned.
- Close cover **B** and lock in place with fasteners **A**.

WARNING

As soon as the warning lamp on the cab dashboard switches on, replace the outer element.

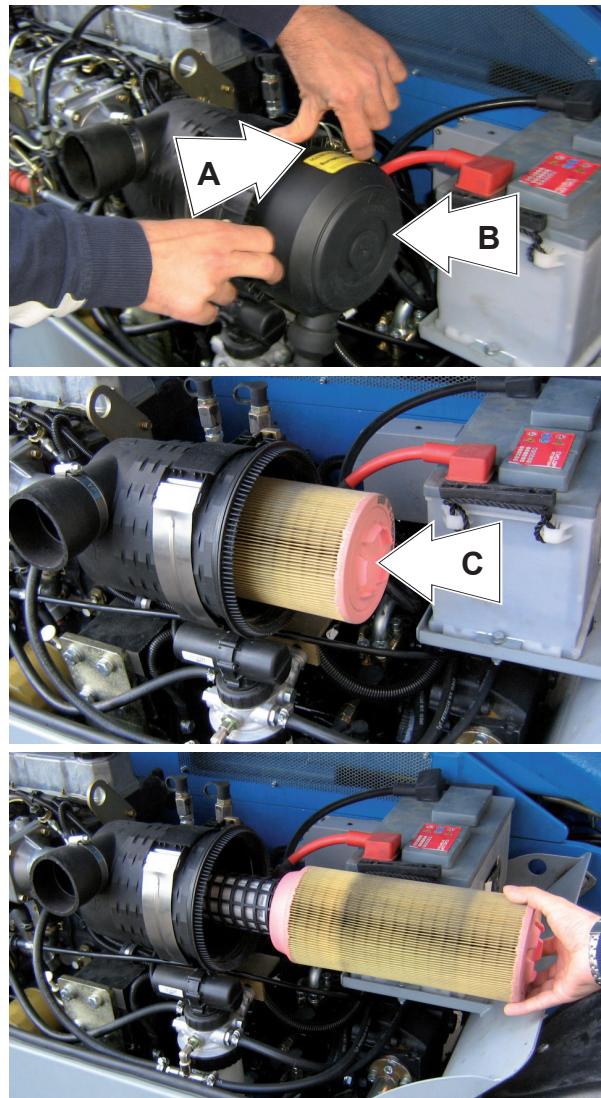


C-5 CHECK THE CLAMPING OF THE CABLEHEADS TO THE BATTERY TERMINALS

Check the cable clips are well secured to the battery terminals. To tighten the clips, always use a box wrench, never pliers.

▲ DANGER

- *Keep out of items which can produce sparks, of naked flames or lit cigarettes.*
- *Do not rest metal objects onto the battery. This can result in a dangerous short especially during a recharge.*

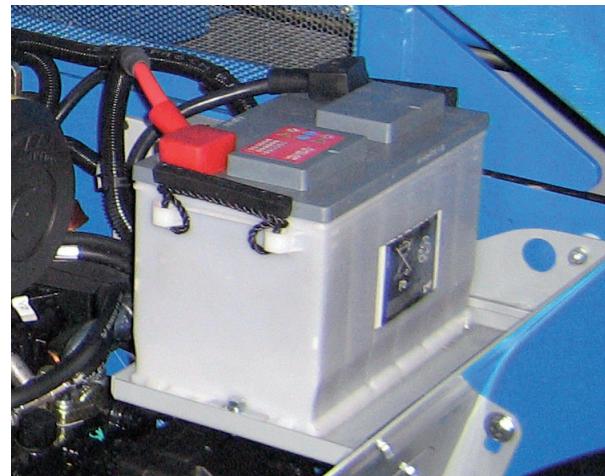


**C-6 CHECK THE AIR SUCTION HOSE BETWEEN
ENGINE AND FILTER**

Check the state of all the rubber sleeves **A** of the air suction line between engine and filter every month.

CAUTION

If you use the machine continuously for several days, check these sleeves, as well as the hose clamps more frequently.

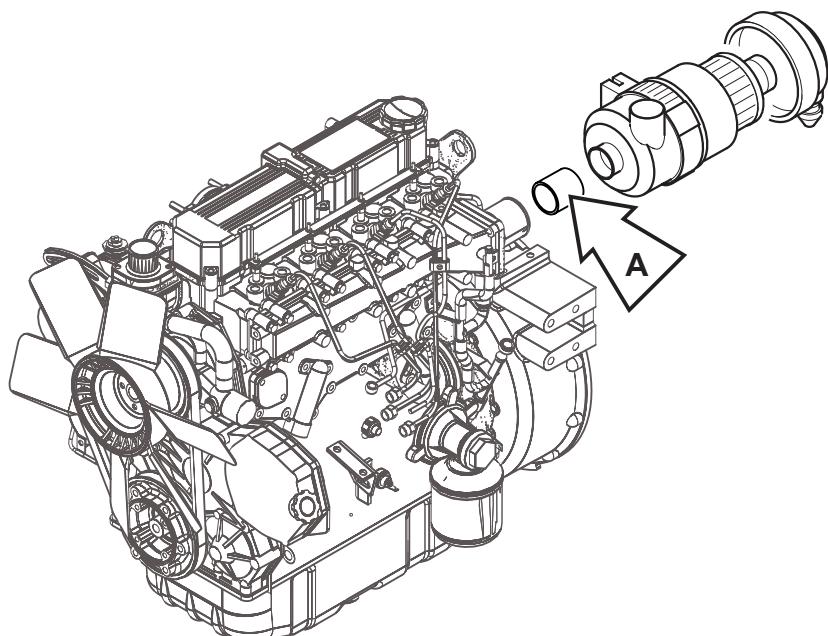

C-7 CHECK THE CYLINDER CHROMIUM-PLATED RODS

Visually check the cylinder rods for scoring every month.

For this operation, fully extend all of the cylinders and check that their rods are intact.



C-8 CHECK THE HYDRAULIC LINES

Every month, do a random check of the oil-dynamic hoses to be sure they are not worn. In particular, we recommend checking the hoses located near moving mechanical parts as they could rub against such parts and get damaged.

CAUTION


Replace any worn hoses immediately before using the machine again.

**C-9 CHECK THE ELECTRIC CABLES**

Every month, do a random check of the electrical cables to be sure they are not damaged. In particular, we recommend checking the cables located near moving mechanical parts as they could rub against such parts and get damaged.

CAUTION

Replace any worn cables immediately before using the machine again.

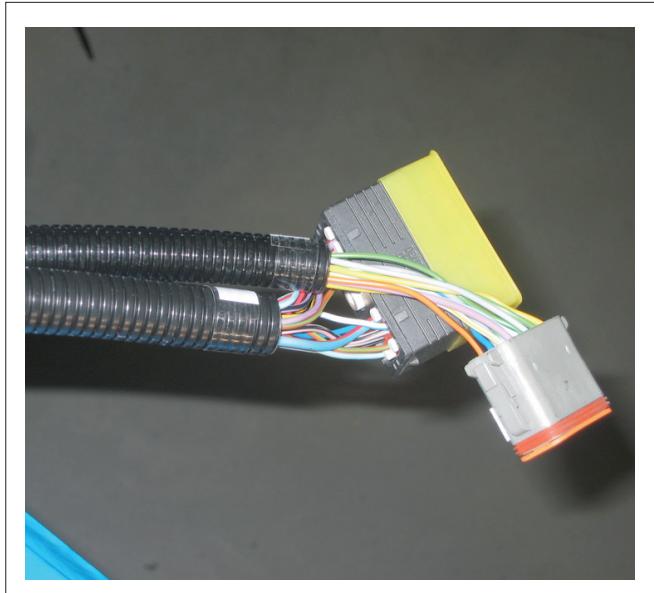



**C-10 CHECK THE WEAR OF THE SLIDING PADS
OF THE BOOM SECTIONS**

Any boom section is fitted with adjustable pads located on the four sides of the profile. These pads are secured to both fixed and mobile part of every section.

All pads can be adjusted by the special shims not supplied by GENIE.

CAUTION

Pads must compulsorily be replaced if the residual thickness of the plastic layer with respect to the iron bush fixing the block is equal or inferior to 1 mm.

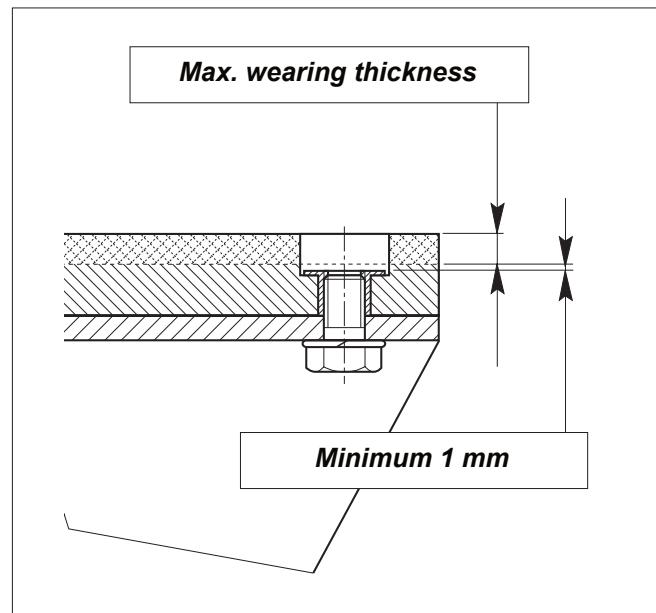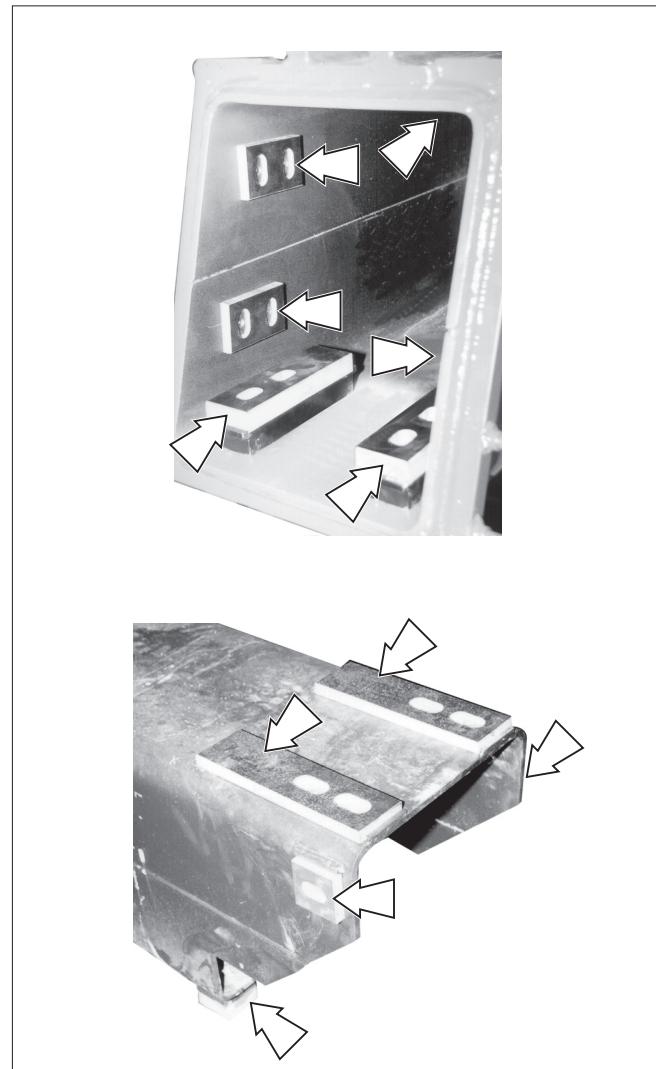

C-11 ADJUST THE PLAY OF THE SLIDING PADS OF THE BOOM SECTIONS

Any boom section is fitted with adjustable pads located on the four sides of the profile. These pads are secured to both fixed and mobile part of every section.

All pads can be adjusted by the special shims.

Adjusting the pads:

- Remove or loosen the screws fixing the pads in relation to type of shims used (with or without slots).
- Fit the necessary amount of shims.
- If the residual thickness of the pad is insufficient or near the maximum wearing limit, renew the pad.
- Tighten the screws fixing the pads at the recommended torque (see below). Use a dynamometric wrench.




Tightening torques of the pad screws in relation to the screw diameter

| | |
|------------|-------|
| Screws M10 | Nm 30 |
| Screws M14 | Nm 50 |

Tightening torques higher than those recommended can cause the break of the pad or of the locking threaded bush.

CAUTION

Pads must compulsorily be replaced if the residual thickness of the plastic layer with respect to the iron bush fixing the block is equal or inferior to 1 mm.

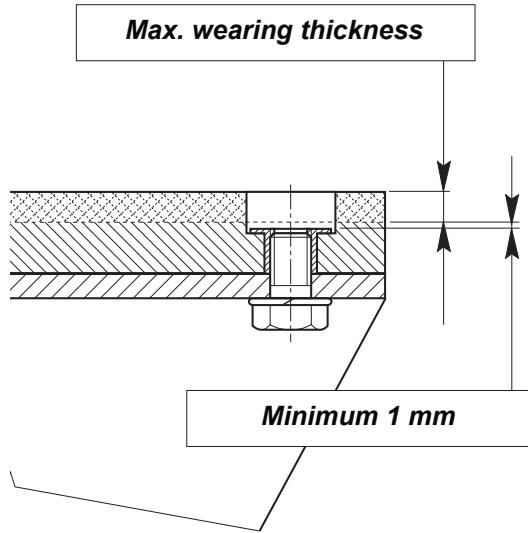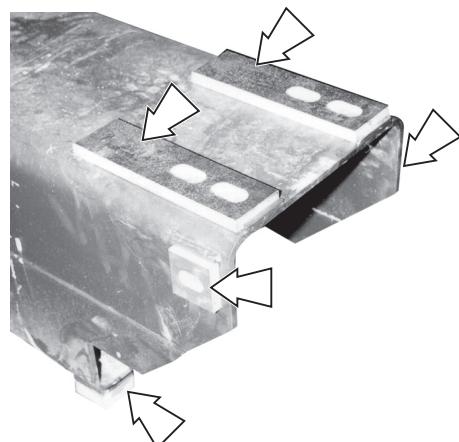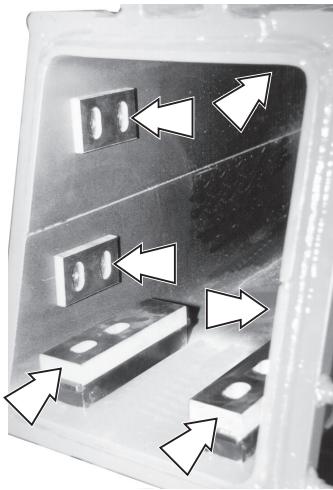

C-12 GREASE THE SLIDING PARTS OF THE BOOM SECTIONS

Check every month that the telescopes are well greased in correspondence of the sliding pads.

If necessary, scrape off the old grease and brush new grease. We recommend using:

- INTERFLON grease FIN GREASE LS 2
code 640772

CAUTION

Avoid mixing greases of different type or features and do not use greases of lower quality.

**C-13 CHECK THE LEVEL OF THE BATTERY
ELECTROLYTE**

- Check the electrolyte level every 250 working hours; if necessary, add distilled water.
- Ensure the fluid is 5÷6 mm above the plates and the cell levels are correct.
- Protect the terminals smearing them with pure vaseline.
- Remove the battery and store it in a dry place, when the machine is not used for a long time.

⚠ DANGER

Risk of explosion or shorts. During the recharge, an explosive mixture with release of hydrogen gas forms.

⚠ DANGER

Do not add sulphuric acid; add only distilled water.

⚠ DANGER

Battery electrolyte contains sulphuric acid. It can burn you if it touches your skin and eyes. Always wear goggles and protective gloves, and handle the battery with caution to prevent spillage. Keep metal objects (watch straps, rings, necklaces) clear of the battery leads, since they can short the terminals and burn you.

⚠ DANGER

- *Before disconnecting the battery, set all switches within the cab to OFF.*
- *To disconnect the battery, disconnect the negative (-) lead from the frame earth first.*
- *To connect the battery, connect the positive (+) lead first.*
- *Recharge the battery far from the machine, in a well-ventilated place.*
- *Keep out of items which can produce sparks, of naked flames or lit cigarettes.*
- *Do not rest metal objects onto the battery. This can result in a dangerous short especially during a recharge.*
- *Because the electrolyte is highly corrosive, it must never come in contact with the frame of the handler or electric/electronic parts. If the electrolyte comes in contact with these parts, contact the nearest authorised assistance centre.*

C-14 CHECK THE EFFICIENCY OF THE BLOCK VALVES

The piloted blocking valves allow to hold the load in position in case of burst of a flexible hose.

To check the efficiency of a valve, proceed as follows:


- Load a weight near the maximum payload (3500 kg roughly) onto the boom.
- Raise the load some centimetres above the ground (max 10 cm). To check the valve on the telescope extension cylinder move the boom to maximum height and extend it some centimetres.
- Loosen the oil hoses to the cylinder of which you are checking the valve with caution.
- To check the efficiency of the block valves of the outriggers, lower them to the ground and unload the weight on the tyres. Loosen the cylinder hoses to check the efficiency of the valve.

During the check, the load shall remain blocked in position.

Should that not be the case, the valve must be replaced. Contact GENIE Technical Service.

NOTICE


Place a container of suitable size under the plug.

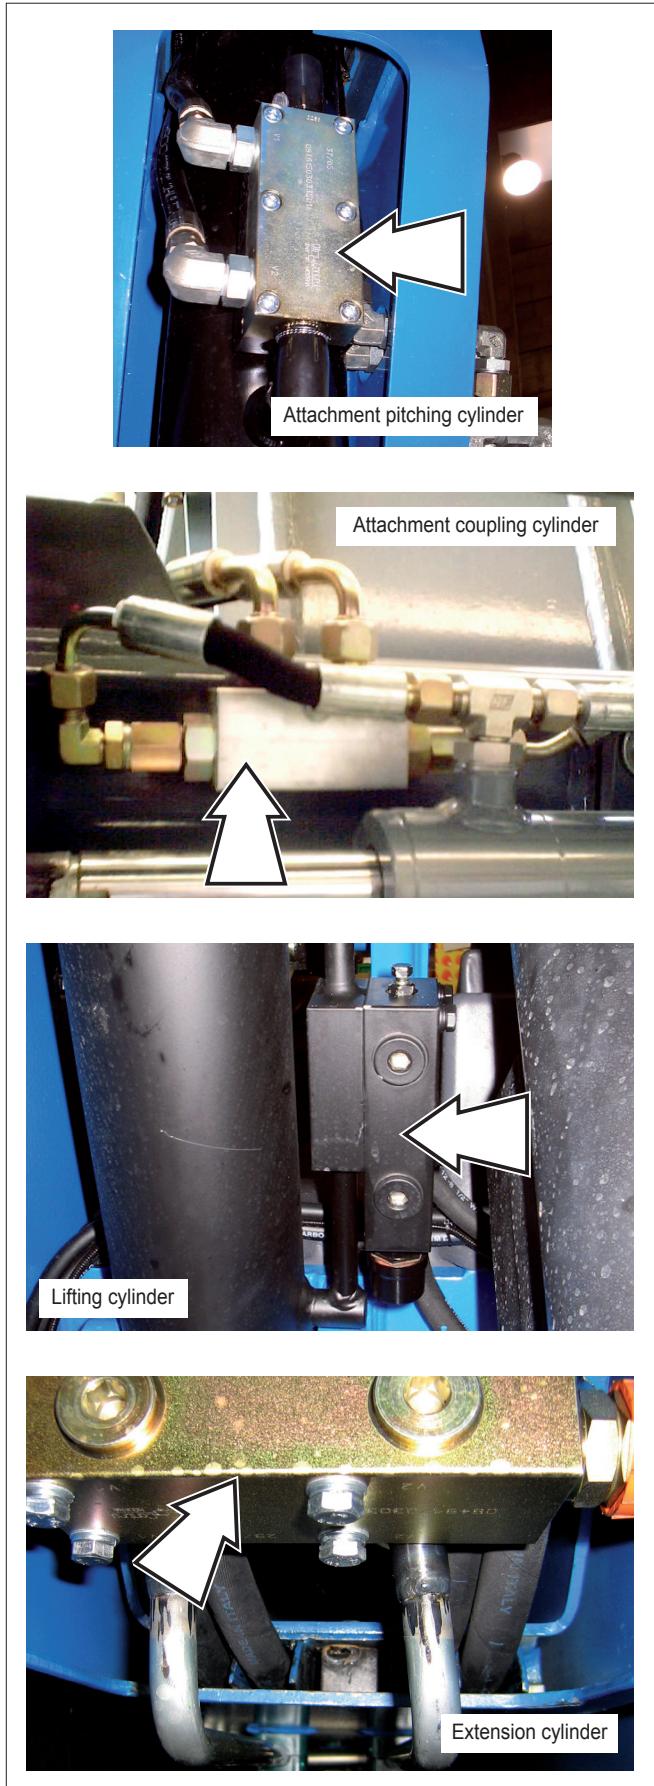

DANGER

Do the check of the valves taking all the possible precautionary measures:

- *Wear safety glasses*
- *Wear safety gloves*
- *Wear safety shoes*
- *Wear suitable working clothes*
- *Use guards against leaks of oil at high pressure*
- *Do the check in a free space with barriers all around to keep non-authorised people away*
- *Ensure that the part to be checked is in safe condition and that the action generated does not result in an uncontrolled movement of the machine.*

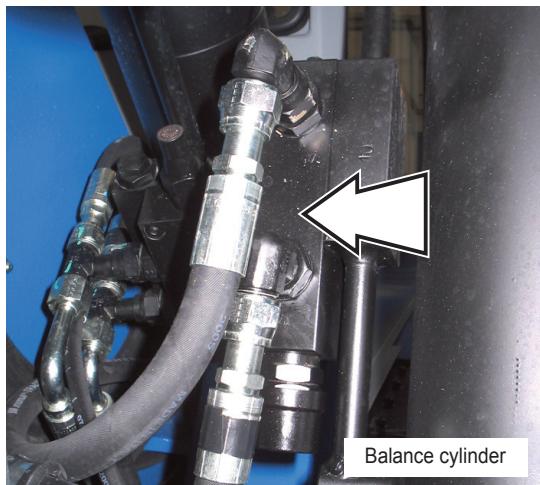**TO REMOVE THE BLOCK VALVES OR THE CYLINDERS**

- *Lower the boom to the ground in a firm way since the removal of the block valve or the cylinder can cause an uncontrolled down-movement.*
- *After refitting the valve or the cylinder, replenish the circuit and eliminate any air before starting working. To eliminate the air from the circuit, move the involved cylinders to end-of-stroke in the two directions (opening/closing. To eliminate the air from the fork balance cylinder, move the boom up and down and tilt the fork plate forwards/back.*

4.6 TABLE D PROCEDURES**D-1 VISUALLY CHECK THE SMOKE QUANTITY
EVACUATED FROM THE ENGINE
EXHAUST**

To check the quantity of smoke evacuated from the engine exhaust, proceed as follows:

- Start the engine of the machine.
- Wait for a few minutes so the engine can warm up correctly.
- Visually check that the amount of smoke coming out of the exhaust is normal; repeat the check while accelerating the engine.

CAUTION

Do this check outdoors or use an adequate smoke extraction system.

CAUTION

In case of excess smoke, strictly obey the instructions provided in the relevant Use and maintenance manual enclosed with the technical literature of the machine.

**D-2 CHECK THE TIGHTENING OF THE ENGINE
FIXING SCREWS**

Every 6 months, check that the screws fixing the engine to the machine chassis are tight.

For this operation, use a torque wrench and tighten the screws to a torque of **124 Nm**.

D-3 CHECK THE TIGHTENING OF THE CAB FIXING SCREWS

Every 6 months, check that the screws fixing the cab to the machine chassis are tight.

For this operation, use a torque wrench and tighten the screws to a torque of **188 Nm**.

D-4 CHECK THE BACKLASH BETWEEN PINS AND BUSHINGS IN ALL JOINTS

Every 6 months, check the machine randomly to be sure the backlash between pins and relevant bushings on the joints is not too high.

CAUTION

If you have to change some parts, please refer to the spare parts catalogue enclosed with the technical literature of the machine.

D-5 CHANGE THE HYDRAULIC OIL FILTER

To change the hydraulic oil filter element, proceed as follows:

- 1 Stop the machine on a level ground and engage the parking brake.
- 2 Place a container of suitable size under the filter to collect any oil leaks.
- 3 Remove the filter cover **B** per accedere alla cartuccia **A**.
- 4 Change the filter element, then, before fitting a new one, thoroughly clean and grease both seat and gasket.
- 5 Refit and tighten the filter cover.

NOTICE

The handling and disposing of used oils may be ruled by local or national regulations. Address to authorised centres.

CAUTION

Hydraulic oil filter canisters cannot be cleaned or washed and refitted.

They must be replaced with new ones of the type recommended by the manufacturer:





Flow rate l/1' = MPS 150

Filtering = 10 μ

code = 09.4604.0001

CAUTION

When changing the oil, drain it when it is still hot and the polluting substances are in suspension.

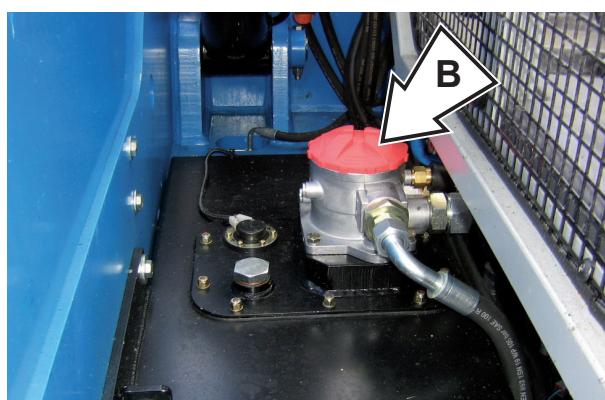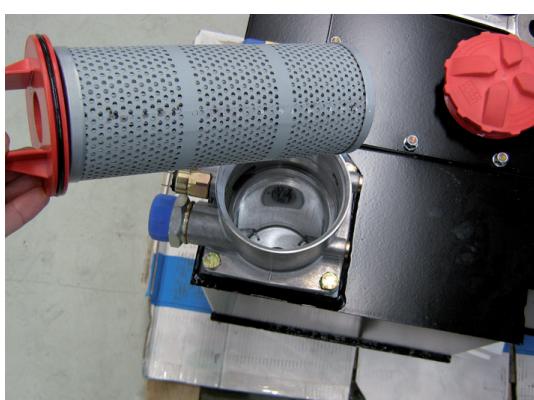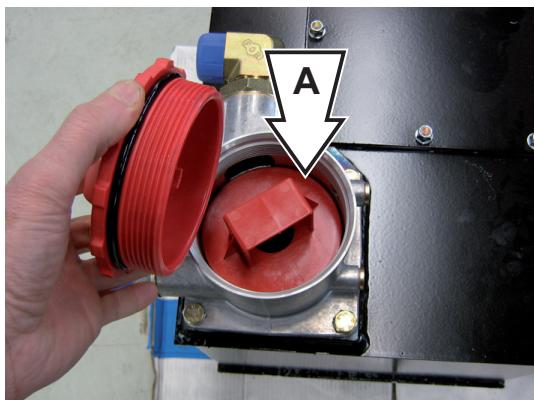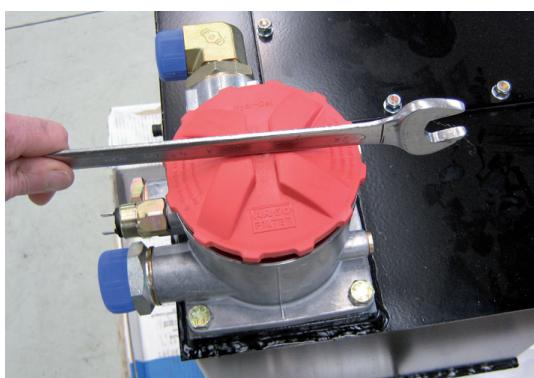

D-6 CHANGE THE HYDRAULIC OIL FILTER IN THE TANK

To change the hydraulic oil filter cartridge of the service circuits, proceed as follows:

- Stop the machine on a level ground and engage the parking brake.
- Remove the inspection hatch **A** and unscrew the oil filter fitted inside the tank.
- Check the tank is clean, then fit a new filtering element and refit the inspection hatch.
- Check the oil level within the tank. Add new oil, if necessary.

CAUTION


Hydraulic oil filter canisters cannot be cleaned or washed and refitted.

They must be replaced with new ones of the type recommended by the manufacturer:

Flow rate l/1' = STR 100/1

Filtering = 60 µ

code = 09.4604.0004

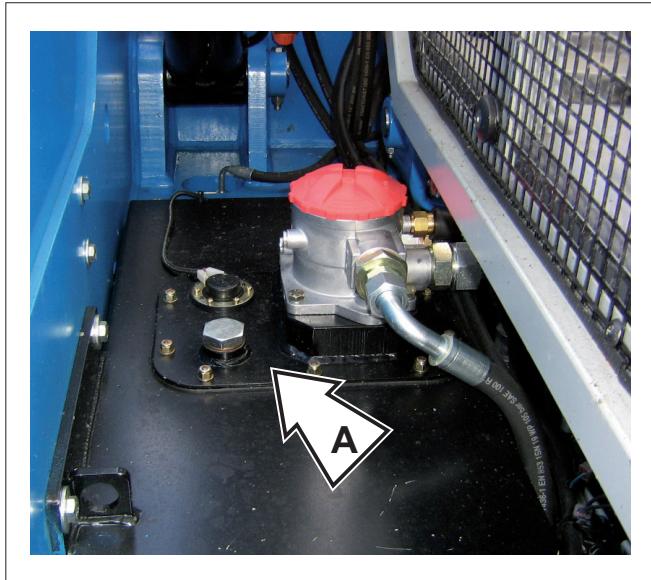

NOTICE

The handling and disposing of used oils may be ruled by local or national regulations. Address to authorised centres.

CAUTION

When changing the oil, drain it when it is still hot and the polluting substances are in suspension.

**D-7 HAVE THE HYDRAULIC SYSTEM CHECKED
BY A SKILLED TECHNICIAN**

Every 6 months, we recommend have the efficiency of the hydraulic system checked by a skilled technician.

CAUTION

In case of need, please contact the GENIE Service Centre.


**D-8 CHANGE THE MAIN CARTRIDGE OF THE
ENGINE AIR FILTER**

Changing the external element:

- Stop the engine and engage the parking brake.
- Unlatch the fasteners **A** and remove cover **B**.
- Pull out the filter cartridge **C**.
- Clean the filter bowl.
- Mount the new cartridge **D** and make sure it is correctly positioned.
- Close cover **B** and lock in place with fasteners **A**.

WARNING

As soon as the warning lamp on the cab dashboard switches on, replace the outer element.

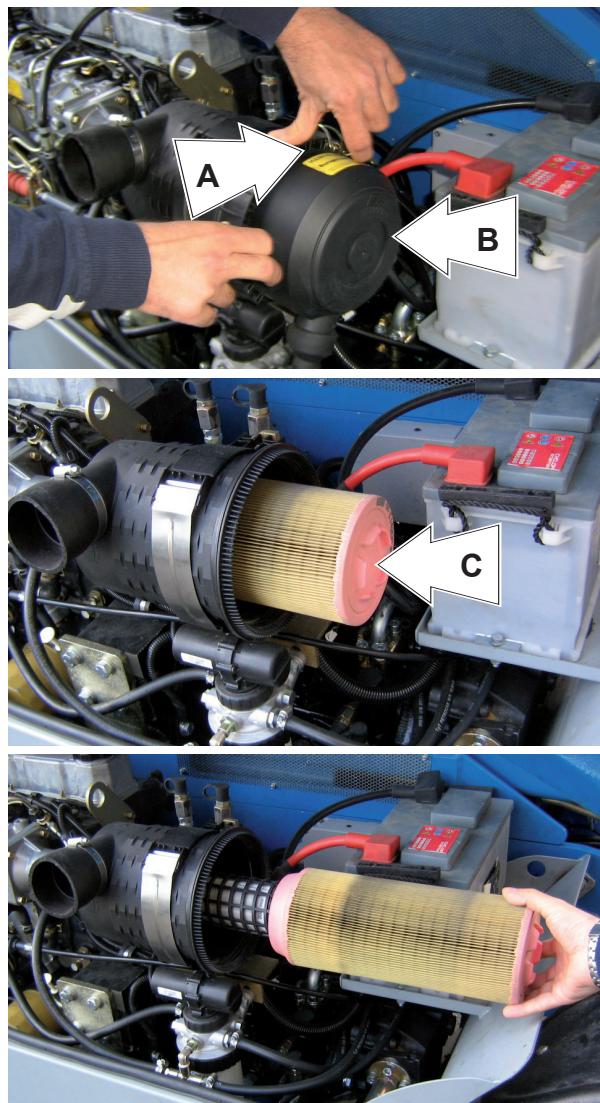

D-9 CLEAN THE CAB AIR FILTER

If the machine comes with a closed cab, clean the air filter in the cab every six months. Replace the cartridge if the filtering cloth is damaged.

Cleaning and changing the cartridge:

- Shut the engine down and engage the parking brake.
- Pull out the filter **A** located to the left of the driving place.
- Clean the filter bowl.
- Clean the filter cartridge and replace in case of damage.

CAUTION

Paper filters must never be cleaned using compressed air or washed with water and/or solvents.



4.7 TABLE E PROCEDURES


E-1 CHANGE THE SAFETY ELEMENT OF ENGINE AIR FILTER

To change the safety element:

- Stop the engine and engage the parking brake.
- Unlatch the fasteners **A** and remove cover **B**.
- Pull out the filter cartridge **C**.
- Loosen wing nut and remove the inner element **D**.
- Clean the filter bowl.
- Mount the new safety element and make sure it is correctly positioned.
- Tighten wingnut.
- Refit the outer element **C**.
- Close cover **B** and lock in place with fasteners **A**.

WARNING

The inner element should be replaced every second time the outer element is replaced.

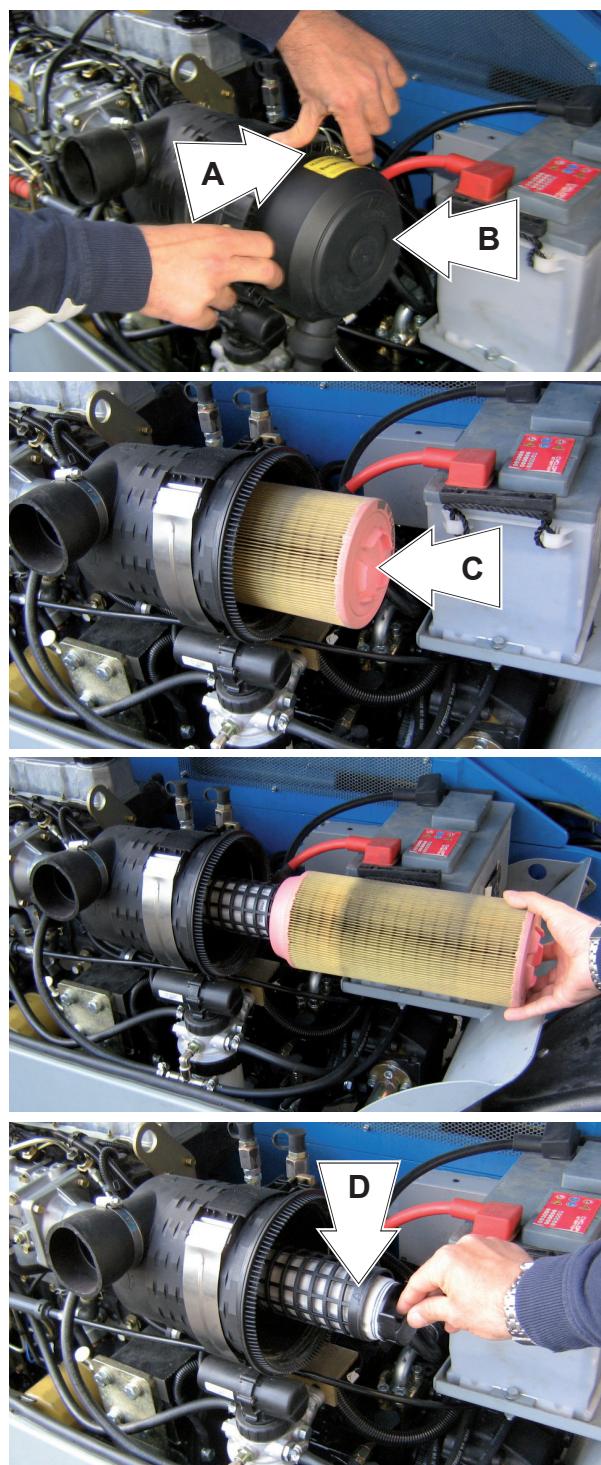

E-2 CHANGE THE OIL WITHIN POWER DIVIDER AND DIFFERENTIAL GEARS

To change the oil level in the **power divider**:

- Stop the machine on a level ground and engage the parking brake.


NOTICE

Place a container of suitable size under the plug.

- Remove the level plug **A** and the filler.
- Remove the drain plug **B** and allow oil to flow out from the power divider.
- Refit and tighten the drain plug **B**.
- Add new oil through the filler until it is level with hole **A**.
- Refit and tighten filler/level plug.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

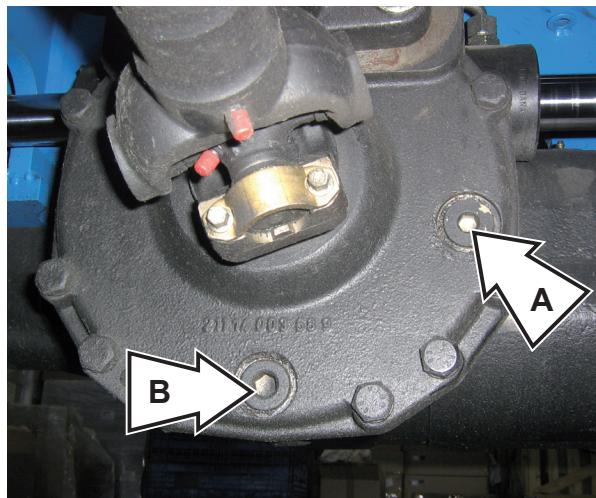

To change the oil level in the **front and rear differential gears**:

- Stop the machine on a level ground and engage the parking brake.


NOTICE

Place a container of suitable size under the plug.

- Loosen the drain plug **B** and the level plug **A** and allow oil to flow out from the differential gears.
- Refit and tighten drain plug **B**.
- Add new oil through plug **A** until it is level with the hole.
- Refit and tighten plug **A**.

Recommended oil:

- **FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5**

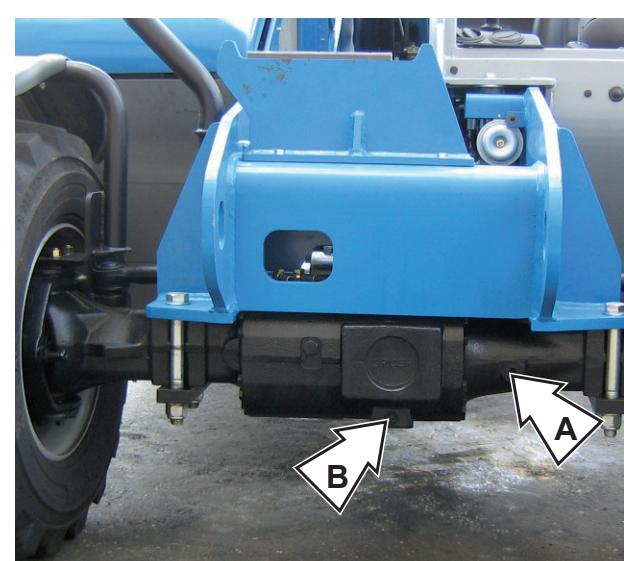

**E-3 CHANGE THE OIL IN THE FOUR WHEEL
REDUCTION GEARS**

To change the oil in the **wheel reduction gears**:

- Stop the machine on a level ground and ensure the parking brake is engaged and plug **A** is oriented along the vertical axis.


NOTICE

Place a container of suitable size under the plug.

- Unscrew plug **A** and drain any oil from the reduction gear.
- Rotate the wheel by 90° until the plug finds again on the horizontal axis.
- Add new oil through hole **A**.
- Refit and tighten plug **A**.

Recommended oil:


- FUCHS TITAN GEAR LS 85 W-90 API GL-5 LS / GL-5

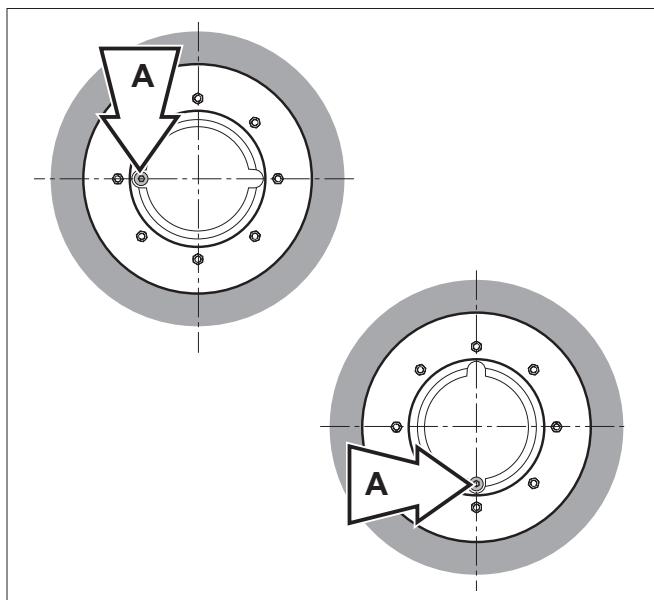

E-4 CHANGE THE HYDRAULIC OIL

To change the hydraulic oil:

- Stop the machine on a level ground and make sure the parking brake is engaged.
- Release the pressure from the hydraulic circuit.
- Place a container of suitable size under the drain plug, placed in the lower part of the reservoir, and collect any oil leaks.
- Remove the drain plug and allow oil to flow out into the container.
- Remove the inspection cover **C** of tank.
- Carefully wash the tank with Diesel oil and blow a jet of compressed air.
- Refit the drain plug and the inspection cover **C**.
- Add new oil through hole **B**, by making sure that it matches the recommended type indicated until it is level with **A**.

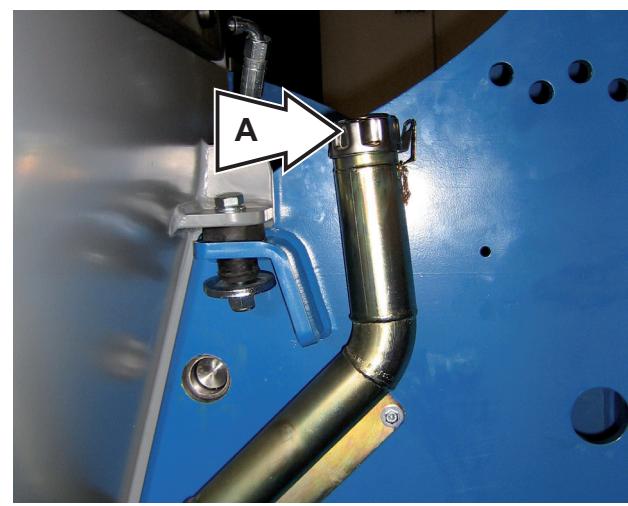

Recommended oil:

- SHELL TELLUS T22 (Temperatures below -10° C)
- SHELL TELLUS T46 (Temperatures from -15° C to +45° C)
- SHELL TELLUS T68 (Temperatures above +30° C)

NOTICE

The handling and disposing of used oils can be ruled by local or national regulations. Address to authorised centres.



4.8 TABLE F PROCEDURES


F-1 CHANGE THE ENGINE COOLANT

DANGER

When the coolant is hot, the cooling system is under pressure. With warm engine, loosen the radiator plug slowly and carefully, without removing it, to drain the pressure. Use protection gloves and keep your face at a safe distance.


To drain the antifreeze:

- Let the engine cool down.
- Unscrew the plug **B** at the bottom of the radiator or disconnect the rubber hose, if no plug is present. Allow the coolant to flow out into a special container.
- Refit the plug or the hose and pour new antifreeze (50% water-antifreeze) through cap **A**. This proportion will provide protection up to -38°C.

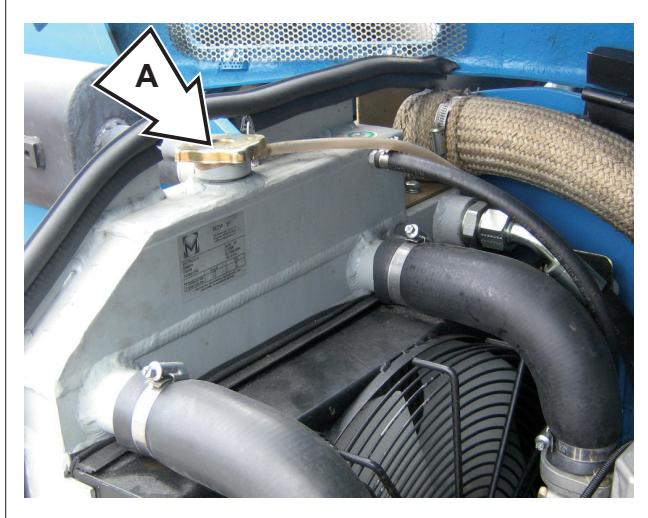

On delivery, the machine is filled with a cooling mixture consisting of 50% water and 50% anti-freeze.

| TEREX PRO COOL | | |
|---------------------------------------|----------------|---------------|
| Protection against boiling / freezing | | |
| Product % | Freezing point | Boiling point |
| 33 | -17 °C | 123 °C |
| 40 | -24 °C | 126 °C |
| 50 | -36 °C | 128 °C |
| 70 | -67 °C | 135 °C |

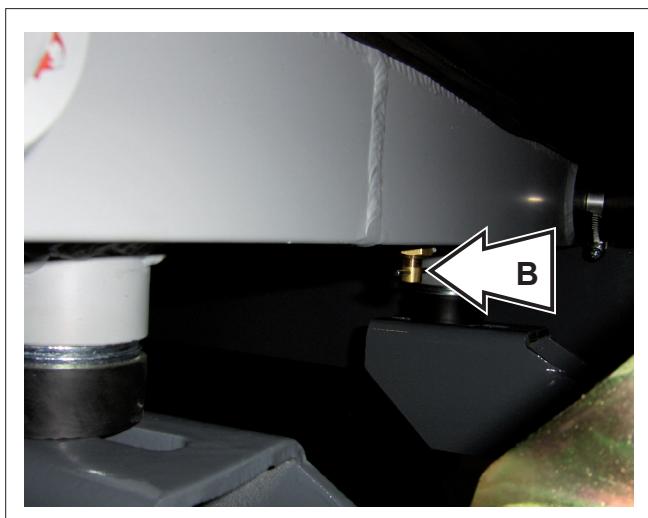


4.9 TABLE G PROCEDURES**G-1 CHECKING THE STATE OF THE STRUCTURE**

Five years after the first placing into operation of the machine or after 6000 hours (whichever occurs first), check the state of the structure paying attention to the welded supporting joints and the boom pins.

DANGER

After the first 5 years, repeat this check every 2 years.

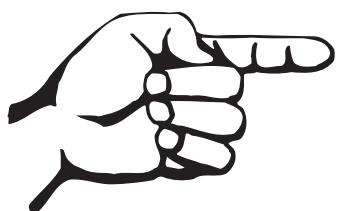

Intentionally blank page

Section 5

TROUBLESHOOTING

SECTION INDEX

| | | | |
|-------|--------------------------------|------|---|
| 5.1 | Introduction..... | page | 2 |
| 5.2 | About this section | | 3 |
| 5.3 | Problems-Causes-Solutions..... | | 4 |
| 5.3.1 | Hydraulic faults..... | | 4 |
| 5.3.2 | Electrical faults | | 9 |

5.1 INTRODUCTION



- *Maintenance inspections shall be completed by a person trained and qualified on the maintenance of this machine.*
- *Immediately tag and remove from service a damaged or malfunctioning machine.*
- *Repair any damage or malfunction before operating machine.*
- *Unless otherwise specified, perform each procedure with the machine in the following configuration:*
 - machine parked on a flat level surface;
 - boom in the stowed position;
 - key switch in the OFF position with the key removed.



Before troubleshooting:

- *Read, understand and obey the safety rules and operating instructions printed in the Operator Manual of the machine.*
- *Be sure that all necessary tools are available and ready for use.*
- *Read each appropriate flow chart thoroughly.*
- *Pay special attention to the following warnings:*

DANGER

Crushing hazard. When testing or replacing any hydraulic component, always support the structure and secure it from movement.

WARNING

Electrocution hazard. Contact with electrically charged circuits may result in death or serious injury. Remove all rings, watches and other jewelry.

WARNING

Spraying hydraulic oil can penetrate and burn skin; loosen hydraulic connections very slowly to allow the oil pressure to dissipate gradually. Do not allow oil to squirt or spray.

CAUTION

Perform all troubleshooting on a firm level surface.

CAUTION

Two person will be required to safely perform some troubleshooting procedures.

5.2 ABOUT THIS SECTION

The tables on the following pages should be used to find and rectify problems that can occur when using the machine.

Prepare adequate tools, and especially a voltmeter and a pressure gauge to carry out the checks explained on next pages.

The initials of the electrical and hydraulic parts indicated in the following tables are given to help you find such parts on the schemes and diagrams in chapter 6.

The tables should be read as follows:

- once you have identified the problem, search this problem in the "**problem**" column;
- analyse the possible causes explained in the "**causes**" column;
- proceed with the check or replacement according to the instructions provided in the "**solutions**" column;
- check that the machine runs well;
- if the problem cannot be eliminated, check again all indications in the "**causes**" column and proceed accordingly.

CAUTION

For any further information, contact the GENIE Service Centre.

5.3 PROBLEMS-CAUSES-SOLUTIONS

5.3.1 Hydraulic faults

| Problem | Cause | Solution |
|--|---|--|
| The machine does not move neither forwards nor in reverse | Low pressure of the drive pump DA valve damaged Hydraulic oil filter restricted | Re-calibrate the pump (see sec. 2) Check the operation and replace the valve if necessary Change the oil filter |
| The boom does not move | Low pressure Hydraulic pump damaged Load sensing valve defective The valve of the main valve leaks Joystick damaged | Set the max pressure of the main valve to 270 bar Replace the pump Check the efficiency of the valve; replace if necessary Dismantle the valve, check and eliminate any foreign matters Check the efficiency of the joystick; replace if necessary |
| Wrong wheel shafting | Leakage in the steering cylinders Leakage in the steer selection solenoid valve | Check and replace the seals if necessary Check the efficiency of the solenoid valve |
| The steering wheel is hard (low force in the cylinders) | Low pressure Priority valve damaged | Check the pressure; in case, reset (170 bar) Check the efficiency of the valve; replace if necessary |
| Low booster supply | Pump damaged Motor damaged | Change the pump Change the motor |
| The machine drive is not enough | Hydraulic oil filter restricted Low hydraulic oil level | Clean the oil filter Replenish the tank up to the recommended level |

| Problem | Cause | Solution |
|---|---|--|
| | The oil in the tank is contaminated | Drain the oil, clean tank and pipes, empty the pumps and add new oil |
| By stepping down on the pedal, the machine does not brake | Brake pump damaged Front axle brakes defective | Check the pump operation and bleed the system if necessary Check the operation of the brake disks of the front axle |
| When the engine is stopped, the lifting cylinder does not support the boom | Block valves damaged or dirty Cylinder seal defective | Check the efficiency of the valves; replace if necessary Replace the seal |
| When the engine is stopped, the cylinder does not support the forks | Block valves damaged or dirty Cylinder seal defective | Check the efficiency of the valves; replace if necessary Replace the seal |
| When the engine is stopped and the boom is high, the extension cylinder moves in | Block valves damaged or dirty Cylinder seal defective | Check the efficiency of the valves; replace if necessary Replace the seal |
| When the load is lifted, the fork cannot be levelled | Seals of the levelling cylinder worn out Shockproof valves of the main valve dirty or maladjusted One-way valves of the levelling cylinder dirty or damaged | Dismantle the cylinder and replace the seals Remove the valves, dry-clean or replace if damaged, and re-calibrate Remove the valves, dry-clean or replace if damaged, and replace in their seats |

| Problem | Cause | Solution |
|--|---|--|
| When the max load is applied, forks move down | <p>Seals, rod and liner of the fork tilting cylinder worn out</p> <p>Leakage in the cylinder block valve</p> <p>Low pressure in the hydraulic circuit</p> | <p>Dismantle the cylinder and check and replace any defective parts</p> <p>Check the leakage; remove the valve and rectify or replace</p> <p>Re-calibrate the main valve</p> |
| The fork tilting is not efficient | <p>The seals of the fork levelling cylinder are damaged</p> <p>Leakage in the cylinder block valve</p> <p>Line from main valve to block valve defective</p> <p>Safety valves of the main valve maladjusted or damaged</p> | <p>Fit a new kit of seals and check the tightness of the cylinder</p> <p>Check the valve operation; if necessary, clean or change the valve</p> <p>Check the hydraulic line carefully and replace any defective pipelines</p> <p>Check the efficiency of the safety valve fitted to the ports of the main valve. If necessary, proceed with the calibration or replacement</p> |
| The boom extension is not efficient | <p>The seals of the internal boom extension cylinder are damaged</p> <p>Cylinder rod damaged</p> <p>Leakage in the cylinder block valve</p> <p>Hydraulic line defective</p> <p>Main valve damaged</p> | <p>Fit a new kit of seals and check the tightness of the cylinder</p> <p>Check the rod condition</p> <p>Check the valve operation; if necessary, clean or replace the valve</p> <p>Check the hydraulic line carefully and replace any defective pipelines</p> <p>Check the efficiency of the main valve and replace if necessary</p> |

| Problem | Cause | Solution |
|---|--|---|
| The boom lifting is not efficient | The seals of the lifting cylinder are damaged Cylinder rod damaged Leakage in the cylinder block valve | Fit a new kit of seals and check the tightness of the cylinder Check the rod condition Check the valve operation; if necessary, clean or replace the valve |
| During the down-movement, the boom jerks | Leakage in the cylinder block valve | Check the valve operation; if necessary, clean or replace the valve |
| Operating the joystick no function is activated | Joystick damaged Valve of the main valve damaged | Check the joystick efficiency; replace if necessary Check the efficiency of the valve; replace if necessary |
| The steering wheel is slow and noisy | Couplings damaged Hydraulic drive damaged | Replace the couplings Replace the hydraulic drive |
| Differential noisy and high temperature on the body | No oil Bearings damaged | Check the oil level and refill. If trouble cannot be rectified, dismantle the unit Replace the bearings |
| The boom is hard to move in when it is fully extended in the horizontal position | Sliding blocks worn out | Check all the front bottom pads and the rear top pads for wear; clean the sliding guides of the boom thoroughly and lubricate with the special "INTERFLON FIN GREASE LS 2" grease |
| When moving out the second telescope, the boom tends to move right and left | Sliding blocks worn out | Check the play and replace any worn parts or place shims |
| When moving out the second telescope, the boom tends to jump | Grease is insufficient or inadequate | Check that the grease smeared on the boom is INTERFLON FIN GREASE LS2; smear the boom againwith grease |


| Problem | Cause | Solution |
|---------------------|---|---|
| | Foreign matters on the sliding blocks and the relevant surfaces of the boom | Check and eliminate any foreign matters |
| Low traction | Drive pump defective | Check the pressure values of the drive pump and re-calibrate if necessary. If the overfeeding pressure drops down, replace the pump and clean the pump-motor couplings |
| | | |

5.3.2 Electrical faults

| Problem | Cause | Solution |
|---|--|---|
| No power to dashboard | Battery switch off Battery down 50A fuse blown Dashboard damaged Broken or damaged wiring | Turn on the switch Check the battery efficiency; replace if necessary Change the fuse Check the dashboard and replace if necessary Reconnect or replace the wiring |
| Engine does not start, starter does not run | 50A fuse blown Dashboard damaged K01 relay damaged Speed switch ruined 70A engine start relay damaged (K11) Starter defective | Change the fuse Check the dashboard and replace if necessary Change the relay Check or replace the speed switch Change the relay Change the starter |
| Engine does not start - starter runs but engine does not start | No fuel Fuel filter clogged Fuel ducts empty Start aid solenoid damaged Engine stop solenoid damaged Broken or damaged wiring | Refuel Clean or replace the filter Eliminate any air Check the efficiency and replace if necessary Check the efficiency and replace if necessary Reconnect or replace the wiring |
| The machine does not move forward/back | Speed switch damaged Fuse F23 broken Relays K02-K03-K05 damaged | Check the efficiency or replace the switch if necessary Change the fuse Change the relays |

| Problem | Cause | Solution |
|--|---|---|
| | Forward/reverse speed solenoid valves damaged Service brake micro-switch damaged Parking brake switch Broken or damaged wiring Negative brake pressure switch | Check the efficiency or replace Check the efficiency or replace Check the efficiency or replace Reconnect or replace the wiring Check the efficiency or replace |
| No steer selection | Fuse F20 blown Steer selector damaged Coils of the steer selection solenoid valve damaged Broken or damaged wiring | Change the fuse Check the efficiency or replace the switch if necessary Check the coils; replace if necessary Reconnect or replace the wiring |
| Hydraulic oil thermometer defective | Indicator damaged Temperature sensor defective Broken or damaged wiring | Change the part Check or replace the sensor Reconnect or replace the wiring |
| The parking brake lamp does not come on | Dashboard instrument damaged Broken or damaged wiring | Change Reconnect or replace the wiring |
| The fuel gauge does not work | Dashboard instrument damaged Fuel sensor defective Broken or damaged wiring | Change Check and replace the sensor if necessary Reconnect or replace the wiring |

| Problem | Cause | Solution |
|---|--|---|
| The engine coolant thermometer does not work | Indicator defective Temperature sensor defective Broken or damaged wiring | Change the part Check and replace the sensor if necessary Reconnect or replace the wiring |
| High hydraulic oil temperature | Hydraulic oil bulb damaged Indicator defective Radiador clogged | Check or replace the bulb if necessary Change the part Check the radiator and eliminate any impurities from the fins |
| The joystick does not operate the boom extension/retraction | Fuse F20 blown Road-jobsite-platform selector damaged Yellow button on control lever Main valve selection valve Broken or damaged wiring | Change the fuse Check and replace the selector if necessary Check the efficiency of the yellow pushbutton Check the efficiency of the solenoids and replace if they are damaged Reconnect or replace the wiring |
| The joystick does not operate the attachment locking/unlocking | Fuse F20 blown Red button on control lever Main valve selection valve Mouvement selection button | Change the fuse Check the efficiency of the red pushbutton Check the efficiency of the electrical coils and replace if they are damaged Check the efficiency or replace |
| | | |

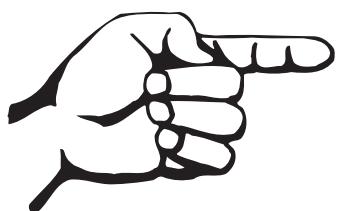

Intentionally blank page

Section 6


SCHEMES

SECTION INDEX


| | | page |
|-------|--|------|
| 6.1 | Hydraulic symbols | 2 |
| 6.2 | Hydraulic schemes | 5 |
| 6.2.1 | GTH 55-19 | 5 |
| 6.3 | Electrical symbols | 7 |
| 6.4 | Wiring diagrams | 9 |
| 6.4.1 | Wiring diagrams - Component description | 17 |
| 6.4.2 | Fuses and relays | 19 |
| 6.5 | Position of the electrical and hydraulical components on the machine | 20 |
| 6.5.1 | Hydraulical components | 20 |

6.1 HYDRAULIC SYMBOLS


| MOTORS | | COMMANDS AND CONTROLS | | PIPS AND CONNECTIONS | | POWER SOURCES | | OTHER EQUIPMENT | |
|---|---|---|--|---|--|---|------------------------|---|--------------------------|
|  | Fixed motor with one direction of flow |  | Mechanical control with roller |  | Combined non-return and throttle valve |  | Electric motor |  | Accumulator |
|  | Fixed motor with two directions of flow |  | Electro-magnetic control with winding (solenoid) |  | Pressure relief valve with direct control |  | Thermal engine |  | Water tank |
|  | Variable motor with two directions of flow |  | Control with electric motor |  | Pressure reducing valve |  | Sequence valve |  | Compressor |
|  | Reversible fixed motor with two directions of flow |  | Direct pressure control |  | Adjustable throttle valve |  | Two-way flow regulator |  | Cut-out cock |
| PUMP | | Indirect (piloted) pressure control | | Control with electromagnet and piloted distributor | | POWER SOURCES | | OTHER EQUIPMENT | |
|  | Fixed displacement pump with one direction of flow |  | Indirect (piloted) pressure control |  | Control with electromagnet and piloted distributor |  | Electric motor |  | Filter |
|  | Fixed displacement pump with two directions of flow |  | Piloting pipe |  | Pipe cross without connection |  | Thermal engine |  | Cooler |
|  | Variable displacement pump with one direction of flow |  | Blow-by pipe |  | Breather |  | Pressure gauge |  | Thermometer |
|  | Variable displacement pump with flow regulator |  | Flexible hose |  | Closed pressure fitting |  | Flowmeter |  | Quick fitting |
| CYLINDERS | |  | Connecting point |  | Quick fitting with check valves |  | Pressure switch |  | Drain to tank indication |
|  | Single-acting cylinder |  | Double-acting cylinder |  | Double-acting cylinder with bilateral rod |  | Telescopic cylinder |  | Filter |
|  | Single-acting cylinder with spring return |  | Pipe cross without connection |  | Breather |  | Water tank |  | Cooler |
|  | Double-acting cylinder |  | Double-acting cylinder with bilateral rod |  | Telescopic cylinder |  | Pressure gauge |  | Thermometer |
|  | Double-acting cylinder with bilateral rod |  | Telescopic cylinder |  | Filter |  | Compressor |  | Pressure switch |
|  | Telescopic cylinder |  | Filter |  | Thermometer |  | Water tank |  | Compressor |
| COMMANDS AND CONTROLS | |  | Shaft rotating in one direction |  | Closed pressure fitting |  | Thermometer |  | Filter |
|  | Shaft rotating in two directions |  | Pressure fitting with connected pipe |  | Thermometer |  | Water tank |  | Compressor |
|  | Hand-operated control |  | Quick fitting |  | Thermometer |  | Filter |  | Water tank |
|  | Hand-operated control with pushbutton |  | Quick fitting with check valves |  | Thermometer |  | Filter |  | Compressor |
|  | Hand-operated control with lever |  | Non-return valve |  | Thermometer |  | Filter |  | Water tank |
|  | Hand-operated control with pedal |  | Calibrated non-return valve |  | Thermometer |  | Filter |  | Compressor |
|  | Mechanical control with pushbutton |  | Unlockable non-return valve |  | Thermometer |  | Filter |  | Water tank |
|  | Mechanical control with spring | | | | | | | | |

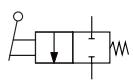DISTRIBUTION - SETTING ELEMENTS


Two-position and two-way distributor, with manual lever control and spring return

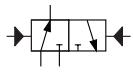

Three-way and two-position distributor, with hydraulic control

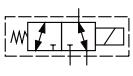


Two-position, three-way distributor, with electro-magnetic control and spring return

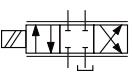


Distributor with mechanical control and span proportional to the action of the same control



Two-position, three-way distributor, with representation of transient connection during passage phase

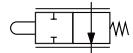


Electro-hydraulic single-acting servo valve

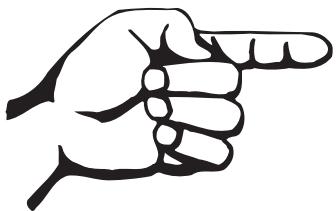


Intentionally blank page

6.2 HYDRAULIC SCHEME







6.2.1 GTH 55-19



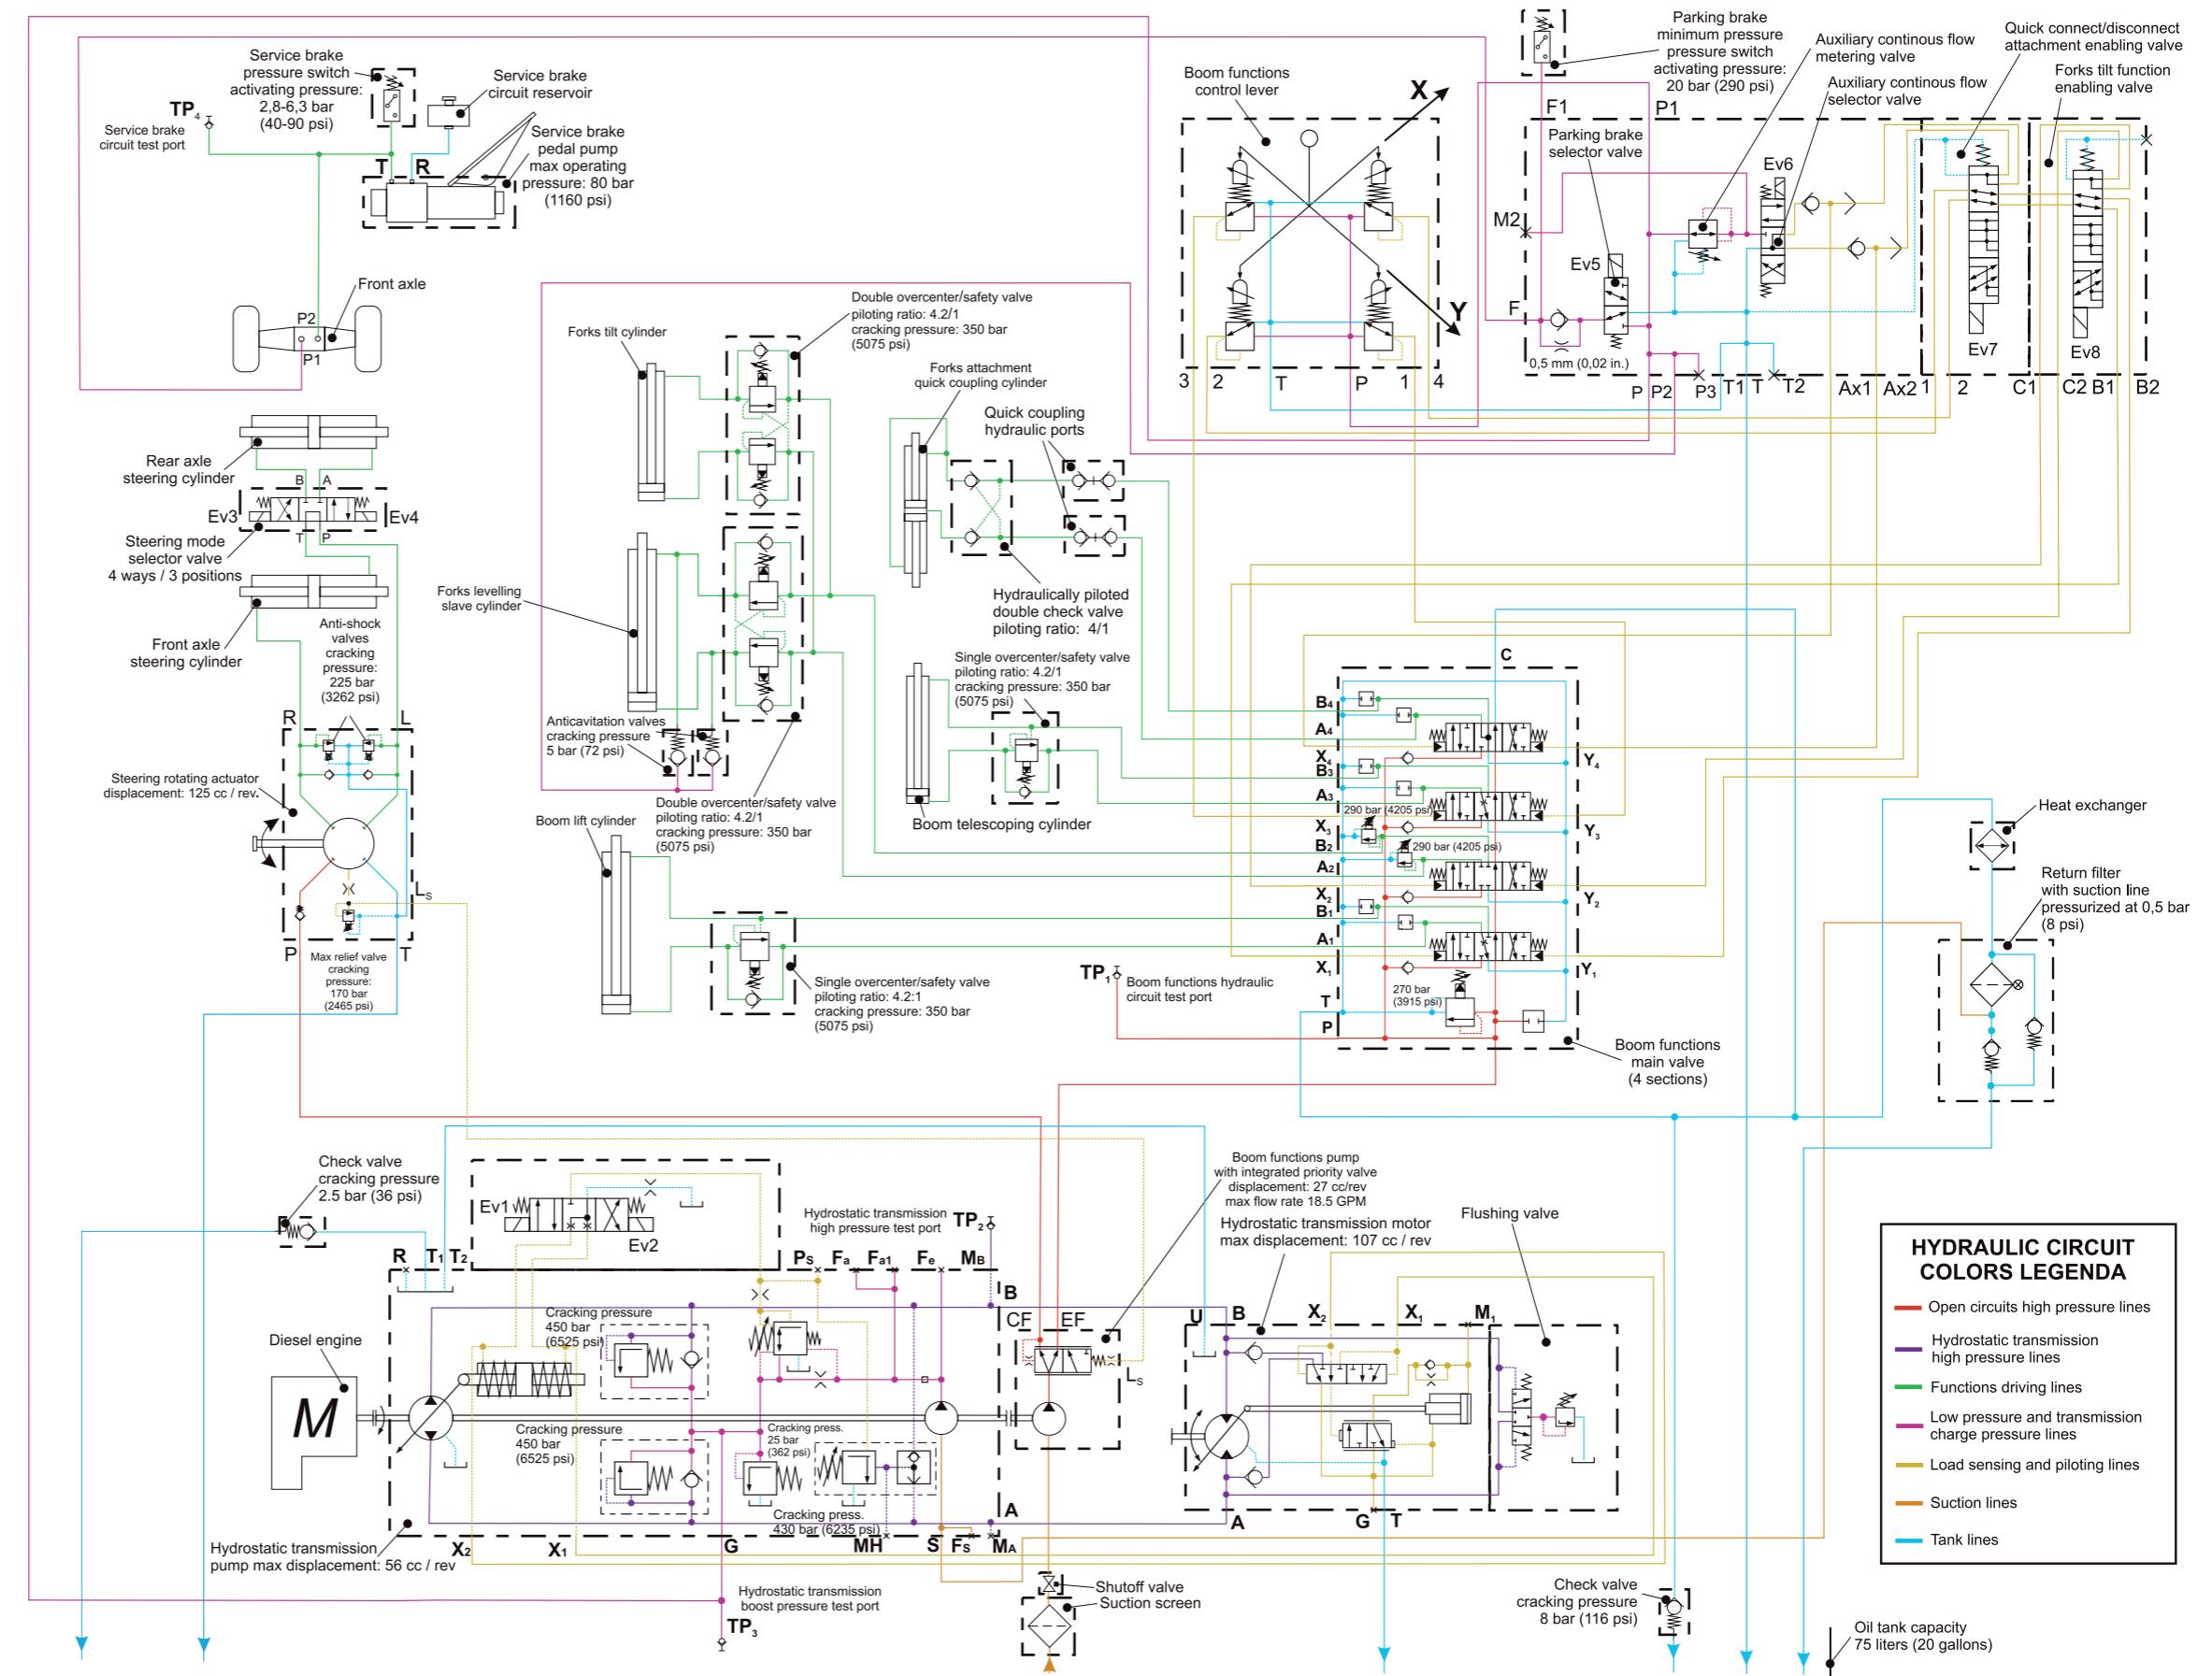


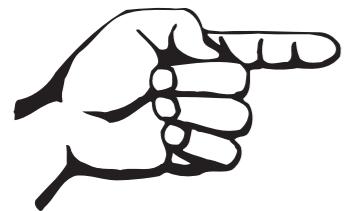


Intentionally blank page


6.3 ELECTRICAL SYMBOLS

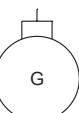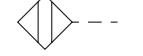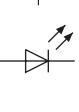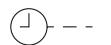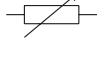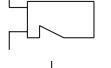
| | | | | | |
|---|---------------------------|---|--------------------------|---|-----------------------------|
| ACTUATORS | | ACCUMULATORS | | DYNAMIC APPLICATIONS | |
|  | Emergency controls |  | Battery |  | Motor |
|  | Pushbutton control |  | Thermocouple |  | Generator |
|  | Rotary control |  | Element |  | As_3p_motor |
|  | Pedal control |  | Ring | ELECTRONIC PARTS | |
|  | Proximity control |  | Ground |  | Rectifier |
|  | Lever control |  | Terminal |  | Light-emitting diode |
|  | Timed control |  | Ground to frame |  | Diode |
|  | Mechanical/manual control |  | Knot |  | Condenser |
|  | Key control |  | Protection ground | PUSHBUTTONS | |
| RESISTANCES | |  | Frame ground 2 |  | Manual NC contact |
|  | Resistance |  | Coil |  | Manual NO contact |
|  | Resistor |  | Mechanical coupling coil |  | NC mushroom-head pushbutton |
|  | Potentiometer |  | Winding |  | NO mushroom-head pushbutton |
|  | Variable resistance |  | A/C coil |  | NC level |
| SIGNALS | |  | Coil with diode |  | NO level |
|  | Intermittent lamp |  | Winding with diode |  | Pushbutton with NC return |
|  | Whistle |  | Connector |  | Pushbutton with NO return |
|  | Lamp | STATIC APPLICATIONS | |  | NC tie-rod |
|  | Buzzer |  | Auto-transformer |  | NO tie-rod |
|  | Siren |  | Transformer | | |
|  | Bell | | | | |
|  | Horn | | | | |
| FUSES AND RELAYS | | | | | |
|  | Horizontal fuse | | | | |
|  | Relay | | | | |

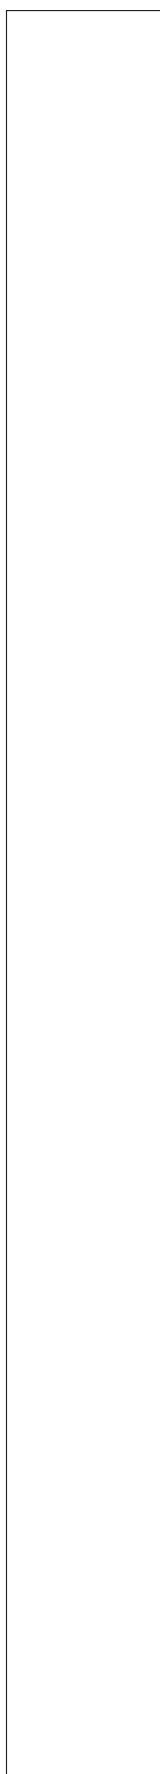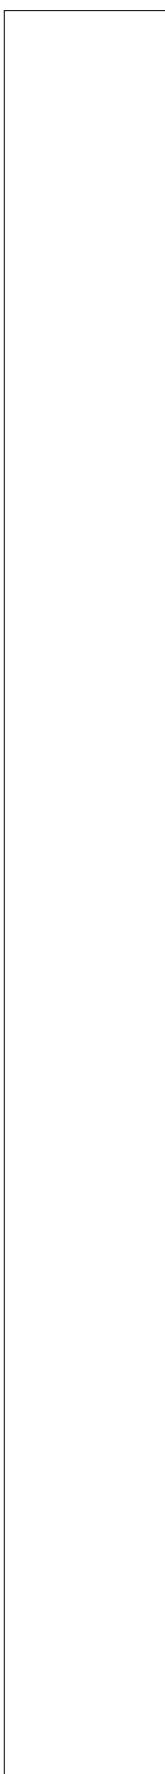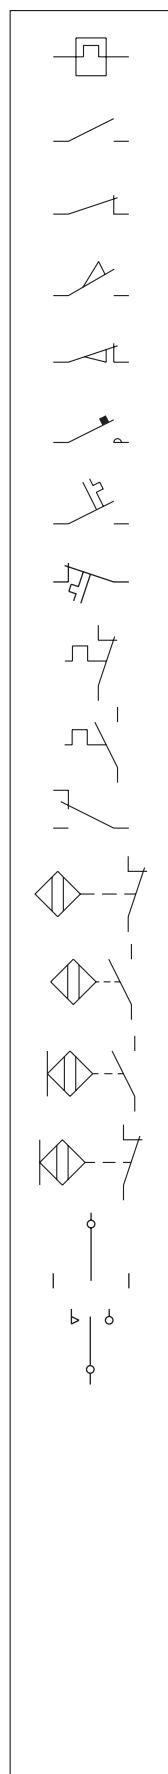



6.4 WIRING DIAGRAMS

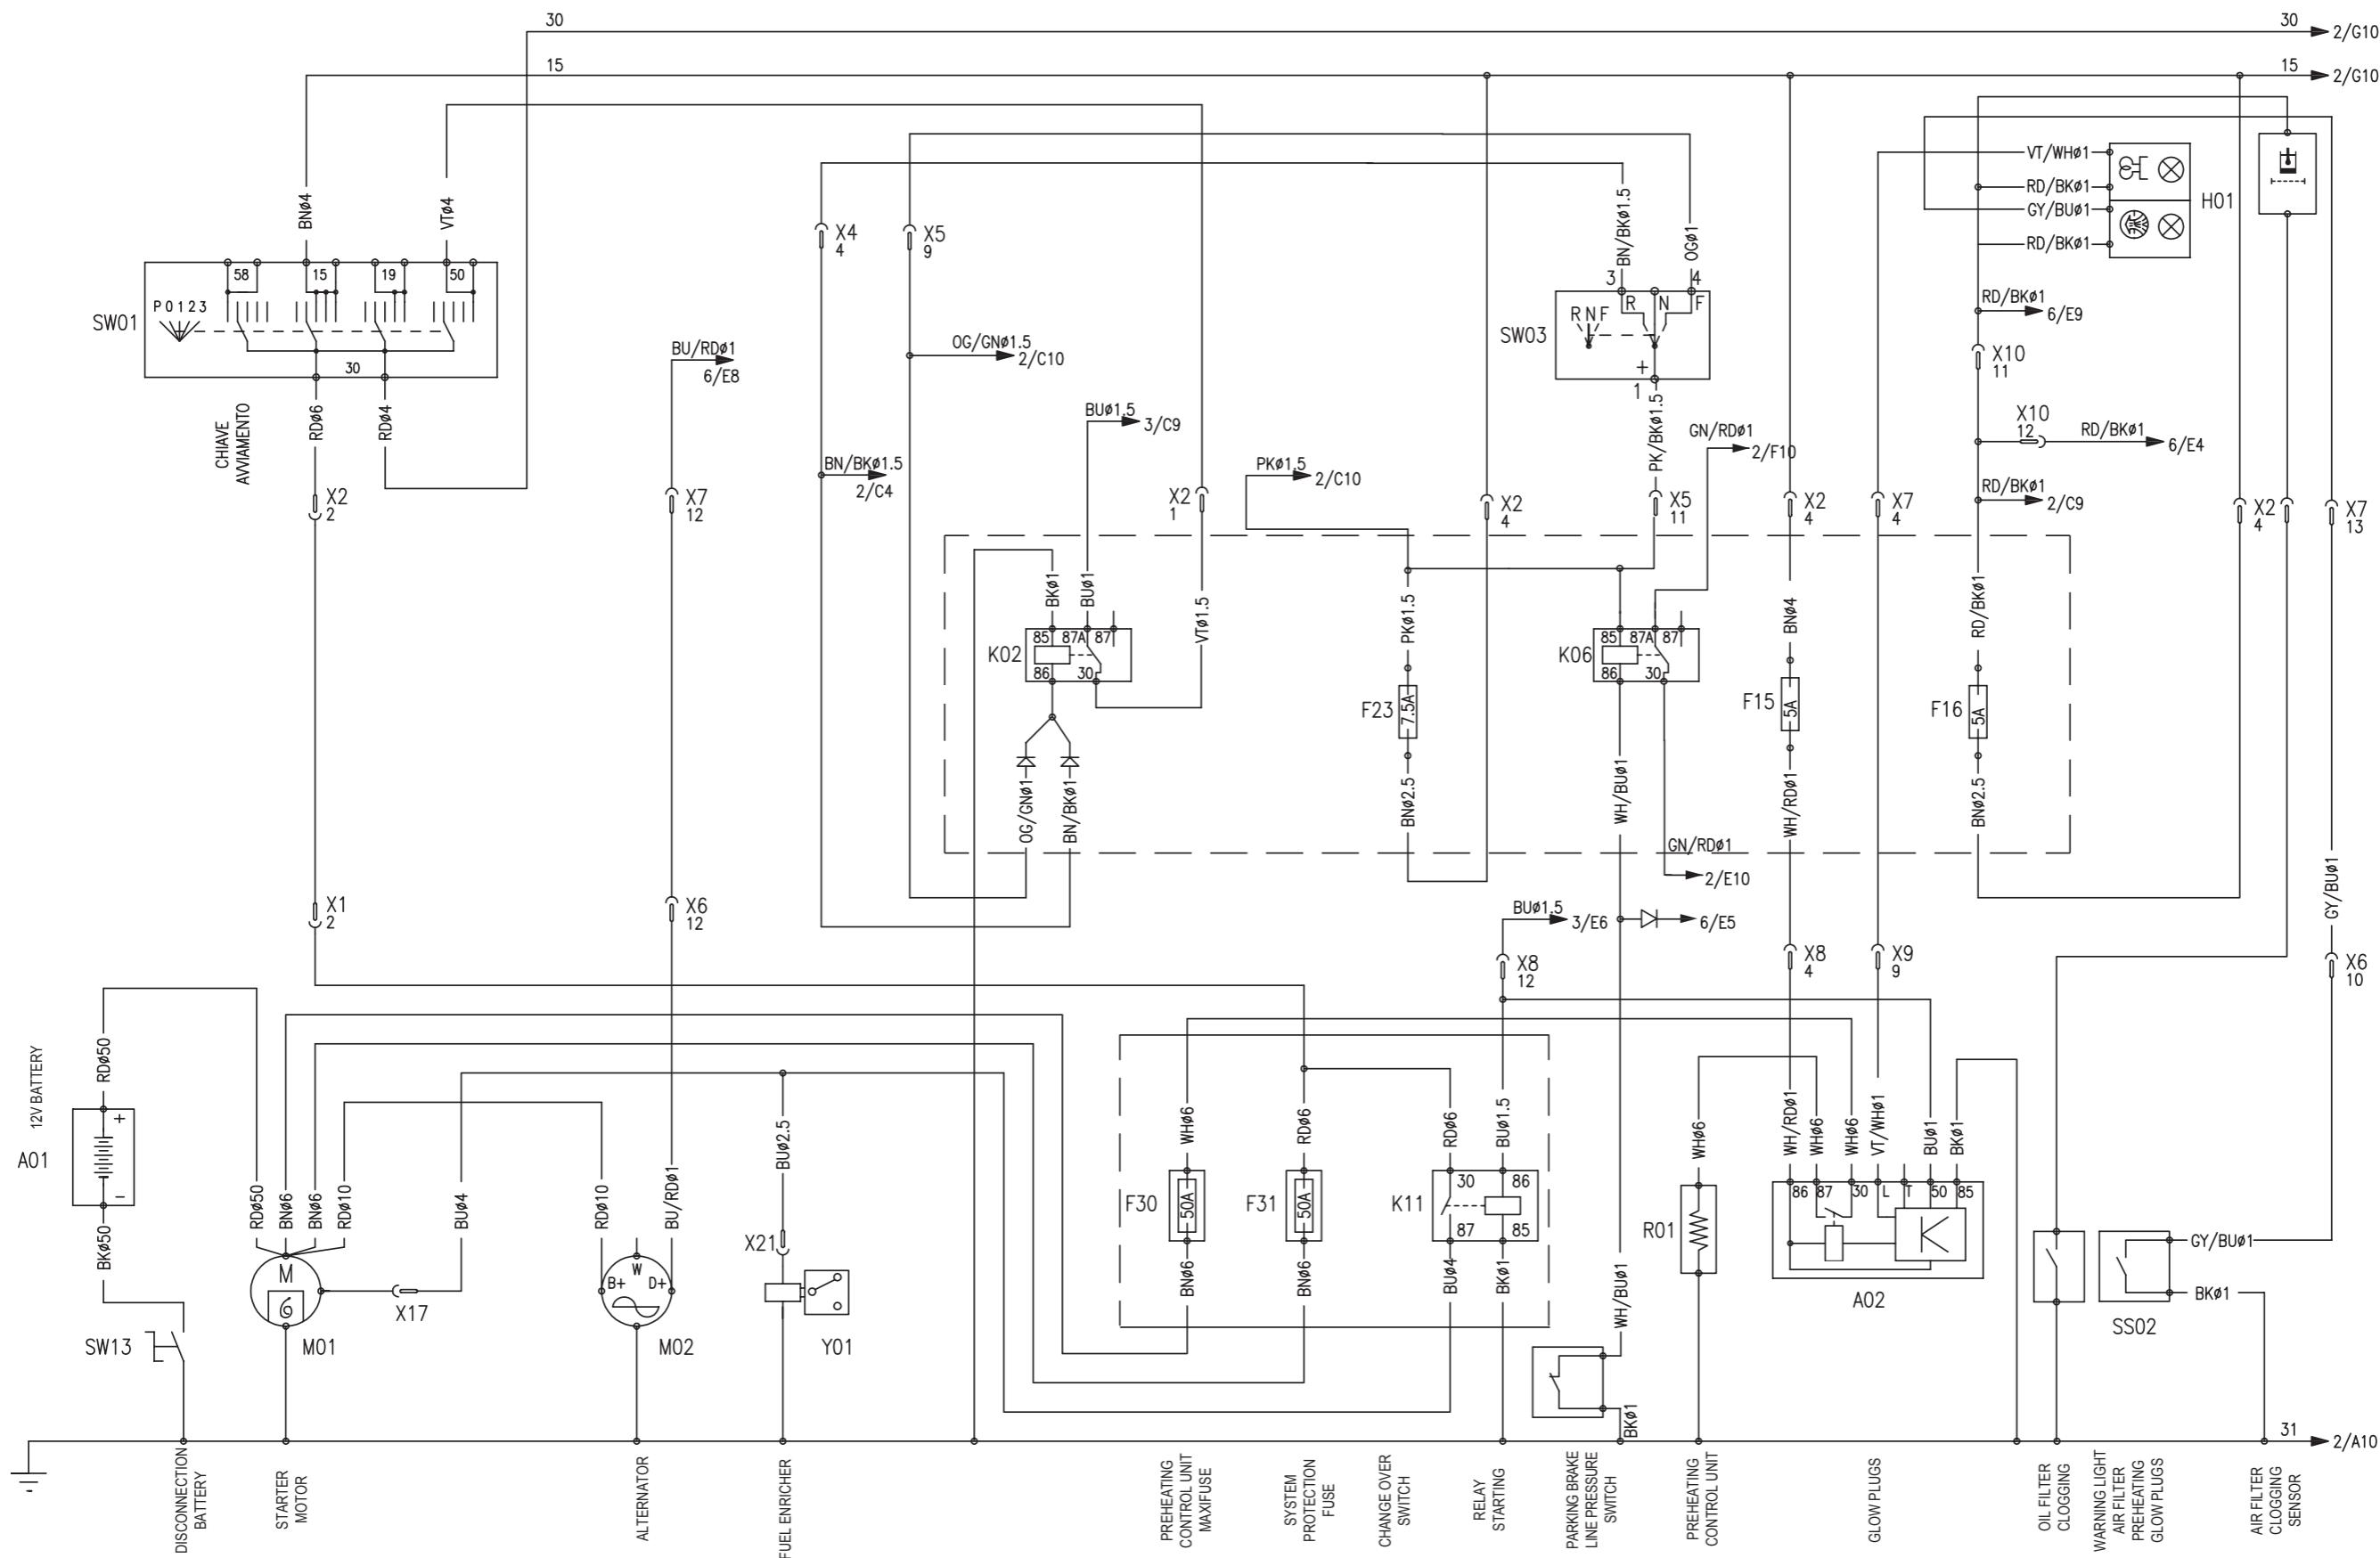


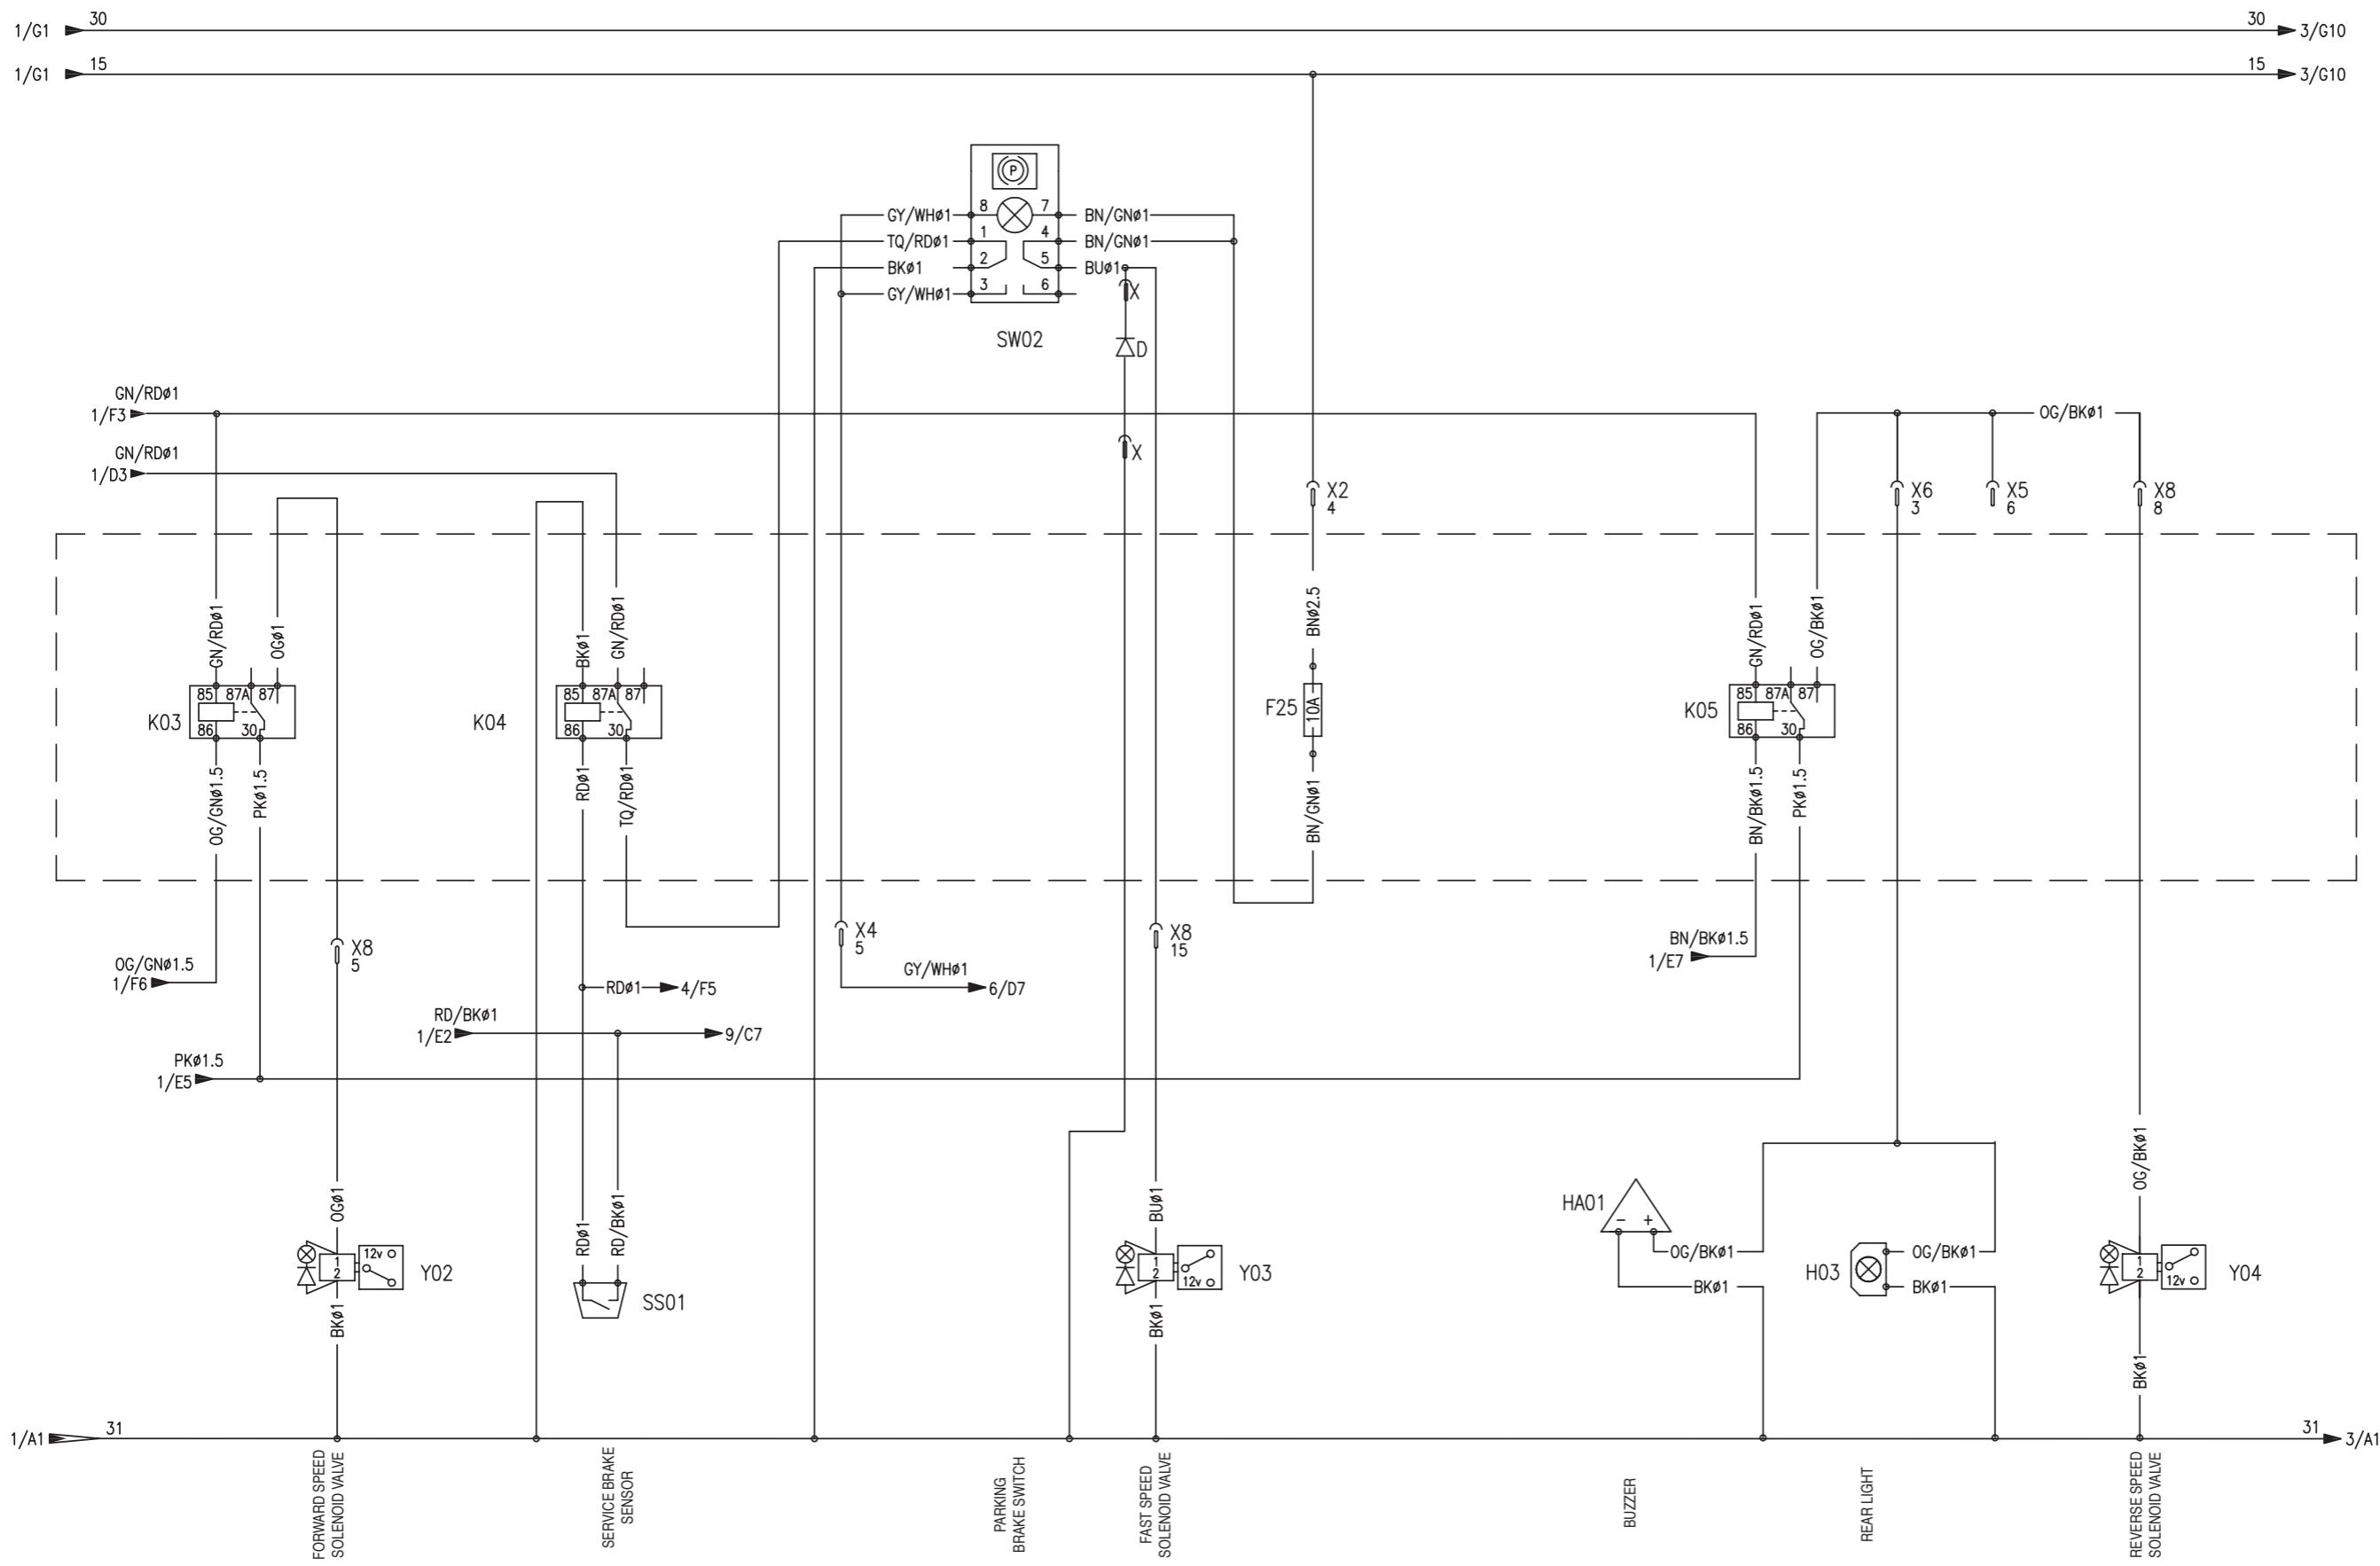


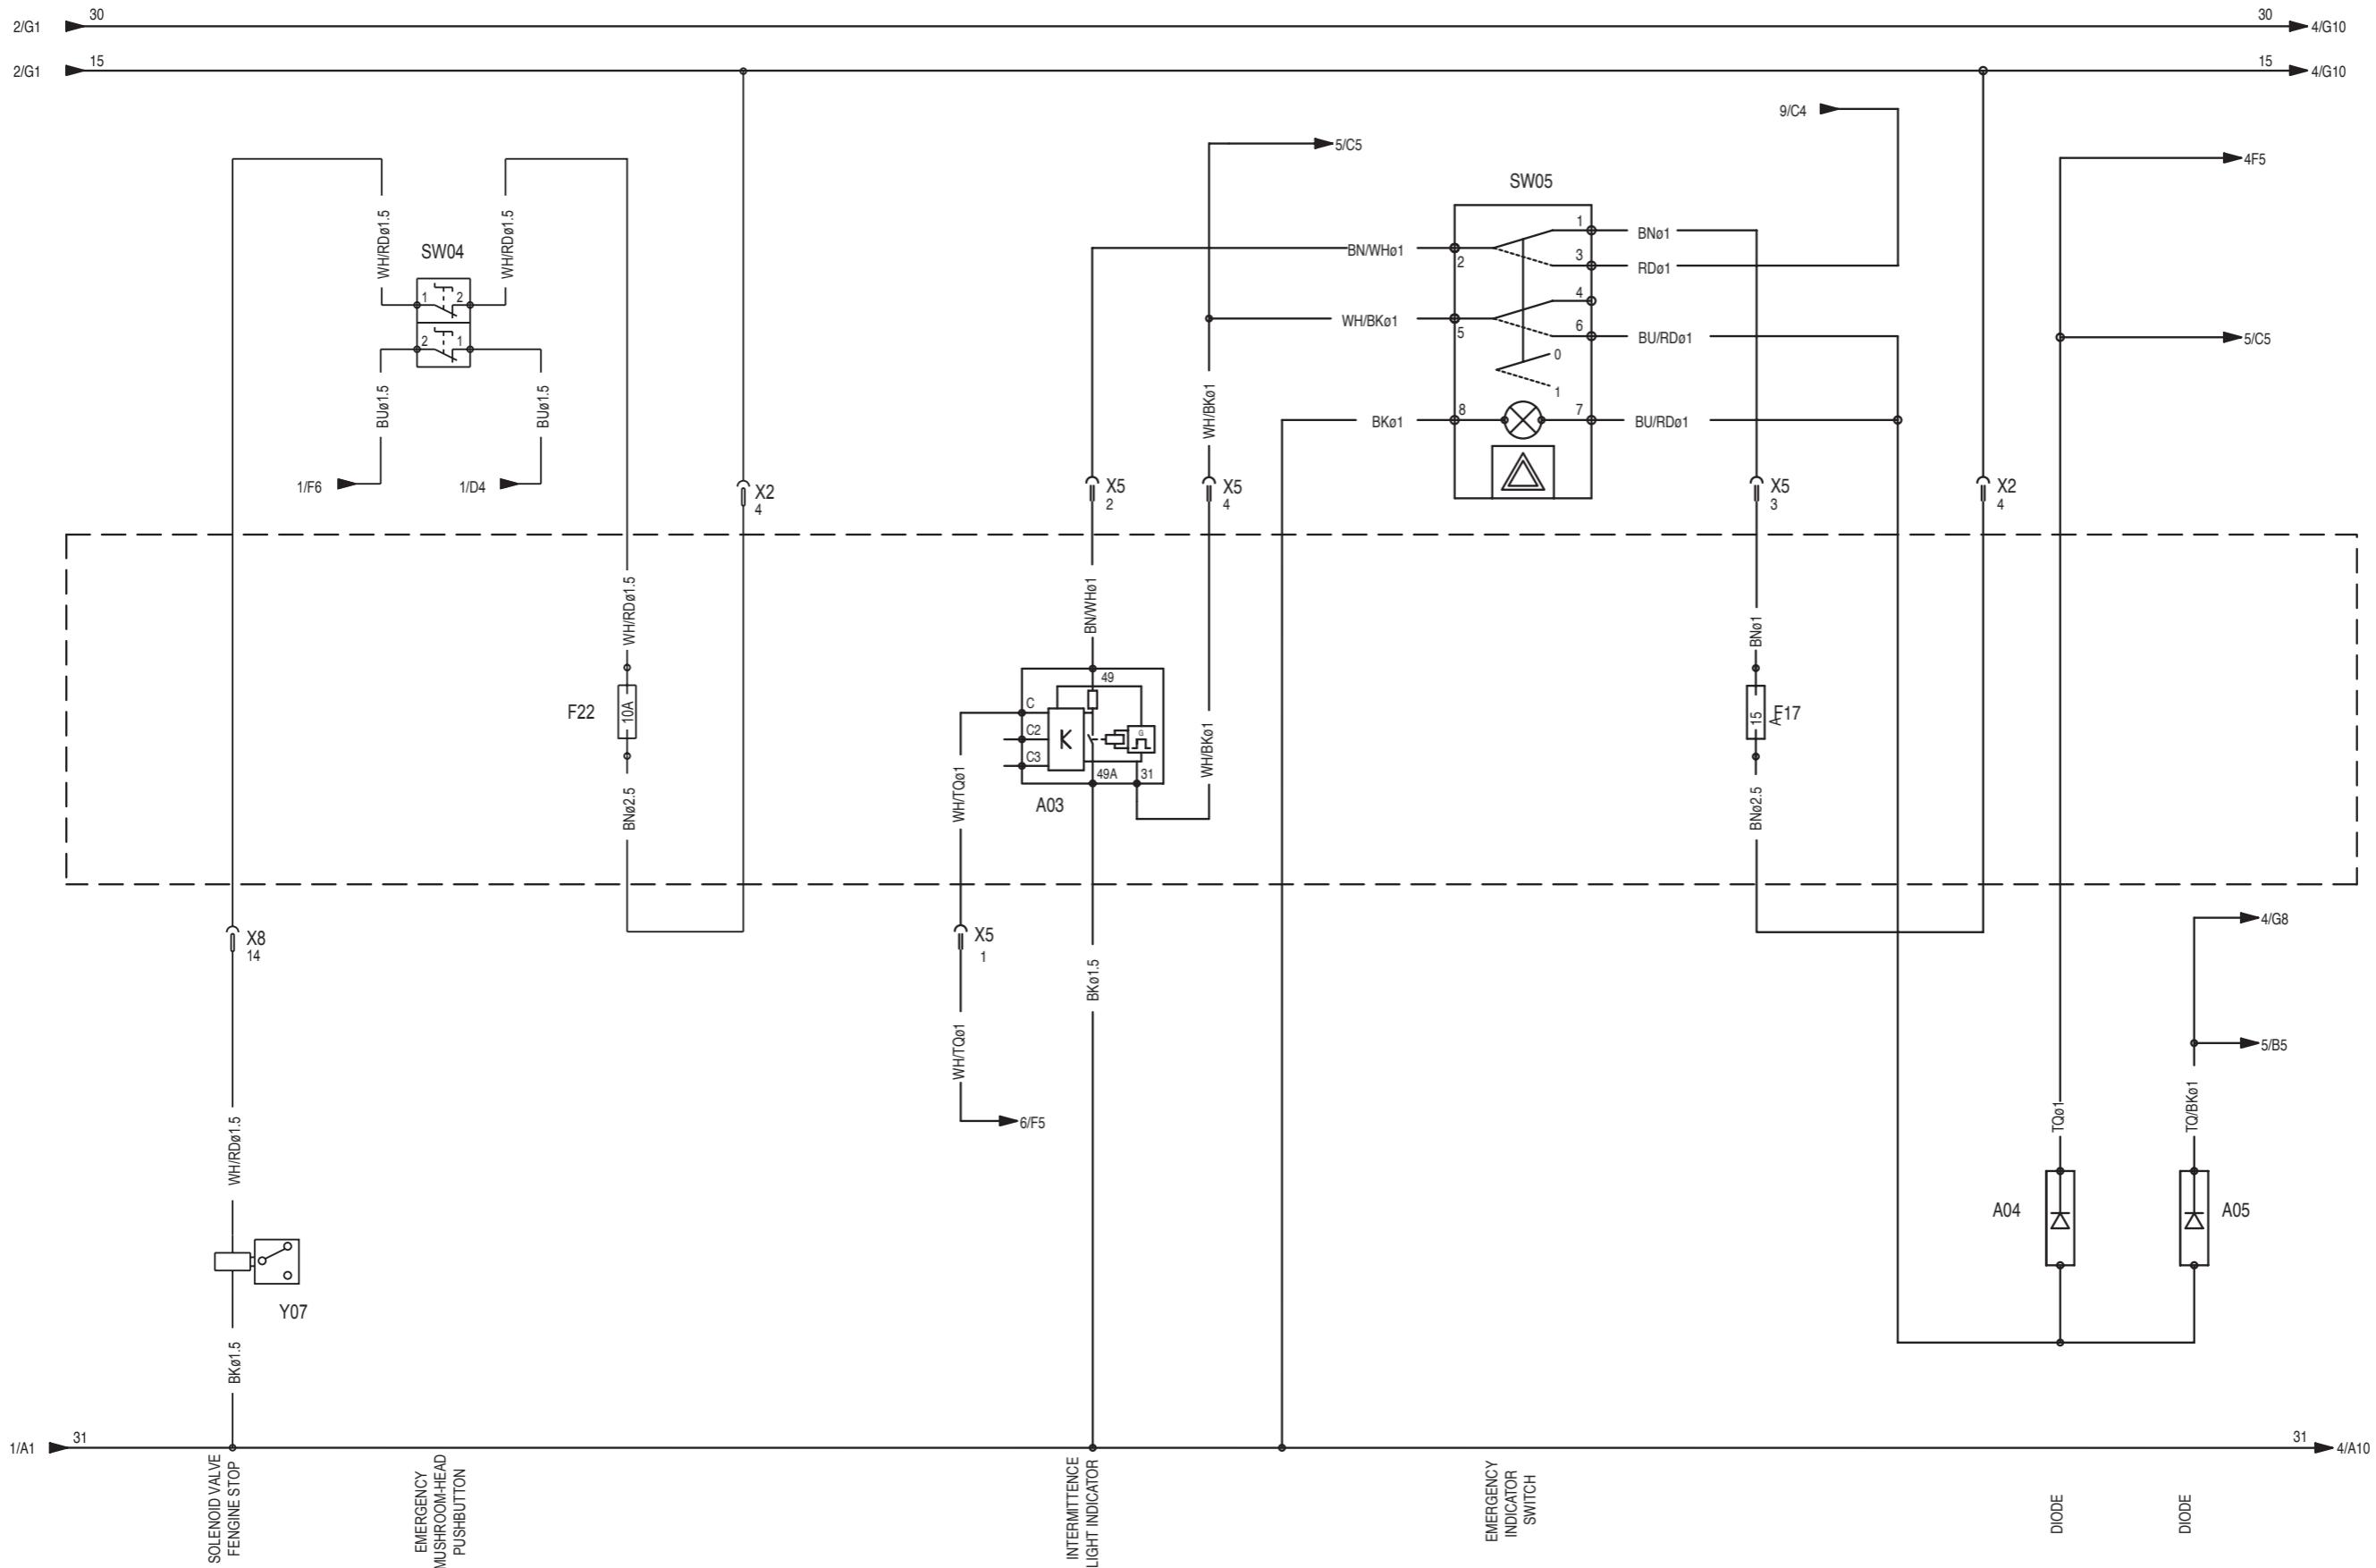


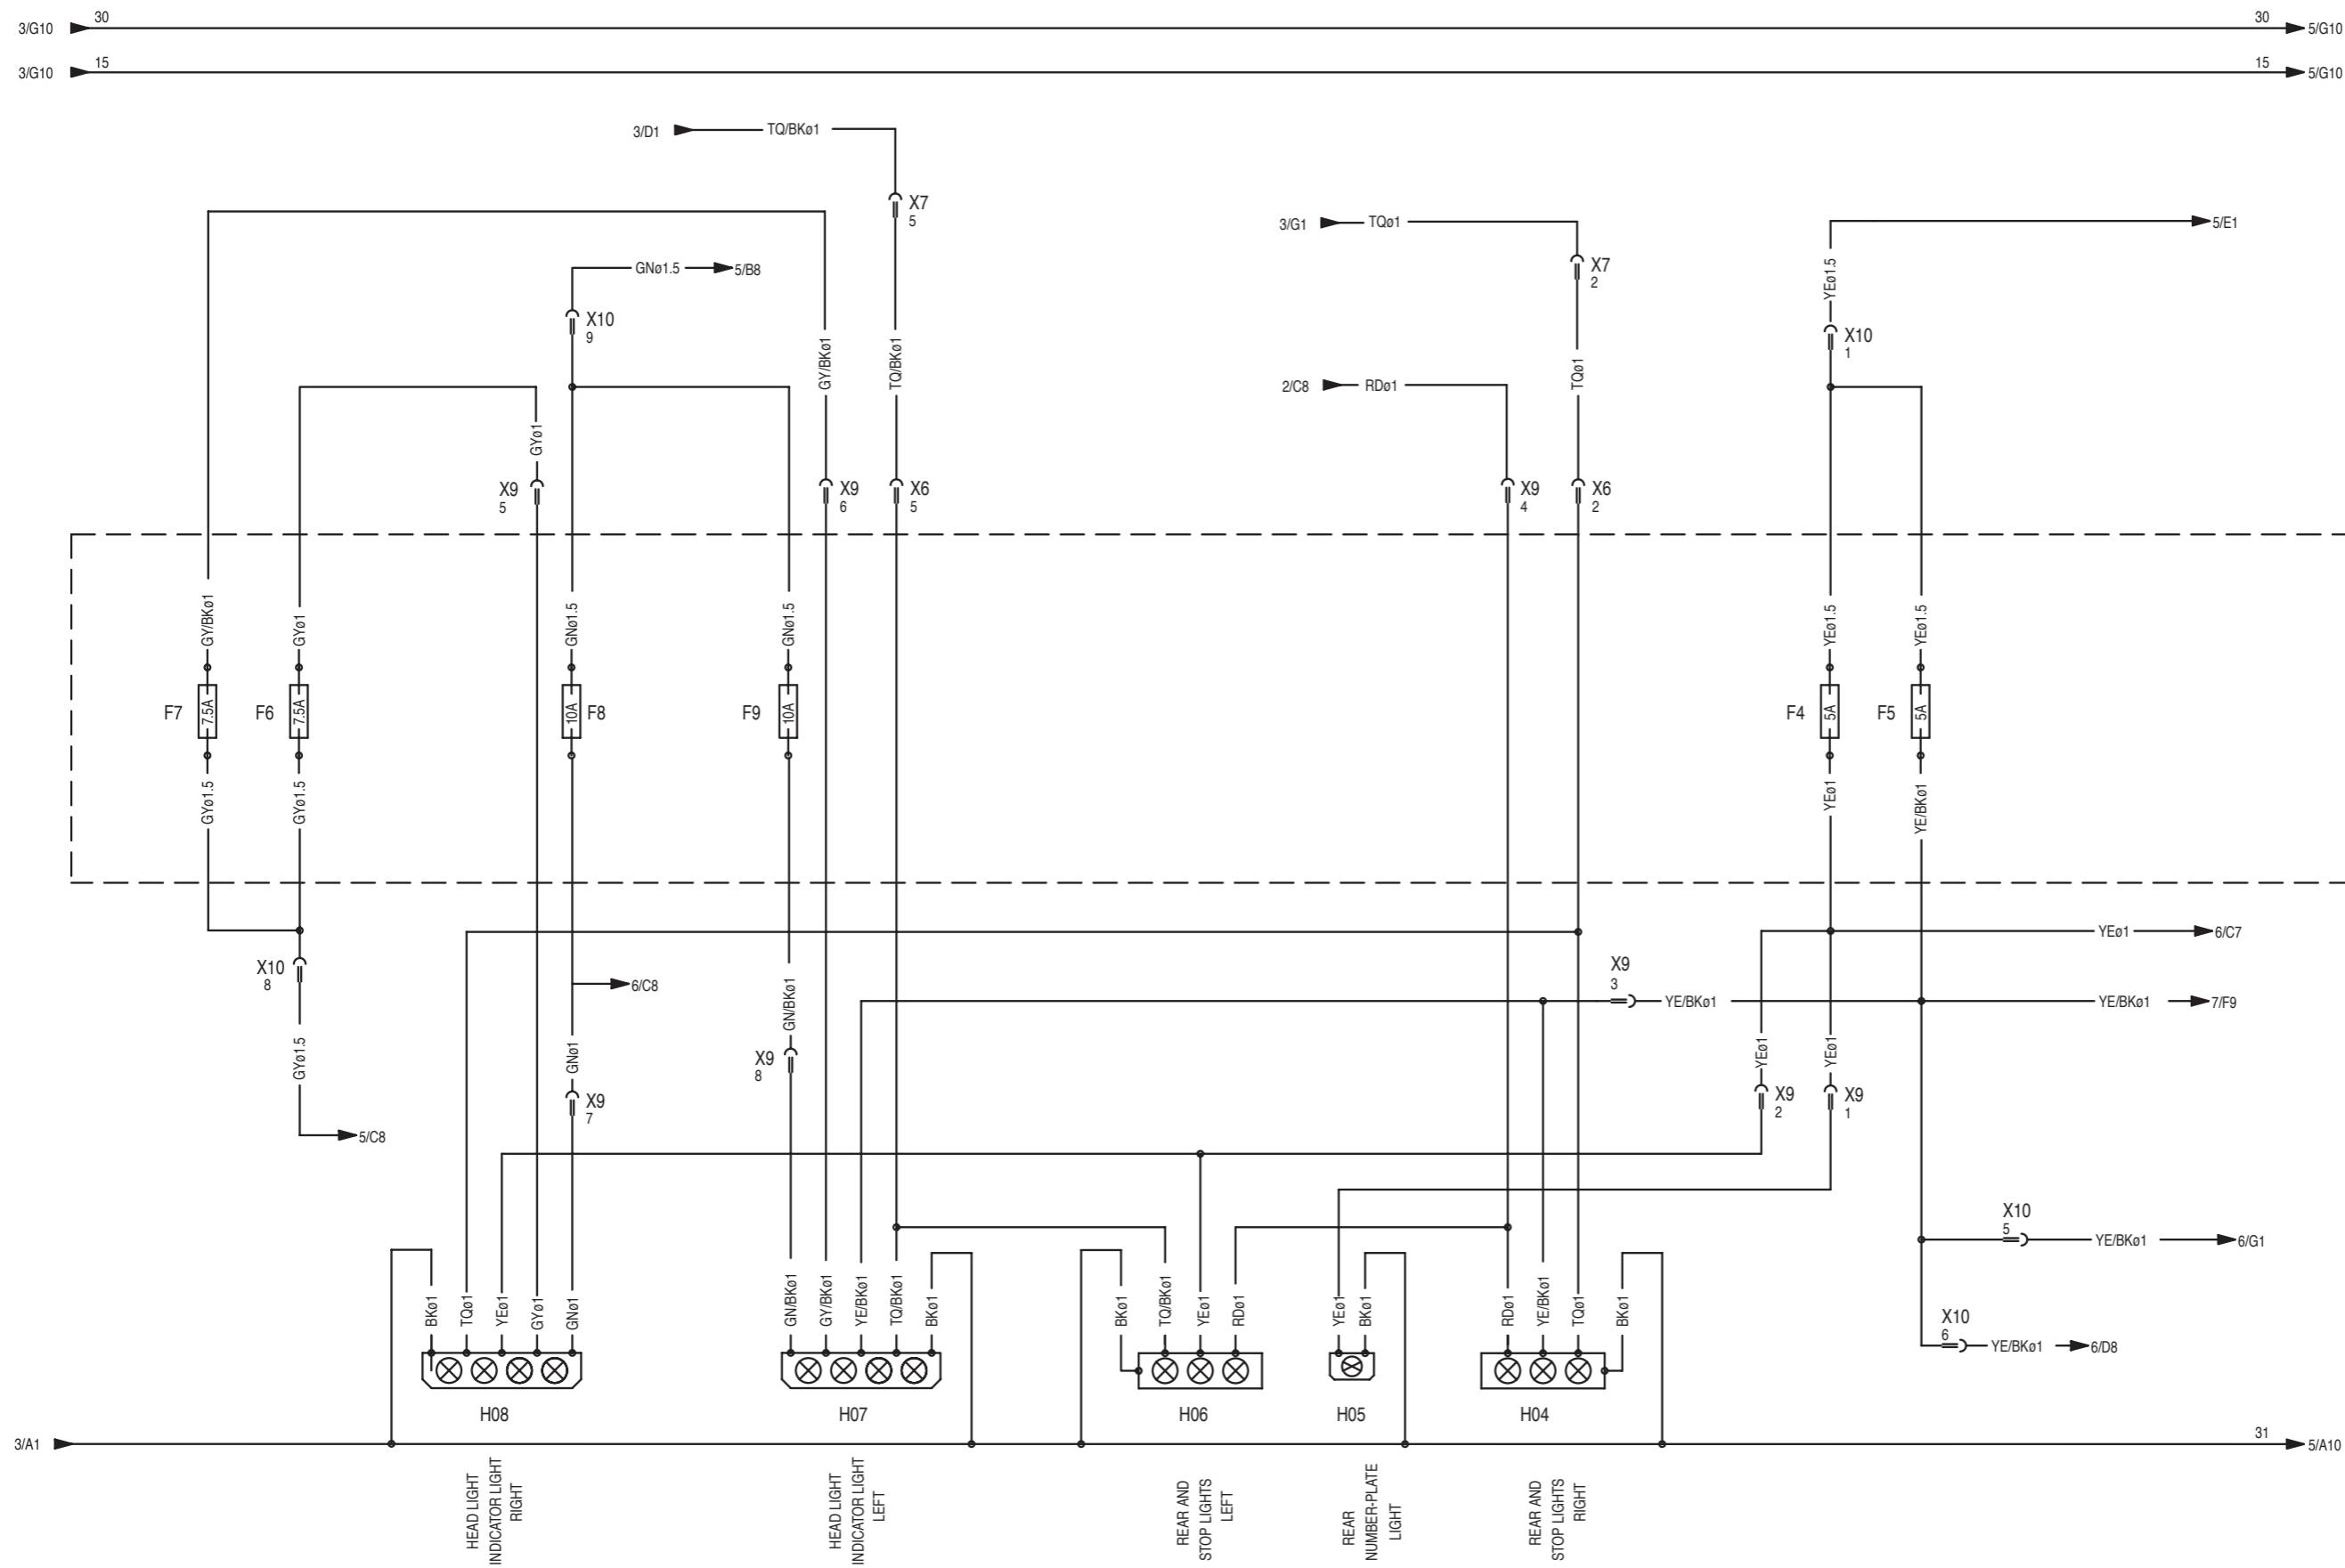

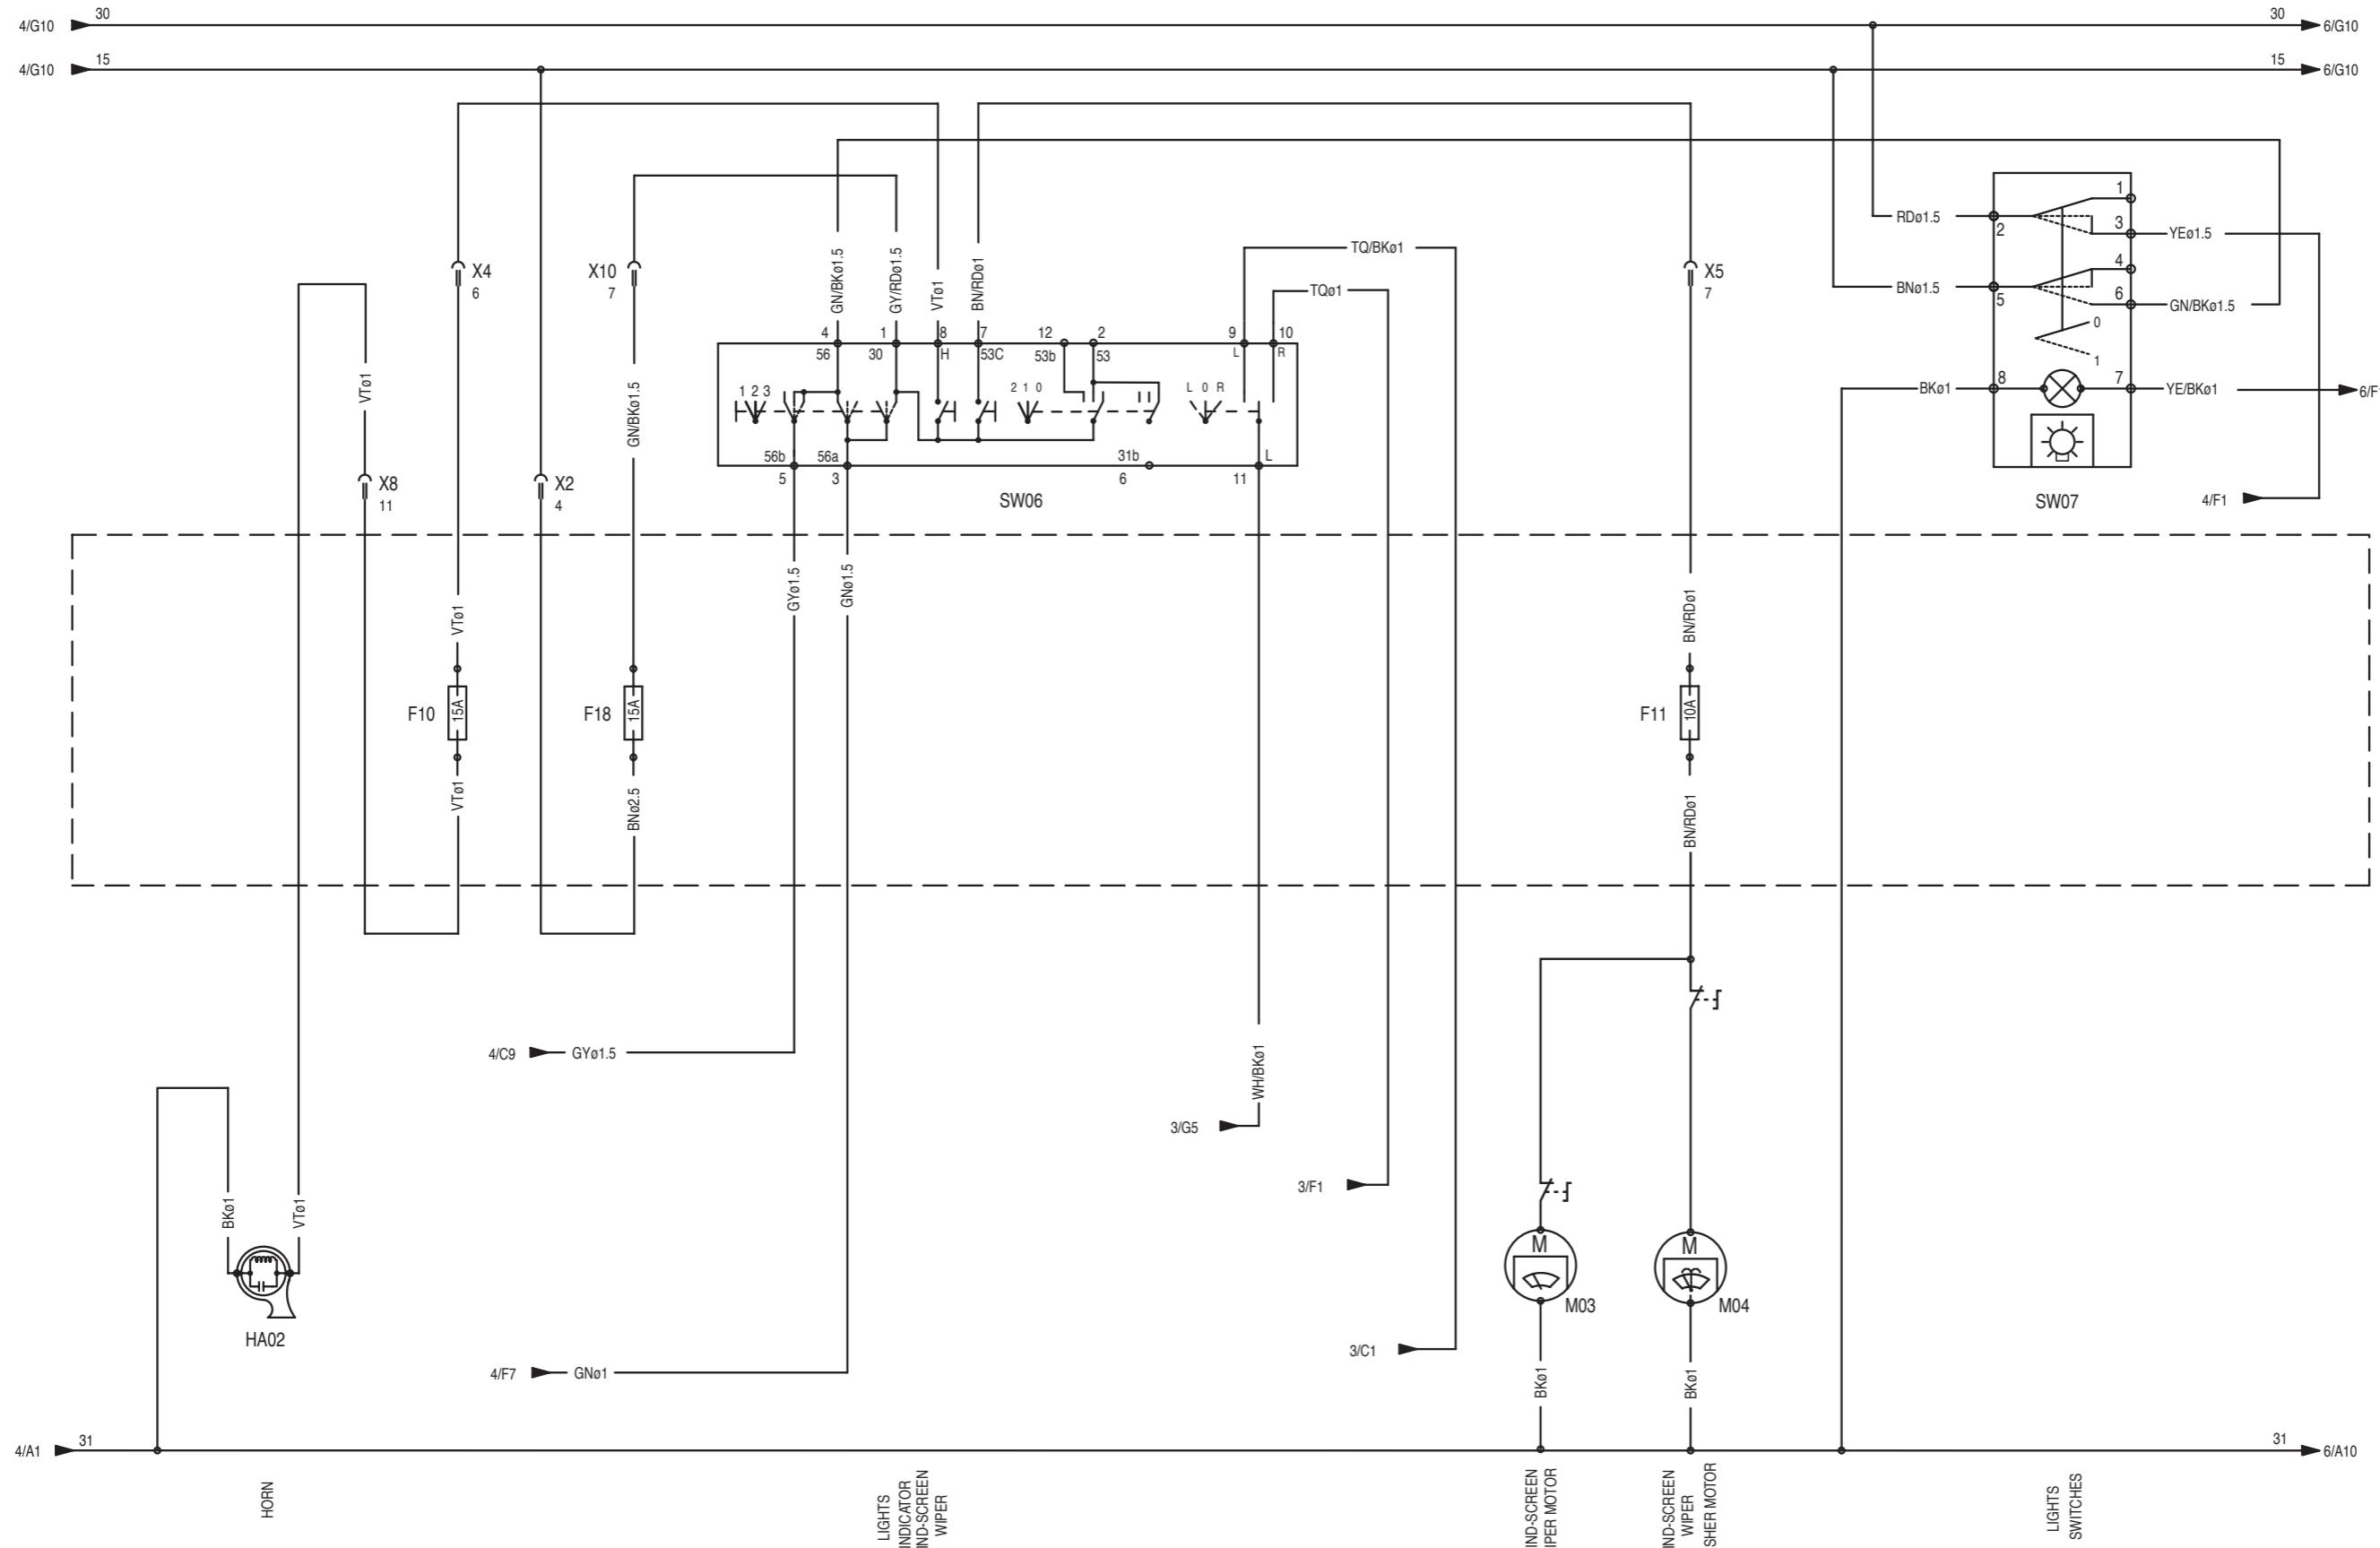

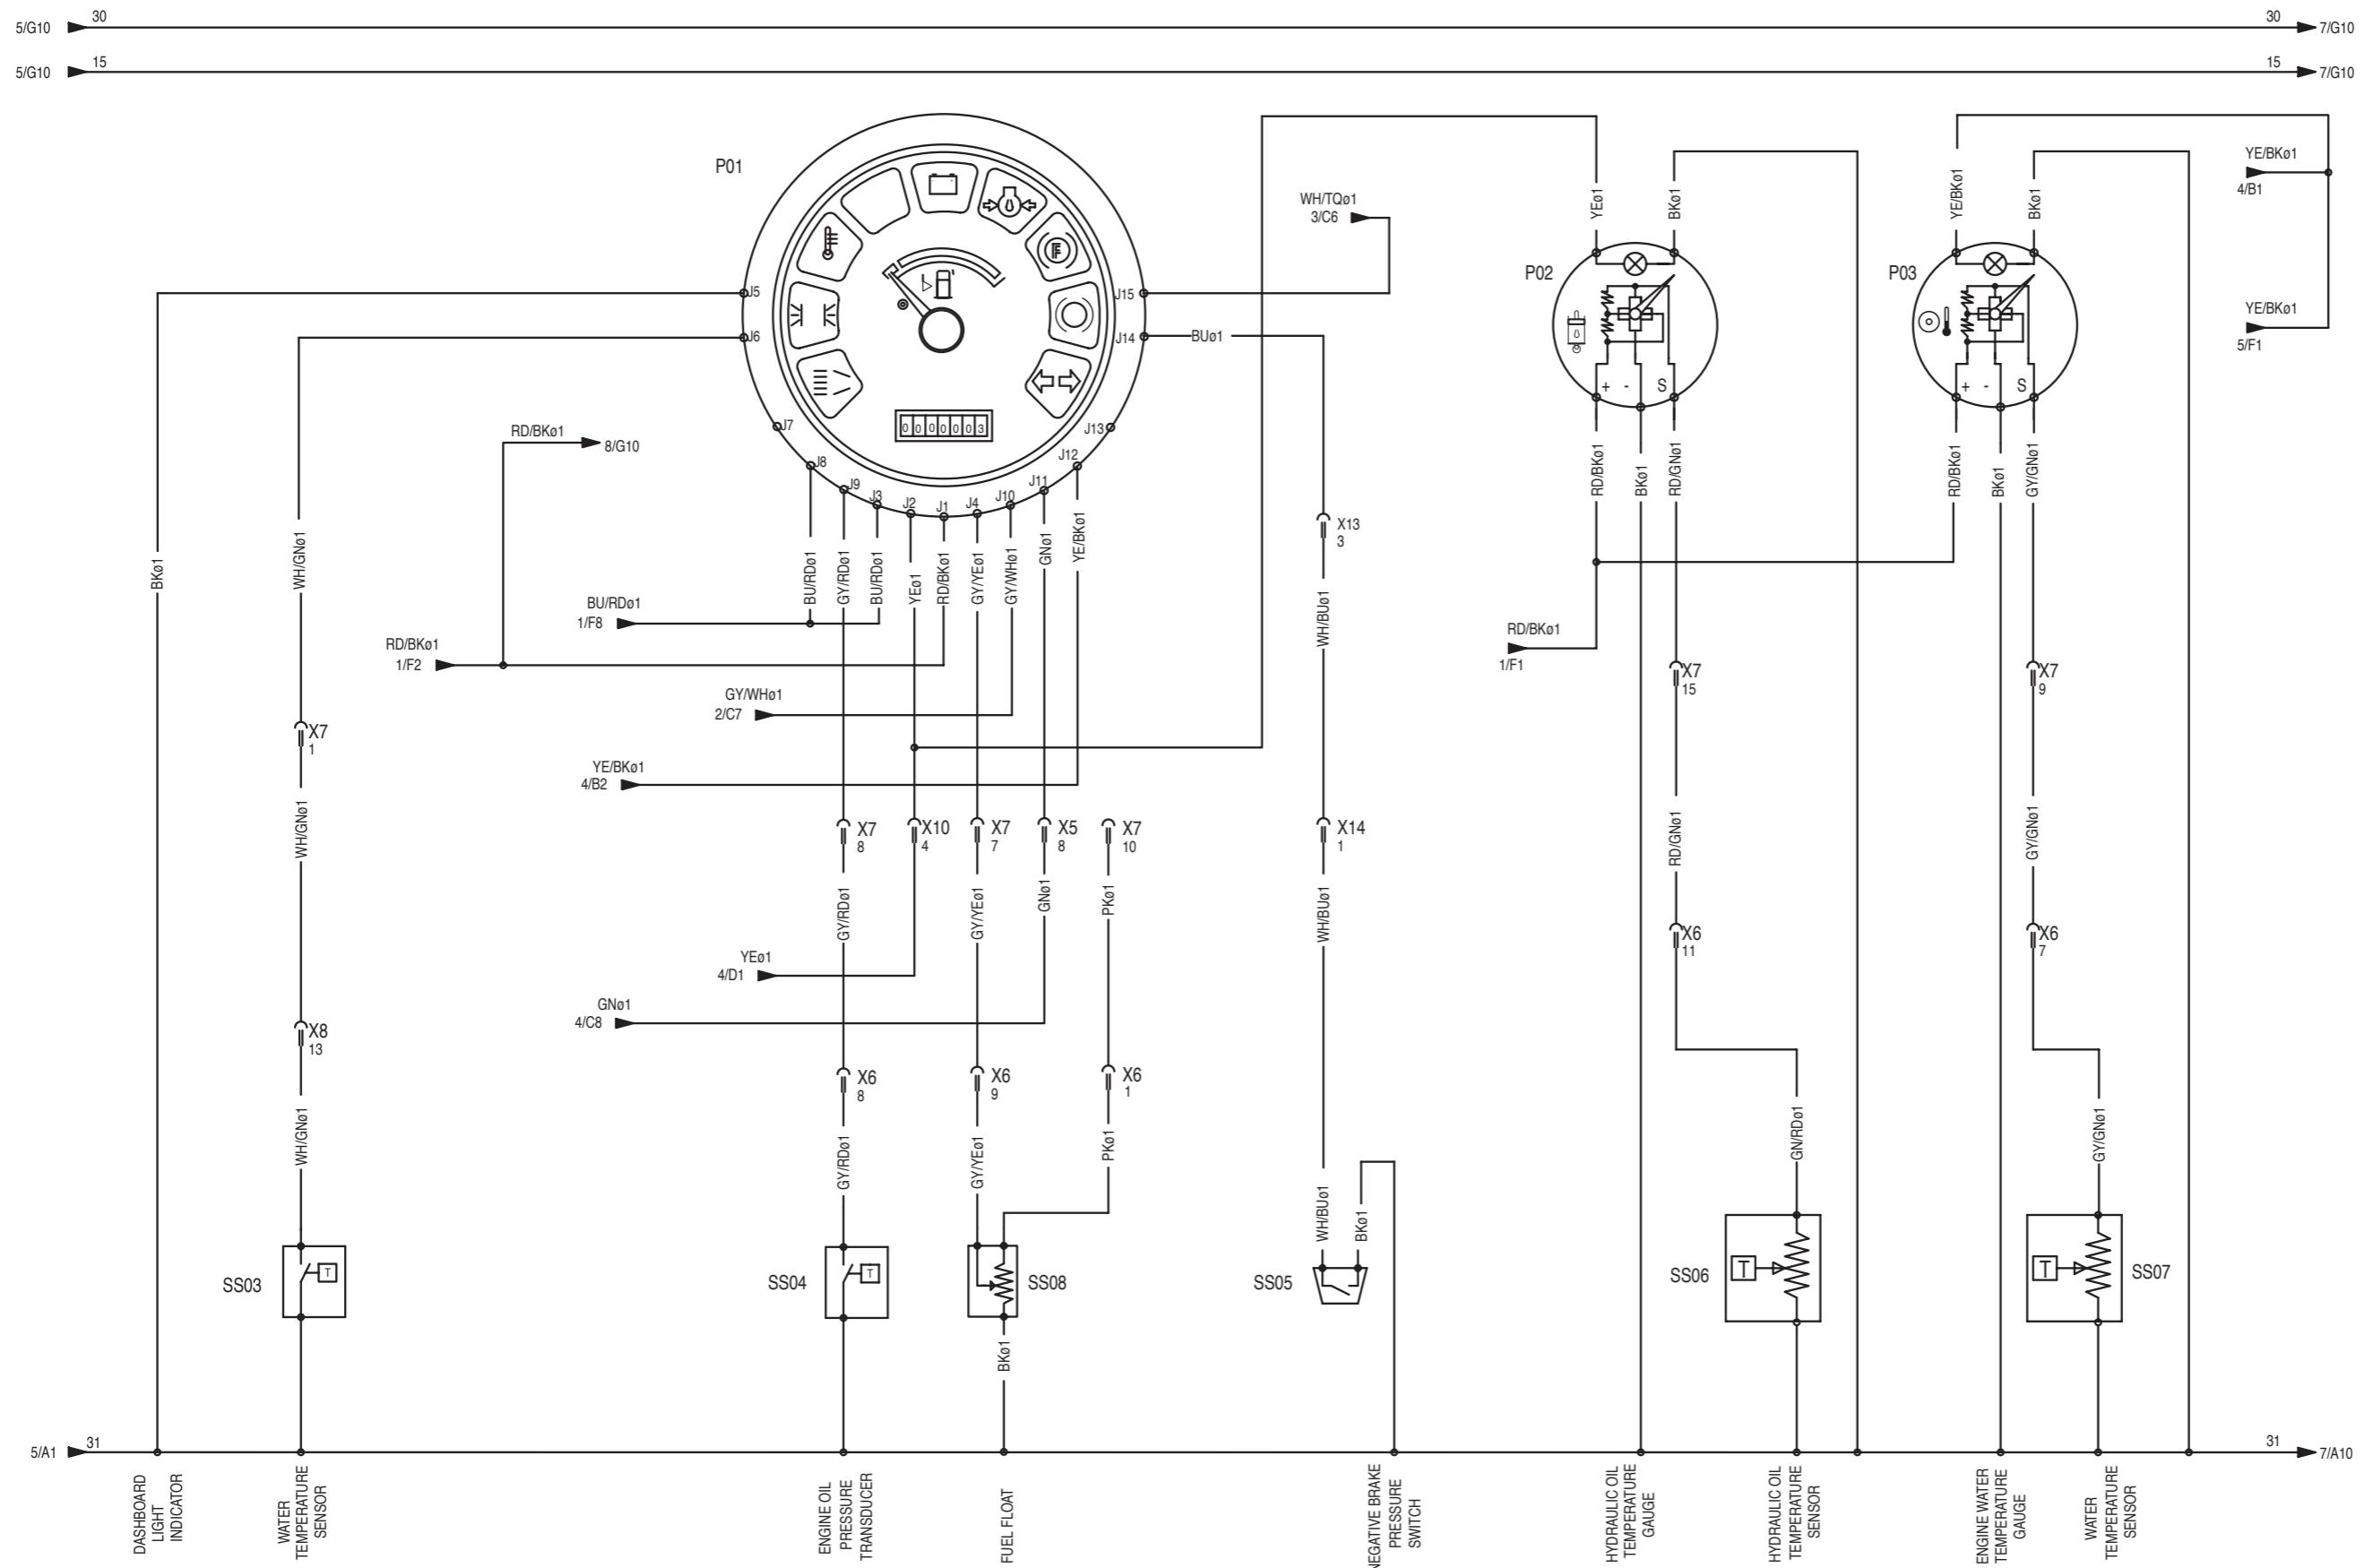

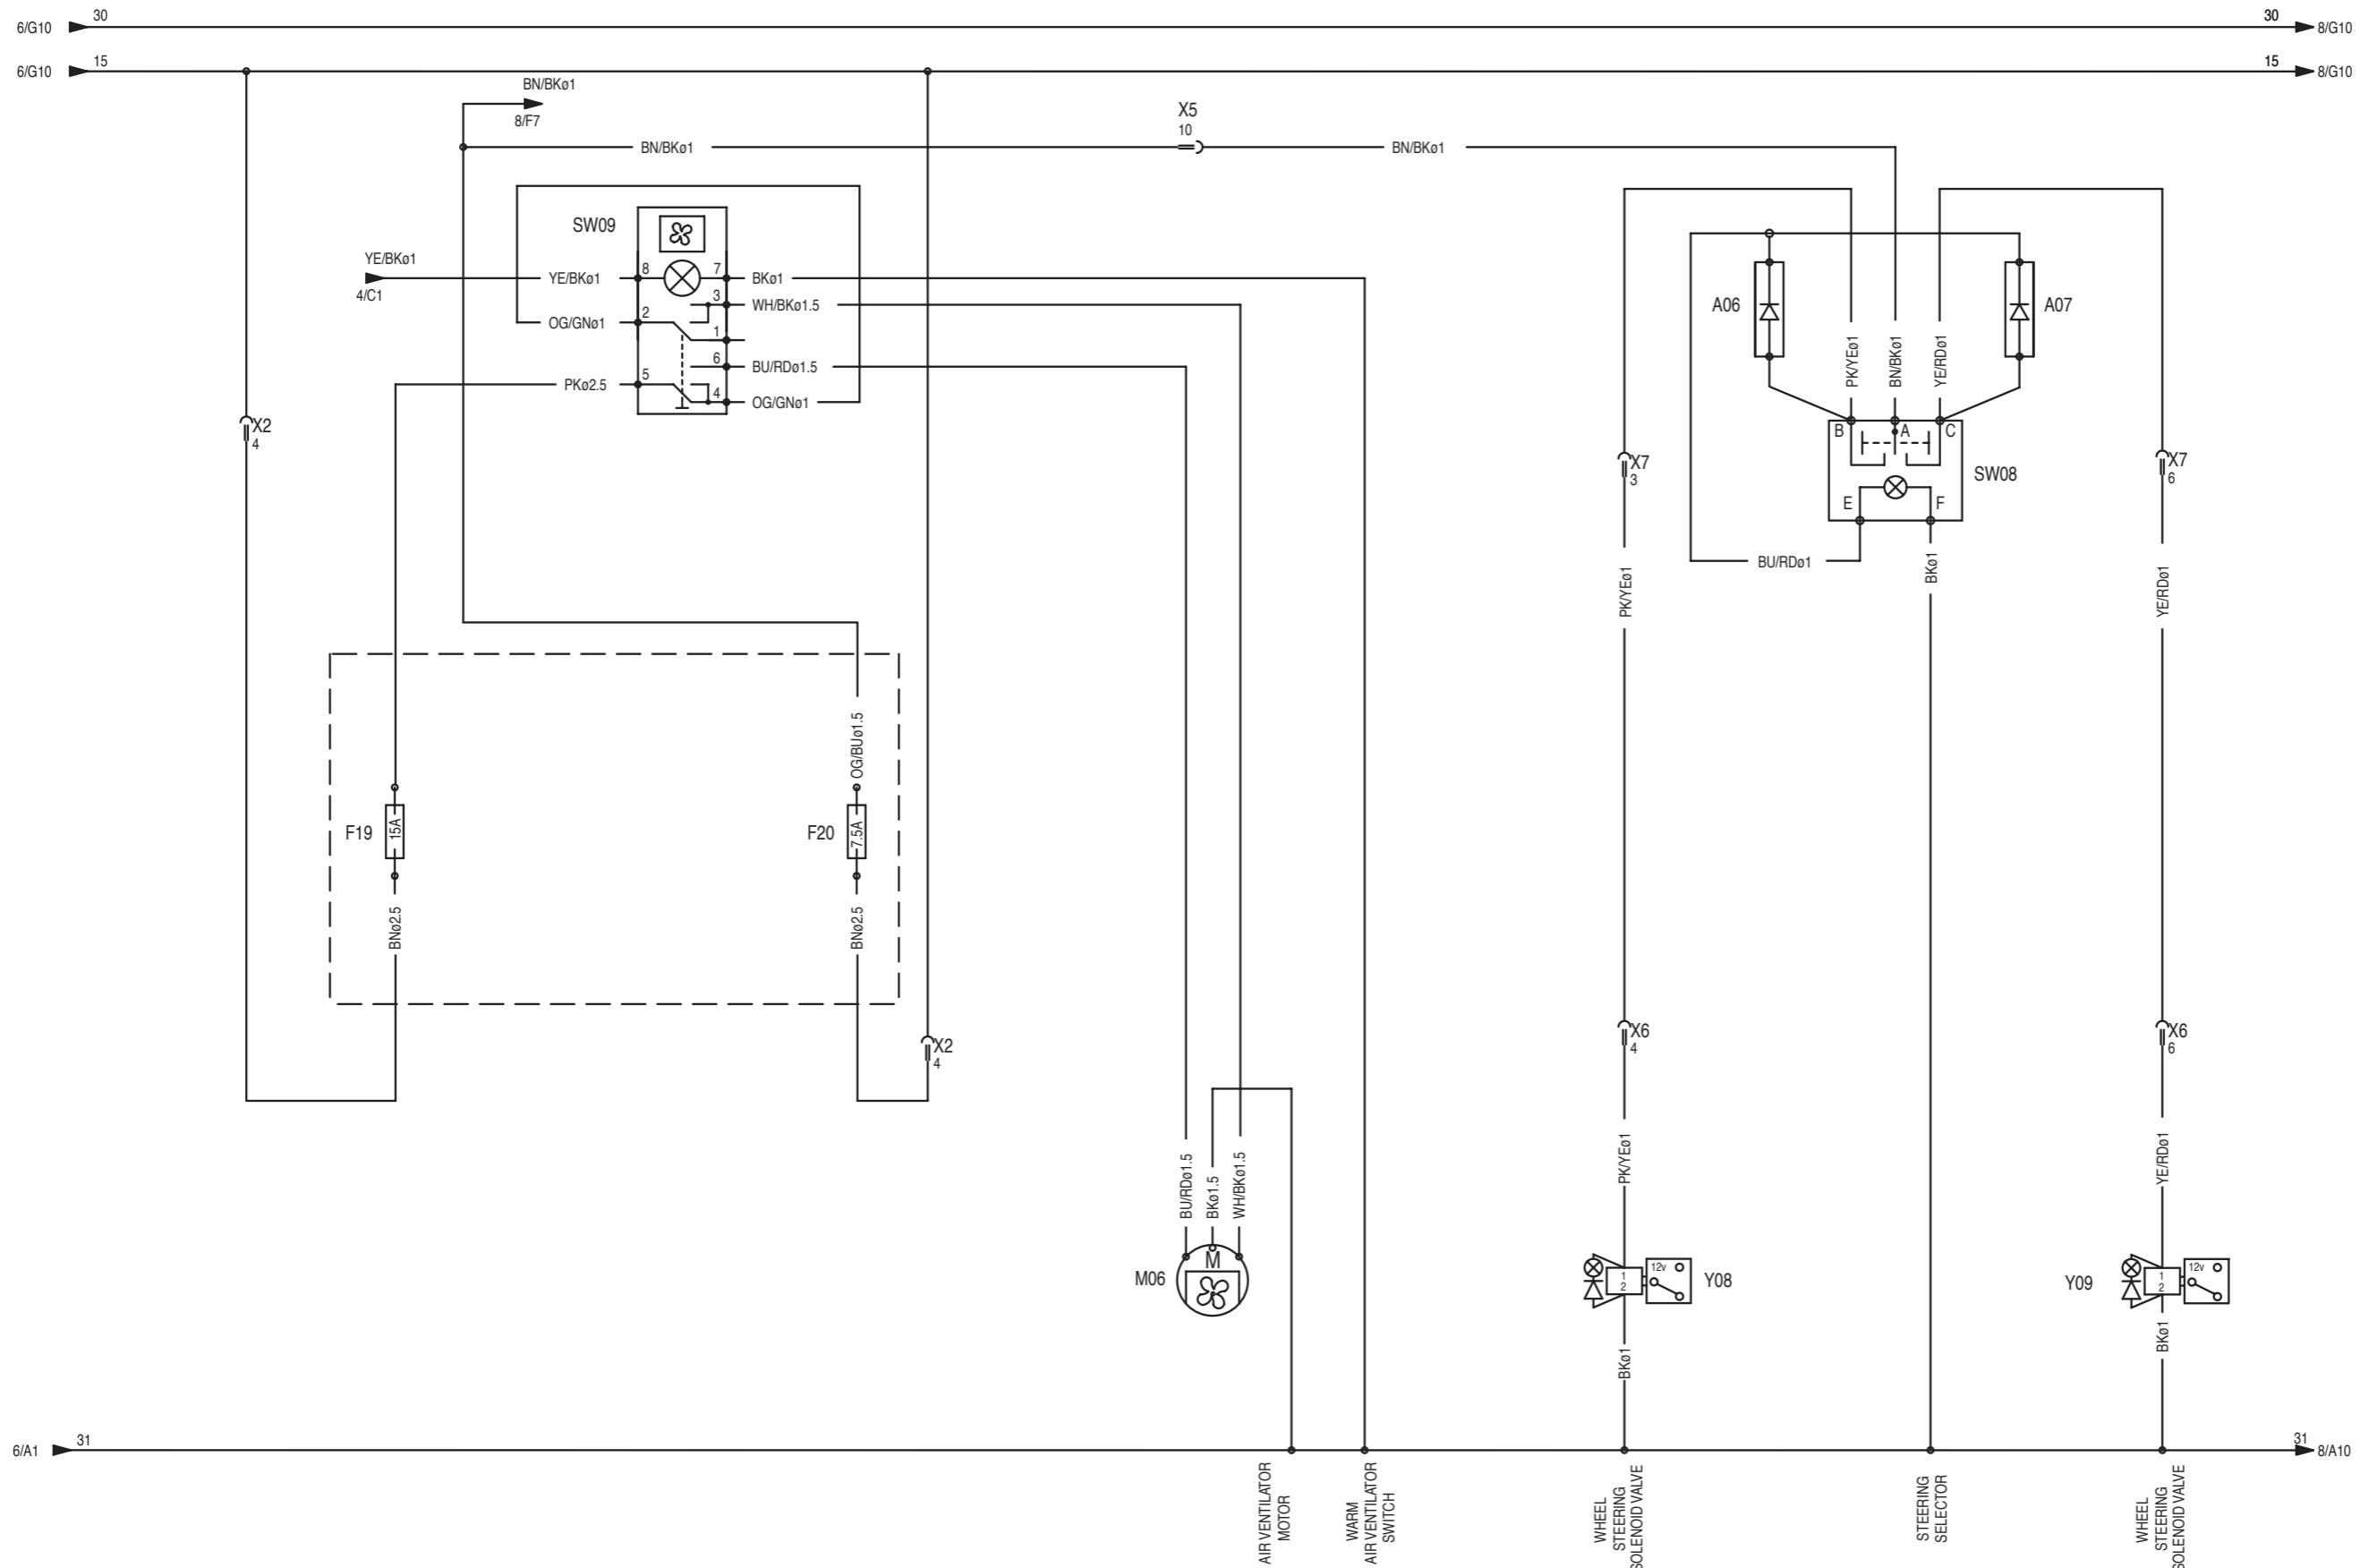

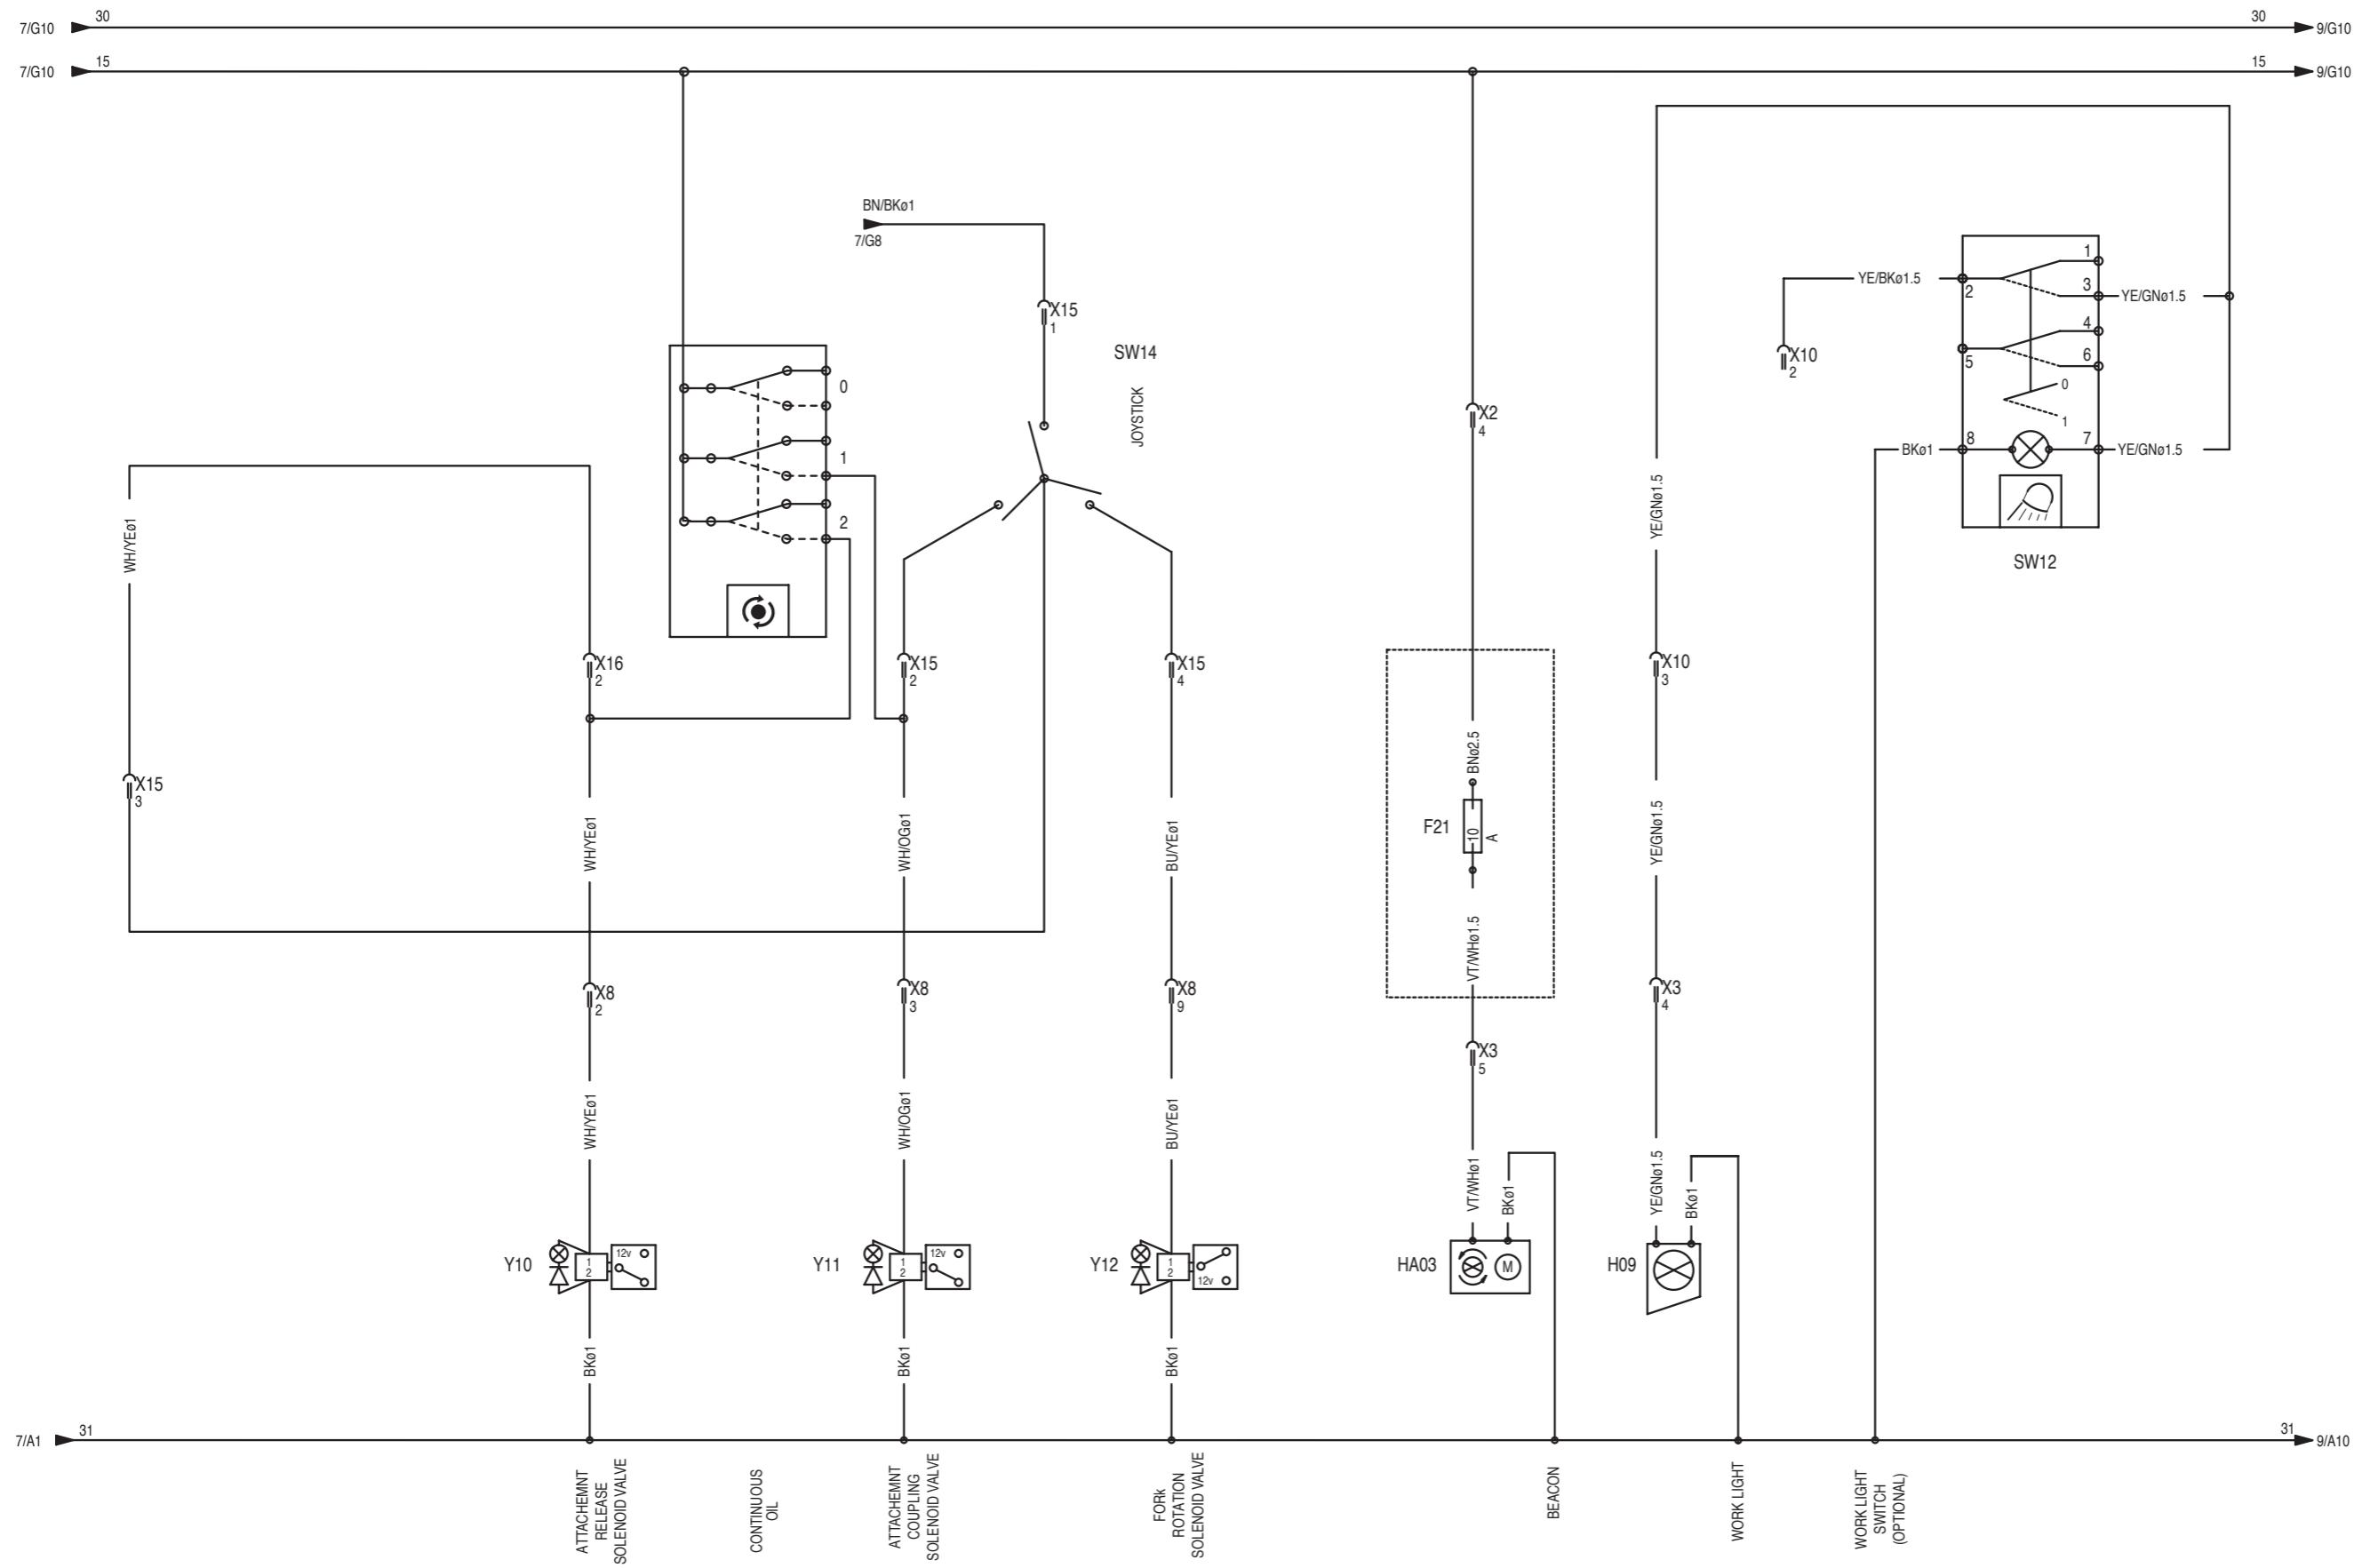

6.4.1 Wiring diagram - Component description


| Ref. | Description | Sheet | Ref. | Description | Sheet |
|------|---|-------|------|--|-------|
| F1 | 5 A FUSE | | K06 | GEAR ENGAGEMENT FROM PARKING BRAKE LINE | |
| F2 | 10 A FUSE | | | LOW PRESSURE BULB | 1 |
| F3 | 10 A FUSE | | K11 | START RELAY | 1 |
| F4 | 5 A FUSE | | M01 | STARTER MOTOR | 1 |
| F5 | 10 A FUSE | | M02 | ALTERNATOR | 1 |
| F6 | 10 A FUSE | | M03 | WINDSCREEN WIPER MOTOR | 5 |
| F7 | 5 A FUSE | | M04 | WINDSCREEN WIPER/WASHER MOTOR | 5 |
| F8 | 5 A FUSE | | M06 | FAN MOTOR | 7 |
| F9 | 15 A FUSE | | P01 | WARNING LIGHTS - FUEL GAUGE INSTRUMENT | 5 |
| F10 | 5 A FUSE | | P02 | ENGINE OIL TEMPERATURE INDICATOR | 5 |
| F11 | 7,5 A FUSE | | P03 | ENGINE OIL COOLING TEMPERATURE INDICATOR | 5 |
| F12 | 7,5 A FUSE | | R01 | GLOW PLUGS | 1 |
| F13 | 5 A FUSE | | SW01 | IGNITION KEY | 1 |
| F14 | 2 A FUSE | | SW02 | PARKING BRAKE SWITCH | 2 |
| F15 | 2 A FUSE | | SW03 | CHANGE OVER SWITCH | 1 |
| F16 | 20 A FUSE | | SW04 | MUSHROOM-HEAD BUTTON | 3 |
| F17 | 10 A FUSE | | SW05 | HAZARD WARNING LIGHT / TURN SIGNALS SWITCH | 3 |
| F18 | 5 A FUSE | | SW06 | LIGHT SWITCH-TURN SIGNALS-WINDSCREEN WIPER/WASHER | 5 |
| F19 | 20 A FUSE | | SW07 | LIGHTS SELECTION SWITCH | 5 |
| F20 | 10 A FUSE | | SW08 | STEERING SELECTOR | 7 |
| F21 | 15 A FUSE | | SW09 | HEATING FAN SWITCH | 7 |
| F22 | 5 A FUSE | | SW11 | CONTINUOUS OIL SWITCH | 8 |
| F23 | 15 A FUSE | | SW12 | OPTIONAL WORK LIGHT SWITCH | 8 |
| F24 | 5 A FUSE | | SW13 | BATTERY CUTOFF | 1 |
| F25 | 7,5 A FUSE | | SW14 | JOYSTICK | 8 |
| F26 | 7,5 A FUSE | | SS01 | SERVICE BRAKE SENSOR | 2 |
| F27 | 5 A FUSE | | SS02 | AIR FILTER CLOGGING SENSOR | 1 |
| F28 | 5 A FUSE | | SS03 | WATER TEMPERATURRE SENSOR | 6 |
| F29 | SPARE FUSES (15A - 10A - 7,5A - 5A) | | SS04 | ENGINE OIL PRESSURE SENSOR | 6 |
| F30 | PREHEATING CONTROL UNIT MAXIFUSE | | SS05 | NEGATIVE BRAKE PRESSURE SWITCH | 6 |
| F31 | SYSTEM PROTECTION FUSE | | SS06 | HYDRAULIC OIL TEMPERATURE SENSOR | 6 |
| H01 | WARNING LIGHTS: AIR FILTER SOILED, PREHEATING GLOW PLUGS WARNING LIGHT | 1 | SS07 | WATER TEMPERATURE SENSOR | 6 |
| H03 | BACK-UP LAMPS | 2 | SS08 | FUEL FLOAT | 6 |
| H04 | REAR RIGHT-HAND LIGHT | 4 | Y01 | FUEL ENRICHER SOLENOID | 1 |
| H05 | LICENSE PLATE LAMP | 4 | Y02 | SOLENOID VALVE - FWD SPEED | 2 |
| H06 | REAR LEFT-HAND LIGHT | 4 | Y03 | SOLENOID VALVE - PARKING BRAKE | 2 |
| H07 | FRONT LIGHT LAMP - LEFT TURN SIGNAL | 4 | Y04 | SOLENOID VALVE - REVERSE SPEED | 2 |
| H08 | FRONT LIGHT LAMP - RIGHT TURN SIGNAL | 4 | Y07 | ENGINE STOP SOLENOID | 3 |
| H09 | WORK LIGHT | 8 | Y08 | WHEEL STEERING SOLENOID VALVE | 7 |
| HA01 | BACK-UP HORN | 2 | Y09 | WHEEL STEERING SOLENOID VALVE | 7 |
| HA02 | HORN | 5 | Y10 | SOLENOID VALVE - ATTACHMENT RELEASE | 8 |
| HA03 | BEACON | 8 | Y11 | SOLENOID VALVE - ATTACHMENT COUPLING | 8 |
| K01 | OPTIONAL WORK LIGHT | | Y12 | SOLENOID VALVE - FORK ROTATION | 8 |
| K02 | STARTING ENABLING COMMAND | 1 | | | |
| K03 | FORWARD SPEED ENABLING COMMAND | 2 | | | |
| K04 | INHIBITION WITH SERVICE BRAKE ENGAGED | 2 | | | |
| K05 | REVERSE SPEED ENABLING COMMAND | 2 | | | |

| Ref. | Description | Sheet |
|------|-------------------------------------|-------|
| A01 | 12V BATTERY | 1 |
| A02 | PREHEATING CONTROL UNIT | 1 |
| A03 | TURN SIGNALS FLASHING | 3 |
| A04 | DIODE | 3 |
| A05 | DIODE | 3 |
| A06 | DIODE | 7 |
| A07 | DIODE | 7 |
| X01 | 4-WAY CONNECTOR - ENGINE FUSES LINE | |
| X02 | 4-WAY CONNECTOR - STEERING COLUMN | |
| X03 | 6-WAY CONNECTOR - CAB | |
| X04 | 6-WAY CONNECTOR - STEERING COLUMN | |
| X05 | 12-WAY CONNECTOR - STEERING COLUMN | |
| X06 | 12-WAY CONNECTOR - ENGINE | |
| X07 | 15-WAY CONNECTOR - STEERING COLUMN | |
| X08 | 15-WAY CONNECTOR - ENGINE | |
| X09 | 9-WAY CONNECTOR - ENGINE | |
| X10 | 12-WAY CONNECTOR - STEERING COLUMN | |
| X15 | 4-WAY CONNECTOR - JOYSTICK | |
| X16 | 2-WAY CONNECTOR - STEERING COLUMN | |

6.4.2 Fuses and relays

FUSES

| Ref. | Circuit | Amp. |
|------|----------------------------------|------|
| F1 | FUSE | 5 |
| F2 | FUSE | 10 |
| F3 | FUSE | 10 |
| F4 | FUSE | 5 |
| F5 | FUSE | 10 |
| F6 | FUSE | 10 |
| F7 | FUSE | 5 |
| F8 | FUSE | 5 |
| F9 | FUSE | 15 |
| F10 | FUSE | 5 |
| F11 | FUSE | 7,5 |
| F12 | FUSE | 7,5 |
| F13 | FUSE | 5 |
| F14 | FUSE | 2 |
| F15 | FUSE | 2 |
| F16 | FUSE | 20 |
| F17 | FUSE | 10 |
| F18 | FUSE | 5 |
| F19 | FUSE | 20 |
| F20 | FUSE | 10 |
| F21 | FUSE | 15 |
| F22 | FUSE | 5 |
| F23 | FUSE | 15 |
| F24 | FUSE | 5 |
| F25 | FUSE | 7,5 |
| F26 | FUSE | 7,5 |
| F27 | FUSE | 5 |
| F28 | FUSE | 5 |
| F29 | SPARE FUSES | |
| F30 | PREHEATING CONTROL UNIT MAXIFUSE | |
| F31 | SYSTEM PROTECTION FUSE | |

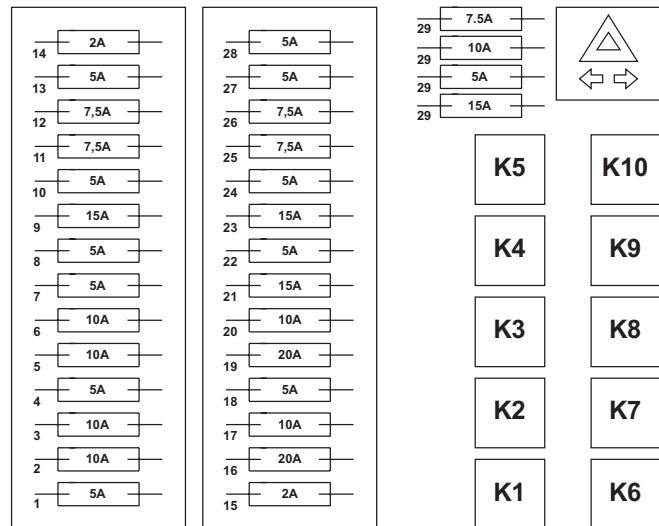




- F29 SPARE FUSES
- F30 PREHEATING CONTROL UNIT MAXIFUSE
- F31 SYSTEM PROTECTION FUSE



RELAYS



Ref. Circuit

- K01 OPTIONAL WORK LIGHT
- K02 STARTING ENABLING COMMAND
- K03 FORWARD SPEED ENABLING COMMAND
- K04 INHIBITION WITH SERVICE BRAKE
ENGAGED
- K05 REVERSE SPEED ENABLING COMMAND
- K06 GEAR ENGAGEMENT FROM PARKING BRAKE
LINE LOW PRESSURE BULB
- K11 START RELAY
- K12 PRE-HEATING RELAY

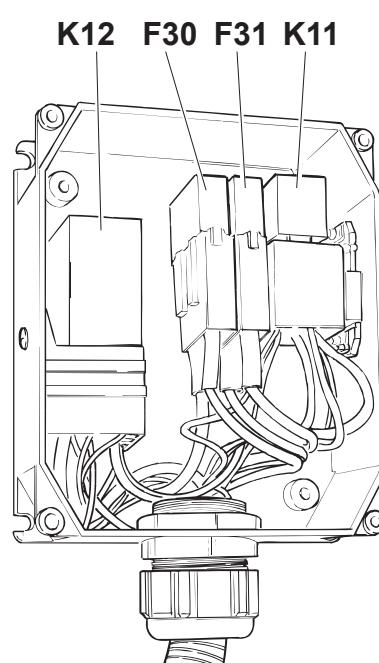

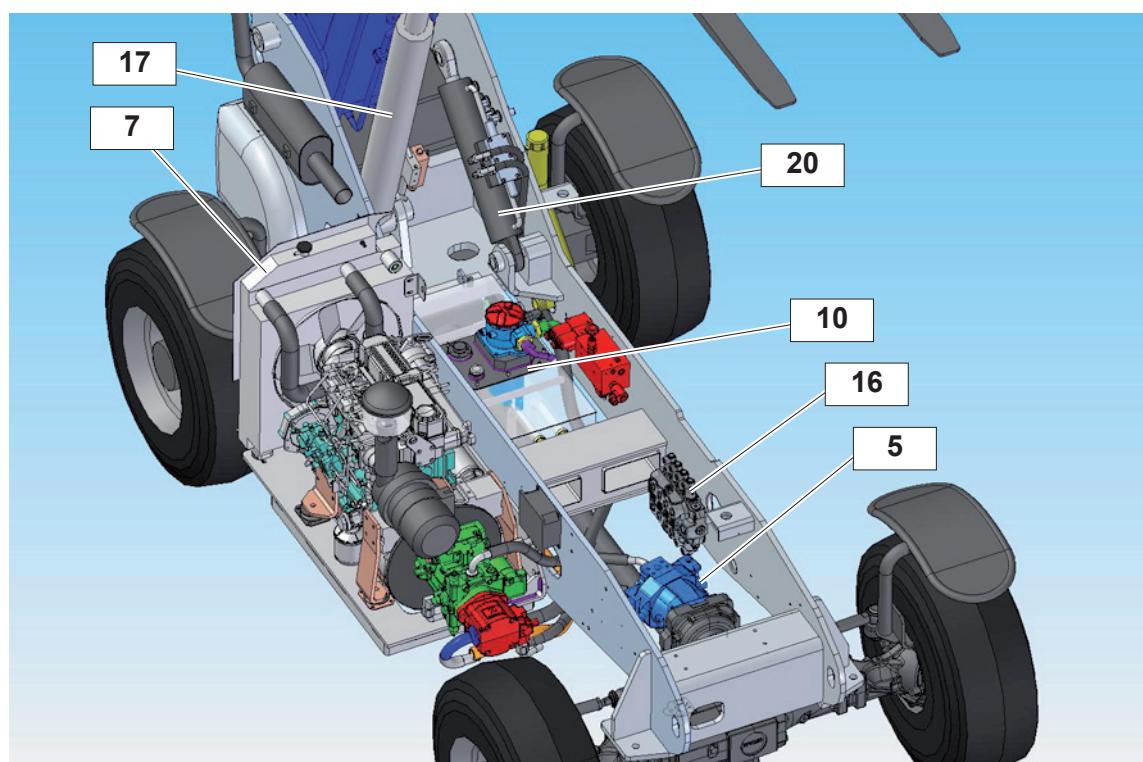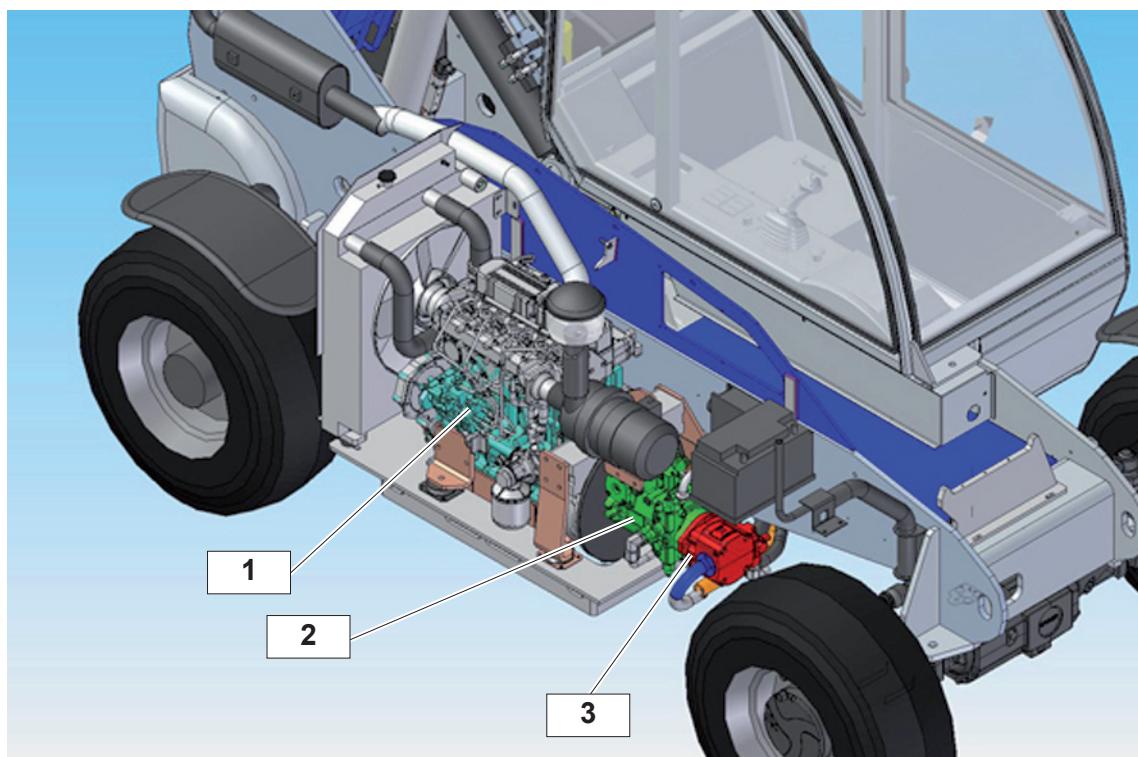
6.5 POSITION OF THE ELECTRICAL AND HYDRAULICAL COMPONENTS ON THE MACHINE**6.5.1 Hydraulical components**

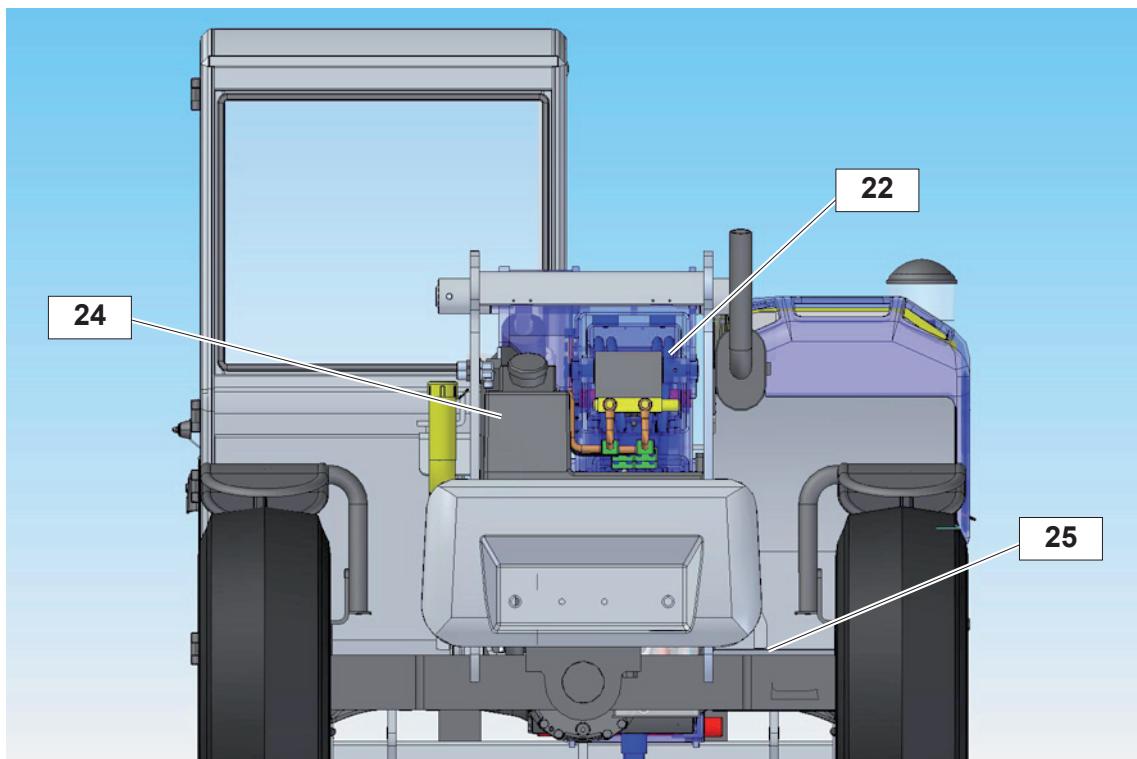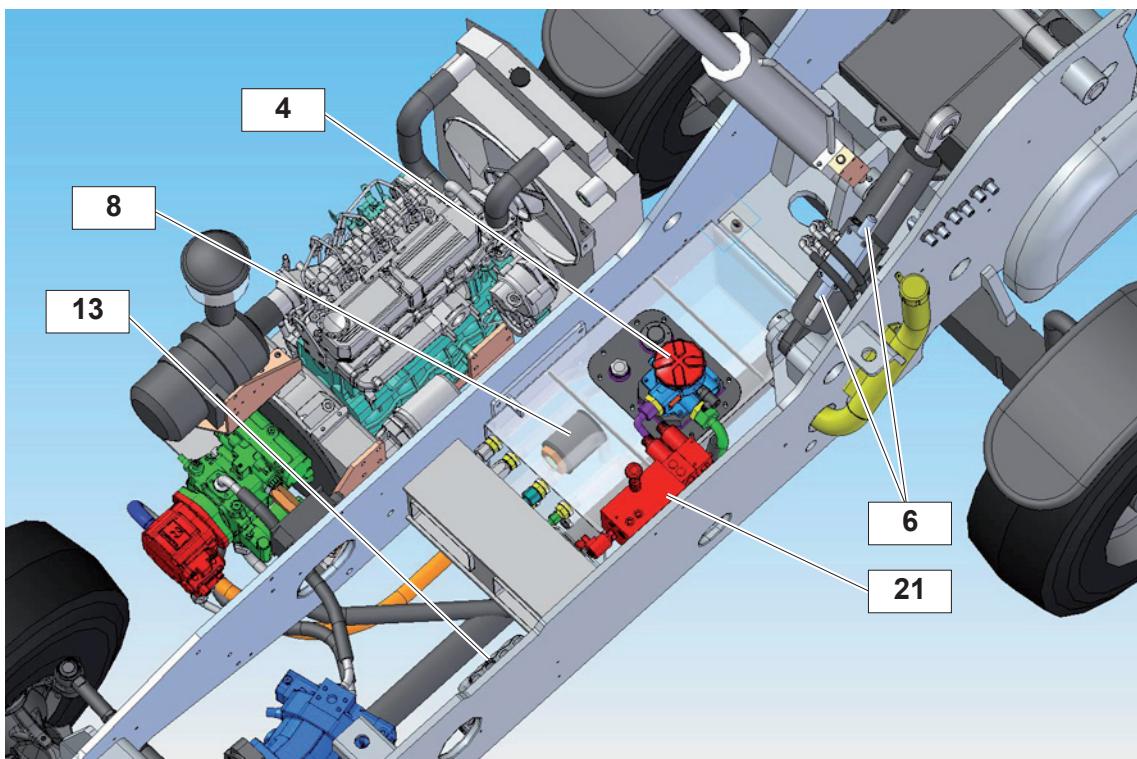

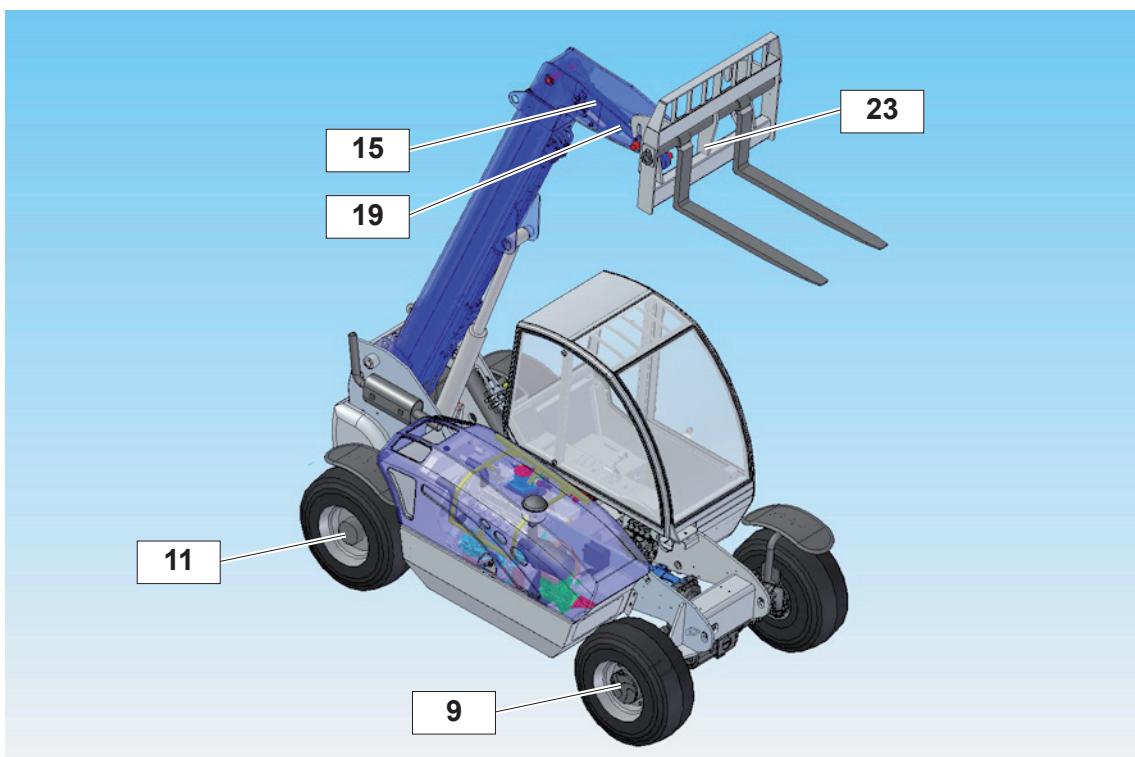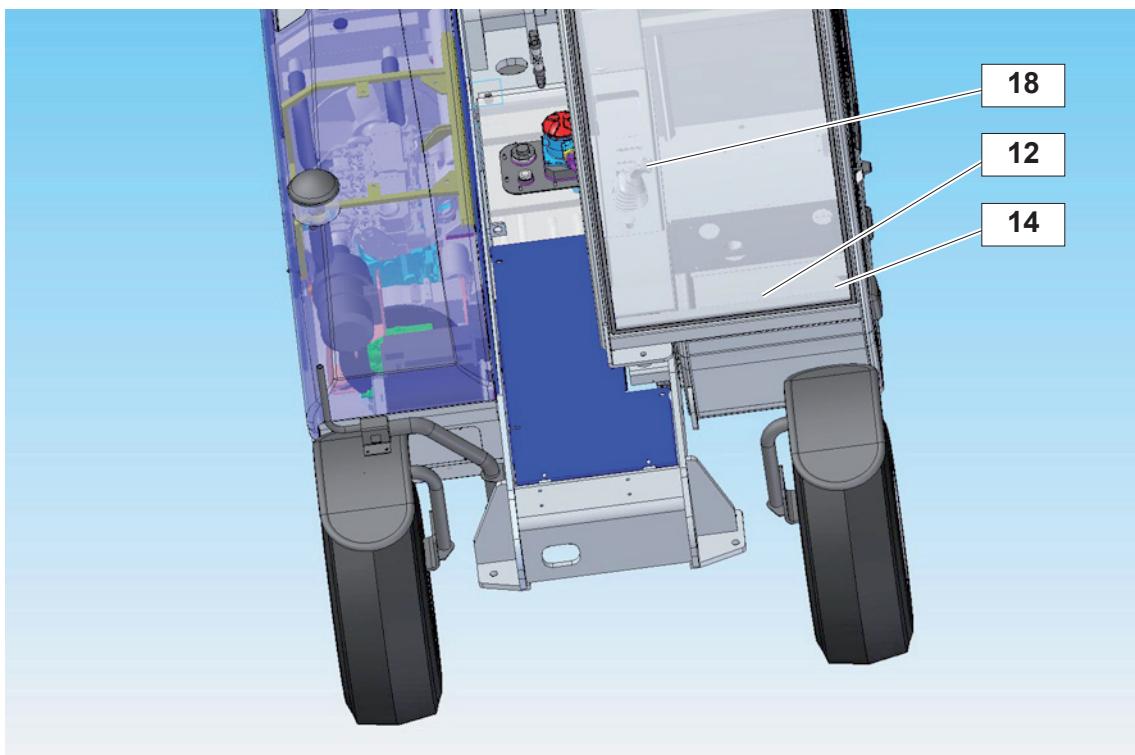

Legend of the hydraulic components

| Pos. | Description |
|------|---|
| 1 | Diesel engine |
| 2 | Drive pump |
| 3 | Service pump |
| 4 | Hydraulic oil return filter |
| 5 | Drive motor |
| 6 | One-way valves |
| 7 | Combined engine fluid/hydraulic oil radiator |
| 8 | Service pump suction filter |
| 9 | Front axle |
| 10 | Hydraulic oil tank |
| 11 | Rear axle |
| 12 | Hydraulic steering |
| 13 | Steering selection solenoid valve |
| 14 | Brake pump |
| 15 | Quick-fit couplings for attachment lock/ unlock control |
| 16 | Main valve |
| 17 | Boom lifting/lowering cylinder |
| 18 | Joystick |
| 19 | Fork tilting cylinder |
| 20 | Fork levelling cylinder |
| 21 | Main valve control block |
| 22 | Boom extension/retraction cylinder |
| 23 | Attachment coupling cylinder |
| 24 | Fuel tank |
| 25 | Load cell |

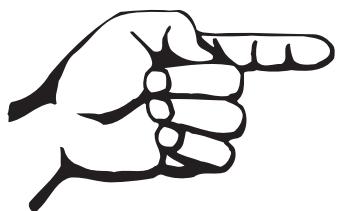

Intentionally blank page

Section 7

REPAIR PROCEDURES

SECTION INDEX

| | | | |
|-----|--|------|----|
| 7.1 | Time schedule | page | 2 |
| 7.2 | Repair procedures..... | | 5 |
| | 001 - Cylinder disassembly - Boom raising cylinder | | 5 |
| | 002 - Cylinder disassembly - Fork balance cylinder | | 9 |
| | 003 - Cylinder disassembly - Attachment locking cylinder + DFE valve (if any) | | 11 |
| | 004 - Removing the engine from the machine | | 15 |
| | 005 - Hydrostatic pump disassembly | | 21 |
| | 006 - Disassembling the hydraulic motor | | 23 |
| | 007 - Cylinder disassembly - Boom extension cylinder | | 25 |
| | 008 - Water-oil cooler disassembly..... | | 27 |
| | 009 - Main valve disassembly..... | | 29 |
| | 010 - Renewing the slide pads of the telescopic boom | | 31 |
| | 011 - Renewing the flexible hoses inside the boom..... | | 35 |
| | 012 - Cylinder disassembly - Attachment rotation cylinder | | 37 |

7.1 TIME SCHEDULE

| Job | Operators needed | Expected time (h) |
|---|---------------------|----------------------|
| change the ignition key | 1 | 1,00 |
| change the gear switch lever | 1 | 0,15 |
| change the speed switch | 1 | 0,15 |
| change the joystick | 1 | 1,00 |
| change the fork locking/releasing pushbutton | 1 | 0,20 |
| change the fork locking/releasing red pushbuttons | 1 | 0,20 |
| change the brake pump | 1 | 0,30 |
| change the boom lifting cylinder | 1 | 2,15 |
| change the boom lifting cylinder kit (complete overhaul) | 1 | 1,30 |
| change the block valve of the boom lifting cylinder | 1 | 0,30 |
| change the cylinder inside the boom | 1 | 2,30 |
| change the extension cylinder kit inside the boom | 1 | 1,30 |
| change the block valve of the extension cylinder inside the boom | 1 | 0,30 |
| change the fork pitching cylinder | 1 | 1,30 |
| change the fork pitching cylinder kit | 1 | 1,30 |
| change the valve of the fork pitching cylinder | 1 | 0,30 |
| change the attachment locking cylinder | 1 | 1,00 |
| change the attachment locking cylinder kit | 1 | 1,15 |
| change the block valve of the attachment locking cylinder | 1 | 0,30 |
| change the fork compensation cylinder | 1 | 2,00 |
| change the fork compensation cylinder kit | 1 | 1,30 |
| change the valve of the fork compensation cylinder | 1 | 0,45 |
| check the one-way valves of the fork compensation cylinder | 1 | 0,20 |
| change the boom internal line for the boom extension | 1 | 1,30 |
| change the boom internal line for the fork pitching | 2 | 2,00 |
| change the boom internal line for the fork locking | 2 | 2,00 |
| change the boom slide pads | 1 | 2,30 |
| check the transmission pump pressures | 2 | 0,30 each |
| check the pressure of the main actuator operating the boom movements | 2 | 0,30 each |
| check the pressure of brake pump and hydrostatic steering unit | 1 | 0,30 |
| check the pressure of pressure relief valves and safety valves | 1 | 1,30 |
| change the drive pump | 1 | 2,00 |

| Job | Operators needed | Expected time (h) |
|---|---------------------|----------------------|
| change the drive motor | 1 | 2,00 |
| change motor, pump, transmission piping + tests | 1 | 5,00 |
| change the actuator control pump | 1 | 2,00 |
| change and calibrate the actuator | 1 | 2,30 |
| change the DFE valve | 1 | 0,30 |
| change relays and fuses | 1 | 0,10 |
| change the windscreen wiper motor (closed cab version) | 1 | 1,00 |
| change a solenoid valve | 1 | 0,30 |
| change the gas pedal complete with cord | 1 | 1,00 |
| change the manual throttle complete with cord | 1 | 0,30 |
| change the front axle shaft | 1 | 2,30 |
| change the rear axle shaft | 1 | 2,00 |
| change 1 cardan joint | 1 | 1,00 |
| change the cardan joints | 1 | 2,00 |
| change the axle shaft hub | 1 | 1,30 |
| change the boom assy | 2 | 4,00 each |
| change the boom anchoring pin | 2 | 1,00 each |
| change the attachment locking cylinder pins | 1 | 0,30 |
| change a cab pushbutton | 1 | 0,30 |
| change and test the actuator pressure relief valve or the sliders | 1 | 0,30 |
| change and test the actuator safety valve | 1 | 0,30 |
| change the one-way valve | 1 | 0,20 |
| change the maxi-fuses and search for troubles | 1 | 1,00 |
| bleed the brake circuit | 2 | 0,15 each |
| disassemble and reassemble a wheel | 1 | 1,00 |
| disassemble the Deutz engine | 2 | 2,30 |
| dismantle the hydraulic oil tank | 1 | 3,00 |
| dismantle the fuel tank | 1 | 2,00 |
| change the oil-water cooler | 1 | 2,00 |
| change the fork pivot pin support | 1 | 2,00 |
| change the engine bonnet | 1 | 1,00 |
| change the canister of the air filter | 1 | 0,10 |
| check the seals of the steering cylinder | 2 | 1,00 |
| change the return filter of the hydraulic oil tank | 1 | 0,30 |
| change the hydrostatic steering unit | 1 | 2,00 |
| change the battery | 1 | 0,20 |
| change the exhaust pipe | 1 | 0,30 |
| change the mud-guard supports | 1 | 0,30 |

| Job | Operators needed | Expected time (h) |
|---|---------------------|----------------------|
| change the mud-guards | 1 | 0,20 |
| change the steering wheel | 1 | 0,20 |
| replace the complete solenoid valve block | 1 | 2,00 |

| | | | |
|--|---|--|---|
| Operation: Cylinder disassembly Boom raising cylinder | | Table: GTG5519-001 |  76 |
|  Bridge crane, payload 5000 kg (20000 lb) Textile bridles or chains with hooks |  Standard tools Adjustable stands |  2 15 |  1 |
| | | | |


Operation:

- 1 Release the attachment
- 2 Anchor the attachment holding frame to the hooks of the slinging chain
- 3 Raise the boom to max. height (the hinging pin of the cylinder rod must be over the driving cabin) operating alternately the bridge crane and the hydraulic boom raising control of the machine
- 4 Stop raising when the slinging chains are slightly under tension
- 5 Place a container of suitable size under the hydraulic piping before disconnecting

NOTICE

Used oils must be handled and disposed of according to local regulations. Address to legally authorised centres.

- 6 With a 27 mm wrench, disconnect two hydraulic hoses from the blocking valve, then plug the disconnected connectors to prevent dust and impurities from entering the circuit


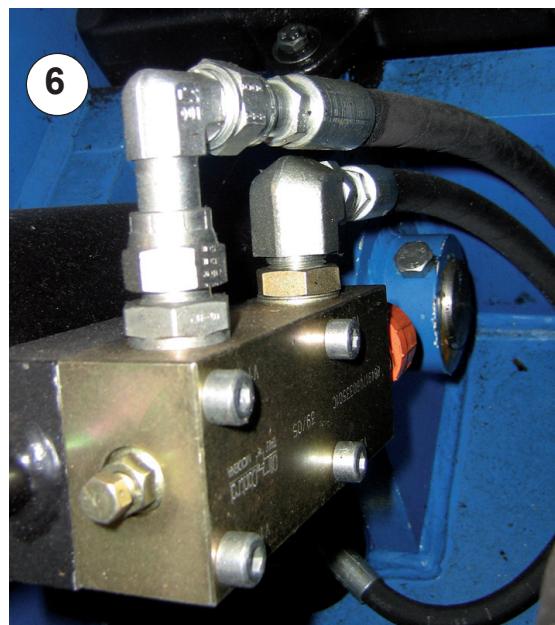


Operation: **Cylinder disassembly**
Boom raising cylinder

Table:

GTH5519-001

- 7 To move the boom using the up/down controls of the bridge crane, previously disconnect the rod of the fork balance cylinder
- 8 Remove the screw fixing the pin with two 17 mm wrenches
- 9 Knock out and extract the pin using a plug of soft material (aluminium, copper, wood, etc.)
- 10 Fix the balance cylinder to the cabin with a sling and ensure it does not hinder the movement of the boom
- 11 Secure the raising cylinder to the cabin with a sling

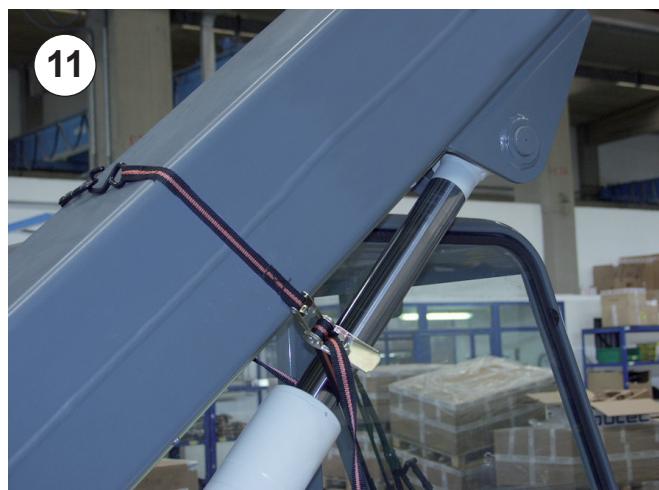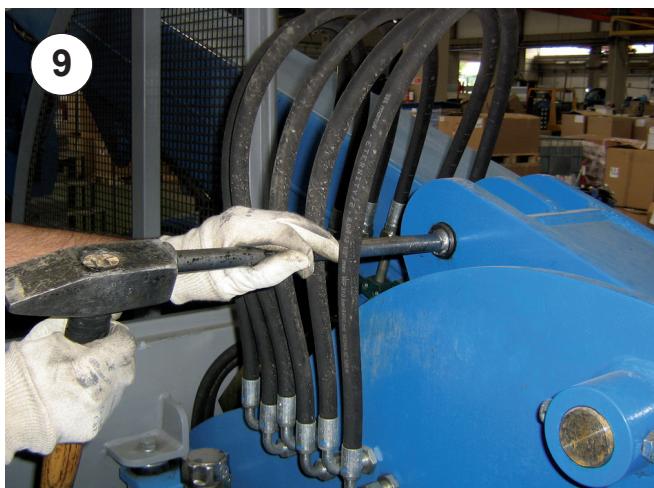


Operation: **Cylinder disassembly**
Boom raising cylinder

Table:

GTH5519-001

12 Remove the screw which fixes the rod pin to the boom using two 19 mm wrenches

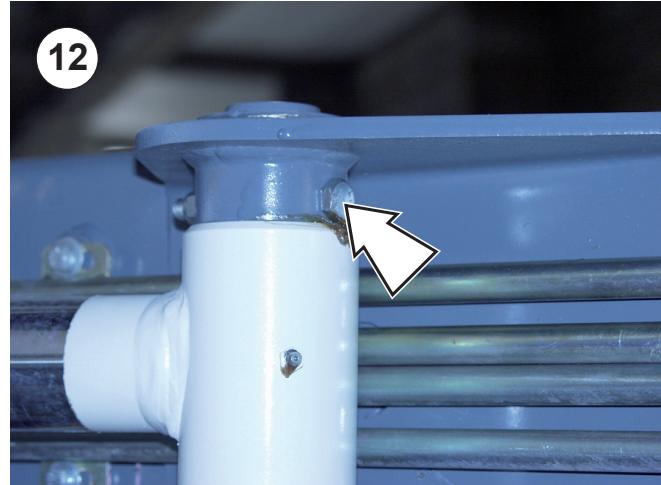

13 Knock out and extract the pin using a plug of soft material (aluminium, copper, wood, etc.)


14 Put two wooden plugs, each 100mm high, on the oil cylinder to support the raising cylinder

15 Lower the boom until the cylinder rests on the supporting plugs previously positioned

16 Untie the sling fixing the cylinder to the boom, then raise the boom with the bridge crane to go on working



17 Remove the screw which fixes the bottom-side pin of the cylinder using two 19 mm wrenches

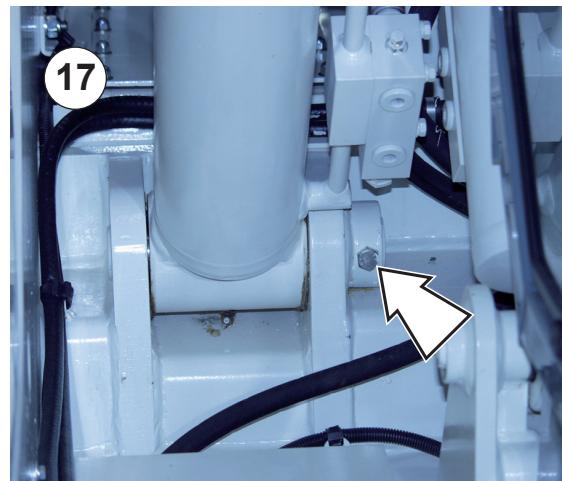

Operation: **Cylinder disassembly**
Boom raising cylinder

Table:

GTH5519-001

- 18** Knock out the pin using a plug of soft material (aluminium, copper, wood, etc.) and extract it through the hole on the frame
- 19** Lower the boom onto the adjustable stand to remove the slinging chains
- 20** Sling the cylinder with a textile bridle and remove it from the machine using the bridge crane

CAUTION


*To reassemble the cylinder, repeat the steps above in reversed order.
Remember to set the circuit under pressure before releasing the bridge crane.*




| | | | | | |
|--|---|---|---|-----------|--|
| Operation: Cylinder disassembly Fork balance cylinder | | Table: GTH5519-002 |  kg | 26 | |
|  Bridge crane, payload 500 kg (2000 lb) Textile bridles or chains with hooks |  Standard tools Adjustable stands |  2 - | | | |
| | |  1 | | | |

Operation:

- 1 Release the attachment
- 2 Remove the screw fixing the rod pin with two 13 mm wrenches

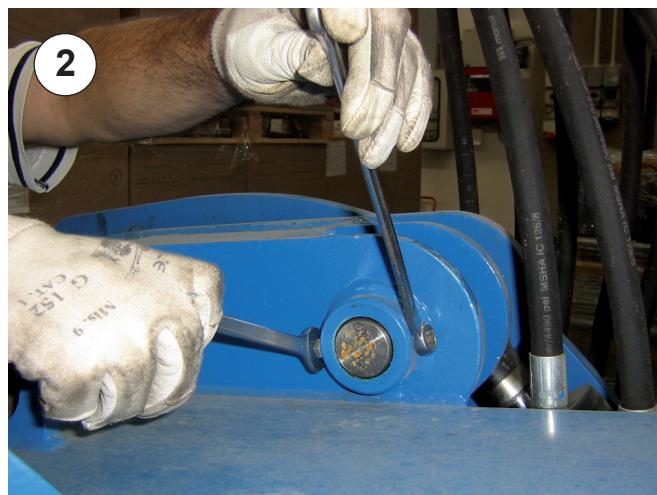

- 3 Knock out and extract the pin using a plug of soft material (aluminium, copper, wood, etc.)

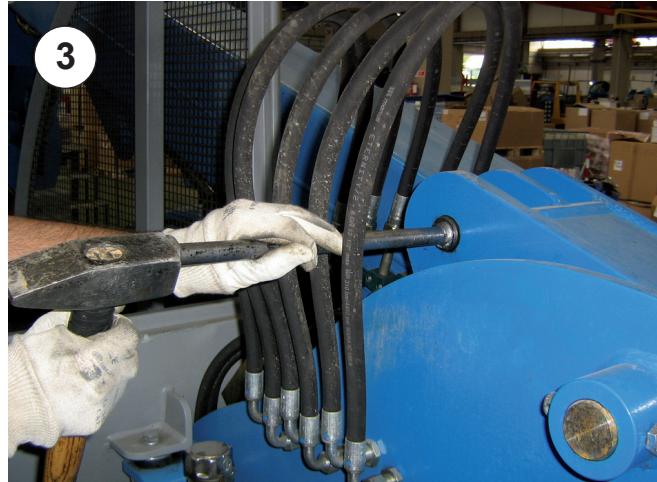

Operation: **Cylinder disassembly**
Fork balance cylinder

Table:

GTH5519-002


- 4 Fix the cylinder with a textile bridle connected to the bridge crane to support its weight
- 5 Place a container of suitable size under the hydraulic piping before disconnecting

NOTICE

Used oils must be handled and disposed of according to local regulations. Address to legally authorised centres.



- 6 With a 27 mm wrench, disconnect two hydraulic hoses from the blocking valve, then plug the disconnected connectors to prevent dust and impurities from entering the circuit
- 7 Drive out the lower pin
- 8 Unscrew and extract the screw fixing the pin with two 13 mm wrenches

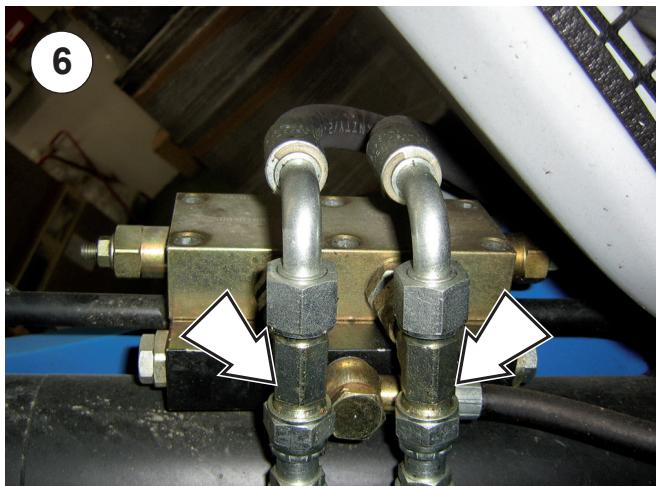

- 9 Knock out the pin using a plug of soft material (aluminium, copper, wood, etc.) and extract it through the hole on the frame
- 10 Remove the cylinder from the machine using the bridge crane




| | | | | | |
|---|--|---|---|---|---|
| <p>Operation: Cylinder disassembly Attachment locking cylinder + DFE valve (if any)</p> | | <p>Table: GTH5519-003</p> |  | 12 | |
|  | Bridge crane, payload 500 kg (2000 lb) Textile bridles or chains with hooks |  | Standard tools |  | 1 - |
| | | |  | 1 | |

Operation:

- 1 Release the attachment
- 2 With a 13mm wrench, remove the protective cover of the attachment lock/unlock cylinder




- 3 Disconnect the flexible hoses connected to the DFE valve (if present; usually it is used when the attachment needs an additional hydraulic line) from the quick connectors on the telescopic section of the boom

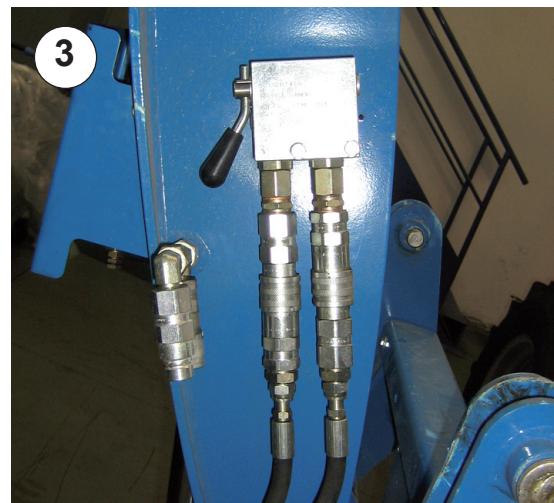


Operation: Cylinder disassembly**Table:****Attachment locking cylinder****GTH5519-003**

4 With a 17 mm wrench, disconnect the flexible hoses from the attachment locking cylinder

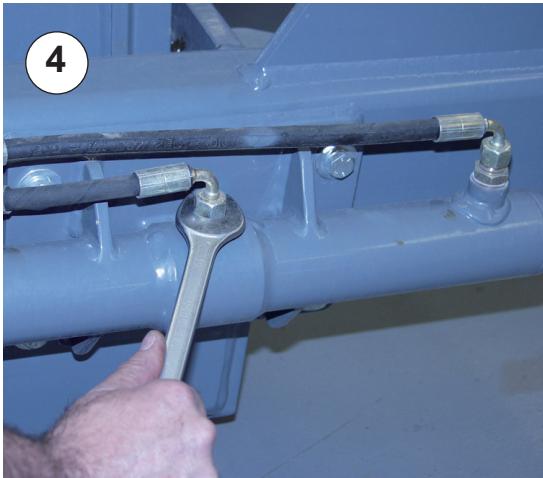

5 With a 17 mm wrench, loosen the four screws fixing the cylinder without removing them

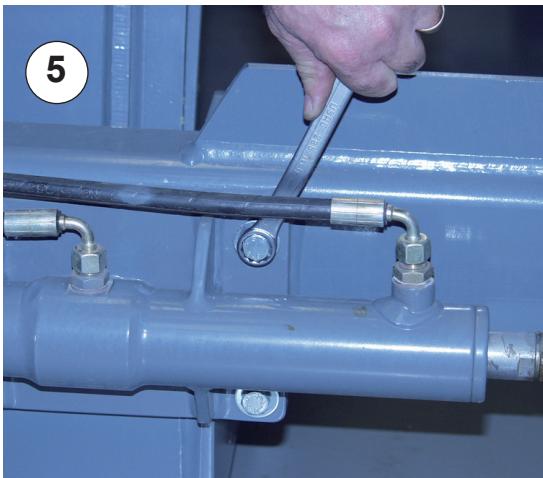


Operation: **Cylinder disassembly**

Table:

Attachment locking cylinder**GTH5519-003**

- 6 With a 2.5 mm hexagonal wrench, remove the grub-screw fixing the terminal pin on both sides of the cylinder (if present)

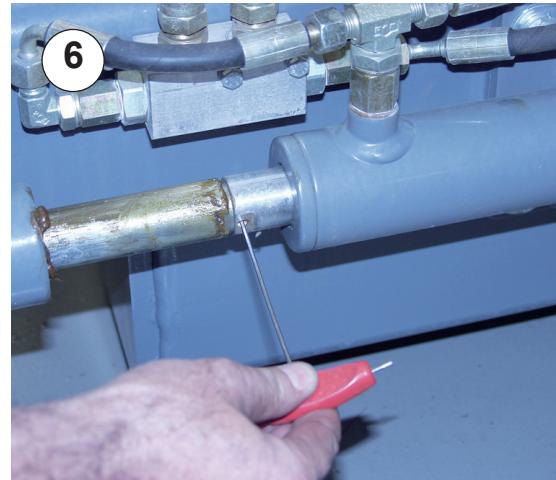

- 7 With two 27 mm wrenches, loosen and pull out the terminal pins from their housings
- 8 Remove the four screws, previously loosened, to set the cylinder free
- 9 Seize and remove the cylinder
- 10 If necessary, position the cylinder on the bench and disconnect the pipes



| | |
|--|-------------------------------------|
| Operation: Cylinder reassembly Attachment locking cylinder | Table: GTH5519-003 |
|--|-------------------------------------|

Reassembling the cylinder:

CAUTION


To reassemble the cylinder, repeat the steps above in reversed order considering the precautions below.

- 1 Block the terminal pins on the cylinder rods after smearing the threads with Loctite 245. Clean and use the amount indicated in the bottle
- 2 Lock the four fixing screws of the cylinder to the holding frame with the terminal pins completely driven into their housing but free to rotate (correct alignment of the pins with the holes)
- 3 Block the grub-screws of the terminal pins with Loctite 245

| | | | |
|--|--|--|--|
| Operation: Removing the engine from the machine | | Table: GTH5519-004 |  340 |
|  Bridge crane, payload 500 kg (2000 lb) Textile bridles or chains with hooks |  Standard tools |  2 30 | |
| | |  2 | |

Operation:

- 1 Open the engine cover
- 2 Secure the cover with a belt or hold it raised by hand so it cannot move
- 3 Using two 13mm wrenches, remove the two screws of the spring
- 4 Again with two 13mm wrenches, loosen the three screws that secure the cover to the frame
- 5 Remove the upper cover
- 6 Disconnect the two battery leads and remove the battery
- 7 With two 17mm wrenches, remove the six screws fixing the lower cover of the engine

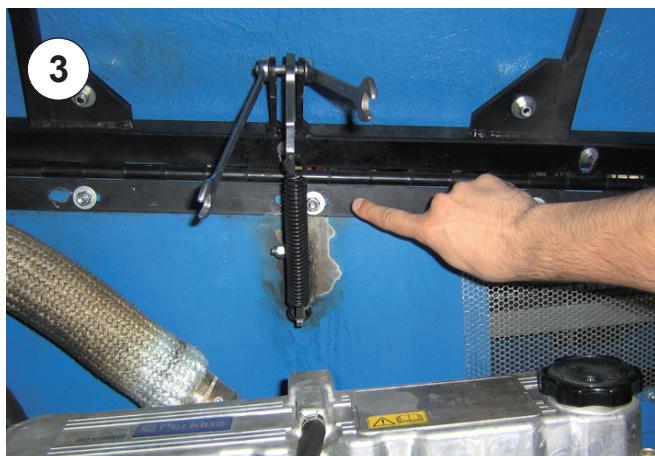


Operation: Removing the engine from the machine


Table:

GTH5519-004

- 8 Remove the lower cover
- 9 With a screwdriver, disconnect the fuel feeding and return piping held in position by the special hose-clamps

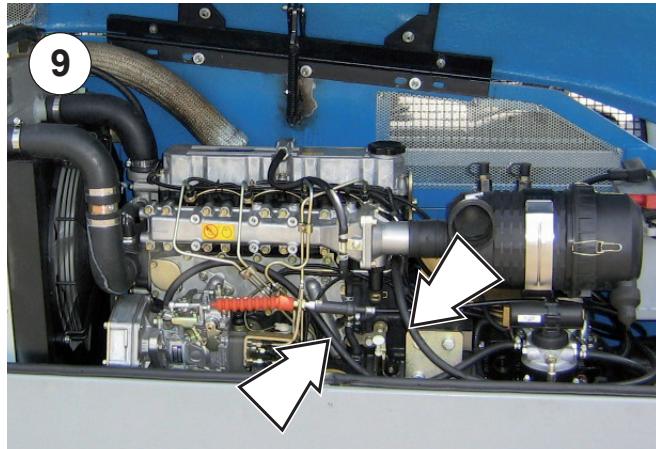

- 10 Disconnect the throttle control cable removing the locking clip; loosen the cable register with a 17 mm wrench to pull out the cable

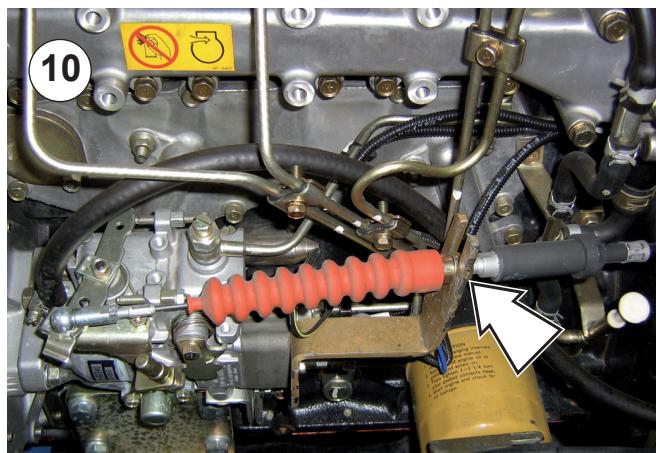

- 11 Close the oil tank cocks



Operation: Removing the engine from the machine

Table:

GTH5519-004

12 Disconnect the flexible hose of the silencer loosening the clamps with a 13 mm wrench

13 Remove the manifold with a 17 mm wrench





14 Disconnect all the electrical wires connected to the engine, and namely:

- oil pressure bulb,
- electrical stop,
- water temperature bulb,
- the three alternator connections,
- starter motor,
- ground between chassis and engine,
- the two coils of the transmission pump solenoid valve.

15 Disconnect the radiator:

- a) remove the clamps fixing the sleeves to the radiator
- b) remove the three screws that hold the fan protective grille in place

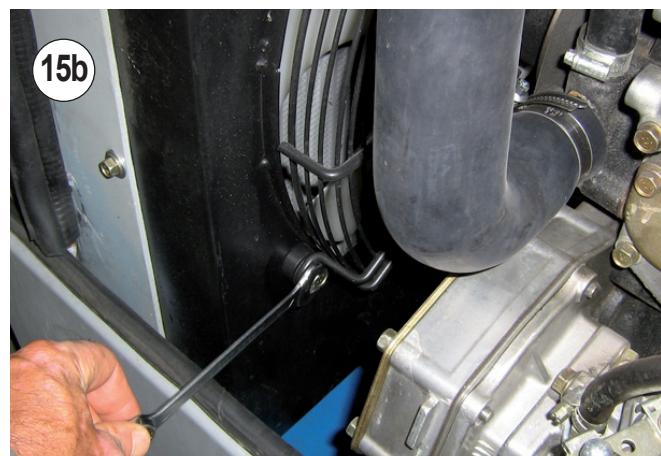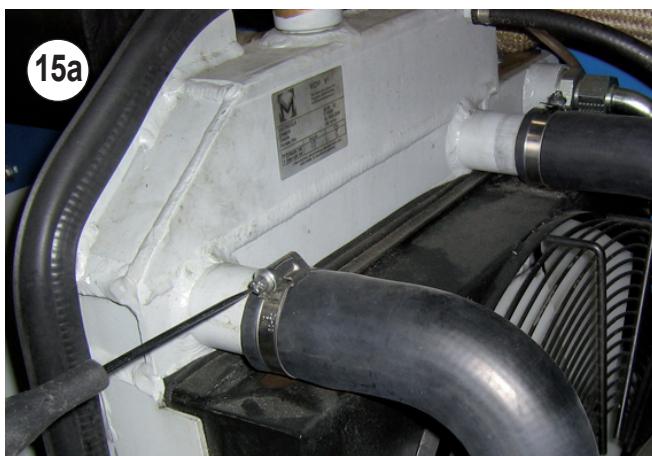

Operation: Removing the engine from the machine

Table:

GTH5519-004

16 Disconnect the hydraulic piping:


NOTICE

Before disconnecting the hydraulic piping, place containers of suitable size underneath to prevent oil spillage.

CAUTION

Plug all disconnected parts to prevent dust and impurities from entering the circuit. They can cause serious damage.


- disconnect the two drain lines of the hydraulic pump with a 36mm wrench
- disconnect the suction line of the hydraulic pump with a 50mm wrench
- disconnect the “low pressure line” duct with a 19mm wrench
- disconnect the four flanges which connect the drive pump to the drive motor with a 8mm Allen wrench
- disconnect the suction line of the service pump with a 8mm Allen wrench (ref. A),
- disconnect the delivery line ducts of the hydraulic drive and the main valve with a 36mm wrench and a 24mm wrench
- disconnect the load sensing signal line from the hydraulic drive with a 17mm wrench.

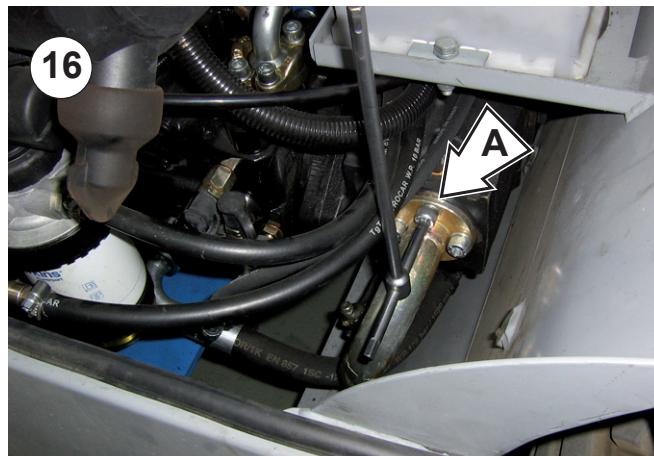

WARNING

Once all operations have been performed make sure that all the electrical wires and the hydraulic lines are disconnected from the motor.

17 Remove the four screws (two on the front and two at the back) of the vibration supports with a 22 mm wrench

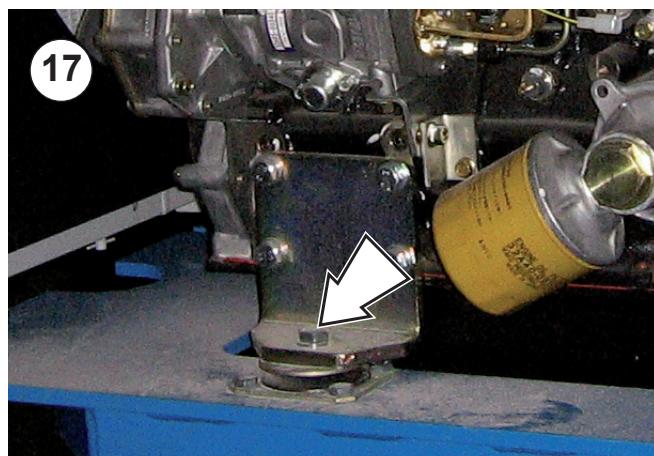

Operation: **Removing the engine from the machine**
Reassembling the engine on the machine


Table:

GTH5519-004

18 Sling the engine using a two-leg chain with hook to be coupled to the front lug and the rear supporting bracket of the battery

19 Raise the engine with caution and ensure no parts are still connected

20 Remove the engine from the machine, rest it on a wooden pallet and hold it in position with some plugs

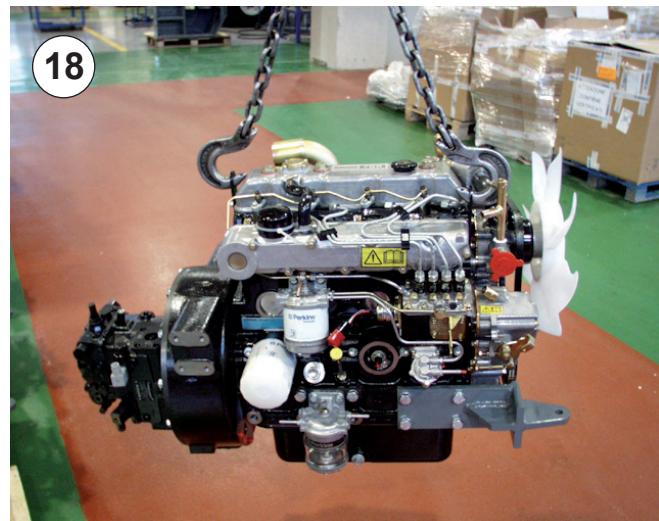

Reassembling the engine:

CAUTION

To reassemble the engine, repeat the steps above in reversed order considering the precautions below.

1 Handle the engine with extreme caution to prevent it from crashing against the machine

Operation: Reassembling the engine on the machine**Table:****GTH5519-004***Page left intentionally blank*

| | | | |
|---|--|---|--|
| Operation: Hydrostatic pump disassembly | | Table: GTH5519-005 |  40 |
|  Bridge crane or swing hoist, payload 500 kg (2000 lb) |  Standard tools |  2 - | |
| | |  1 | |

Operation:

NOTICE

Before disconnecting the hydraulic piping, place containers of suitable size underneath to prevent oil spillage.

CAUTION

Carefully clean the area around the piping to be disconnected, plug all disconnected parts with caps, rags or adhesive tape to prevent dust or impurities from entering the circuit. They can cause serious damage.

- 1 Using two 17mm wrenches, remove the six screws that fix the engine lower cover
- 2 Remove the lower cover
- 3 Close the oil tank cocks



Operation: Hydrostatic pump disassembly

Table:

GTH5519-005


- 4 With a screwdriver, remove the two electrical connections of the solenoid valve which controls the machine forward/reverse movements
- 5 Disconnect the hydraulic piping:
 - disconnect the two drain lines of the hydraulic pump with a 36mm wrench
 - disconnect the suction line of the hydraulic pump with a 50mm wrench
 - disconnect the "low pressure line" duct with a 19mm wrench
 - disconnect the four flanges which connect the drive pump to the drive motor with a 8mm Allen wrench
 - disconnect the suction line of the service pump with a 8mm Allen wrench
 - disconnect the delivery line ducts of the hydraulic drive and the main valve with a 36mm wrench and a 24mm wrench
 - disconnect the load sensing signal line from the hydraulic drive with a 17mm wrench.



WARNING

Once all operations have been performed, make sure that all electrical wires and hydraulic lines are disconnected from the motor.

- 6 Disconnect the service pump from the drive pump by driving out bolts **A** with a 19mm spanner. Place the pump on to a bench and plug all the outlets.
- 7 Remove the fixing screws **B** of the drive pump with a 14mm hex-head wrench and then secure the pump to the bridge crane with a textile sling and pull it out of the motor. Place the pump on to a bench and plug all the outlets.

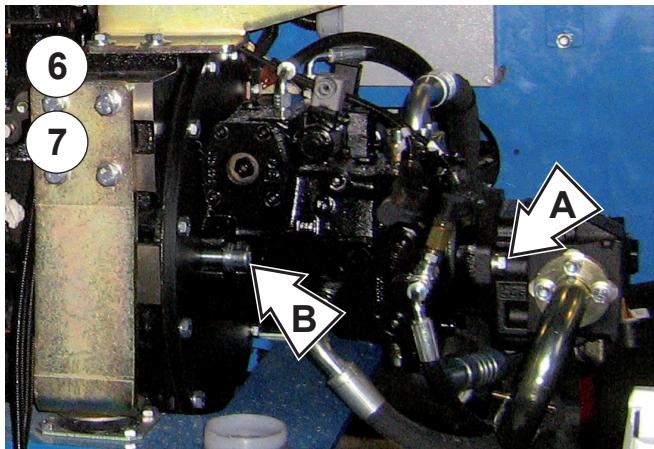

| | | | | |
|---|--|---|--|----|
| Operation: Disassembling the hydraulic motor | | Table: GTH5519-006 |  kg | 44 |
|  Bridge crane or swing hoist, payload 500 kg (2000 lb) |  Standard tools |  2 | - | |
| | |  1 | | |

Operation:


NOTICE

Before disconnecting the hydraulic piping, place containers of suitable size underneath to prevent oil spillage.

CAUTION


Carefully clean the area around the piping to be disconnected, plug all disconnected parts with connectors, clothes or adhesive tape to prevent dust or impurities from entering the circuit. They can cause serious damage.

- 1 Remove the central covers **A-B** of the machine by driving out all the bolts with two 13mm wrenches
- 2 Using a 36mm wrench and a 17mm wrench, disconnect the hoses
- 3 Disconnect the two delivery hoses with a 19 mm wrench

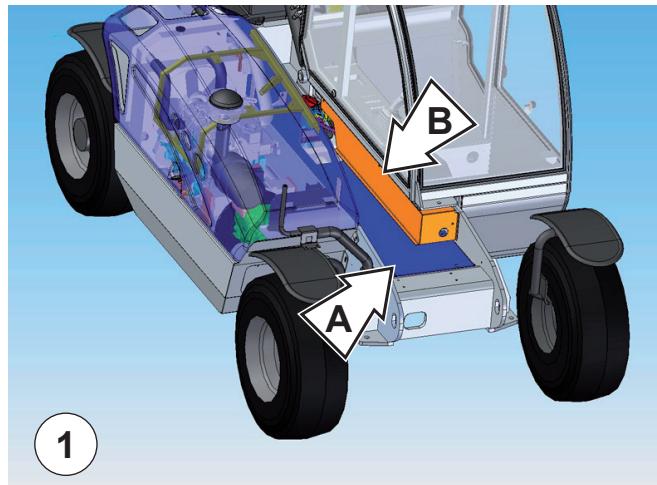

Operation: Disassembling the hydraulic motor**Table:****GTH5519-006**

- 4 Remove the four locking screws of the motor with a 24mm wrench
- 5 Pull out the motor from the power divider fitted to the front axle
- 6 Protect the engine compartment to prevent the entrance of impurities

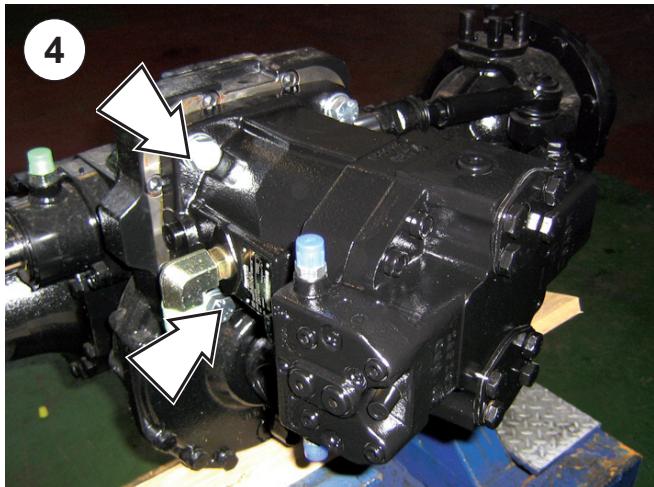

| | | | | | |
|--|--|--|---|-----------|--|
| Operation: Cylinder disassembly Boom extension cylinder | | Table: GTH5519-007 |  kg | 92 | |
|  Bridge crane, payload 500 kg (2000 lb) Textile bridles or chains with hooks |  Standard tools |  2 | Hrs. Min. | - | |
| | |  1 | | | |

Operation:


- 1 Set the boom to horizontal position with the telescope slightly extended to work on the cylinder connecting pin (rod side)
- 2 With a 13 mm wrench, remove the screw fixing the pin drop-shaped head
- 3 Knock out and extract the pin using a plug of soft material (aluminium, copper, wood, etc.)
- 4 Remove the rear guard to gain access to the rear part of the boom
- 5 Place a container of suitable size under the hydraulic piping before disconnecting

NOTICE

Used oils must be handled and disposed of according to local regulations. Address to legally authorised centres.




- 6 With a 27 mm wrench, disconnect the two hydraulic hoses from the blocking valve, then plug the disconnected connectors to prevent dust and impurities from entering the circuit.

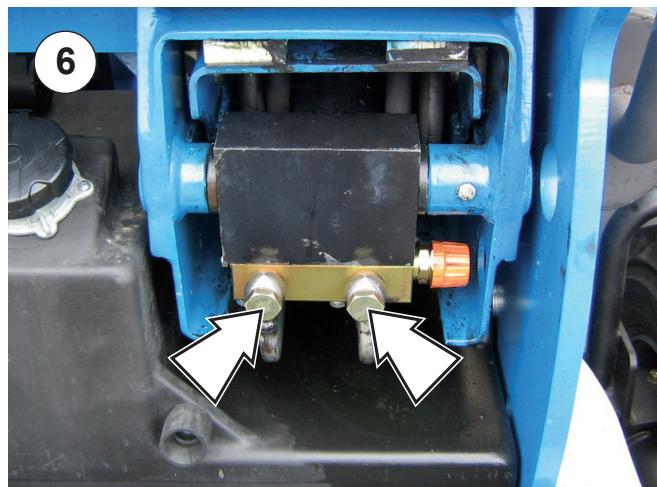

Operation: Cylinder disassembly**Table:****Boom extension cylinder****GTH5519-007**

7 Loosen and remove the screw fixing the cylinder pin (bottom side) with two 13 mm wrenches

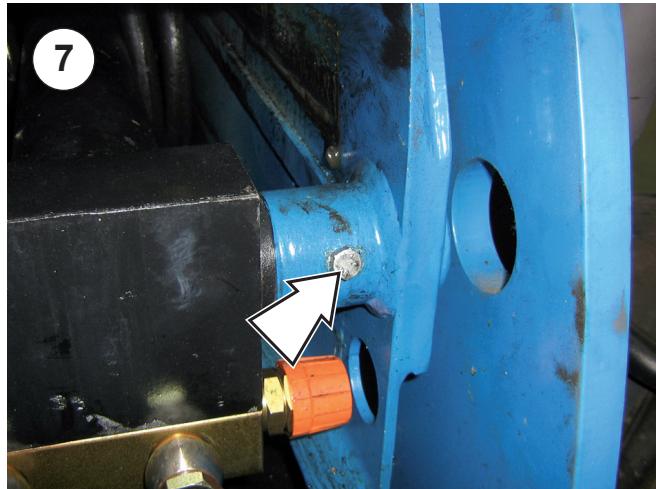

8 Knock out and extract the pin using a plug of soft material (aluminium, copper, wood, etc.)

9 Pull out the cylinder from the boom section and sling it with the textile bridles connected to the bridge crane



| | | | | |
|---|---|------------------------------|--|--------|
| Operation: Water-oil cooler disassembly | | Table: GTH5519-008 |  kg | 24 |
|  |  | Standard tools |  Hrs. 2 | Min. - |
| | | |  | 1 |

Operation:


NOTICE

Before disconnecting the hydraulic piping, place containers of suitable size underneath to prevent oil spillage.

CAUTION


Carefully clean the area around the piping to be disconnected, plug all disconnected parts with connectors, clothes or adhesive tape to prevent dust or impurities from entering the circuit. They can cause serious damage.

- 1 Empty the cooler opening the special cock
- 2 Disconnect the two inlet and outlet hoses from the cooler with a 36 mm wrench
- 3 Disconnect the water pipes from/to the engine loosening the hose-clamps with a screwdriver

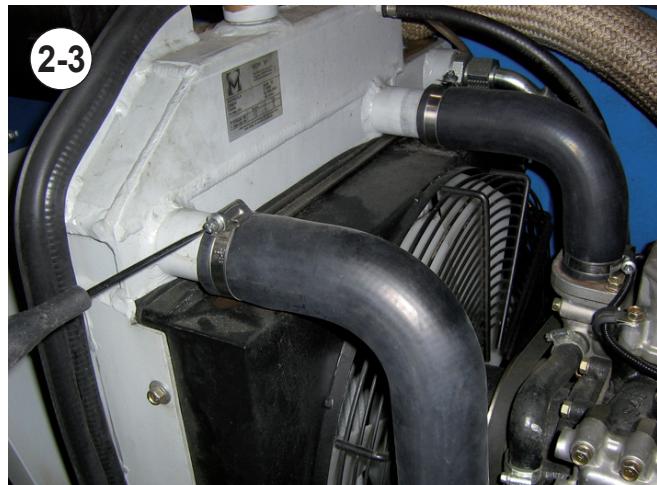

Operation: Water-oil cooler disassembly**Table:****GTH5519-008**

- 4 Remove the two screws of the vibration supports with a 22 mm wrench
- 5 Secure the cooler with a textile bridle connected to the swing hoist
- 6 Hoist with caution by tilting the cooler forward to prevent damage to the fixed fan of the engine

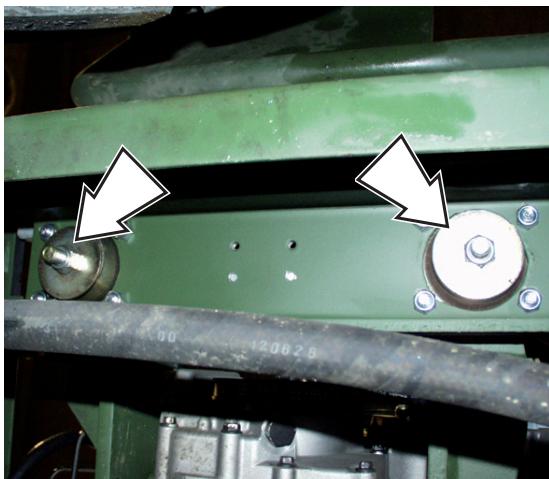4**VIEW OF THE MACHINE
FROM THE BOTTOM**

| | | | | |
|---|---|------------------------------|---|------|
| Operation: Main valve disassembly | | Table: GTH5519-009 |  | 27 |
|  |  | Standard tools |  | 2 30 |
| | | |  | 1 |

NOTICE

Before disconnecting the hydraulic piping, place containers of suitable size underneath to prevent oil spillage.

CAUTION

Carefully clean the area around the piping to be disconnected, plug all disconnected parts with connectors, clothes or adhesive tape to prevent dust or impurities from entering the circuit. They can cause serious damage.

! DANGER

Before disconnecting the hydraulic piping, ensure the line is not under pressure. Release the pressure if necessary by operating the control levers with the engine stopped.

In any case, disconnect the hydraulic piping with extreme caution and always wear suitable personal protection equipment -e.g. goggles, gloves, facial screen, etc.



Wrap up the end of the pipe to be disconnected with some rags and slowly loosen the pipe connector so that air comes out as slow as possible.

Operation: Main valve disassembly**Table:****GTH5519-009****CAUTION**

Before disconnecting any flexible hoses, label them for an easier reassembly.

Operation:

- 1 Disconnect the delivery and return pipes with a 32 mm wrench
- 2 Disconnect all users with a 27 mm wrench
- 3 Disconnect all pilot systems with a 19 mm wrench
- 4 Remove the 3 fixing screws with two 13 mm wrenches (screw + lock nut)

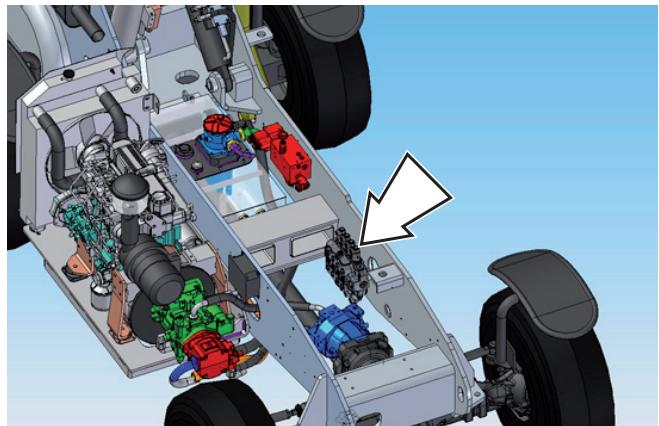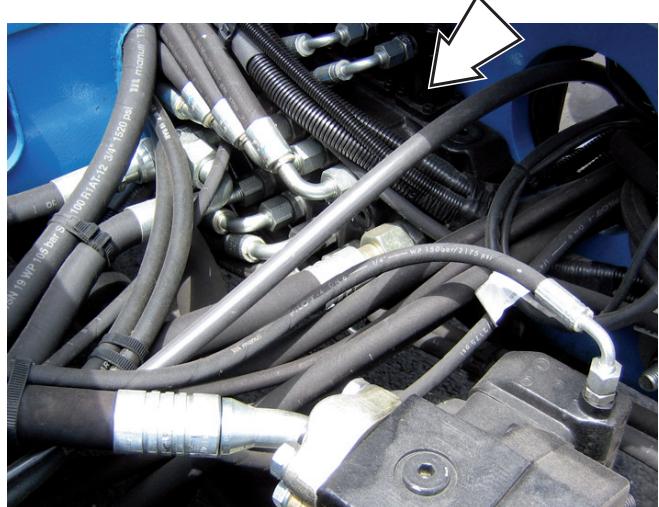

| | | | |
|---|---------------------------|---|------|
| Operation: Renewing the slide pads of the telescopic boom | Table: GTH5519-010 |  | - |
|  | Standard tools |  | 1 30 |
| | |  | 1 |

ADJUSTING THE PLAY WITH SHIMS

If the play between the boom sections is too great (2 mm or more), proceed in shimming the guide pads of the boom sections.

Usually, the guide pads subject to premature wear are:

- bottom pads of the fixed section
- top pads of the telescope

Proceed as follows:

1 Lower the boom to the ground and ensure the telescope is fully retracted



2 With a thickness gauge, check the play of all pads.

After adjustment, the minimum play in the narrowest point must be: **0,5±1 mm**

3 Measure the thickness of the slide pads. The value of the bottom pads of the fixed section and of the top pads of the telescope must be at least 13 mm. For the remaining pads, the minimum thickness must never be less than 9 mm

4 If the thickness reaches the minimum value, renew the pads before adjusting the residual play with some shims

5 Remove the fixing screws from the pads and position as many shims as necessary to reach the normal thickness value

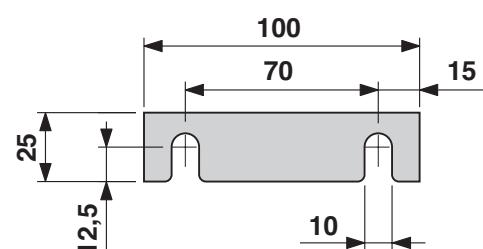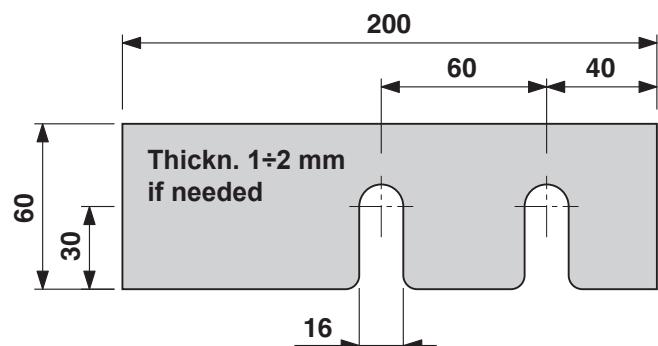



Operation: Renewing the slide pads of the telescopic boom

Table:

GTH5519-010

- 6 Refit the fixing screws (torque: 30÷35 Nm) after pouring some Loctite 495 on their threads
- 7 After shimming, fully extend the boom, carefully clean the sliding rails of the pads, then smear with a thin coat of grease:

INTERFLON FIN GREASE LS2

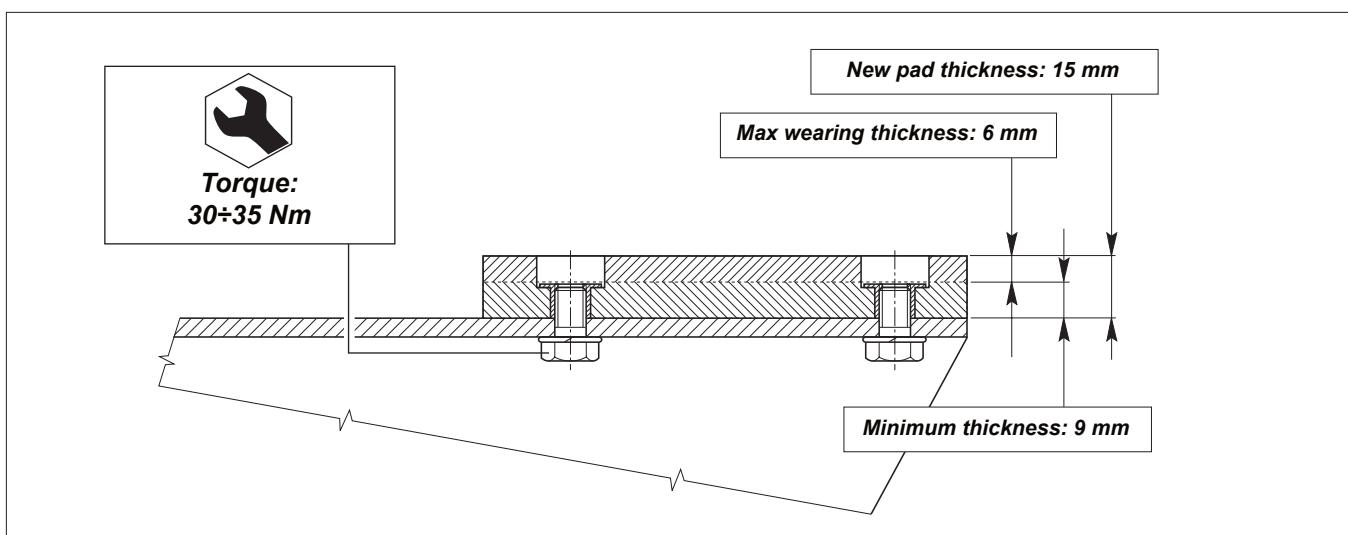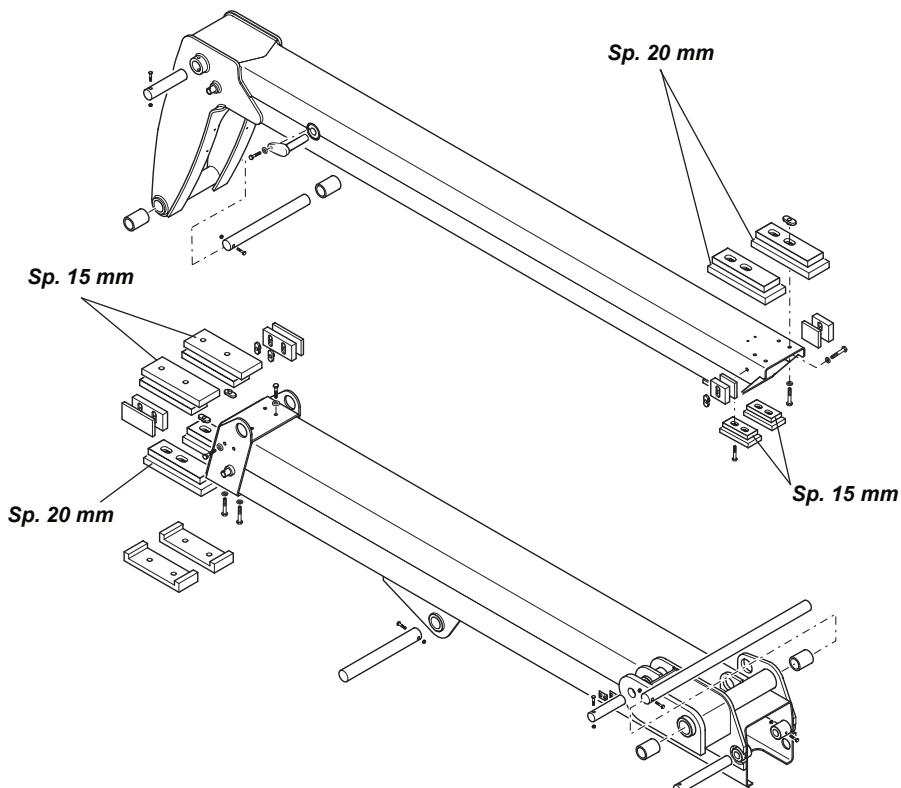

Operation: Renewing the slide pads of the telescopic boom

Table:

GTH5519-010

RENEWING THE PADS

To renew the pads of the **fixed section**, proceed as follows:


- 8 Stop the machine, extend the telescope and lower the nose to the ground for an easier removal of the bottom pads. Hold it in horizontal position for removing the top pads
- 9 With a 17mm hexagonal wrench, remove the pad fixing screws
- 10 With a screwdriver, pry off the worn pads. Fit new pads after applying a few drops of Loctite 495 on the threads

CAUTION

Tighten the pad fixing screws to 30÷35 Nm.

To renew the pads of the **telescope**, proceed as follows:

- 11 Remove all pads from the fixed section to extend the telescope - see instructions above
- 12 Fully extend the boom, then lower the nose to the ground and place a stand underneath the telescope near the fixed section
- 13 Remove the pin from the extension cylinder (rod side) - see table **GTH5519-013**.
Move back with the machine slowly to extend about 20 cm of the telescope out of the fixed section

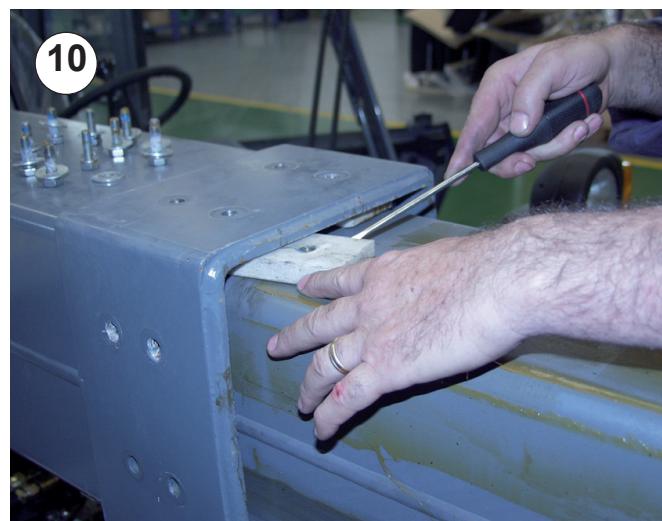

Operation: Renewing the slide pads of the telescopic boom

Table:



GTH5519-010

- 14 Check the internal measure of the fixed section and the external measure of the telescope to verify if some shims are necessary considering that the final tolerance must range from + 1,0 mm to + 1,5 mm
- 15 With a 6 mm hexagonal wrench, remove the worn pads. Fit new pads after applying a few drops of Loctite 495 on the threads

CAUTION

Tighten the pad fixing screws to 30÷35 Nm.

- 15 Clean and grease the internal and external walls of the boom sections in the sliding points of the pads. To this end, use **INTERFLON FIN GREASE LS2**
- 16 Retract the telescope into the fixed section and refit the pin of the extension cylinder
- 17 With a thickness gauge, ensure the play between the boom sections is correct in both positions -i.e. with the boom fully extended and fully retracted.

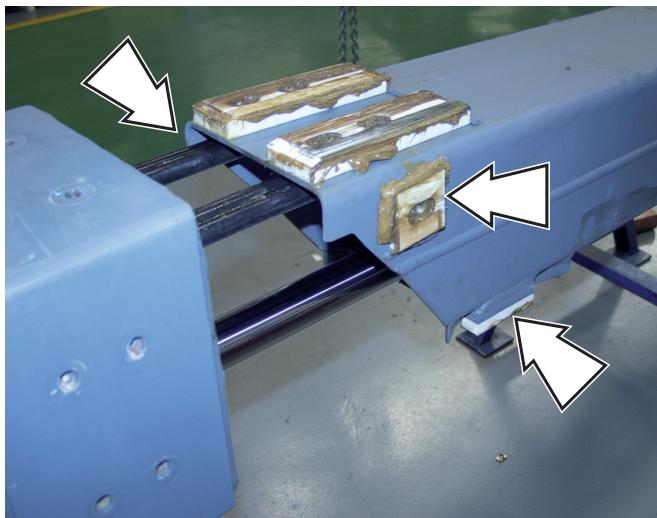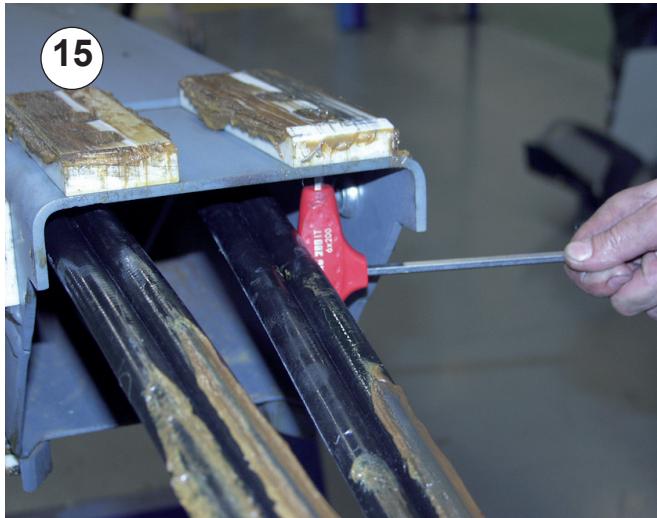

| | | | |
|---|--|--|---|
| Operation: Renewing the flexible hoses inside the boom | Table: GTH5519-011 |  kg | - |
|  |  Standard tools |  2 | - |
| | |  2 | |

How to renew flexible hoses:

NOTICE

Before disconnecting the hydraulic piping, place containers of suitable size underneath to prevent oil spillage.

CAUTION

Plug all disconnected parts to prevent dust or impurities from entering the circuit. They can cause serious damage.






DANGER

Before disconnecting the hydraulic piping, ensure there is no pressure in the line. In case, release the pressure by operating the control levers with the engine stopped.

In any case, disconnect the hydraulic piping with extreme caution and always wear suitable personal protection equipment -e.g. goggles, gloves, facial screen, etc.

Wrap up the end of the pipe to be disconnected with some rags and slowly loosen the pipe connector so that air comes out as slow as possible.


- 1 Before disconnecting or refitting a flexible hose, carefully clean the area all around.
- 2 Blow some compressed air to remove any impurity.
- 3 For an easier renewal of the hoses, whose run is not clearly visible, proceed as follows:
 - disconnect the hose to be replaced from both sides
 - tie a cord to one end of the hose
 - remove the hose pulling the cord until it comes out completely
 - untie the cord and tie it to the new hose
 - pull the cord from the other side to refit the hose until reaching the connecting point to the line.

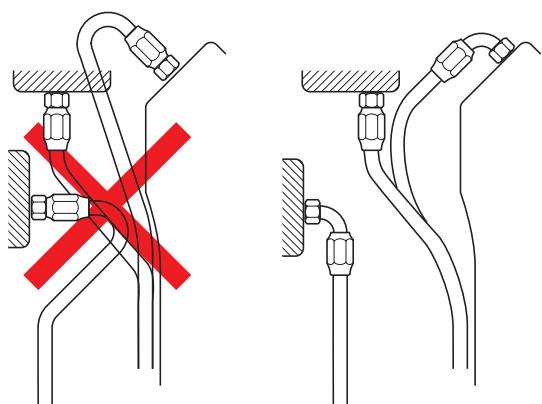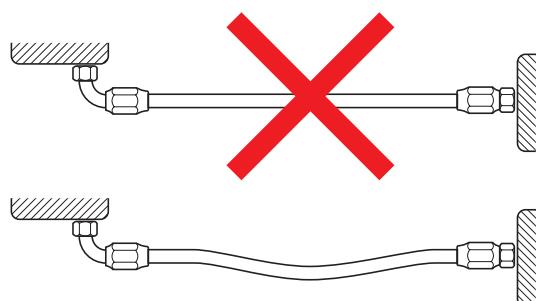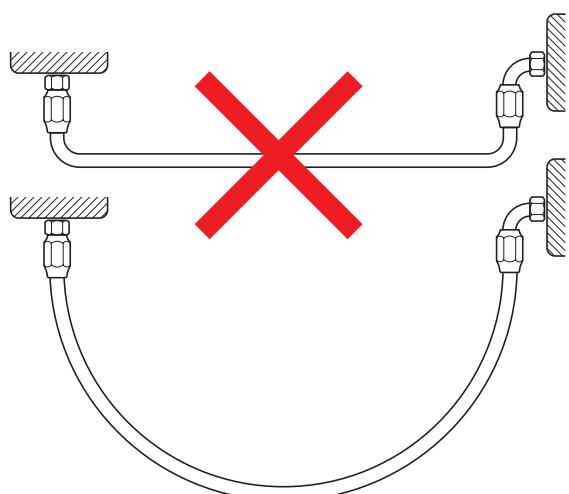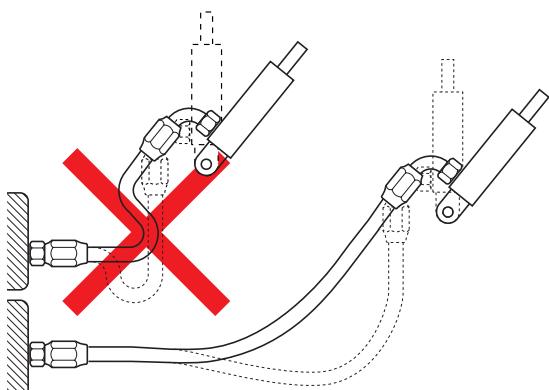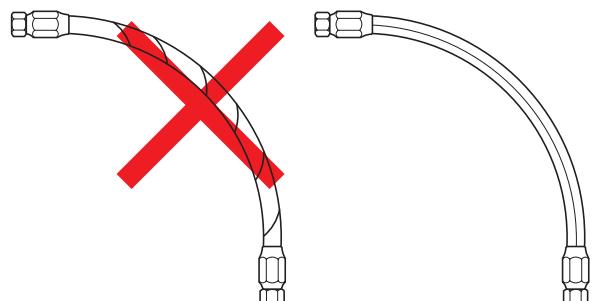Operation: Renewing the flexible hoses inside the boom**Table:****GTH5519-011****Useful advice for mounting flexible hoses:**

| | | | |
|--|---|--|---|
| Operation: Cylinder disassembly Attachment rotation cylinder | | Table: GTH5519-012 |  36 |
|  Bridge crane, payload 500 kg (2000 lb) Textile bridles or chains with hooks |  Standard tools Adjustable stands |  1 30 | |
| | |  1 | |

Operation:

- 1 Remove the attachment
- 2 Remove the screw fixing the pin (rod side) with two 17 mm wrenches
- 3 Knock out and extract the pin using a plug of soft material (aluminium, copper, wood, etc.)
- 4 Place a container of suitable size under the hydraulic piping before disconnecting
- 5 Place a container of suitable size under the hydraulic piping before disconnecting the same
- 6 Using a 13mm wrench, remove the protection cover from the valve of the attachment rotation cylinder

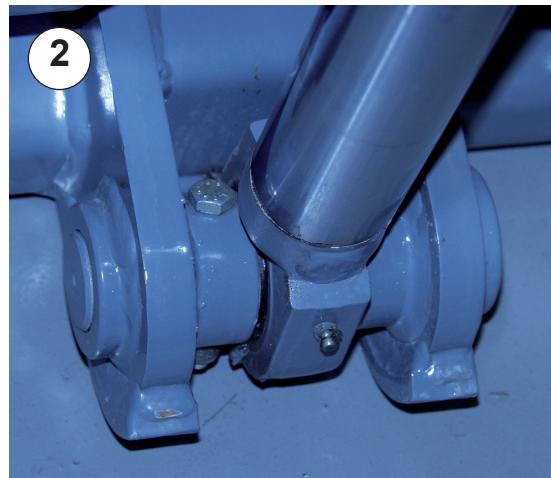

NOTICE

Used oils must be handled and disposed of according to local regulations. Address to legally authorised centres.

Operation: Cylinder disassembly
Attachment rotation cylinder

Table:

GTH5519-012

- 7 With a 24 mm wrench, disconnect two hydraulic hoses from the blocking valve, then plug the disconnected connectors to prevent dust and impurities from entering the circuit.
- 8 Place a wooden plug under the cylinder rod, then lower the boom using the hydraulic controls as far as the rod rests on the wooden plug



- 9 Remove the screw fixing the cylinder pin (bottom side) with two 17 mm wrenches



- 10 Knock out and extract the pin using a plug of soft material (aluminium, copper, wood, etc.)
- 11 Secure the cylinder to the bridge crane with a textile bridle, then slightly raise the boom to set the cylinder free
- 12 Remove the cylinder using the bridge crane

