

Model (Automate)	Part #	Date Code	Replacement Remote	Type
Automate Auto-key	703M	6G - 6I	499T	Learn
Automate 1	705A	4A - 6D	None/uses factory remote	N/A
Automate 1	700A	6D - Up	None/uses factory remote	N/A
Automate 2	420A	2K - 4H	493T	Scratch
Automate 2	710A	5J - 6F	493C, 493T, 484T	Learn
Automate 2	710A	6G - 7D	493C, 493T, 484T (492T)*	Learn
Automate 2 HF	710A	7E - Up	491T, 485M	Learn
Automate 3	430A	Up to 2B	465T	Scratch
Automate 3	430A	2C - 6C	493T	Scratch
Automate 3+	432A	5L - 7E	493C, 493T, 484T (492T)*	Learn
Automate 3+ HF	432A	7F - 8E	491T, 485M	Learn
Automate 4	440A	Up to 2J	465T	Scratch
Automate 4	440A	3D - 4L	493T	Scratch
Automate 5	435A	2E - 4F	493T	Scratch
Automate 5+	437A	3L - 5K	493C, 493T, 484T	Learn
Automate 5+	437A	5L - 7E	493C, 493T, 484T (492T)*	Learn
Automate 5+ HF	437A	7F - Up	491T, 485M	Learn
Automate 5 HF	438A	4D - 7C	491T, 485M	Learn
Automate 6	445A	Up to 3B	465T	Scratch
Automate 6	445A	3E - 5A	493T	Scratch
Automate 6 HF	448A	4I - 6H	491T, 485M	Learn
Automate 6 HF	448A	7C - 7G	485M, 491T	Learn
Automate 7	280A	All	465T	Scratch
Automate 7 HF	553A	6B - 6K	491T, 485M	Learn
Automate 7 HF	553A	7C - 8E	485M, 491T	Learn
Automate 8	281T	All	465T	Learn
Automate 410	710A	All	471T, 474A, 476A, 476T	Learn
Automate 415	415A	All	None/uses factory remote	N/A
Automate 425	425A	8I - Up	474A, 476A, 476T, 476V	Learn
Automate 435	435A	8I - Up	474A, 476A, 476T, 476V	Learn
Automate 552	552A	All	474A, 476A, 476T, 476V	Learn
Automate 553	553A	6B - 8L	491T, 485M	Learn
Automate 553	553A	9B - Up	474A, 476A, 476T, 476V	Learn
Automate 6401A	6401A	9B - Up	473A, 471T	Learn
Automate 6402A	6402A	9B - Up	473A, 471T	Learn
Automate 6403A	6403A	9B - Up	473A, 471T	Learn
Automate 6404A	6404A	9B - Up	473A, 471T	Learn
Automate 6405A	6405A	9B - Up	473A, 471T	Learn
Automate 6406A	6406A	9B - Up	473A, 471T	Learn
Automate 6407A	6407A	9B - Up	473A, 471T	Learn
Automate 6408A	6408A	9B - Up	473A, 471T	Learn
Automate AM1	427A	3L - Up	474A, 476A, 476T, 476V	Learn
Automate AM1 (Newer)	3001A	All	None/uses factory remote	N/A
Automate AM1 Digital	3901T	All	None/uses factory remote	N/A
Automate AM1 Digital	3902T	All	None/uses factory remote	N/A
Automate AM1 Digital	3903T	All	None/uses factory remote	N/A

Automate AM2	416A	All	474A, 476A, 476T, 476V	Learn
Automate AM2 (Newer)	2102A	All	474A, 476A, 476T, 476V	Learn
Automate AM5	436A	3L - Up	474A, 476A, 476T, 476V	Learn
Automate AM5 (Newer)	3101A	All	474A, 476A, 476T, 476V	Learn
Automate AM6	562A	All	474A, 476A, 476T, 476V	Learn
Automate AM6.2	4101A	All	7111A	Learn
Automate AM7	563A	3H - Up	474A, 476A, 476T, 476V	Learn
Automate AM9	564A	All	477T, 474A, 476A, 476T	Learn
Automate AM11		8301 All	Cruise Control	DBW
Automate AM12		8311 All	Cruise Control	DBW
Automate AM14		4301 All	Datastart	Learn
Automate AM15		4311 All	Datastart	Learn

Model (Autostart)	Part #	Date Code	Replacement Remote	Type
Autostart AS-2272	AS-2272	All	ASRA2202BK	Learn
Autostart AS-2775	AS-2775	All	ASRA2503BK	Learn
Autostart AS-3372-FM	AS-3372	All	ASRF3503BK	Learn
Autostart AS-3372-FM	AS-3372	All	ASRF1501BK (Spare Rem)	Learn
Autostart AS-3472-FM	AS-3472	All	ASRF5603BC	Learn
Autostart AS-3472-FM	AS-3472	All	ASRF1501BK (Spare Rem)	Learn

Model (Boa)	Part #	Date Code	Replacement Remote	Type
BOA 115B	115B	All	475B	Learn
BOA 105B	105B	All	474B	Learn
BOA 165B	165B	All	474B	Learn
BOA 175B	175B	All	475B	Learn
BOA 205B	205B	All	474B	Learn
BOA 265B	265B	All	474B	Learn
BOA 275B	275B	All	475B	Learn
BOA B500	500B	All	473B	Learn

Model (Clifford)	Part #	Date Code	Replacement Remote	Type
Clifford Matrix +1	3105X	All	7142X	Learn
Clifford Matrix RS 1.1L	RS 1.1L	All	7641X	Learn
Clifford Matrix RS 2.1		919563 All		904100 Learn
Clifford Matrix RS III	RS III	All	479X, 472X	Learn
Clifford Matrix RSX 1.2	RSX 1.2	All	487X, 904100	Learn
Clifford Matrix RSX 1.5	RSX 1.5	All	479X, 472X	Learn
Clifford Matrix RSX 3.2	RSX 3.2	All	487X, 904100	Learn
Clifford Matrix RSX 3.5	RSX 3.5	All	479X, 472X	Learn
Clifford Matrix 1X	3305X	All	7341X, 7142X	Learn
Clifford Matrix 1.2	4102X	All	7153X	Learn
Clifford Matrix 1.3X	4202X	All	7251X, 7152X	Learn
Clifford Matrix 2.2	5102X	All	7153X	Learn
Clifford Matrix 2.2X	2.2X	All	487X, 904100	Learn
Clifford Matrix 2.5X	2.5X	All	479X, 472X	Learn
Clifford Matrix 3.3X	5202X	All	7251X, 7152X	Learn

Clifford Matrix 10.2X	10.2X	All	487X, 904100	Learn
Clifford Matrix 10.5X	10.5X	All	489X, 904100	Learn
Clifford Matrix 12X	12X	All	7141X	Learn
Clifford Matrix 12.2X	12.2X	All	7141X	Learn
Clifford Matrix 12.5X	12.5X	All	7141X	Learn
Clifford Matrix 20.5X	4301X	All	7701X, 7642X	Learn
Clifford Matrix 20.7X	4702X	All	7752X, 7652X	Learn
Clifford Matrix 320.3X	3203X	All	7251X, 7152X, 7153X	Learn
Clifford Matrix 330.3X	3303X	All	7351X, 7152X, 7153X	Learn
Clifford Matrix 410.4X	4104X	All	7152X, 7153X	Learn
Clifford Matrix 420.4X	4204X	All	7251X, 7152X, 7153X	Learn
Clifford Matrix 470.4X	4704X	All	7752X, 7652X	Learn
Clifford Matrix 50.5X	5301X	All	7701X, 7642X	Learn
Clifford Matrix 50.7X	5702X	All	7752X, 7652X	Learn
Clifford Matrix 510.4X	5104X	All	7152X, 7153X	Learn
Clifford Matrix 520.4X	5204X	All	7251X, 7152X, 7153X	Learn
Clifford Matrix 570.4X	5704X	All	7752X, 7652X	Learn
Clifford Matrix 590.2X	5902X	All	7941X, 7652X	Learn
Clifford Matrix 590.4X	5904X	All	7941X, 7652X	Learn
Clifford Matrix 70.5X	5501X	All	7541X	Learn
Clifford Matrix 70.7X	5902X	All	7941X, 7652X	Learn
Clifford Arrow 5.1		919595 All	7131X	Learn
Clifford Avantguard 5.1		919640 All	7151X	Learn
Clifford Concept 470		919600 All	7151X	Learn
Clifford Intelliguard 770		919621 All	7151X	Learn
Clifford Responder 1	4203X	All	7211X	Learn

Model (Avital)	Part #	Date Code	Replacement Remote	Type
Avital 2100		821001 All	473L	Learn
Avital 2101	2101L	All	474L	Learn
Avital 2200		822001 All	473L	Learn
Avital 2300		823001 All	474L	Learn
Avital 3001	3001L	All	None/uses factory remote	N/A
Avital 3100	3100L	All	473L	Learn
Avital 3300	3300L	All	477T, 474L	Learn
Avital Avistart 4000 XL		830012 All	473L	Learn
Avital Avistart 4003	4003L	All	None/uses factory remote	N/A
Avital Avistart 4100		831002 All	473L	Learn
Avital Avistart 4103	4103L	All	474L	Learn
Avital Avistart 4103	4103LX	All	474L	Learn
Avital Avistart 4113	4113L	All	7111L	Learn
Avital Avistart 4113	4113LX	All	7111L	Learn
Avital Avistart 4200		832002 All	474L	Learn
Avital Avistart 4300		833002 All	474L	Learn
Avital Avistart 4400		834002 All	477T, 474L	Learn
Avital Avistart 5103	5103L	All	474L	Learn
Avital Avistart 5303	5303L	All	477T, 474L	Learn

Model (Equalizer)	Part #	Date Code	Replacement Remote	Type
Equalizer 1	723E	6E	493T	Scratch
Equalizer 1	725B	All	491T, 485M	Learn
Equalizer 2	432E	6A	493C, 493T, 484T	Learn
Equalizer 3	437E	5H	493C, 493T, 484T	Learn

Model (Failsafe)	Part #	Date Code	Replacement Remote	Type
Failsafe 3	703T	6G - 6I	499T	Learn

Model (Hornet)	Part #	Date Code	Replacement Remote	Type
Hornet 121T	121T	4C - 6J	493T	Scratch
Hornet 2000 (Merlin)	122T	ALL	470T, 471T	Learn
Hornet 3000 (Merlin)	225T	ALL	482T, 473B	Learn
Hornet 553T	553T	7H - 8B	491T, 485M	Learn
Hornet 553T	553T	9B - Up	474YV, 476A, 476T, 476V	Learn
Hornet 554T	554T	All	477T, 474YV, 476A, 476T	Learn
Hornet 560T	560T	All	471T, 474YV, 476A, 476T	Learn
Hornet 563T	563T	All	474YV, 476A, 476T, 476V	Learn
Hornet 564T	564T	All	477T, 474YV, 476A, 476T	Learn
Hornet 570T	570T	All	471T	Learn
Hornet 700T	700T	6A - Up	None/uses factory remote	N/A
Hornet 705T (Older Style)	705T	4G - 6A	None/uses factory remote	N/A
Hornet 705T (Talking Alarm)	705T	All	474YV, 476A, 476T, 471T	Learn
Hornet 706T	706T	4A	None/uses factory remote	N/A
Hornet 707T	707T	2F - 4A	None/uses factory remote	N/A
Hornet 710T	710T	Up to 7J	465T	Scratch
Hornet 710T	710T	8A - Up	471T, 474YV, 476A, 476T	Learn
Hornet 715T	715T	All	465T	Scratch
Hornet 717T	717T	2G - 3D	465T	Scratch
Hornet 718T	718T	2E - 4A	No Longer Available	N/A
Hornet 718T	718T	4F - 6D	493T	Scratch
Hornet 718T	718T	6G - 7B	493C, 493T, 484T (492T)*	Learn
Hornet 719T	719T	2C - 3B	No Longer Available	N/A
Hornet 719T	719T	3D - 6D	493T	Scratch
Hornet 719T	719T	6F - 7C	493C, 493T, 484T (492T)*	Learn
Hornet 719T	719T	7D - 7J	491T, 485M	Learn
Hornet 720T	720T	2C - 3C	No Longer Available	N/A
Hornet 720T	720T	3E - 6A	493T	Scratch
Hornet 720T	720T	7J - Up	491T, 485M	Learn
Hornet 721T	721T	2J - 2L	493T	Scratch
Hornet 721T	721T	2J - 5E	493T	Scratch
Hornet 722T	722T	2H - 4G	493T	Scratch
Hornet 723T	723T	5G - 7E	493T	Scratch
Hornet 725T	725T	7G - Up	491T, 485M	Learn
Hornet 727T	727T	All	None/uses factory remote	N/A
Hornet 730T	730T	2E - 3K	465T	Scratch

Hornet 730T	730T	3K-1 - 7A	493T	Scratch
Hornet 730T	730T	7G - Up	491T, 485M	Learn
Hornet 732T	732T	6C - 7E	493C, 493T, 484T (492T)*	Learn
Hornet 732T	732T	7J - Up	491T, 485M	Learn
Hornet 735T	735T	4C - 4G	493T	Scratch
Hornet 737T	737T	4I - 5J	493C, 493T, 484T	Learn
Hornet 740T (Older Style)	281T	All	465T	Scratch
Hornet 740T	740T	4K - Up	473YV, 474YV	Learn
Hornet 742T	742T	All	474YV, 473YV	Learn
Hornet 745T	745T	All	477T, 474YV, 473YV	Learn
Hornet 748T	748T	8L - 9A	491T, 485M	Learn
Hornet 755T	755T	2B - 4G	465T	Scratch
Hornet 851T	851T	All	471T, 473YV, 474YV	Learn

Model (Pro Guard)	Part #	Date Code	Replacement Remote	Type
Pro Guard 2300	723G	6D - 6F	493T	Scratch
Pro Guard 2500	725G	ALL	491T, 485M	Learn
Pro Guard 4700	437B	5B - 5G	493C, 493T, 484T	Learn
Pro Guard 4800	438B	5B - 5H	493C, 493T, 484T	Learn
Pro Guard 7100	271B	2L - 5A	493C, 493T, 484T	Learn
Pro Guard 7200	281B	2L - 4H	493C, 493T, 484T	Learn

Model (Python)	Part #	Date Code	Replacement Remote	Type
Python 55	723B	6J - 7E	493T	Scratch
Python 60	261S	2K - 4H	493T	Scratch
Python 60	430P	4I - 6H	493T	Scratch
Python 70	271S	2L - 5C	484T, 493C, 493T	Learn
Python 80	281S	2L - 5C	484T, 493C, 493T	Learn
Python 90	291S	2K - 4L	484T	Learn
Python 323	3203P	All	7251P, 7152P, 7153P	Learn
Python 333	3303P	All	7351P, 7152P, 7153P	Learn
Python 400 HF	410P	8G - Up	471T, 473P, 474P	Learn
Python 411	4111P	All	7111P	Learn
Python 413	4103P	All	474P, 473P, 471T	Learn
Python 414	4104P	All	7153P, 7152P	Learn
Python 424 LE	4204P	All	7251P, 7152P	Learn
Python 440 HP	416P	All	474P, 473P, 471T	Learn
Python 450 HF	552P	7H - 8L	491T, 485M	Learn
Python 450 ESP	552P	9B - Up	471T, 473P, 474P	Learn
Python 460 HP	426P	All	473P, 474P, 471T	Learn
Python 460 MAX	3105P	All	477P, 7142P, 474P	Learn
Python 500	3101P	All	474P, 473P, 471T	Learn
Python 502	3102P	All	7141P, 474P, 473P, 471T	Learn
Python 513	5103P	All	474P, 473P, 471T	Learn
Python 514	5104P	All	7153P, 7152P	Learn
Python 524 LE	5204P	All	7251P, 7152P	Learn
Python 533	5303P	All	477P, 474P	Learn

Python 571 XP	572P	All	487P, 474P, 473P	Learn
Python 574	5704P	All	7752P, 7652P	Learn
Python 580	4202P	All	7251P, 7152P	Learn
Python 581 XP	542P	All	479P, 472P	Learn
Python 590 HD SST	5902P	All	7941P, 7642P	Learn
Python 594 HD SST	5904P	All	7941P, 7642P	Learn
Python 625 HF	430P	8D - Up	471T, 473P, 474P	Learn
Python 650	432P	5L - 7E	493C, 493T, 484T (492T)*	Learn
Python PC 650 HF (ESP)	429P	9A - Up	471T, 473P, 474P	Learn
Python 650 HF	432P	7F - 8B	491T, 485M	Learn
Python 650 HF	432P	8B - Up	471T, 473P, 474P	Learn
Python 660 HP	436P	All	474P, 473P, 471T	Learn
Python 660 XP	436P	All	474P, 473P, 471T	Learn
Python 671 XP	437P	All	487P, 474P, 473P	Learn
Python 680 XP	434P	All	479P, 472P	Learn
Python 700	3201P	All	487P, 474P, 473P	Learn
Python 702	3202P	All	487P, 7141P, 474P, 473P	Learn
Python 750	437P	5B - 5K	493C, 493T, 484T	Learn
Python 750	437P	5L - 7C	493C, 493T, 484T (492T)*	Learn
Python 871 XP	567P	All	487P, 474P, 473P	Learn
Python 872 LE	5202P	All	7251P, 7152P	Learn
Python 880 XP	554P	All	479P, 472P	Learn
Python 881 XP	564P	All	479P, 472P	Learn
Python 900	3301P	All	489P, 474P, 473P	Learn
Python 902	3302P	All	489P, 7141P, 474P, 473P	Learn
Python 950	4301P	All	7701P, 7642P	Learn
Python 990	5301P	All	7701P, 7642P	Learn
Python 991	5702P	All	7752P, 7652P	Learn
Python 1000 HF	268S	4F-4H	491T, 485M	Learn
Python 1000 HF	438P	4G - 8B (a)	491T, 485M	Learn
Python 1000 HF	438P	8B - Up	471T, 473P, 474P	Learn
Python PC 1000 HF (ESP)	439P	7J - Up	474P, 473P, 471T	Learn
Python 1090	5501P	All	7541P	Learn
Python 1091 HD SST	5902P	All	7941P, 7642P	Learn
Python 1200 HP	561P	All	473P, 474P, 471T	Learn
Python 1400 XP	562P	All	474P, 473P, 471T	Learn
Python 1400 XPL	562PL	All	7641P	Learn
Python 1401	4102P	All	7153P	Learn
Python 1500 HF	553P	5J - 7C	491T, 485M	Learn
Python 1500 HF	553P	7C - 7L	485M, 491T	Learn
Python 1500 HF	553P	8D - 8L	474P, 473P, 471T	Learn
Python 1500 HF (ESP)	553P	9B - Up	474P, 473P, 471T	Learn
Python 1600 XP	563P	All	474P, 473P, 471T	Learn
Python 1601	5102P	All	7153P	Learn
Python 2000 HF	371P	6A - 6F	485M, 491T	Learn
Python 3000 HF	381P	5H - 6H	485M, 491T	Learn
Python 3000 HF	381P	6I - 7E	485M, 491T	Learn

Python 3000 HF	381P	7F - 7L	485M, 491T	Learn
Python PC 3000 HF	381P	8B - 8G	474P, 473P, 471T	Learn
Python PC 3000 HF (ESP)	381P	9A - Up	474P, 473P, 471T	Learn
Python Responder One	4203P	All	7211P	Learn
Python Responder 460	3305P	All	7341P, 7142P	Learn

Model (Rattler)	Part #	Date Code	Replacement Remote	Type
Rattler Model 100	411R	All	471T, 473YV, 474YV	Learn
Rattler Model 110D	312R	All	473YV, 471T	Learn
Rattler Model 200	421R	All	471T, 473YV, 474YV	Learn
Rattler Model 210D	322R	All	473YV, 471T	Learn
Rattler Model 250	425R	All	471T, 473YV, 474YV	Learn
Rattler Model 259D	429R	All	471T, 473YV, 474YV	Learn
Rattler Model 310D	332R	All	473YV, 471T	Learn
Rattler Model 300	431R	All	471T, 473YV, 474YV	Learn
Rattler Model 359D	359R	All	471T, 473YV, 474YV	Learn
Rattler Model 369D	369R	All	473YV, 471T	Learn

Model (Sidewinder)	Part #	Date Code	Replacement Remote	Type
Sidewinder 1000	718B	3K	No Longer Available	N/A
Sidewinder 2000	719B	3K	493T	Scratch
Sidewinder 2200	721B	3K - 5F	493T	Scratch
Sidewinder 3000	720B	3K - 4H	493T	Scratch
Sidewinder 3000 HF	410S	8G - Up	471T, 473YV, 474YV	Learn
Sidewinder 3200	722B	3K	493T	Scratch
Sidewinder 3200 HS	416S	All	474YV, 473YV, 471T	Learn
Sidewinder 3300 HS	426S	All	473YV, 474YV, 471T	Learn
Sidewinder 3500	552S	7H - 8L	491T, 485M	Learn
Sidewinder 3500 ESP	552S	9B - Up	471T, 473YV, 474YV	Learn
Sidewinder 4200	420B	2K - 5F	493T	Scratch
Sidewinder 4200	420S	5B - 5F	493T	Scratch
Sidewinder 4500 HF	430S	8D - Up	471T, 473YV, 474YV	Learn
Sidewinder 5000	432S	5L - 7E	493C, 493T, 484T (492T)*	Learn
Sidewinder 5000 HF	432S	7F - 8B	491T, 485M	Learn
Sidewinder 5000 HF	432S	8B - Up	471T, 473YV, 474YV	Learn
Sidewinder 5000 HF (ESP)	429S	9A - Up	471T, 473YV, 474YV	Learn
Sidewinder 5200	430S	2H - 4E	493T	Scratch
Sidewinder 5200 XS	436B	All	474YV, 473YV, 471T	Learn
Sidewinder 6000	435B	2L - 4F	493T	Scratch
Sidewinder 6000	437S	4J - 6H	493C, 493T, 484T	Learn
Sidewinder 6000	437S	6I - 7E	493C, 493T, 484T (492T)*	Learn
Sidewinder 6000 HF (2 Btn)	437S	7F - 7I	491T, 485M	Learn
Sidewinder 6000 HF	438S	4J - 8B (a)	491T, 485M	Learn
Sidewinder 6000 HF	438S	8D - Up	471T, 473YV, 474YV	Learn
Sidewinder 6000 ESP	439S	8B - Up	474YV, 473YV, 471T	Learn
Sidewinder PC 6000 HF	439S	8B - Up	474YV, 473YV, 471T	Learn
Sidewinder 6100	440B	2L - 3D	465T	Scratch

Sidewinder 6200	445B	2L - 4H	493T	Scratch
Sidewinder 6500 HF	553S	5K - 6H	491T, 485M	Learn
Sidewinder 6500 HF	553S	7A - 8B	485M, 491T	Learn
Sidewinder 6500 HF	553S	8D - 8I	474YV, 473YV, 471T	Learn
Sidewinder 6500 HF (ESP)	553S	9B - Up	474YV, 473YV, 471T	Learn
Sidewinder 7000 HF	381S	5H - 6H	485M, 491T	Learn
Sidewinder 7000 HF	381S	6I - 7C	485M, 491T	Learn
Sidewinder 7000 HF	381S	7D - 7H	485M, 491T	Learn
Sidewinder PC 7000 SHF	381S	9E - Up	474YV, 473YV, 471T	Learn
Sidewinder 7100	271B	2L - 5A	484T, 493C, 493T	Learn
Sidewinder 7200	281B	All	484T, 493C, 493T	Learn

Model (Steal Stopper)	Part #	Date Code	Replacement Remote	Type
Steal Stopper 50	220S	All	465T	Scratch
Steal Stopper 50/S	221S	All	465T	Scratch
Steal Stopper 60	225S	Up to 2E	465T	Scratch
Steal Stopper 60	261S	2E - 2I	493T	Scratch
Steal Stopper 60/S	226S	All	465T	Scratch
Steal Stopper 70	271S	Up to 2E	465T	Scratch
Steal Stopper 70	271S	2F - 2J	484T, 493C, 493T	Learn
Steal Stopper PS 270	271S	Up to 2E	465T	Scratch
Steal Stopper PS 280	281S	Up to 2E	465T	Scratch
Steal Stopper 80	281S	EZSDEI235	465T	Scratch
Steal Stopper 80	281S	EZSDEI280	484T, 493C, 493T	Learn
Steal Stopper 90	291S	2E - 2J	484T, 493C, 493T	Learn
Steal Stopper 1000	SS1000	All	465T	Scratch
Steal Stopper 2000	SS2000	All	None/uses factory remote	N/A
Steal Stopper PRO 3000	SS3000	All	None/uses factory remote	N/A
Steal Stopper PRO 4000	SS4000	All	None/uses factory remote	N/A
Steal Stopper PRO 5000	SS5000	All	465T (optional)	Scratch
Steal Stopper 6001	SS6001	All	None/uses factory remote	N/A

Model (Stinger)	Part #	Date Code	Replacement Remote	Type
Stinger W/515R	438K	8K	471T, 473YV, 474YV	Learn
Stinger Keyless Entry	711K	8K	471T, 473YV, 474YV	Learn
Stinger W/514T	438J	8K	471T, 473YV, 474YV	Learn

Model (Wasp)	Part #	Date Code	Replacement Remote	Type
Wasp	718W	3F - 3H	No Longer Available	N/A
Wasp	718W	4/95 - 5/95	No Longer Available	N/A
Wasp	718W	6/95 - 10/95	465T	Scratch
Wasp	718W	6F - 7C	493C, 493T, 484T (492T)*	Learn
Wasp	718W	7D - Up	491T, 485M	Learn

Model (Valet)	Part #	Date Code	Replacement Remote	Type
Valet 450T	450T	6D - Up	None/uses factory remote	N/A
Valet 450R	450R	6D - 6I	485M, 491T	Learn

Valet 450R	450R	8D - Up	471T, 473YV, 474YV	Learn
Valet 519T	519T	2J - 5J	465T, 493C, 493T, 484T	Learn
Valet 519T	519T	6A - Up	493C, 493T, 484T (492T)*	Learn
Valet 519H	519H	5A - 8H	491T, 485M	Learn
Valet 519H	519H	8L - Up	471T, 473YV, 474YV	Learn
Valet 550T	550T	2G - 3B	None/uses factory remote	N/A
Valet 551R	551R	7G - 9A	491T, 485M	Learn
Valet 551R	551R	9B - Up	471T, 473YV, 474YV	Learn
Valet 551T	551T	2K - Up	None/uses factory remote	N/A
Valet 552T	552T	4I - 8J	491T, 485M	Learn
Valet 552T	552T	9A	491T, 485M	Learn
Valet 552T	552T	9B - Up	471T, 473YV, 474YV	Learn
Valet 554R	554R	All	477T, 474YV, 473YV	Learn
Valet 561R	561R	All	473YV, 474YV	Learn
Valet 561T	561T	All	None/uses factory remote	N/A
Valet 562T	562T	All	474YV, 473YV	Learn
Valet 563T	563T	All	474YV, 473YV	Learn
Valet 710T	710T	5G - 6F	493C, 493T, 484T	Learn
Valet 710T	710T	6G - 7D	493C, 493T, 484T (492T)*	Learn
Valet 710T	710T	7E - Up	491T, 485M	Learn
Valet 711T	711T	2C - 5K	465T	Scratch
Valet 711T	711T	7E - Up	491T, 485M	Learn
Valet 712T (Older Style)	712T	2J - 7D	465T	Scratch
Valet 712T	712T	All	474YV, 473YV	Learn
Valet 716T	716T	All	474YV, 473YV	Learn
Valet 3200 HF+	552T	8A - Up	471T, 473YV, 474YV	Learn

Model (Viper)	Part #	Date Code	Replacement Remote	Type
Viper 50	405V	All	None/uses factory remote	N/A
Viper 100	410V	All	465T	Scratch
Viper 100 HF (ESP)	410V	8G - Up	471T, 473V, 474V, 476V	Learn
Viper 120 HV	561V	All	473V, 474V, 476V, 471T	Learn
Viper 125 HF	551V	All	471T, 473V, 474V, 476V	Learn
Viper 130 HV	561V	All	473V, 474V, 476V, 471T	Learn
Viper 130 XV	561V	All	473V, 474V, 476V, 471T	Learn
Viper 135 HF	551V	All	471T, 473V, 474V, 476V	Learn
Viper 140 HF	551V	All	471T, 473V, 474V, 476V	Learn
Viper 150	715V	All	465T	Scratch
Viper 150 HF	552V	7H - 8L	491T, 485M	Learn
Viper 150 ESP	552V	9C - Up	471T, 473V, 474V, 476V	Learn
Viper 160 XV	562V	All	474V, 473V, 476V, 471T	Learn
Viper 160 XVL	562VL	All	7641V	Learn
Viper 200	420V	Up to 2B	465T	Scratch
Viper 200	420V	2C - 5J	493T	Scratch
Viper 200 (ESP)	122V	0D - Up	470T, 471T, 476V	Learn
Viper 200/220 MAX	122V	All	473V, 474V, 476V, 471T	Learn
Viper 201	201V	All	465T	Scratch

Viper 210 HV	416V	All	474V, 473V, 476V, 471T	Learn
Viper 211 HV	412V	All	474V, 473V, 476V, 471T	Learn
Viper 260 HF	426V	All	471T, 473V, 474V, 476V	Learn
Viper 280 HF	430V	All	471T, 473V, 474V, 476V	Learn
Viper 300 ESP	429V	9A - Up	471T, 473V, 474V, 476V	Learn
Viper C 30	430C	2D - 2J	465T	Scratch
Viper C 30	430C	2K - 5B	493T	Scratch
Viper 300	430V	Up to 2B	465T	Scratch
Viper 300	430V	2C - 7E	493T	Scratch
Viper 300 HF	430V	7G - 8B (a)	491T, 485M	Learn
Viper 300 HF	430V	8B - 9A	471T, 473V, 474V, 476V	Learn
Viper 300+	432V	5L - 7E	493C, 493T, 484T (492T)*	Learn
Viper 300+	432V	7F - 8B (a)	491T, 485M	Learn
Viper 300+ HF	432V	8B - 9B	471T, 473V, 474V, 476V	Learn
Viper PC 300 HF (ESP)	429V	All	471T, 473V, 474V, 476V	Learn
Viper 320 HV	431V	All	473V, 474V, 476V, 471T	Learn
Viper 330V	427V	All	None/uses factory remote	N/A
Viper 350 Classic	330V	Up to 2A	465T	Scratch
Viper 350 Classic	330V	2B - 4E	493T	Scratch
Viper 350 HV	426V	All	473V, 474V, 476V, 471T	Learn
Viper 350 Plus	3105V	All	7142V, 474V	Learn
Viper 3901V	3901V	All	None/uses factory remote	N/A
Viper 3902V	3902V	All	None/uses factory remote	N/A
Viper 3903V	3903V	All	None/uses factory remote	N/A
Viper 400	440V	Up to 2C	465T	Scratch
Viper 400	440V	2D - 4L	493T	Scratch
Viper 420 ESP	429V	All	471T, 473V, 474V, 476V	Learn
Viper 426 FS	426V	All	471T, 473V, 474V, 476V	Learn
Viper 450 Classic	340V	Up to 2G	465T	Scratch
Viper 450 Classic	340V	2H - 4B	493T	Scratch
Viper 460 XV	460V	All	474V, 473V, 476V, 471T	Learn
Viper 480 XV	480V	All	489V, 474V, 473V, 476V	Learn
Viper 500	435V	Up to 2D	465T	Scratch
Viper 500	435V	2E - 4C	493T	Scratch
Viper C 50	437C	4C - 5K	493C, 493T, 484T	Learn
Viper C 50	437C	5L - 6C	493C, 493T, 484T (492T)*	Learn
Viper 500+	437V	3I - 5K	493C, 493T, 484T	Learn
Viper 500+	437V	5L - 7E	493C, 493T, 484T (492T)*	Learn
Viper 500 HF (Code Plus)	438V	4D - 7L	491T, 485M	Learn
Viper 500 HF	438V	8B - Up	471T, 473V, 474V, 476V	Learn
Viper PC 500 HF (ESP)	439V	7J - Up	474V, 473V, 476V, 471T	Learn
Viper 500 ESP	439V	9A - Up	474V, 473V, 476V, 471T	Learn
Viper 500 NX	436V	5G	493C, 493T, 484T (492T)*	Learn
Viper 550 Classic	335V	Up to 2C	465T	Scratch
Viper 550 Classic	335V	Up to 2C	465T	Scratch
Viper 540 ESP	553V	All	474V, 473V, 476V, 471T	Learn
Viper 550 HF	553V	5I - 6J	491T, 485M	Learn

Viper 550 HF	553V	7D - 8B	485M, 491T	Learn
Viper 550 HF	553V	8D - 9A	474V, 473V, 476V, 471T	Learn
Viper 550 ESP	553V	9B - Up	474V, 473V, 476V, 471T	Learn
Viper 560 XV	563V	All	474V, 473V, 476V, 471T	Learn
Viper 571 XV	572V	All	487V, 474V, 473V, 476V	Learn
Viper 591 XV	542V	All	479V, 472V	Learn
Viper C 60	445C	2D - 4L	493T	Scratch
Viper 600	445V	Up to 2B	465T	Scratch
Viper 600	445V	2C - 5E	493T	Scratch
Viper 600 Classic	345V	Up to 2A	465T	Scratch
Viper 600 Classic	345V	2C - 4B	493T	Scratch
Viper 600 HF (Code Plus)	448V	4L - 6L	491T, 485M	Learn
Viper 600 HF (Code Plus)	448V	7A - 8B (a)	485M, 491T	Learn
Viper 600 HF	448V	8B - 8L	474V, 473V, 476V, 471T	Learn
Viper PC 600HF (ESP)	449V	9A - Up	474V, 473V, 476V, 471T	Learn
Viper 600 ESP	449V	9A - Up	474V, 473V, 476V, 471T	Learn
Viper 650 XV	436V	All	474V, 473V, 476V, 471T	Learn
Viper 671 XV	437V	All	487V, 474V, 473V, 476V	Learn
Viper 690 XV	434V	All	479V, 472V	Learn
Viper C 70 HF	448C	5E - 6D	491T, 485M	Learn
Viper Ultra 700	370V	Up to 2H	493C, 493T, 484T	Learn
Viper Ultra 700	370V	2I to 5C	484T, 493C, 493T	Learn
Viper 700 HF	371V	6A - 6F	485M, 491T	Learn
Viper 700 ESP	379V	All	474V, 473V, 476V, 471T	Learn
Viper 771 XV	567V	All	487V, 474V, 473V, 476V	Learn
Viper 790 XV	554V	All	479V, 472V	Learn
Viper 791 XV	564V	All	479V, 472V	Learn
Viper Ultra 800	380V	Up to 2D	493C, 493T, 484T	Learn
Viper Ultra 800	380V	2D to 5A	484T, 493C, 493T	Learn
Viper 800 HF	381V	5H - 7L	485M, 491T	Learn
Viper PC 800 SHF	381V	8B - 8F	474V, 473V, 476V, 471T	Learn
Viper 800 SHF (ESP)	381V	8G - Up	474V, 473V, 476V, 471T	Learn
Viper 800 ESP	381V	8G - Up	474V, 473V, 476V, 471T	Learn
Viper 850 XV	446V	All	474V, 473V, 476V, 471T	Learn
Viper Ultra 900	390V	Up to 4L	484T, 493C, 493T	Learn
Viper 1000	3101V	All	474V, 473V, 476V, 471T	Learn
Viper 1002	3102V	All	7141V, 474V, 473V, 476V	Learn
Viper 3000	3201V	All	487V, 474V, 473V, 476V	Learn
Viper 3002	3202V	All	487V, 7141V, 474V, 473V	Learn
Viper 3203 LE	3203V	All	7251V, 7152V, 7153V	Learn
Viper 3303 LC3	3303V	All	7351V, 7152V, 7153V	Learn
Viper 4103 XV	4103V	All	7142V, 474V	Learn
Viper 4104	4104V	All	7153V	Learn
Viper 4204 LE	4204V	All	7251V, 7152V	Learn
Viper 4704 LC3 SST	4704V	All	7752V, 7652V, 7941V	Learn
Viper 5000	3301V	All	489V, 474V, 473V, 476V	Learn
Viper 5002	3302V	All	489V, 7141V, 474V, 473V	Learn

Viper 5101	4102V	All	7153V	Learn
Viper 5104	5104V	All	7153V	Learn
Viper 5204 LE	5204V	All	7251V, 7152V	Learn
Viper 5301 LE	4202V	All	7251V, 7152V	Learn
Viper 5500 SST	4301V	All	7701V, 7642V	Learn
Viper 5501 LC3 SST	4702V	All	7752V, 7652V, 7941V	Learn
Viper 5601	5102V	All	7153V	Learn
Viper 5701 LE	5202V	All	7251V, 7152V	Learn
Viper 5701 PINK LE (Pink)	5202VS	All	7251V, 7152V	Learn
Viper 5704 LC3 SST	5704V	All	7752V, 7652V, 7941V	Learn
Viper 5900 SST	5301V	All	7701V, 7642V	Learn
Viper 5901 LC3 SST	5702V	All	7752V, 7652V, 7941V	Learn
Viper 5902 HD SST	5902V	All	7941V, 7652V, 7752V	Learn
Viper 5904 HD SST	5904V	All	7941V, 7652V, 7752V	Learn
Viper 7900	5501V	All	7541V	Learn
Viper 7901 HD SST	5901V	All	7941V, 7652V, 7752V	Learn
Viper Responder One	4203V	All	7211V	Learn
Viper Responder 350	3305V	All	7341V, 7142V	Learn

Or Try This FCC ID# Chart

Circuit Board #	FCC ID #	Buttons	Original Remote	Replacement Remote
777B and 777B-2	H5LAL777A		1 465T	465T
777A through 777A-5	H5LAL777A		2 465T	465T
DT4B	H5LAL777A		2 465D	491T
777GE and 777GF	H5LAL777A		1 467T	(No longer available)
DT7H(A)	EZSDEI471		2 471T	471T
DTCA	EZSDEI472		4 472V/P/C	472V / 472P / 472C
DT7L-1	EZSDEI475		4 475Q/T	476VPS / 476A / 476T
DT6D-1, DT7L, DT7LA	EZSDEI475		4 475T	476VPS / 476A / 476T
DT8C and DT8E	EZSDEI476		4 476T	476VPS / 476A / 476T
4 Button GM style	EZSSOEMTX		4 476GM	476VPS / 476A / 476T
2 Way	EZSDEI478	4 LCD	478V/P/C	478
DB18-1, DC11-1	EZSDEI479	4 LCD	479V/P/C	479V / 479P / 479C
726D	EZSDEI480	2 mini	480T	(No longer available)
DT3A and DT3A-1	EZSDEI483	2 mini	482T	493C
DT3D, DT5A, 726E	EZSDEI483	2 mini	483T	493T
726E-A, 726E-3A	EZSDEI483	2 mini	483T	493T
DT3B through DT3B-3	EZSDEI484		4 484T	484T
DT6D and DT6D-1	EZSDEI485		4 485K	485M
DT6B, DT6C, DT4DA	EZSDEI485		4 485M	485M
DT4D through DT4D-2	EZSDEI485		4 485T	485M
2 Way ASK	EZSDEI487	4 LED	487V/P/C	487V / 487P / 487C
2 Way ASK	EZSDEI489	4 LCD	489V/P/C	489V / 489P / 489C
2 Way SST	EZSDEI7701	4 LCD	7701V/P/C	7701V / 7701P / 7701C
777F and 777G-1	H5LAL777A		1 487T	(No longer available)

DT7C	EZSDEI490		2 490T	491T
DT4G, DTOH	EZSDEI491		2 491M	491T
DT4B and DT4BA	EZSDEI491		2 491T	491T
RT4A	EZSDEI467		2 492T	492T
777J	EZSDEI467		2 493T	493T
DT3C and DT3C-A	EZSDEI493C	2 (saw)	493T	493C
777M, 777M2 and DT7N	EZSDEI467		2 493C	493C
494, 494T, 494T1, 494T2	EZSDEI494		4 494T	484T