



## IMM Commands

---

- [imm address](#), on page 2
- [imm dhcp](#), on page 3
- [imm mode](#), on page 4
- [imm restart](#), on page 5
- [imm summary](#), on page 6
- [imm username](#), on page 7

## imm address

To configure the static IP address of the IMM, use the **imm address** command.

**imm address** *ip-addr netmask gateway*

<b>Syntax Description</b>	<i>ip-addr</i>	IP address of the IMM
	<i>netmask</i>	Netmask of the IMM
	<i>gateway</i>	Gateway of the IMM
<b>Command Default</b>	None	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	7.6	This command was introduced in a release earlier than Release 7.6.
	8.0	This command supports only IPv4 address format.

The following example shows how to set the static IP address of an IMM:

```
(Cisco Controller) >imm address 209.165.200.225 255.255.255.224 10.1.1.1
```

# imm dhcp

To configure DHCP for the IMM, use the **imm dhcp** command.

**imm dhcp** { **enable** | **disable** | **fallback** }

Syntax Description	enable	disable	fallback
	Enables DHCP for the IMM	Disables DHCP for the IMM	Enables DHCP for the IMM, but if it fails, then uses static IP of the IMM
Command Default	DHCP for IMM is enabled.		
Command History	Release	Modification	
	7.6	This command was introduced in a release earlier than Release 7.6.	

The following example shows how to enable DHCP for the IMM:

```
(Cisco Controller) >imm dhcp enable
```

# imm mode

To configure the IMM mode, use the **imm mode** command.

**imm mode** {**shared** | **dedicated**}

<b>Syntax Description</b>	<b>shared</b>	Sets IMM in shared mode
	<b>dedicated</b>	Sets IMM in dedicated mode
<b>Command Default</b>	Dedicated	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to set the IMM in shared mode:

```
(Cisco Controller) >imm mode
```

# imm restart

To restart the IMM, use the **imm restart** command.

## imm restart

<b>Syntax Description</b>	<b>restart</b>	Saves your settings and restarts the IMM
<b>Command Default</b>	None	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	7.6	This command was introduced in a release earlier than Release 7.6.

# imm summary

To view the IMM parameters, use the **imm summary** command.

## imm summary

<b>Syntax Description</b>	<b>summary</b>	Lists the IMM parameters
<b>Command Default</b>	None	
<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows a typical summary of the IMM:

```
(Cisco Controller) >imm summary
User ID.....username1
Mode..... Shared
DHCP..... Enabled
IP Address..... 209.165.200.225
Subnet Mask..... 255.255.255.224
Gateway..... 10.1.1.1
```

# imm username

To configure the logon credentials for an IMM user, use the **imm username** command.

**imm username** *username password*

Syntax Description		
	<i>username</i>	Username for the user
	<i>password</i>	Password for the user

**Command Default** None

Command History	Release	Modification
	7.6	This command was introduced in a release earlier than Release 7.6.

The following example shows how to set the logon credentials of an IMM user:

```
(Cisco Controller) >imm username username1 password1
```

imm username