

# Owner's Manual & Safety Instructions

**Save This Manual** Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

20g

# CEN-TECH®

## JUMP STARTER

**CHARGE COMPLETELY  
IMMEDIATELY AFTER  
PURCHASE.**

**Fully recharge after  
each jump-start.**

**Fully recharge monthly to  
ensure long battery life.**



(BC)

Visit our website at: <http://www.harborfreight.com>  
Email our technical support at: [productsupport@harborfreight.com](mailto:productsupport@harborfreight.com)

57209

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please call 1-888-866-5797 as soon as possible.

Copyright© 2020 by Harbor Freight Tools®. All rights reserved.  
No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools.  
Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein.  
Tools required for assembly and service may not be included.

### WARNING

Read this material before using this product.  
Failure to do so can result in serious injury.  
**SAVE THIS MANUAL.**

## Table of Contents

Safety .....	2	Maintenance .....	9
Specifications .....	5	Parts List and Diagram .....	10
Setup .....	6	Warranty .....	12
Operation.....	8		

**CEN-TECH®**

WARNING SYMBOLS AND DEFINITIONS	
	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
<b>DANGER</b>	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
<b>WARNING</b>	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
<b>CAUTION</b>	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
<b>NOTICE</b>	Addresses practices not related to personal injury.
<b>CAUTION</b>	

<b>V</b>	Volts
<b>~</b>	Alternating Current
<b>A</b>	Amperes
<b>CCA</b>	Cold Cranking Amps
<b>RC</b>	Reserve Capacity
<b>Ah</b>	Ampere-hours

	WARNING marking concerning Risk of Eye Injury. Wear ANSI-approved splash-resistant safety goggles.
	Read the manual before setup and/or use.
	WARNING marking concerning Risk of Fire. Follow connection procedure.

# General Safety Warnings

## WARNING

**Read all safety warnings and instructions.**

*Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**

### WARNING! – RISK OF EXPLOSIVE GASES.

Working in vicinity of a lead-acid battery is dangerous. Batteries generate explosive gases during normal battery operation. For this reason, it is of utmost importance that you follow the instructions each time you use the Jump Starter.

To reduce risk of battery explosion, follow these instructions and those published by battery manufacturer and manufacturer of any equipment you intend to use in vicinity of battery. Review cautionary marking on these products and on engine.

## Work Area Safety

1. **Keep work area clean and well lit.**  
*Cluttered or dark areas invite accidents.*
2. **Do not operate Jump Starter in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**  
*The Jump Starter can create sparks which may ignite the dust or fumes.*
3. **Keep children and bystanders away while operating the Jump Starter.**  
*Distractions can cause you to lose control.*
4. **Store idle equipment. Always lock up tools and keep out of reach of children.**

## Electrical Safety

1. **Do not drop a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.**
2. **Do not operate if Jump Starter has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified technician.**
3. **Do not leave Jump Starter unattended while switched on. It could result in fire and property damage.**
4. **Do not expose to rain or wet conditions.**  
*Water entering the Jump Starter will increase the risk of electric shock.*
5. **Do not use an extension cord with this item.**
6. **Use of an attachment not recommended or sold by the manufacturer may result in a risk of fire, electric shock, or injury to persons.**
7. **To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting the Adapter.**
8. **Do not operate with damaged cord or plug.**  
*Replace the cord or plug immediately.*

## Personal Safety

1.  **Wear ANSI-approved splash-resistant safety goggles and heavy-duty rubber work gloves whenever connecting, disconnecting, or working near battery. Battery acid can cause permanent blindness. Avoid touching eyes while working near battery.**
2. **Do not use Jump Starter while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating Jump Starter may result in serious personal injury.**
3. **NEVER smoke or allow a spark or flame in vicinity of battery or engine.**
4. **If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.**
5. **Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing a severe burn.**
6. **People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.**

# Service

Have your Jump Starter serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the Jump Starter is maintained.

## Jump Starter Safety Warnings

1. **Lead-acid batteries generate hydrogen gas when charging.** Hydrogen gas is explosive. Only use the Jump-Start system in a well-ventilated area.
2. **Jump-Starting A Vehicle**
  - a. Use the Jump Starter for jump-starting a LEAD-ACID battery only.
  - b. For emergency use only. Do not use the Jump Starter as a replacement for a vehicle battery.
  - c. Be sure area around battery is well ventilated while battery is being jump-started.
  - d. NEVER jump-start a frozen battery.
  - e. Do not attempt to jump-start a vehicle with a non-rechargeable or defective battery.
  - f. Study all battery manufacturer's specific precautions for jump-starting.
  - g. **DO NOT TOUCH POSITIVE AND NEGATIVE BATTERY CLAMPS TOGETHER.**
  - h. Unplug the Jump Starter from its Adapter before connecting its cables to a battery.
- i. Connect and disconnect battery cable clamps only after setting any Jump-Starter switches to OFF position.
- j. Connect cables to proper polarities. Connect black cable to negative body ground and red cable to positive battery terminal.
- k. Locate Jump Starter as far away from battery as battery cables permit.
3. Maintain labels and nameplates on the Jump Starter. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
4. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.



**SAVE THESE INSTRUCTIONS.**

## Specifications

Input	120 VAC, 60Hz, 0.3A
Output	15VDC, 0.5A USB 5VDC, 2.4A
Cold Cranking Amps	210A
Battery	12V, 9Ah, Sealed Lead-Acid
Battery Cables	25 1/2" L, 6AWG

## Setup - Before Use:



Read the **ENTIRE IMPORTANT SAFETY INSTRUCTIONS** section at the beginning of this manual including all text under subheadings therein before setup or use of this product.

**Note:** For additional information regarding the parts listed in the following pages, refer to *Parts List and Diagram* on page 10.

## Functions

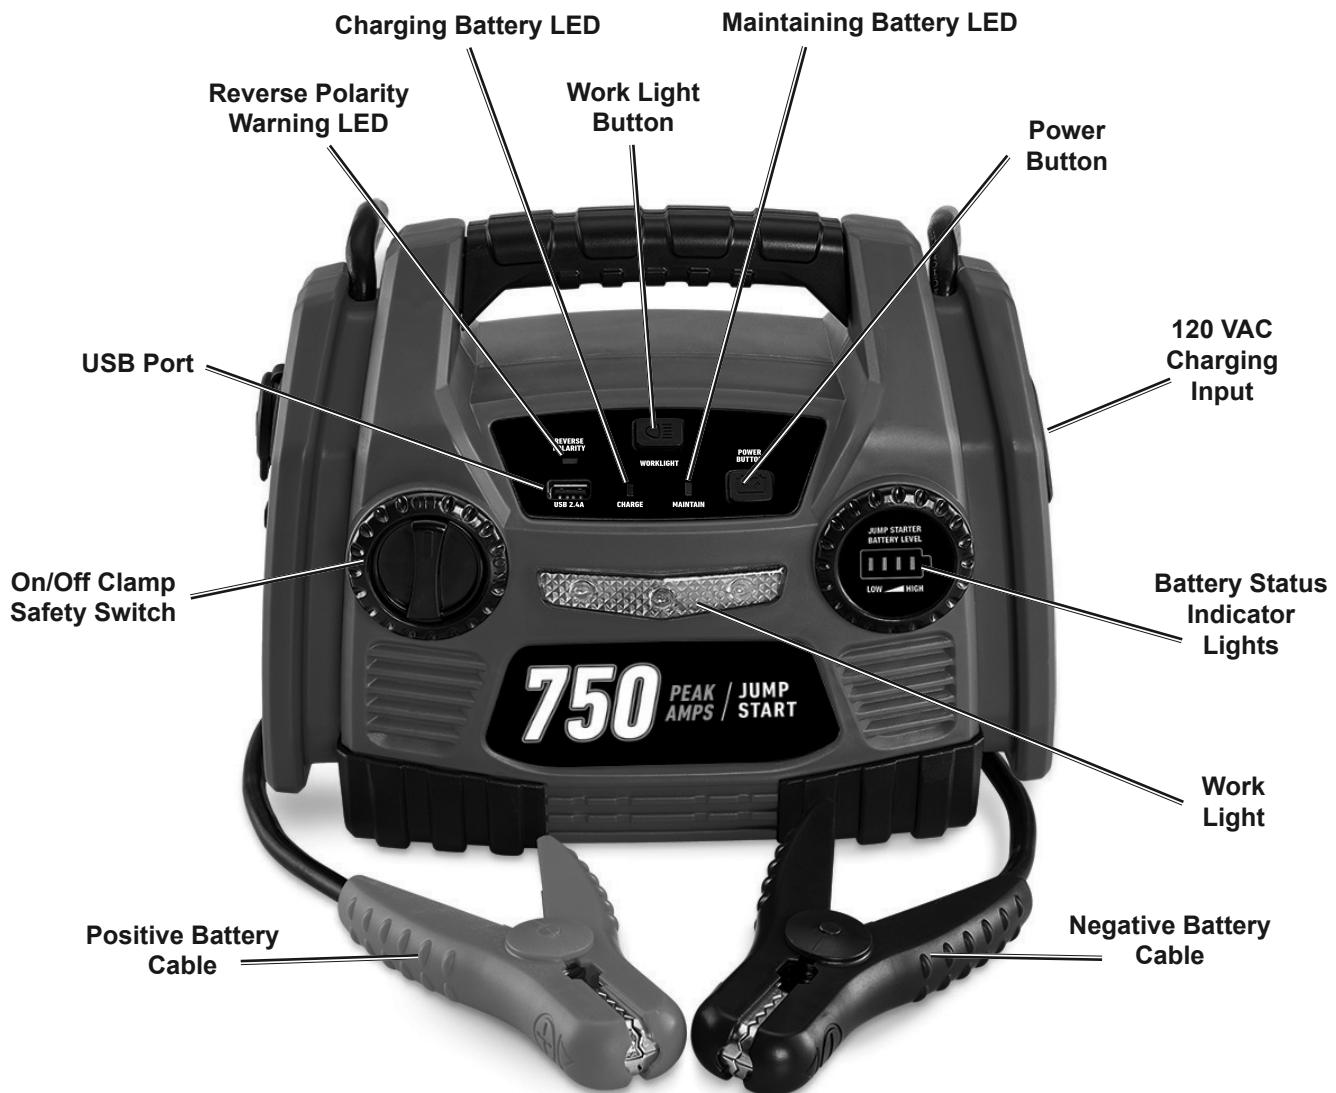


Figure A


# Charging the Jump Starter

**WARNING! TO PREVENT SERIOUS INJURY:**  
Always charge on a non-flammable surface.

The Battery Status Indicator Lights show the battery's power level. Press the Power Button ON to illuminate the lights.


- Full and 75%: Green light(s) indicate ready for use.
- 50% Charged: Yellow and Red lights indicate needs to be charged.
- 25% Charged: Red light indicates should be charged **immediately**.

## JUMP STARTER BATTERY LEVEL

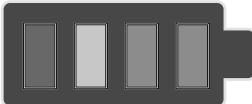


Fully charged battery

LOW HIGH

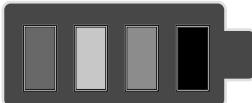

Mostly charged battery

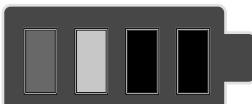

Partially depleted battery



Mostly depleted battery


### Battery Status Indicator LEDs

- Turn the Clamp Switch on front of unit to the OFF position and be sure nothing is connected to the USB port. The Work Light and Power Button should be OFF.


**Note:** Before initial use, completely charge the Jump Starter.

**Note:** Do not operate any of the Jump Starter's functions while the unit is charging.

- Connect the included Power Cord's plug to a grounded 120 VAC 60Hz outlet.

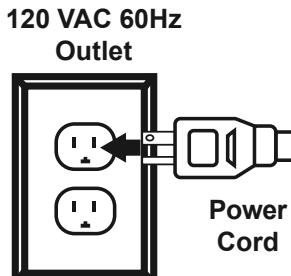

- Remove cover from 120VAC Charging Input and connect the Power Cord's socket to the male plug on the side of the Jump Starter.

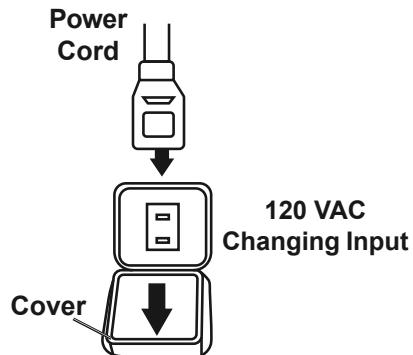

- The Jump Starter's front panel Charging Battery LED will illuminate while the unit is charging.
- The green Battery Status Indicators will illuminate when the unit is fully charged. Also, the Maintaining Battery LED will illuminate until the power cord is disconnected.

Approximate AC Charge Time	
Initial Charge:	Up to 12 hours
Recharge:	Up to 12 hours

### Charge Time

- The Jump Starter must be unplugged when it is fully charged.**

**NOTE: FAILURE TO RECHARGE Jump Starter WILL VOID WARRANTY.**

- Recharge:

- When the Battery Status LEDs indicate 50% or less.
- After each Jump-Start.
- Once a month.

**DO NOT EXCEED MAXIMUM CHARGING TIME.**

## Using the Work Light

1. To turn the Work Light on, press the Power Button ON and then press the Work Light button.
2. To turn the Work Light off, press the Work Light button again.
3. If finished using the Jump Starter, press the Power Button OFF.

## Jump-Starting a Vehicle

**Note:** Read the vehicle owner's manual pertaining to jump-starting prior to using the Jump Starter.

1. Press the Power Button ON and check the Battery Status Indicator Lights to verify that the Jump Starter is fully charged. Recharge as needed, following the instructions in the "Charging the Jump Starter" section on page 7.
2. Turn off the vehicle ignition switch and all accessories (lights, radio, climate control, etc.).
3. Turn Clamp Switch on the Jump Starter to the OFF position. You may leave the Work Light on if needed.

**WARNING! TO PREVENT SERIOUS INJURY:  
DO NOT TOUCH POSITIVE AND NEGATIVE  
BATTERY CLAMPS TOGETHER.**

3. Connect the red Positive Battery Cable to vehicle's positive battery terminal. Connect the black Negative Battery Cable to a non-moving metal part of the vehicle.

**WARNING! TO PREVENT SERIOUS INJURY:  
DO NOT CONNECT TO THE NEGATIVE  
TERMINAL OF THE BATTERY.**

**WARNING! TO PREVENT SERIOUS INJURY: DO  
NOT TURN CLAMP SWITCH TO ON POSITION  
IF THE REVERSE POLARITY WARNING LED  
IS ON AND THE ALARM BUZZER IS HEARD.  
STOP AND CORRECT THE PROBLEM.**

4. When the correct connection has been made, turn the Clamp Switch to the ON position.
5. **WAIT FIVE MINUTES**, then start the vehicle. If the vehicle does not start, wait an additional 3 minutes before trying again.

**NOTICE: THE VEHICLE WILL NOT START IF  
YOU DO NOT WAIT AT LEAST 5 MINUTES.**

6. After the vehicle is started, turn the Clamp Switch to the OFF position. Remove the black Negative Battery Cable first, and then the red Positive Battery Cable.

## Running/Charging USB Devices

1. Press the Power Button ON and check the Battery Status Indicator Lights to verify that the Jump Starter is fully charged. Recharge as needed, following the instructions in the "Charging the Jump Starter" section on page 7.
2. Plug the device into the USB Port.
3. When finished, unplug the device from the USB Port.
4. If finished using the Jump Starter, press the Power Button OFF.



Procedures not specifically explained in this manual must be performed only by a qualified technician.

### WARNING

**TO PREVENT SERIOUS INJURY:** Unplug the Jump Starter, turn the Power Button off and allow Jump Starter to cool completely before performing any inspection, maintenance, or cleaning procedures.

1. **BEFORE EACH USE**, inspect the general condition of the Jump Starter. Check for:
  - loose hardware,
  - cracked or broken parts,
  - damaged electrical wiring or cable insulation, and
  - any other condition that may affect its safe operation.
2. Keep unit clean and clamps free of dirt, debris, or grease.
3. For longer working life, protect Jump Starter from sunlight and moisture.
4. **AFTER USE**, wipe external surfaces of the Jump Starter with clean cloth.
5. **CONTAINS NON-SPILLABLE, SEALED LEAD-ACID BATTERY. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.**
6. **The battery should only be replaced by a qualified technician.**

## PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

## Parts List

Part	Description	Qty
1	Front Housing	1
2	Clamp Switch Cover	1
3	On/Off Clamp Safety Switch	1
4	Control Panel	1
5	USB Port	1
6	Work Light Switch	1
9	Automatic Recovery Fuse	1
10	Handle	1
11	Back Housing	1
12	Red Positive Clamp	1
13	Black Negative Clamp	1
14	Clamp Handle	2
15	Housing Rear Foot	2


Part	Description	Qty
16	Side Door	2
17	Battery Bracket	1
18	Battery, 12V, 9Ah, Lead Acid	1
19	120 VAC Charging Input	1
20	Vent	2
21	Adapter, 15V 500mA	1
22	120 VAC Charging Input Cover (not shown)	1
23	Battery Status Indicator Cover	1
24	LED Indicator Panel	1
25	Housing Front Foot	2
26	Power Button	1
34	Power Cord	1

Record Product's Serial Number Here: \_\_\_\_\_

**Note:** If product has no serial number, record month and year of purchase instead.

**Note:** Some parts are listed and shown for illustration purposes only, and are not available individually as replacement parts. Internal parts are not user-serviceable and are not available. Specify UPC 792363572095 when ordering parts.

# Assembly Diagram

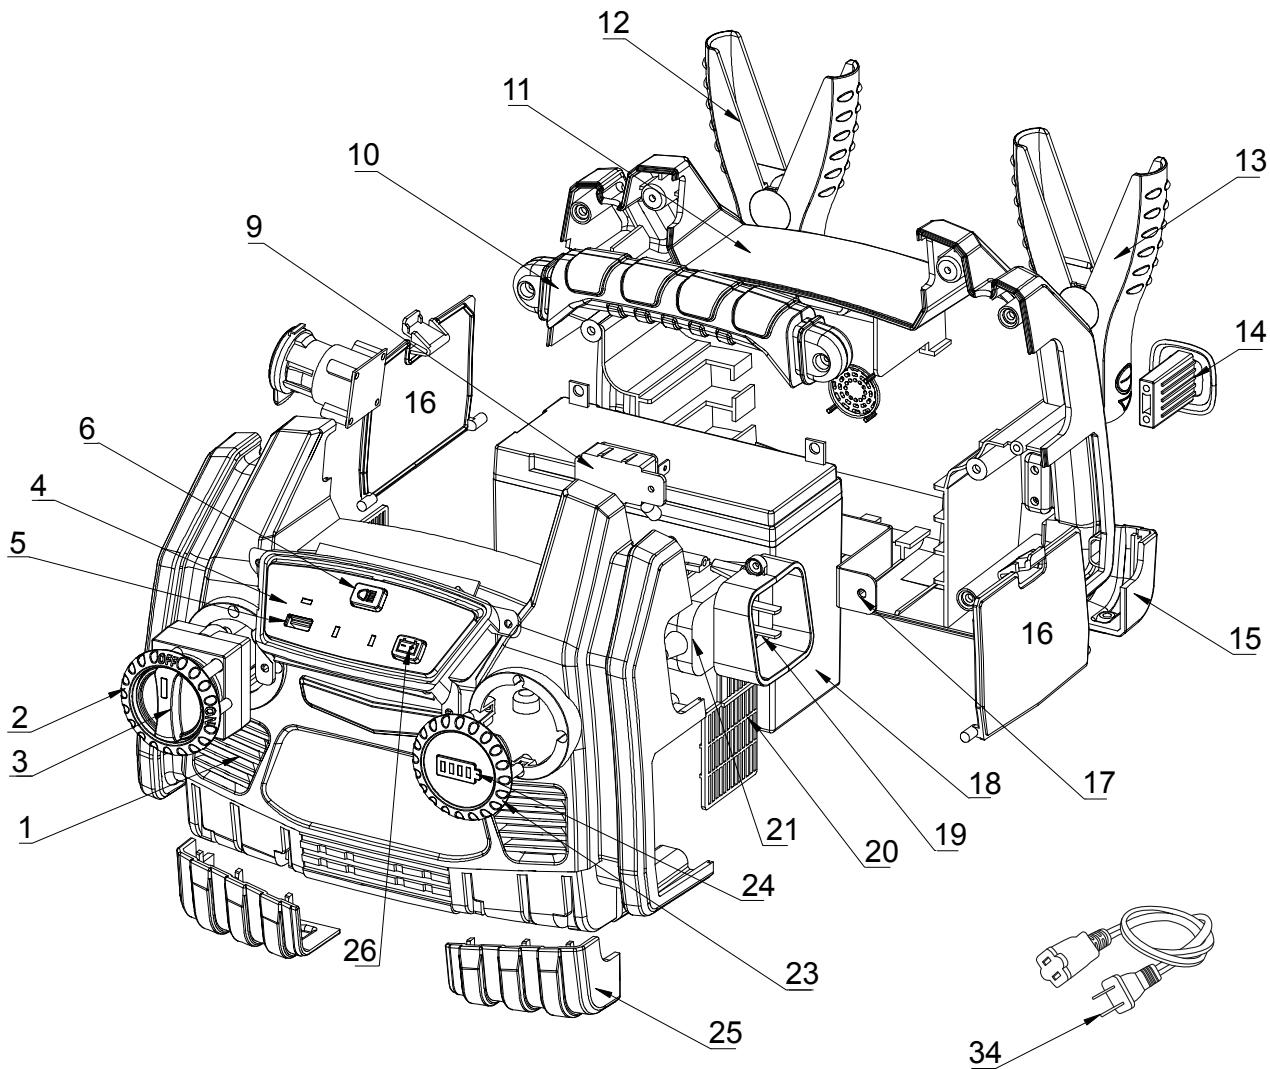

SAFETY

SETUP

OPERATION

MAINTENANCE

## Limited 90 Day Warranty

Harbor Freight Tools Co. makes every effort to assure that its products meet high quality and durability standards, and warrants to the original purchaser that this product is free from defects in materials and workmanship for the period of 90 days from the date of purchase. This warranty does not apply to damage due directly or indirectly, to misuse, abuse, negligence or accidents, repairs or alterations outside our facilities, criminal activity, improper installation, normal wear and tear, or to lack of maintenance. We shall in no event be liable for death, injuries to persons or property, or for incidental, contingent, special or consequential damages arising from the use of our product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. **THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.**

To take advantage of this warranty, the product or part must be returned to us with transportation charges prepaid. Proof of purchase date and an explanation of the complaint must accompany the merchandise. If our inspection verifies the defect, we will either repair or replace the product at our election or we may elect to refund the purchase price if we cannot readily and quickly provide you with a replacement. We will return repaired products at our expense, but if we determine there is no defect, or that the defect resulted from causes not within the scope of our warranty, then you must bear the cost of returning the product.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

The logo for CEN-TECH, featuring the words "CEN-TECH" in a bold, sans-serif font. The "CEN" is on one line and "TECH" is on the line below it, with a registered trademark symbol (®) to the right of "TECH".

26541 Agoura Road • Calabasas, CA 91302 • 1-888-866-5797