


Intelligent toilet instructions

The Product Model:

- ◆ Thanks for choosing our product.
- ◆ And please read the instructions Carefully before properly using.

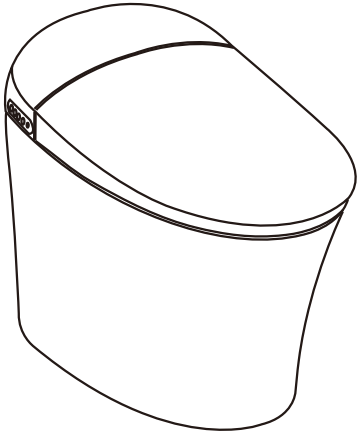

Contents


Overall sketch 1
Safety precautions 2
Function introduction 4

Installation guide
Toilet bowl installation 5
Remote control bracket installation.. 8


Operations
Operation introduction 9
Preparations before use 9
Product use manual 10
Troubleshooting 16
Cleaning and Maintenance 17

Appendix
Product pscification 21
Packing list 22

Overall sketch

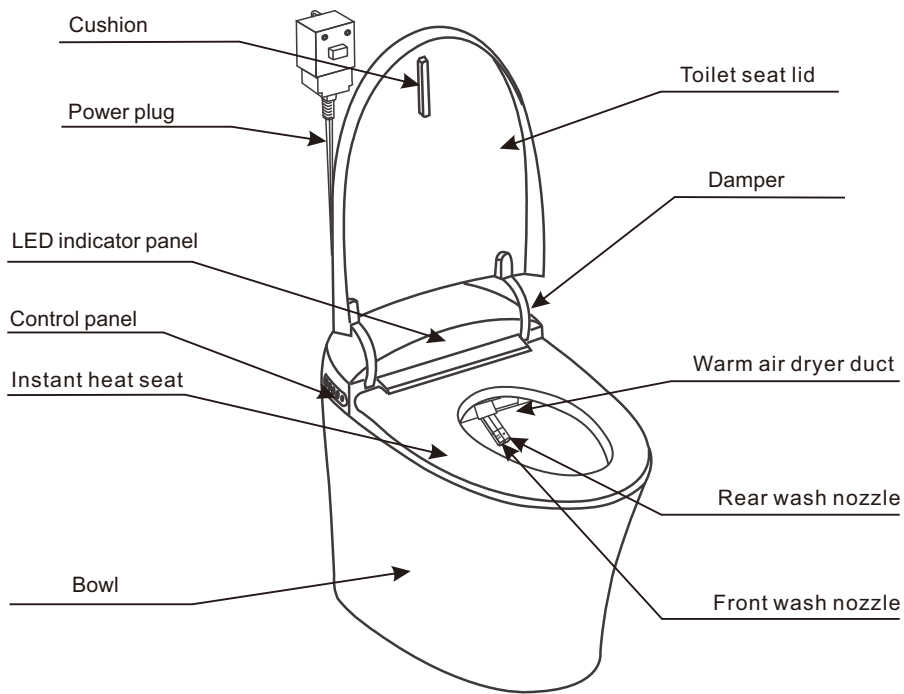

2.4G wireless remote control

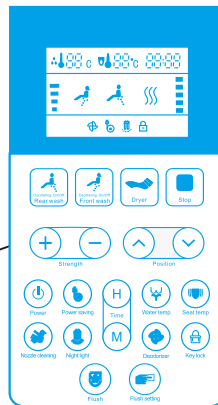

Attention:
The specification, design and color of the instruction may differ from the end-product you bought. In the case, you'd better refer to the end-product about the assemblies.

Safety Precautions

All the safety precautions listed can prevent the users from the physical hurts or property losses. Please read all the safety items and warnings, using the product in the right way.

WARNING Ignoring the sign may lead to serious injury or death.

Don't disassemble, repair, alter the product.

- ◆ All the behaviors above may lead to fire or electric shock.
- ◆ The product needs to be repaired professionals.

Don't immerse the product into the water. If the operating Environment has a quite high humidity, please install scavenging port and seal the attaching plug with rubber.

Don't touch the plug with the wet hand.

- ◆ It may lead to electric shock.

Connect the grounding wire with the product to prevent electric leakage or electric shock.

- ◆ If the grounding wire is not connected with the product, it may lead to electric leakage or shock.
- ◆ The grounding wire needs to be connected with the product by a professional.

Don't power on before pouring water. The power supply should not be higher than 110 V.

- ◆ It may cause fire.

Don't use the loosening plug. The electric wire should not be scratched, damaged, processing, bending, stretching bundling, hang heavy things or clamp.

- ◆ It may cause electric shock or fire.

⚠ WARNING

Ignoring the sign may lead to serious injury or death.

⊘ Don't stand on the toilet seat cover, seat circle or any other accessories.

◆ It may cause break down the product.



 
⊘ Don't open up and close down the toilet seat or toilet cover roughly.

◆ It may crack the toilet seat circle or toilet cover and lead to electric leakage.



⊘ Don't drag or bend the water pipe.

◆ It may make water leakage or no water supply.



⊘ Don't install or leave the remote control near the water.

◆ It may break down the remote control.

⊘ Preventing damage from freeze.

◆ The inlet tube and the inner of the product may be damaged for freezing, and then lead to water leakage.

⊘ Attention to the low temperature scalding.

◆ After using a long period, please turn off the heat preservation button near the seat circle.
◆ Please turn off the button for these groups: children, elders, patients, people unable to adjust the temperature, people with weak skin, people taking sleeping pills, alcoholics, the tired.

⊘ Don't put heat instruments beside the substance.

◆ It may change the color of the substance or even break down the substance. Please avoid the direct sunshine.
◆ Sometimes it may change the color of the plastics. Don't cover the warm air outlet.
◆ It may cause fire injury.

⊘ The substance cover, seat circle and seat cover are all plastics products. Don't bring fire source like cigarette butt, ashtray near these assemblies.

◆ It may lead to fire.

Declaration: In the event that accident occurs as a result of improper usage, company will assume no responsibility.

Function introduction:

Functions	Introduction
Rear wash	Provide rear cleansing
Rear oscillating wash	Move the nozzle back and forth for rear cleansing
Front wash	Provide cleansing by feminine wash nozzle with a gentle spray
Front oscillating wash	Move the nozzle back and forth with a gentle spray
Adjusting water position	Adjust the desired washing positions
Changing the temperature	Set the temperature of seats and water
Changing the water pressure	Change cleaning water pressure based on needs
Seat sensor	Detect the presence of a user and get the cleansing functions ready to operate
Heating seat	Heating the toilet seat to keep warm and comfortable during cold winter months
Drying	Dry the users after cleansing
Changing drying intensity	Control the temperature of warm air from the dryer
Adjusting the air outlet position of dryer	Set the position of air outlet based on needs
Remote control flushing	Remote control bowl unit cleaning based on needs
Auto flushing	Auto bowl unit cleaning after users walk away
Deodorizer	Removing odors
Deodorizer switch	Open and close deodorizer
Power switch	Turn power on and off
Energy-saving	Saves electricity
Soft night light	Preparations for insufficient light
Washing nozzles	Provide nozzle cleansing
Anti-collision with silence	Install damper inside to close gently
Smart remote control	Allow the user to operate the toilet from a comfortable position
Time setting	Time setting
Keylock	Lock remote control panel in case of improper operation


Installation Guide

◆ Toilet bowl installation ◆


※ Installation environment

Please check that walls and floors in the toilet room are finished construction and there is enough space pre-arranged for sewage, electric wires and water lines. Also please confirm the distance from the closet flange centerline to the finished wall fits for the rough in. And the water supply pressure should be within a range of 0.1MPa (dynamic)-0.75MPa (static). While the water supply temperature should be within a range of 5°C-35°C.

Notice: Please confirm the water inflow is greater than 18l/min, otherwise it may not be performed.

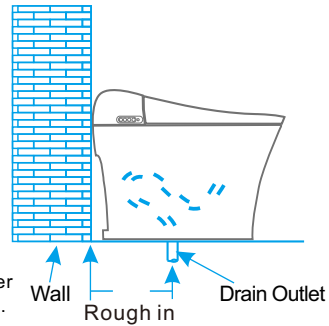


※ Connect the water pipe

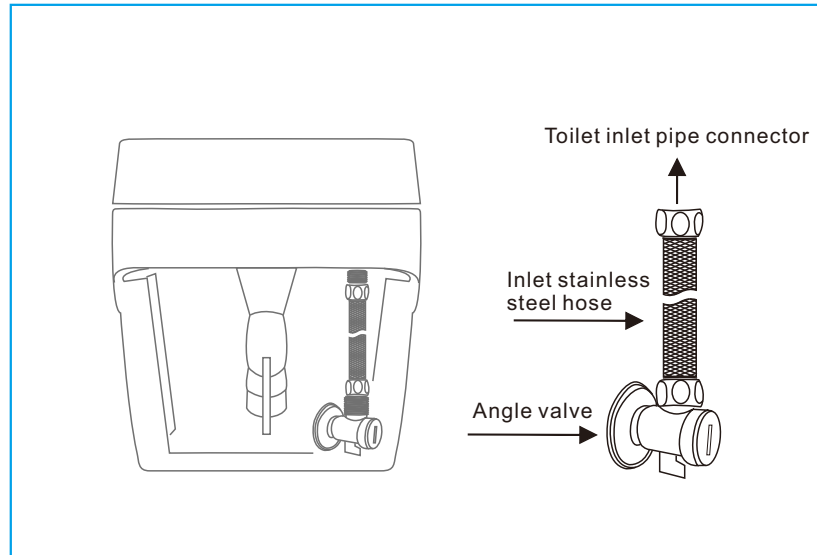

※ Connecting inlet water


1. Before installation, pls connect the angle valve with the pipe
2. Open the angle valve to let the dirty water come out until the clean water come.
3. Connect the inlet water pipe with angle valve
4. Open the angle valve to check if all connector without leaking.

※ Position the toilet

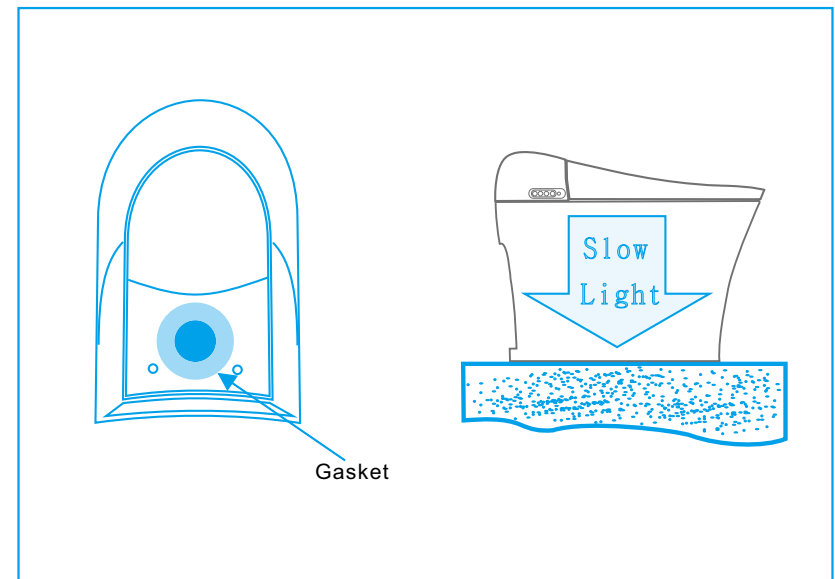

✧ Position the toilet

1. Check if the blow off pipe is ok and the ground is clean before you install
2. Put the Gasket on the blow off pipe hole..
3. Put the toilet on the ground and connect the blow off pipe, adjust the position, make sure the seal ring is workable.
4. Smearing silica gel on the bottom of toilet bowl. (See the picture below)
5. Clean the ground, pls do not use the toilet after smearing silica gel (Silica gel solidify need around 24hrs), keep the toilet bowl away from water more than 24 hrs.

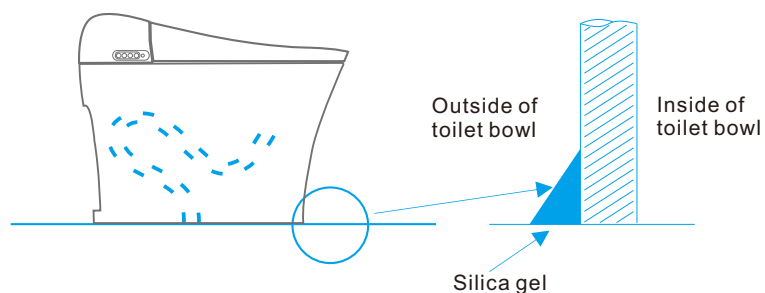


Installation and Operation Precautions

1. Do not get toilet with cement or mortar inside as this may cause cracking due to the condensation and expansion when installation.
2. Do not flush things that get toilet clogged easily, such as newspaper, diapers, and sanitary napkins.
3. Do not use the toilet under 0°C otherwise it may result in ceramic shell cracking because of the expansion when water congeals into ice.
4. Do not strike the ceramic shell in case of damage or water leakage.
5. Clean the ceramic surface by nylon brush and soap-suds or neutral cleaning agent. Do not use steel brush and strongly corrosive liquids as it may damage the surface and corrode pipes.

Declaration: Damages due to improper installation or operation, company will assume no responsibility.

◆ Install the Remote Control Holder ◆

■ Please see below picture

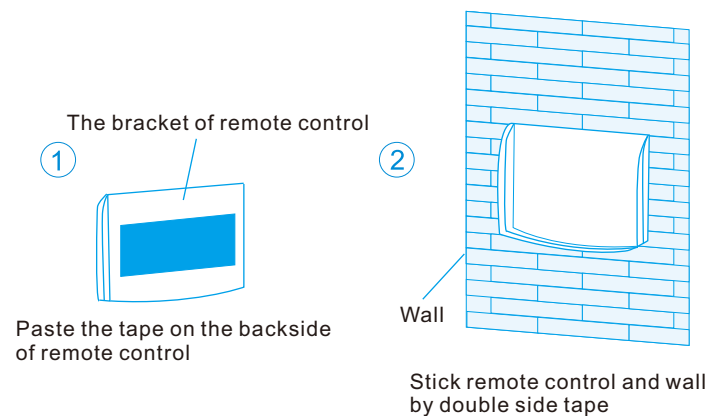


Notice: clean the installation position before pasting and Press the tape down fully and evenly when positioning.

While after pasting, do not touch the holder within 15 minutes.

Operations


◆ Operation introduction

This product is controlled mainly by remote control, while by control panel subsidiary. Please note below picture is only for illustration that how LED displays in full screen, not the actual interface.

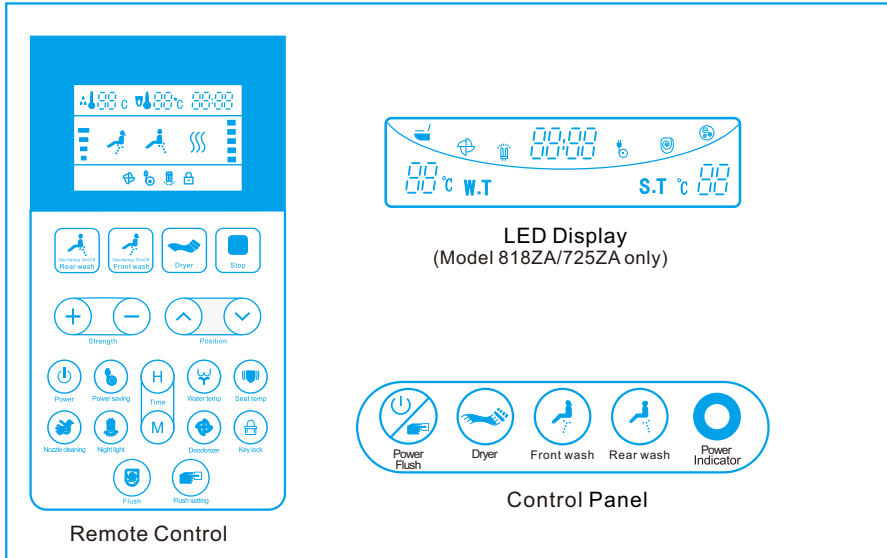


◆ Preparations before Use

 1. Ensure the plug is inserted into socket and the indicator light is on.



 2. Open the water-inlet valve



3. Confirm the control panel power indicator is on



4. Press the Power Button on the panel or turn on the power by remote control; also confirm power LED on the toilet is on otherwise it cannot be operated.



◆ Product use manual

1. Sitting on the toilet seat

seated-sensor activated

If air purification is activated, deodorizing function operates automatically.

2. Rear wash

Rear cleansing (Icon as below displays in the screen)



3. Front wash

Feminine cleansing (Icon as below displays in the screen)



4. Water pressure adjusting button

4-position water pressure can be adjusted, use + and - button to adjust.




5. The stop button

Stop rear wash, front wash, or it will stop wash after 2 minutes. (the panel shows)




6. Wash nozzle position adjustable button

5-grade for adjusting the satisfied position to wash by pressing (shows on the up-right panel).

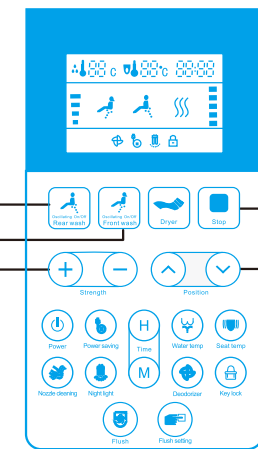


7. Dryer Function

Warm air is blown to dry the area washed by the shower.
(Shows on remote control) 


10. Stop

Stop warm air dryer, or it will automatically stop after 4 mins.


8. Warm air dryer adjustable button


Five-dryer setting for choosing, adjust comfortable air drying by pressing.
(Shows on remote control) 

9. Drying hole position adjustment



Under drying, there are 5-drying setting offered, the dryer hole can be adjusted by press button 

11. Nozzle self-cleaning

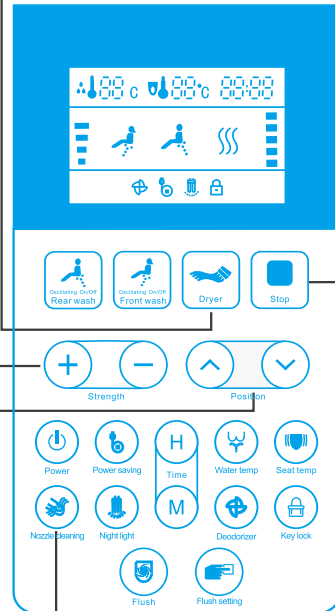

Press  then flows out water to clean nozzle.
Nozzle self cleaning is available while no one sits on the toilet.
It will clean nozzle automatically before rear and front wash.



12. Water temperature control

Press  to set water temperature. The temperature shows as a concrete numerical value. When temperature value is between 30-39, water will be heated according to your setting. When temperature value is 00, water will not be heated. Press  to change temperature value, and the value will show on the LED panel of remote controller and LED displayer.


13. Seat temperature control

Press  to set seat temperature. The temperature shows as a concrete numerical value. When temperature value is between 30-39, seat will be heated according to your setting. When temperature value is 00, seat will not be heated. Press  to change temperature value, and the value will show on the LED panel of remote controller and LED displayer.

Reminder


When the remote control displayer and toilet LED screen do not show the temperature, which mean the heating function is turn off.

14. Deodorization function



Press  button, turn on deodorization. When you sit on the toilet seat, it will work itself.

Reminder

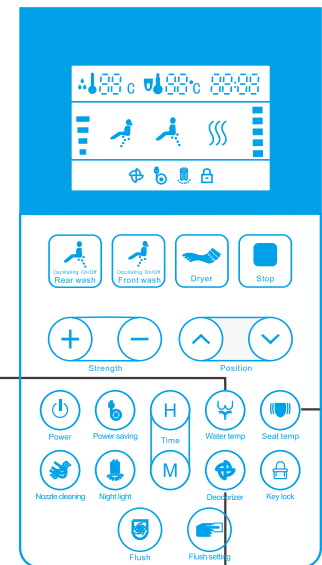
Under drying, deodorization will stop, after finish drying, it will work again, and last 1.5mins after you leave the seat.




15. Power

Press the  on remote controller. The toilet will be powered off. To power on the toilet. Press the  again, then LED lights.


16. Lighting

Press  light inside the toilet turns on. The lighting mode will be displayed on LCD panel of remote controller and the LED display. If press this button again, light turn off.



17. Flush by remote controller

Press  the toilet will be flushed 1 time.


18. Automatic Flush

Press  to control on/off mode of automatic flush. When it's on, the toilet will be automatically flushed once after people leave toilet seat for 5s. The mode will show on the LED panel of remote controller and the LED display.



19. Key Lock



Press  The remote controller Will be locked  will show on LCD panel. And all buttons are unavailable. To unlock the remote controller. Press the button again.

20. Energy saving

Press  electricity saving mode can be changed in several mode. When turns on, the whole system goes into electricity saving mode in 1.5 minutes. Functions mentioned above can be changed in circulation by pressing this button. The electricity saving mode will show on the LCD panel of remote controller. In auto-saving mode, water temperature and seat Temperature remain in 25°C. In 5H-saving mode. Water heating and seat heating functions are turned off and will be turned on after 5 hours. Then these functions will work according to original setting.

21. Time

Press the  on remote controller, then rectify hour-part of time shows on the remote controller. One plus with one press, the number will change in a circle of 0 to 23. Press the  on remote controller, then rectify minute-part of time shows on the remote controller. One plus with one press, the number will change in a circle of 0 to 59. changes to 10 hours

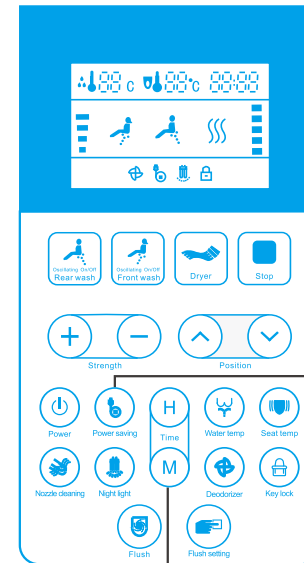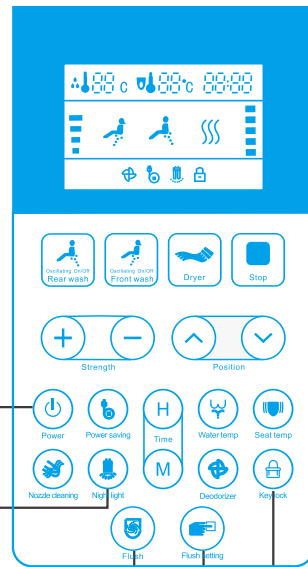

22. Control panel

As additional option, there is a little difference between the remote control with the control panel on toilet.

Press the button to flush once

Press the button to start rear wash;
Press again to stop the function



Model 820ZA/ model 825ZA only







Press the button to start
dryer function; Press again
to stop the function

Press the button to start front wash;
Press again to stop the function

23. LED Display



LED Display
(Model 818ZA/725ZA only)

LED	
Power Indicator	Long light indicates power on.
Seat Temp. Indicator 	When seat is heated, temperature is displayed by figures. When malfunction occurs, it turns to alphabet. When it displays F, it means the temperature is too high. When it displays E, it means disconnection of Seat Temp. Sensor.
Water Temp. Indicator 	When water is heated, temperature is displayed by figures. When malfunction occurs, it turns to alphabet. When it displays F, it means the temperature is too high. When it displays E, it means disconnection of Water Temp. Sensor.
Power Save Indicator	When it is in power saving mode,  indicator is constant on.
Deodorizing Indicator	When it is in auto deodorizing function,  indicator is constant on.
Soft Light Indicator	When it is in soft light function,  indicator is constant on.
Auto Flush Indicator	When it is in auto flush function,  indicator is constant on.

24. Buzzer

Buzzer
Buzz once: Normal operation-receives instructions from the buttons or the remote control
Buzz twice: Auto operates when users stand up
Buzz three times or above: Indicates malfunction or disorders. Buzzing intervals depends.

◆ Trouble Shooting ◆

In many cases, problems can be easily solved. Please check the following items before placing a service call.

TROUBLE	POSSIBLE CAUSE
Press Power Button but no functions operate	Electric leakage protection plug is not powered.
The remote control doesn't operate or is not sensitive	Please check if the batteries are low or already dead.
Poor or sluggish flush	Please check if the supply water pressure is too low or the filter is clogged.
No response when pressing the key	Some acts are mutual exclusive; Some keys activate under certain conditions; Please refer to the instruction manual carefully.
Water flows out around the nozzle	It is normal that there's water around nozzle before or after cleansing, or restarting the equipment.
Water cannot be sprayed from the nozzle tips	Water supply is cut off temporarily; Shutoff valve is closed; Some debris blocked the nozzle or the filter
Water leakage	Shutoff valve, water supply hose and water separator are not well connected
Seat, water, or dryer's air is not warm enough	Please check the settings of the temperatures.

Cleaning and Maintenance

● Cleaning the Toilet Bowl

- ◆ Do not use corrosive solvents to clean the outside of the toilet, such as banana oil, benzene, decolorizer, cleaner, and diluter. Also do not use water to rinsing the equipment as this may cause short circuits, resulting in a fire.
- ◆ Pull out the plug before cleaning in case that plug or the outlet gets wet by water.
- ◆ Scrub the bowl unit gently by soft cloth. If it is very dirty, get the cloth wet and clean the unit by neutral agents.


● Cleaning and Maintenance the Nozzle

- ◆ Press Nozzle Cleaning Button and water sprays out. Press the button a second time then the rear nozzle extends and press again, feminine nozzle extends too. Clean the nozzles with brush.

◆ Replacing the Nozzle

Hold the front end of the nozzle tip and turn it counterclockwise when nozzle extends. Then pull out of it. Replace the tip, insert it into the nozzle and turn it clockwise.

**Do not force the nozzle tip out or bend it.

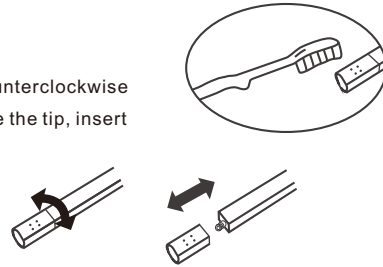


● Cleaning the filter

When the water pressure is too low or insufficient, please clean the filter.


1. Close the shutoff valve and stop water supply.

Notice: Do not remove the filter without closing the shutoff valve, otherwise water will spray out.

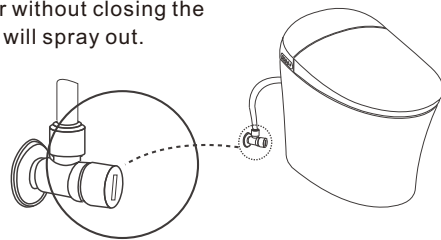


2. Remove the filter.

Unscrew the cover of the filter by straight screwdriver or one-yuan coin and then pull out the cover as below:

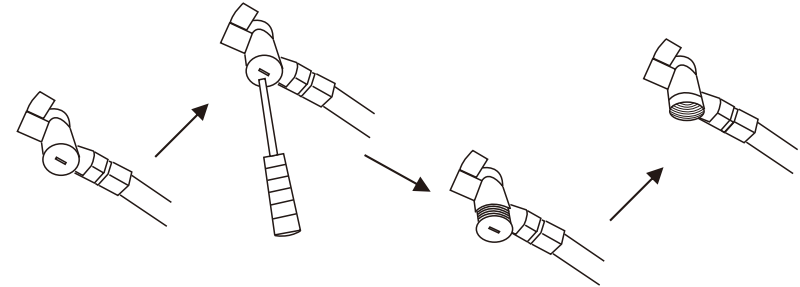

3. Clean the filter.

 Get the filter out and clean it thoroughly. Flush off dirt or clean the filter by toothbrush.



Notice: Do not use any cleaning agents. Clean it with water only. Do not crush the filter when cleaning in case of distortion.

4. Reattach the filter

Reinstall filter based on the removal sequence.

Notice: Do not open the shutoff valve before confirm there's no water leakage after installation.

Replace the remote control battery


◆ Battery installation

1. Use tool to remove remote control and its backside cover.
2. Use tool or coin negatively rotate "+" shape groove, then remove battery cover, do not fall out seal ring.
3. Put button battery into battery hole, upturn battery cathode (with letter side)
4. Put battery cover back, use tool or coin install cover, seal ring should be well installed.
5. Put remote control cover back.

◆ Replace the battery when the remote control is not sensitive.

Notice:

Place battery correctly.
Please take out battery when not in use for a long time .

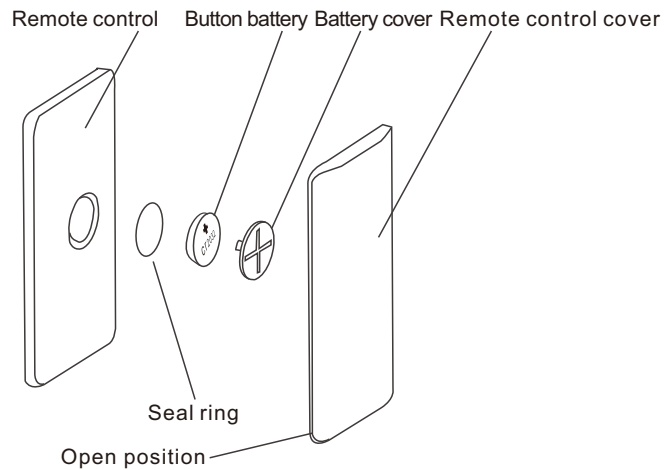


● Replace back up battery

◆ Steps:

1. Pull out power plug.
2. Lift toilet seat lid.
3. Take out battery cover.
4. Put battery in right position
5. Press flush button, be sure it can flush normally.
6. Put cover back and fix toilet seat lid.

Only 820ZA/825ZA/830ZA equipped back up power.

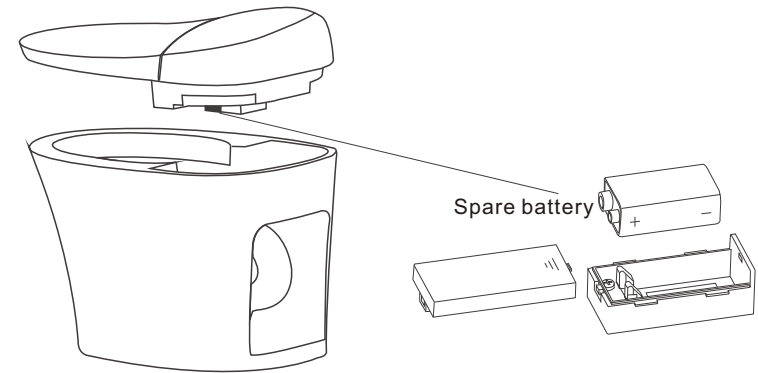

Note:

Please use 9V alkaline battery for back up battery.
Please recycle old battery properly.

Appendix

Product specification

Rated power supply	AC 110V 60HZ
Rated power consumption	1680w (When the inflow water is 5 degrees, set the outflow temperature and strength to the maximum.)
Power cord length	1.5m
Cleansing and Flushing	
Water pressure range	0.1Mpa(dynamic)-0.75Mpa(Static) (flow volume is no less than 18L/min)
Water pressure adjustment	Adjustable in 4 levels
Water Temp. Adjustment	Adjustable in 4 levels: 33℃, 36℃, 39℃, (Room Temperature)
Heater Capacity	1600w
Safety Device	Temperature control system; Over-heated protection mechanism; Over-dried protection mechanism; water and electricity isolation system.
General cleansing flow rates	0.5-0.9L/min(Minimum required water pressure:0.15Mpa)
Feminine cleansing flow rates	0.5-0.9L/min(Minimum required water pressure:0.15Mpa)
Seat Heating	
Heater capacity	40w/45w
Surface temperature	Adjustable in 4 levels: 33℃, 36℃, 39℃ (Room Temperature)
Safety device	Temperature control system; Over-heated protection mechanism
Warm Air Dryer	
Heater capacity	200w/350w
Warm air temperature	Adjustable in 4 levels from 32℃ to 62℃
Safety Service	Temperature Reset Switch/Temperature fuse
Deodorizer	
Power consumption	3w
Method	Chemical absorption by deodorizer cartridge
Weight	
Dimensions	

Packing List

Dear my user

Please check whether the products are complete after you open the box of toilet.

Product packaging box containing the items are:

- 1 Smart toilet
- 1 Manual
- 1 Warranty card
- 1 Spanner
- 1 Angle valve
- 1 Rear wash nozzle
- 1 Front wash nozzle
- 1 Set remote control (including remote control, holder, tape)
- 1 CR2032 Button battery
- 1 9V alkaline battery