

Dell S3222DGM Monitor

User's Guide

Monitor Model: S3222DGM
Regulatory Model: S3222DGMC



 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **CAUTION:** A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2021 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2021 – 06

Rev. A01



Contents

Safety instructions	6
About your monitor	7
Package contents	7
Product features	9
Identifying parts and controls	10
Front view	10
Back view	11
Side view	12
Bottom view	12
Monitor specifications	14
Resolution specifications	16
Supported video modes	16
Preset display modes	17
Physical characteristics	20
Environmental characteristics	21
Plug and play capability	22
LCD monitor quality and pixel policy	22
Setting up the monitor	23
Connecting the stand	23
Connecting your monitor	25
Connecting the HDMI and DisplayPort 1.2 cable	25
Organizing cables	26



Securing your monitor using Kensington lock (optional)	27
Removing the stand	28
Wall mounting (optional)	29
Operating your monitor	30
Power on the monitor	30
Using the joystick control	30
Joystick Description	32
Using the control buttons	32
Control buttons	33
Using the On-Screen Display (OSD) menu	34
Accessing the menu system	34
Menu and Power button lock	43
OSD warning messages	45
Setting the maximum resolution	48
Using the tilt and vertical extension	49
Tilt Extension	49
Vertical Extension	49
Ergonomics	50
Handling and moving your display	52
Maintenance guidelines	53
Cleaning your monitor	53
Troubleshooting	54
Self-Test	54
Built-in diagnostics	56
Common problems	58



Product-specific problems	61
Appendix.	62
FCC notices (U.S. Only) and other regulatory information	62
Contacting Dell.	62
EU product database for energy label and product information sheet	62



Safety instructions

Use the following safety guidelines to protect your monitor from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure included in this document assumes that you have read the safety information that shipped with your monitor.

-  **Before using the monitor, read the safety information that is shipped with your monitor and also printed on the product. Keep the documentation at a secure location for future reference.**
-  **CAUTION: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.**
 - Place the monitor on a solid surface and handle it carefully. The screen is fragile and can be damaged if dropped or hit with a sharp object.
 - Ensure that your monitor is electrically rated to operate with the AC power available in your location.
 - Keep the monitor in room temperature. Excessive cold or hot conditions can have an adverse effect on the liquid crystal of the display.
 - Connect the power cable from the monitor to a wall outlet that is near and accessible. See [Connecting your monitor](#).
 - Do not place and use the monitor on a wet surface or near water.
 - Do not subject the monitor to severe vibration or high impact conditions. For example, do not place the monitor inside a car trunk.
 - Unplug the monitor when it is going to be left unused for an extended period of time.
 - To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor.
 - Read these instructions carefully. Keep this document for future reference. Follow all warnings and instructions marked on product.
 - Excessive sound pressure from earphones and headphones can cause hearing loss. Adjustment of the equalizer to maximum increases the earphones and headphones output voltage and therefore the sound pressure level.
 - The equipment can be installed on wall or ceiling mounting in horizontal position.



About your monitor


Package contents

Your monitor ships with the components shown in the table below. If any component is missing, contact Dell. For more information, see [Contacting Dell](#).

 **NOTE: Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.**

	Monitor
	Stand riser
	Stand base
	Power cable (varies by countries)
	HDMI 2.0 cable (1.8 m)

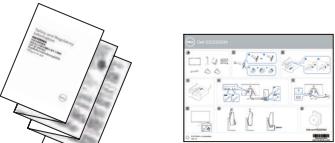

	DisplayPort 1.2 cable (1.8 m)
	<ul style="list-style-type: none">• Quick Setup Guide• Safety, Environmental and Regulatory Information



Product features

The Dell S3222DGM monitor has an active matrix, Thin-Film Transistor (TFT), Liquid Crystal Display (LCD), anti-static, and LED backlight. The monitor features include:

- 80.01 cm (31.5 in.) viewable area display (measured diagonally).
- 2560 x 1440 resolution, with full-screen support for lower resolutions.
- AMD FreeSync™ Premium Technology, which minimizes graphic distortions like screen tearing and stuttering for smoother, fluid gameplay.
- Supports the high refresh rates of 144 Hz and 165 Hz and a rapid response time of 1 ms in **MPRT** mode.

 **NOTE: 1 ms is achievable in the MPRT mode to reduce visible motion blur and increased image responsiveness. However, this may introduce some slight and noticeable visual artifacts into the image. As every system setup and every gamer's needs are different, we recommend that users experiment with the different modes to find the setting that is right for them.**


- Color gamut of 99% sRGB.
- Digital connectivity with DisplayPort and HDMI.
- Enabled with gaming console VRR supportability.
- Plug and play capability if supported by your computer.
- On-Screen Display (OSD) adjustments for ease of setup and screen optimization.
- Game-enhanced features such as Timer, Frame Rate Counter and Dark Stabilizer in addition to enhanced game modes such as FPS, MOBA/RTS, SPORTS, or RPG, and 3 additional game modes to personalize your preferences.
- Removable stand and Video Electronics Standards Association (VESA™) 100 mm mounting holes for flexible mounting solutions.
- Tilt and height adjustment capabilities.
- Security-lock slot.
- ≤0.3 W in the Standby Mode.
- Supports Dell Display Manager.
- Dell Premium Panel Exchange for peace of mind.
- Optimize eye comfort with a flicker-free screen and low blue light feature.

 **WARNING: The possible long-term effects of blue light emission from the monitor may cause damage to the eyes, including eye fatigue, digital eye strain, and so on. ComfortView Plus feature is designed to reduce the amount of blue light emitted from the monitor to optimize eye comfort.**



Identifying parts and controls


Front view

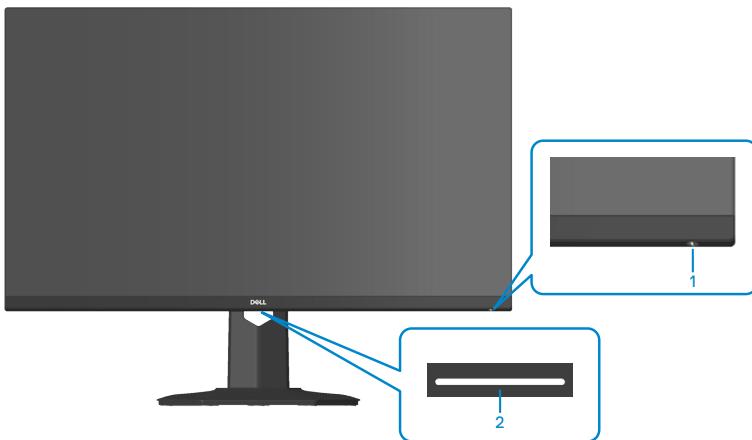

Label	Description	Use
1	Power On/Off button (with power-status light)	To turn the monitor on or off. Solid white light indicates that the monitor is turned on and functioning normally. Blinking white light indicates that the monitor is in Standby Mode.
2	Downlights	When the monitor is completely set up, tap the touch sensor to turn the downlights on or off. (see Downlights). This feature can be activated or deactivated via the OSD (see Downlight).  NOTE: On monitors that are manufactured from July 2021, the downlights can be turned on or off only using the OSD menu.



Back view

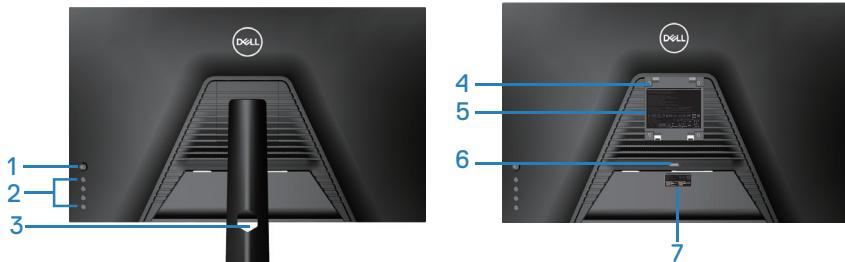


Back View with monitor stand


Label	Description	Use
1	Joystick	Use to control the OSD menu. (For more Information, see Operating your monitor)
2	Function buttons	Press the function buttons to adjust items in the OSD menu. (For more Information, see Operating your monitor)
3	Cable management slot	Use to organize cables by routing them through the slot.
4	VESA mounting holes (4)	Four VESA mounting holes (100 mm x 100 mm) accessible behind the VESA cover used for wall mounting the monitor through a VESA-compatible wall mount kit. See Wall mounting (optional) .
5	Regulatory information label	Lists the regulatory approvals.
6	Stand release button	Releases the stand from the monitor.
7	Regulatory label (including Barcode serial number and Service Tag label)	Lists the regulatory approvals. Refer to this label if you need to contact Dell for technical support. The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.



Side view

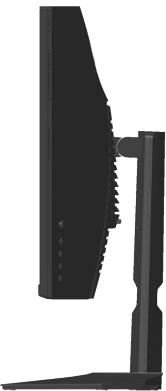


Bottom view

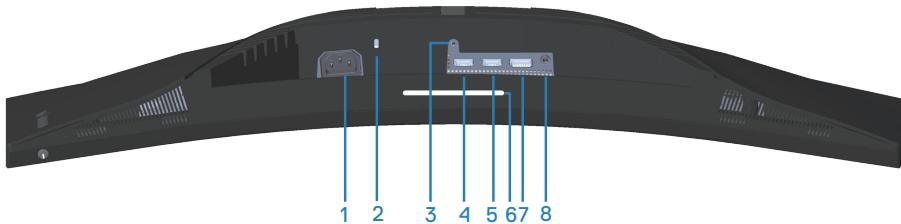

Bottom view without monitor stand

Label	Description	Use
1	Power connector	Connect the power cable (shipped with your monitor).
2	Security-lock slot	Secure your monitor using a security lock (purchased separately) to prevent unauthorized movement of your monitor. See Securing your monitor using Kensington lock (optional) .
3	Stand lock feature	To lock the stand to the monitor using a M3 x 6 mm screw (screw not included).
4	HDMI 1 2.0 port	Connect to your computer using a HDMI cable.
5	HDMI 2 2.0 port	Connect to your computer using a HDMI cable.

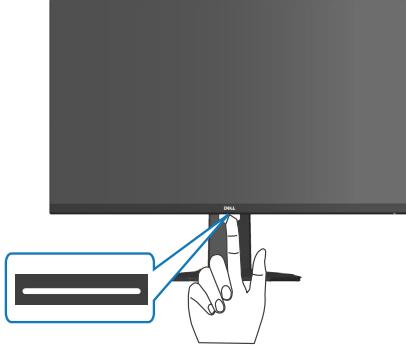

6	Downlights	<p>When the monitor is completely set up, tap the touch sensor to turn the downlights on or off. The factory setting is on, so the downlights are active if the power cable is connected.</p>  <p>NOTE: On monitors that are manufactured from July 2021, the downlights can be turned on or off only using the OSD menu.</p>
7	DisplayPort 1.2	Connect to your computer using a DisplayPort cable.
8	Headphone out port	Connect to a headphone.



Monitor specifications

Model	S3222DGM
Screen type	Active matrix-TFT LCD
Panel type	Vertical Alignment
Viewable image	
Diagonal	800.1 mm (31.5 in.)
Horizontal, Active Area	697.3 mm (27.5 in.)
Vertical, Active Area	392.3 mm (15.4 in.)
Area	273550.8 mm ² (423.5 in. ²)
Native resolution and refresh rate	2560 x 1440 at 144 Hz (HDMI 2.0) 2560 x 1440 at 165 Hz (DisplayPort 1.2)
Pixel pitch	0.2724 mm x 0.2724 mm
Pixel per inch (PPI)	93
Viewing angle	
Horizontal	178° (typical)
Vertical	178° (typical)
Luminance output	350 cd/m ² (typical)
Contrast ratio	3000 to 1 (typical)
Faceplate coating	SAG 40%, 3H
Backlight	LED edgelight system



Response time	8 ms gray to gray in Fast mode 4 ms gray to gray in Super Fast mode 2 ms gray to gray in Extreme mode 1 ms gray to gray in MPRT mode  NOTE: The 2 ms gray-to-gray mode is achievable in the Extreme mode to reduce visible motion blur and increased image responsiveness. However this may introduce some slight and noticeable visual artifacts into the image. As every system setup and every gamer's needs are different, we recommend that users experiment with the different modes to find the setting that is right for them.
Curvature	1800R (typical)
Color depth	16.7M colors (RGB 8-bits)
Color gamut	≥99% sRGB
Connectivity	2 x HDMI 2.0 with HDCP 2.2 (2560 x 1440, up to 144 Hz) 1 x DisplayPort 1.2 with HDCP 2.2 (2560 x 1440, up to 165 Hz) 1 x Headphone out
Bezel width (edge of monitor to active area)	
Top	7.85 mm
Left/Right	7.92 mm
Bottom	24.10 mm
Adjustability	
Height adjustable stand	100 mm
Tilt	-5° to 21°
Swivel	N/A
Slant Adjust	N/A
Dell display manager compatibility	Easy Arrange and other key features
Security	Security-lock slot (cable lock optional purchase)



Resolution specifications

Model	S3222DGM
Horizontal scan range	30 kHz to 250 kHz (automatic)
Vertical scan range	48 Hz to 144 Hz (HDMI 2.0) 48 Hz to 165 Hz (DisplayPort 1.2)
Maximum preset resolution	2560 x 1440 at 60 Hz with HDCP 2.2 2560 x 1440 at 144 Hz with HDCP 2.2 (HDMI 2.0) 2560 x 1440 at 165 Hz with HDCP 2.2 (DisplayPort 1.2)

Supported video modes

Model	S3222DGM
Video display capabilities (HDMI/DisplayPort)	480p, 480i, 576p, 576i, 720p, 1080p, 1080i, QHD

 **NOTE: This monitor supports AMD FreeSync™ Premium Technology.**



Preset display modes

HDMI Preset Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal / Vertical)
IBM, 720 x 400	31.47	70.08	28.32	-/+
VESA, 640 x 480	37.50	75.00	31.50	-/-
VESA, 640 x 480	31.47	59.94	25.18	-/-
VESA, 800 x 600	37.88	60.32	40.00	+/+
VESA, 800 x 600	46.88	75.00	49.50	+/+
VESA, 1024 x 768	48.36	60.00	65.00	-/-
VESA, 1024 x 768	60.02	75.03	78.75	+/+
VESA, 1152 x 864	67.50	75.00	108.00	+/+
VESA, 1280 x 800	49.31	59.91	71.00	+/+
VESA, 1280 x 1024	63.98	60.02	108.00	+/+
VESA, 1280 x 1024	79.98	75.02	135.00	+/+
VESA, 1600 x 1200	75.00	60.00	162.00	+/+
VESA, 1680 x 1050	65.29	59.95	146.25	-/+
VESA, 1920 x 1080	67.50	60.00	148.50	+/+
VESA, 1920 x 1080	137.26	120.00	285.50	+/+
VESA, 1920 x 1080	162.27	144.00	337.52	+/+
VESA, 1920 x 1200	74.56	59.89	193.25	+/+
VESA, 2560 x 1440	183.00	120.00	497.75	+/-
VESA, 2560 x 1440	88.79	59.95	241.50	+/-
VESA, 2560 x 1440	222.06	144.00	592.00	+/-



DisplayPort Preset Display Modes

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal / Vertical)
IBM, 720 x 400	31.47	70.08	28.32	-/+
VESA, 640 x 480	37.50	75.00	31.50	-/-
VESA, 640 x 480	31.47	59.94	25.18	-/-
VESA, 800 x 600	37.88	60.32	40.00	+/-
VESA, 800 x 600	46.88	75.00	49.50	+/-
VESA, 1024 x 768	48.36	60.00	65.00	-/-
VESA, 1024 x 768	60.02	75.03	78.75	+/-
VESA, 1152 x 864	67.50	75.00	108.00	+/-
VESA, 1280 x 1024	63.98	60.02	108.00	+/-
VESA, 1280 x 1024	79.98	75.02	135.00	+/-
VESA, 1600 x 900	60.00	60.00	108.00	+/-
VESA, 1600 x 1200	75.00	60.00	162.00	+/-
VESA, 1680 x 1050	65.29	59.95	146.25	-/+
VESA, 1920 x 1080	67.50	60.00	148.50	+/-
VESA, 1920 x 1080	137.26	120.00	285.50	+/-
VESA, 1920 x 1080	166.59	143.98	346.50	+/-
VESA, 1920 x 1080	186.50	165.00	387.81	+/-
VESA, 1920 x 1200	74.56	59.89	193.25	-/+
VESA, 2560 x 1440	88.79	59.95	241.50	+/-
VESA, 2560 x 1440	183.00	120.00	497.75	+/-
VESA, 2560 x 1440	222.15	143.97	604.25	+/-
VESA, 2560 x 1440	244.32	165.00	645.00	+/-



Electrical specifications

Model	S3222DGM
Video input signals	HDMI 2.0 (HDCP), 600 mV for each differential line, 100 ohm input impedance per differential pair DisplayPort 1.2, 600 mV for each differential line, 100 ohm input impedance per differential pair
AC input voltage/ frequency/current	100 VAC to 240 VAC / 50 Hz or 60 Hz ± 3 Hz / 1.6 A (max.)
Inrush current	120 V: 30 A (max.) at 0°C (cold start) 240 V: 60 A (max.) at 0°C (cold start)
Power consumption	0.25 W (Off mode) ¹ 0.3 W (Standby Mode) ¹ 26 W (On Mode) ¹ 50 W (Max.) ² 28 W (Pon) ³ 87.56 kWh (TEC) ³

¹ As defined in EU 2019/2021 and EU 2019/2013.

² Max brightness and contrast setting.

³ Pon: Power consumption of On Mode measured with reference to Energy Star test method.

TEC: Total energy consumption in kWh measured with reference to Energy Star test method.

This document is informational only and reflects laboratory performance. Your product may perform differently, depending on the software, components and peripherals you ordered and shall have no obligation to update such information.

Accordingly, the customer should not rely upon this information in making decisions about electrical tolerances or otherwise. No warranty as to accuracy or completeness is expressed or implied.



Physical characteristics

Model	S3222DGM
Signal cable type	<ul style="list-style-type: none">Digital: DisplayPort, 20 pinsDigital: HDMI, 19 pins
Dimensions (with stand)	
Height (extended)	555.98 mm (21.89 in.)
Height (compressed)	455.98 mm (17.95 in.)
Width	708.76 mm (27.90 in.)
Depth	237.61 mm (9.35 in.)
Dimensions (without stand)	
Height	424.20 mm (16.70 in.)
Width	708.76 mm (27.90 in.)
Depth	82.39 mm (3.24 in.)
Stand dimensions	
Height	420.30 mm (16.55 in.)
Width	284.64 mm (11.21 in.)
Depth	237.61 mm (9.35 in.)
Weight	
Weight with packaging	14.50 kg (31.97 lb)
Weight with stand assembly and cables	10.16 kg (22.40 lb)
Weight without stand assembly (no cables)	7.44 kg (16.40 lb)
Weight of stand assembly	2.27 kg (5.00 lb)
Front-frame gloss	Black frame 2-4 gloss units



Environmental characteristics

Model	S3222DGM
Compliant Standards	
<ul style="list-style-type: none">• RoHS-compliant• BFR/PVC free monitor (excluding external cables).• Arsenic-free glass and Mercury-free for the panel only	
Temperature	
Operating	0°C to 40°C (32°F to 104°F)
Non-operating	<ul style="list-style-type: none">• Storage: -20°C to 60°C (-4°F to 140°F)• Shipping: -20°C to 60°C (-4°F to 140°F)
Humidity	
Operating	10% to 80% (non-condensing)
Non-operating	<ul style="list-style-type: none">• Storage 10% to 90% (non-condensing)• Shipping 10% to 90% (non-condensing)
Altitude	
Operating (maximum)	5,000 m (16,400 ft)
Non-operating (maximum)	12,192 m (40,000 ft)
Thermal dissipation	<ul style="list-style-type: none">• 171.00 BTU/hour (maximum)• 95.76 BTU/hour (On Mode)



Plug and play capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. Most monitor installations are automatic, you can select different settings if desired. For more information about changing the monitor settings, see [Operating your monitor](#).

LCD monitor quality and pixel policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state which are hard to see and do not affect the display quality or usability. For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at www.dell.com/pixelguidelines.




Setting up the monitor


Connecting the stand

- NOTE:** The stand is detached when the monitor is shipped from the factory.
- NOTE:** The following procedure is applicable for the stand that shipped with your monitor. If you are connecting a third-party stand, see the documentation that shipped with the stand.

1. Follow the instructions on the flaps of packaging box to remove the stand from the top cushion that secures it.
2. Connect the stand base to the stand riser.
3. Open the screw handle on the stand base and tighten the screw to secure the stand riser to the stand base.
4. Close the screw handle.

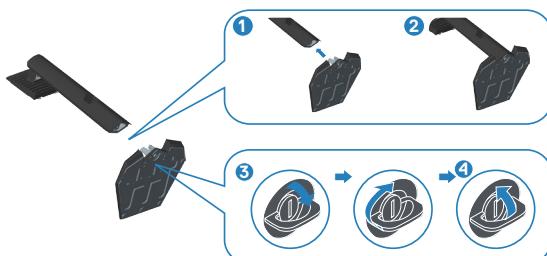

5. Slide the tabs on the stand assembly into the slots on the monitor and press the stand assembly down to snap it into place.

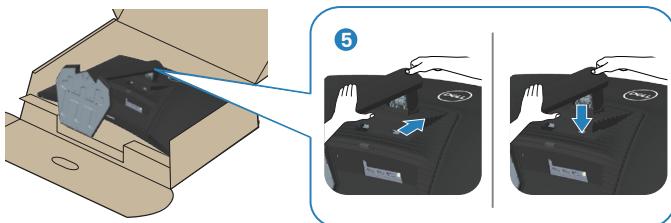

6. Place the monitor in an upright position.



Connecting your monitor

⚠ WARNING: Before you begin any of the procedures in this section, follow the [Safety instructions](#).

NOTE: Do not connect all cables to the monitor at the same time. It is recommended to route the cables through the cable-management slot before you connect them to the monitor.

To connect your monitor to the computer:

1. Turn off your computer and disconnect the power cable.
2. Connect the HDMI or DisplayPort cable from your monitor to the computer.

Connecting the HDMI and DisplayPort 1.2 cable



3. Connect the power cables from your computer and monitor into a wall outlet.




Organizing cables

Use the cable-management slot to route the cables connected to your monitor.



4. Turn on the monitor.

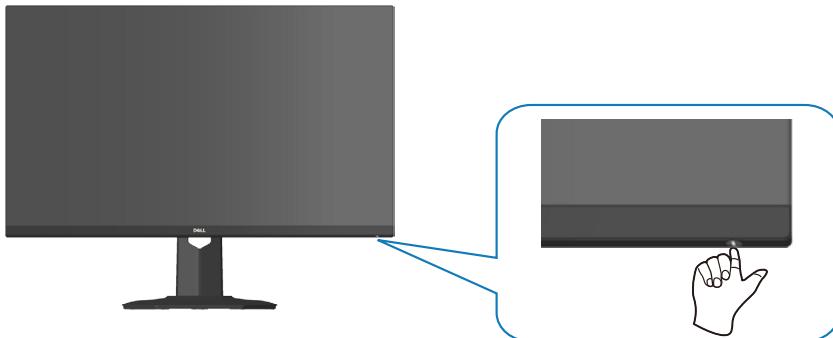


Securing your monitor using Kensington lock (optional)

You can fasten the monitor using a Kensington security lock to a fixed object that could support the weight of the monitor to prevent it from falling accidentally.

The security lock slot is located at the bottom of the monitor. (See [Security-lock slot](#))

For more information on using the Kensington lock (purchased separately), see the documentation that is shipped with the lock.

Secure your monitor to a table using the Kensington security lock.

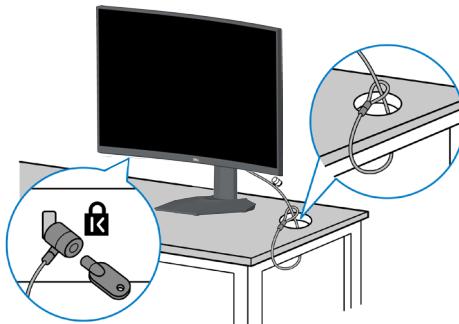

 **NOTE:** The image is for the purpose of illustration only. Appearance of the lock may vary.



Removing the stand


 **NOTE:** To prevent scratches on the screen when removing the stand, ensure that the monitor is placed on a soft and clean surface.

 **NOTE:** The following procedure is applicable only for the stand that shipped with your monitor. If you are connecting a third-party stand, see the documentation that shipped with the stand.

1. Place the monitor on a soft cloth or cushion at the edge of the desk.




2. Press and hold the stand release button at the back of the display.

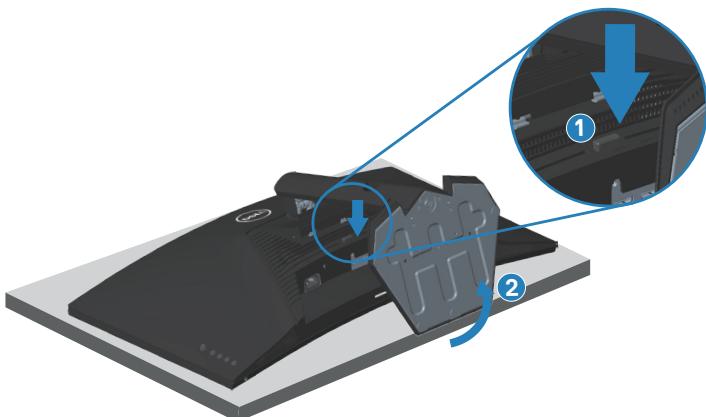

3. Lift the stand assembly up and away from the monitor.



Wall mounting (optional)

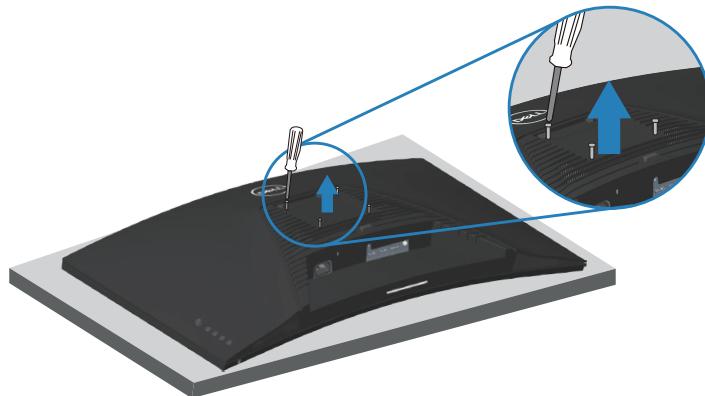

(Screw dimension: M4 x 10 mm).

See the documentation that shipped with the VESA-compatible wall mounting kit.

1. Place the display on a soft cloth or cushion at the edge of the desk.
2. Remove the stand. See [Removing the stand](#).
3. Remove the four screws that secure the display back cover.
4. Install the mounting bracket from the wall mounting kit to the display.
5. To mount the monitor on the wall, see the documentation that shipped with the wall mounting kit.




NOTE: For use only with UL or CSA or GS-listed wall mount bracket with minimum weight/load bearing capacity of 29.76 kg.



Operating your monitor

Power on the monitor


Press the  button to turn on the monitor.

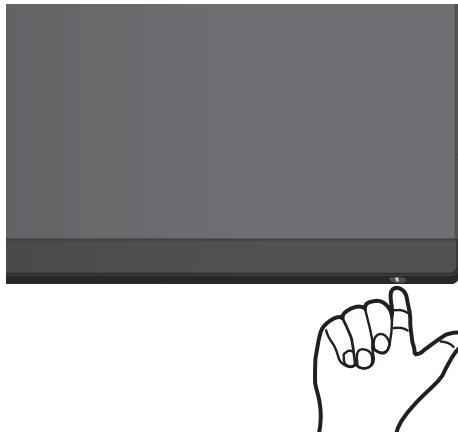

Using the joystick control

Use the joystick button on the rear of the monitor to adjust the image settings.



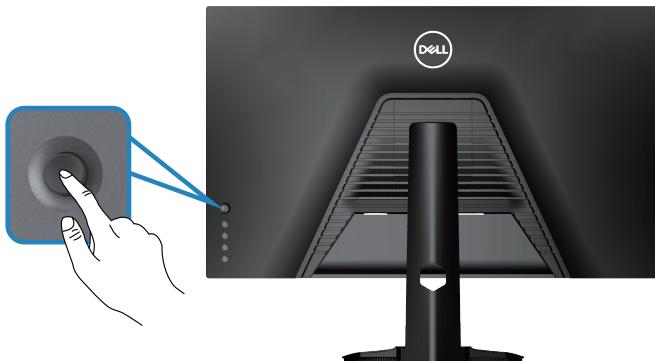

1. Press the joystick button to launch the OSD main menu.
2. Move the joystick up/down/left/right to toggle between options.
3. Press the joystick button again to confirm the settings and exit.




Joystick Description

Joystick	Description
	<ul style="list-style-type: none">When the OSD menu is on, press the button to confirm the selection or save the settings.When the OSD menu is off, press the button to launch the OSD main menu. See Accessing the menu system.
	<ul style="list-style-type: none">For 2-way (right and left) directional navigation.Move right to enter the submenu.Move left to exit from the submenu.Increases (right) or decreases (left) the parameters of selected menu item.
	<ul style="list-style-type: none">For 2-way (up and down) directional navigation.Toggles between the menu items.Increases (up) or decreases (down) the parameters of selected menu item.

Using the control buttons

Use the control buttons on the rear of the monitor to adjust the image being displayed.

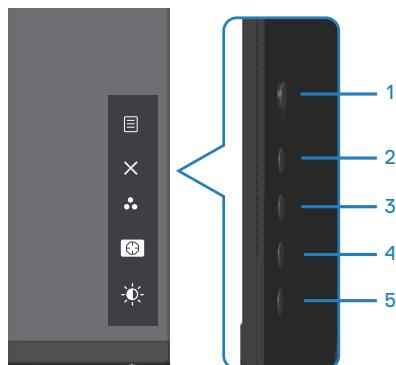

Control buttons


The following table describes the control buttons:

Control Buttons	Description
1  Menu	Use the Menu button at launch the On-Screen Display (OSD) and select the OSD menu. See Accessing the menu system .
2  Exit	Use this button to go back to the main menu or exit the OSD main menu.
3  Shortcut key/Preset Modes	Use this button for choose from a list of preset modes.
4  Shortcut key/Dark Stabilizer	Use this button to adjust Dark Stabilizer.
5  Shortcut key/ Brightness	Use this button to adjust the brightness.



Using the On-Screen Display (OSD) menu

Accessing the menu system

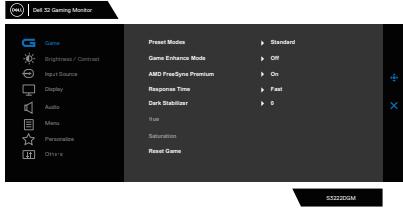Icon	Menu and Submenus	Description
	Game	




	<p>Preset Modes</p>	<p>When you select preset modes, you can choose Standard, FPS, MOBA/RTS, RPG, SPORTS, Game 1/Game 2/Game 3, ComfortView, Warm, Cool, or Custom Color from the list.</p> <ul style="list-style-type: none"> • Standard: Loads the monitor's default color settings. This is the default preset mode. • FPS: Loads color settings ideal for First-Person Shooter games. • MOBA/RTS: Loads color settings ideal for Multiplayer Online Battle Arena (MOBA) and Real-Time Strategy (RTS) games. • RPG: Loads color settings ideal for Role-Playing games. • SPORTS: Loads color settings ideal for "SPORTS" games. • Game 1/Game 2/Game 3: Allows you to customize the color settings for your gaming needs. • ComfortView: Decreases the level of blue light emitted from the screen to make viewing more comfortable for your eyes. <p>WARNING: The possible long-term effects of blue light emission from the monitor may cause personal injury such as digital eye strain, eye fatigue and damage to the eyes. Using monitor for extended periods of time may also cause pain in parts of body such as neck, arm, back and shoulder. For more information, see Ergonomics.</p> <ul style="list-style-type: none"> • Warm: Increases the color temperature. The screen appears warmer with a red/yellow tint. • Cool: Decreases the color temperature. The screen appears cooler with a blue tint. • Custom Color: Allows you to manually adjust the color settings. Move the joystick to adjust the Gain, Offset, Hue, and Saturation values and create your own preset color mode.
--	----------------------------	---




	Game Enhance Mode	<p>Adjusts Game Enhance Mode to Off, Timer, Frame Rate or Display Alignment.</p> <ul style="list-style-type: none"> • Off: Select to disable the functions under Game Enhance Mode. • Timer: Allows you to disable or enable the timer at the upper left corner of the display. The timer shows the time elapsed since the game starts. Select an option from the time-interval list to keep you aware of the remaining time. • Frame Rate: Selecting On allows you to display the current frames per second when playing games. The higher the rate, the smoother the motion appears. • Display Alignment: Activating the function may help ensure the perfect alignment of the video contents from multiple displays.
	AMD FreeSync Premium	Allows you to set the AMD FreeSync Premium On or Off.
	Response Time	Allows you to set the Response Time to Fast, Super Fast, Extreme or MPRT.
	Dark Stabilizer	The feature improves the visibility in the dark gaming scenarios. The higher the value (between 0 to 3), the better visibility in dark area of the display image.
	Hue	<p>This feature can shift the color of the video image to green or purple. This is used to adjust the desired flesh tone color.</p> <p>Use the joystick to adjust the hue from 0 to 100. Move the joystick up to increase the green shade of the video image.</p> <p>Move the joystick down to increase the purple shade of the video image.</p> <p> NOTE: The Hue adjustment is available only when you select FPS, MOBA/RTS, SPORTS, or RPG preset mode.</p>

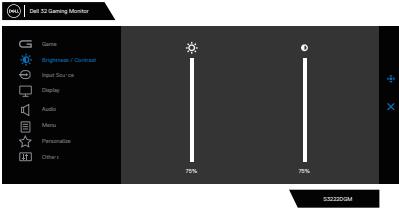

	Saturation	<p>This feature can adjust the color saturation of the video image.</p> <p>Use the joystick to adjust the saturation from 0 to 100.</p> <p>Move the joystick up to increase the colorful appearance of the video image.</p> <p>Move the joystick down to increase the monochrome appearance of the video image.</p> <p>NOTE: The Saturation adjustment is available only when you select FPS, MOBA/RTS, SPORTS, or RPG preset mode.</p>
	Reset Game	<p>Resets all settings under the Game menu to the factory defaults.</p>
	Brightness/Contrast	<p>Use this menu to adjust the brightness and contrast.</p> 
	Brightness	<p>Brightness adjusts the luminance of the backlight(minimum 0; maximum 100).Move the joystick up to increase brightness. Move the joystick down to decrease brightness.</p>
	Contrast	<p>Adjust the Brightness first, and then adjust Contrastonly if further adjustment is necessary.</p> <p>Move the joystick up to increase contrast and Move the joystick down to decrease contrast (between 0 and 100).</p> <p>The Contrast function adjusts the degree of difference between darkness and lightness on the monitor screen.</p>





	Input Source	Use the input source menu to select between the different video signals that may be connected to your monitor.
	DP	Select DP input when you are using the DP (DisplayPort) connector. Press the joystick button to confirm the selection.
	HDMI 1	Select the HDMI 1 or HDMI 2 input when you are using the HDMI connector. Press the joystick button to confirm the selection.
	HDMI 2	
	Auto Select	Turn on the function to allow the monitor to automatically scan for available input sources. Press the joystick button to confirm the selection.
	Reset Input Source	Resets all settings under the Input Source menu to the factory defaults.
	Display	Use the display to adjust image.
	Aspect Ratio	Adjusts the image ratio to 16:9, Auto Resize, 4:3 or 1:1.

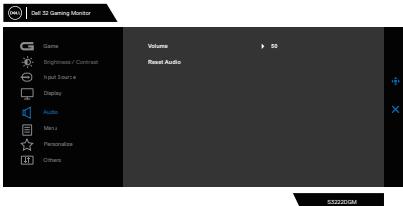	Input Color Format	<p>Allows you to set the video input mode to:</p> <ul style="list-style-type: none"> RGB: Select this option if your monitor is connected to a computer (or media player) using the DisplayPort or HDMI cable. YCbCr: Select this option if your media player supports only YCbCr output. 
	Sharpness	<p>Makes the image look sharper or softer. Move the joystick up and down to adjust the sharpness from '0' to '100'.</p>
	Reset Display Audio	<p>Select this option to restore default display settings.</p>  <p>Volume</p> <p>Allows you to set the volume level of headphone output. Use the joystick to adjust the volume level from 0 to 100.</p> <p>Reset Audio</p> <p>Resets all settings under the Audio menu to the factory defaults.</p>





	Menu	<p>Select this option to adjust the settings of the OSD, such as the languages of the OSD, the amount of time the menu remains on screen, and so on.</p> 
	Language	<p>Set the OSD display to one of eight languages.(English, Spanish, French, German, Brazilian Portuguese, Russian, Simplified Chinese, or Japanese).</p>
	Transparency	<p>Select this option to change the menu transparency by moving the joystick up or down (min. 0/max. 100).</p>
	Timer	<p>OSD Hold Time: Sets the length of time the OSD remains active after you press a button. Move the joystick to adjust the slider in 1-second increments, from 5 to 60 seconds.</p>
	Reset Menu	<p>Resets all settings under the Reset Menu to the factory defaults.</p>

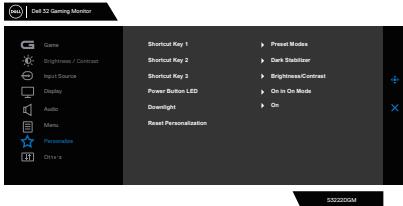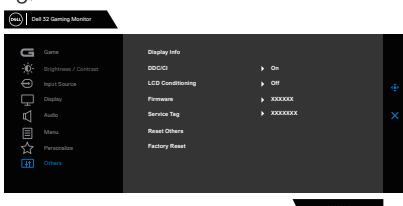

	Personalize	<p>Select this option to adjust the settings of the personalization.</p> 
	Shortcut Key 1	<p>Select from Preset Modes, Game Enhance Mode, AMD FreeSync Premium, Dark Stabilizer, Brightness/Contrast, Input Source, Aspect Ratio, Volume set as shortcut key.</p>
	Shortcut Key 2	<p>Select from Preset Modes, Game Enhance Mode, AMD FreeSync Premium, Dark Stabilizer, Brightness/Contrast, Input Source, Aspect Ratio, Volume set as shortcut key.</p>
	Shortcut Key 3	<p>Select from Preset Modes, Game Enhance Mode, AMD FreeSync Premium, Dark Stabilizer, Brightness/Contrast, Input Source, Aspect Ratio, Volume set as shortcut key.</p>
	Power Button LED	<p>Allows you to set the state of the power light to save energy.</p>
	Downlight	<p>Allows you to turn on or turn off lights on the bottom of the monitor.</p> <p>When the downlights are on, they light up blue.</p> <p>To turn off the touch sensor, select Off.</p> <p> NOTE: On monitors that are manufactured from July 2021, the downlights can be turned on or off only using the OSD menu.</p>
	Reset Personalization	<p>Resets all settings under the Personalize menu to the factory preset values.</p>
	 Others	<p>Change the OSD settings, such as the DDC/CI, LCD conditioning, and so on.</p> 
	Display Info	<p>Display the monitor's current settings.</p>

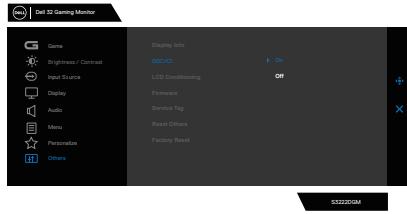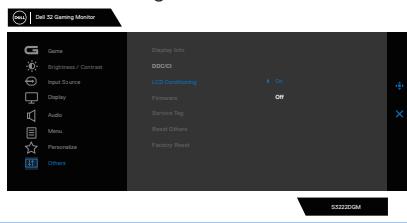

	DDC/CI	<p>DDC/CI (Display Data Channel/Command Interface) allows your monitor parameters (brightness, colorbalance, and etc.) to be adjustable via the software on your computer. You can disable this feature by selecting Off. Enable this feature for best user experience and optimum performance of your monitor.</p> 
	LCD Conditioning	<p>Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take some time to run. You can enable this feature by selecting On.</p> 
	Firmware	<p>Display the version of the firmware about the display.</p>
	Service Tag	<p>Display the service tag number of the display. The Service Tag is a unique alpha numeric identifier that allows Dell to identify the product specifications and access warranty information.</p>
	 NOTE: The Service Tag is also printed on a label located at the back of the cover.	
	Reset Others	<p>Reset all settings under the others setting menu to the factory preset values.</p>
	Factory Reset	<p>Restore all preset values to the factory default settings.</p>


 **NOTE: Your monitor has a built-in feature to automatically calibrate the brightness to compensate for LED aging.**



Menu and Power button lock

Prevents users to access or change OSD menu settings on the display.

By default, the Menu and Power button lock setting is disabled.

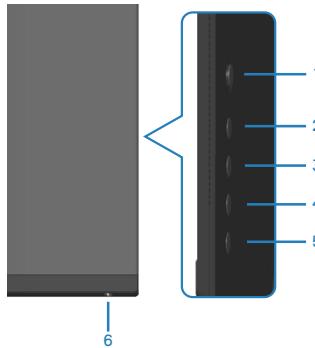

 **NOTE: To access the Lock or Unlock menu – Press and hold the button 5 for four seconds.**

To access the lock menu, press and hold the button 5 for four seconds. A lock menu appears at the bottom right corner of the display.


 **NOTE: The lock menu can be accessed using this method when the Menu and Power buttons are in unlocked state.**



To access the unlock menu, press and hold the button 5 for four seconds. An unlock menu appears at the bottom right corner of the display.

 **NOTE: The unlock menu can be accessed when the Menu and Power buttons are in locked state.**



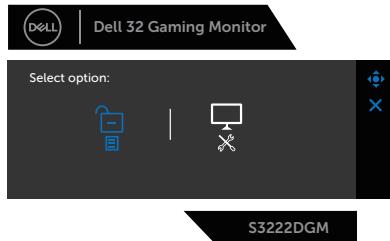

There are three lock options.

	Menu	Description
1	Menu Buttons 	When Menu Buttons is selected, the OSD menu settings cannot be changed. All buttons are locked except Power button.
2	Power Button 	When Power Button is selected, the display cannot be turned off using the Power button.
3	Menu + Power Buttons 	When Menu + Power Buttons is selected, the OSD menu settings cannot be changed and the Power button is locked.
4	Built-in Diagnostics 	See Built-in diagnostics for more information.

In the following scenarios, the

- When the joystick and control buttons (button 1 - 5) are pressed. This indicates the OSD menu buttons are in lock state.
- When the Power button (button 6) is pressed. This indicates the Power button is in lock state.
- When any one of the six buttons are pressed. This indicates OSD menu buttons and the Power button is in lock state.

Unlocking the OSD menu and Power buttons:

- Press and hold the button 5 for four seconds. The unlock menu appears.
- Select the unlock icon



OSD warning messages

When the monitor does not support a particular resolution mode, the following message is displayed:



Dell 32 Gaming Monitor

The current input timing is not supported by the monitor display. Please
change your input timing to **2560x1440, 144Hz** or any other monitor
listed timing as per the monitor specifications.

S3222DGM

This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor specifications](#) for the Horizontal and Vertical frequency ranges addressable by this monitor. Recommended mode is 2560 x 1440.

Before the **DDC/CI** function is disabled, the following message is displayed:



Dell 32 Gaming Monitor

The function of adjusting display setting using PC application will be
disabled.

Do you wish to disable DDC/CI function?

S3222DGM

When the monitor enters the **Standby Mode**, the following message appears:



Dell 32 Gaming Monitor

Going into Standby mode.

S3222DGM

If you press any button other than the power button, the following messages will appear depending on the selected input:





Dell 32 Gaming Monitor



No HDMI signal from your device.

Press any key on the keyboard or move the mouse to wake it up.

If there is no display, press the monitor button again to select the correct input source.

S3222DGM

If an HDMI or DisplayPort cable is not connected, a floating dialog box as shown below appears. The monitor will enter Standby Mode after 4 minutes if left at this state.



Dell 32 Gaming Monitor



No HDMI 1 Cable

The display will go into Standby Mode in 4 minutes.

www.dell.com/S3222DGM

S3222DGM

or



Dell 32 Gaming Monitor



No HDMI 2 Cable

The display will go into Standby Mode in 4 minutes.

www.dell.com/S3222DGM

S3222DGM

or





Dell 32 Gaming Monitor



No DP Cable

The display will go into Standby Mode in 4 minutes.



www.dell.com/S3222DGM

S3222DGM

When you select OSD items of Factory Reset in Other feature, the following message will appear:



Dell 32 Gaming Monitor

Are you sure you want to reset to default settings?

Yes

No

S3222DGM

See [Troubleshooting](#) for more information.



Setting the maximum resolution

To set the maximum resolution for the monitor:

In Windows® 7, Windows® 8, Windows® 8.1:

1. For Windows 8 and Windows 8.1 only, select the Desktop tile to switch to classic desktop.
2. Right-click on the desktop and click **Screen Resolution**.
3. Click the dropdown list of the Screen Resolution and select **2560 x 1440**.
4. Click **OK**.

In Windows® 10:

1. Right-click on the desktop and click **Display settings**.
2. Click **Advanced display settings**.
3. Click the dropdown list of the **Resolution** and select **2560 x 1440**.
4. Click **Apply**.

If you do not see **2560 x 1440** as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures:

If you have a Dell desktop or portable computer:

- Go to www.dell.com/support, enter your computer's Service Tag, and download the latest driver for your graphics card.

If you are using a non-Dell computer (portable or desktop):


- Go to the support site for your computer and download the latest graphic drivers.
- Go to your graphics card website and download the latest graphic drivers.



Using the tilt and vertical extension

 **NOTE:** These values are applicable to the stand that was shipped with your monitor. To set up with any other stand, see the documentation that shipped with the stand.


Tilt Extension

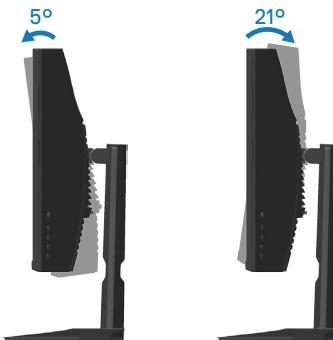

 **NOTE:** The stand is detached when the monitor is shipped from the factory.

Vertical Extension

 **NOTE:** The stand can be extended vertically up to 100 mm.

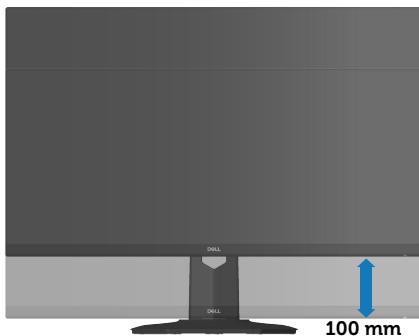

Ergonomics

△ **CAUTION: Improper or prolonged usage of keyboard may result in injury.**


△ **CAUTION: Viewing the monitor screen for extended periods of time may result in eye strain.**

For comfort and efficiency, observe the following guidelines when setting up and using your computer workstation:

- Position your computer so that the monitor and keyboard are directly in front of you as you work. Special shelves are commercially available to help you correctly position your keyboard.
- To reduce the risk of eye strain and neck/arm/back/shoulder pain from using the monitor for long periods of time, we suggest you to:
 1. Set the distance of the screen between 20 to 28 in. (50 - 70 cm) from your eyes.
 2. Blink frequently to moisten your eyes or wet your eyes with water after prolonged usage of the monitor.
 3. Take regular and frequent breaks for 20 minutes every two hours.
 4. Look away from your monitor and gaze at a distant object at 20 feet away for at least 20 seconds during the breaks.
 5. Perform stretches to relieve tension in the neck, arm, back, and shoulders during the breaks.
- Make sure that the monitor screen is at eye level or slightly lower when you are sitting in front of the monitor.
- Adjust the tilt of the monitor, its contrast, and brightness settings.
- Adjust the ambient lighting around you (such as overhead lights, desk lamps, and the curtains or blinds on nearby windows) to minimize reflections and glare on the monitor screen.
- Use a chair that provides good lower-back support.
- Keep your forearms horizontal with your wrists in a neutral, comfortable position while using the keyboard or mouse.
- Always leave space to rest your hands while using the keyboard or mouse.
- Let your upper arms rest naturally on both sides.
- Ensure that your feet are resting flat on the floor.




- When sitting, make sure that the weight of your legs is on your feet and not on the front portion of your seat. Adjust your chair's height or use a footrest if necessary to maintain a proper posture.
- Vary your work activities. Try to organize your work so that you do not have to sit and work for extended periods of time. Try to stand or get up and walk around at regular intervals.
- Keep the area under your desk clear of obstructions and cables or power cords that may interfere with comfortable seating or present a potential trip hazard.

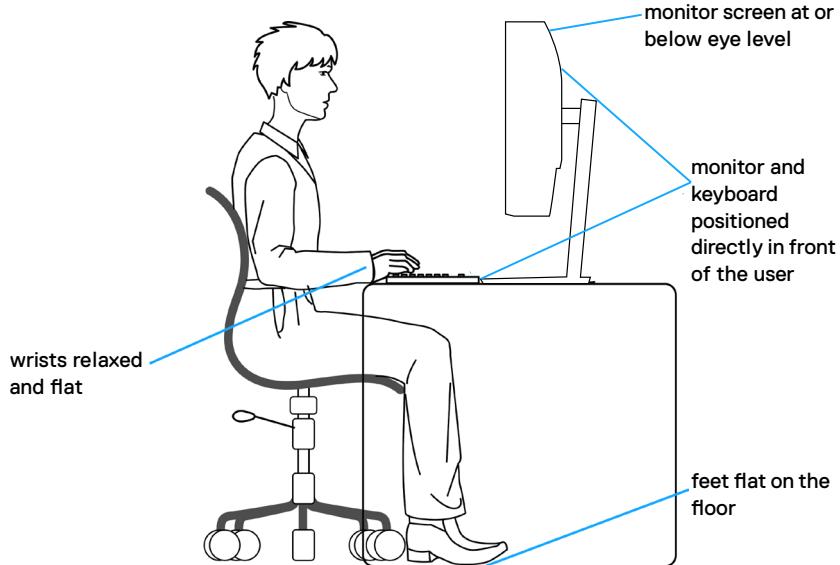


Handling and moving your display

To ensure the monitor is handled safely when lifting or moving it, follow the guidelines mentioned below:

- Before moving or lifting the monitor, turn off your computer and the monitor.
- Disconnect all cables from the monitor.
- Place the monitor in the original box with the original packing materials.
- Hold the bottom edge and the side of the monitor firmly without applying excessive pressure when lifting or moving the monitor.

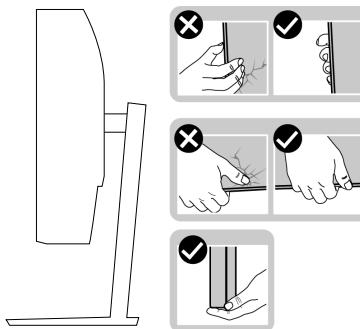


- When lifting or moving the monitor, ensure the screen is facing away from you and do not press on the display area to avoid any scratches or damage.

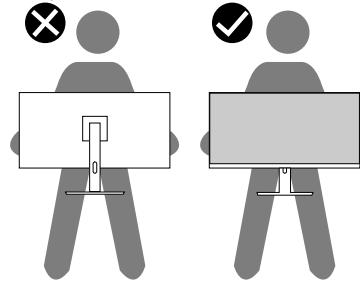

- When transporting the monitor, avoid any sudden shock or vibration to it.
- When lifting or moving the monitor, do not turn the monitor upside down while holding the stand base or stand riser. This may result in accidental damage to the monitor or cause personal injury.



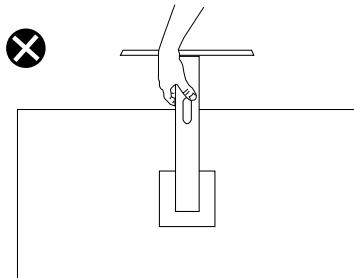

Maintenance guidelines

Cleaning your monitor

⚠ WARNING: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

⚠ CAUTION: Read and follow the [Safety instructions](#) before cleaning the monitor.

For best practices, follow the instructions in the list below while unpacking, cleaning or handling your monitor:

- To clean your screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the anti-static coating. Do not use benzene, thinner, ammonia, abrasive cleaners or compressed air.
- Use a lightly-dampened cloth to clean the monitor. Avoid using detergent of any kind as some detergents leave a milky film on the monitor.
- If you notice white powder when you unpack your monitor, wipe it off with a cloth.
- Handle your monitor with care as the black-colored monitor may get scratched and show white scuff marks.
- To help maintain the best image quality on your monitor, use a dynamically changing screen saver and turn off your monitor when not in use.



Troubleshooting


⚠ WARNING: Before you begin any of the procedures in this section, follow the [Safety instructions](#).

Self-Test

Your monitor provides a self-test feature that allows you to check if your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:


1. Turn off both your computer and the monitor.
2. Disconnect all video cables from the monitor. This way, the computer doesn't have to be involved.
3. Turn on the monitor.

If the monitor is working correctly, it detects that there is no signal and one of the following message appears. While in self-test mode, the power LED remains white.

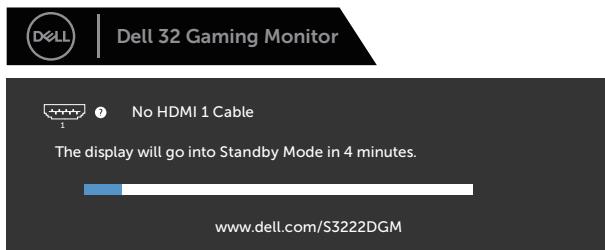

S3222DGM

or

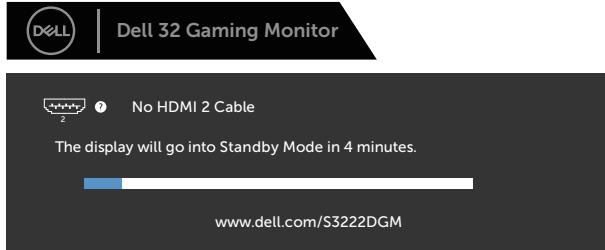

S3222DGM

or





Dell 32 Gaming Monitor

  No DP Cable

The display will go into Standby Mode in 4 minutes.

 www.dell.com/S3222DGM

S3222DGM

 **NOTE: This box also appears during normal system operation, if the video cable is disconnected or damaged.**

4. Turn Off your monitor and reconnect the video cable; then turn on your computer and the monitor.


If your monitor remains dark after you reconnect the cables, check your video controller and computer.



Built-in diagnostics


Your monitor has a built-in diagnostic tool that helps you determine if any screen abnormality you experience is an inherent problem with your monitor, or with your computer and video card.


 **NOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in self-test mode.**

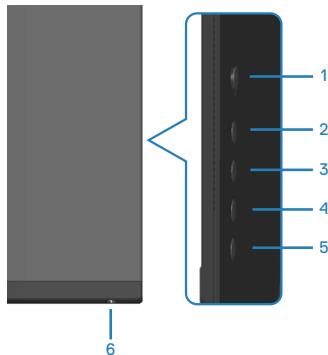

To run the built-in diagnostics:

1. Ensure that the screen is clean (no dust particles on the surface of the screen).
2. Unplug the video cable(s) from the back of the computer or monitor. The monitor then goes into the self-test mode.
3. Press and hold the button 5 for four seconds to enter the OSD lock/unlock menu.

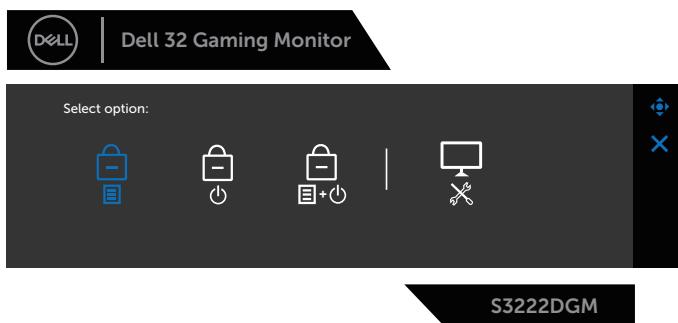

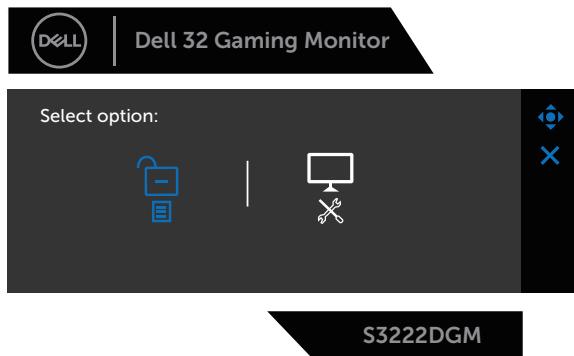

4. Move the joystick to highlight the Diagnostic icon  icon to run the built-in diagnostics.
5. Carefully inspect the screen for abnormalities.
6. Press the joystick to change the test patterns.
7. Repeat step 5 and 6 to inspect the display in red, green, blue, black, white and text pattern screens.

The test is complete when the text pattern screen appears. To exit, press the joystick right direction again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.



Common problems

The following table contains general information about common monitor problems you might encounter and the possible solutions:

Common Symptoms	Possible Solutions
No Video/Power LED off	<p>Ensure that the video cable connecting the monitor and the computer is properly connected and secure.</p> <ul style="list-style-type: none">Verify that the power outlet is functioning properly using any other electrical equipment.Ensure that the power button is pressed.Ensure that the correct input source is selected via the Input Source menu.
No Video/Power LED on	<ul style="list-style-type: none">Increase brightness and contrast controls using the OSD.Perform monitor self-test feature check.Check for bent or broken pins in the video cable connector.Run the built-in diagnostics.Ensure that the correct input source is selected via the Input Source menu.
Poor Focus	<ul style="list-style-type: none">Eliminate video extension cables.Reset the monitor to Factory Settings (Factory Reset).Change the video resolution to the correct aspect ratio.
Shaky/Jittery Video	<ul style="list-style-type: none">Reset the monitor to Factory Settings (Factory Reset).Check environmental factors.Relocate the monitor and test in another room.
Missing Pixels	<ul style="list-style-type: none">Cycle power On-Off.Pixel that is permanently Off is a natural defect that can occur in LCD technology.For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: www.dell.com/pixelguidelines.



Stuck-on Pixels	<ul style="list-style-type: none"> • Cycle power On-Off. • Pixel that is permanently off is a natural defect that can occur in LCD technology. • For more information on Dell Monitor Quality and Pixel Policy, see Dell Support site at: www.dell.com/pixelguidelines.
Brightness Problems	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Adjust brightness & contrast controls via OSD.
Geometric Distortion	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Adjust horizontal & vertical controls via OSD.
Horizontal/Vertical Lines	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Perform monitor self-test feature check and determine if these lines are also in self-test mode. • Check for bent or broken pins in the video cable connector. • Run the built-in diagnostics.
Synchronization Problems	<ul style="list-style-type: none"> • Reset the monitor to Factory Settings (Factory Reset). • Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode. • Check for bent or broken pins in the video cable connector. • Restart the computer in the safe mode.
Safety Related Issues	<ul style="list-style-type: none"> • Do not perform any troubleshooting steps. • Contact Dell immediately.
Intermittent Problems	<ul style="list-style-type: none"> • Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. • Reset the monitor to Factory Settings (Factory Reset). • Perform monitor self-test feature check to determine if the intermittent problem occurs in self-test mode.
Missing Color	<ul style="list-style-type: none"> • Perform monitor self-test feature check. • Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. • Check for bent or broken pins in the video cable connector.



Wrong Color	<ul style="list-style-type: none"> Change the Color Setting Mode in the Color Settings OSD to Graphics or Video depending on the application. Try different Preset Modes in Color settings OSD. Adjust R/G/B value in Custom Color in Color settings OSD. Change the Input Color Format to RGB or YPbPr in the Color settings OSD. Run the built-in diagnostics.
Image retention from a static image left on the monitor for a long period of time	<ul style="list-style-type: none"> Set the screen to turn off after a few minutes of screen idle time. These can be adjusted in Windows Power Options or Mac Energy Saver setting. Alternatively, use a dynamically changing screensaver.
Video Ghosting or Overshooting	<ul style="list-style-type: none"> Change the Response Time in the Display OSD to Fast, Super Fast, MPRT or Extreme depending on your application and usage.



Product-specific problems

Specific Symptoms	Possible Solutions
Screen image is too small	<ul style="list-style-type: none">Check the Aspect Ratio setting in the Display settings OSD.Reset the monitor to Factory Settings (Factory Reset).
Cannot adjust the monitor with the buttons on the bottom of the panel	<ul style="list-style-type: none">Turn Off the monitor, unplug the power cord, plug it back, and then turn On the monitor.Check if the OSD menu is locked. If yes, press and hold the button 5 for four seconds to unlock.
No Input Signal when user controls are pressed	<ul style="list-style-type: none">Check the signal source. Ensure the computer is not in Standby Mode by moving the mouse or pressing any key on the keyboard.Check if the video cable is plugged in properly. Disconnect and reconnect the video cable if necessary.Reset the computer or video player.
The picture does not fill the entire screen	<ul style="list-style-type: none">Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen.Run the built-in diagnostics.



Appendix

 **WARNING:** Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the **Safety Environment and Regulatory Information (SERI)**.

FCC notices (U.S. Only) and other regulatory information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.

- Online technical assistance — www.dell.com/support/monitors
- Contacting Dell — www.dell.com/contactdell

EU product database for energy label and product information sheet

S3222DGM: <https://eprel.ec.europa.eu/qr/591357>

