





FALKOR MINI

FALHOR MICRO

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.

 


Age Recommendation: Not for children under 14 years. This is not a toy.

NOTICE: This product is only intended for use with unmanned, hobby-grade, remote-controlled vehicles and aircraft. FOXEER disclaims all liability outside of the intended purpose and will not provide warranty service related thereto.

SUPPORT: Visit www.foxeer.com/ to get more information.

CAMERA-OSD SWITCH CONNECTION



 5 Pin Harness

 VCC
 DC 4.6-20V In (Red)

 GND
 Ground Wire(Black)

 VID
 Video out(Yellow)

 VSEN
 Voltage Senser(Blue)

 OSD
 OSD (White)

 Connect the VSEN cable Wherever you want to detect the voltage

Mini/Micro Camera Back OSD Switch Front

CAUTION: If you are using ESC's with active braking, we recommend powering the camera system through a BEC or voltage regulator.

CAMERA-VIDEO TRANSMITTER CONNECTION

To connect the camera directly to the video transmitter, plug the 3 pin wiring harness from the video transmitter into the camera, or you can power the camera by other device, PDB, FC, Bat...

Main MENU

MENU: Push MENU(center button) to go to the main menu.

UP/DOWN: Move up and down through the menu.

Left/Right: Modify the menu parameters.

MAIN MENU		
► AE	٦	
WB	Ĺ	
DAY NIGHT	L.	
IMAGE ENHANCE	1	
VIDEO SETTING	7	
SPECIAL SETTING	L.	
LANGUAGE	◆ ENGLISH >	
RESET		
SAVE EXIT 🔟		

∢12 >

∢GLOBE →

4AUTO⊁

FXPOSURE

▶ BRIGHTNESS

ADVANCED

RETURN

AE ADVANCED

▶ SHUTTER CTRL

GAIN CTRL

RETURN

EXPOSURE MODE

DAY NIGHT

MODE: EXT(external)/ AUTO/ COLOR/ BW(black and white).

DAY NIGHT		
٠	MODE	↓ EXT ▶
	RETURN	

IMAGE ENHANCE

CONTRAST: AUTO/MANUAL(0~40)
SHARPNESS: AUTO/MANUAL(0~16)

COLOR GAIN: AUTO/MANUAL(0~30)
3DNR: AUTO/MANUAL(0~30)



ΑE

Auto Exposure.

- BRIGHTNESS: 0~30.
- 2. EXPOSURE MODE:
- E. EXI OSOILE MOL
- GLOBE(Global)
- FLC(Front light control): 1~8
- BLC(Back light control): 1~8
- 3. ADVANCED: SHUTTER CTRL/ GAIN CTRL.
 - SHUTTER CTRL:

AUTO MANUAL: PAL(1/25~1/10000) / NTSC(1/30~1/10000)

GAIN CTRL:

AUTO

MANUAL: ANALOG GAIN(1~16) / DIGITAL GAIN(1~15)

VIDEO SETTING

VIDEO STANDARD: PAL/NTSC

D-WDR: OPEN/CLOSE

VIDEO SETTING		
▶ VIDEO STANDARD	∢PAL≯	
HD FORMAT	CVBS	
D-WDR	◆ OPEN >	
RETURN		

SPECIAL SETTING

VIDEO SCALE: 4:3 WIDE/ 4:3 NARROW /16:9

NAME: OPEN/CLOSE

VOLTAGE: OPEN/CLOSE

TIMER: OPEN/CLOSE

PTZ MENU	
▶ VIDEO SCALE	44:3WIDE ▶
NAME	◆ OPEN ▶
VOLTAGE	◆ OPEN ▶
TIMER	◆ OPEN ▶
IMAGE STYLE RETURN	◆ SUNSET ▶

LANGUAGE

LANGUAGE: ENGLISH /中文/ PYCCKNN / ESPANOL / ITALIANO /FRANCAIS/POLSKIM/ PORTUGUES / 日本语 / EAAHNIKA

RESET

RESET: Return to camera's initial setting.

WB

White Balance do not suggest changing it.

MODE: ATW/ MWB.

• MWB: RGAIN: 0~32 RGAIN: 0~32



